



## BLACK PEDESTAL

# ASSEMBLY INSTRUCTIONS



## **Parts Included:**

- 2 Black Vinyl Covered **Side Pieces**
- 1 Black Vinyl Covered **Foot Piece**
- 1 Unfinished **Head Piece**
- **\*\*3 Unfinished Center Support Pieces**
  - 2 Pieces with One Slit
  - 1 Piece with Two Slits
- Pedestal Hardware Kit & Assembly Instructions
- Hardware Included: 4 **Large Corner Brackets**, 28 **Small Screws** (#10 x 1/2"), and 1 Phillips Drill Bit


You will need a **Power Drill** or **Phillips Screwdriver** for this assembly.

**\*\*STROBEL'S "SOF-FRAME" WATERBED PEDESTAL MODEL IS SLIGHTLY DIFFERENT. YOU WILL HAVE A TOTAL OF 6 UNFINISHED **CENTER SUPPORT PIECES**, INSTEAD OF 3. A TOTAL OF 4 PIECES WITH ONE SLIT AND 2 PIECES WITH TWO SLITS.**

Please Read the Instructions in Full Before Starting.

**Assembly Instructions:**

1. Lay your pedestal frame pieces flat on the ground in the arrangement in which they will be assembled:

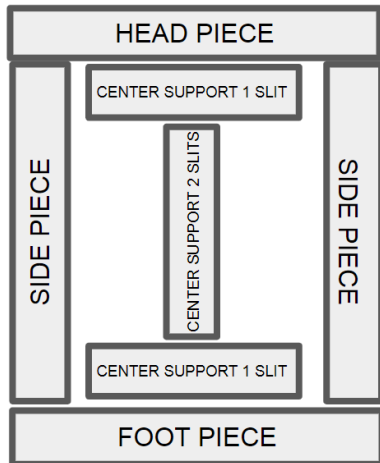


Your 2 long, black vinyl pieces are your **Side Pieces**. The short, black vinyl piece will go at the **Foot** of the bed. The short, unfinished piece will go at the **Head** of the bed. The 3 **Center Support Pieces** will go in the center of the pedestal frame and can be identified by the 'slits' in the wood pieces. You should have a total of 3 unfinished **Center Support Pieces**: one **Center Support Piece** has two slits cut into it and two **Center Support Pieces** have one slit cut into each.

2. Stand one **Side Piece** up on its side and ensure the black vinyl side is facing the outside. Stand the **Head Piece** on its side and line it up with the top INSIDE edge of the **Side Piece** that is standing up. Screw the **Large Bracket** into the inside corner of these 2 pieces using the **Short Screws** to secure them together.



3. Stand the other **Side Piece** up on its side and ensure the black vinyl side is facing the outside. Line up the **Side Piece** to the other end of the **Head Piece** with the INSIDE edge of the side piece. Screw the **Large Bracket** into the inside corner of these 2 pieces using the **Short Screws** to secure them together.

**THE SHORT HEAD & FOOT PIECES SHOULD BE INSIDE THE TWO SIDE PIECES:**

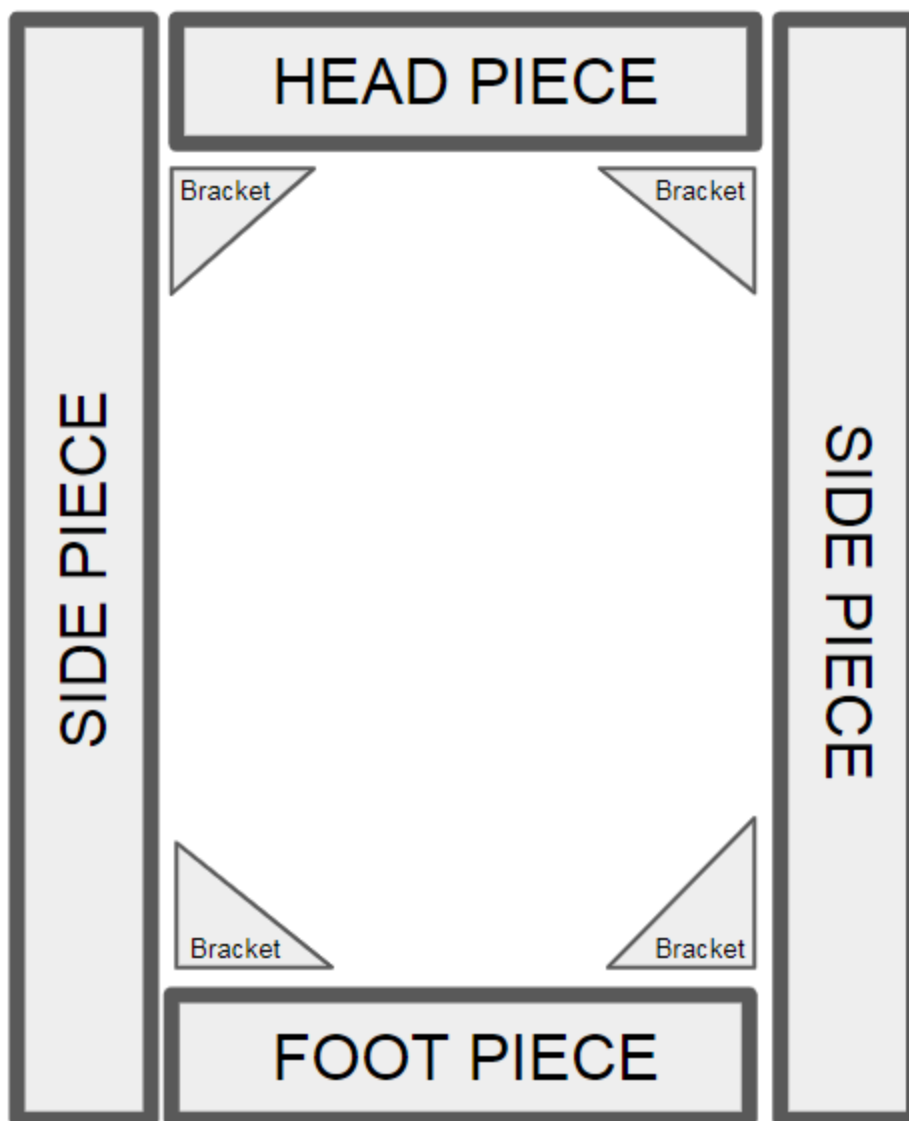


4. Stand the **Foot Piece** up on its side and place at the bottom of the two **Side Pieces**, ensuring the **Side Pieces** are on the OUTSIDE of the **Foot Piece**. The black vinyl should be facing the outside. Screw the **Foot Piece** to both **Side Pieces** using the **Large Corner Brackets** and the **Short Screws** to secure them together.



5. Now that your Pedestal Frame is built, slip together your **Center Support Pieces** in the middle of the Pedestal Frame. The **Center Support Piece** with TWO Slits in it should be placed long ways with the slits facing UP in the center of the frame. The **Center Support Pieces** with ONE Slit in it should be placed long ways with slits facing DOWN over the piece with two slits. The slits should lock each piece in place. \*\*FOR STROBEL'S "SOF-FRAME" MODEL ONLY, PLEASE REFER TO THE NEXT PAGE FOR A REFERENCE IMAGE OF THE CENTER SUPPORT PIECES LAYOUT\*\*



\* FOR STROBEL'S "SOF-FRAME" WATERBED  
MODEL ONLY, PLEASE ARRANGE THE  
**CENTER SUPPORT PIECES** AS SHOWN IN  
THE REFERENCE IMAGE BELOW.

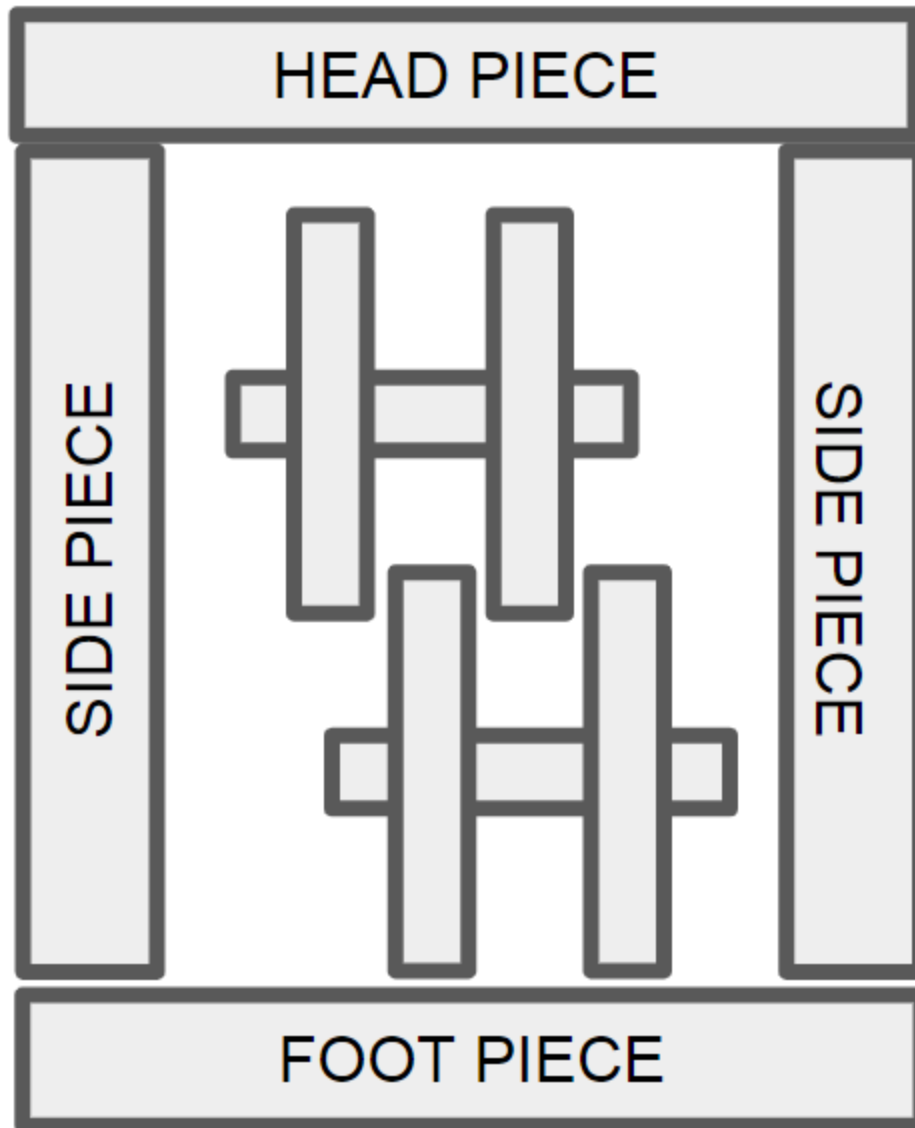

6. Your **Pedestal** is now fully assembled.

7. *If your purchase included **Wood Decking***, lay down your **Wood Decking** pieces, one at a time, on top of the Pedestal. There will be an overhang on all sides.



**Thank you for your purchase!**

**If you have any questions regarding your purchase, please contact Strobel Technologies directly (not your retailer)**

**[LEADS@STROBEL.COM](mailto:LEADS@STROBEL.COM)**

**812-280-6000**