


ISLiFe

Solid Wood Barn Door

Instruction for assembling

Email: info@islifeusa.com

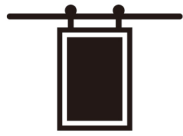


ISLIFE


Email: info@islifeusa.com

Solid Wood Barn Door

Instruction for assembling

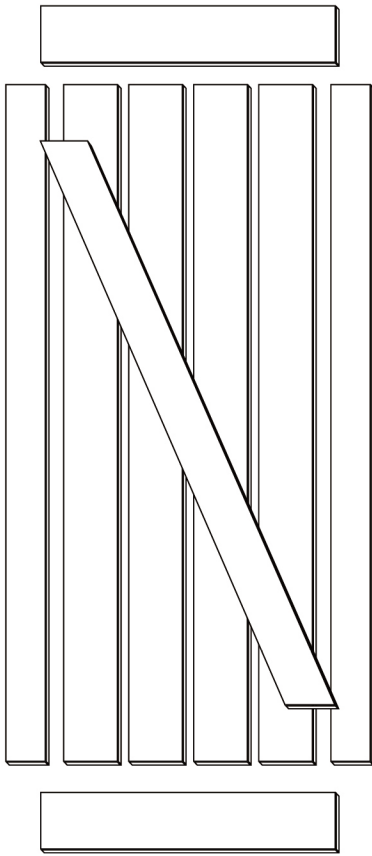

Z Series

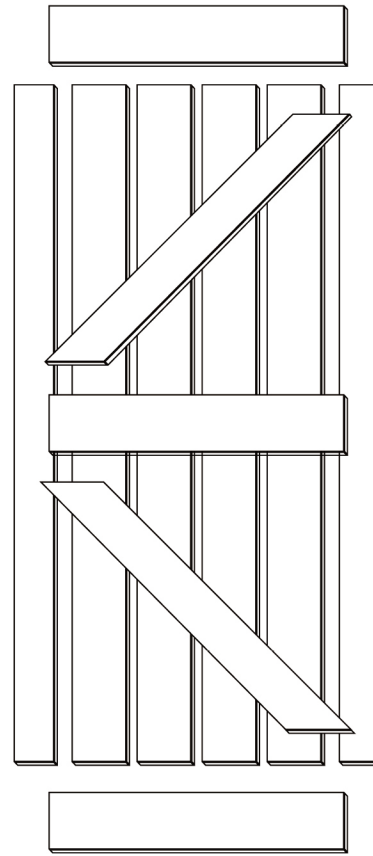

K Series



Avoid direct sunlight.

Avoid moisture.

Avoid rain.





Tools needed for assembly.



Assembly with a partner recommended.

Wear working gloves.


Z Series

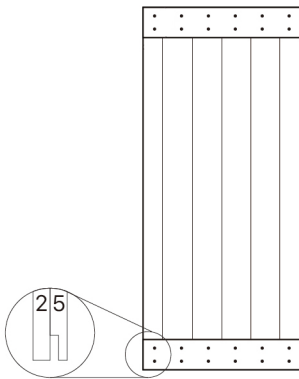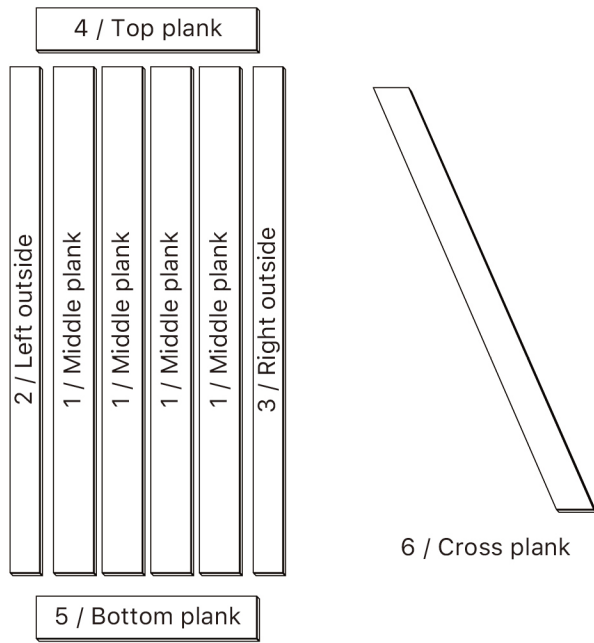

Side view:





Remarks: The quantity of (No.1 middle board) will vary depending on the size of the product.

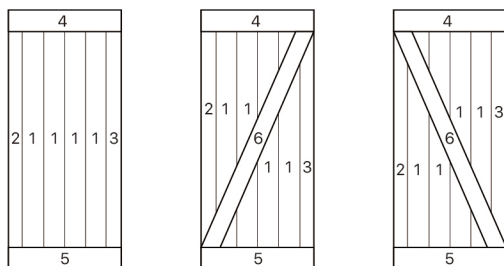

Please decide the appearance before assemble.


K Series

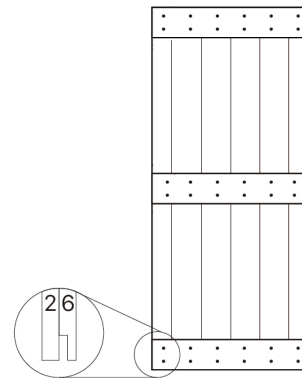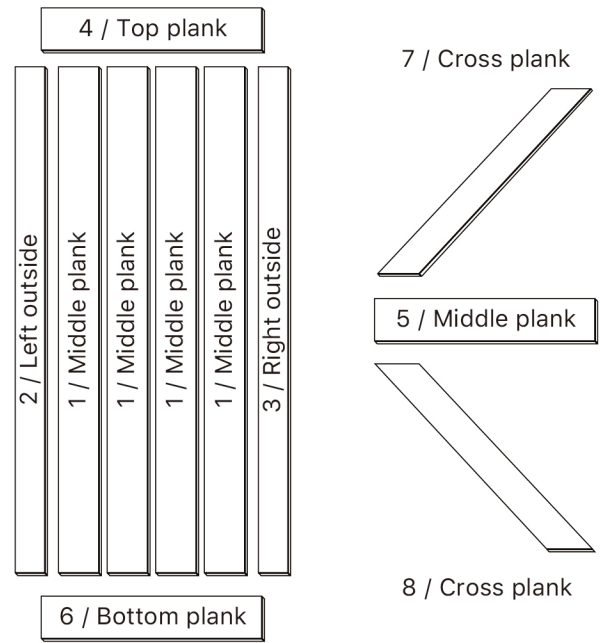

Side view:




Remarks: The quantity of (No.1 middle board) will vary depending on the size of the product.

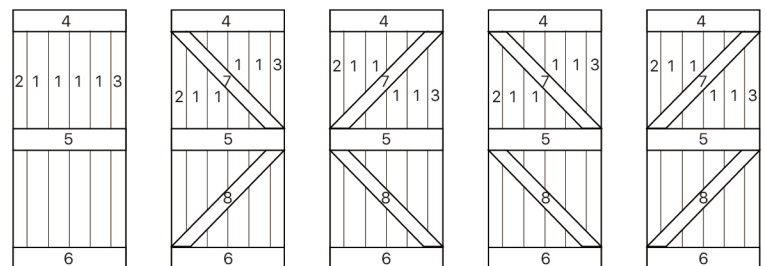


Please decide the appearance before assemble.

Z Series

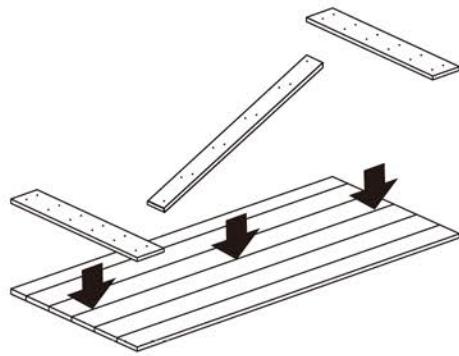

Step 1: Combine lower planks.


Step 2: Combine upper and lower planks.

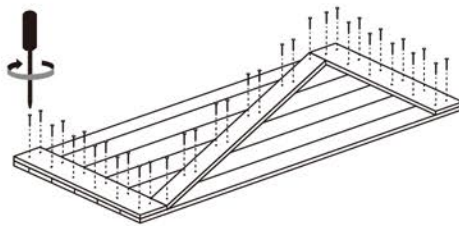

Step 3: Lock all the screws.


Remarks: The quantity of screw holes and screws will vary depending on the size of the product.

K Series

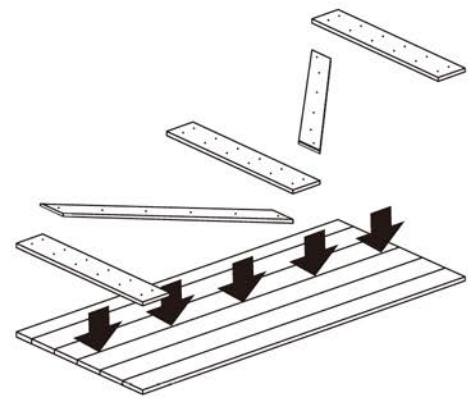

Step 1: Combine lower planks.


Step 2: Combine upper and lower planks.

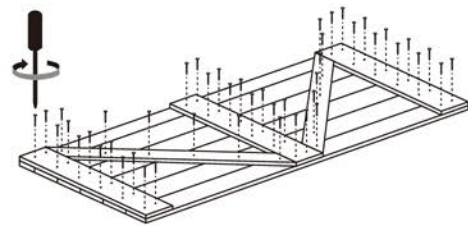

Step 3: Lock all the screws.

Remarks: The quantity of screw holes and screws will vary depending on the size of the product.

Instruction for installing door and track

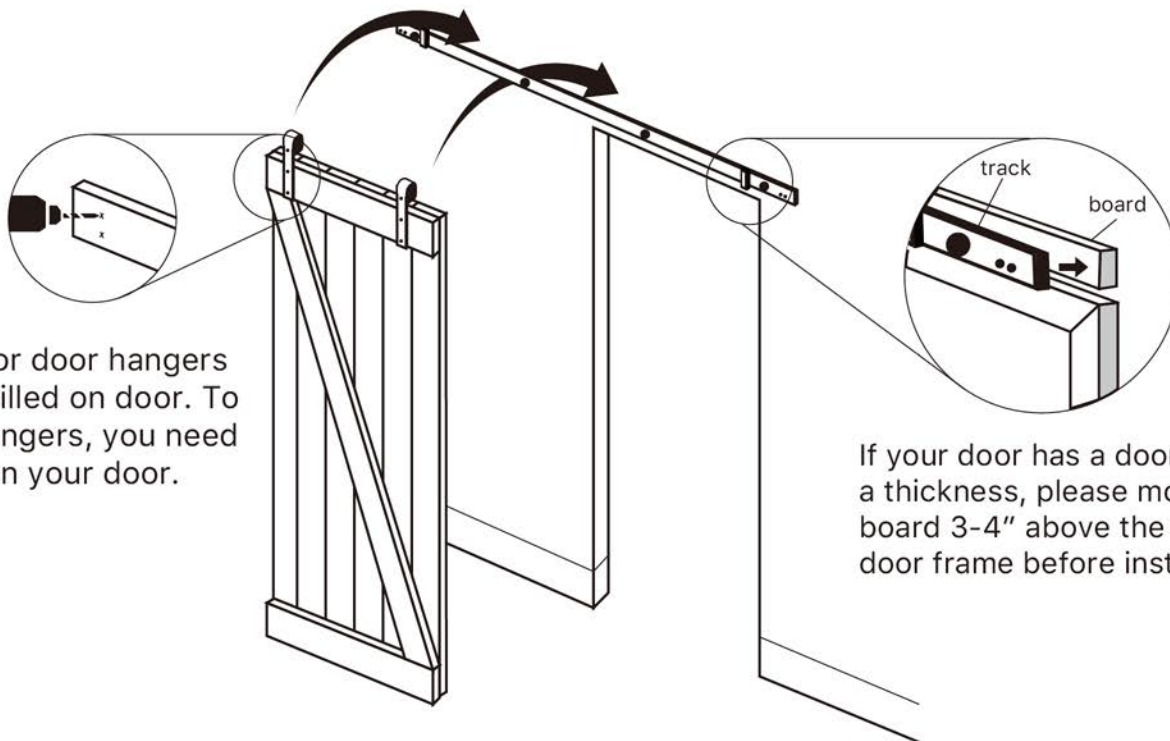

Screw holes for door hangers are not pre-drilled on door. To install door hangers, you need to drill holes on your door.

If your door has a door frame that has a thickness, please mount a wooden board 3-4" above the header of your door frame before installing track.

* To assemble sliding door track, see track installation manual.