


HALL TREE

Assembly Instructions - Please keep for future reference

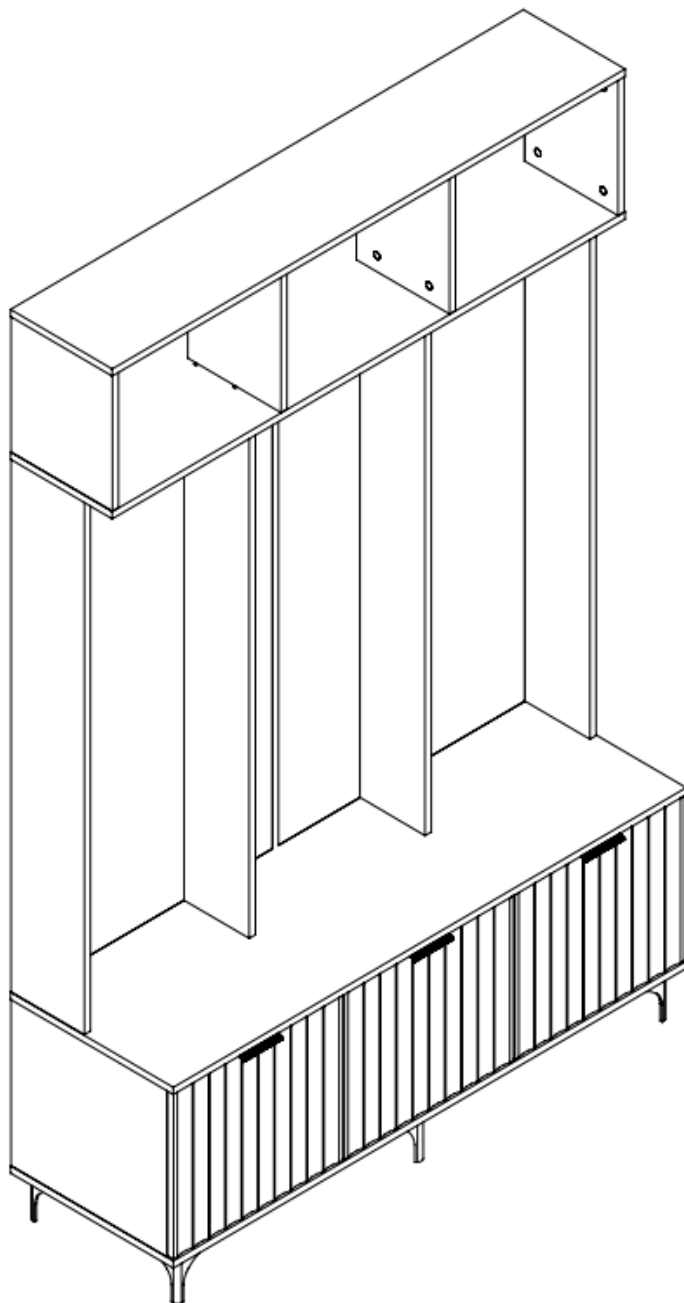

Dimensions

Width - 49.61 inch

Depth - 15.75 inch

Height - 75.39 inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.






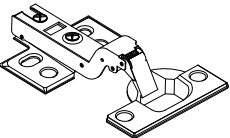


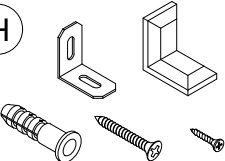

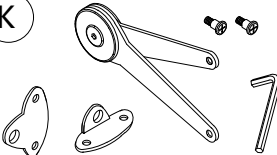



WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please check you have all the panels listed below

Note: The quantitie below are the correct amount to complete the assembly. In some cases more fttings may be supplied than are required.
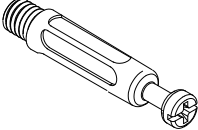
<div>A1</div> <div></div> <div>Cam Bolt x (51+1)</div>	<div>A2</div> <div></div> <div>Cam Lock x (51+1)</div>	<div>B</div> <div></div> <div>8*40mm Dowel x (35+1)</div>	<div>C</div> <div></div> <div>3.5*14mm Screw x (110+1)</div>
<div>D</div> <div></div> <div>7*50mm Dowel x 24</div>	<div>E</div> <div></div> <div>Hinge x 6</div>	<div>F</div> <div></div> <div>Hole to stick x 24</div>	<div>G</div> <div></div> <div>Backboard buckle x 20</div>
<div>H</div> <div></div> <div>Anti-toppling x 2</div>	<div>J</div> <div></div> <div>handle x 3</div>	<div>K</div> <div></div> <div>Stop at will x 3</div>	<div>L</div> <div></div> <div>Clothes-hook x 6</div>
<div>M</div> <div></div> <div>Leg x 6</div>	<div>N</div> <div></div> <div>Screwdriver x 1</div>		


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

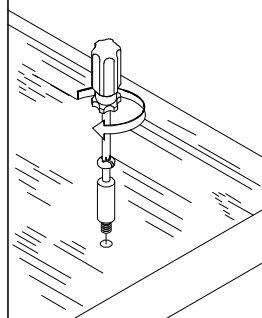

Step 2

Push the male camlock into the entry hole.

2

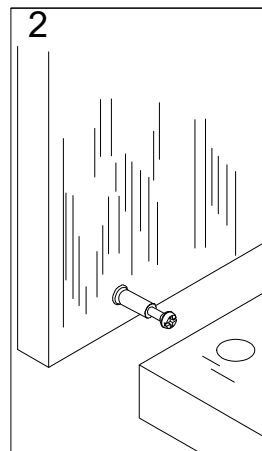


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

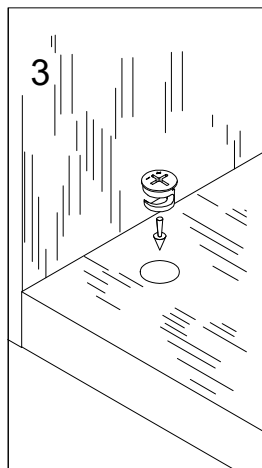


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

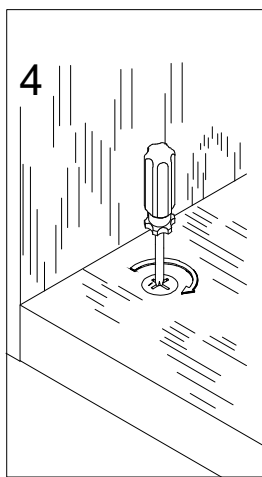


Assembly Instructions

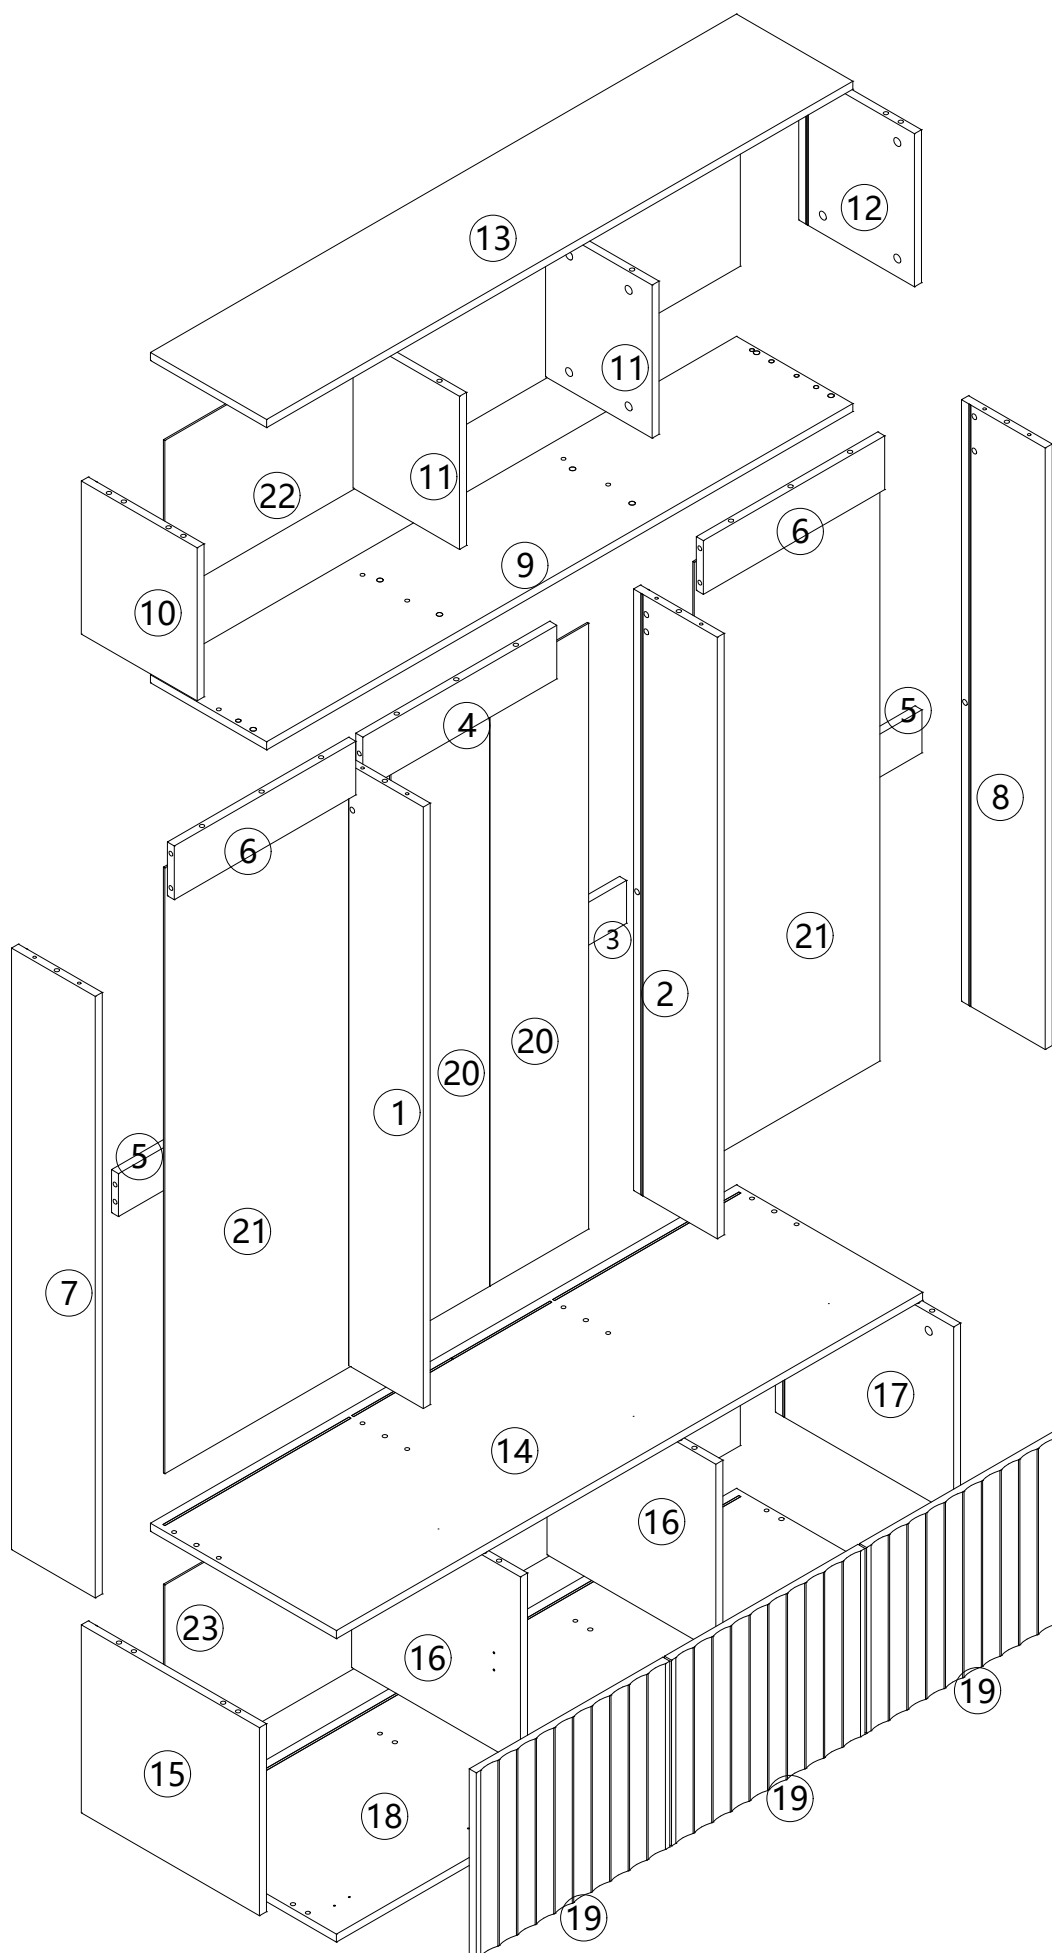


Assembly Instructions

① x 1

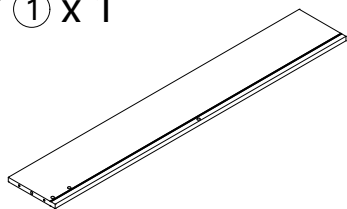


1120x180x15mm

② x 1

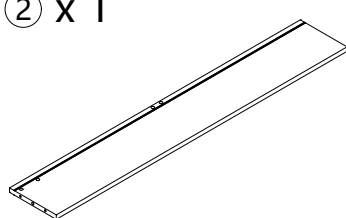


1120x180x15mm

③ x 1

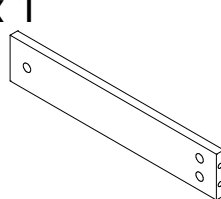


417x80x15mm

④ x 1

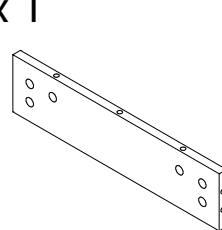


417x100x15mm

⑤ x 2

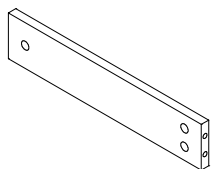


390x80x15mm

⑥ x 2

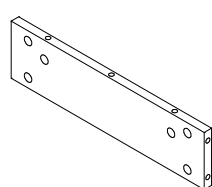


390x100x15mm

⑦ x 1

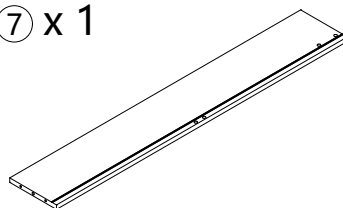


1120x180x15mm

⑧ x 1

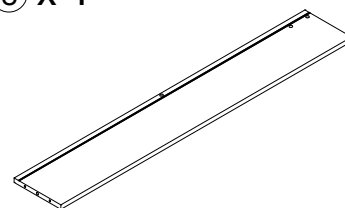


1120x180x15mm

⑨ x 1

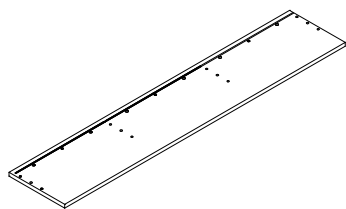


1260x250x15mm

⑩ x 1

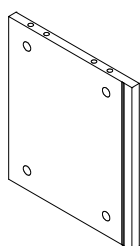


285x249x15mm

⑪ x 2

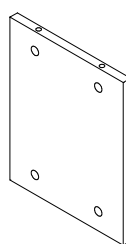


285x229x15mm

⑫ x 1

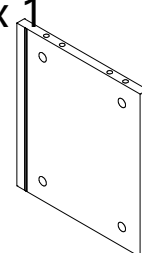


285x249x15mm

⑬ x 1

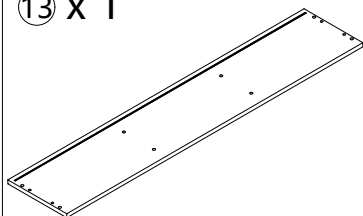


1260x250x15mm

⑭ x 1

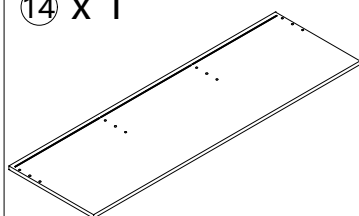


1260x400x15mm

⑮ x 1

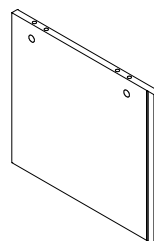


350x383x15mm

⑯ x 2

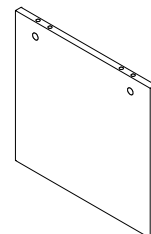


350x363x15mm

⑰ x 1

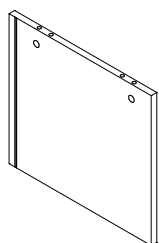


350x383x15mm

⑱ x 1

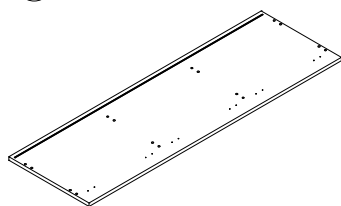


1260x400x15mm

⑲ x 3

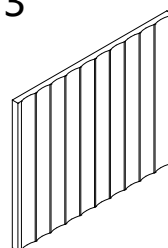


416x346x15mm

⑳ x 2

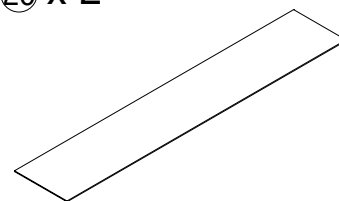


1128x212.5x3mm

㉑ x 2

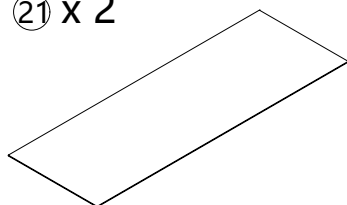


1128x399x3mm

㉒ x 1

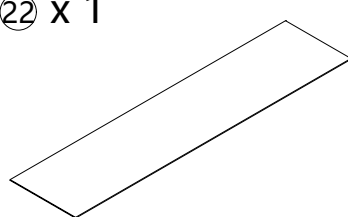

1237x294x3mm


㉓ x 1

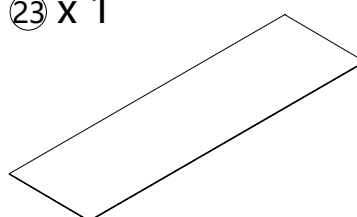


1237x359x3mm

Assembly Instructions

Step 1

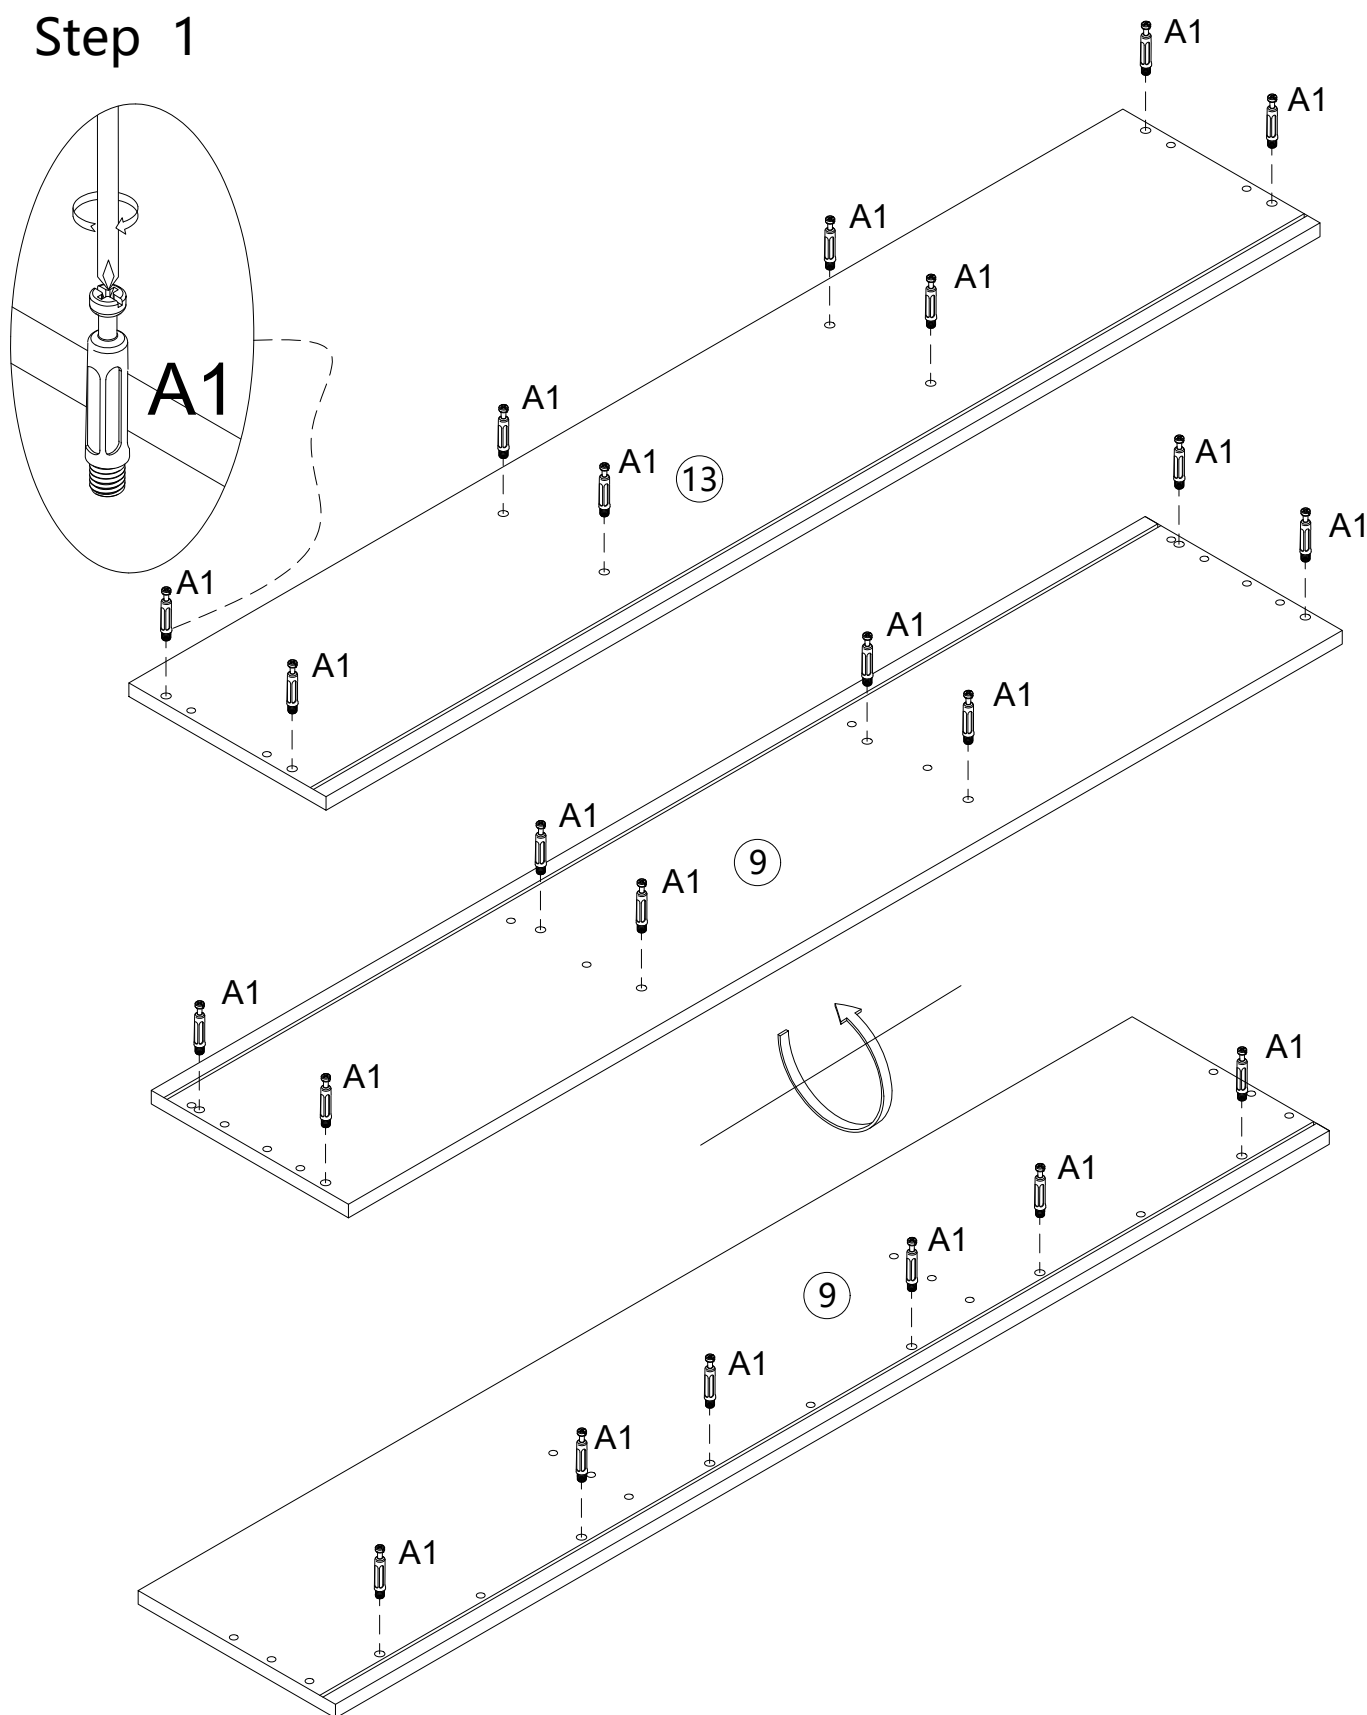


A1



Cam Bolt x 22


Assembly Instructions

Step 2

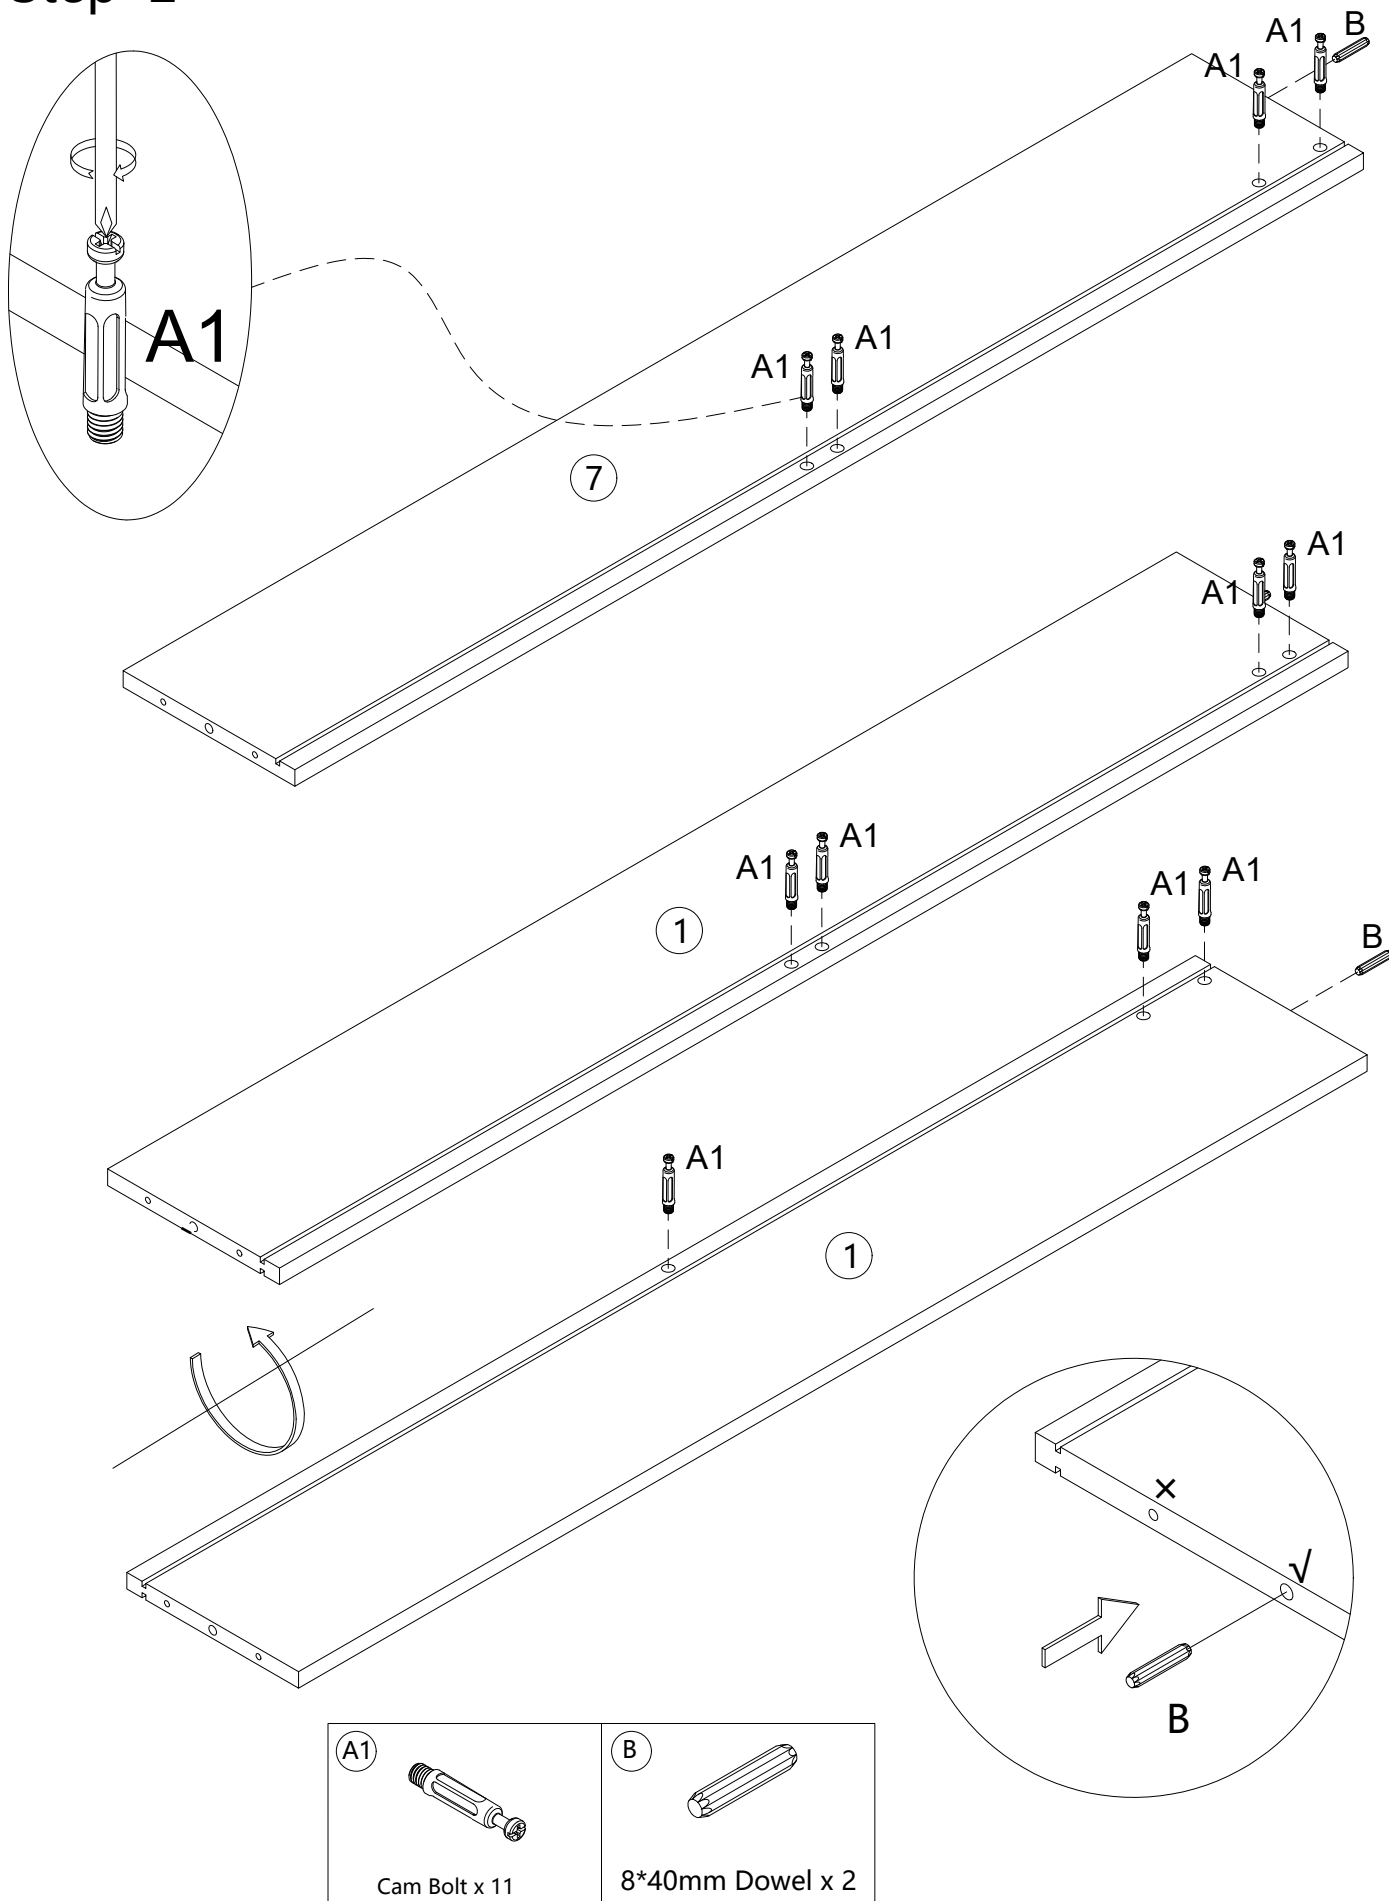


Assembly Instructions

Step 3

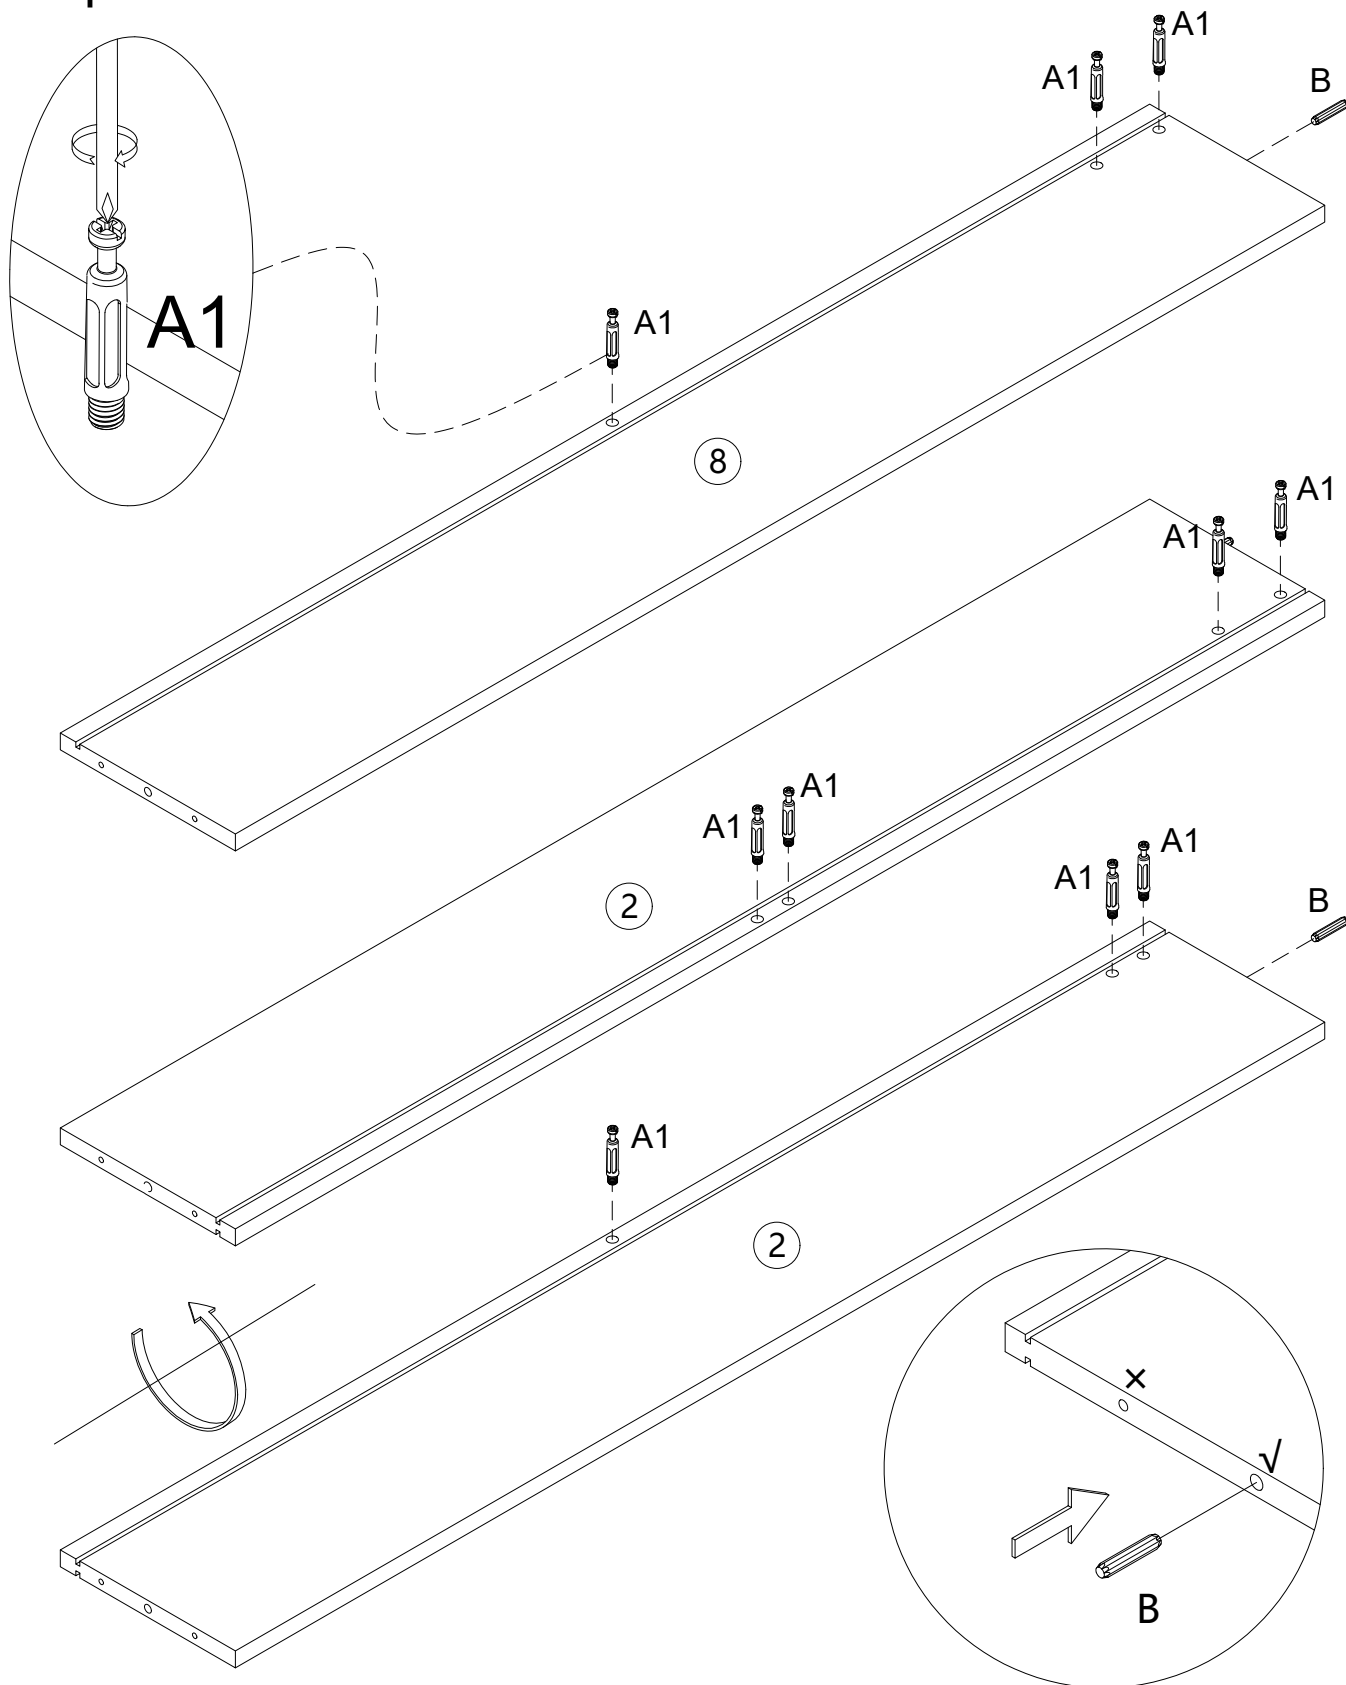


(A1)



Cam Bolt x 10


(B)




8*40mm Dowel x 2

Assembly Instructions

Step 4

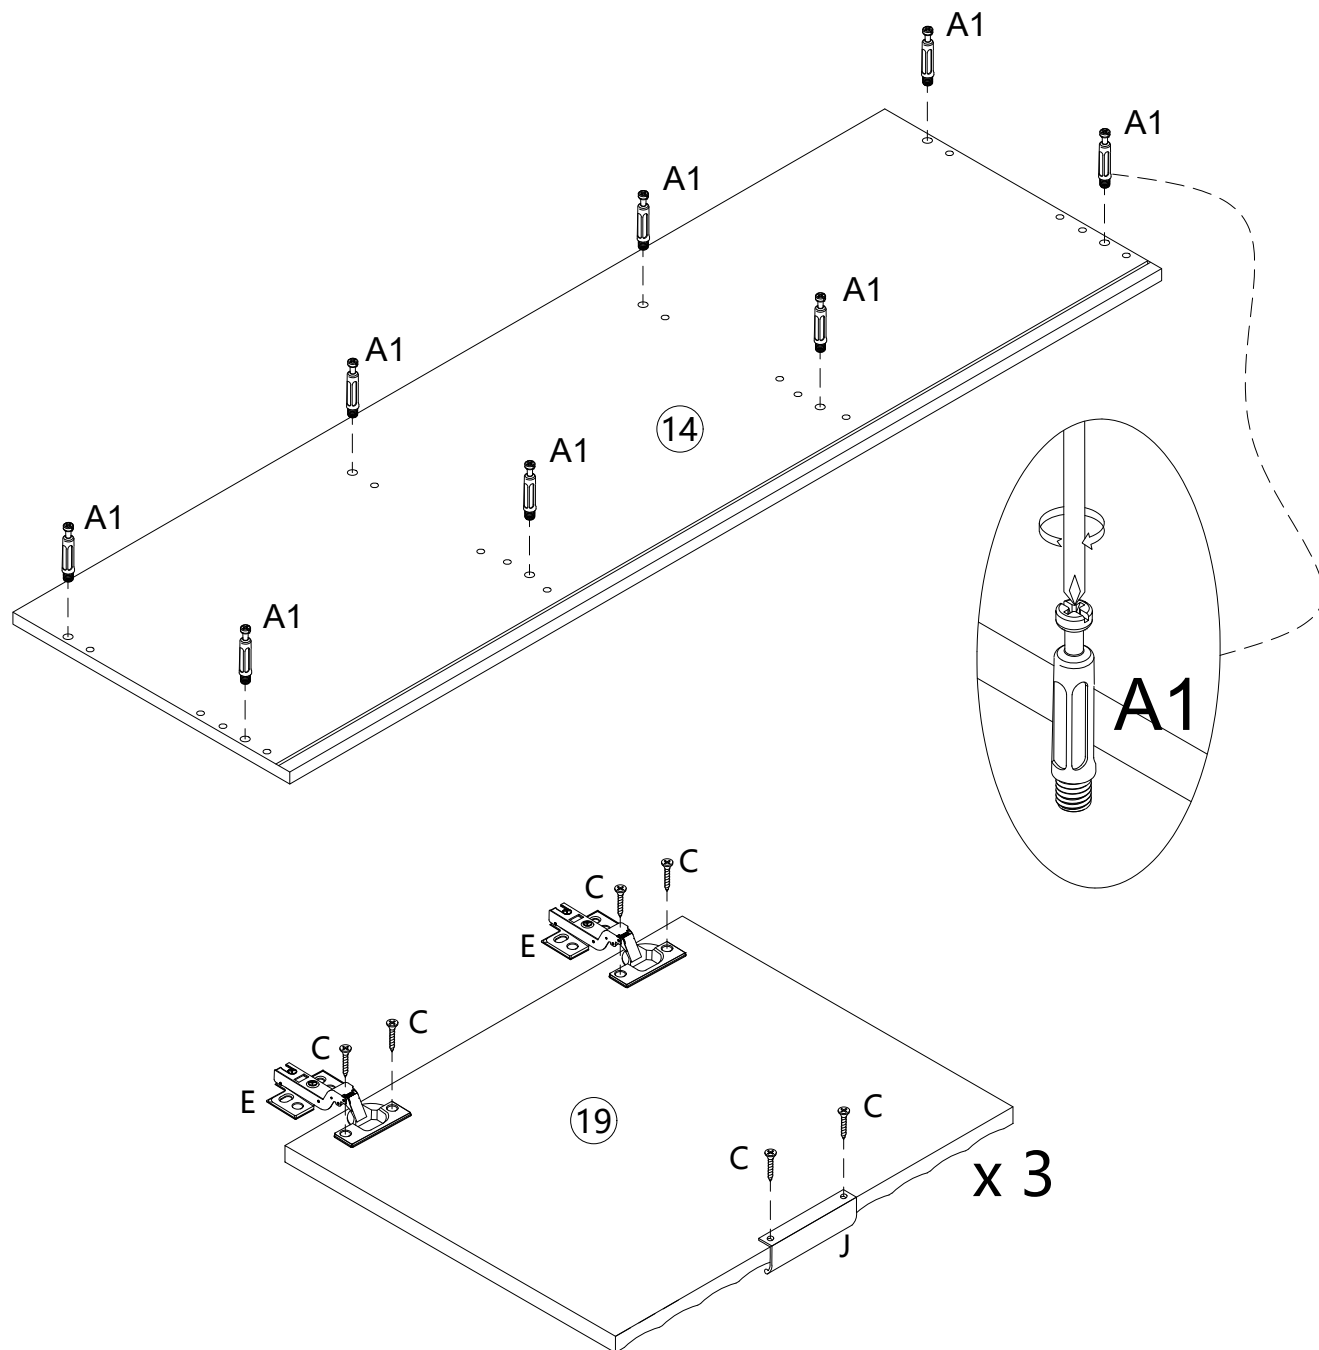

A1




Cam Bolt x 8

C




3.5*14mm Screw x 18

E



Hinge x 6





J





handle x 3

Assembly Instructions

Step 5

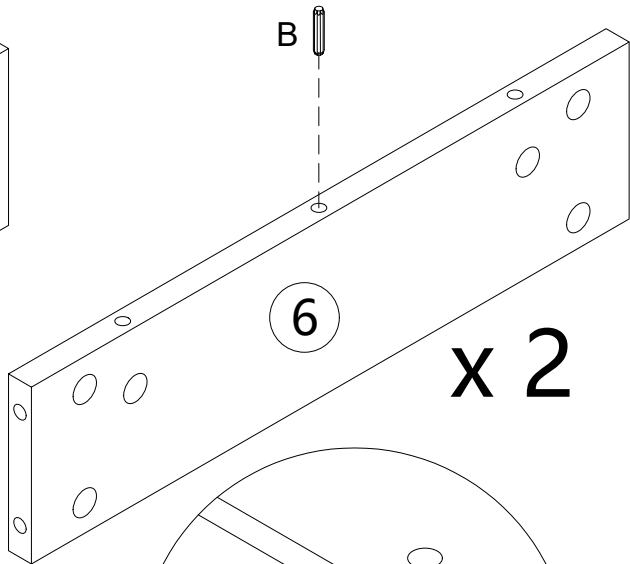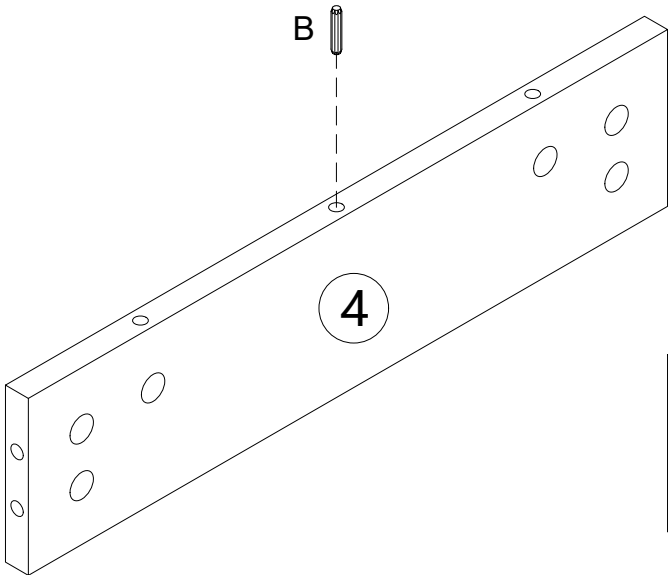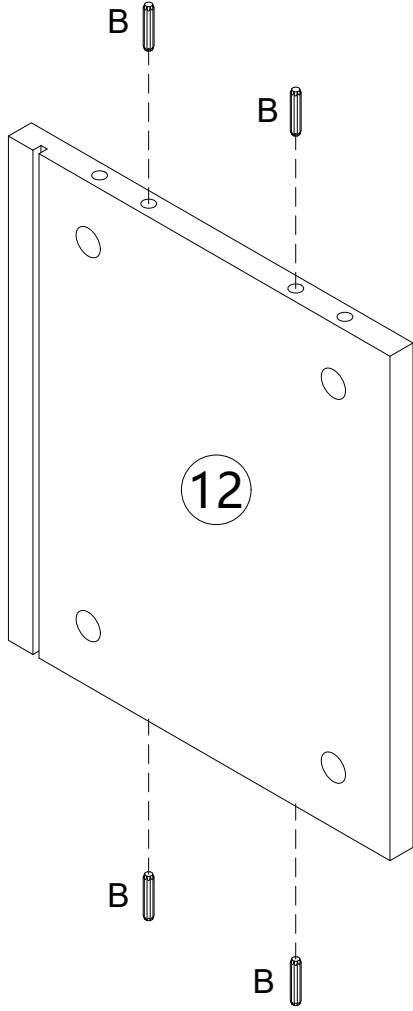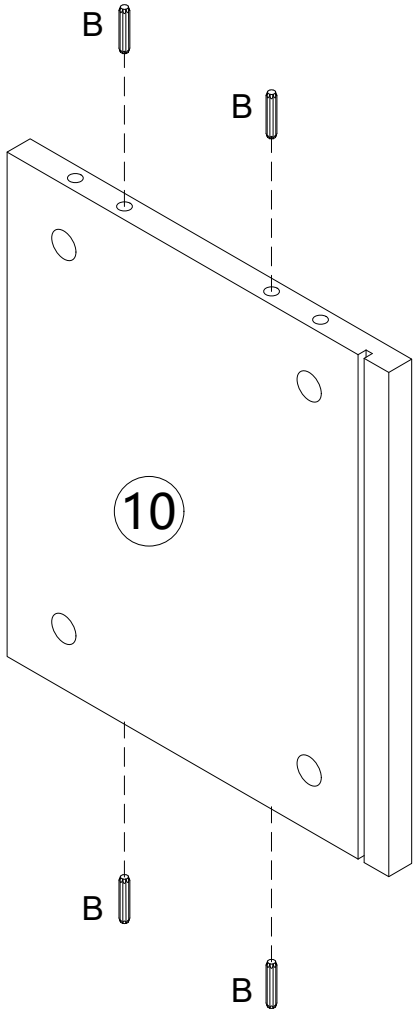


x 2

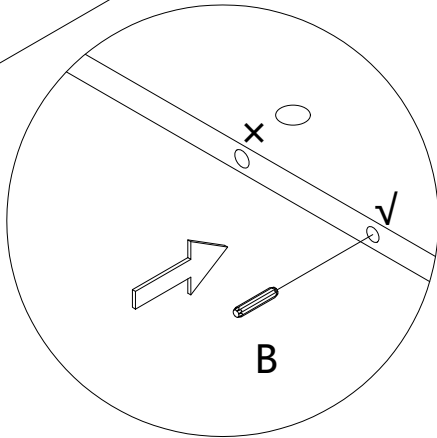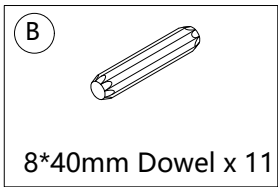




Assembly Instructions

Step 6

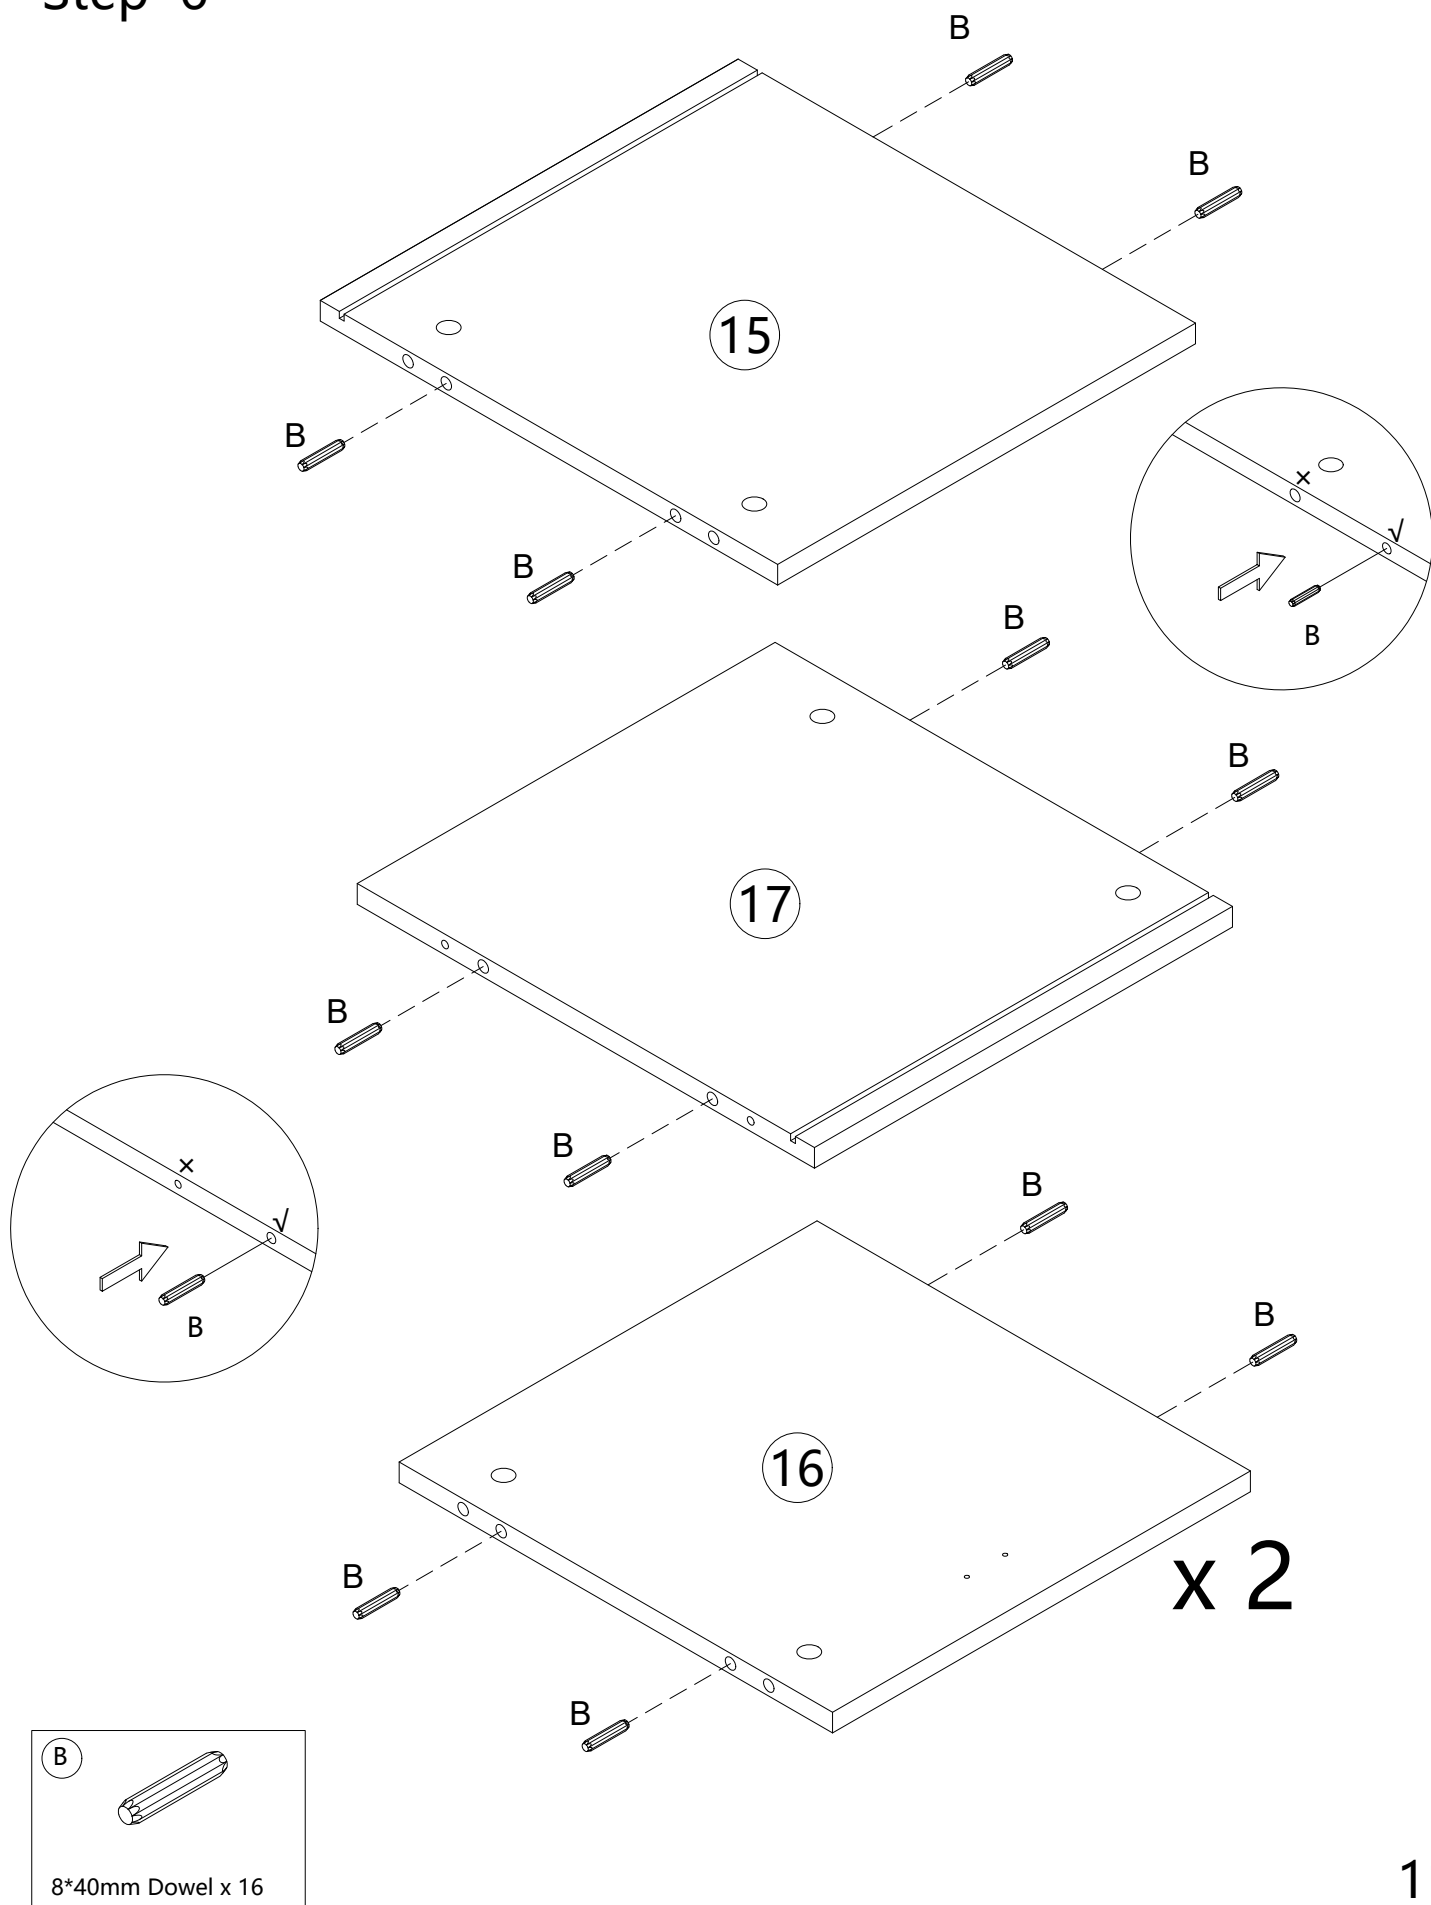





Assembly Instructions

Step 7

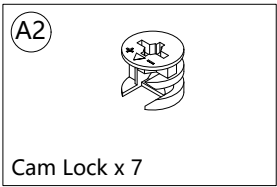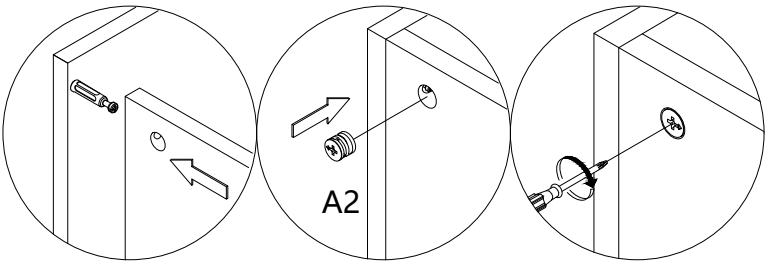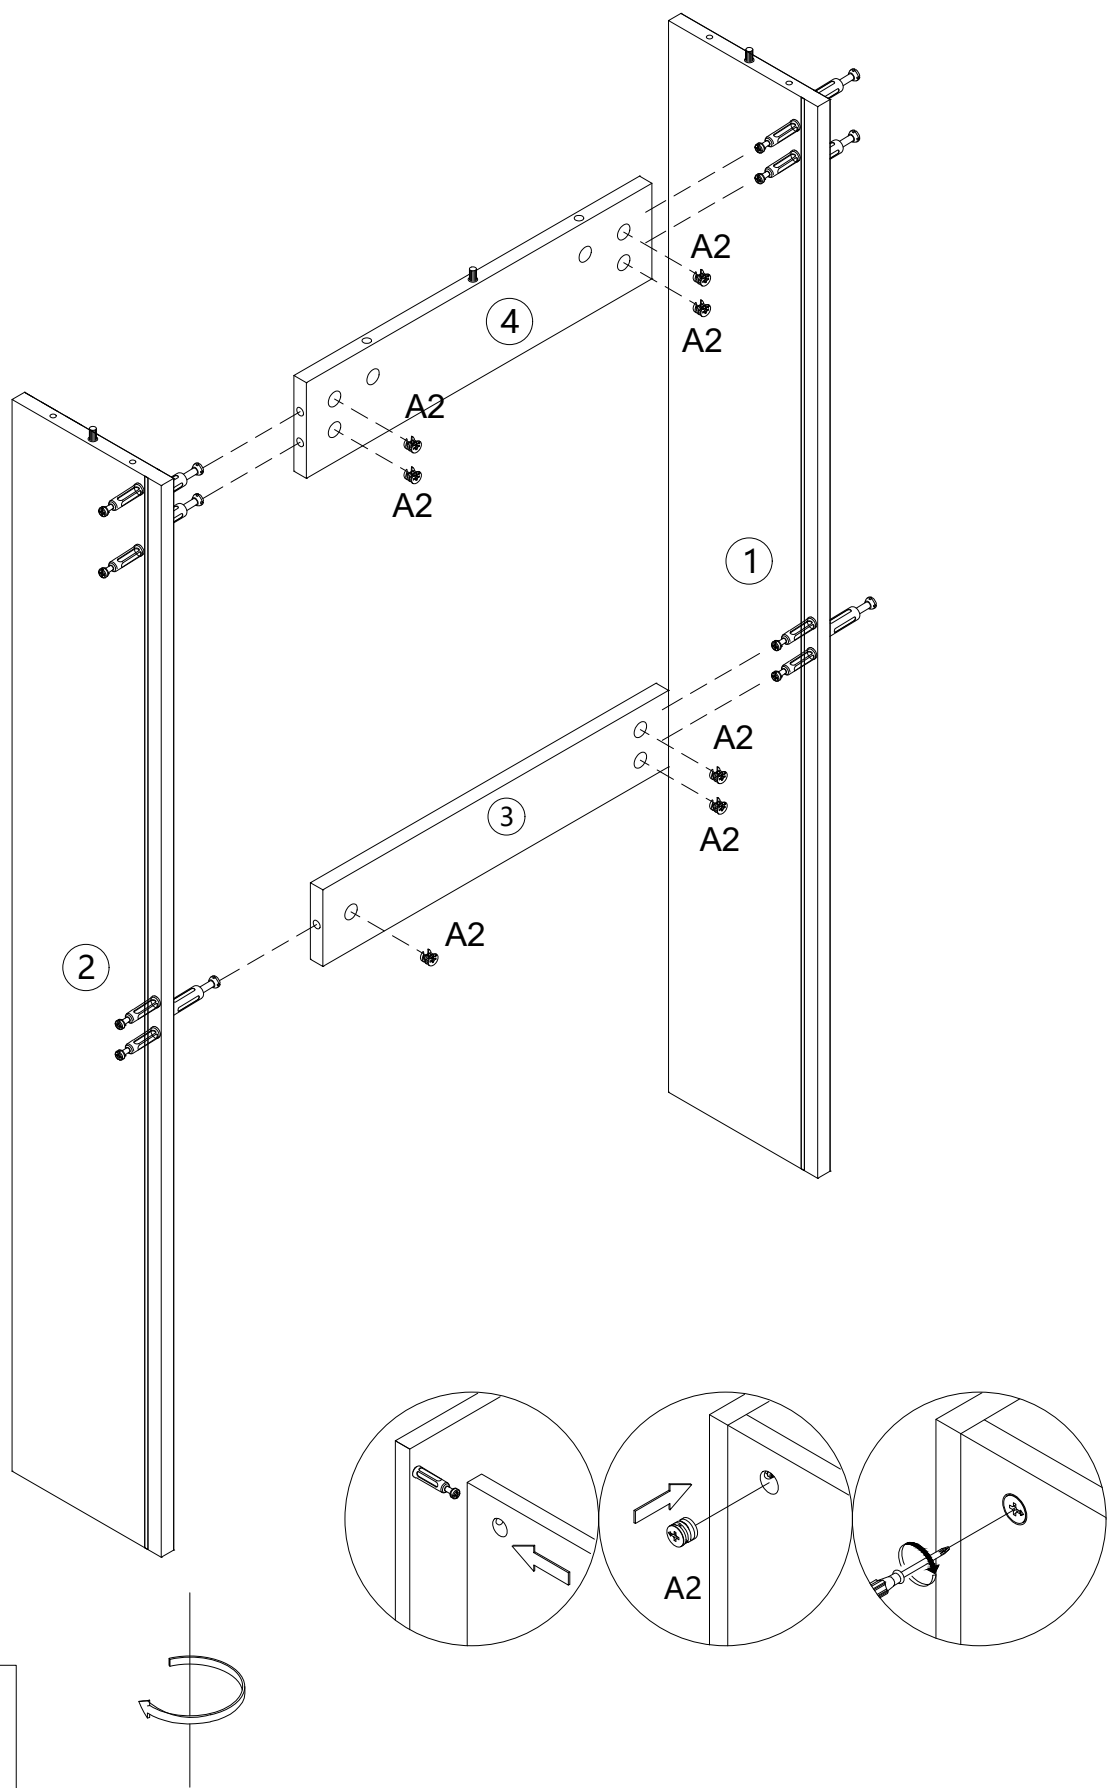





Assembly Instructions

Step 8

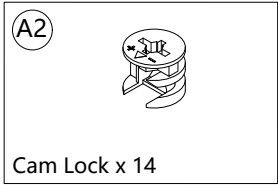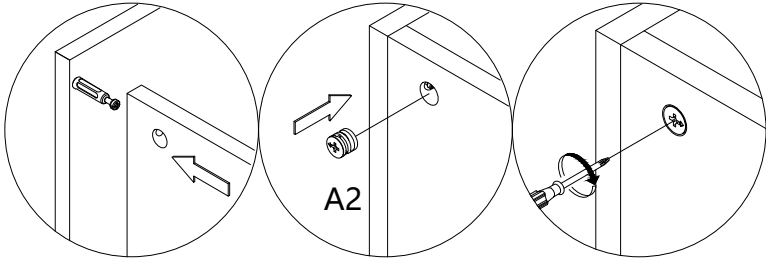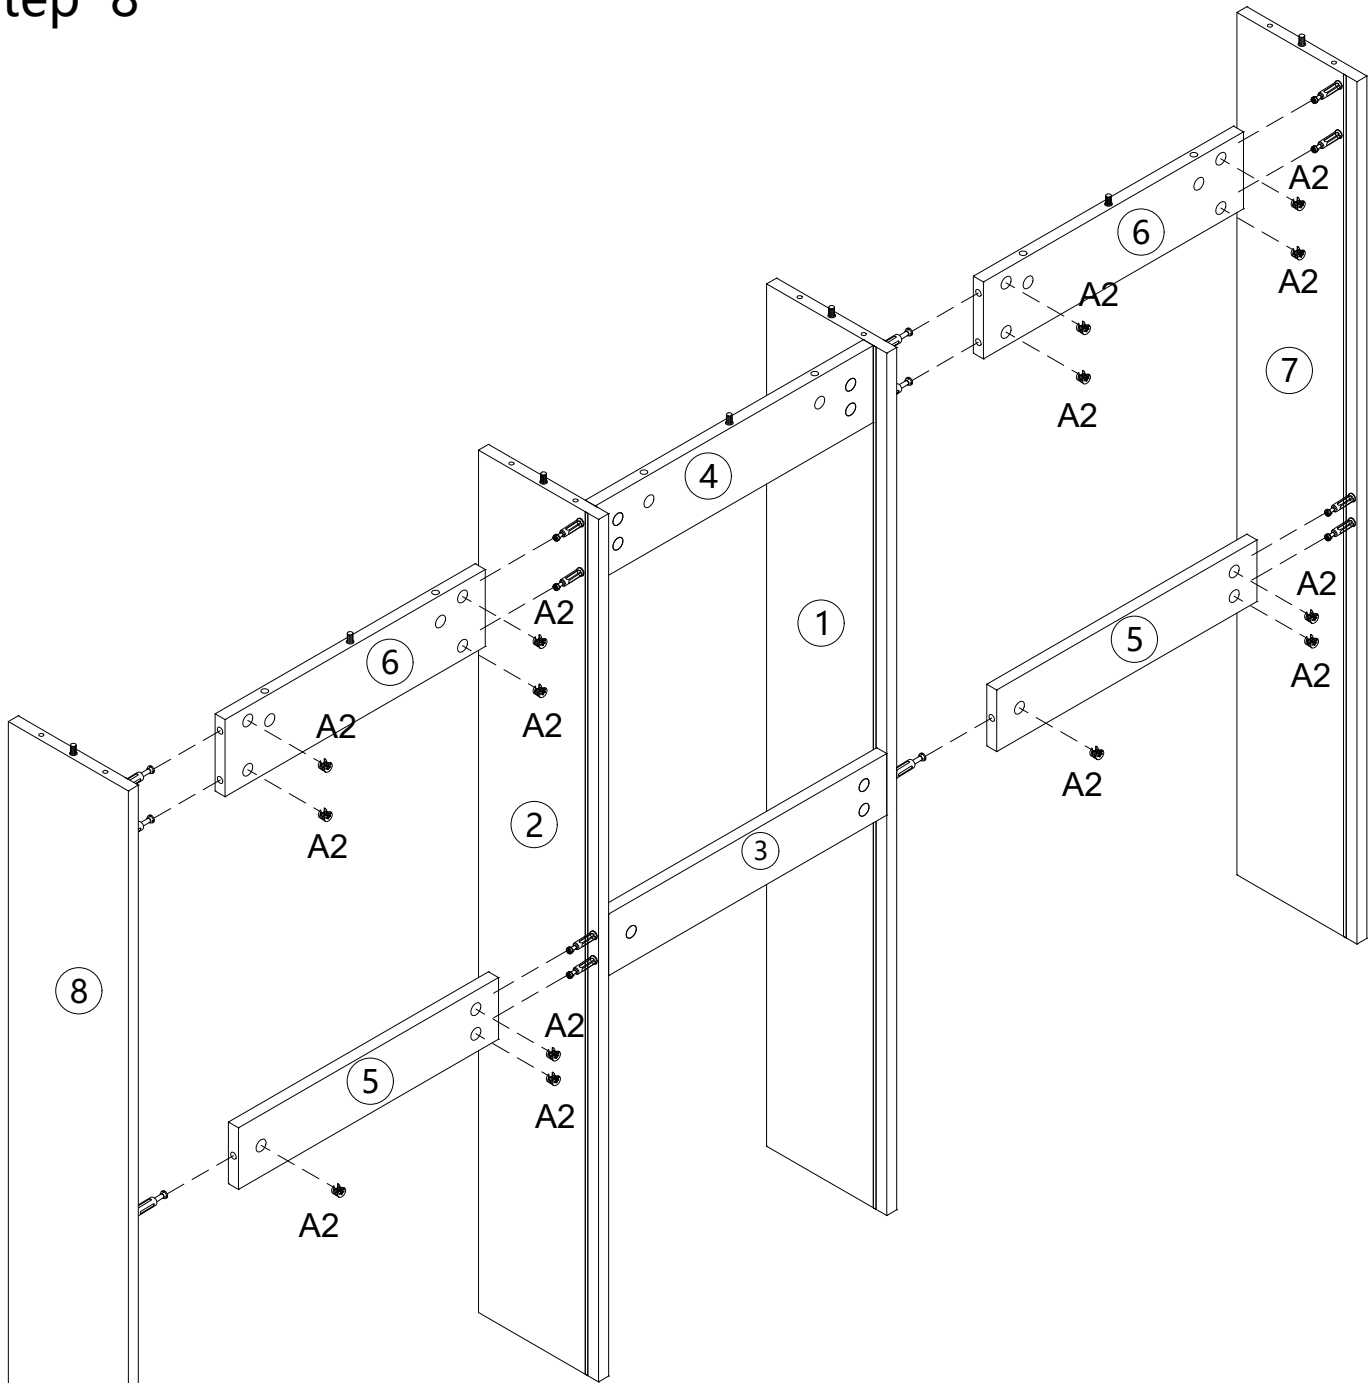


Assembly Instructions

Step 9

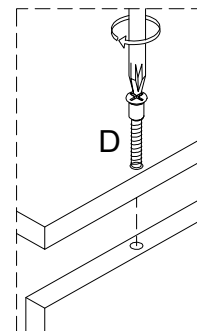
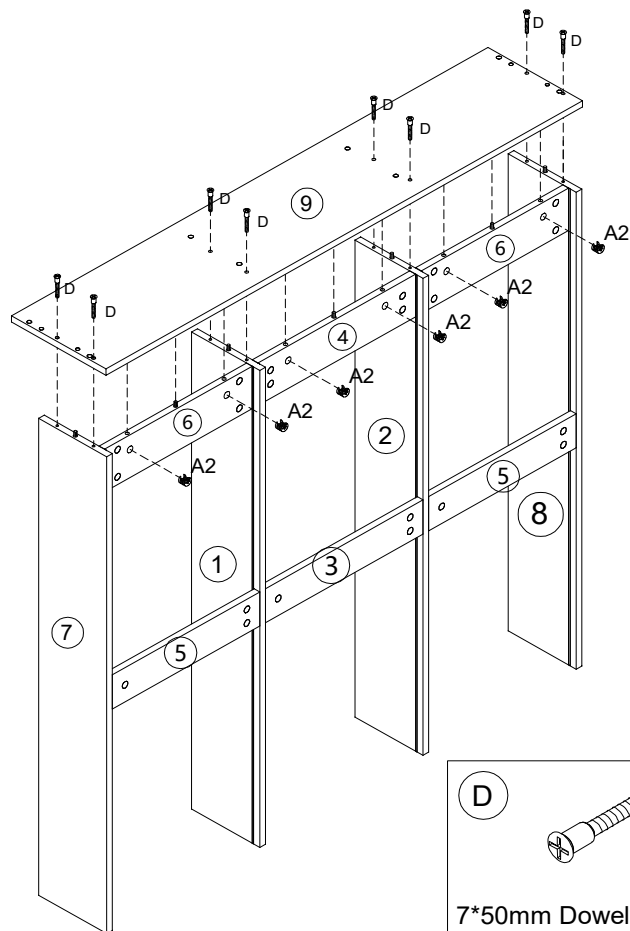
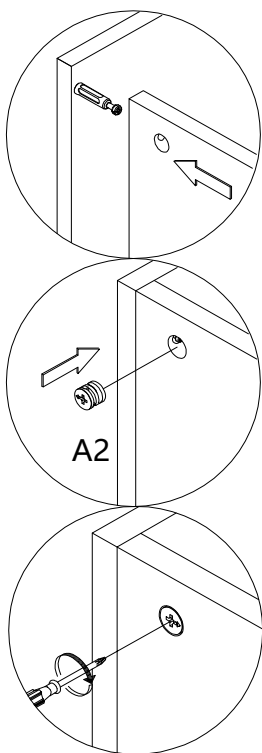


7*50mm Dowel x 8



Cam Lock x 6


Step 10

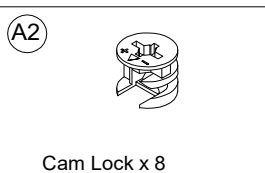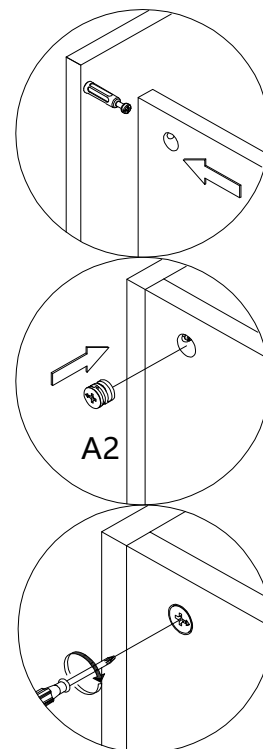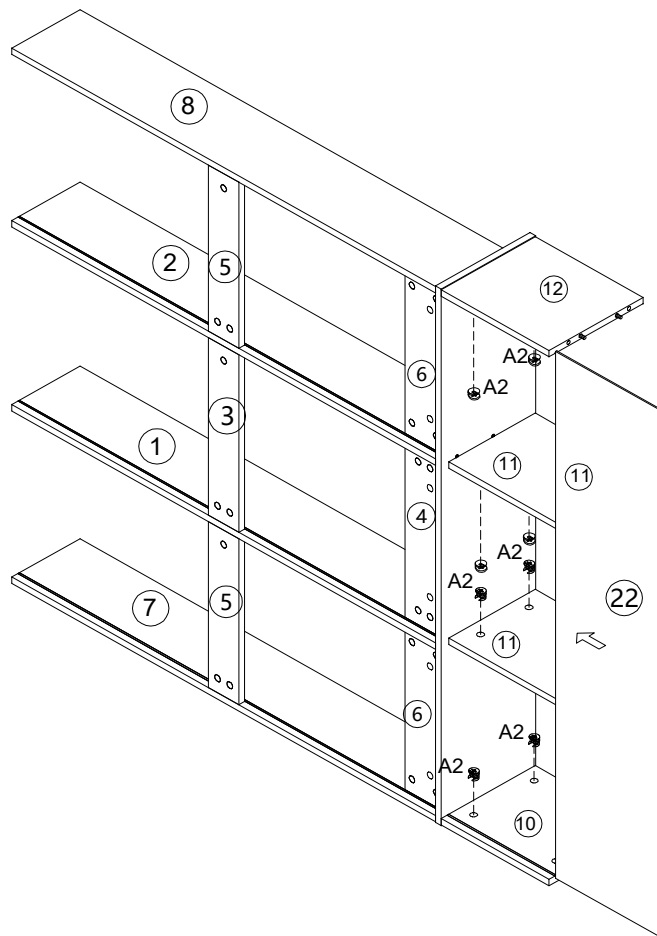


Cam Lock x 8

Assembly Instructions

Step 11



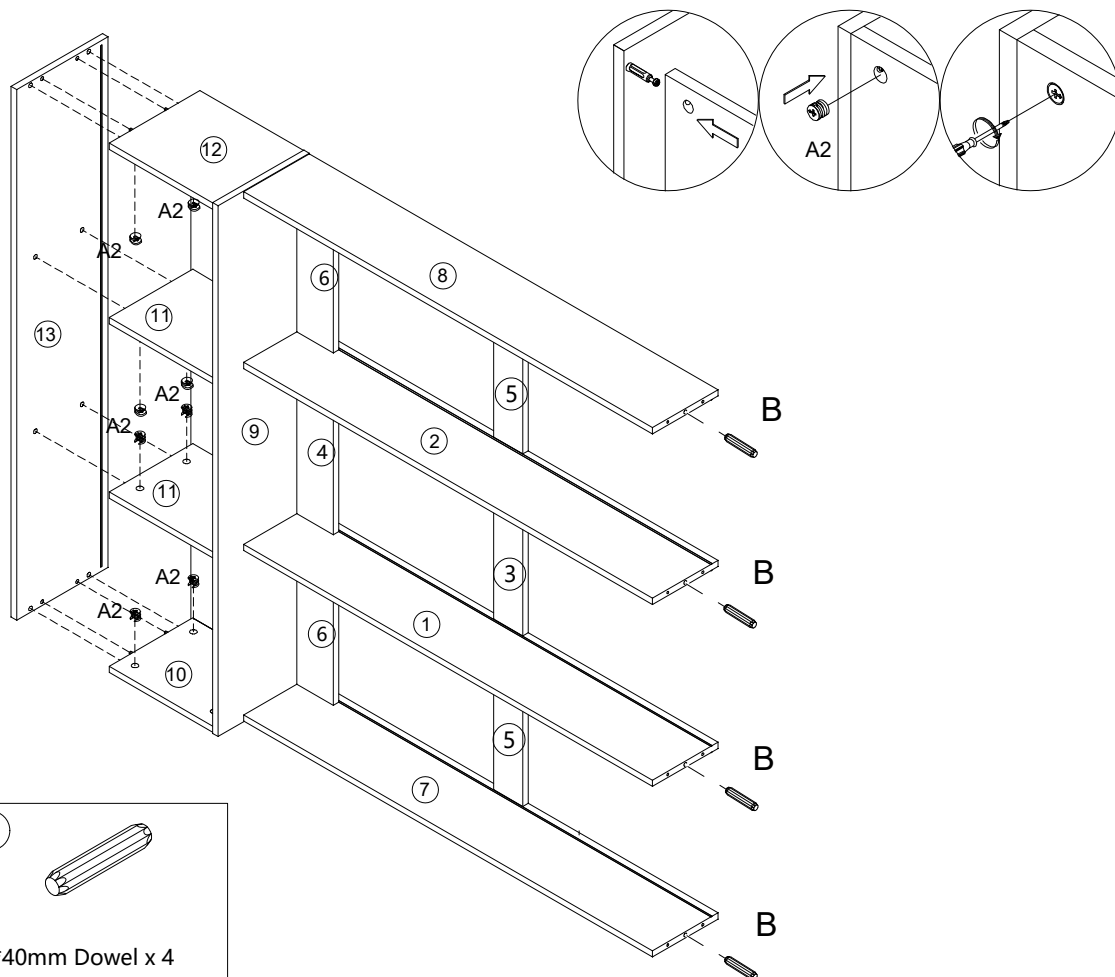


Step 12

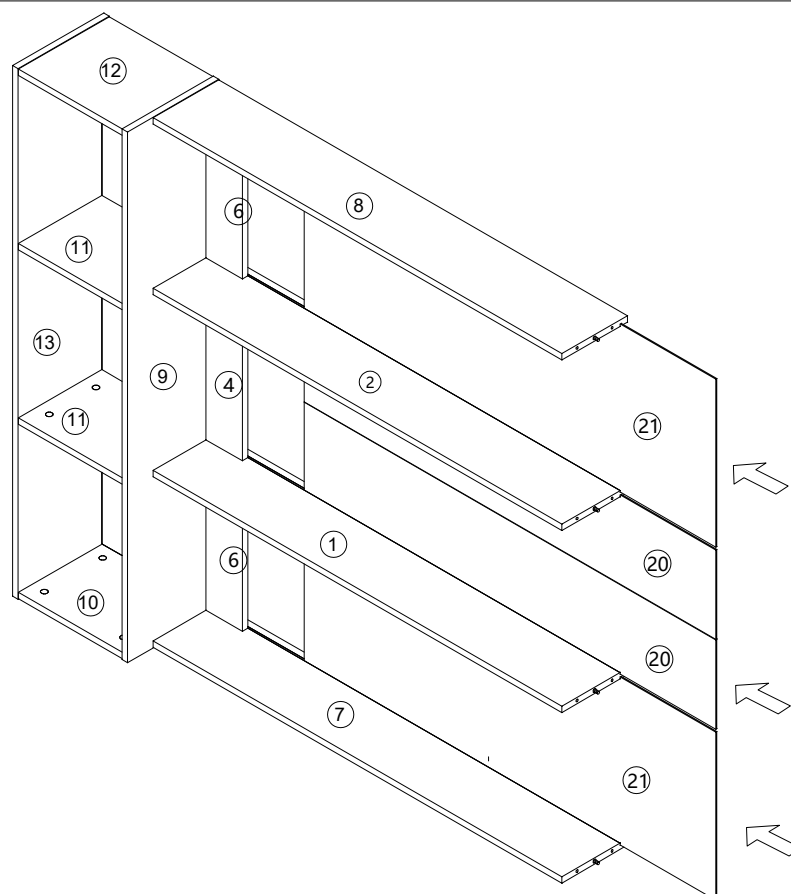



Assembly Instructions

Step 13

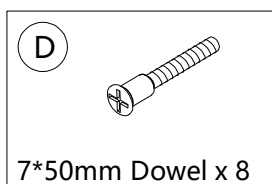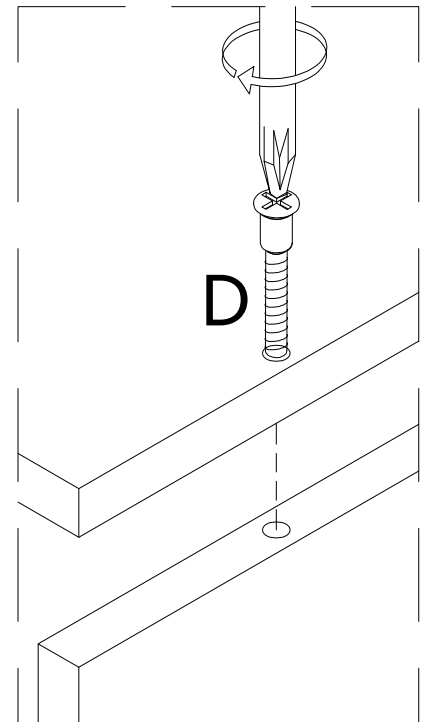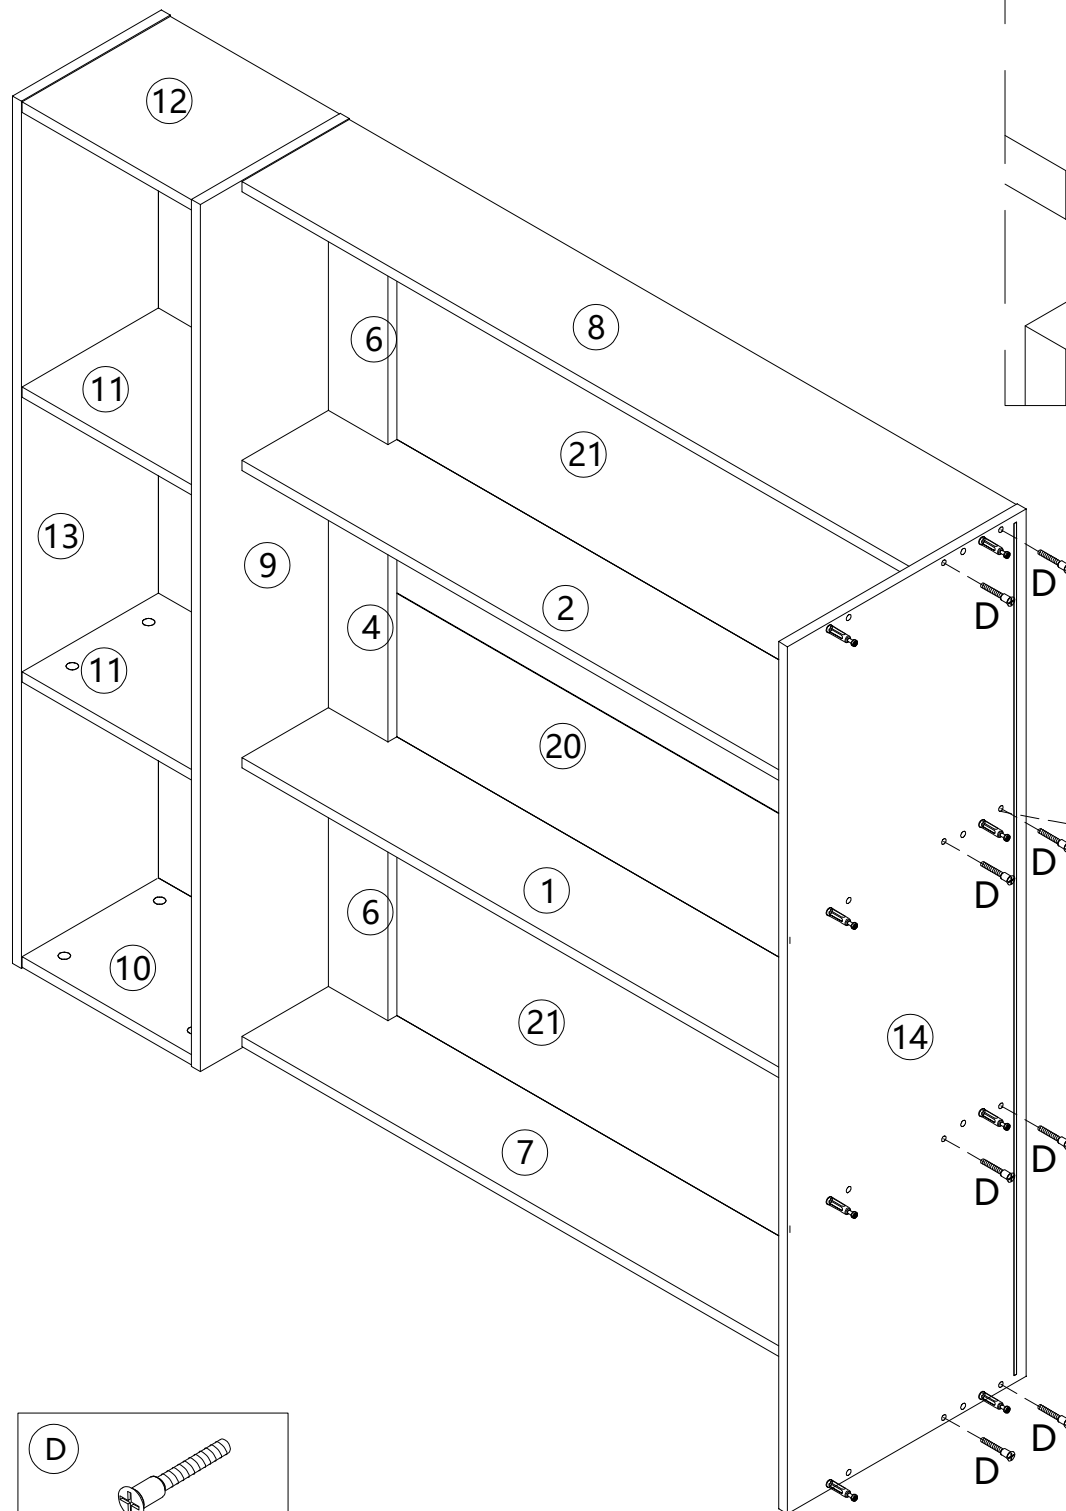



Assembly Instructions

Step 14

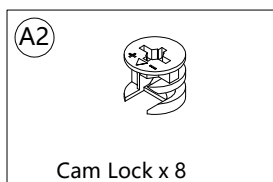
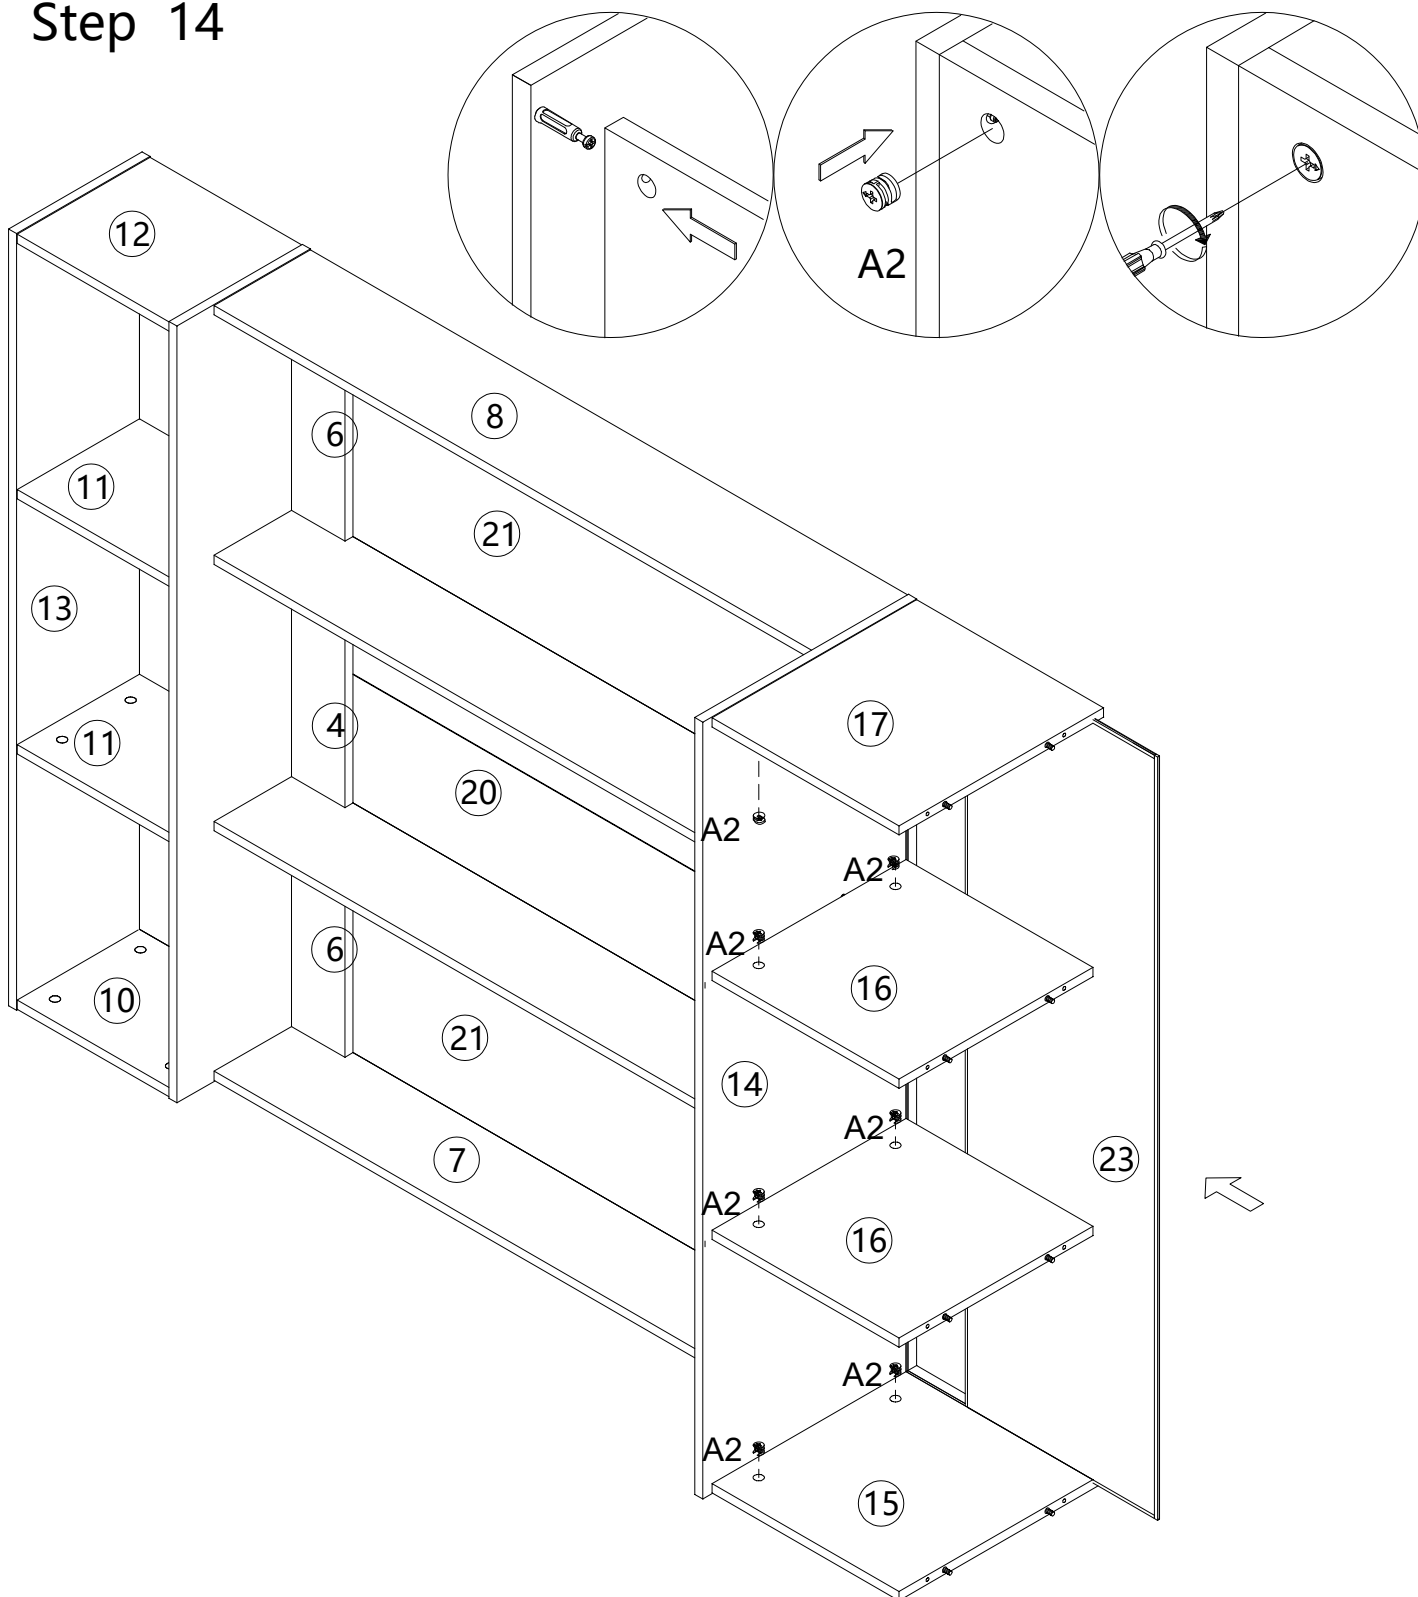


Assembly Instructions

Step 15




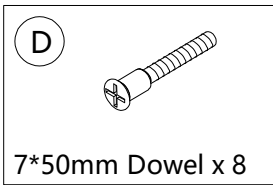
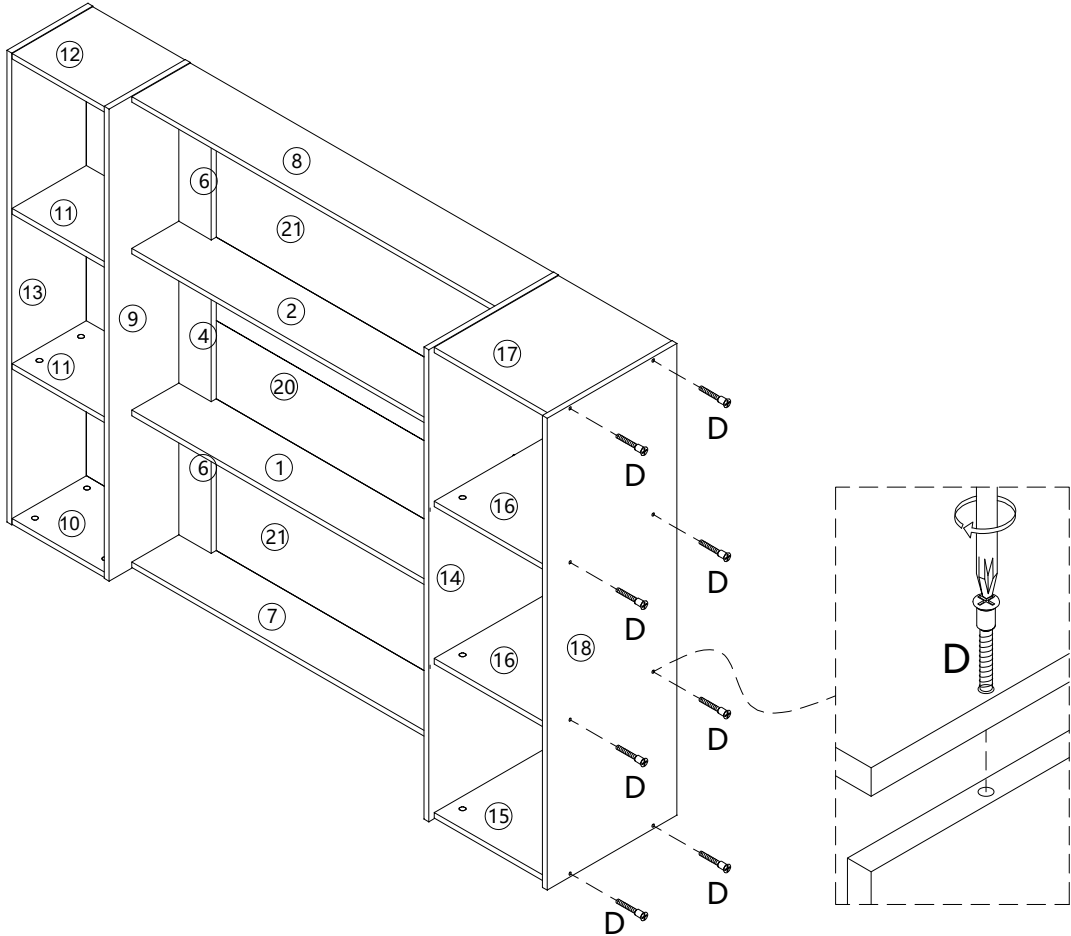


Step 16

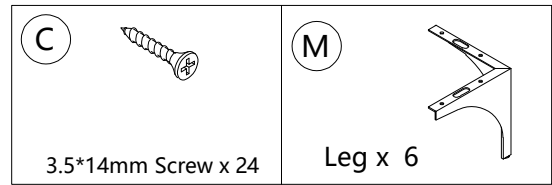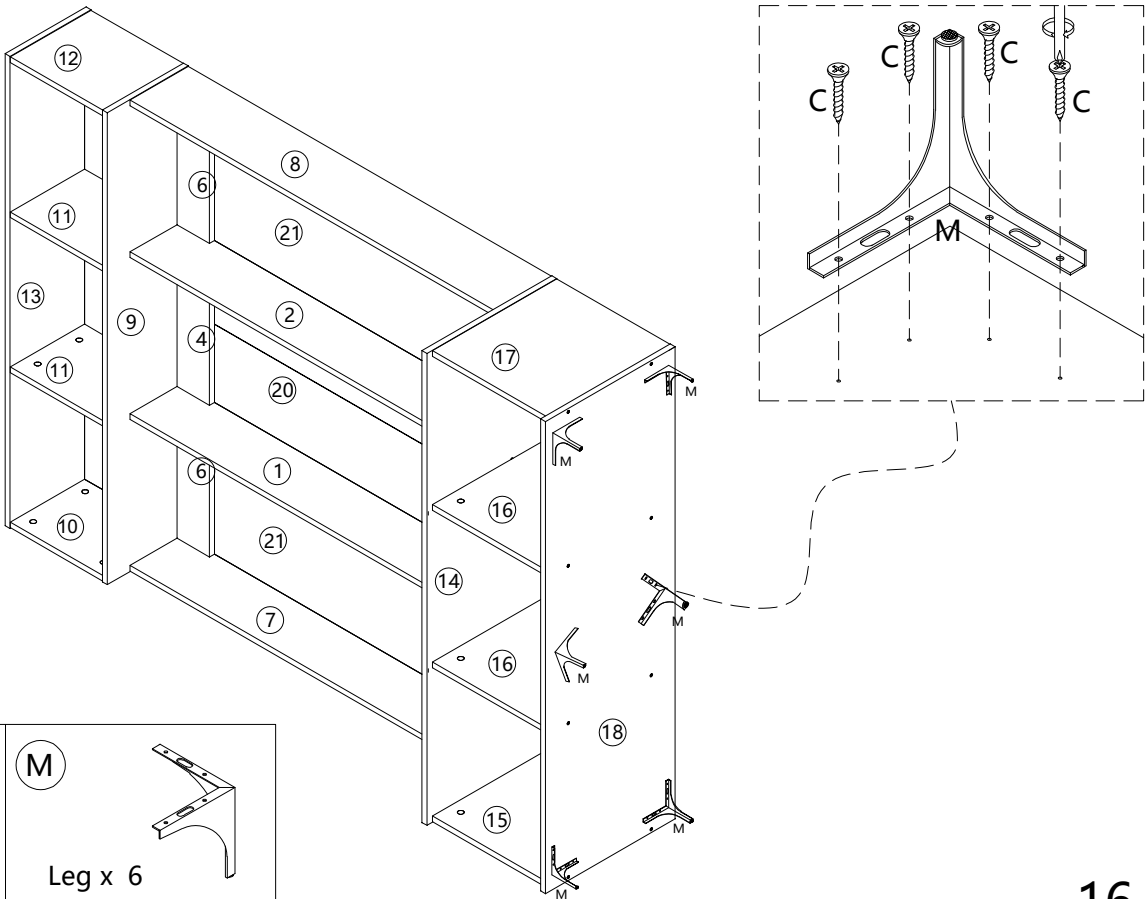

Assembly Instructions

Step 17

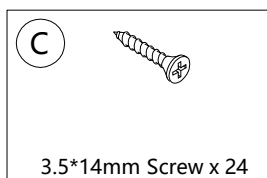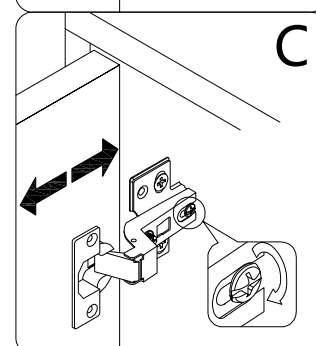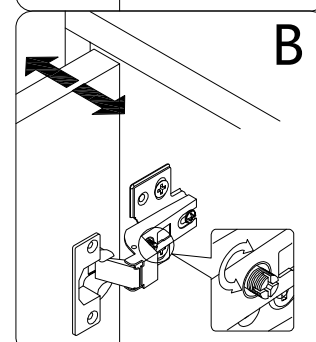
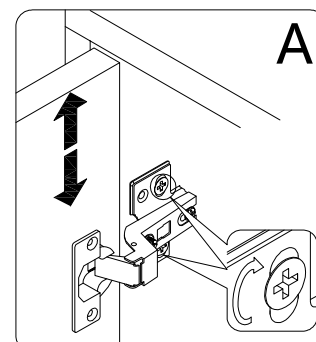
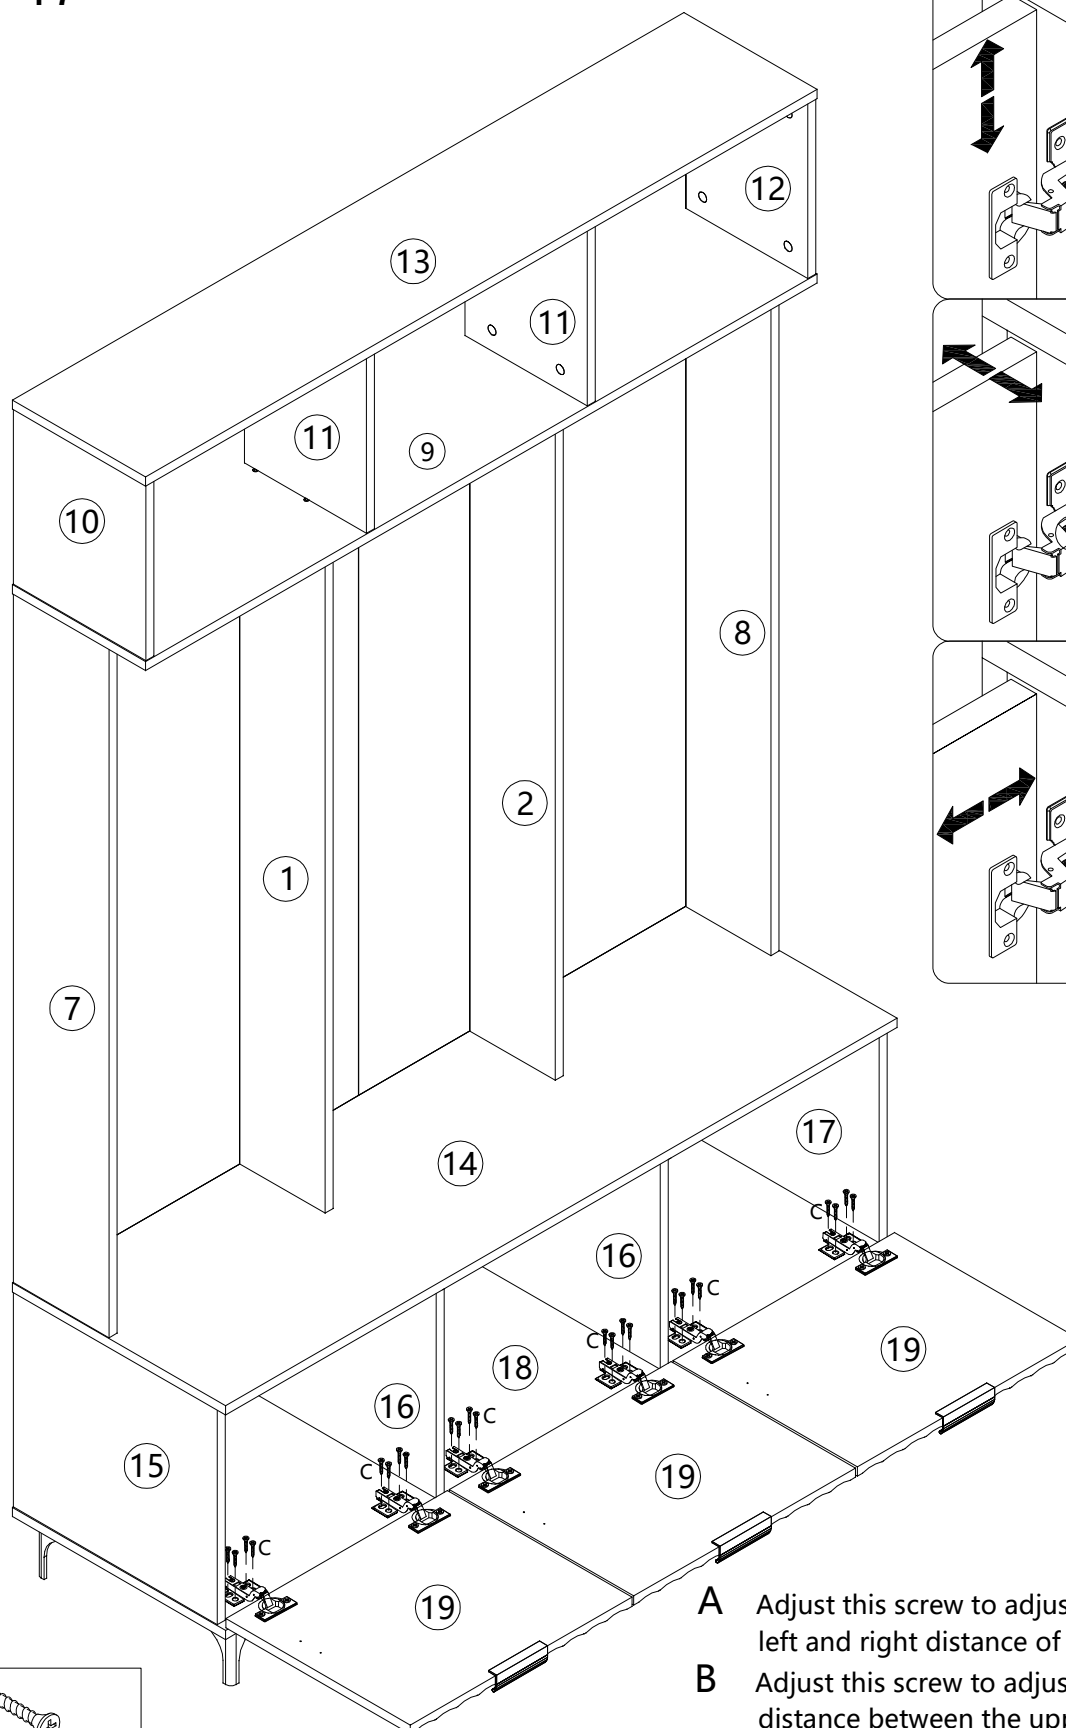



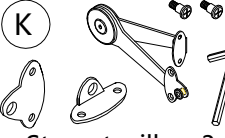

- A** Adjust this screw to adjust the left and right distance of the door panel
- B** Adjust this screw to adjust the distance between the upper and down parts of the door panel,
- C** Adjust this screw to adjust the longitudinal separation of the door panel.

Assembly Instructions

Step 18


In order to make the product more beautiful, please paste hardware F on the exposed holes

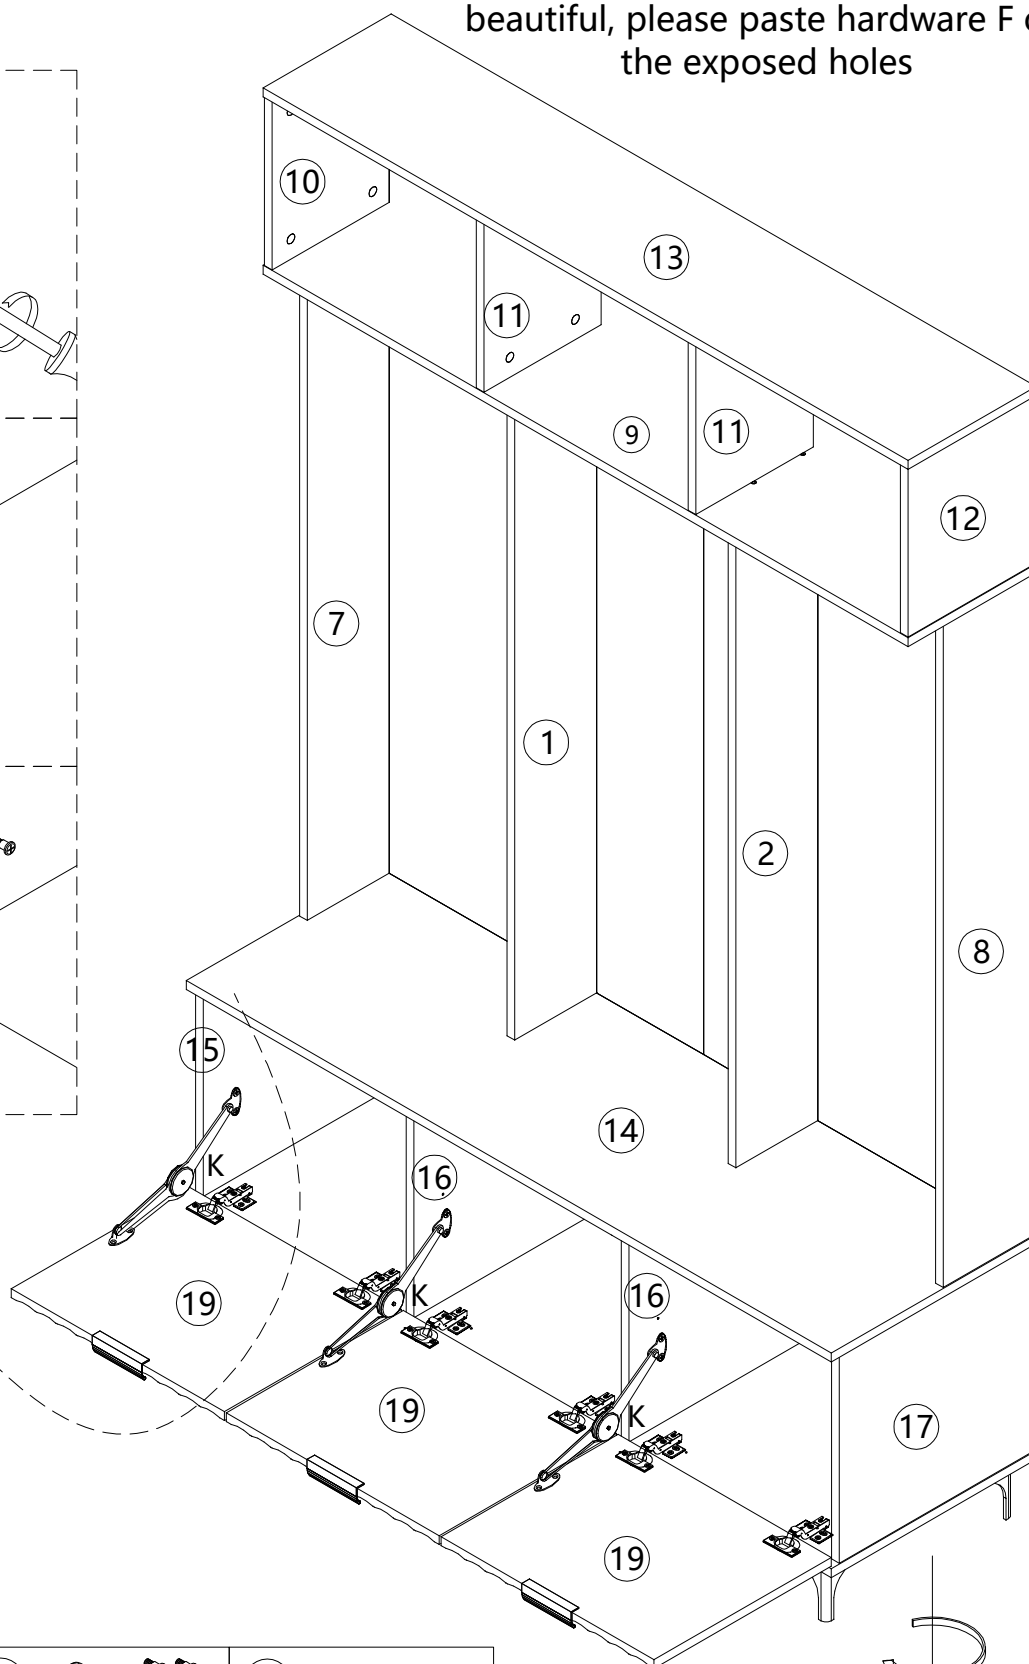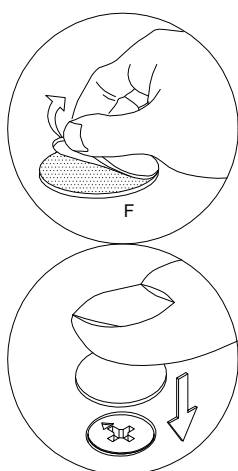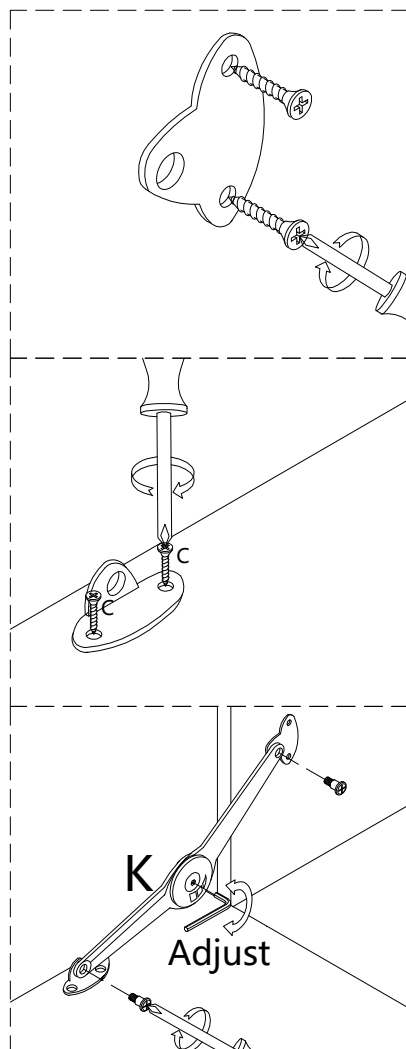




<p>C</p>  <p>3.5*14mm Screw x 12</p>	<p>K</p>  <p>Stop at will x 3</p>	<p>F</p>  <p>Hole to stick x 8</p>
--	---	--

Assembly Instructions

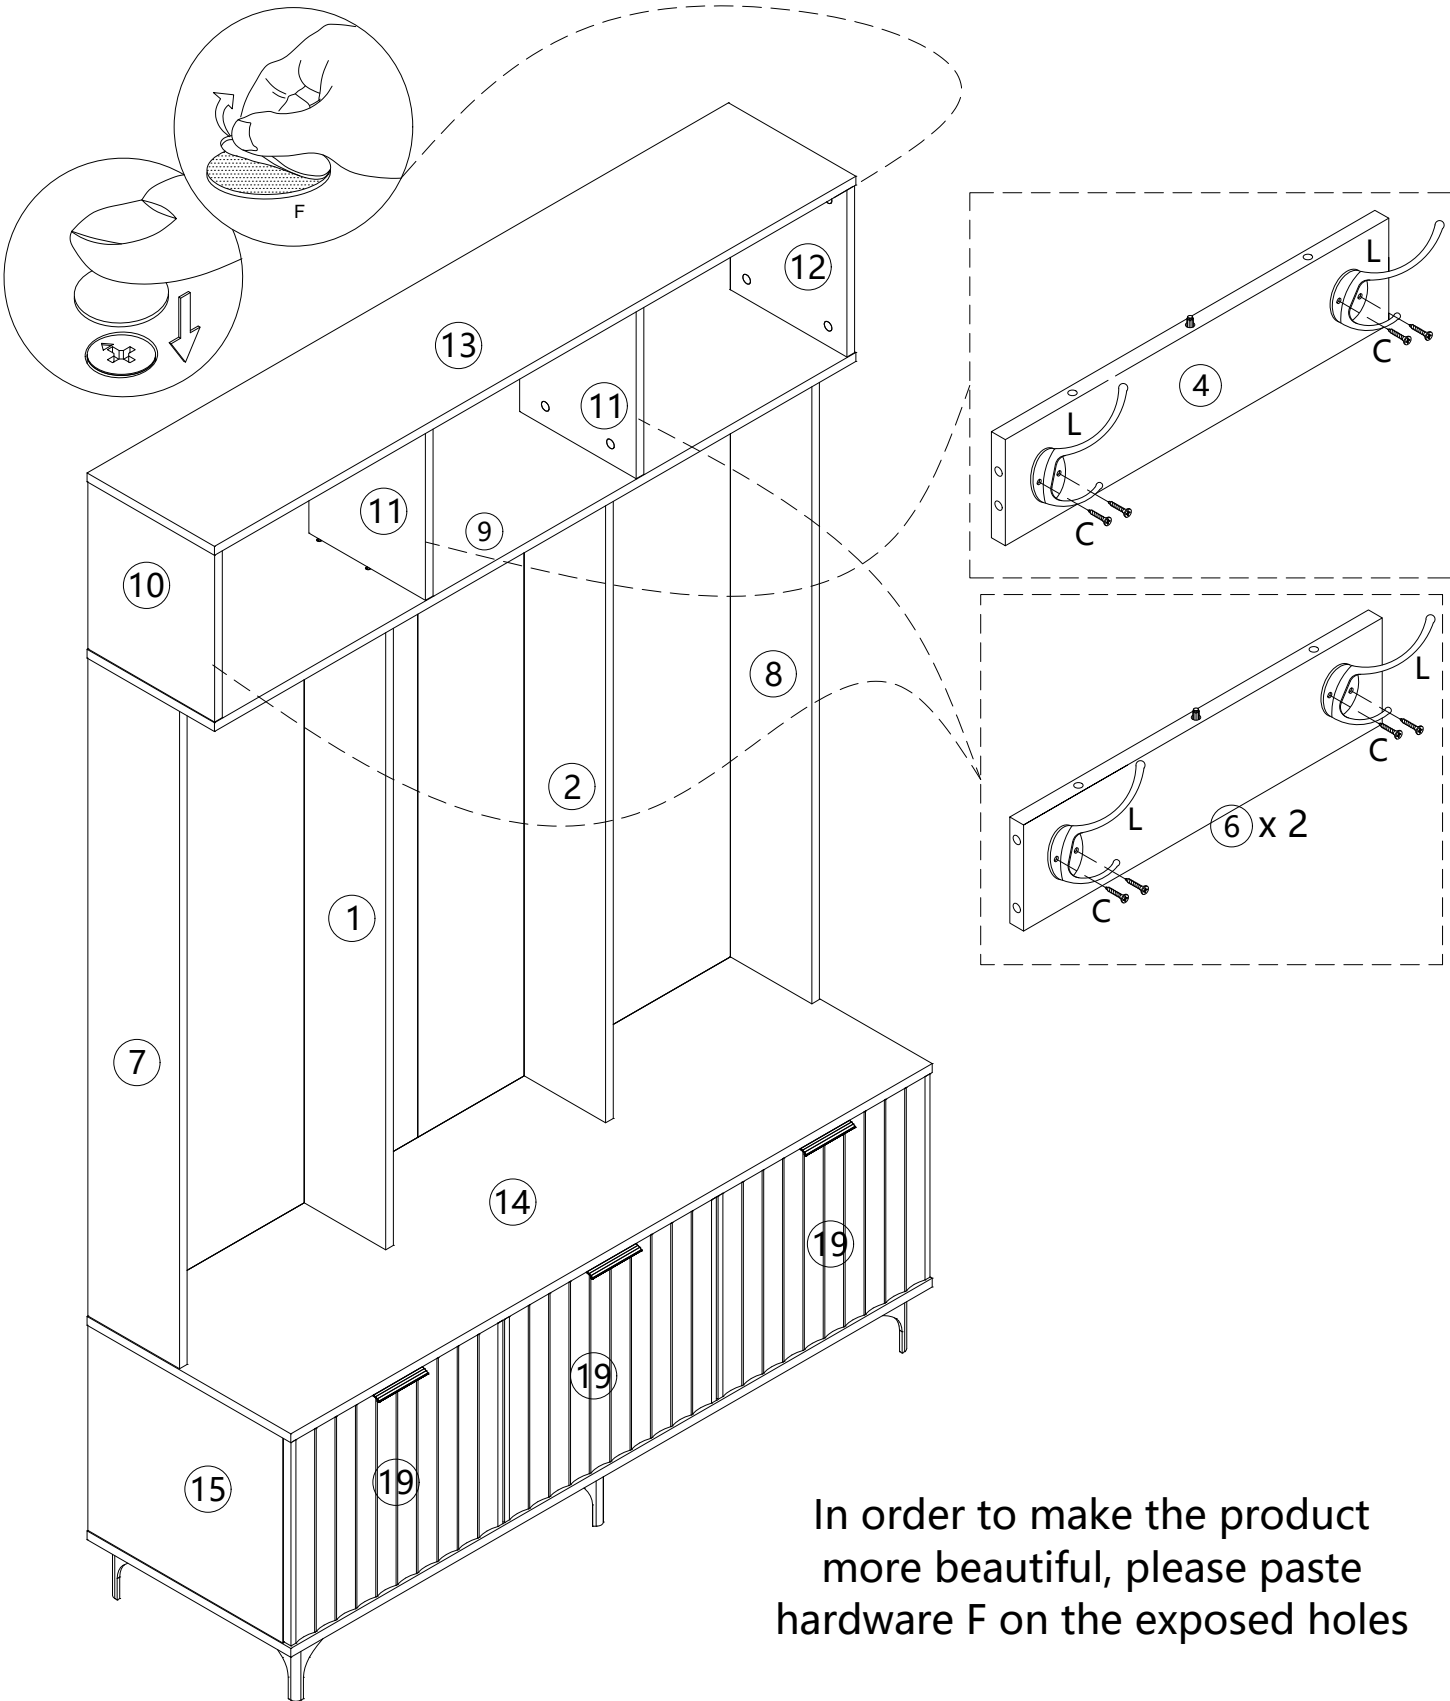Step 19






In order to make the product more beautiful, please paste hardware F on the exposed holes

C 	L 	F 
3.5*14mm Screw x 12	Clothes-hook x 6	Hole to stick x 16

Assembly Instructions







Step 20

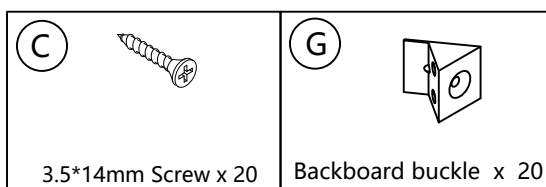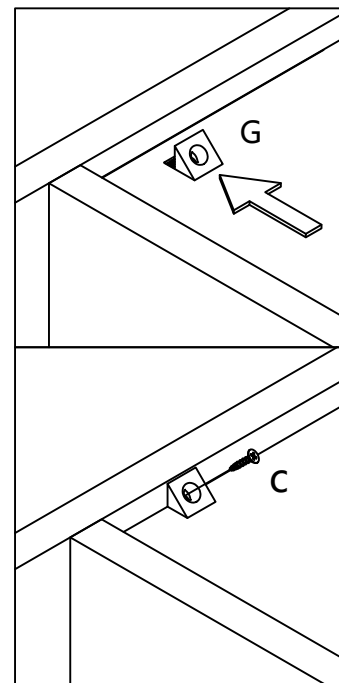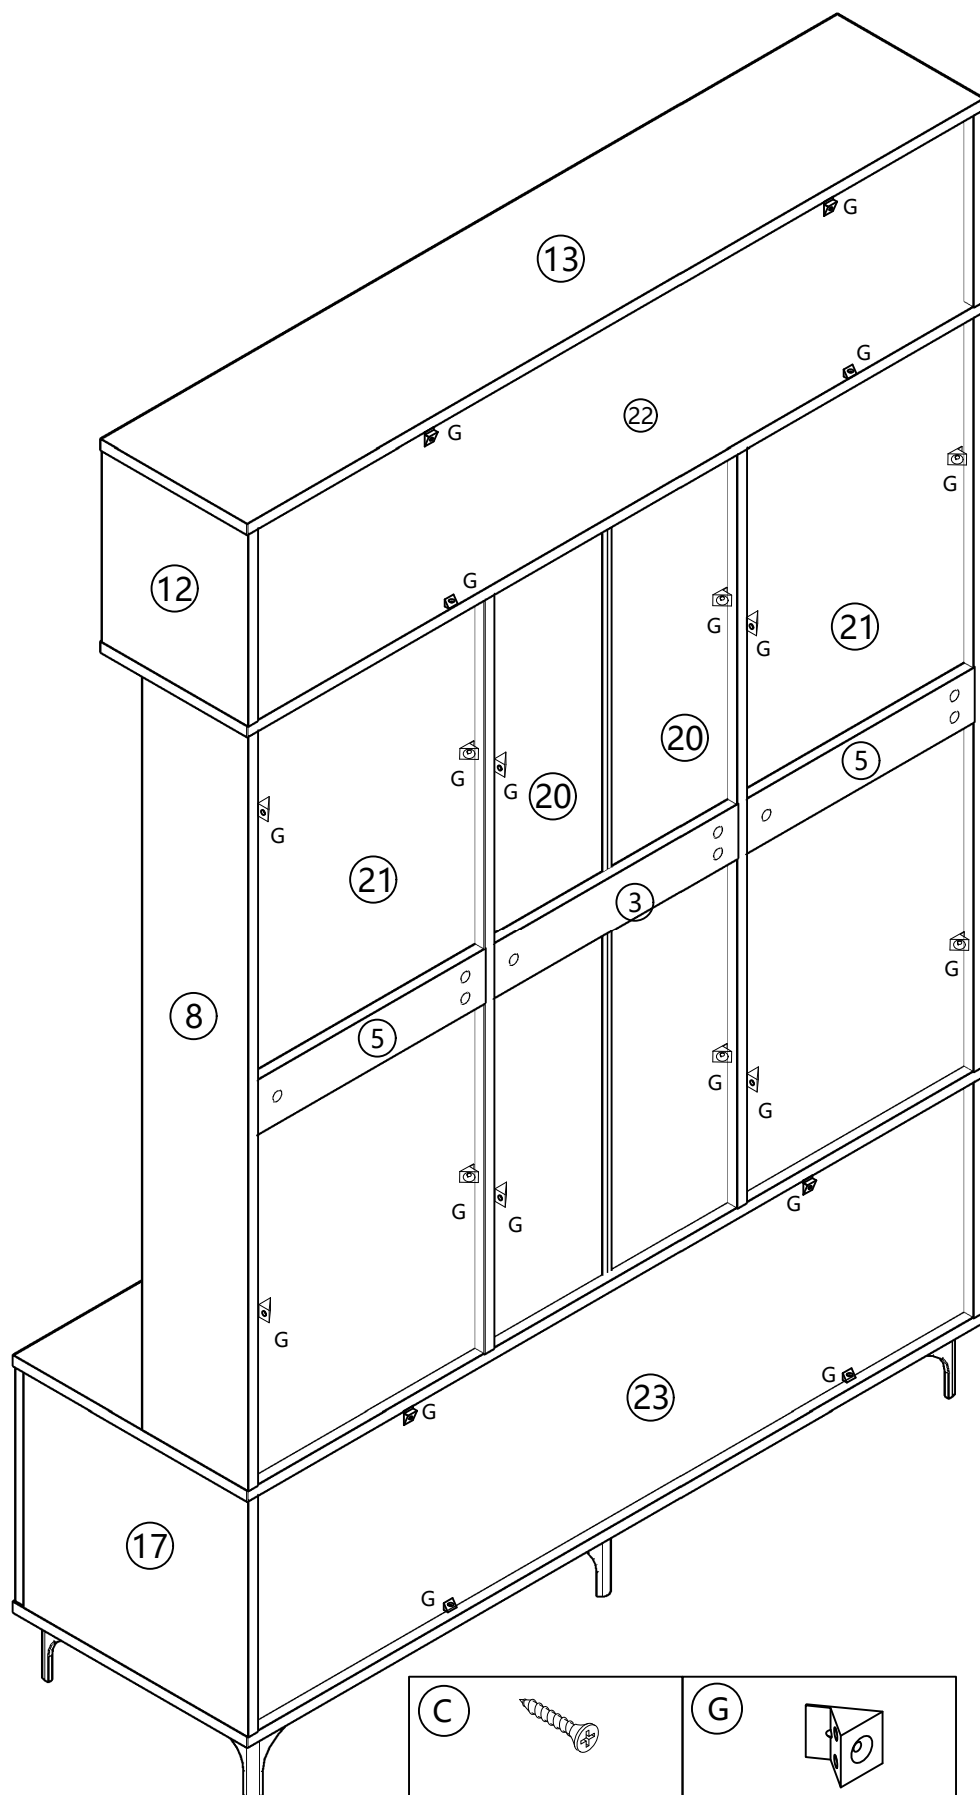

Assembly Instructions

Step 21

Please decide whether to add anti tipping accessories based on personal needs

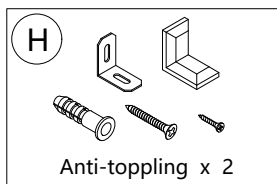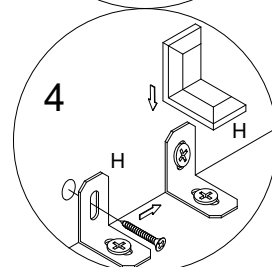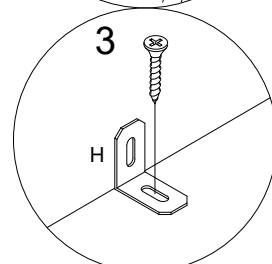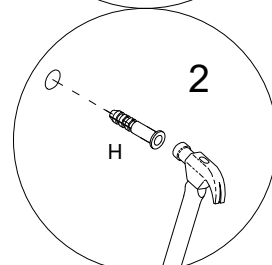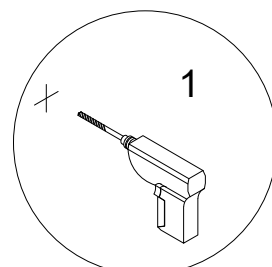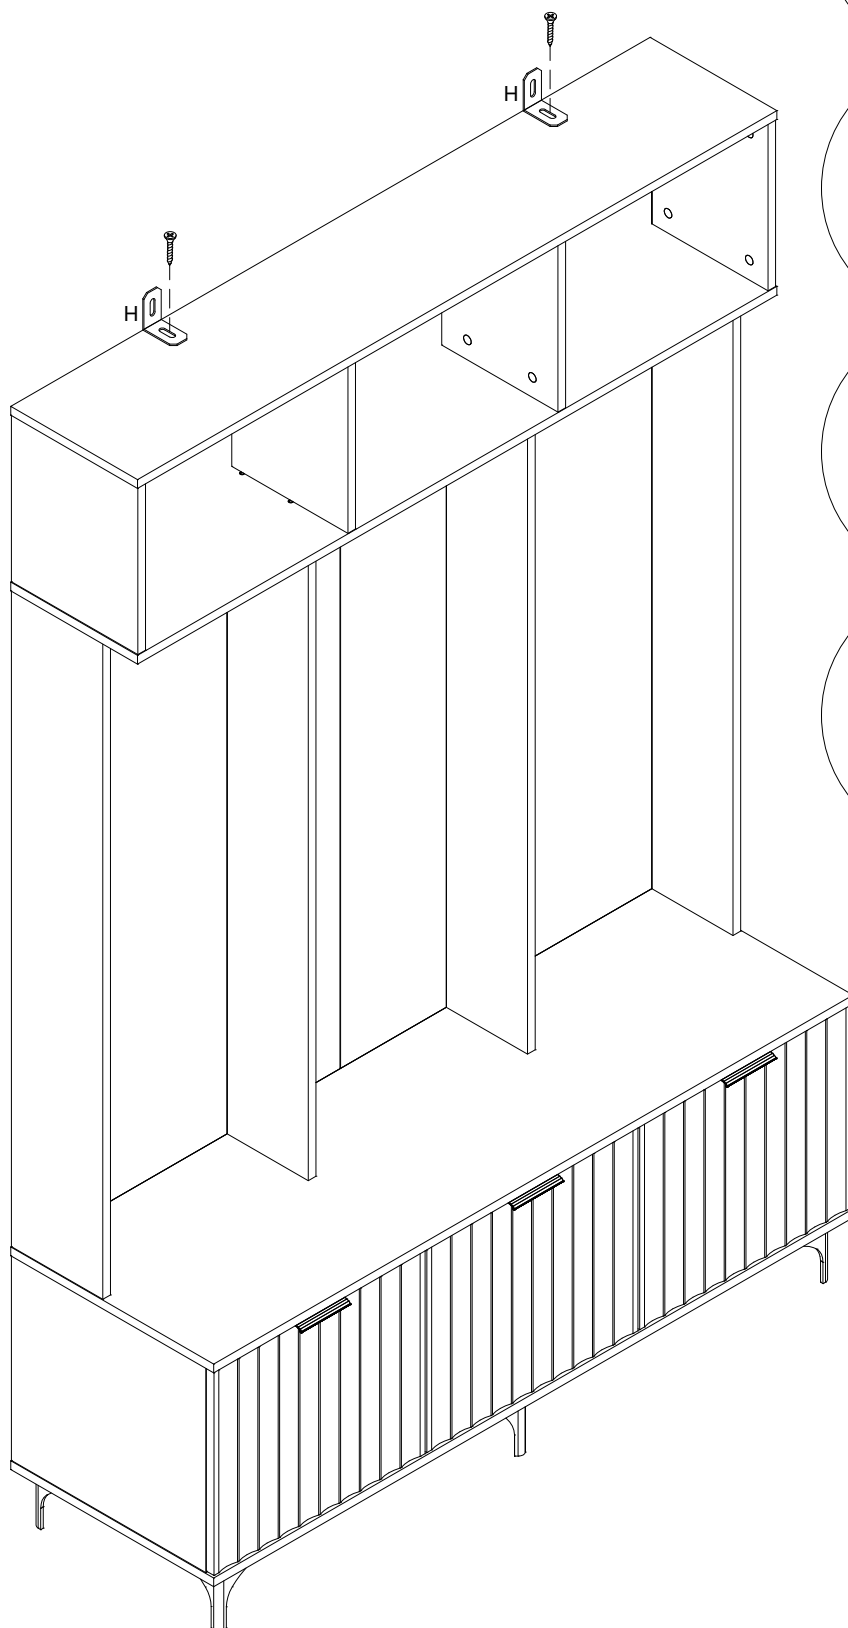

Assembly Instructions

