



Plush Velvet Upholstered Ottoman Gas Lift Storage Bed Frame

Double and King Size SPB-001

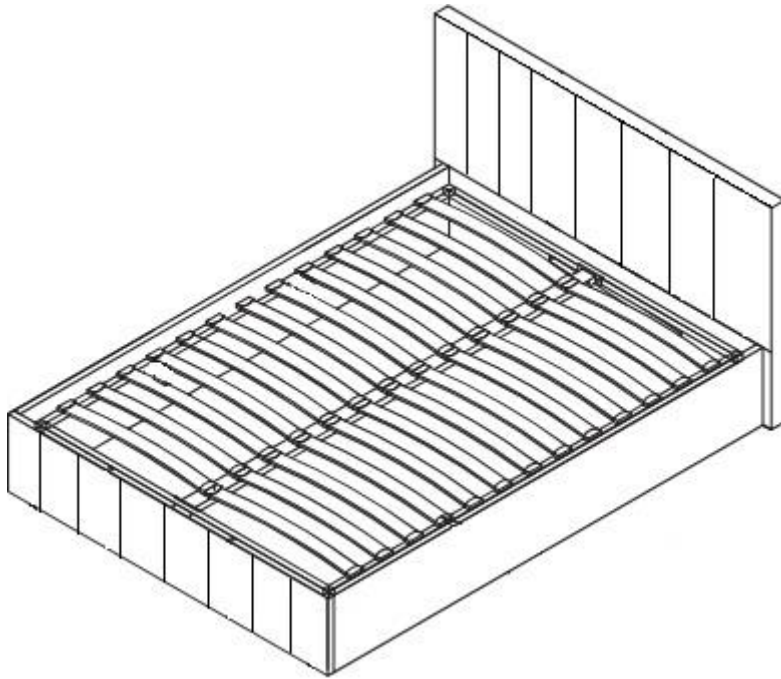

Up to 2 hour approx
assembly time

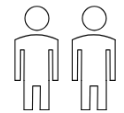

Two person
assembly

Important

Assembly Tip

Before you begin, it's best to identify all of the parts and fittings to build your ottoman bed frame. We advise laying these out on the floor to check you have everything, and to familiarise yourself with all of the parts and fittings before building.

Top Tip

We recommend that you build your new ottoman bed frame in the room you'd like it to be located. This will help prevent any risk of damage to the frame whilst moving it.

Safety and Care

It's important to ensure children and animals are kept away from the assembly area, as there are small components used in this bed frame which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.

Help and Support


Please contact our customer service team at sales@wearebeds.co.uk if you have any questions or issues with your purchase. If contacting, please quote where you ordered the bed from as well as the order information.

Recycling


Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Please keep your assembly instructions safe to refer back to in the future.

Operating Your Ottoman Bed Frame Safely

- Caution, this ottoman bed frame uses a pressurised mechanism.
- Please ensure children and animals are kept away from the ottoman bed frame when operating the mechanism.
- Use caution when operating, and always use two hands at arm's length.
- You must always ensure the mattress is on the ottoman bed frame before lifting the mechanism. Failure to do so may result in injury or damage to the mechanism.
- If removing the mattress, make sure the ottoman bed frame is secured as it could flip open.
- Only use the storage compartment when the ottoman bed frame is fully in the upright position.
- Do not remain on the ottoman bed frame whilst the lifting mechanism is in use.
- Beware of entrapment. Keep both hands clear of the mechanism when operating.
- When lifting the ottoman bed frame, remove all bedding except the fitted sheet.
- Always use the strap to lift or lower the ottoman metal frame. Close the ottoman metal frame by pushing down firmly with both hands towards the centre of the bed frame with equal pressure.
- No children or animals should be left unattended when the ottoman bed frame is in the upright position.
- When fully assembled, raise and lower the ottoman metal frame 4/5 times to ensure the gas pistons are fully lubricated.
- Ensure to re-tighten all nuts and bolts within the ottoman bed frame after the first two weeks of use

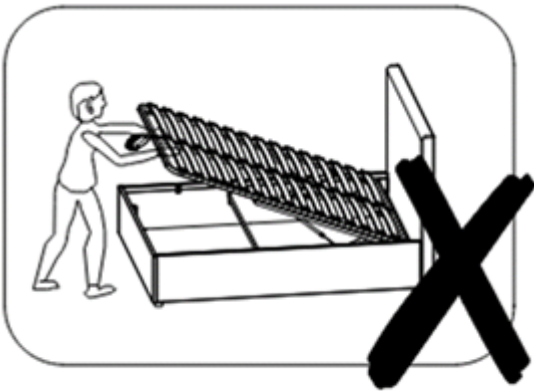

Before you begin building your ottoman bed frame, please take a moment to read through the instructions and make sure you have all the relevant parts listed on the parts check list.


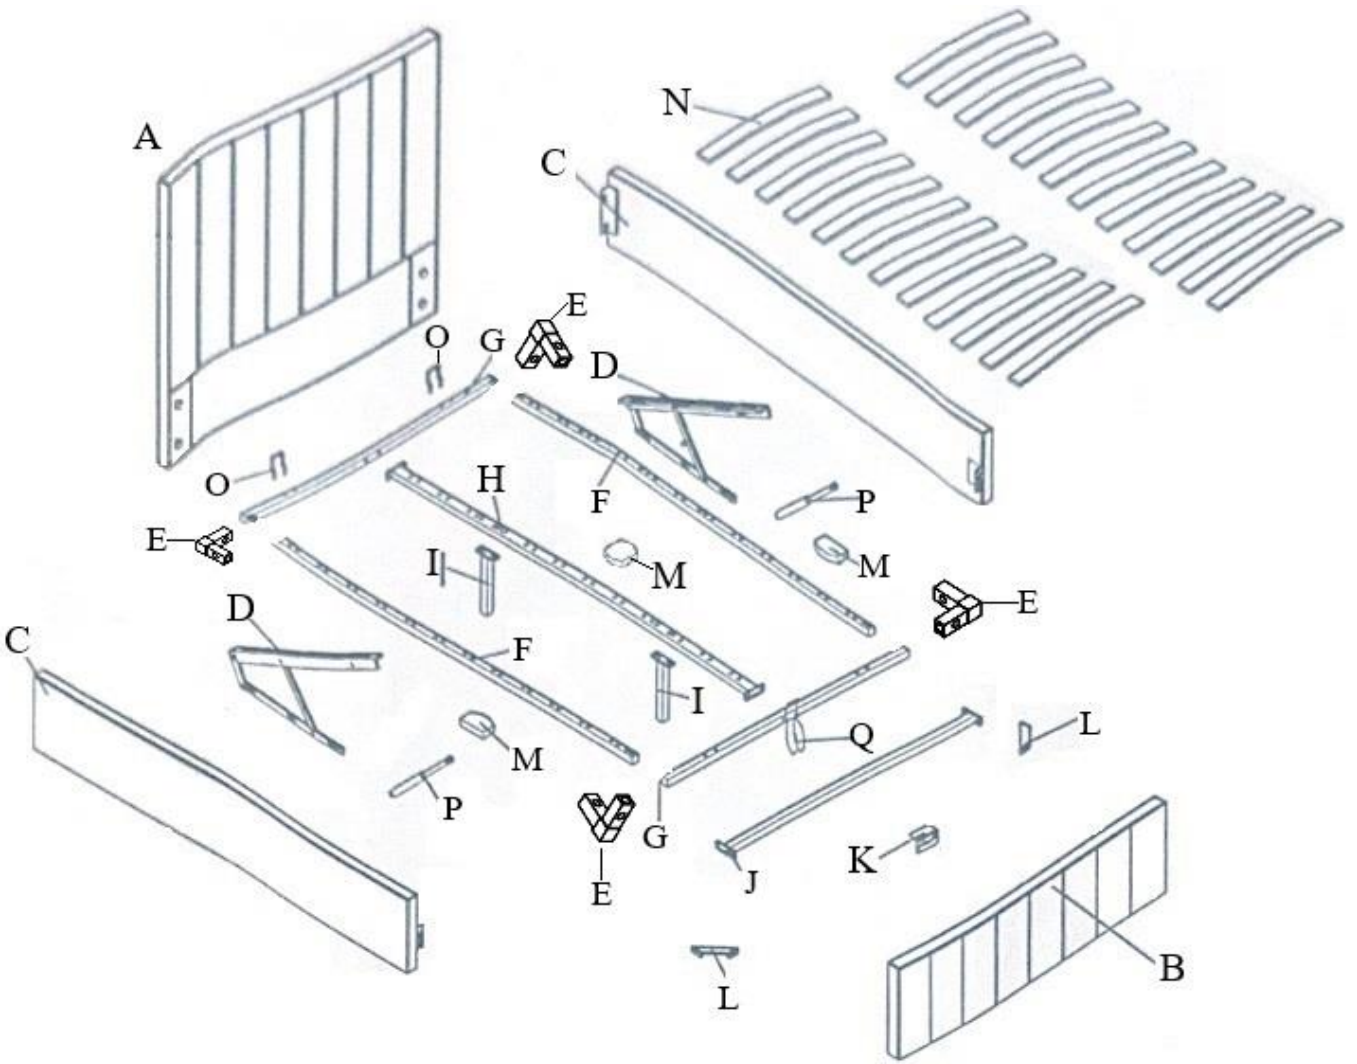


PART CHECK LIST


No.	PART	QUANTITY	BOX NO.
A	HEADBOARD	1	1
B	FOOTBOARD	1	1
C	SIDE RAILS	2	2
D	HINGE	2	2
E	PLASTIC CORNER CONNECTORS	4	2
F	LEFT AND RIGHT HAND SIDE OF OTTOMAN METAL FRAME	2	2
G	FRONT AND REAR OF OTTOMAN METAL FRAME	2	2
H	HEADBOARD TO FOOTBOARD THICK OTTOMAN METAL FRAME BAR	1	2
I	METAL SUPPORT LEGS	2	2
J	CENTRAL SUPPORT RAIL - CONNECTS LEFT SIDE RAIL TO RIGHT SIDE RAIL	1	2
K	BLACK IRON BRACKET	1	2
L	GOLDEN CORNER BRACKETS	2	2
M	SLAT CLIPS	36	2
N	BED SLATS	24	2
O	MATTRESS STOPPERS	2	2
P	GAS STRUT	2	2
Q	BED LIFT STRAP	1	2

Fittings

Please check you have all the fittings listed below with your product.

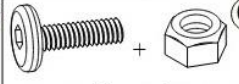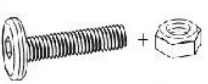
 M8 x 20mm Bolt 18pcs A	 M8 x 35mm Bolt 10pcs B	 M8 x Golden Bolt + Nut 6pcs C	 M6 x 50mm Bolt + Nut 8pcs D	 Plastic Spacer 10 pcs E
 Allen Key 1pc F				

STEP ONE

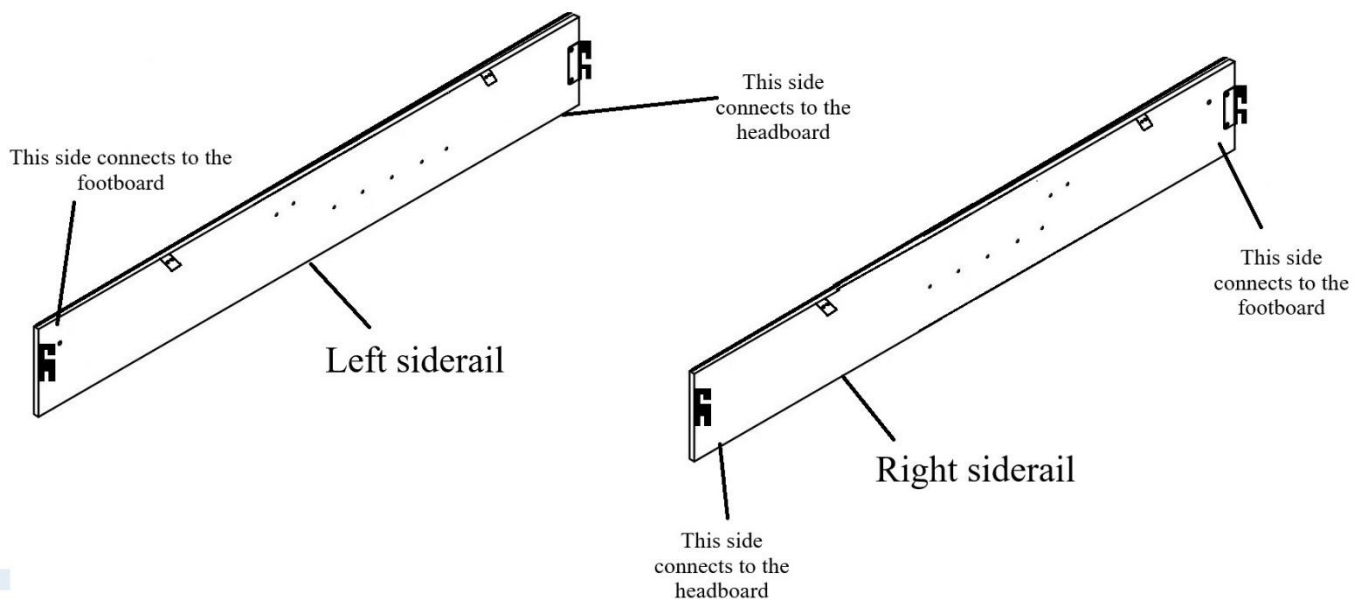


Lay the siderails down on a flat clean surface

STEP TWO


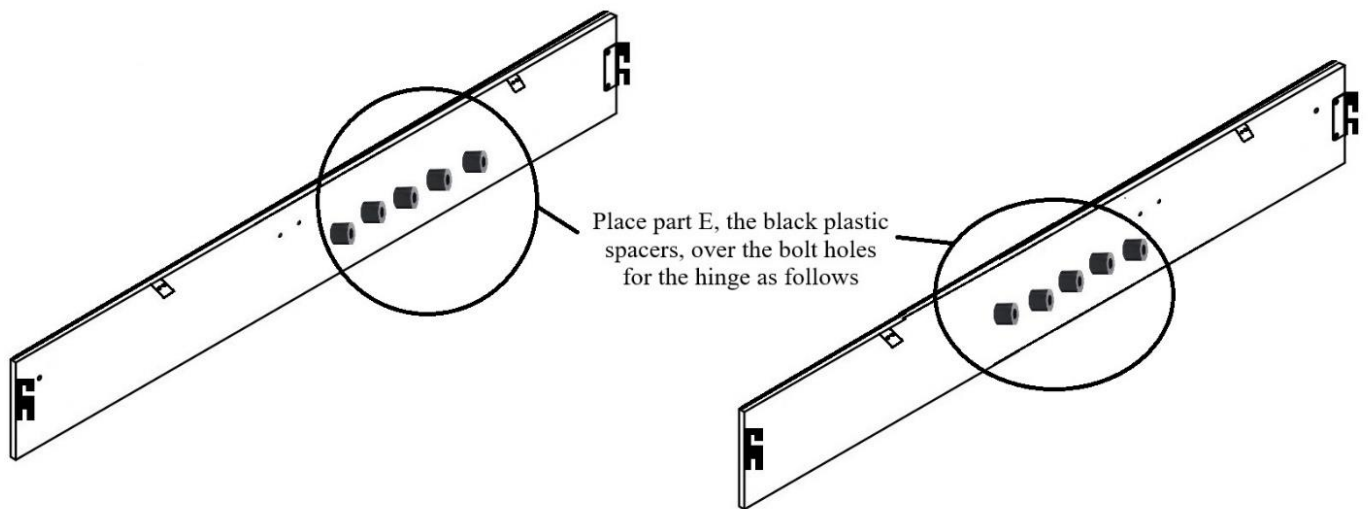


STEP THREE

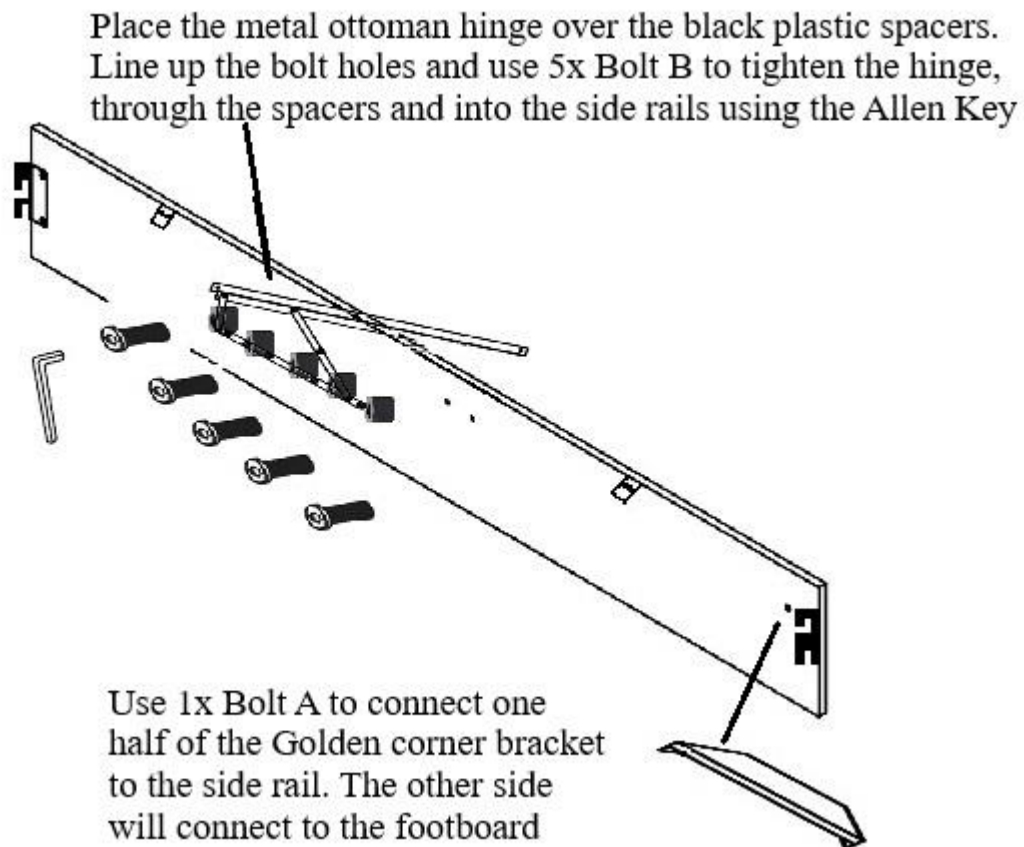

STEP FOUR


Use Bolt A to connect the headboard to the side rails and the side rails to the footboard with the Allen Key as follows

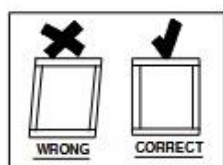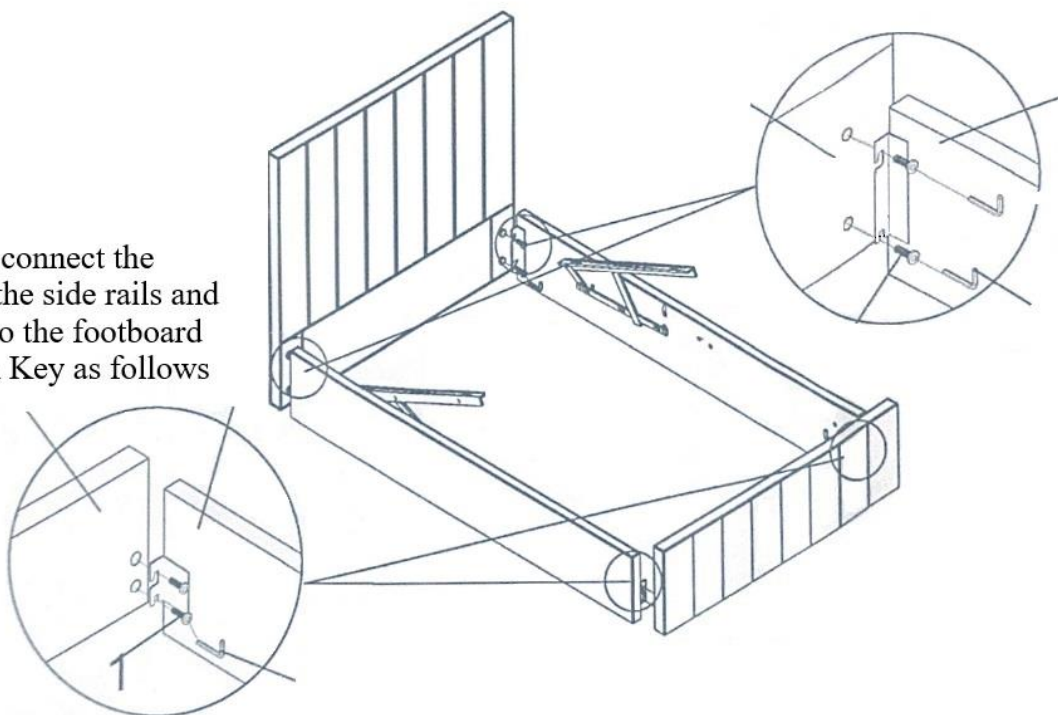


NB: Before tightening the bolts, please ensure the bed frame is square

STEP FIVE


Use 4x Bolt A (M8 x 20mm bolts to connect Part J (Centre support rail) to each side rail

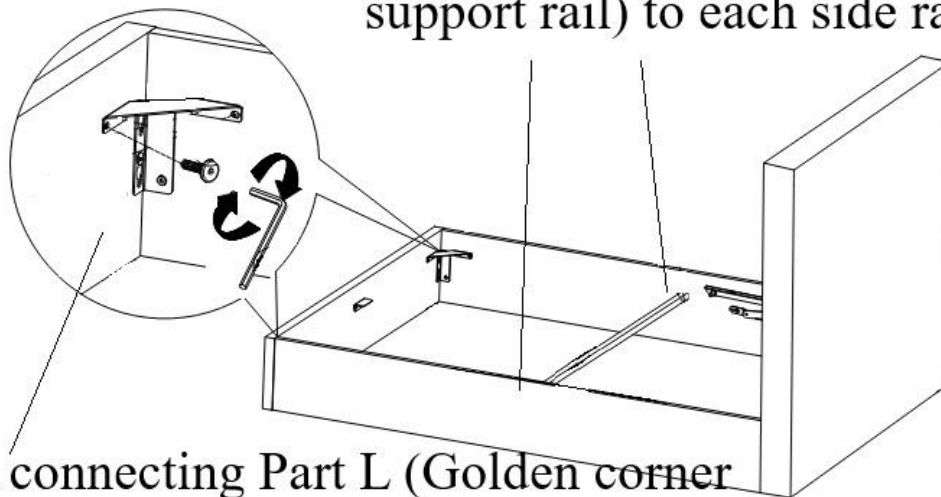

Finish connecting Part L (Golden corner brackets) using Bolt A (M8 x 20mm bolt)

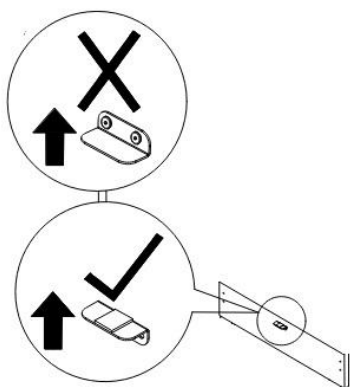

Ensure that Part K (black iron bracket) is attached to the footboard with the ledge facing upwards using Bolt A (M8x 20mm bolts)

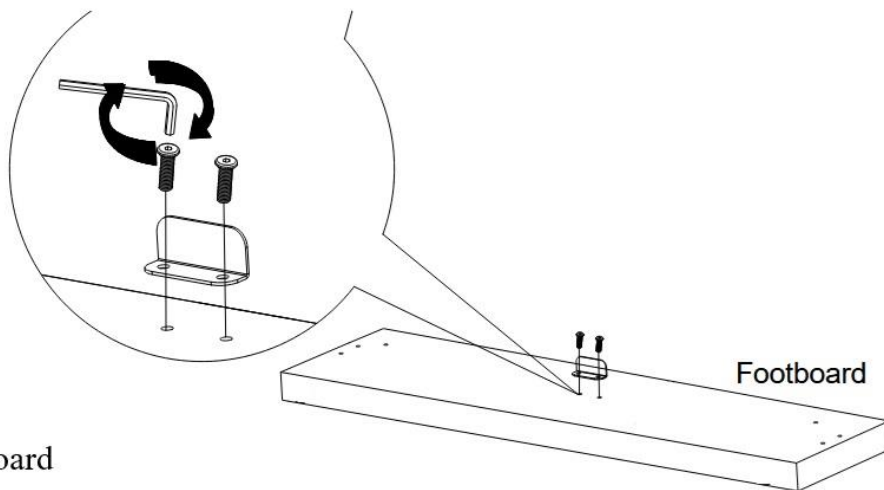


STEP SIX A – Now we will begin assembling the metal frame. For this, you will need the following parts:

PART E – 4X PLASTIC CORNER CONNECTORS

PART F – LEFT- AND RIGHT-HAND SIDE OF OTTOMAN METAL FRAME


PART G – FRONT AND REAR OF OTTOMAN METAL FRAME

PART H – HEADBOARD TO FOOTBOARD THICK OTTOMAN METAL FRAME BAR

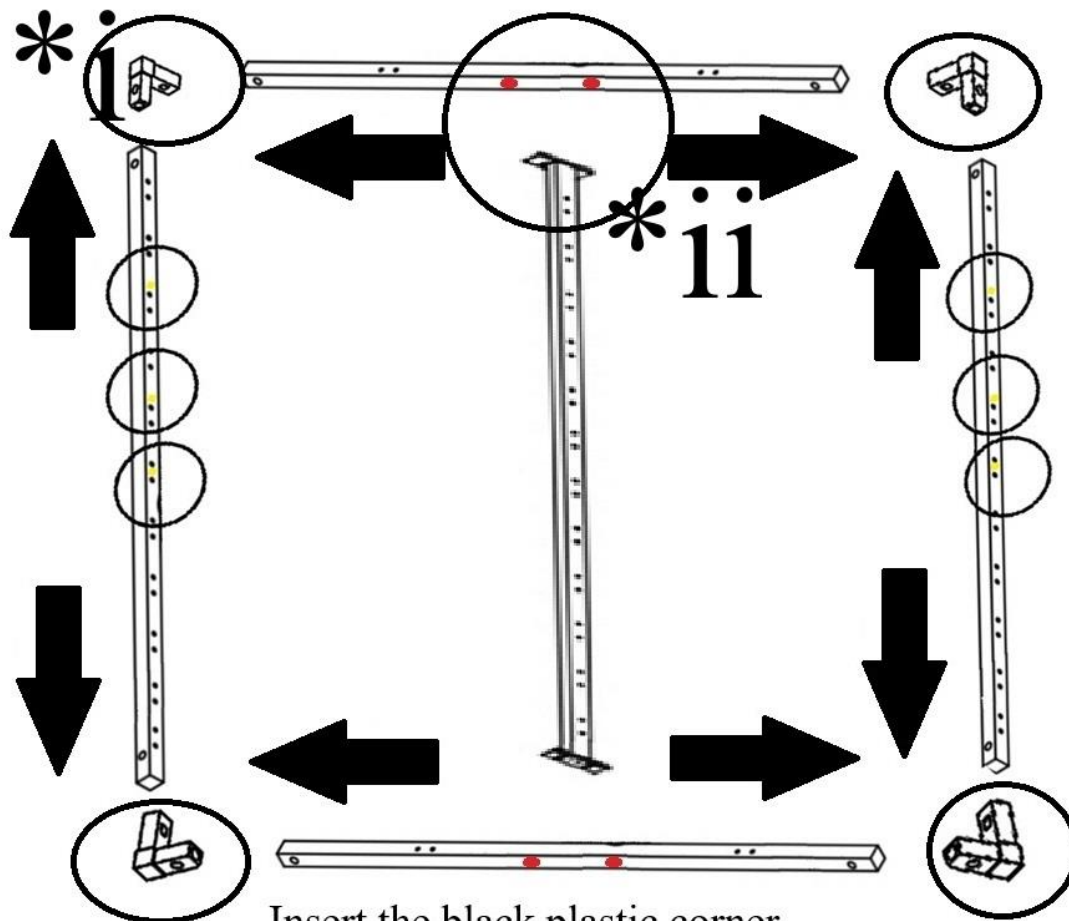


Insert the black plastic corner connectors into the metal ottoman bed frame, ensuring the silver locking pins are inserted into the metal pin hole.


See the below diagram for reference

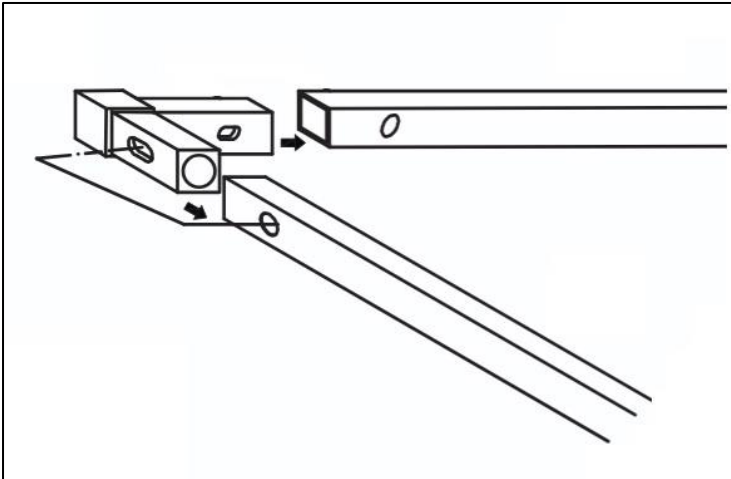


*i Plastic Corner Connectors will attach to the metal and create the base of the slatted frame.

STEP SIX B - *ii You will need to connect Part H (the headboard to footboard thick ottoman metal bar) to Part G (the front and rear ottoman metal frame) using Bolt D (M6 x 50mm Bolt and Nut 4pcs) and the Allen Key.

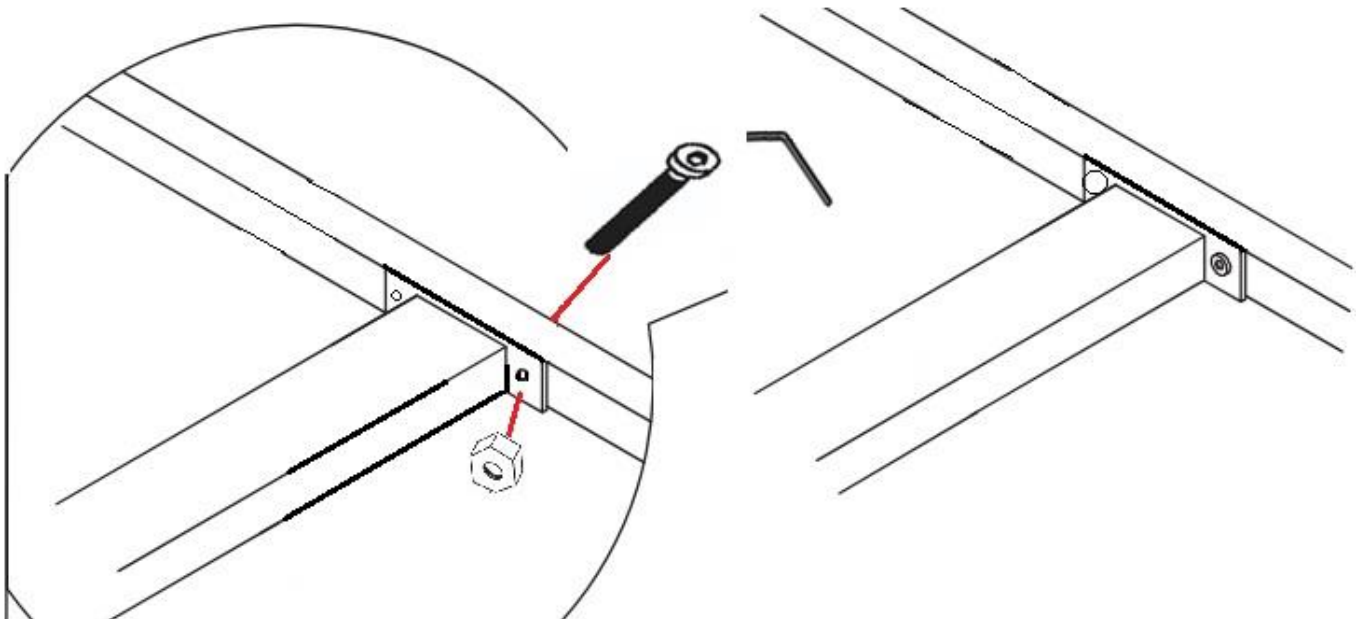

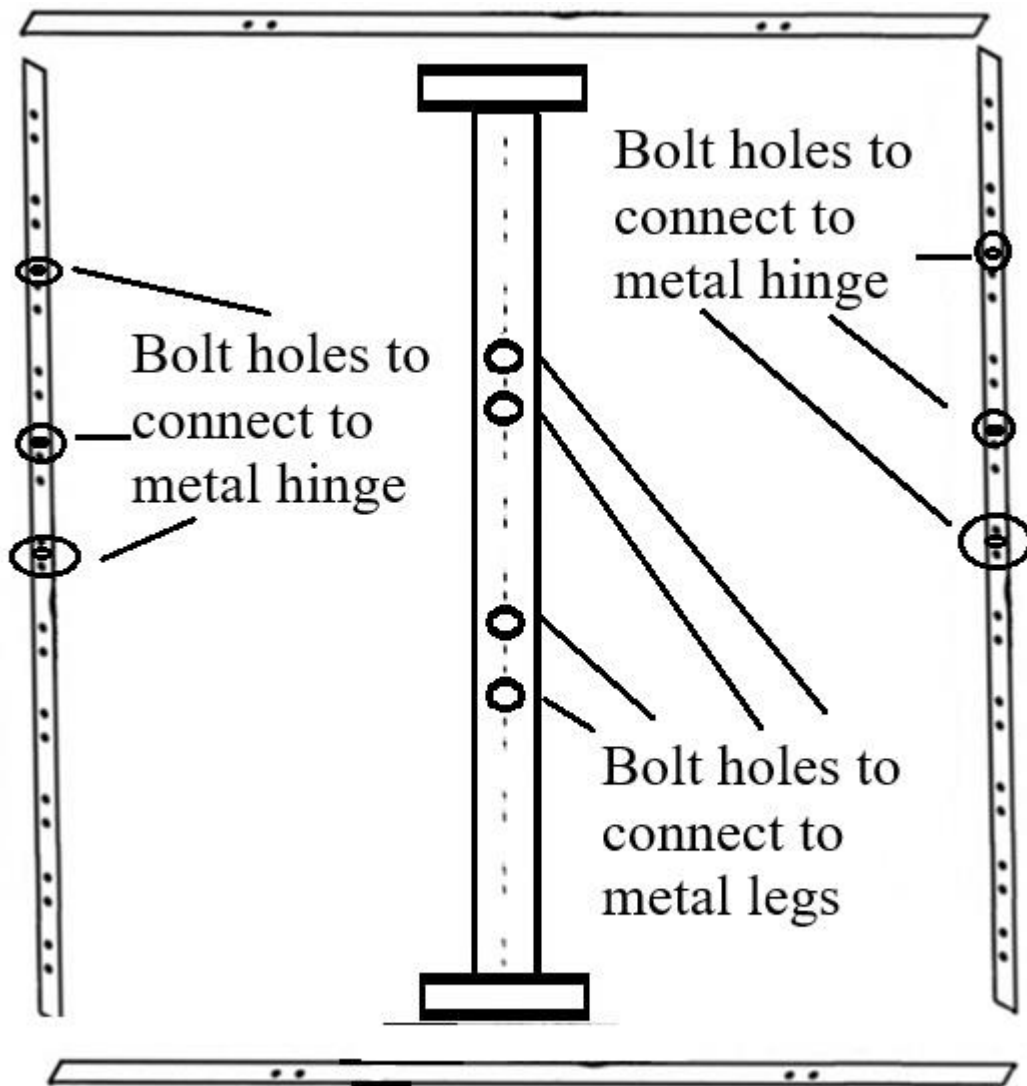

This is the top view of the metal frame. Use it as a reference to ensure you assemble each metal bar the correct way around.

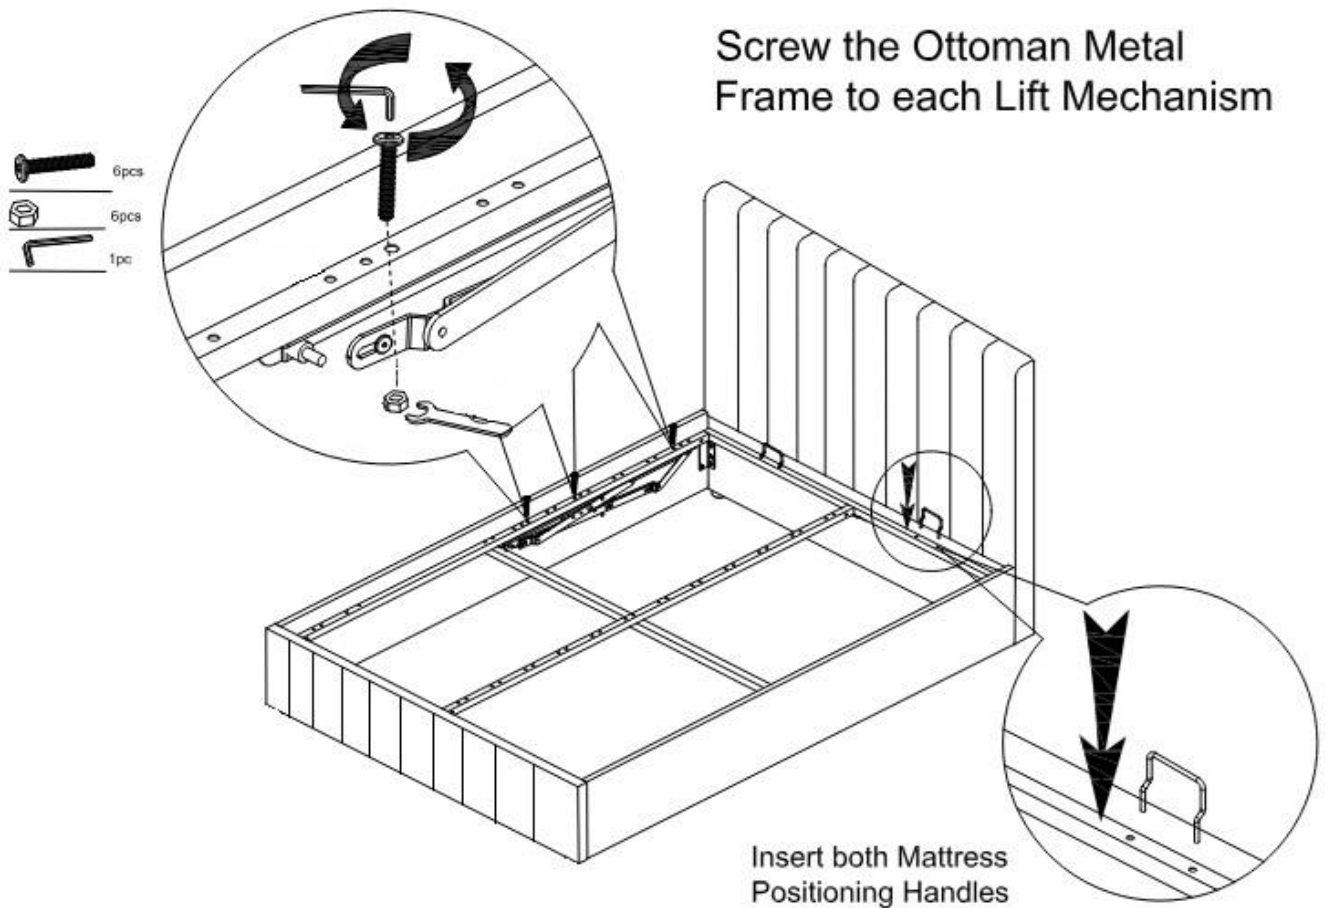

STEP SEVEN


You will now need to connect the metal frame to the top of the ottoman hinge. Use Bolt C – M8 x Golden Bolt + Nut 6pcs (3 on each side). You will insert them through the 5th, 10th and 14th hole down (when counting on the metal bar from the headboard side). Tighten the nut from the bottom with a spanner.



Inset the two mattress stoppers as shown above.

Following this, you will need to attach PART I (the metal support legs) to Part H (the headboard to footboard thick ottoman metal frame bar) using Bolt D (M6 x 50mm Bolt and Nut 4pcs) and the Allen Key. The first metal leg will attach from the 8th hole and 10th hole down from the headboard. The second metal leg will attach from the 19th hole and the 22nd hole down from the headboard. These are the only holes on the thick metal bar which pass all the way through the bar.

STEP EIGHT – You will now need Part M (Slat Clips) and Part N (Bed Slats). There are single ended slat clips and double-sided ones. The Single sided clips will go on the left- and right-hand side of the bed, whereas the double-sided clips will sit on the thick metal inner ottoman bar and join two bed slats together.

Following the diagram below, insert the left-hand side of the bed slat into the single-sided slat clip. Next, insert the right hand-side of the bed slat into the double sided- slat clip. You will then insert another slat into the double-sided slat clip and then insert a single-sided slat clip on the right-hand side.

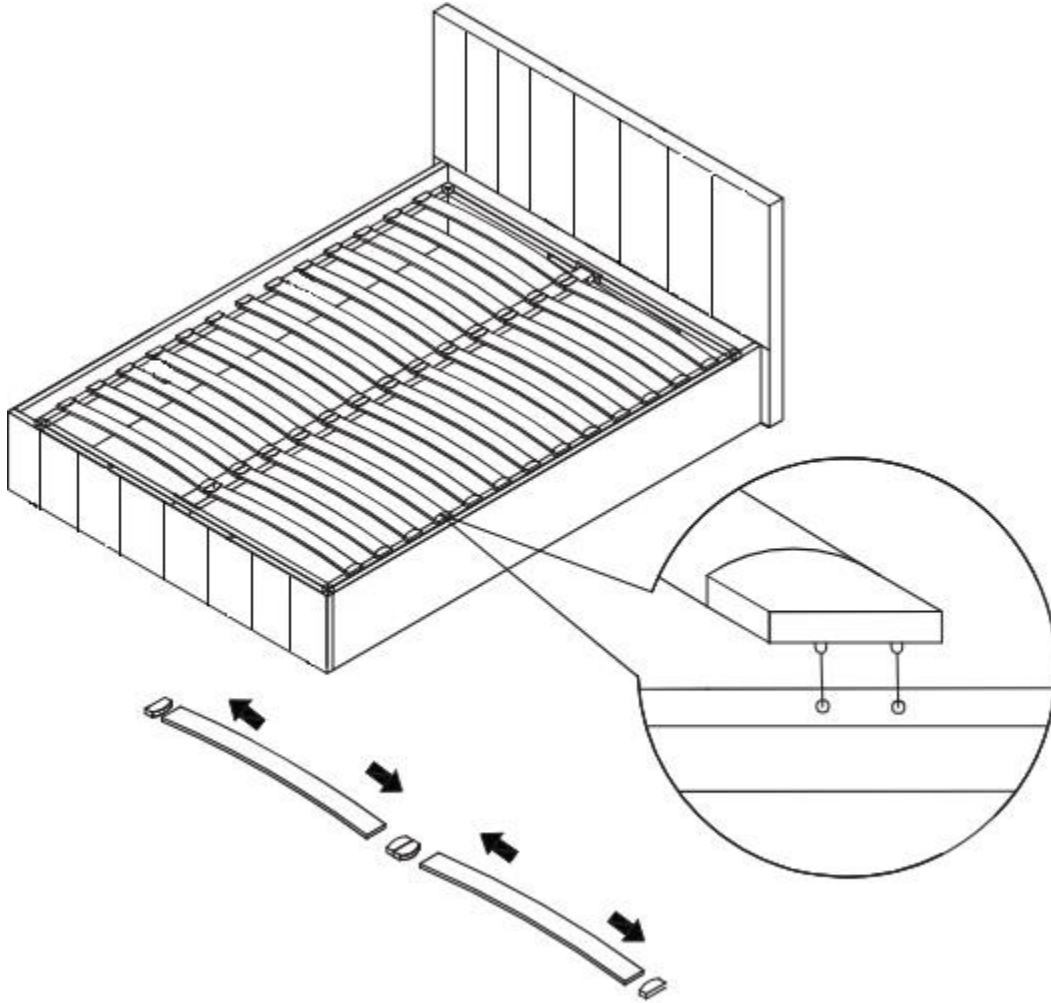


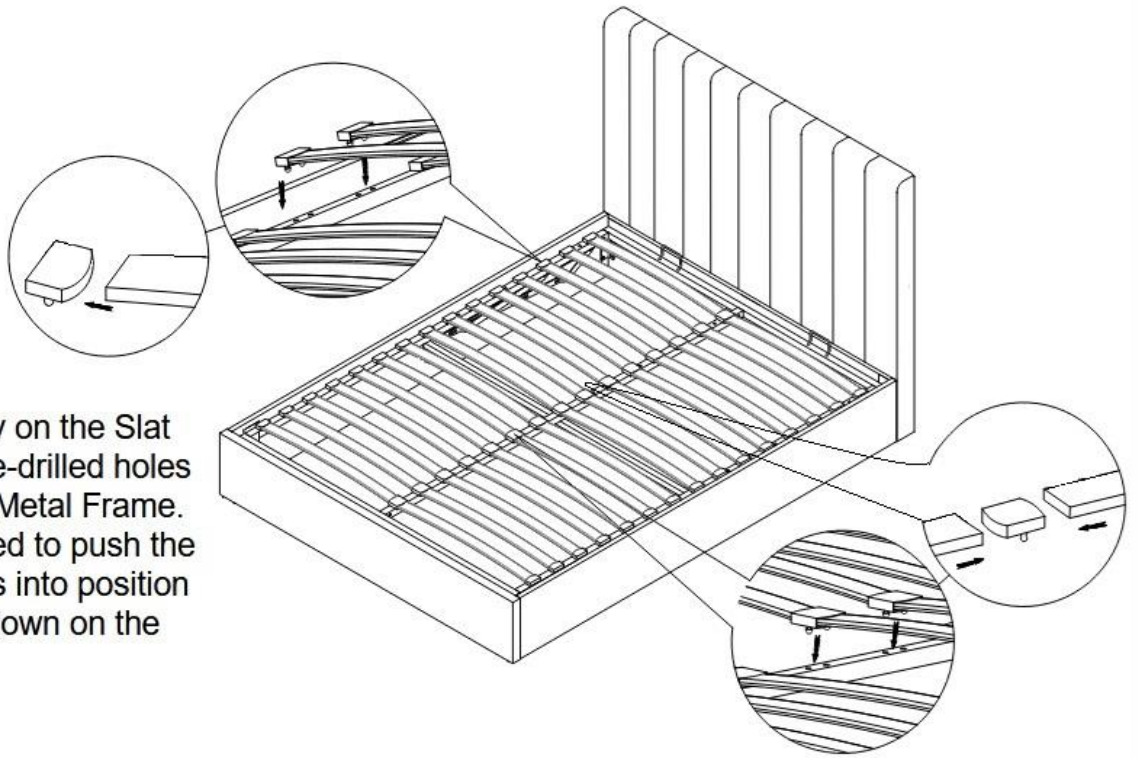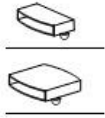


Push down firmly on the Slat Caps into the pre-drilled holes on the Ottoman Metal Frame. It is recommended to push the Centre Slat Caps into position before pushing down on the Side Slat Caps.

STEP NINE




You will now attach the Gas Strut to the Hinge and tighten it with the nuts already in position.

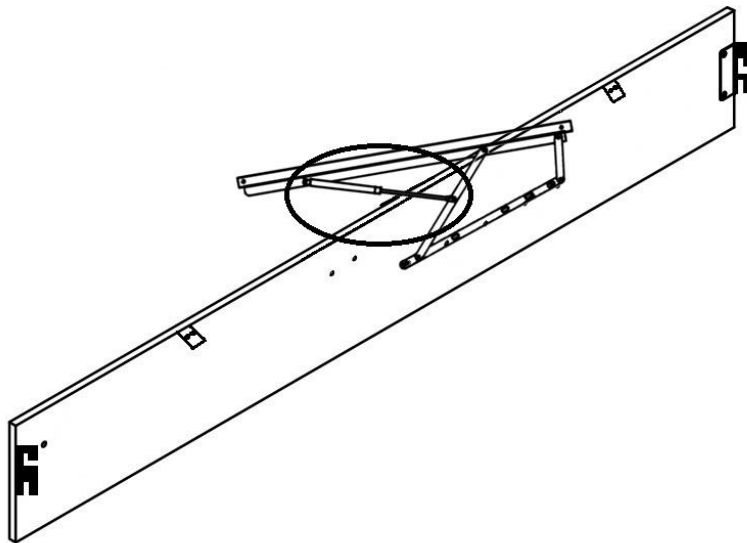

If you are experiencing problems closing with your gas struts please refer to the last page for gas strut trouble shooting.

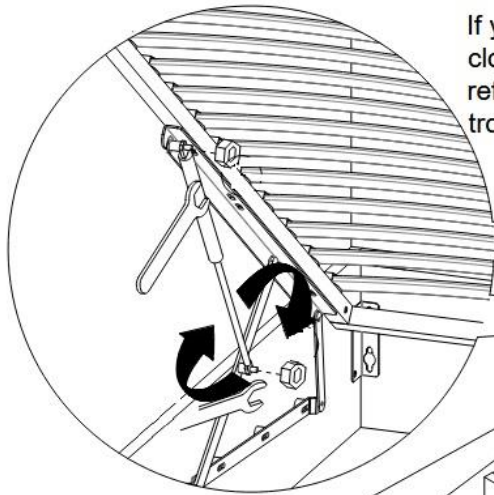

Attach the strap to the Centre Ottoman metal frame at the footboard side.

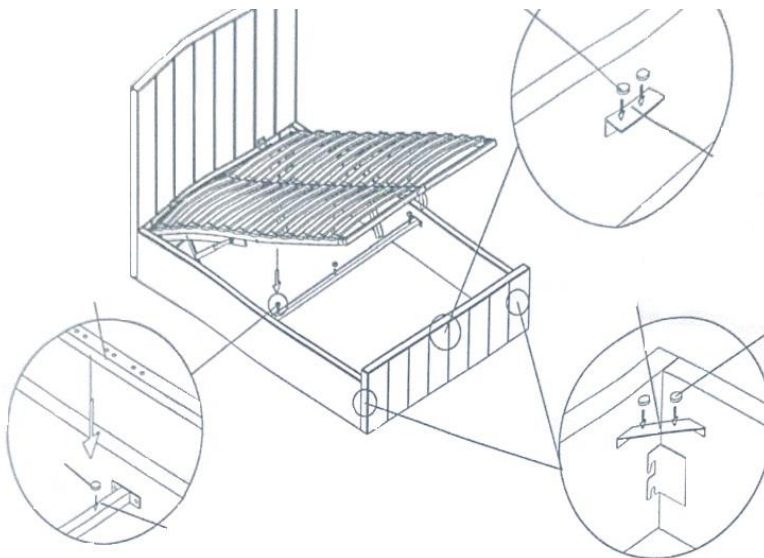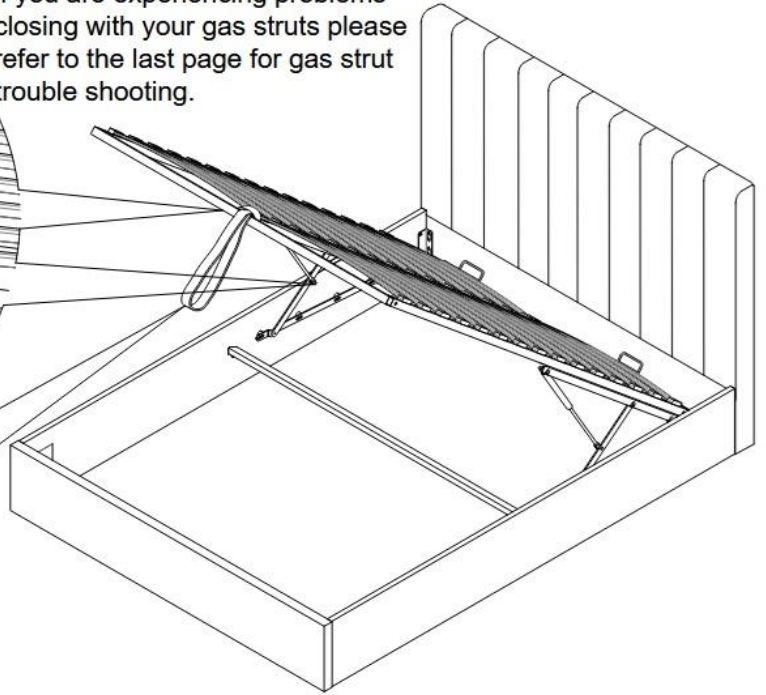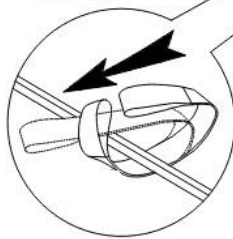

Add felt pads to all metal contact surfaces to minimize vibration and noise when in use.

Gas strut/piston best use:

- Use caution when operating - always use two hands.
- Only attempt to close the ottoman frame, once the mattress has been placed on the frame.
- The thicker side of the cylinder should be above the thinner side- this will increase longevity of the part.
- Only attempt to close the frame with two hands from the footboard side, slowly increasing the pressure until the frame starts moving downwards.
- Closing the frame for the first time may be difficult, as the cylinder needs cycling and lubricating. After closing for the first time, open and close a further 5 times.
- If the frame is stuck open and unable to be closed, first check it is assembled correctly. Following this, we recommend getting assistance from a second person, both applying equal pressure from each side of the footboard until the frame closes, this may require more force than expected. Stop applying pressure if the metal frame begins to warp – contact customer services at this point.

Top tips:

- Do not attempt to close the gas strut/piston by hand, it can only be compressed once added to the frame
- Ensure the frame can move freely before adding the gas struts/pistons
- Check the frame is fully square, being offset can cause the frame to catch on the side rail.