

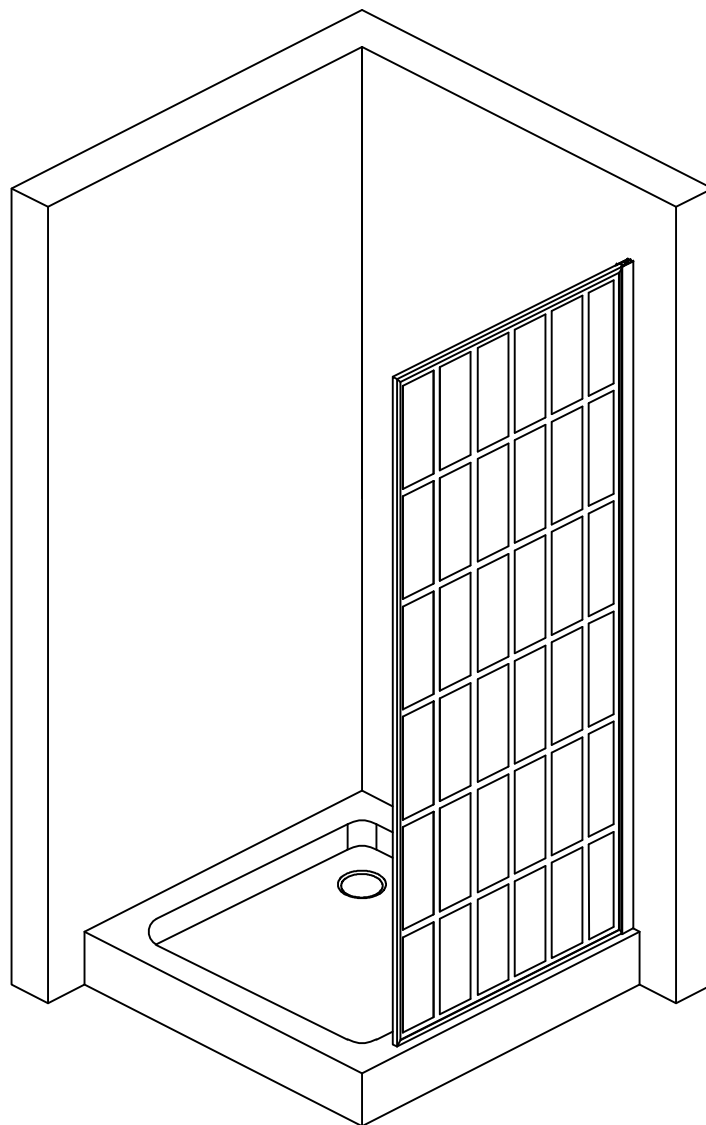
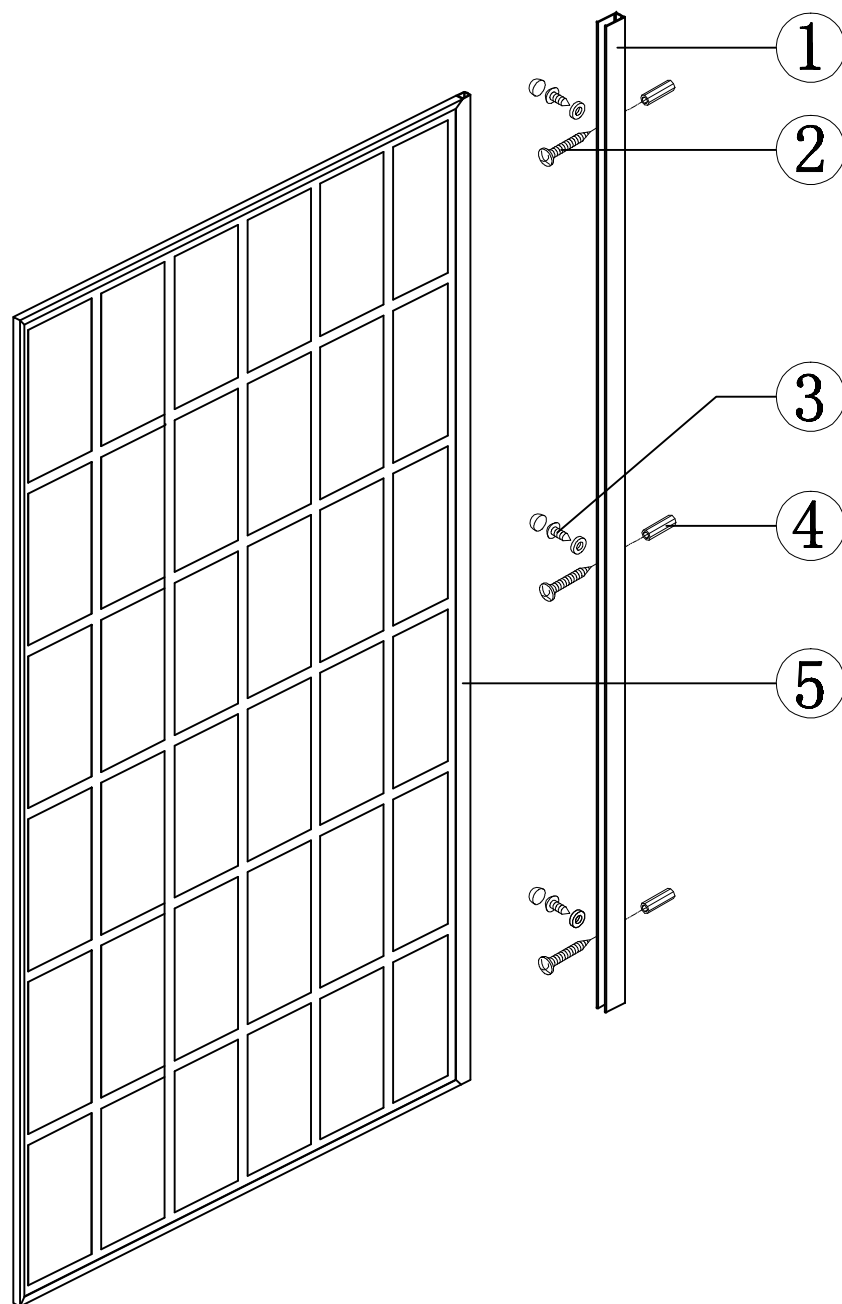
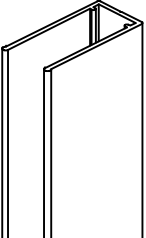


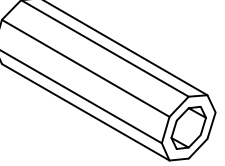


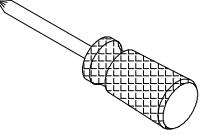

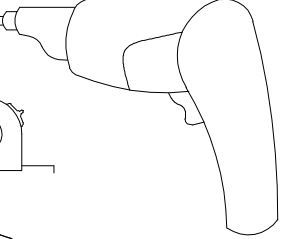
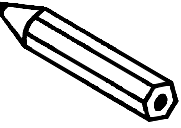


BRS6B10


INSTALLATION MANUAL

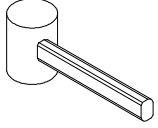

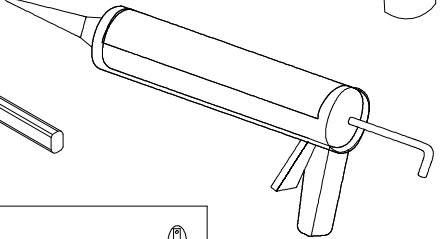


1  1PC	2 ST4X30  3PCS
3 ST4X12  3Pairs	4  3PCS
5  1PC	Tools:   Ø6mm  Ø3.2mm       


1

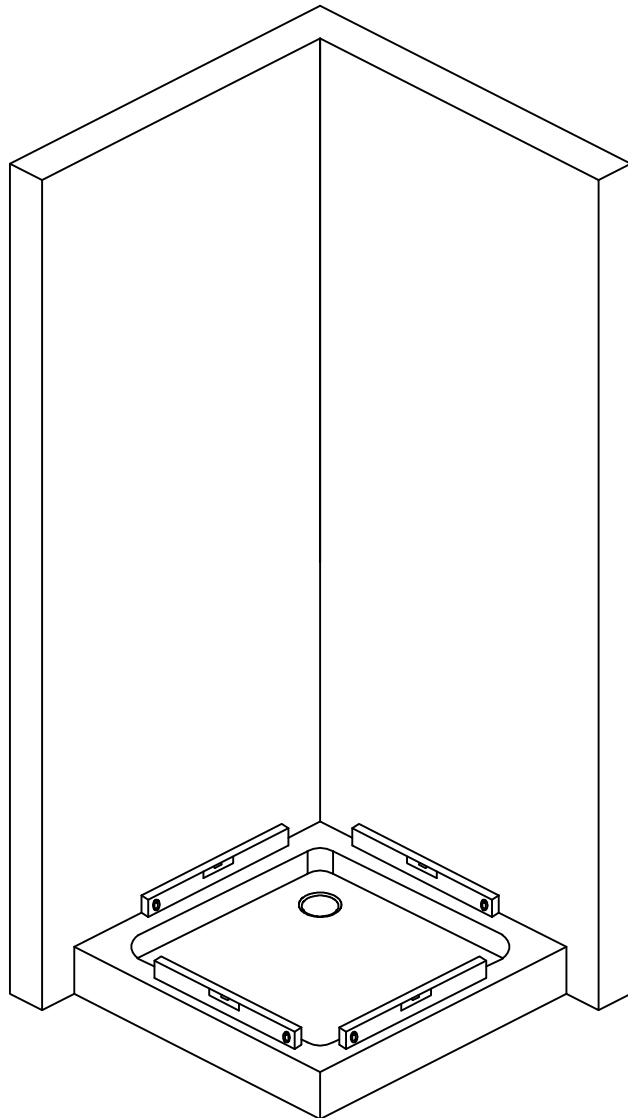

2

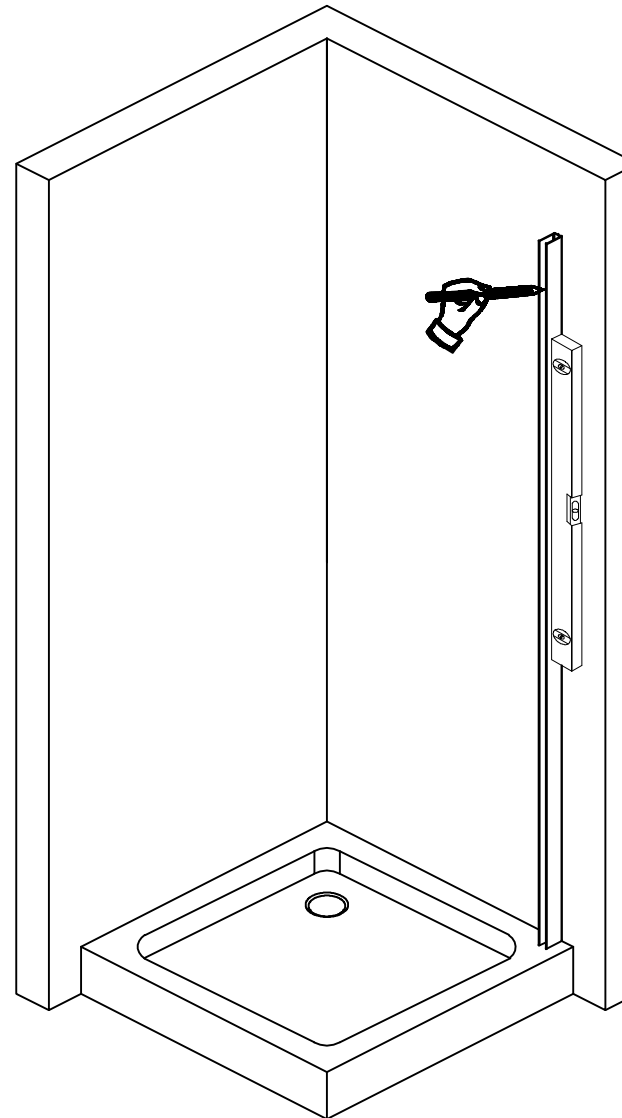


① x1




2-1

ø6X40mm




2-2

④ x3



2-3



② x3



2-4

3

Easy cheaning and silk
printing face inside

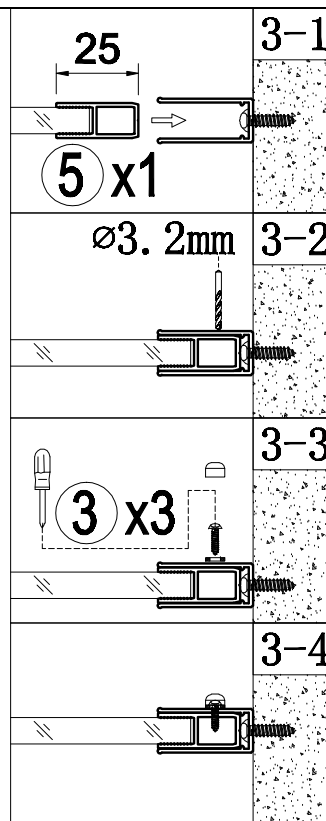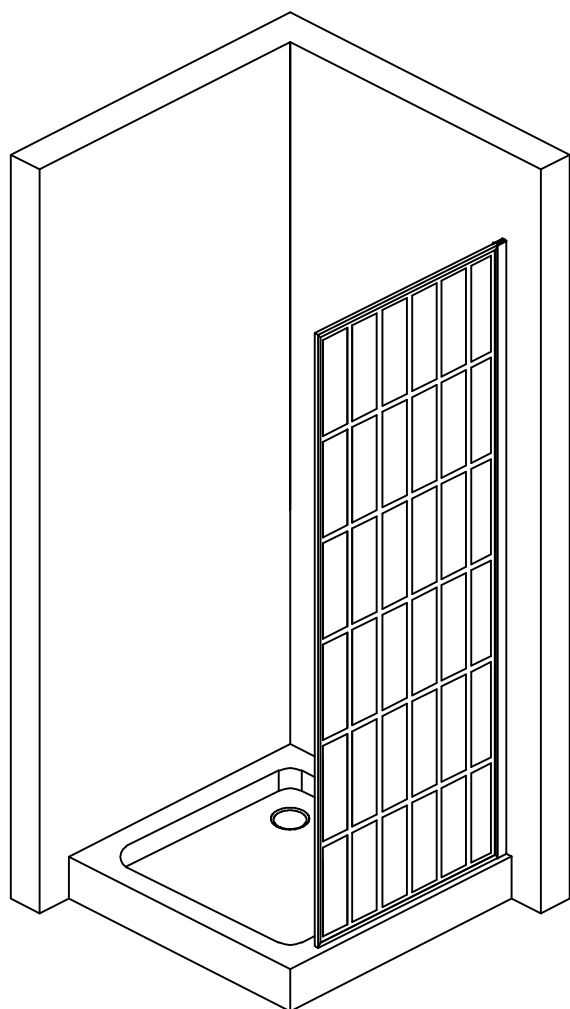

4

Care Instructions:

Do not use your shower enclosure within 24 hours of assembly .
Do not use caustic cleaning products or abrasive material when
cleaning your shower enclosure.

