


PPSTN024B1286


Upholstered Bed

King











Weight Limit:
Bed: 1000LBS / 454KG

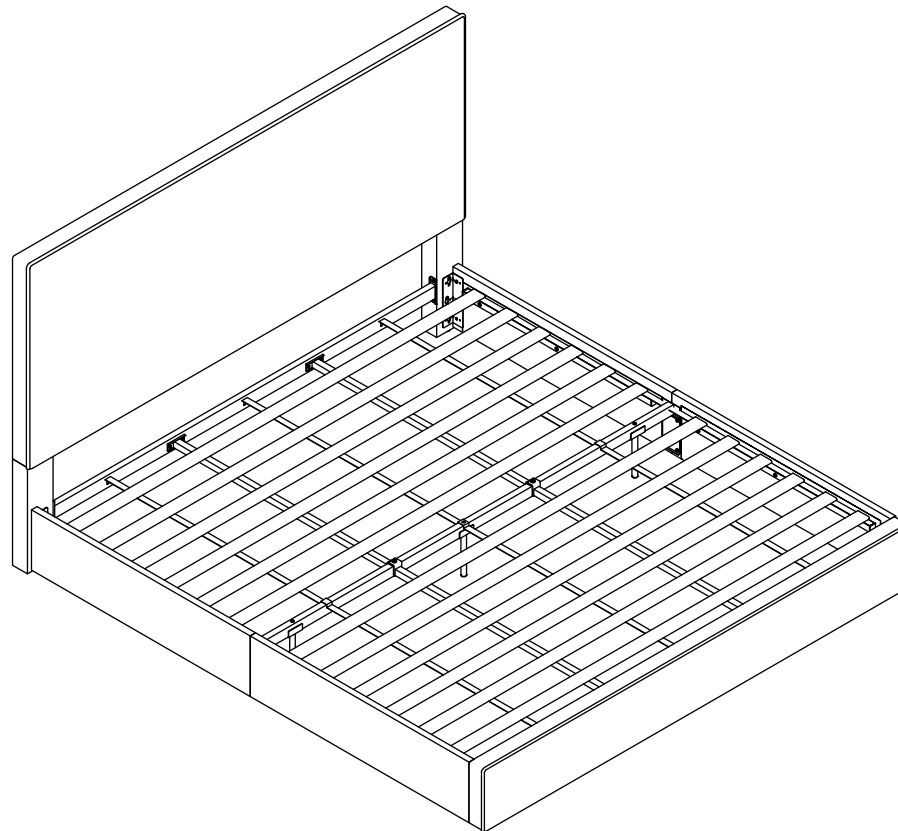

PARTS

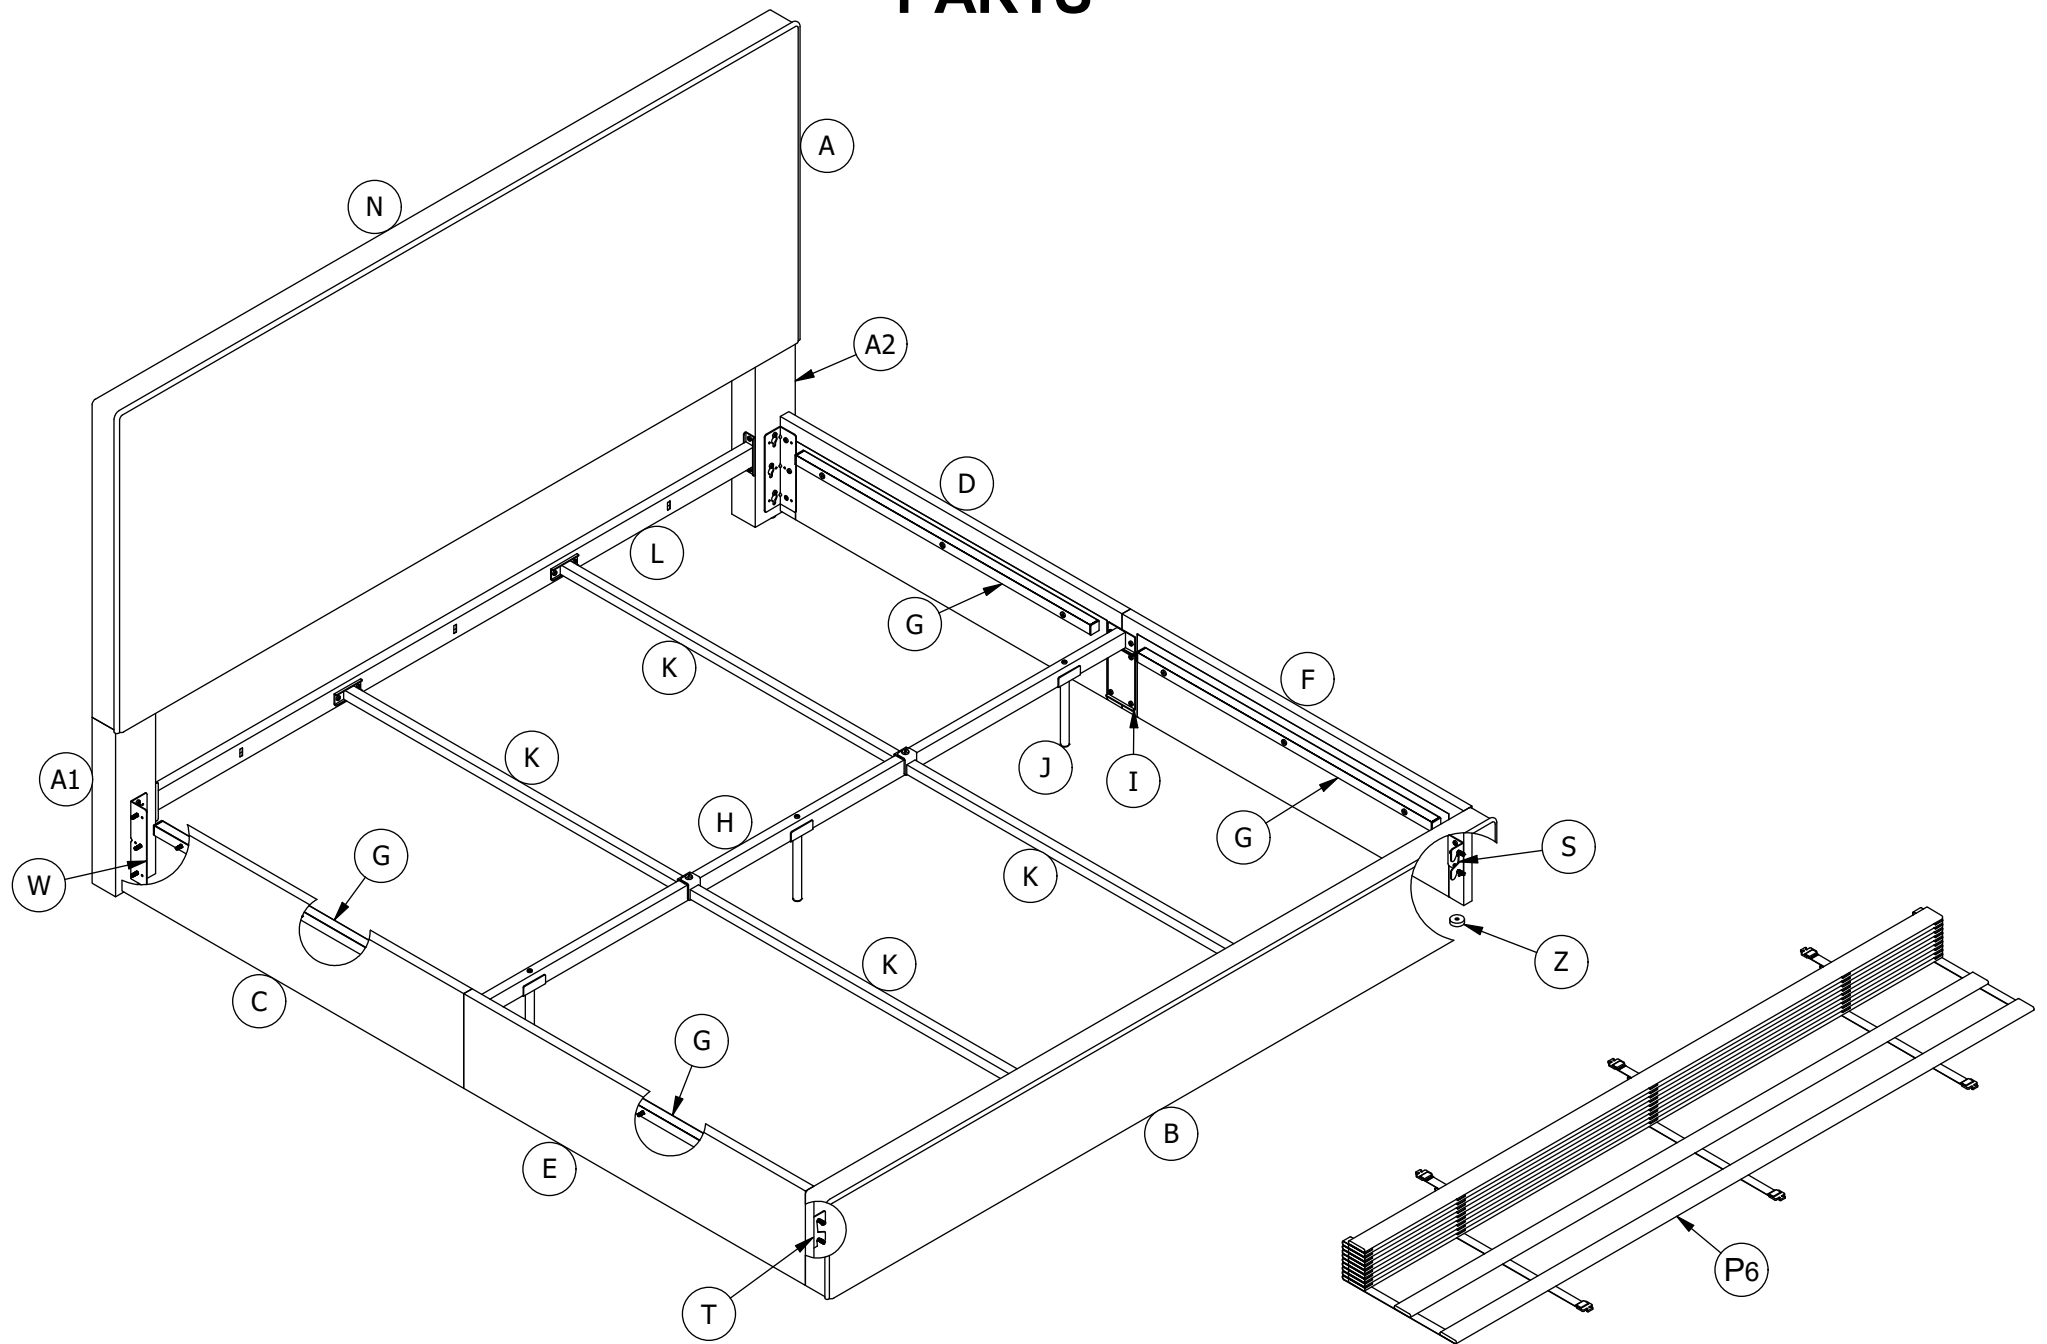











PARTS LIST

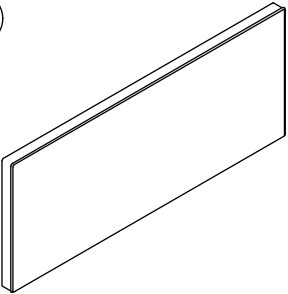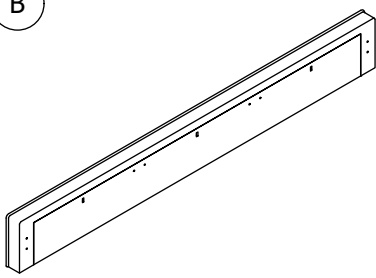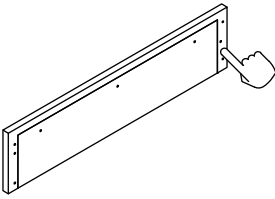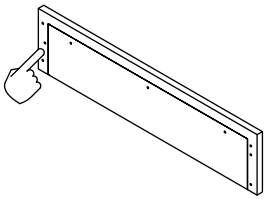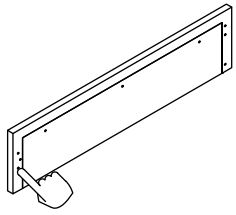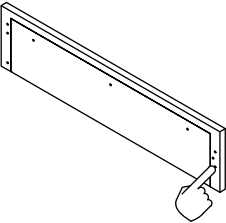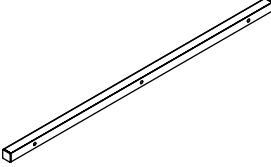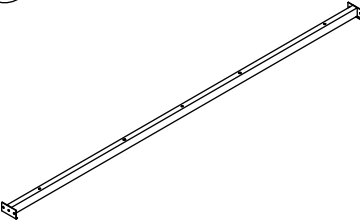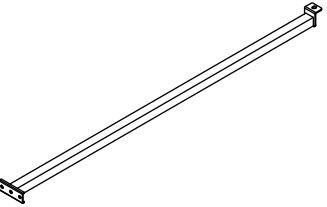				
Headboard 1 PC	Footboard 1 PC	Side Panel 1 PC	Side Panel 1 PC	Side Panel 1 PC
				
Side Panel 1 PC	Side Rail 4 PCS	Cross Brace 1 PC	Support Leg 3 PCS	Center Rail 4 PCS

! Each part has a unique part number. Please reference the appropriate part number when contacting customer service for replacement parts.

! Before throwing any packaging, please verify all contents and make sure you have received all the parts listed above!








PARTS LIST

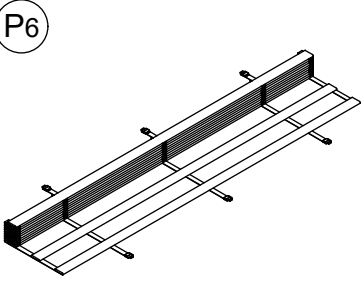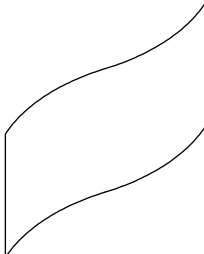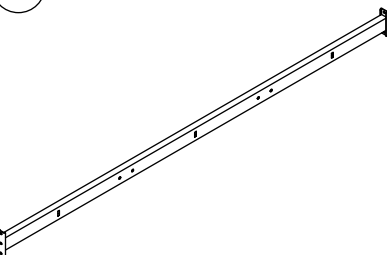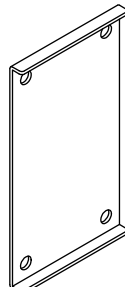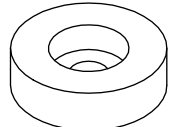				
Wooden Slats 1 PC	Bracket 1 PC	Bracket 1 PC	Back Cover 1 PC	Bracket 2 PCS
				
End Rail 1 PC	Side Leg 1 PC	Side Leg 1 PC	Connector 2 PCS	Leg 2 PCS

⚠ Each part has a unique part number. Please reference the appropriate part number when contacting customer service for replacement parts.



⚠ Before throwing any packaging, please verify all contents and make sure you have received all the parts listed above!

HARDWARE LIST

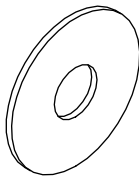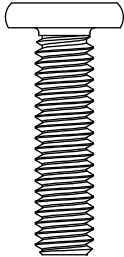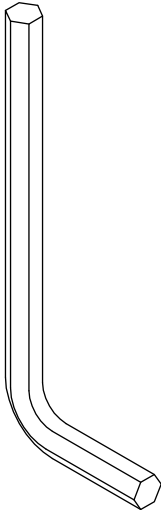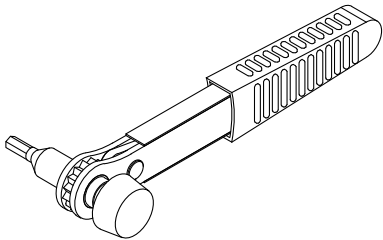1  1/4" X 3/4" Bolt X 57	2  1/4" X 1 9/16" Bolt X 12	3  1/4" X 1 3/4" Bolt X 6	4  1/4" Washer X 6	5  5/16" X 1 3/16" Bolt X 2
6  4mm Allen Key X 1	7  4mm Ratchet Wrench X 1	 Please do not completely tighten all the hardware, until the entire assembly is complete, unless otherwise indicated in the step-by-step instructions.  The screw(s), bolt(s) to be used at each step are shown in actual size in the lower right corner of the page.		


How To Use The Ratchet

1. Before assembling the furniture, please adjust the lock tool as needed.

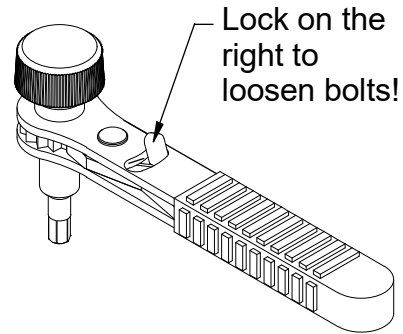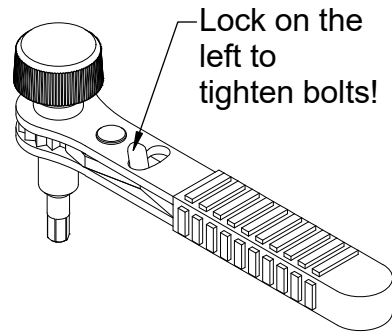

2. Tighten or loosen the bolts

- **Tighten bolts** : Locate the turncap (picture) and rotate it clockwise to screw the bolt quickly, until it cannot be rotated any more. Then start rotating with the handle clockwise to finalize tightening the bolts.
- **Loosen bolts** : Rotate the handle counterclockwise to loosen the bolt. Then, to completely remove the bolts, continue rotating with the turncap in the same direction.

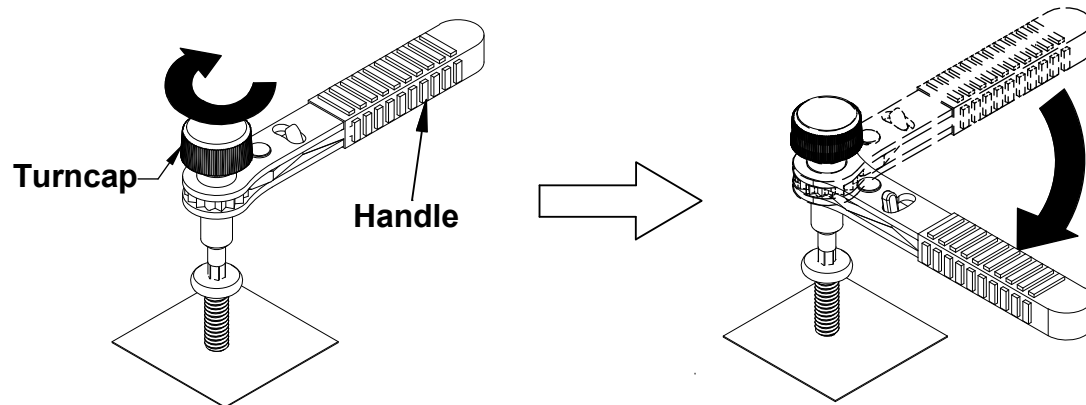




Helpful Hints

- Before assembling the furniture, please read the instructions on how to use ratchet, it will help you to assemble the furniture quickly.
- Please don't throw away the ratchet in case you may need to use in future.

Step 1

Attach **A1** & **A2** to **A** with **3** **4**.


⚠ Fully tighten all bolts in this Step.

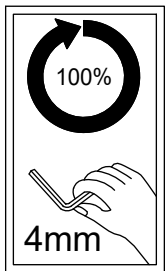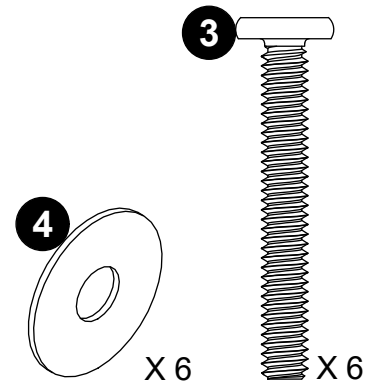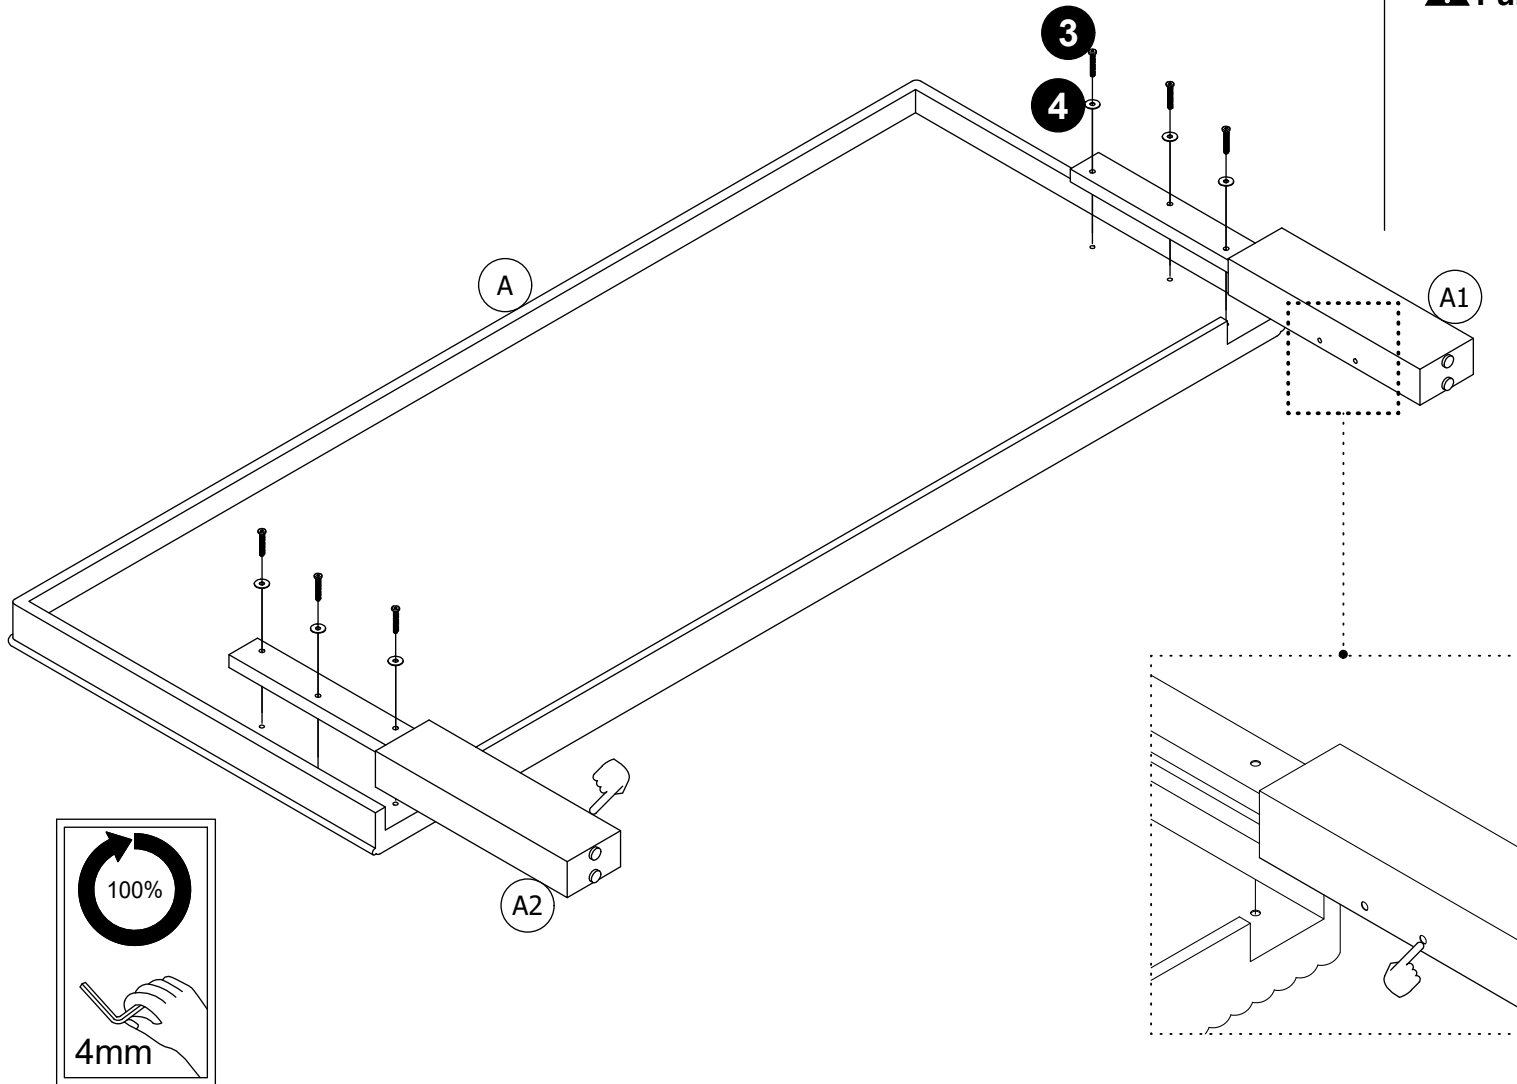

Step 2

Attach **L** to **A1** & **A2** with **1**.

Screw **1** into **A1** & **A2** with half of the threads exposed as illustrated.

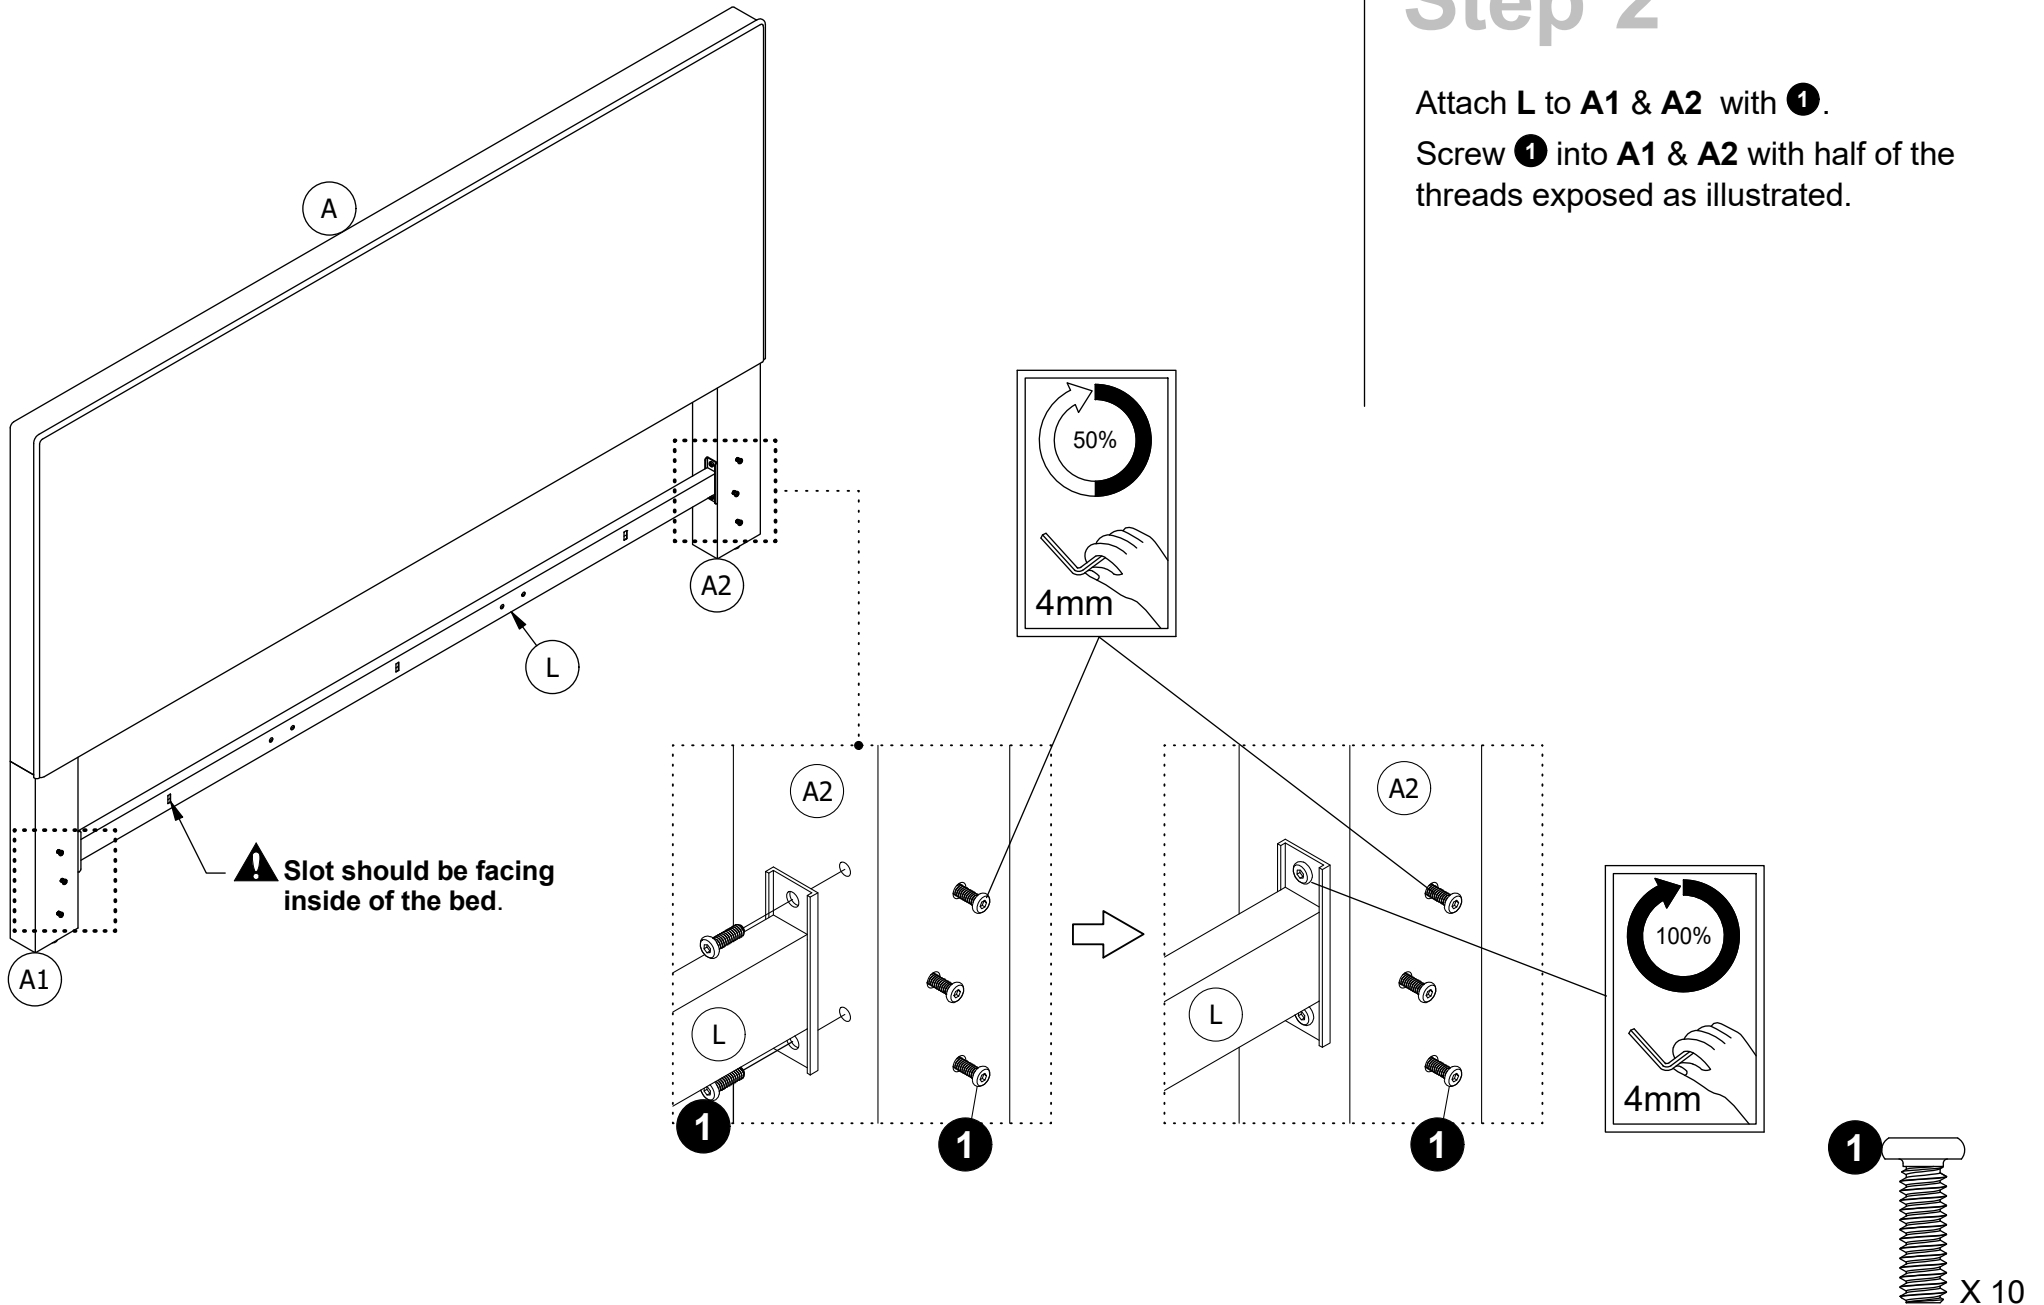



Step 3

3.1 Attach **I** to **C** & **E** with **1**.

3.2 Attach **T** to **E** with **1**.

3.3 Attach **W** to **C** with **1**.

⚠ Fully tighten all bolts in this Step.

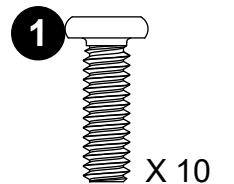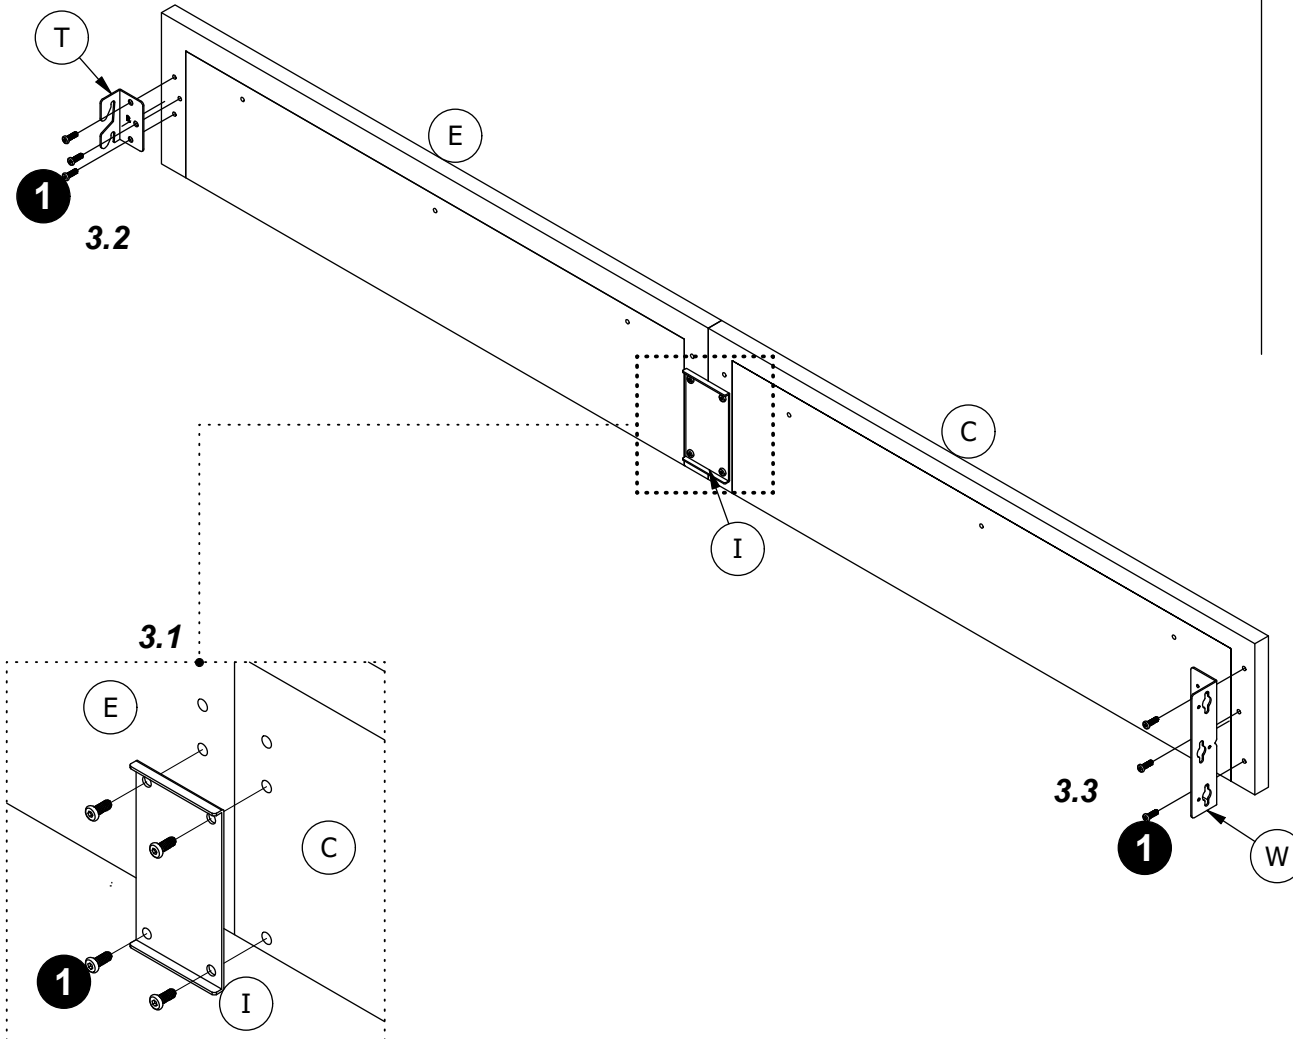



Step 4

4.1 Attach **I** to **D** & **F** with **1**.

4.2 Attach **S** to **F** with **1**.


4.3 Attach **W** to **D** with **1**.

⚠ Fully tighten all bolts in this Step.

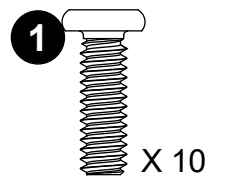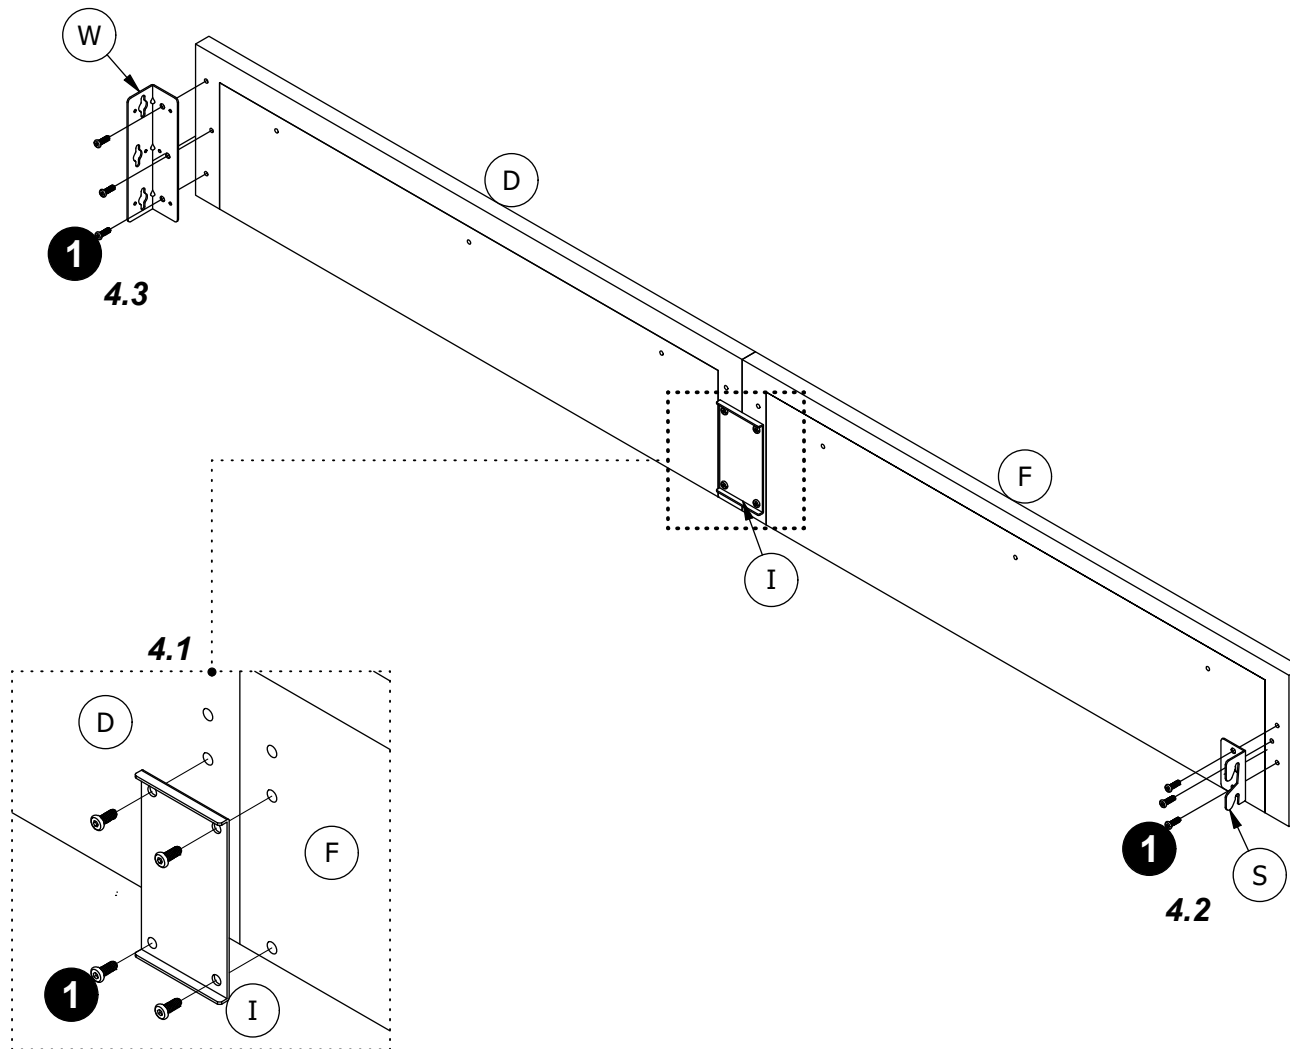

Attach **Z x 2** to **B** with **①**.
Screw **①** into **B** with half of the threads exposed as illustrated.


Screw **1** into **B** with half of the threads exposed as illustrated.

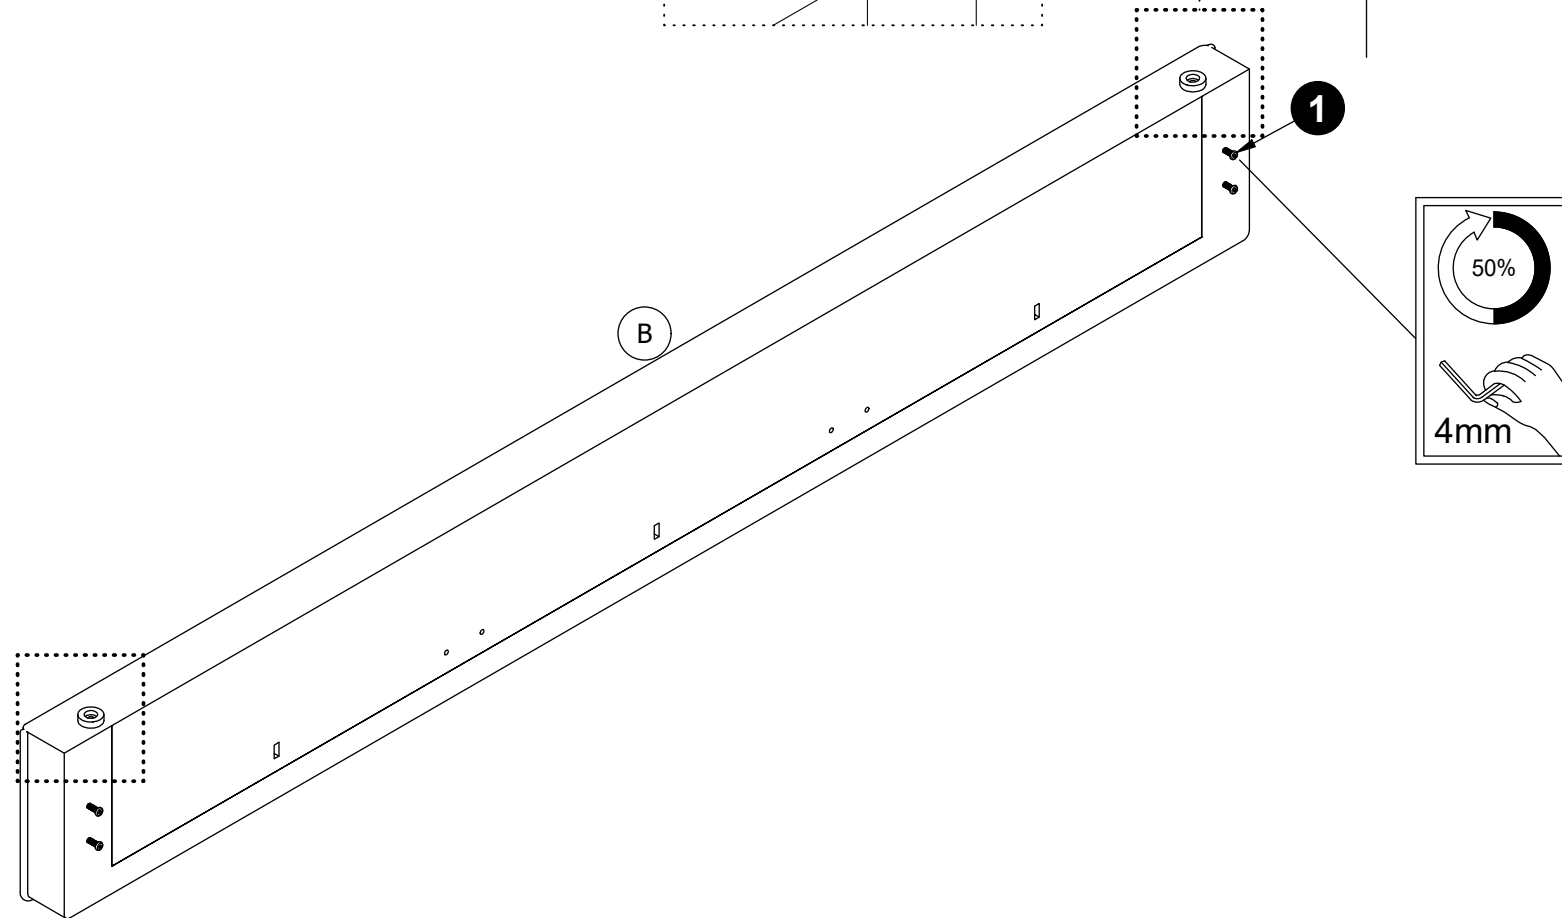

Step 6



Hang **C** & **D** on **A1** and **A2** as illustrated.
Hang **E** & **F** on **B** as illustrated.

⚠ Don't completely tighten the bolts until **STEP 10** is complete. This will help with alignment in the following assembling.

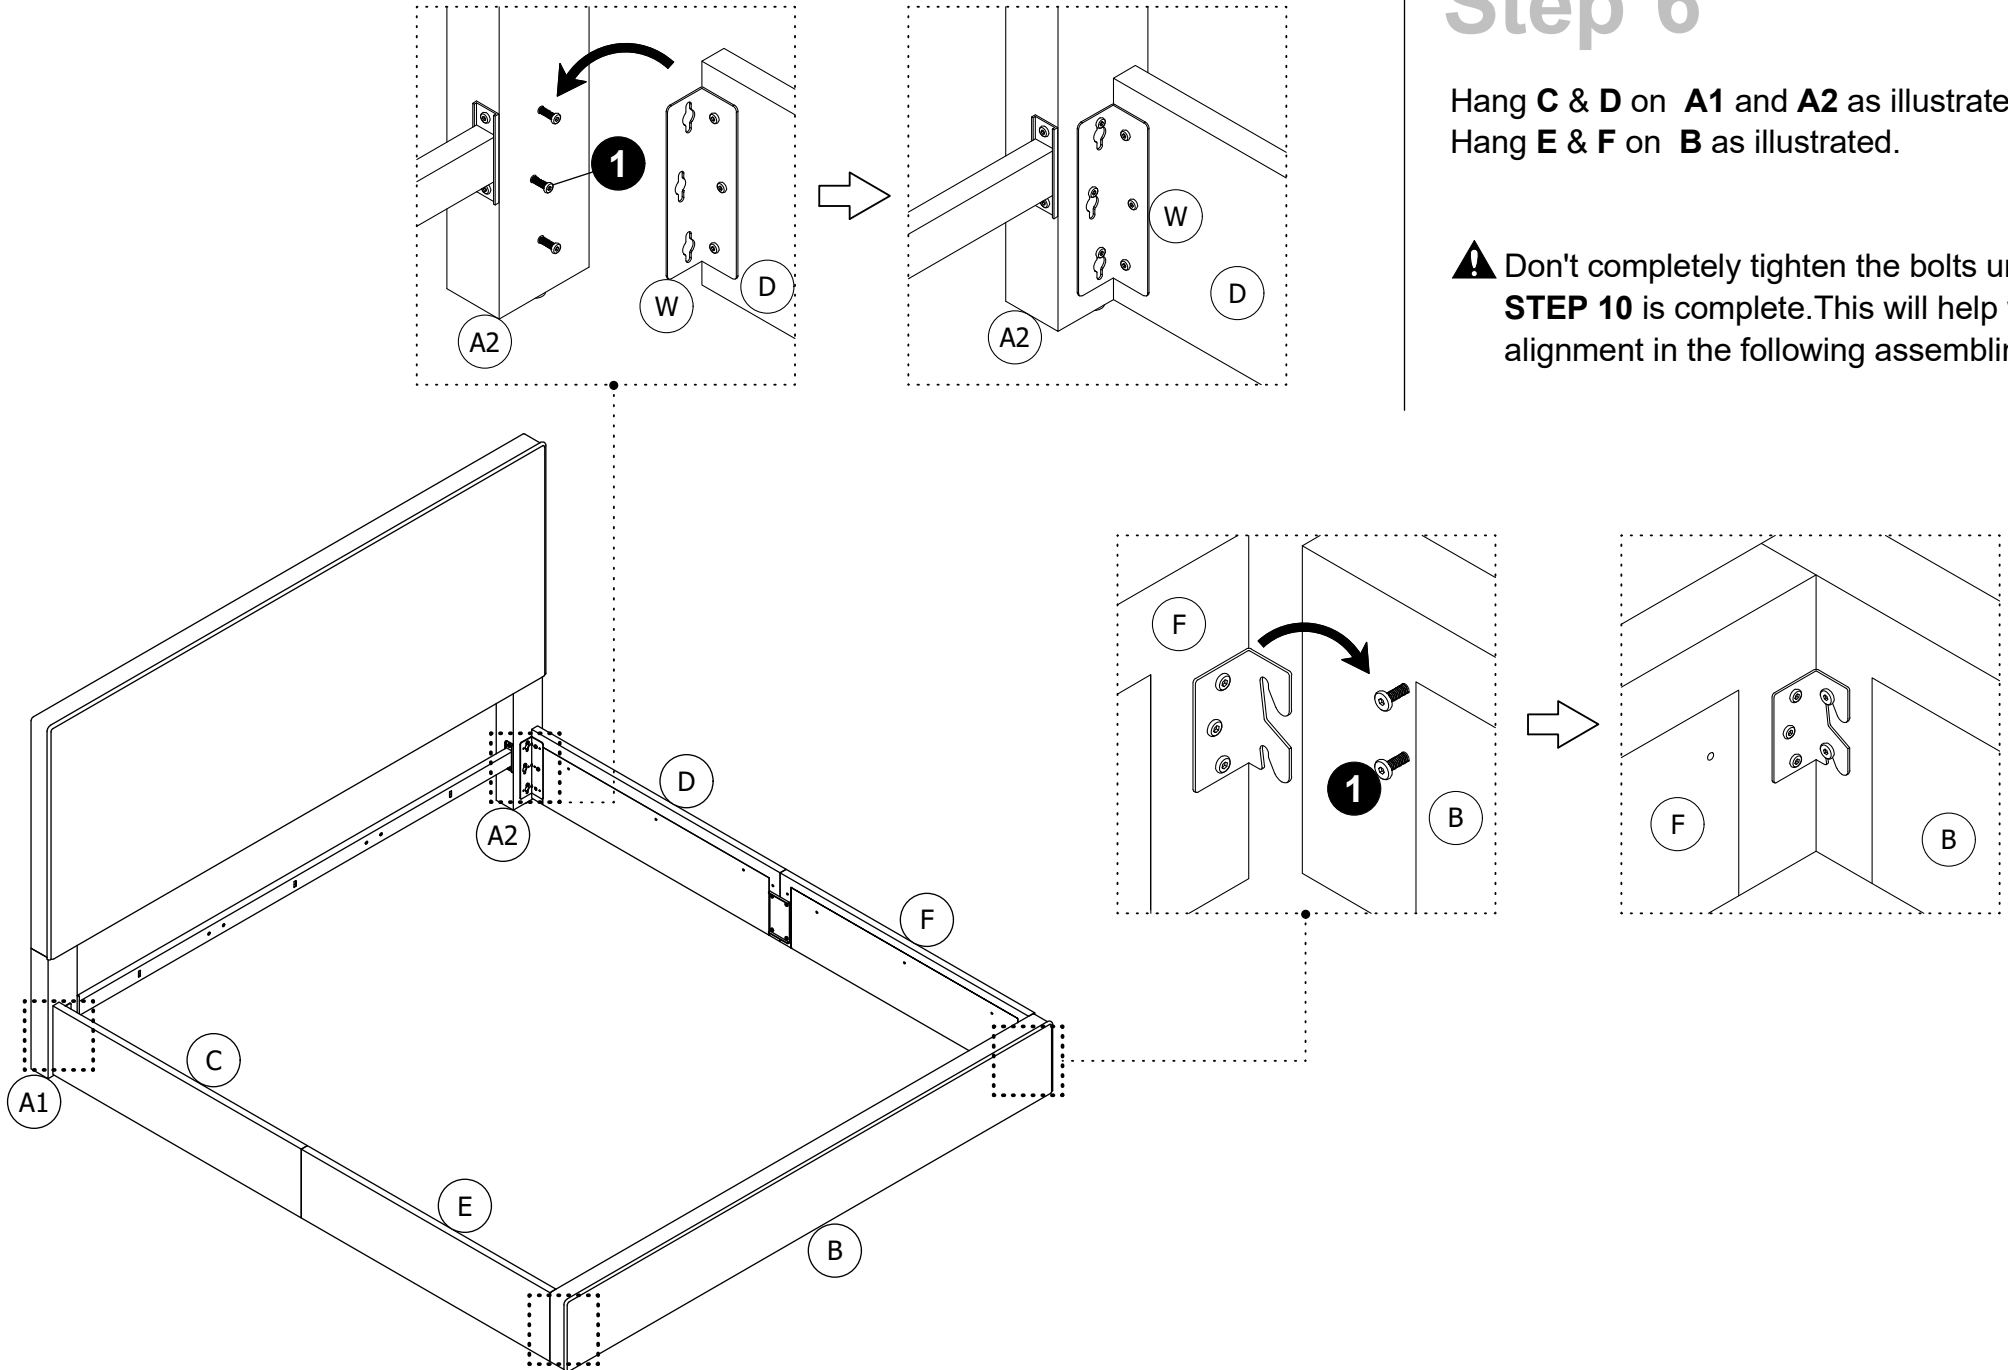



Step 7

Attach **J** X 3 to **H** with **1**.

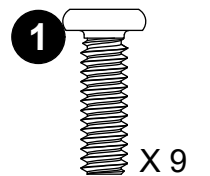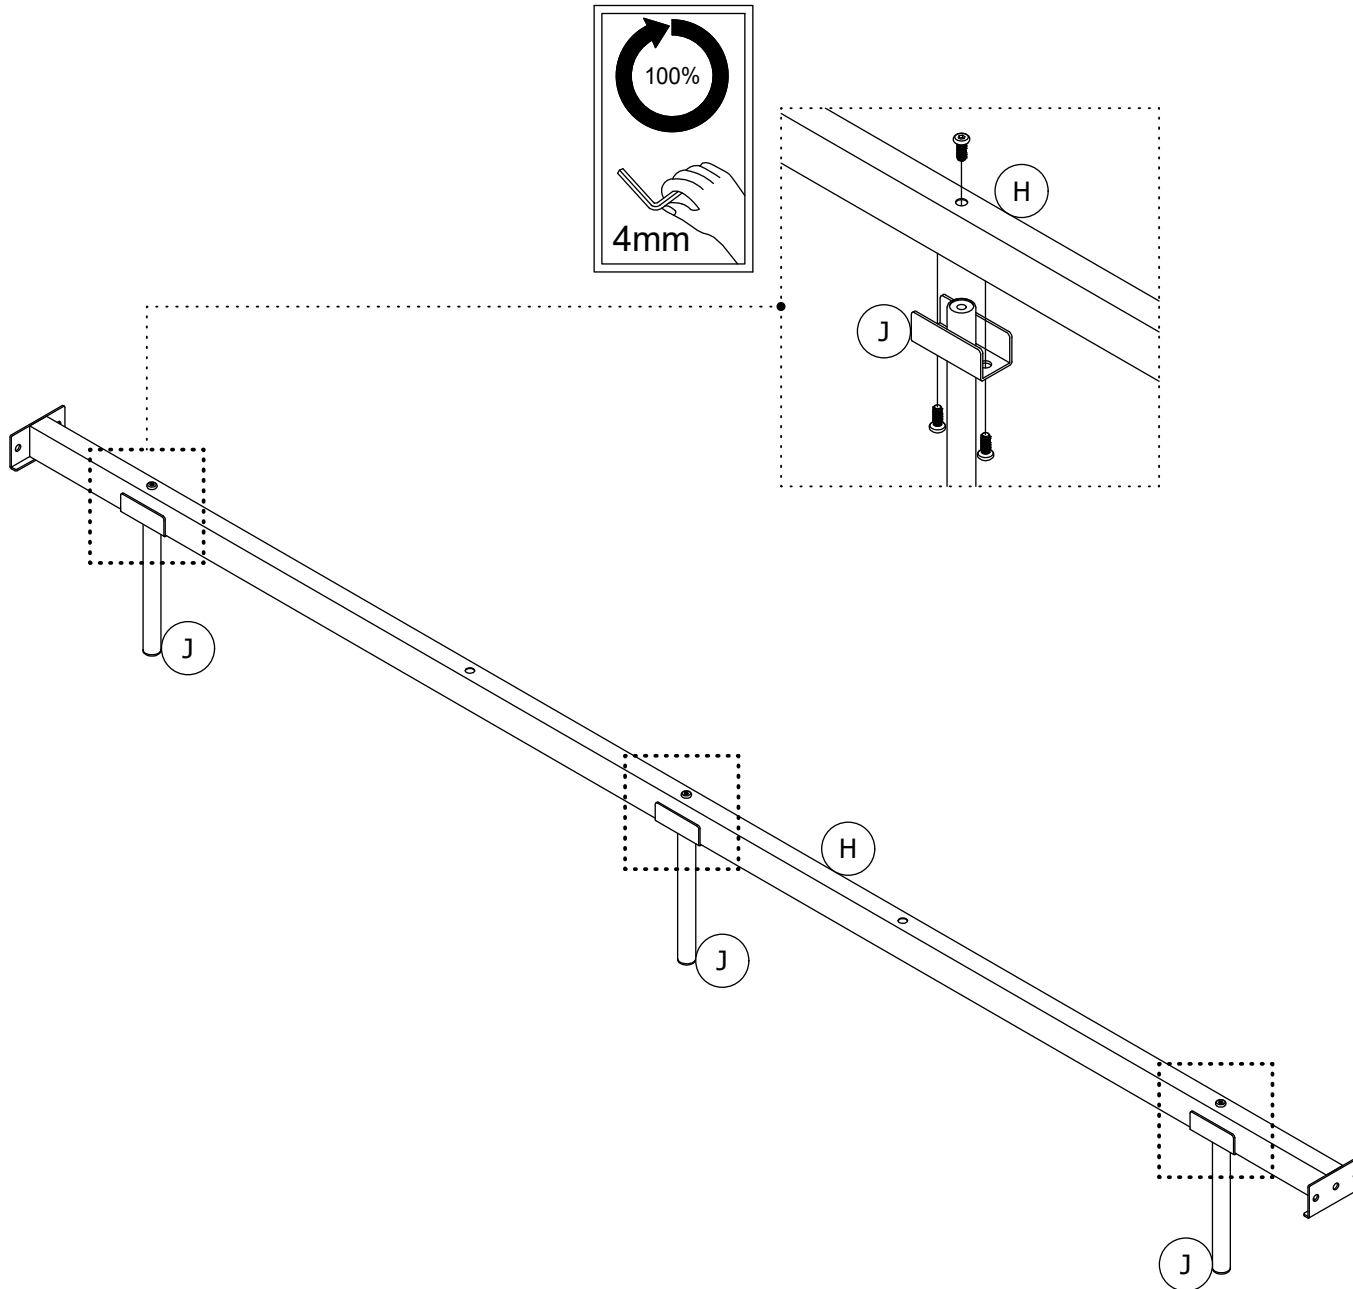

Step 8

Attach subassembly (**H & J**) from previous step to **C & E** and **D & F** with **1**.

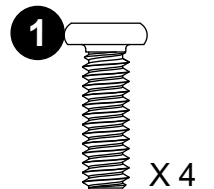
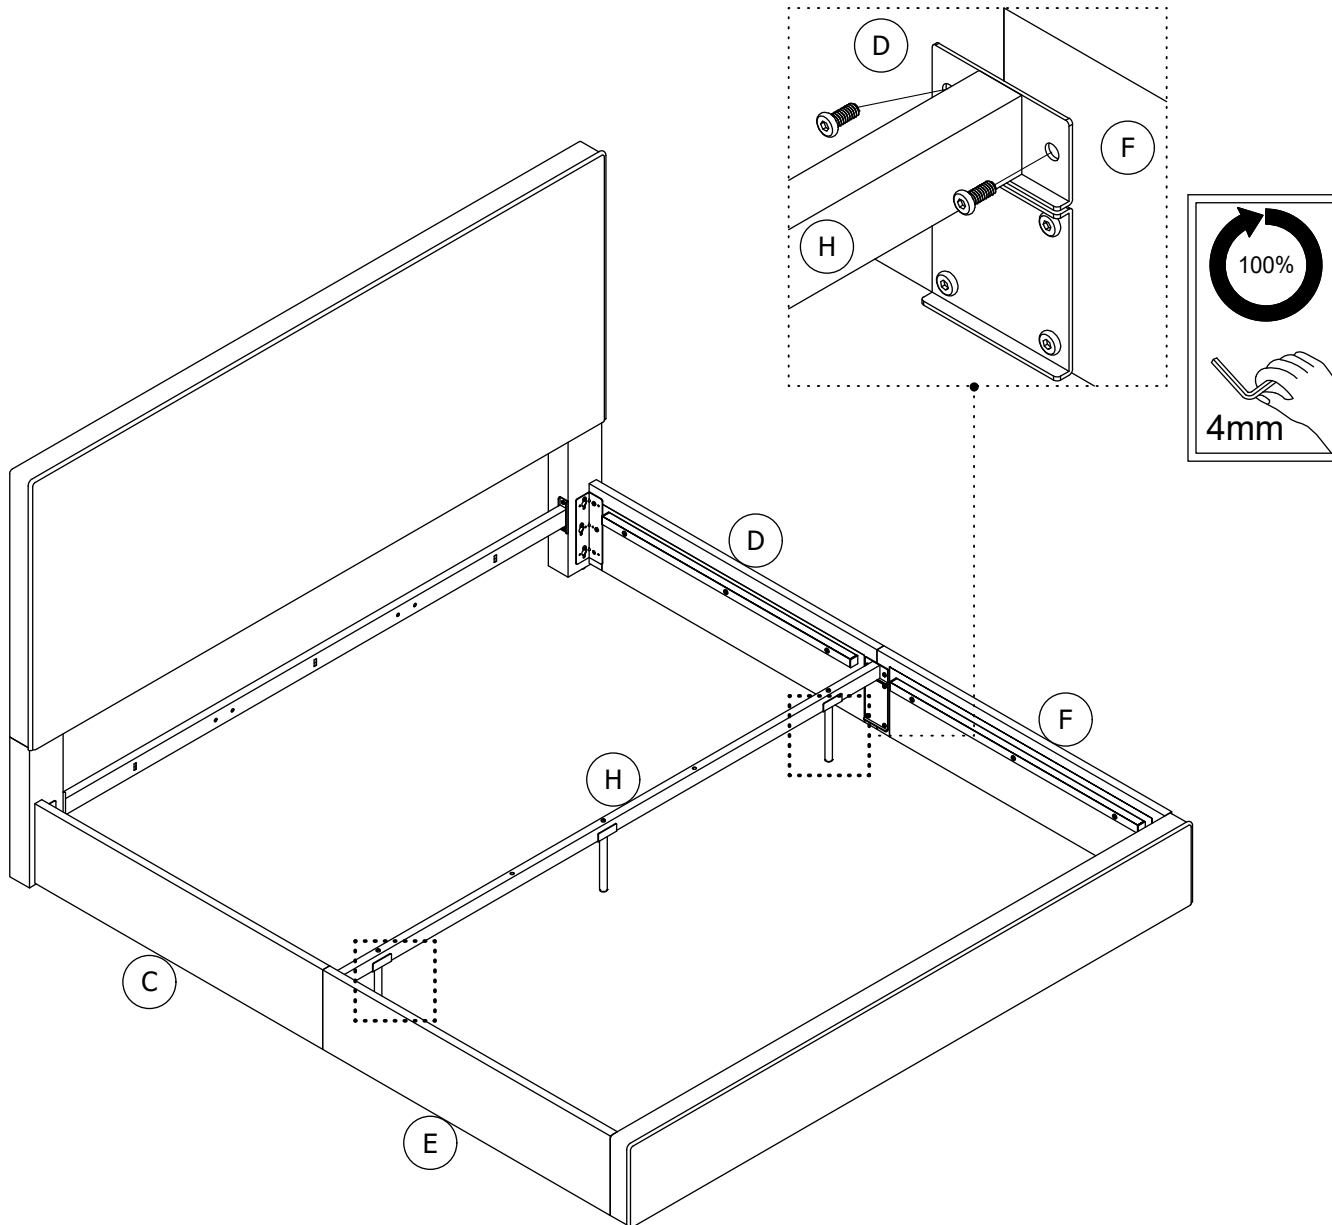


Step 9


9.1 Attach one **K x 2** to **L** with **1**.

9.2 Attach the other **K x 2** to **B** with **1**.


9.3 Attach **K x 2** to **H** with **5**.

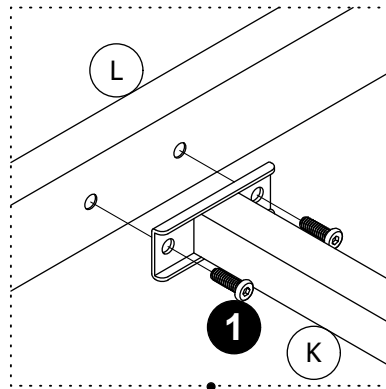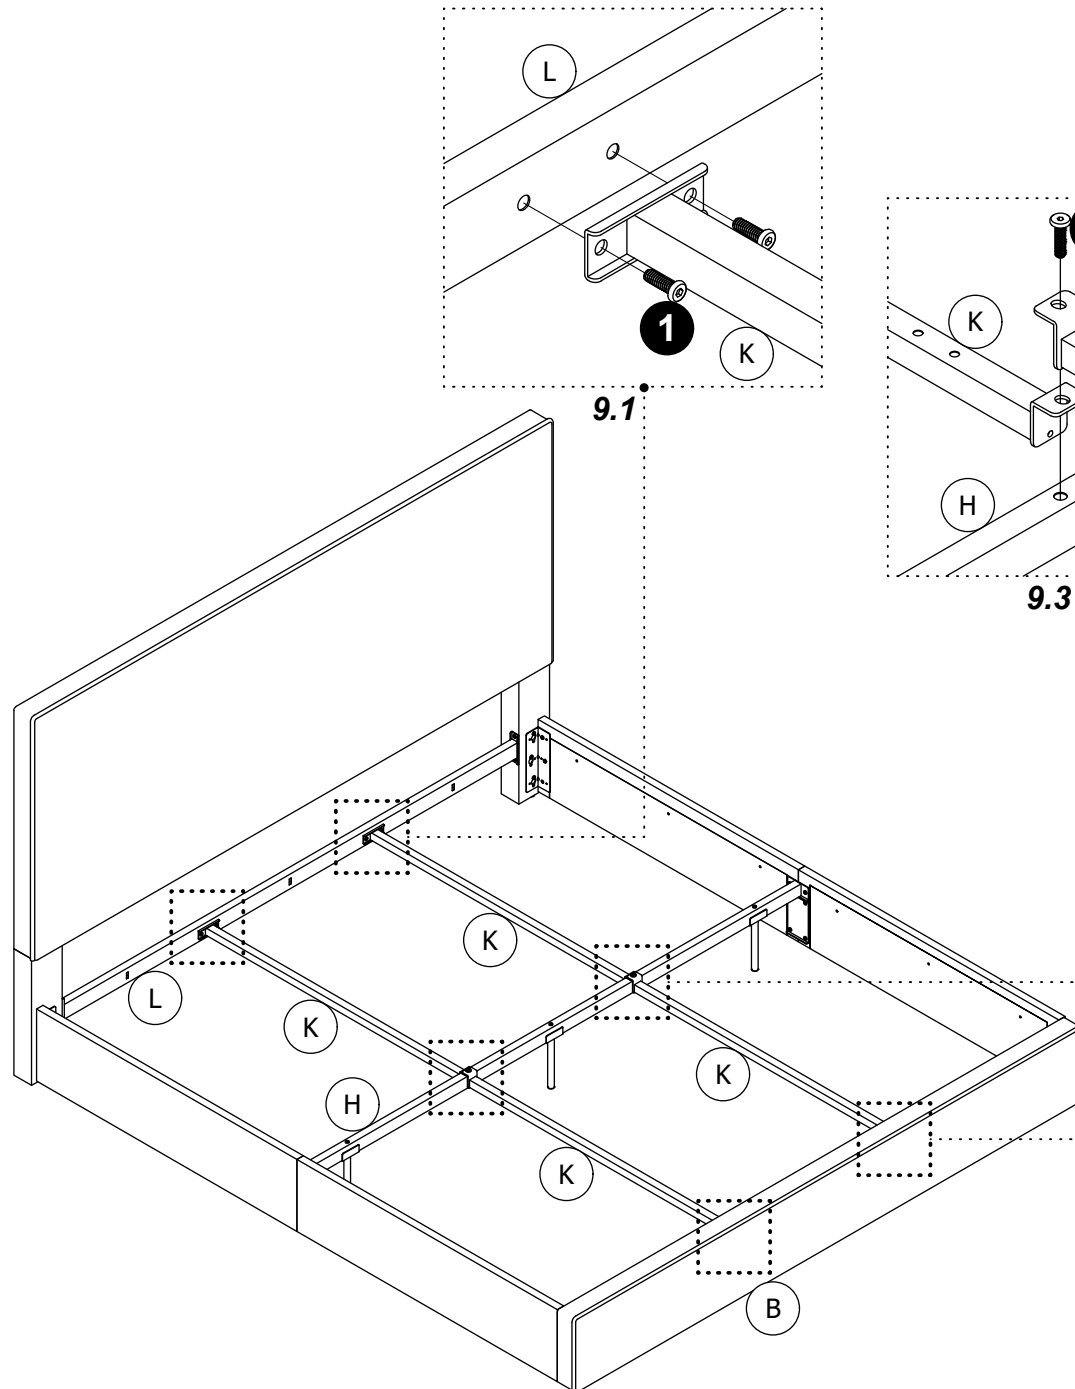


9.1

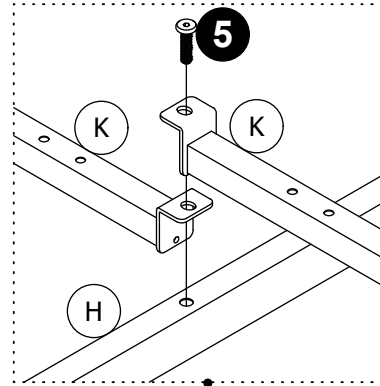

9.3

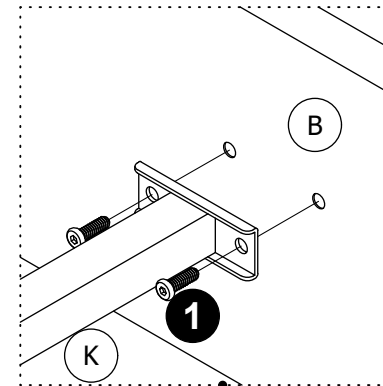



9.2

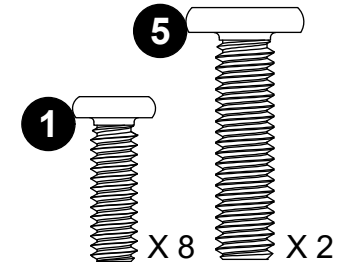

Step 10

Attach **G** x 4 to **C** & **D** & **E** & **F** with **2**.


! Fully tighten bolts in all steps.

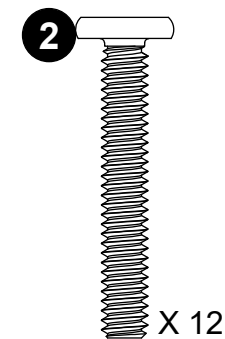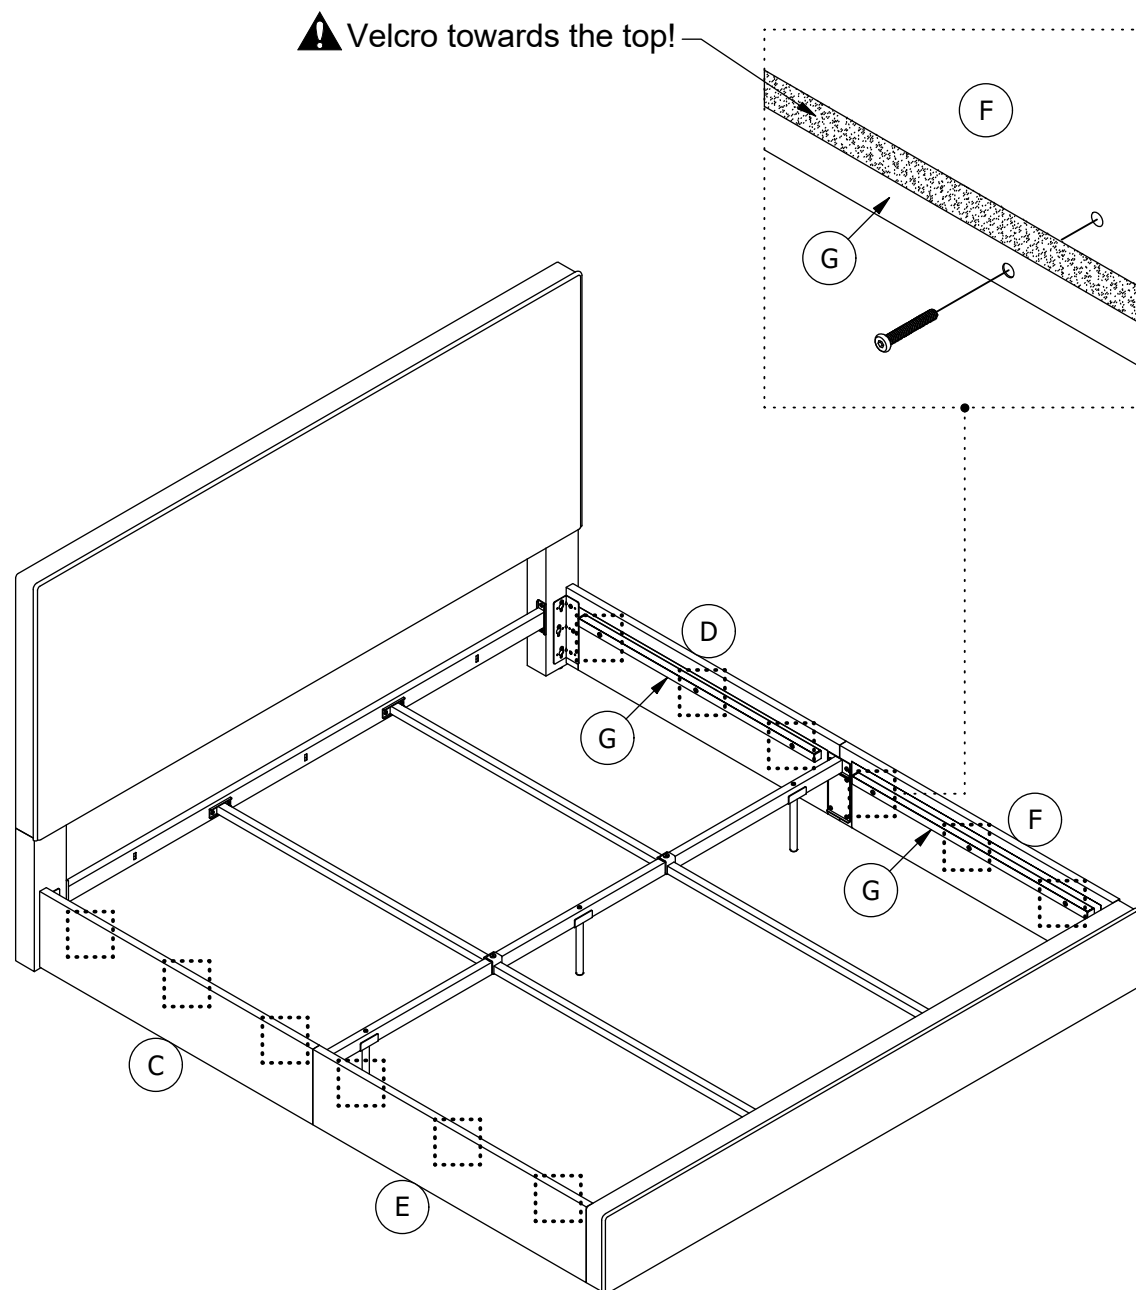


Step 11

11.1 Attach one end of **P6** to **L** by inserting the tab into the slot and turn it to the level position.


11.2 Spread the slats **P6** along the bed with equal spacing, engage the velcro at the end of slat with the counter part on **G**.

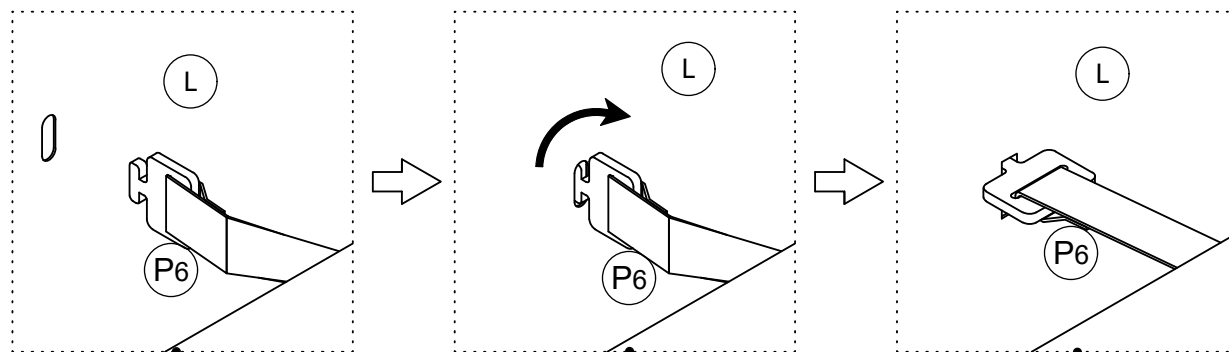


11.1

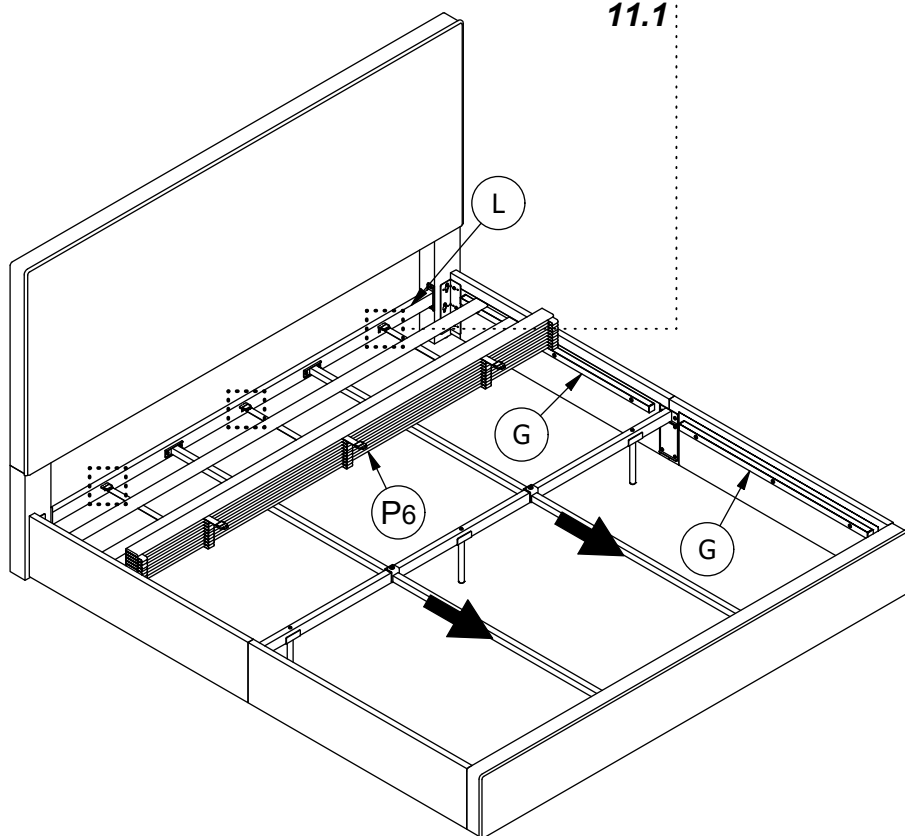


11.2

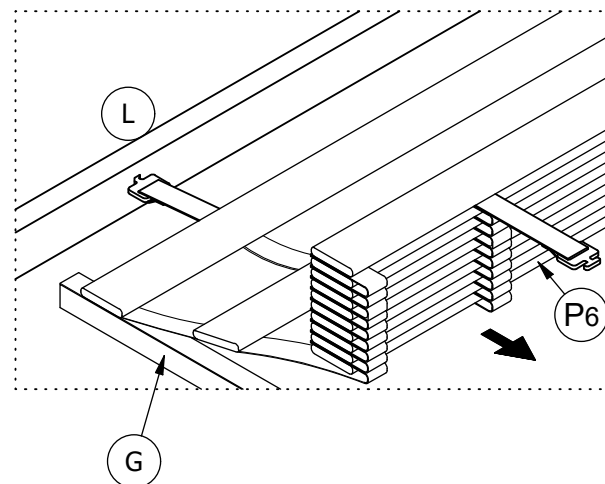

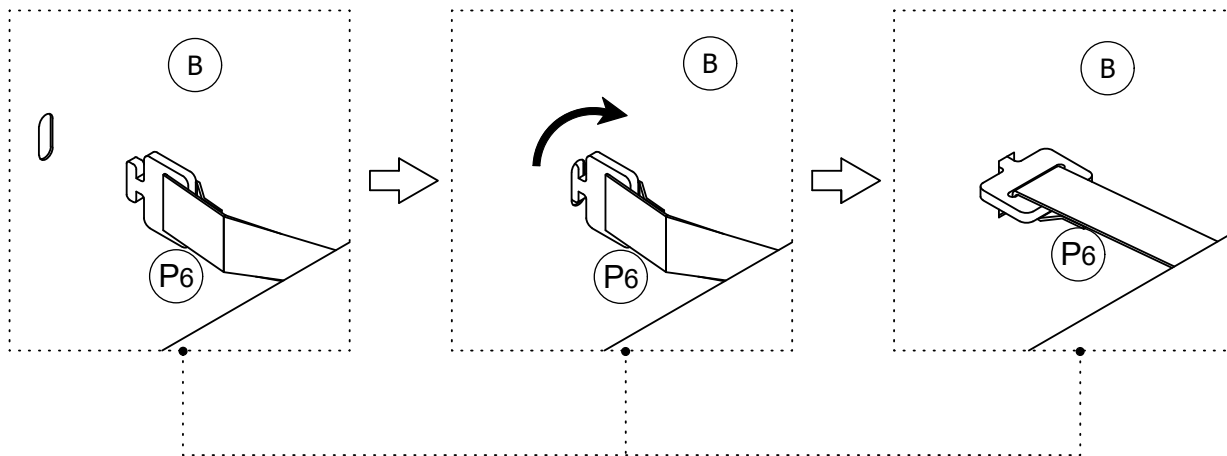

Step 12

Attach the other end of **P6** to **B** by inserting the tab into the slot and turn it to the level position.

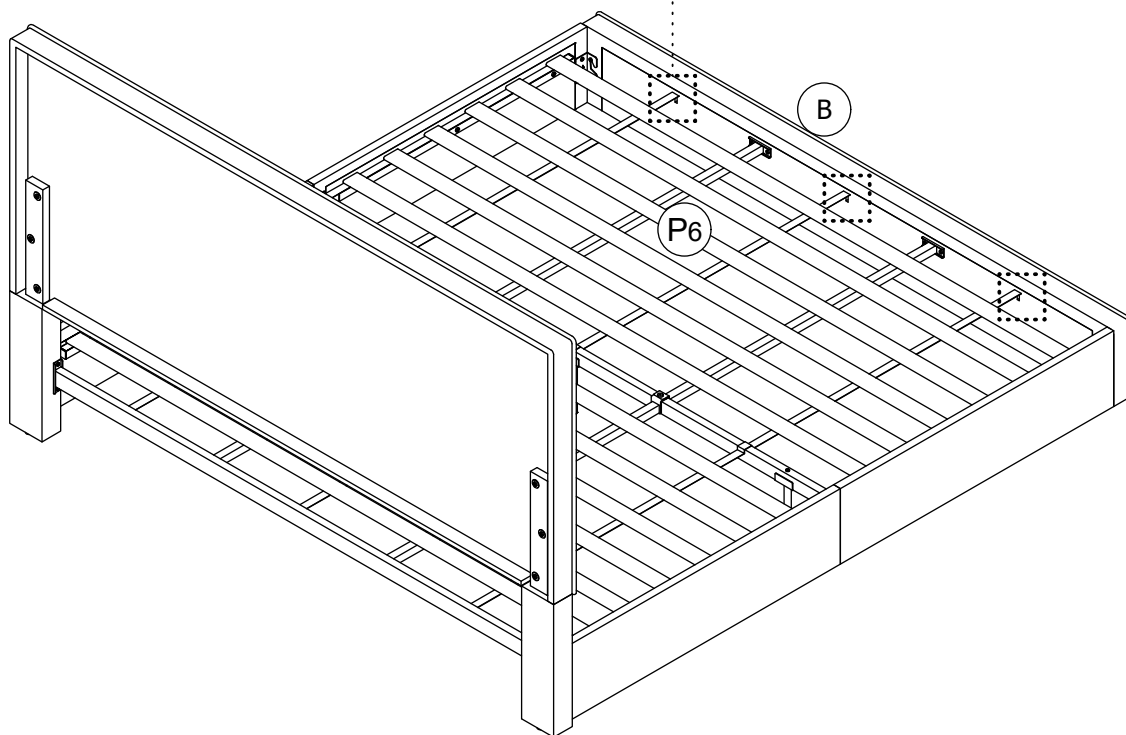

Step 13

Stick **N** to the back of **A** with Velcro as illustrated.

