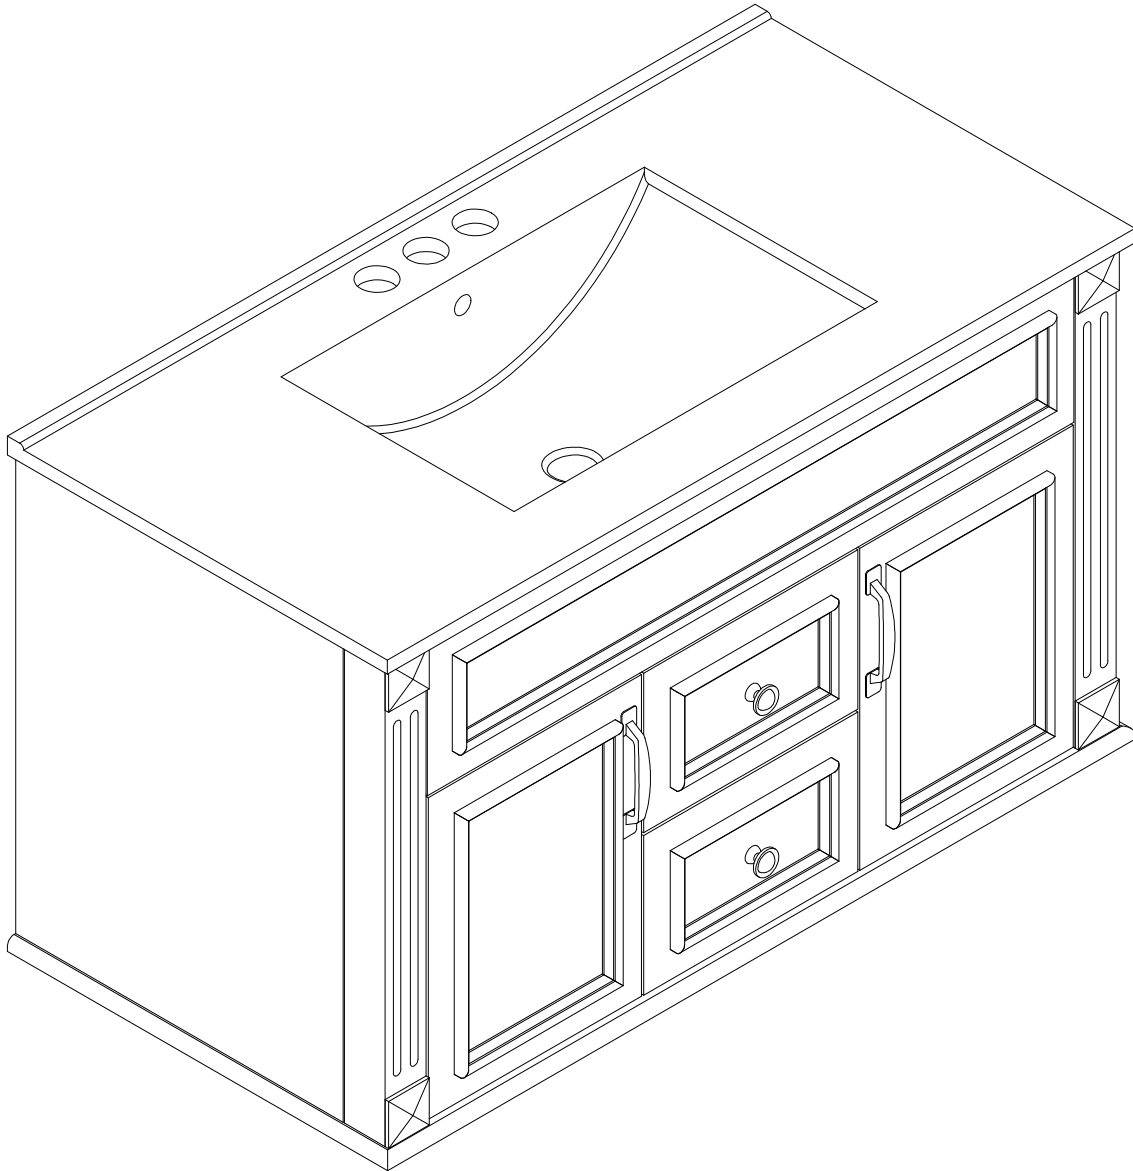


ASSEMBLY INSTRUCTIONS

36INCH BATH VANITY (COMBO)

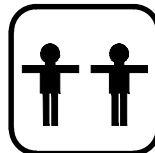
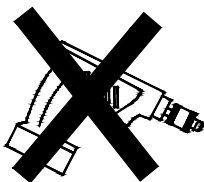


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.




+

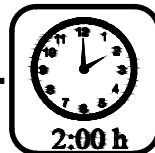

Tools Required




(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

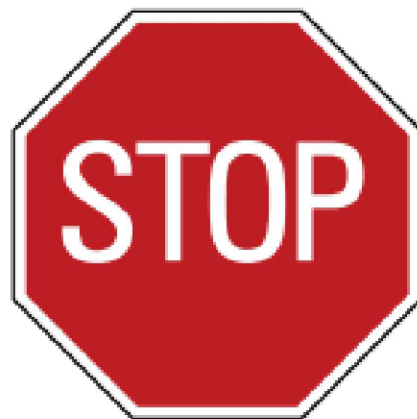PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation






Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions








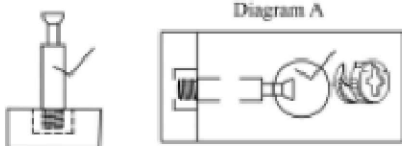
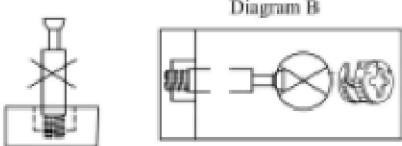
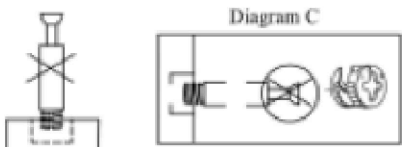

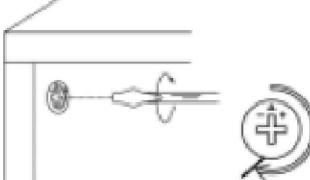
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

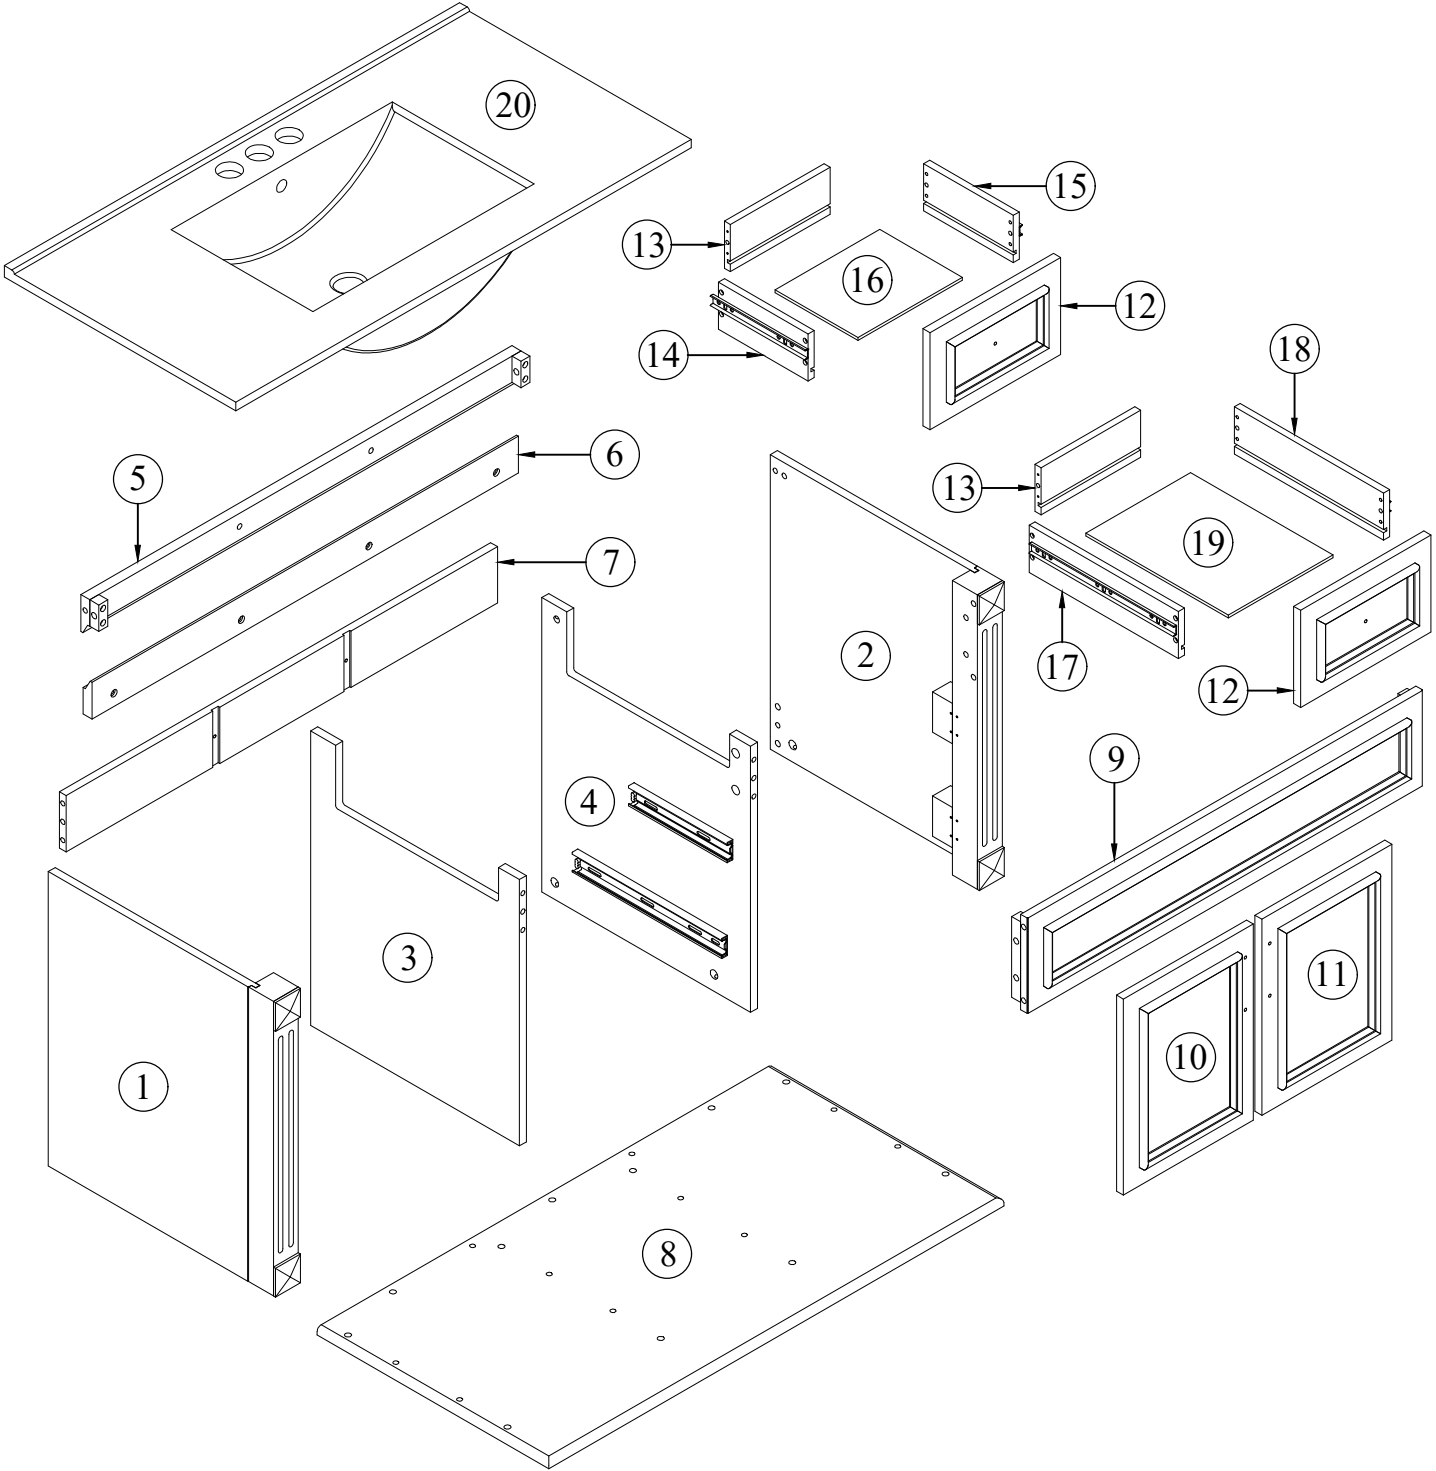Detail View - CABINET











Identifying the Hardware - identify the hardware using the illustrations below.

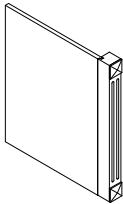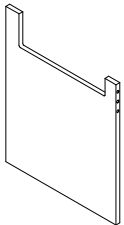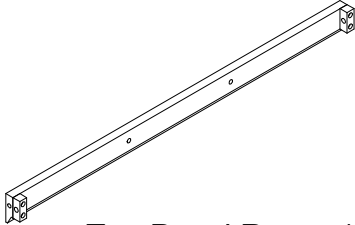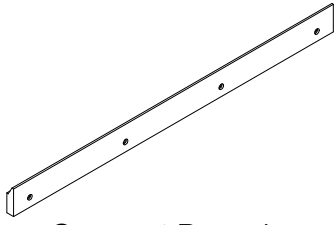
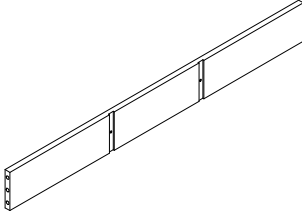
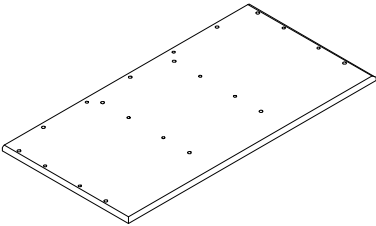
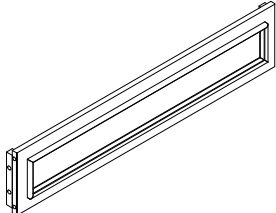


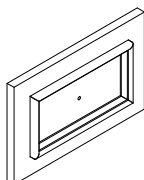
Part List

1		2	
3		4	
5		6	
7		8	
9		10	
11		12	

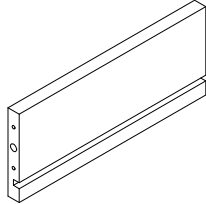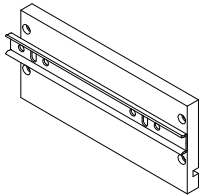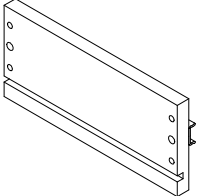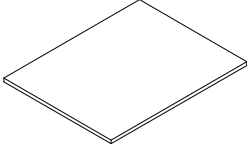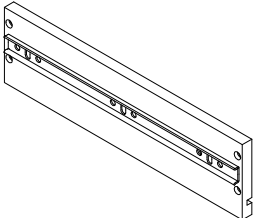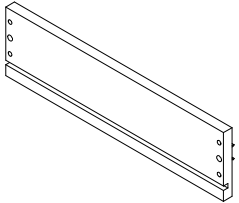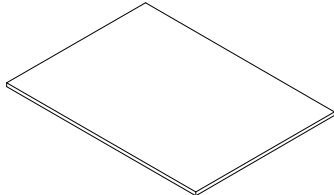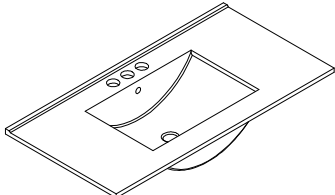Part List


13		14	
	Drawer Back Panel - 2pcs		Drawer Side Top (L) - 1pc
15		16	
	Drawer Side Top (R) - 1pc		Drawer Bottom (T) - 1pc
17		18	
	Drawer Side Bottom (L) - 1pc		Drawer Side Bottom (R) - 1pc
19		20	
	Drawer Bottom (B) - 1pc		Sink - 1pc

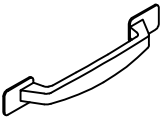Hardware List



A  $\varnothing 6 \times 35 \text{mm}$	B  $\varnothing 14.5 \times 12 \text{mm}$	C  $\varnothing 8 \times 30 \text{mm}$
Three in one bolts(19pcs)	Three in one lock(19pcs)	Wood dowel(20pcs)
D  $\varnothing 13 \times 1/4" \times 50 \text{mm}$	E  $1/4" \times \varnothing 10 \times 13 \text{mm}$	F  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$
Hex-Head bolts(2pcs)	Horizontal-Hole bolts(2pcs)	Round head screw(2pcs)
G  $\varnothing 13 \times 1/4" \times 28 \text{mm}$	H  $\varnothing 1/4" \times 16 \times 1 \text{mm}$	I  Damping hinge (4pcs)
Hex-Head bolts(6pcs)	Washer(6pcs)	
J  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$	K  Handle (2pcs)	L  $\varnothing 5/32" \times 20 \text{mm}$
Flat head screw(24pcs)	Handle (2pcs)	Handle screw(4pcs)
M  Handle (2pcs)	N  $\varnothing 5/32" \times 35 \text{mm}$	O  $\varnothing 6 \times 30 \text{mm}$
Handle (2pcs)	Handle screw(2pcs)	Wood dowel(8pcs)
P  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$	Q  $\varnothing 10 \times \varnothing 5 \times 60 \text{mm}$	R  $\varnothing 12 \times 55 \text{mm}$
Round head screw(16pcs)	Flat head screw (4pcs)	Plastic stopper (4pcs)
S  4mm Allen key - 1pc		

STEP: 1


A




19PCS

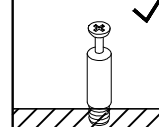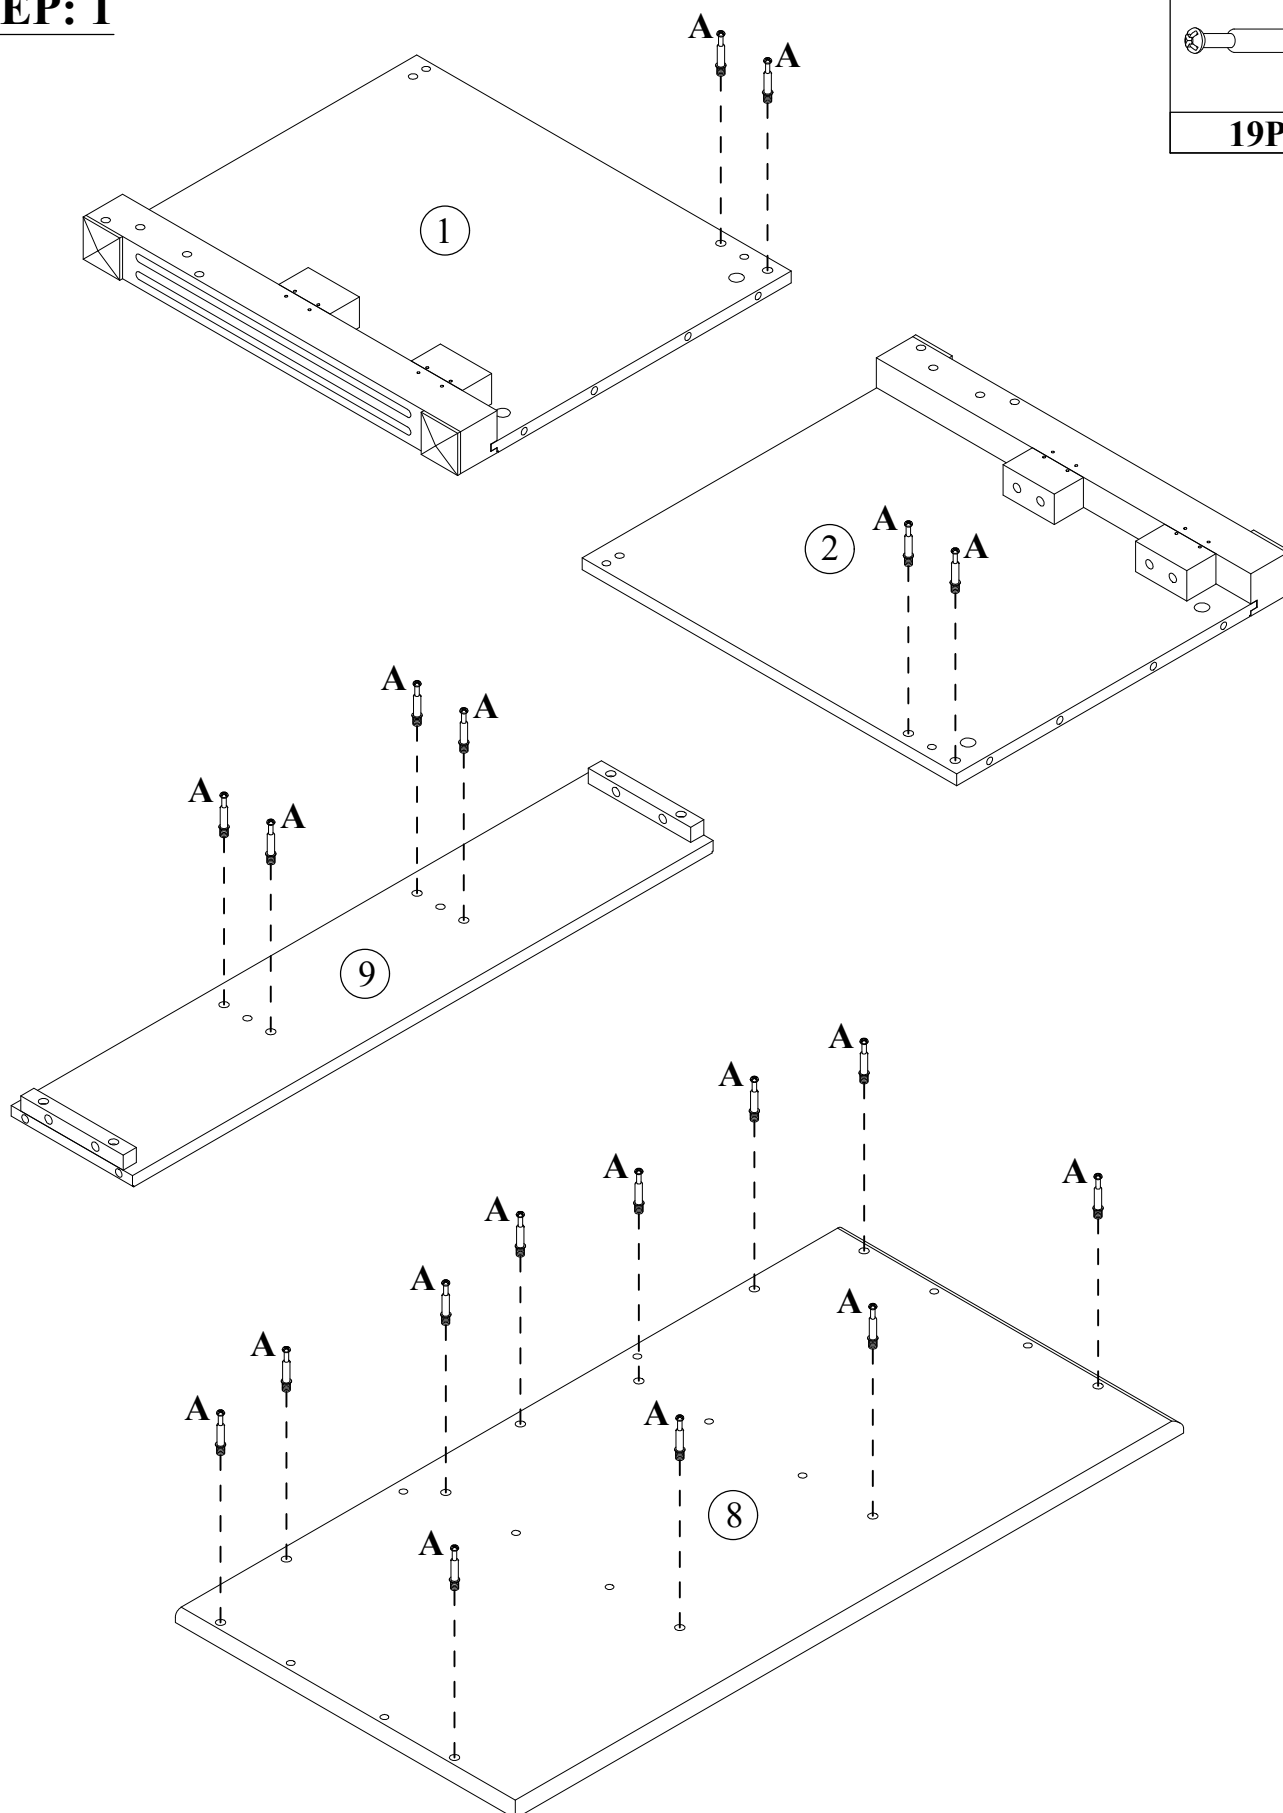

Don't lean




Don't over tighten





STEP: 2

S	D	E	F
			
1PC	2PCS	2PCS	2PCS

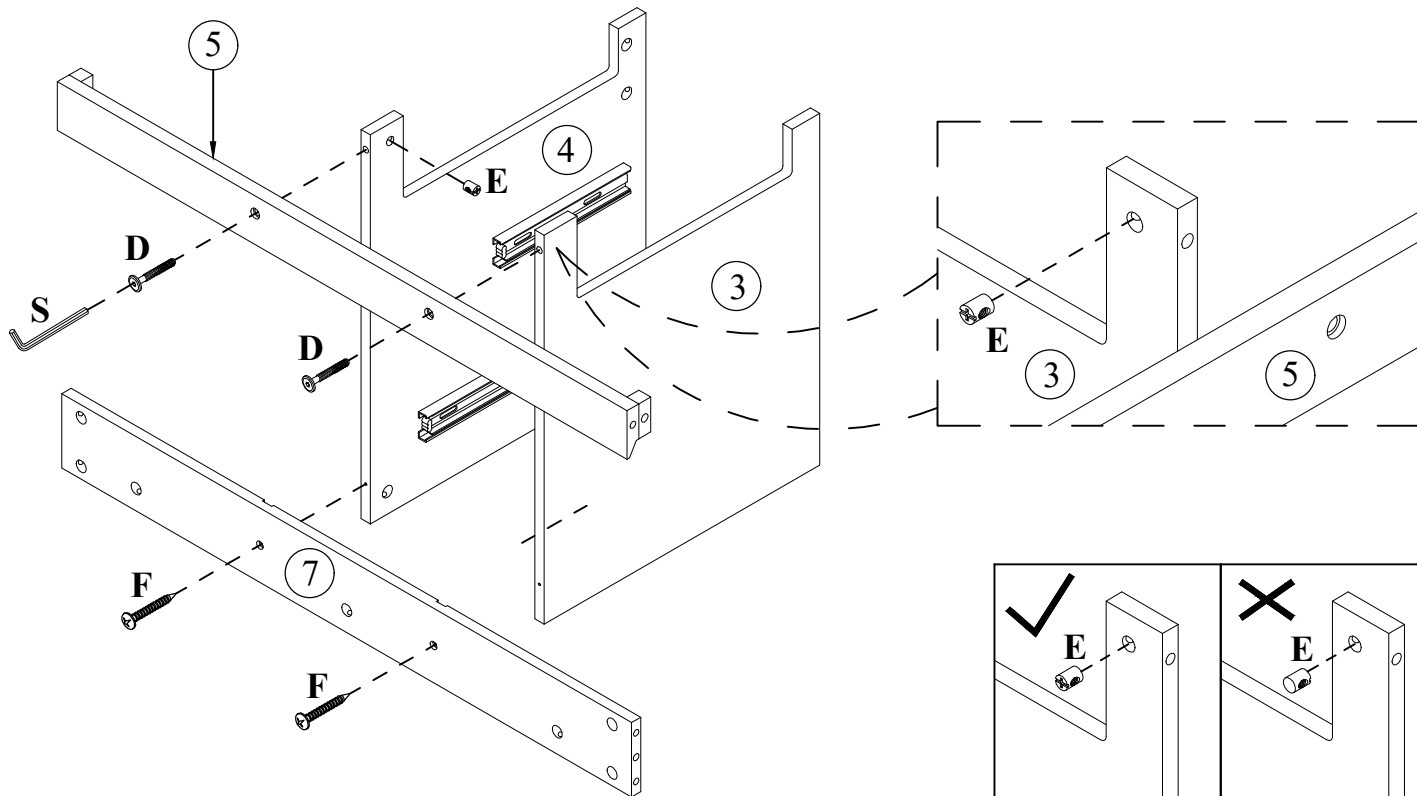


STEP: 3

B	C
	
4PCS	2PCS

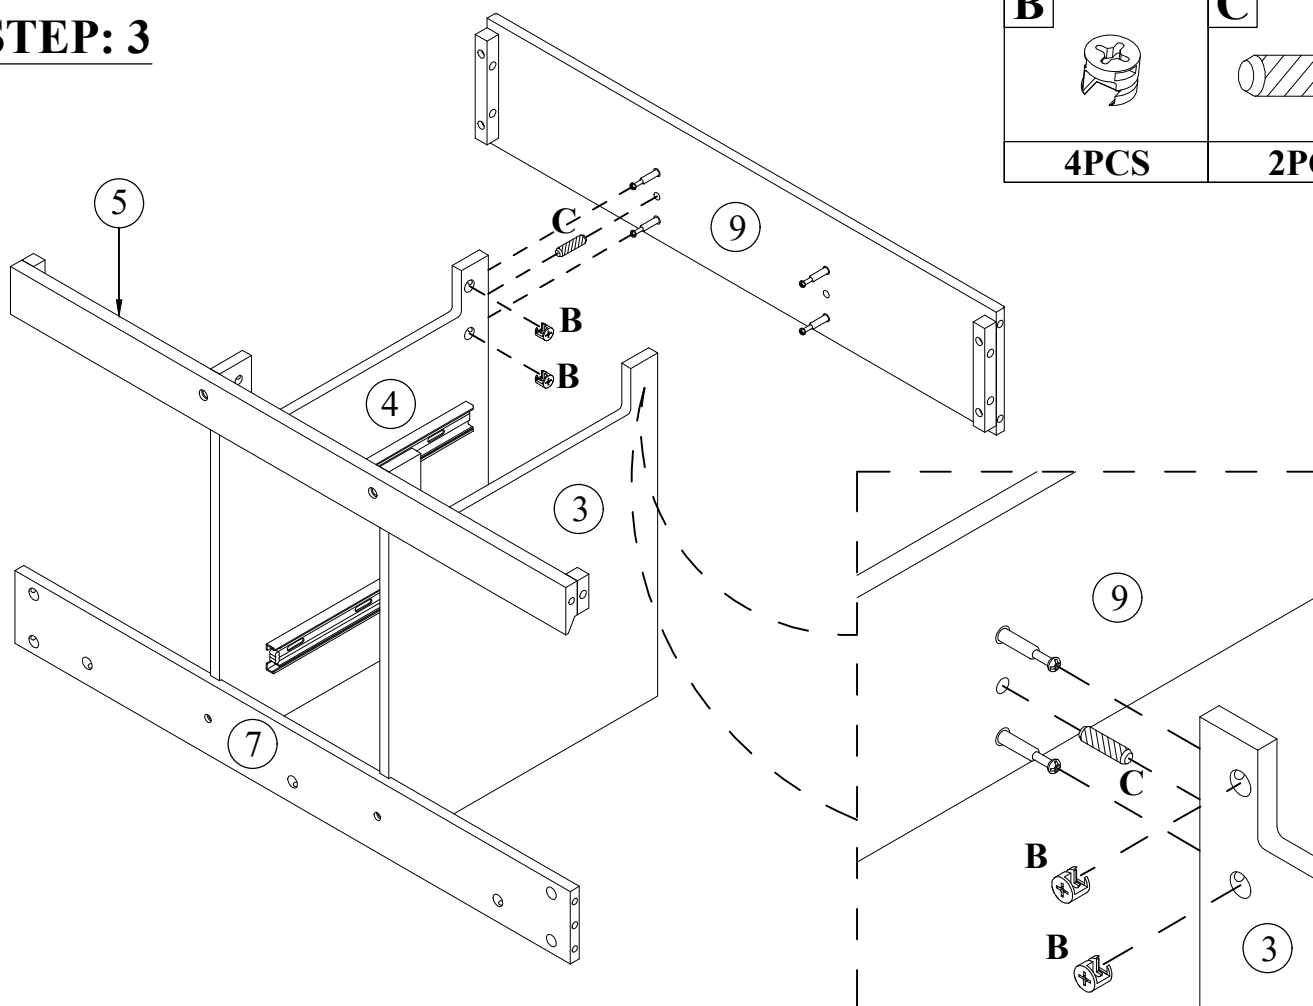


STEP: 4

S	B	C	G	H
				
1PC	2PCS	4PCS	3PCS	3PCS

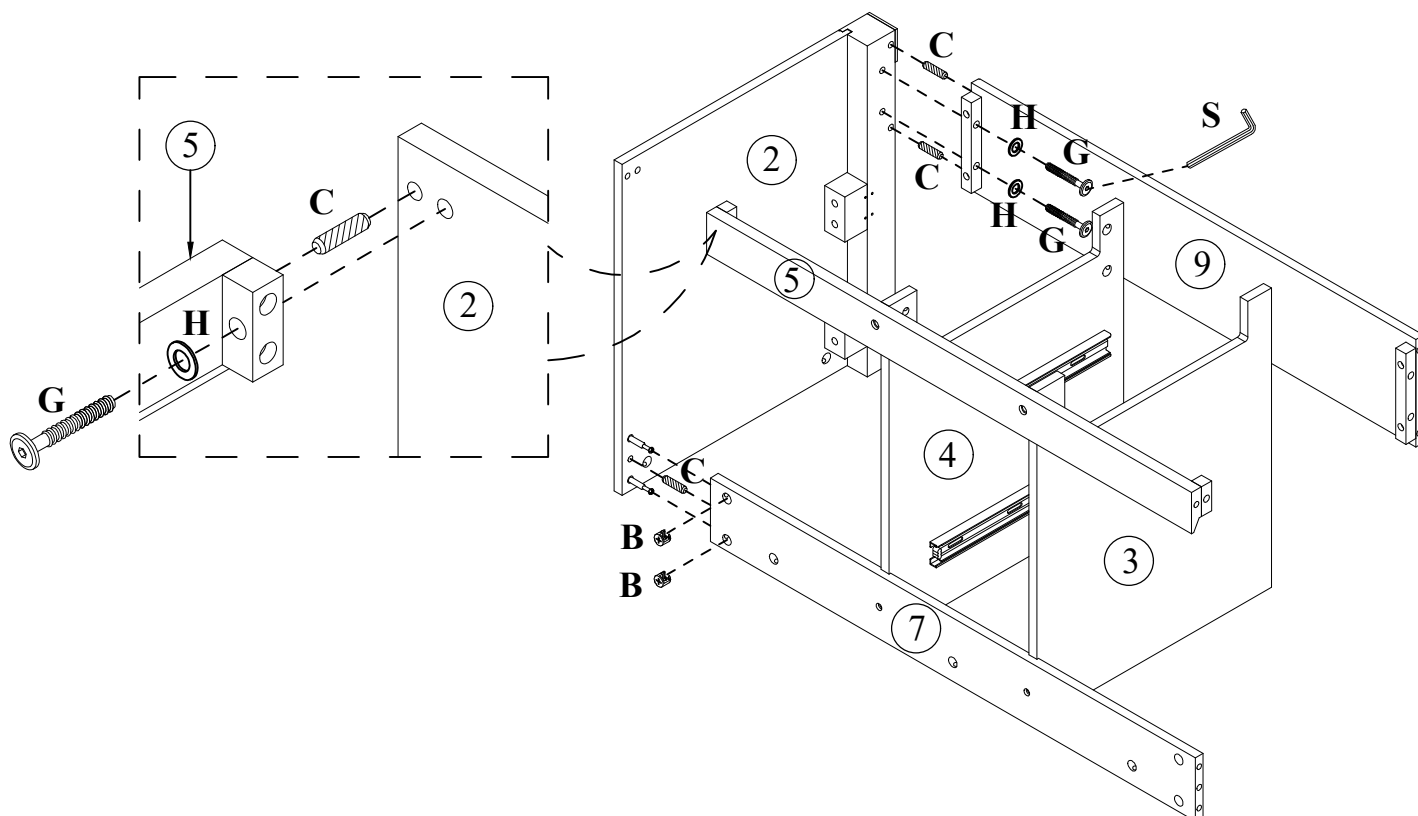


STEP: 5


S	B	C	G	H
				
1PC	2PCS	4PCS	3PCS	3PCS


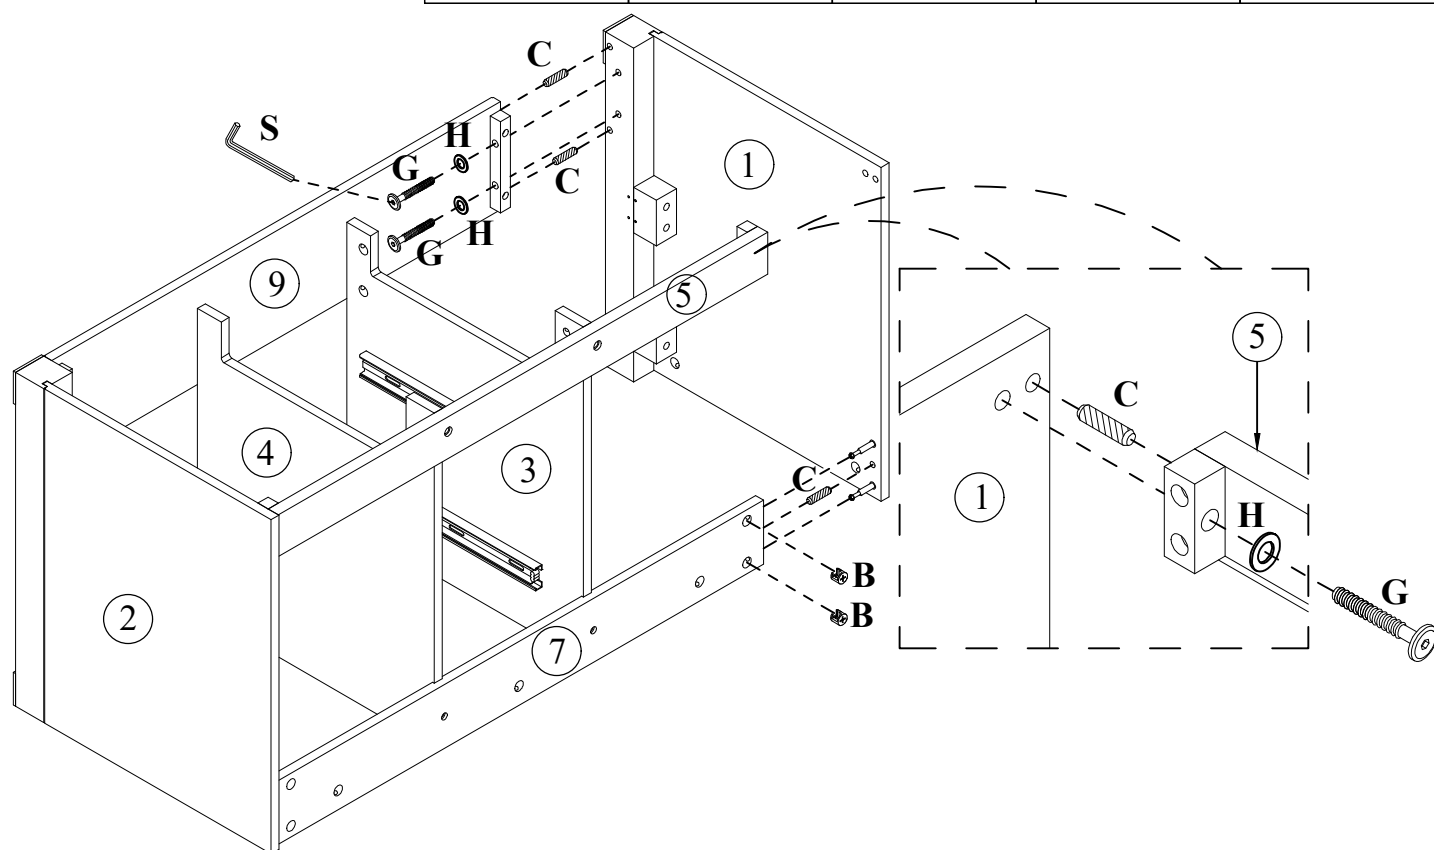


STEP: 6

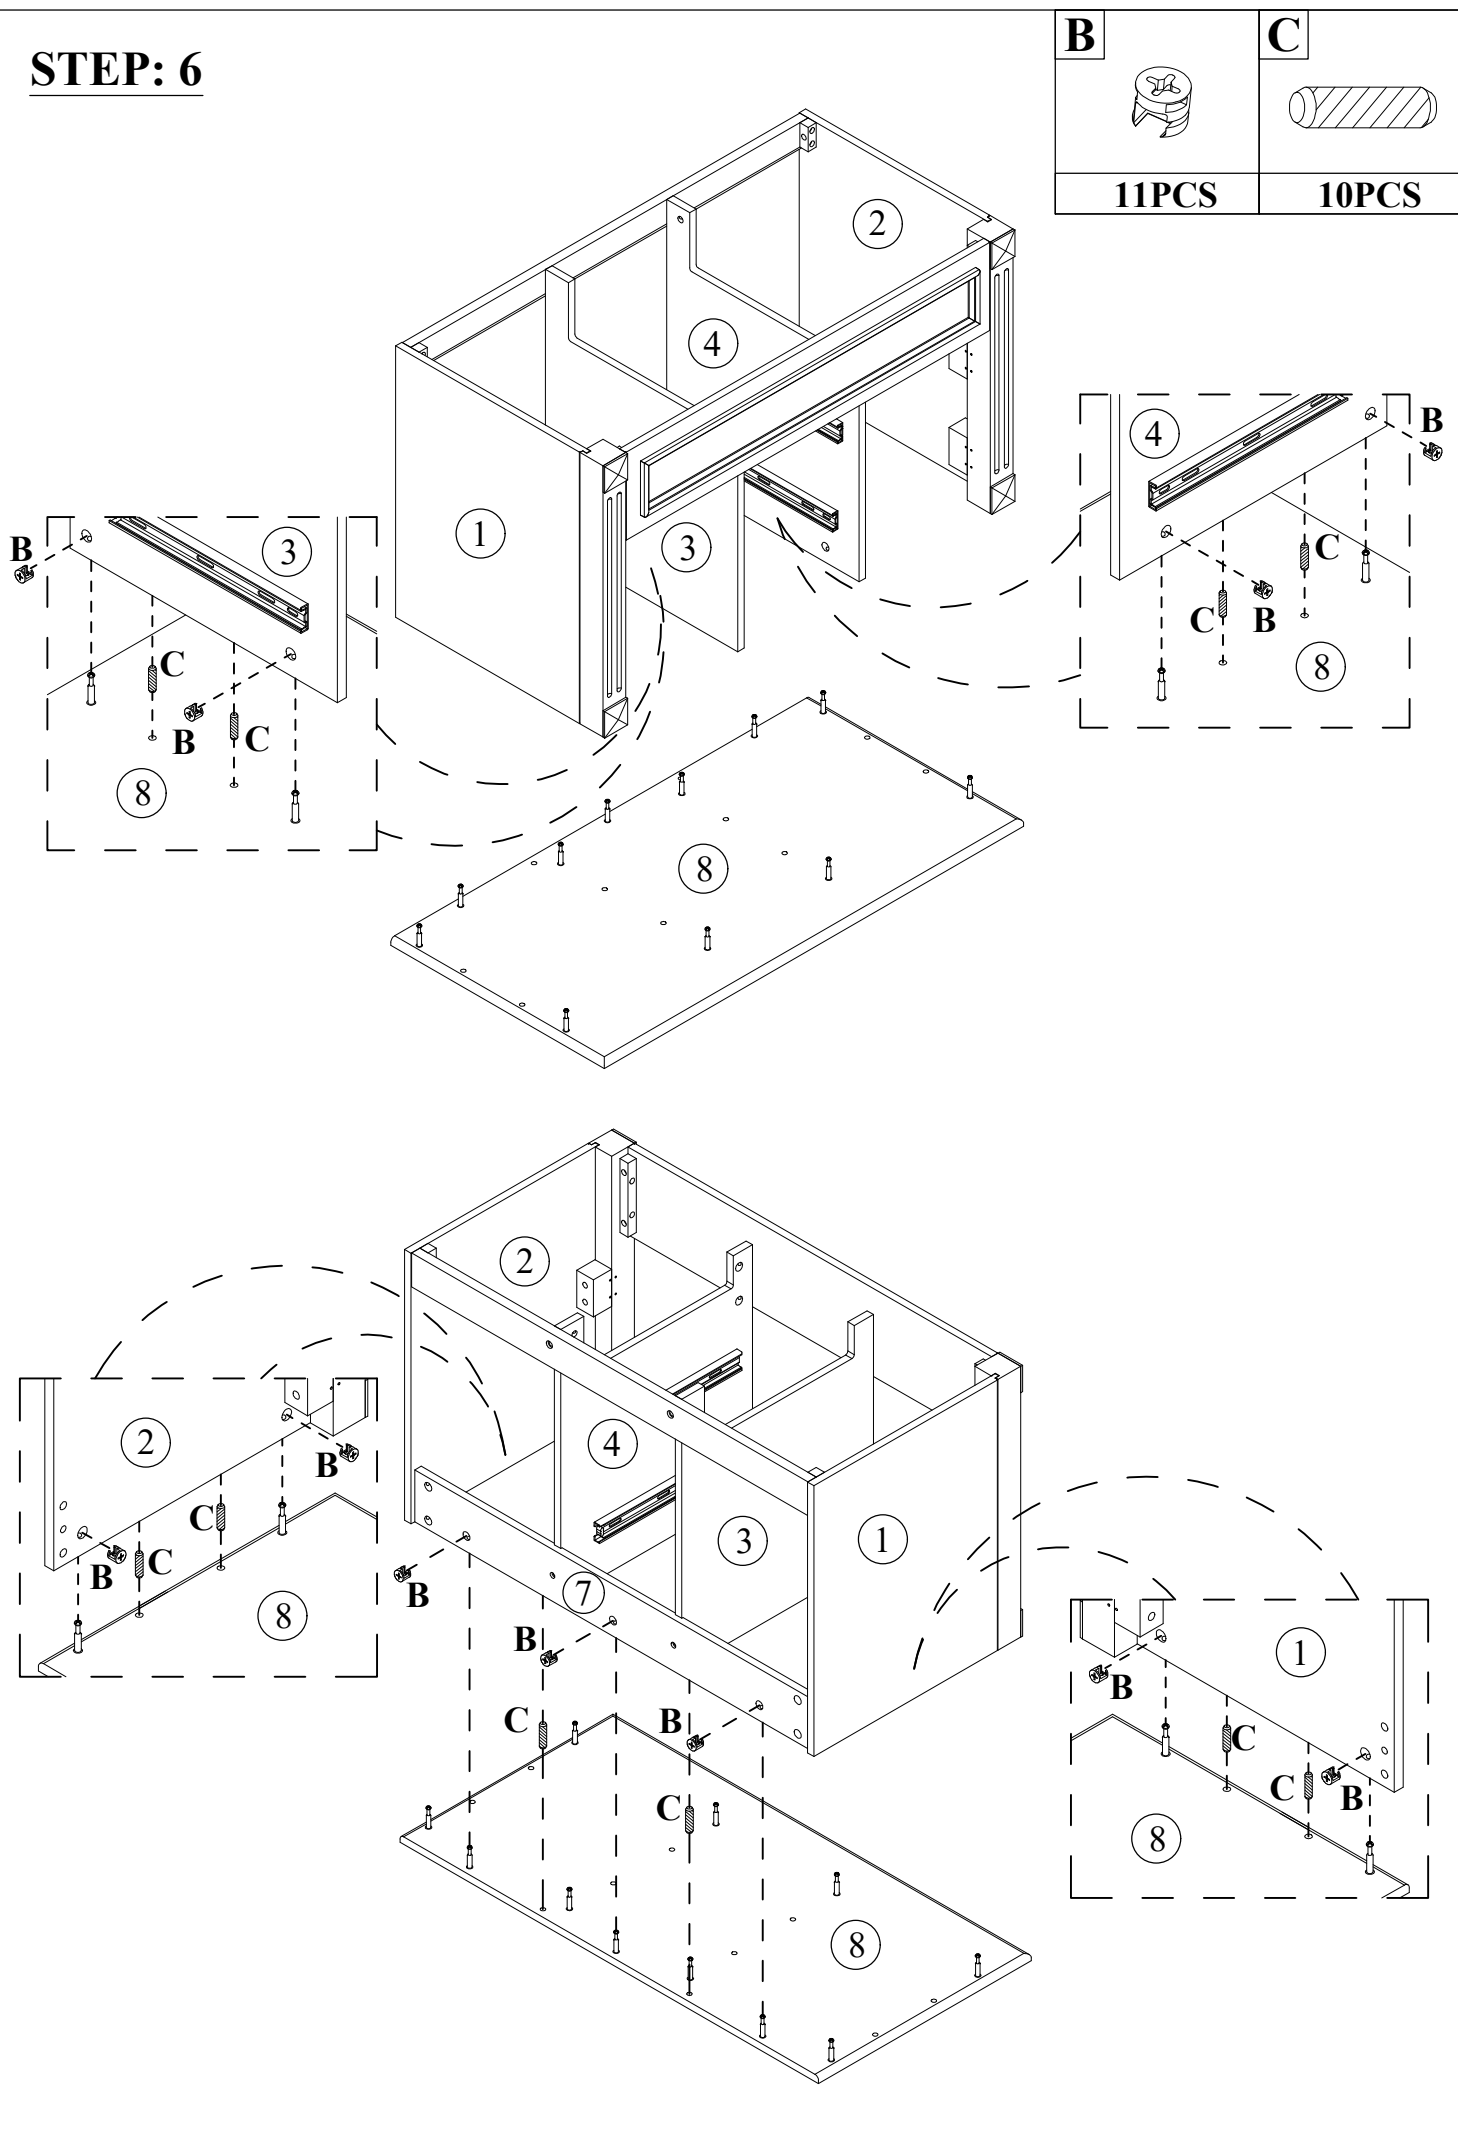

STEP: 7


Q	R
	
4PCS	4PCS

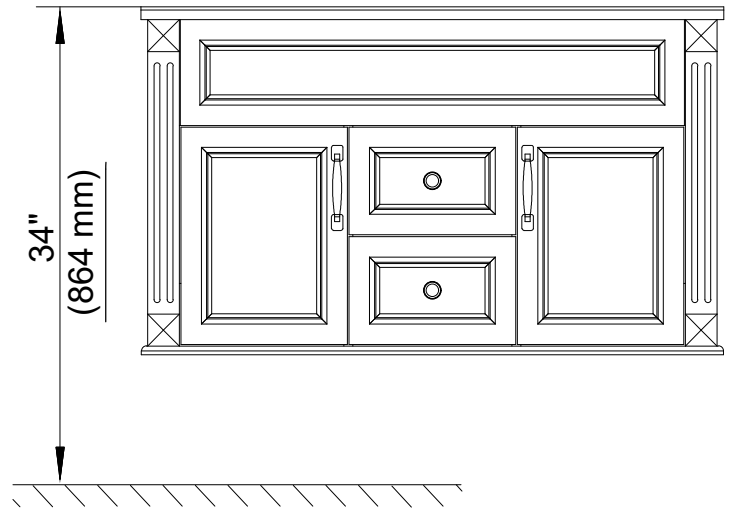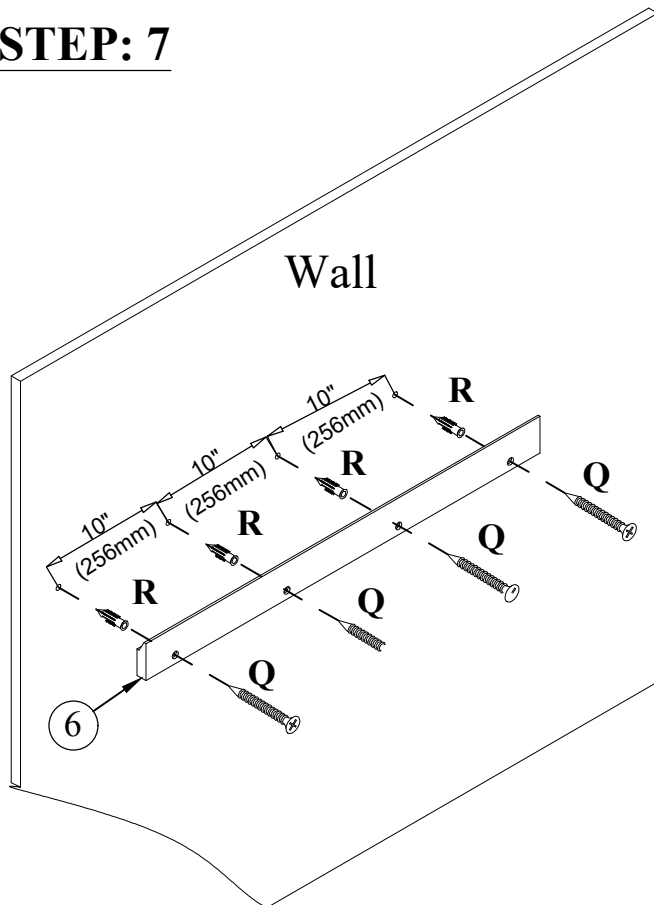


Draw the spacing between the walls and the No.6, punch holes in the wall, and fix the No.6 to the wall with screws.


Note: Appropriate distance from the top of sink to the ground is 34".

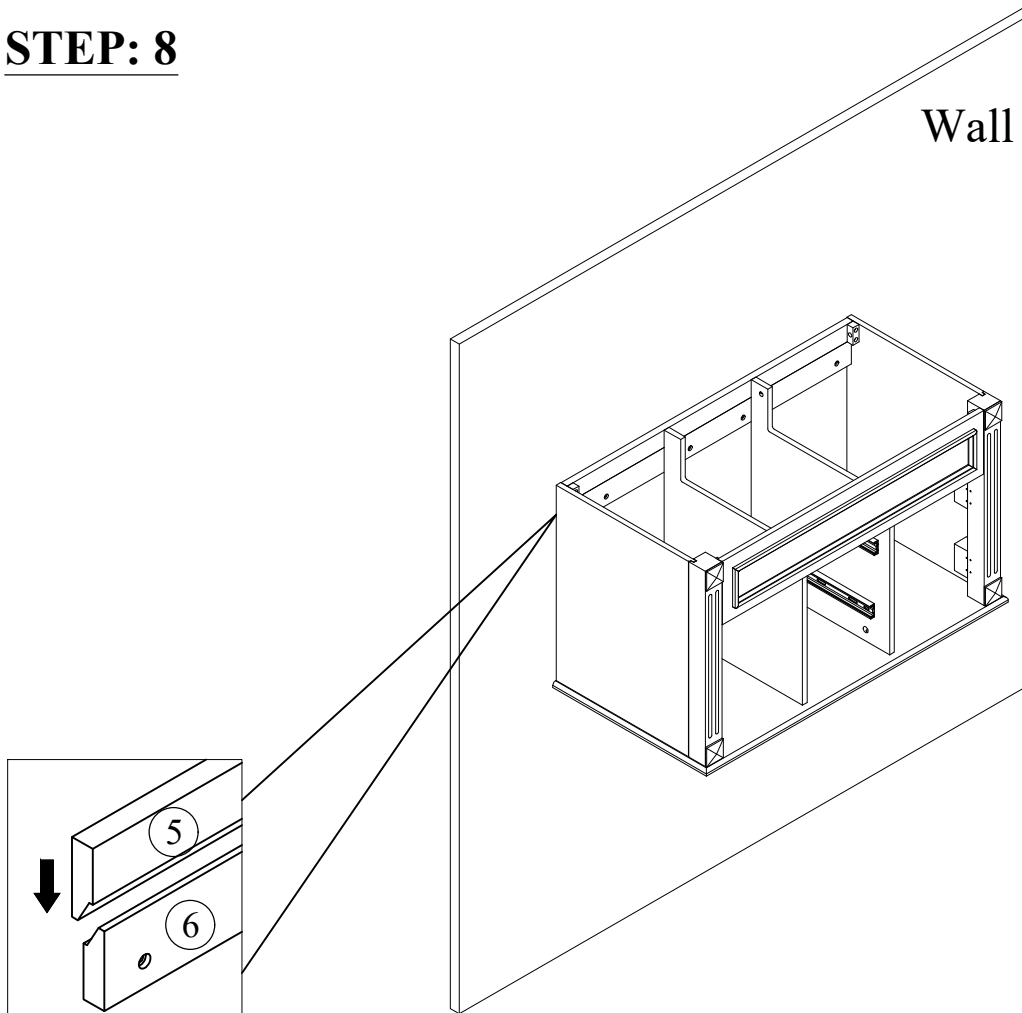STEP: 8






STEP: 9

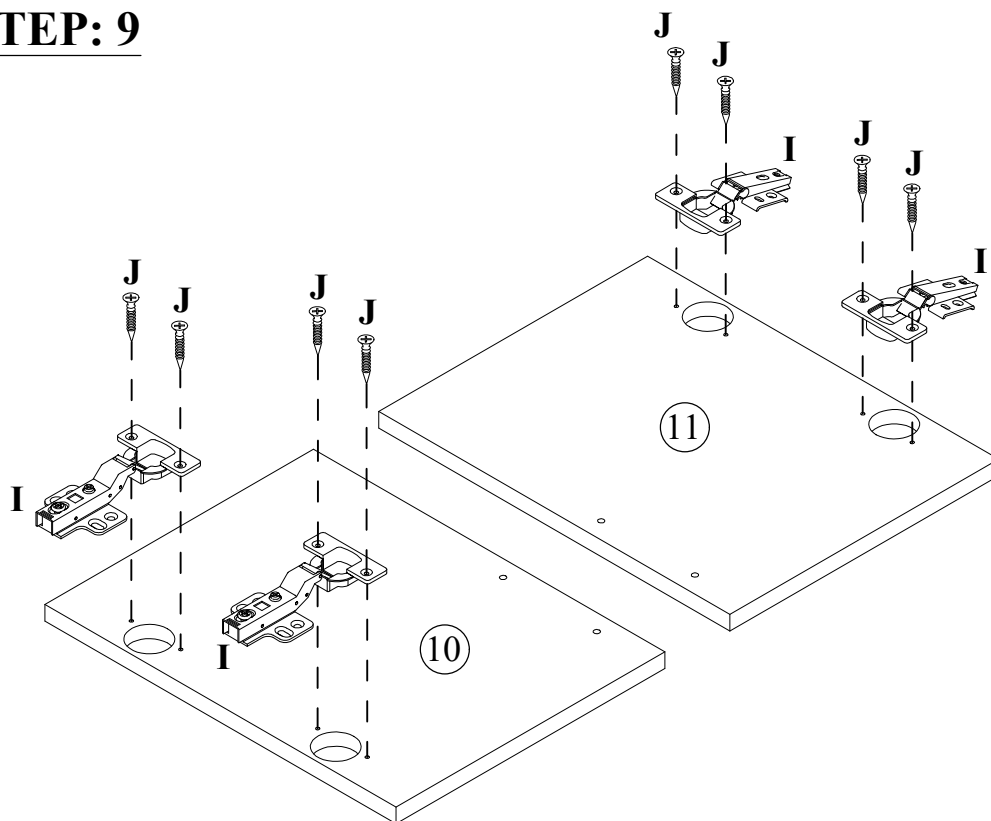


I	J
	
4PCS	8PCS

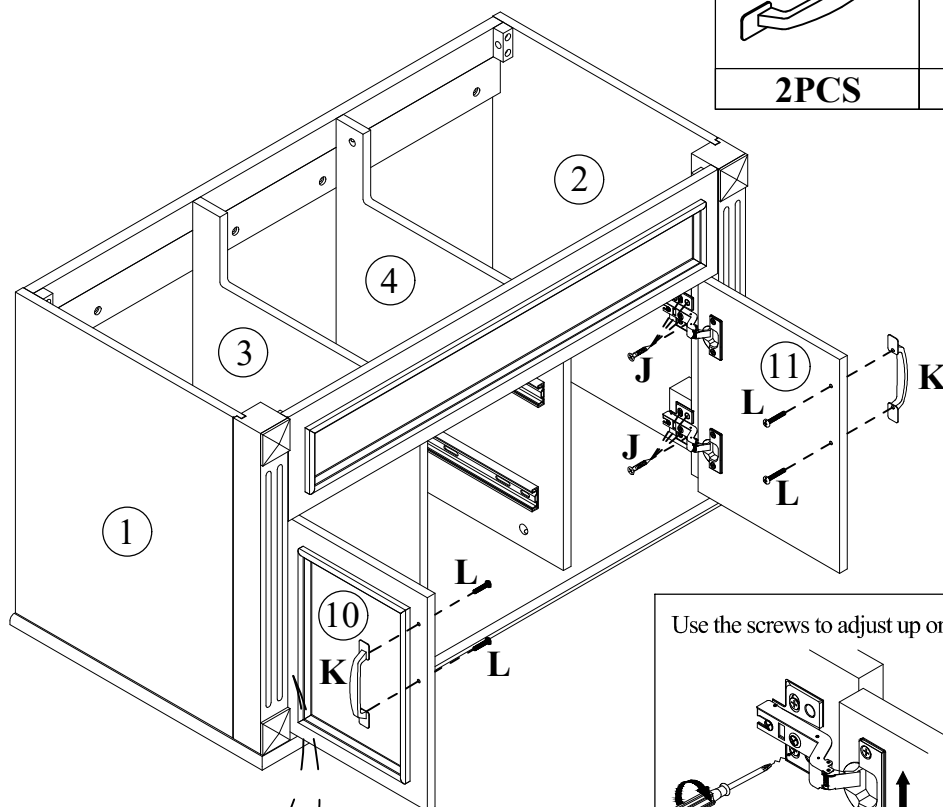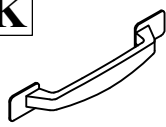
STEP: 10




K	L	J
		
2PCS	4PCS	16PCS

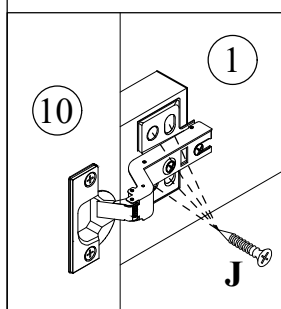



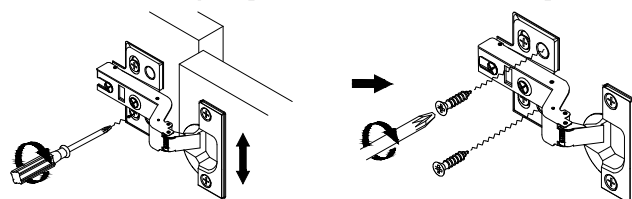
Use the screws to adjust up or down Use the screws to permanent




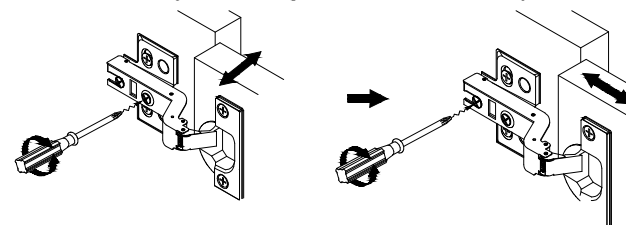Use the screws to adjust left or right Use the screws to adjust in or out







STEP: 11

M	N	O	P
			
1PC	1PC	4PCS	8PCS

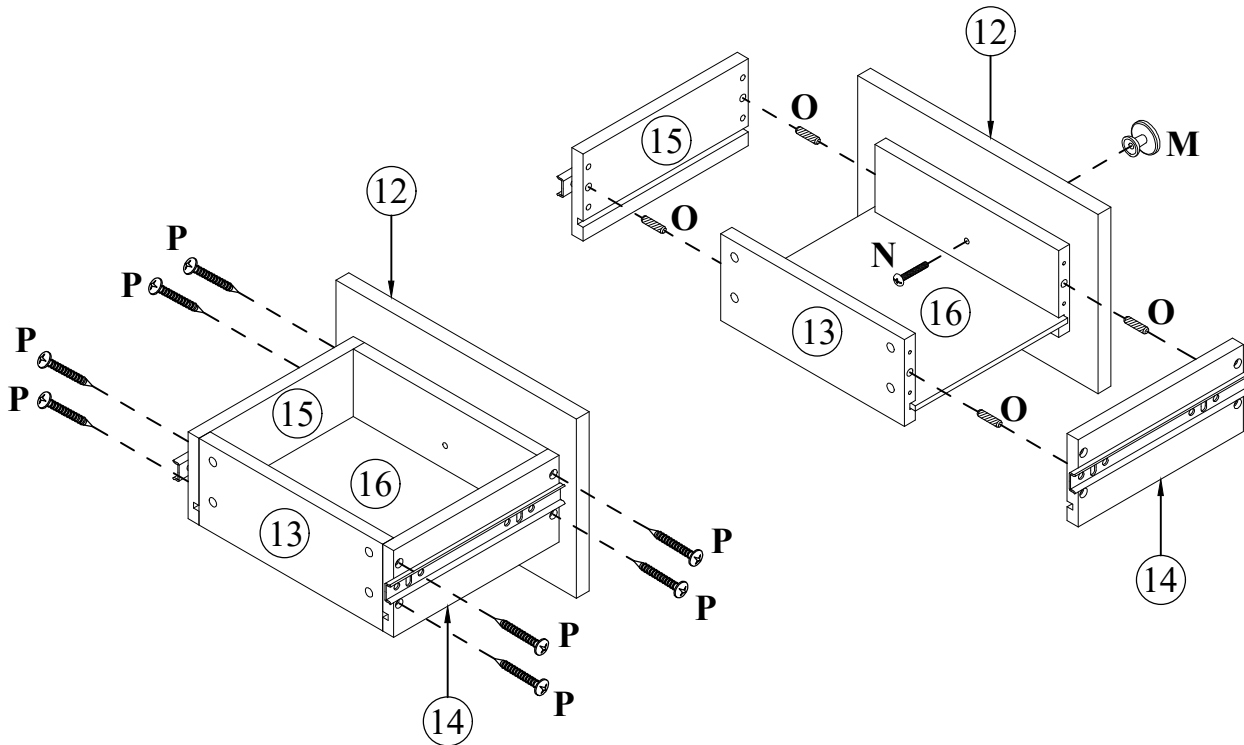


STEP: 12

M	N	O	P
			
1PC	1PC	4PCS	8PCS

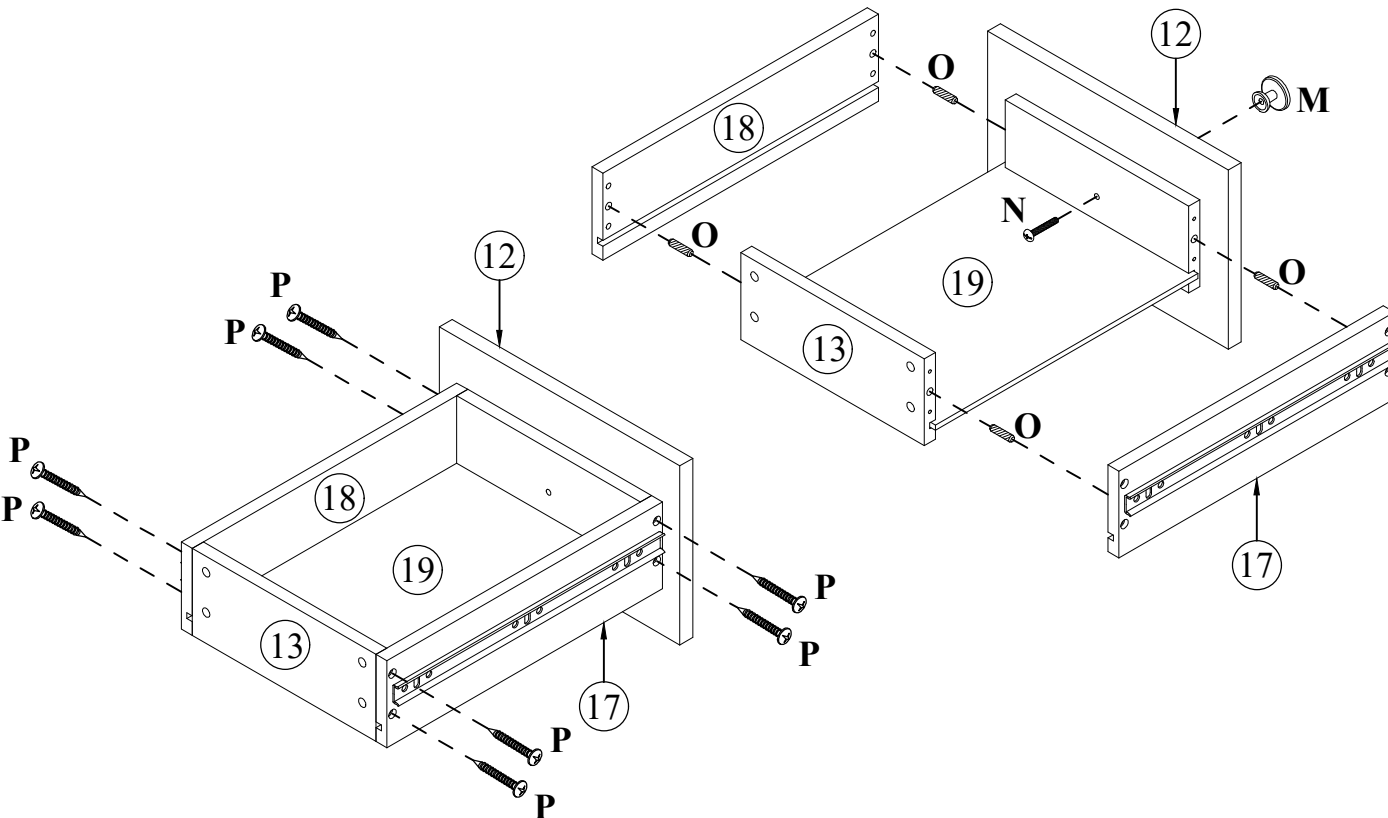


STEP: 13

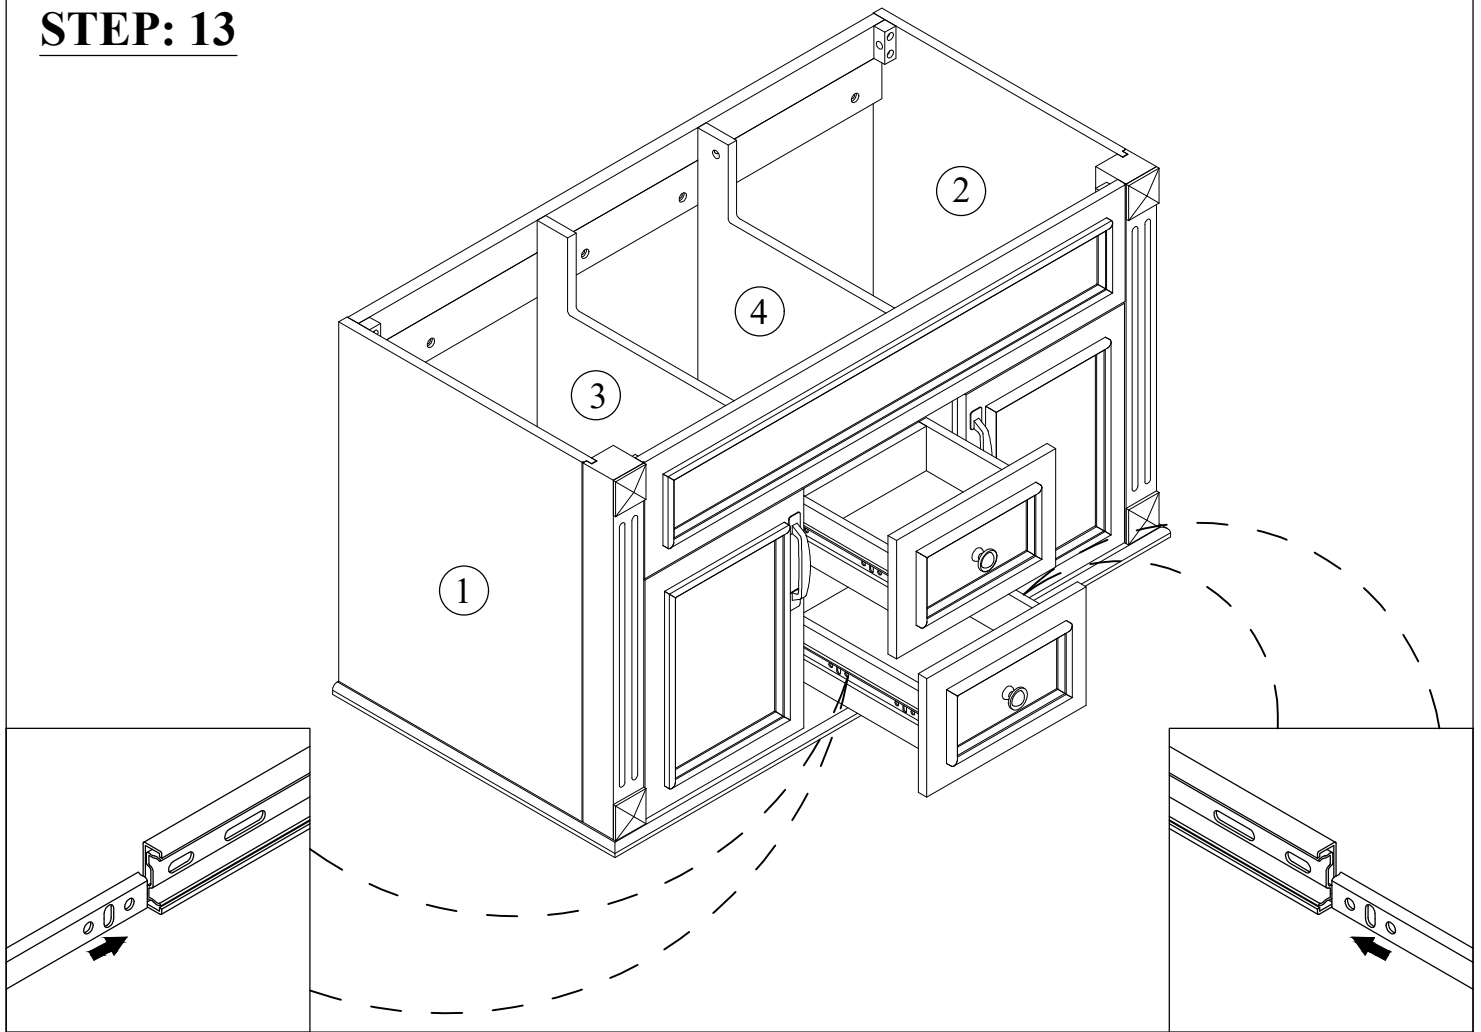

STEP: 14

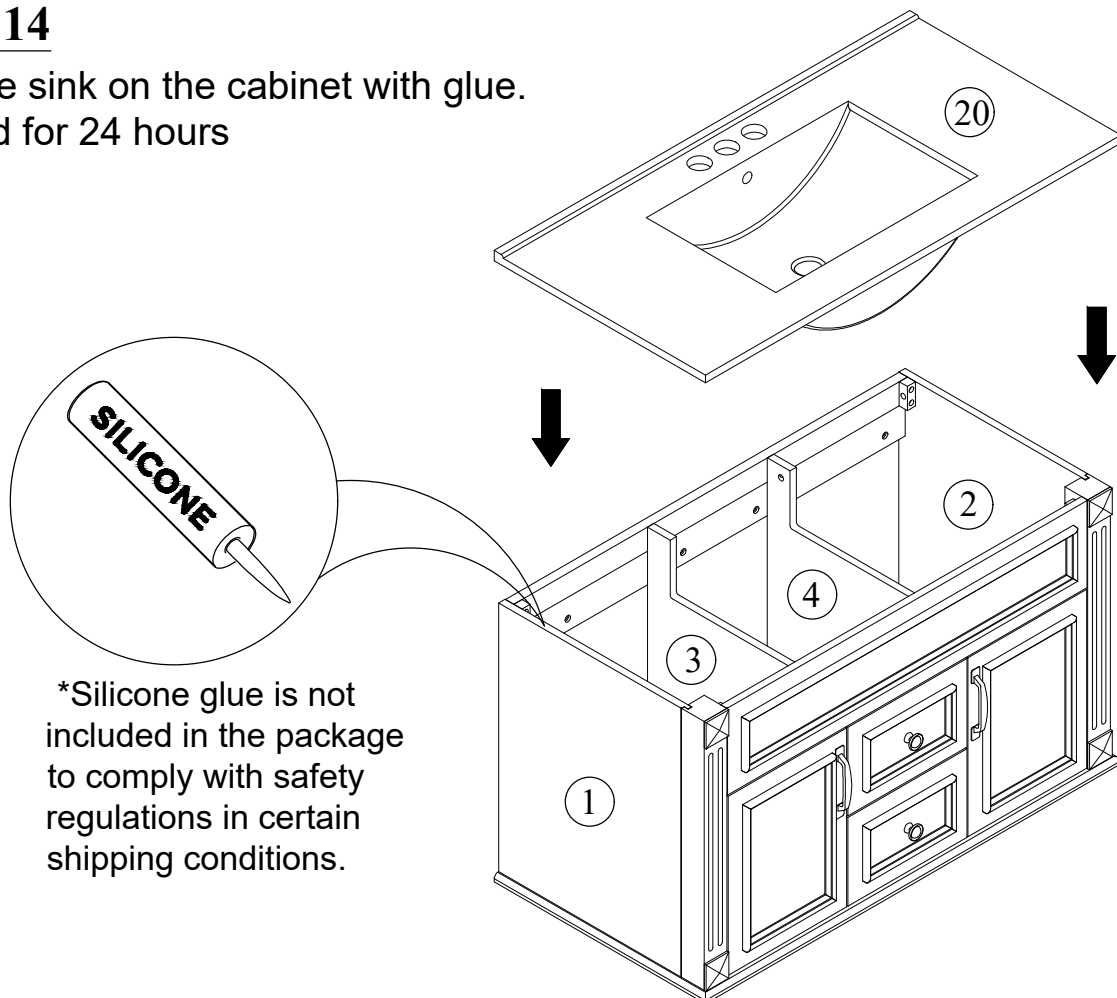Install the sink on the cabinet with glue.
Let stand for 24 hours



STEP: 15

