


ROTATING BOOKSHELF

ASSEMBLY INSTRUCTION

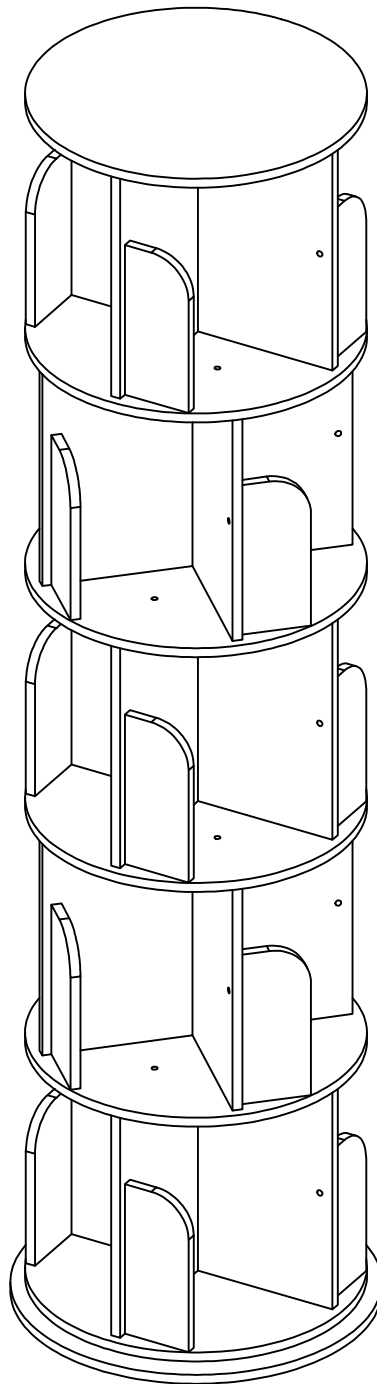

(Note:Two people are recommended to install, which will greatly improve your installation efficiency.)

Thank you for purchasing our products.


As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time,We will provide you with a 100% satisfactory solution.

Thanks again for your order. And please feel free to contact us in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.

TIPS:

1. Please read this instruction manual carefully, follow it step by step and pay attention to the notes, you will assemble it quickly, safely and correctly.
2. Two people are recommended to install,which will greatly improve your installation efficiency.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing

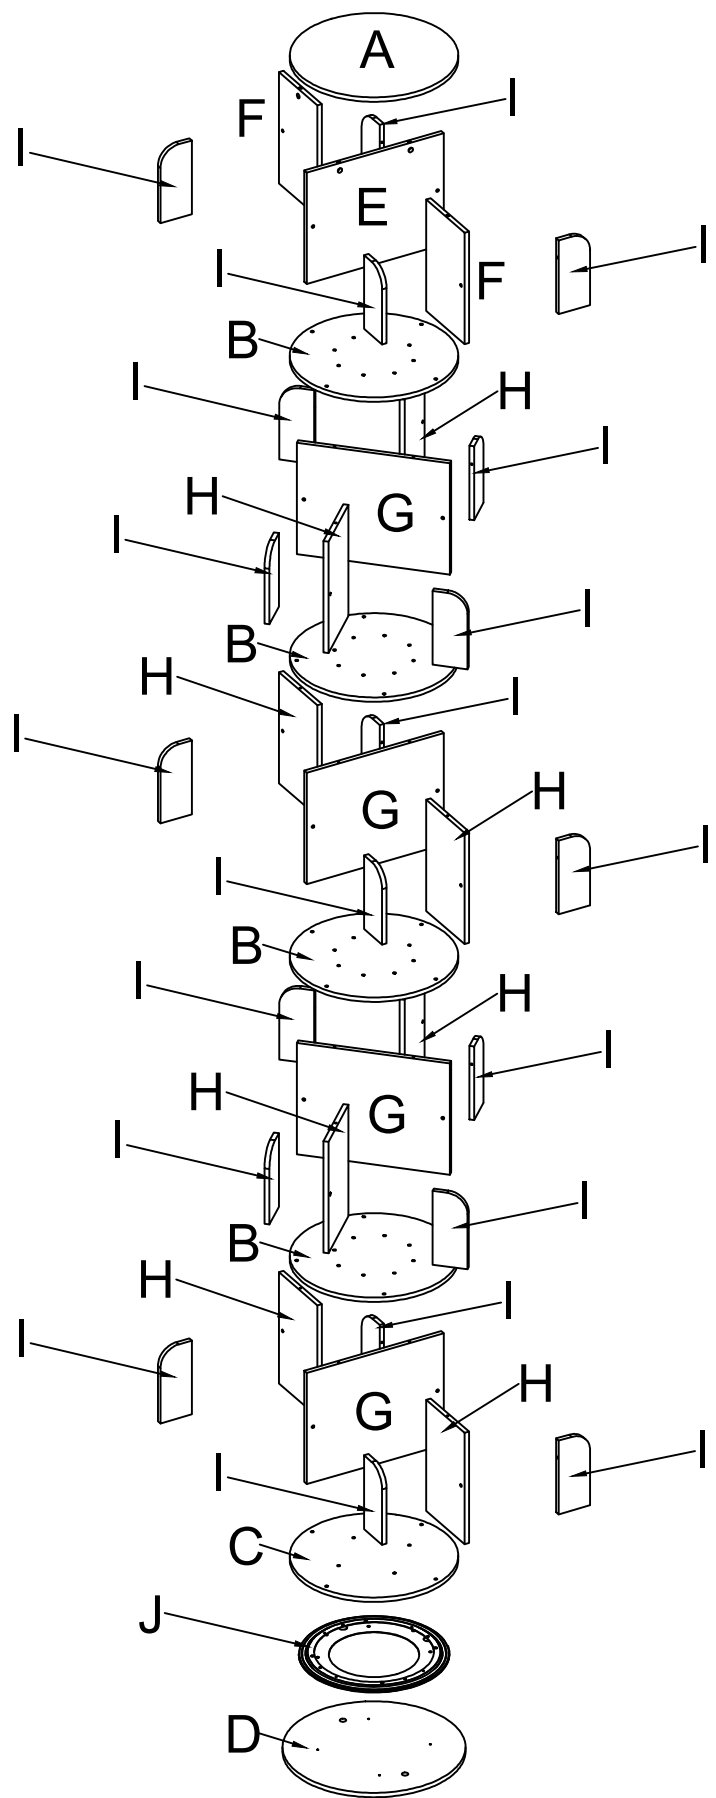


Using Camlocks

Connect the male camlock as directed in the assembly instructions using a screwdriver.


1

DO NOT OVER TIGHTEN

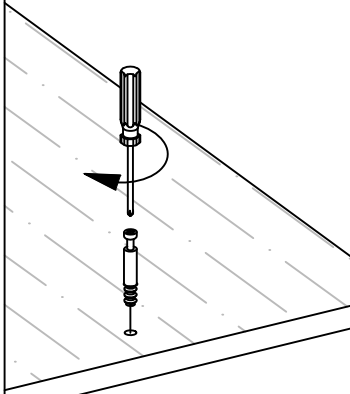

Push the male camlock into the entry hole.


2

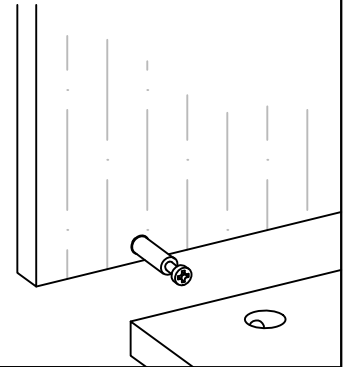

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

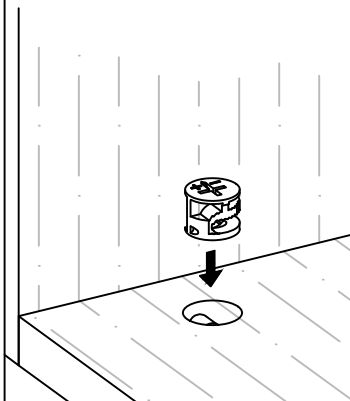













Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

4

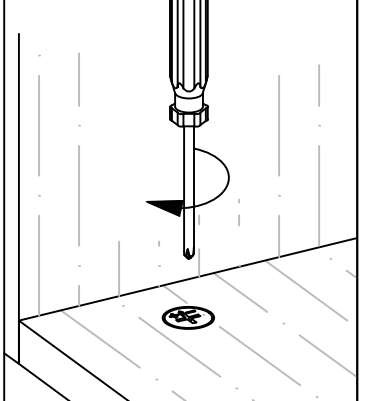

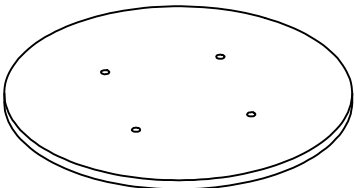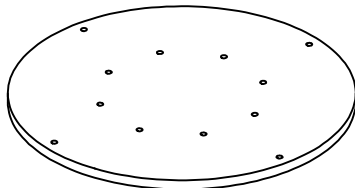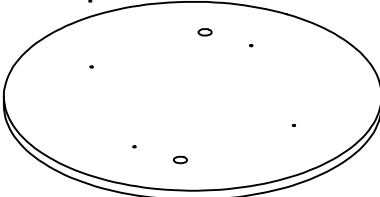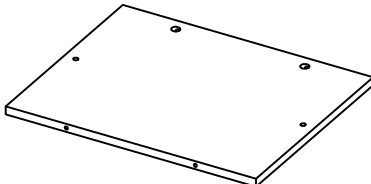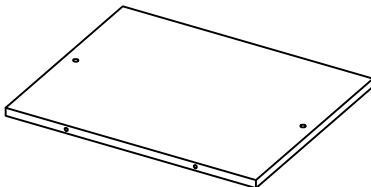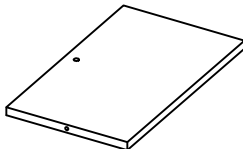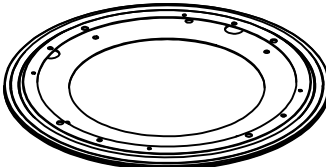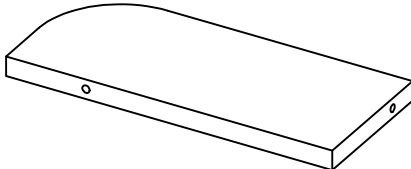
PART LIST			
A x 1pc		B x 4pcs	
			
D x 1pc		E x 1pc	
			
G x 4pcs		H x 8pcs	
			
J x 1pc		I x 20pcs	
			
HARDWARE LIST			
①		②	
			
M6x28	4 pcs	Ø12	4 pcs
③		④	
			
M4x12	8 pcs	M6x40	76 pcs
⑤		⑥	
			
M4	1 pc	1 pc	

STEP 1

④  x20


Please install all Panel #F and Panel #I follow the directions as shown below.

Total : 2 SET

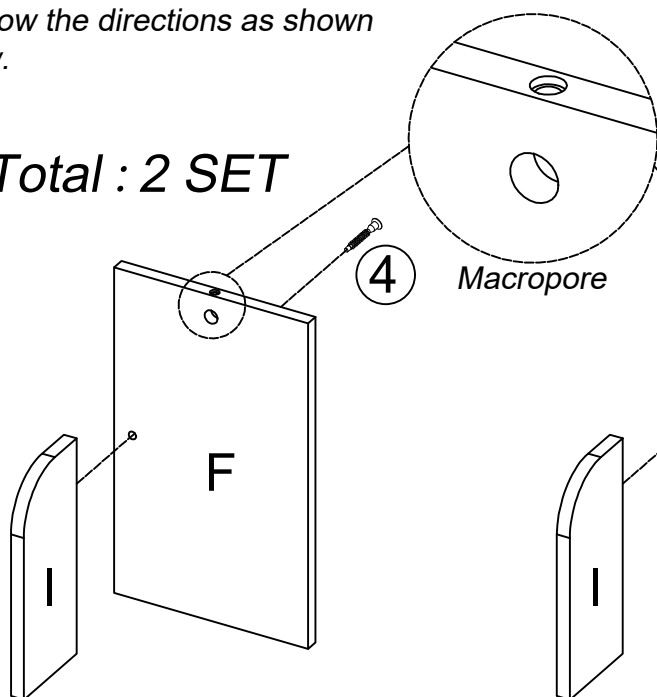


Please install all Panel #E and Panel #I follow the directions as shown below.

Total : 1 SET

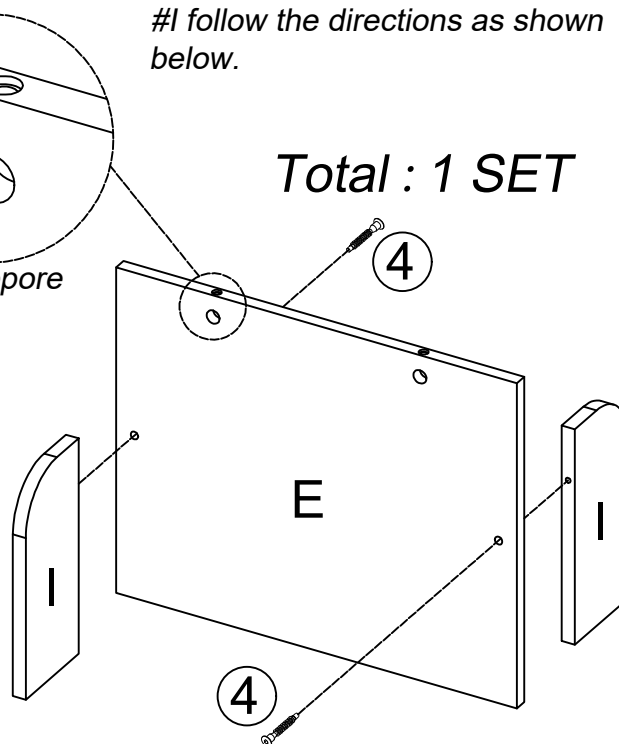


Please install all Panel #H and Panel #I follow the directions as shown below.

Total : 8 SETS

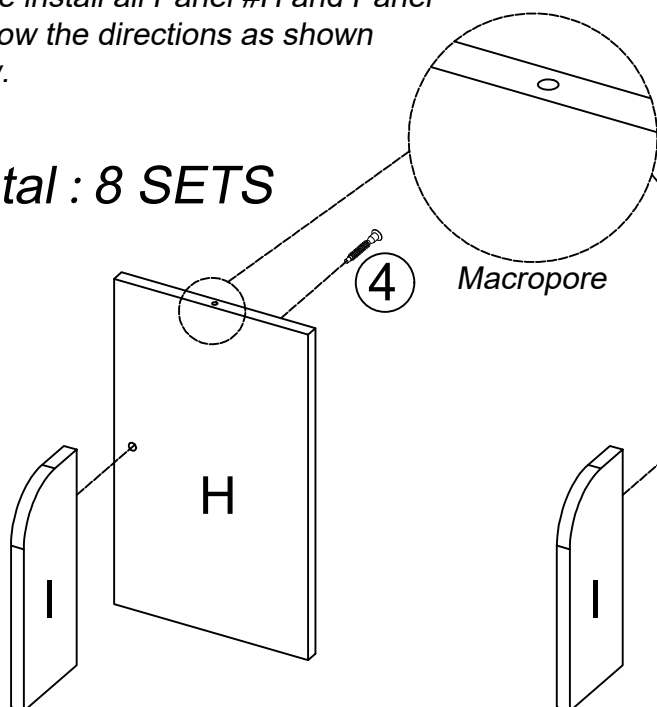


Please install all Panel #G and Panel #I follow the directions as shown below.

Total : 4 SETS

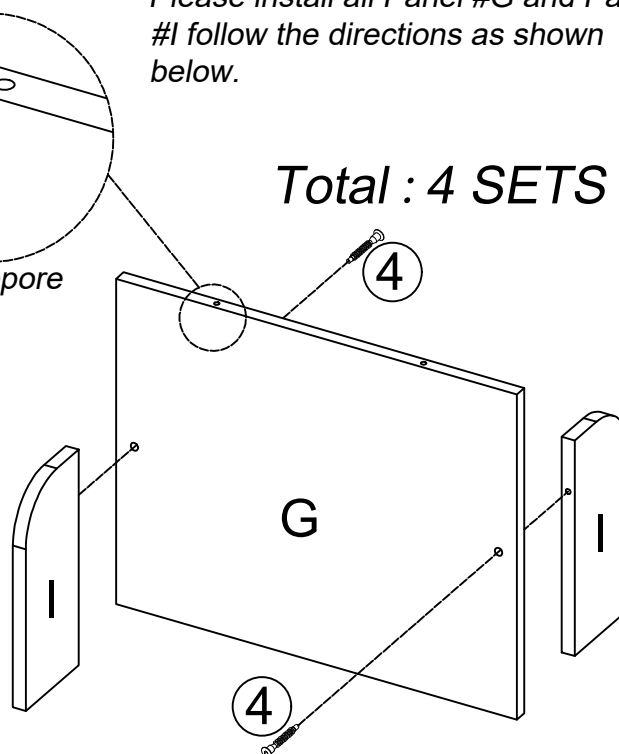


STEP 2

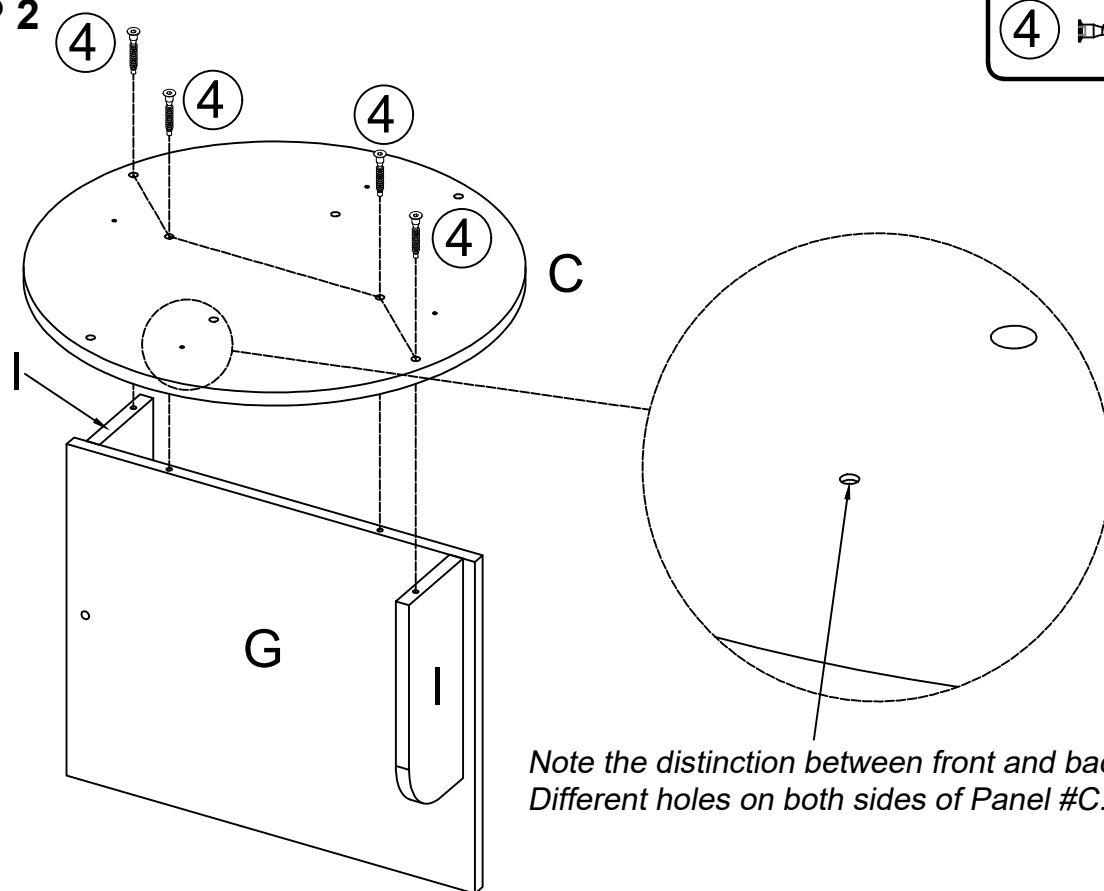



4  x4

STEP 3

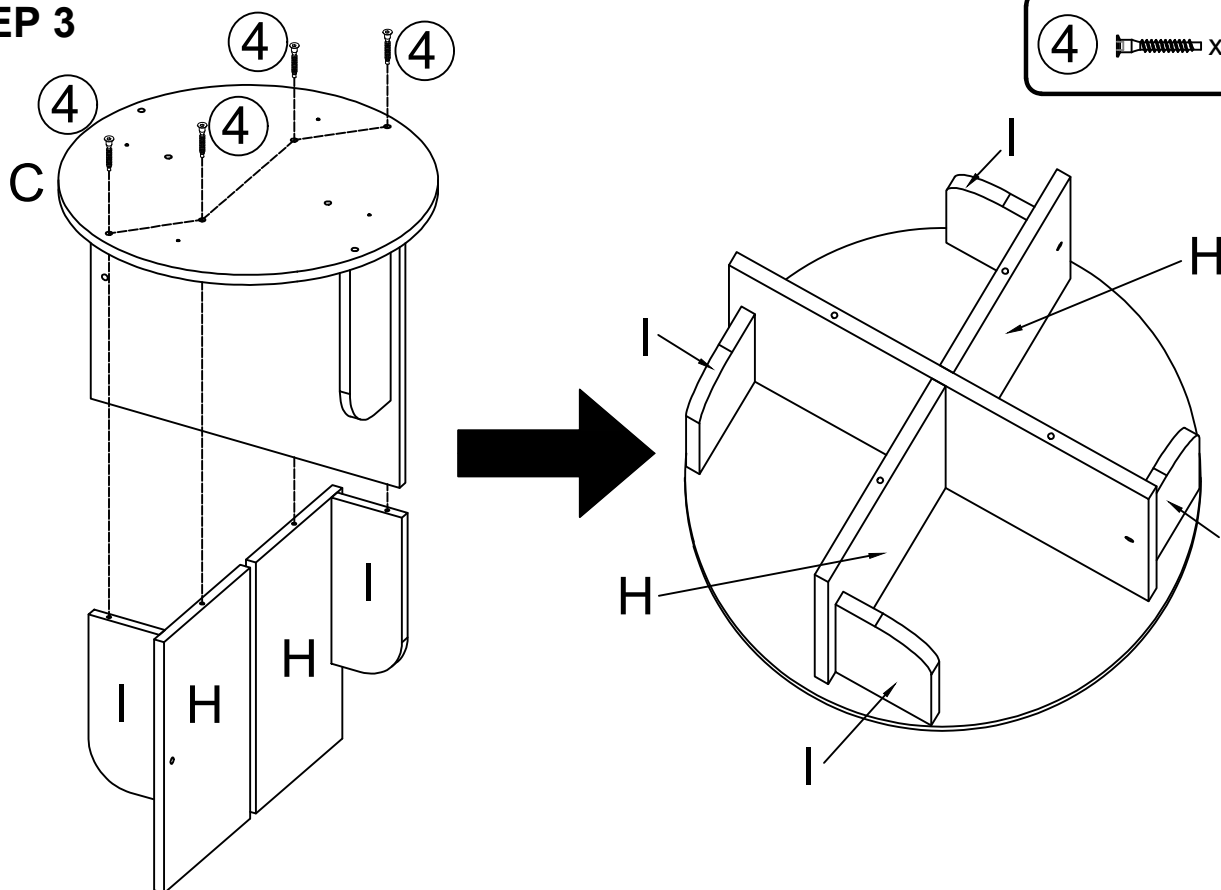


4  x4

STEP 4

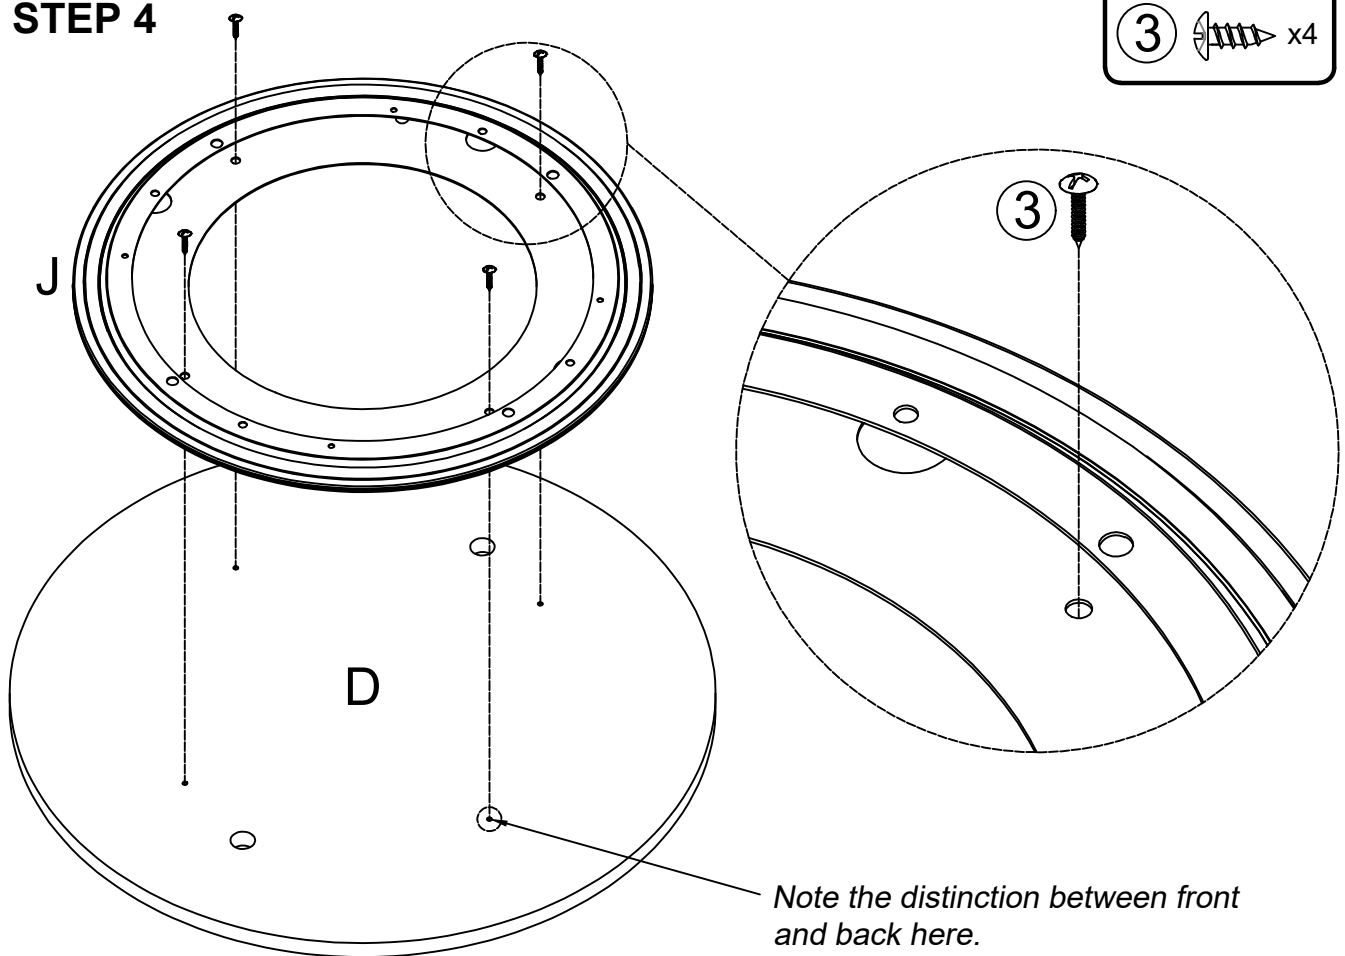


Move over it.

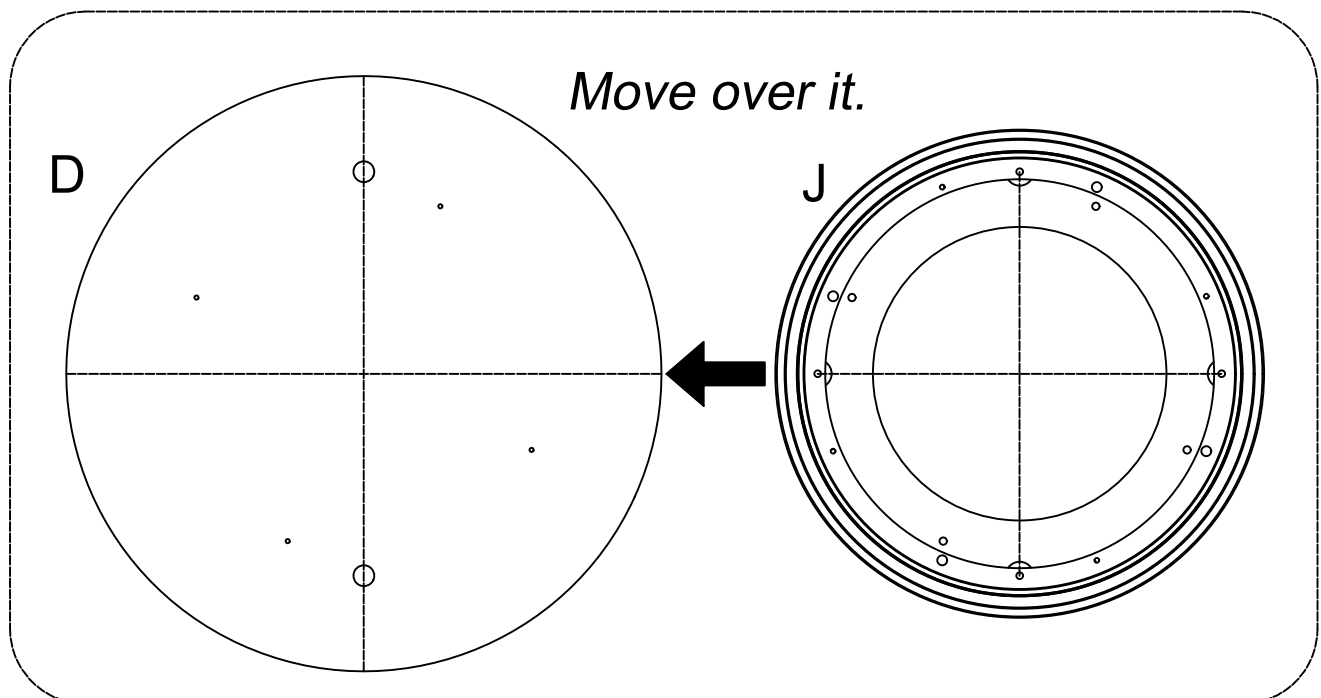


This middle hole coincides with the big hole before covering.

STEP 5



Rotary table #J facing down,
connected to Panel #C.


After 90° rotation, continue to install
the other two screws.

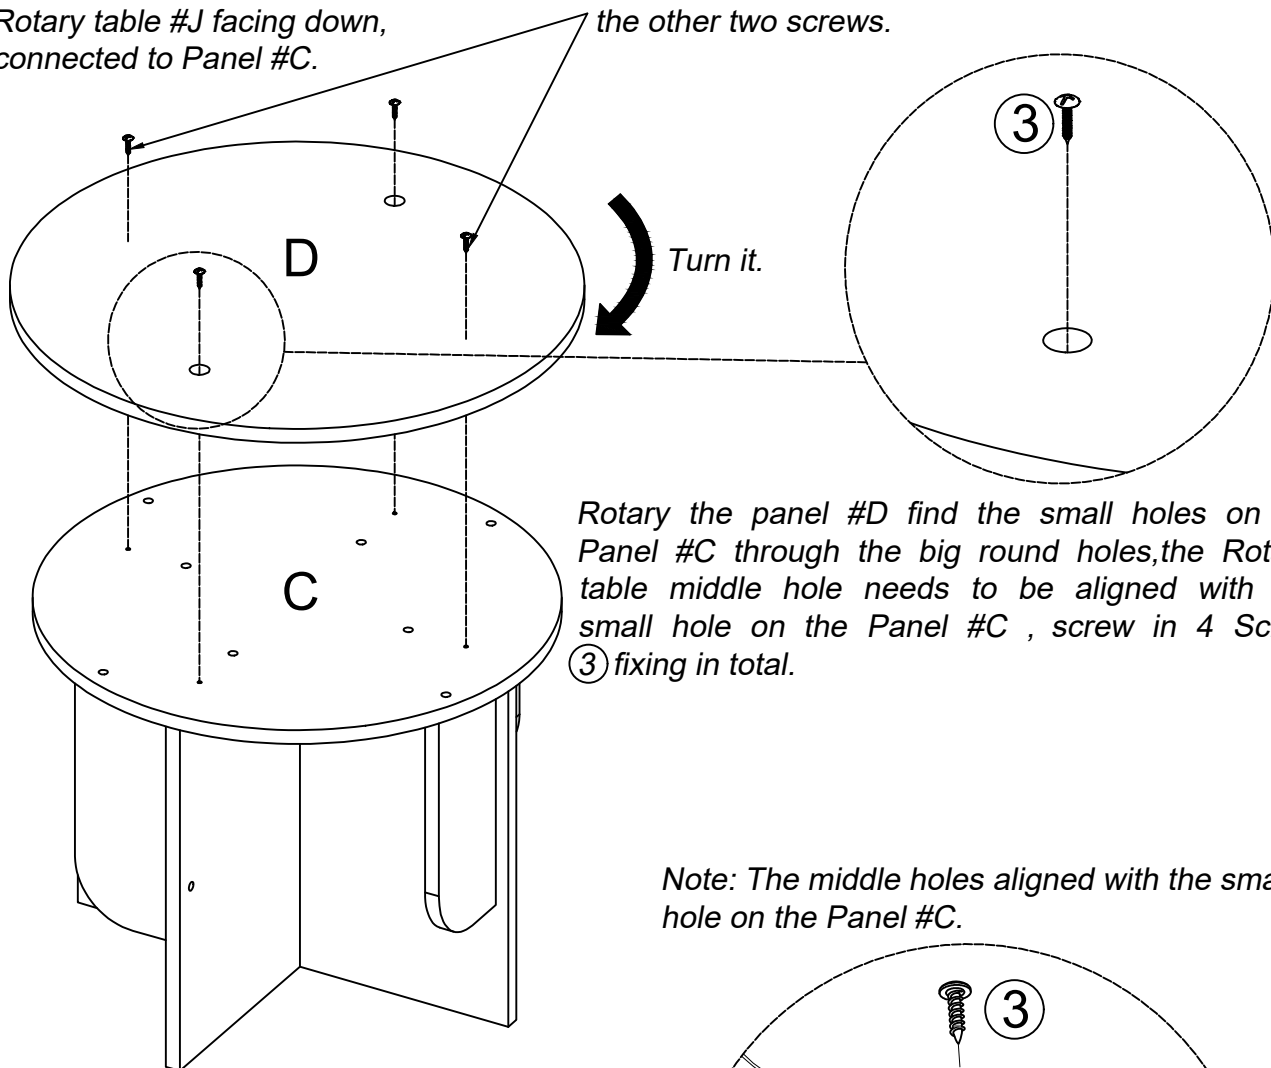

Rotary the panel #D find the small holes on the
Panel #C through the big round holes, the Rotary
table middle hole needs to be aligned with the
small hole on the Panel #C , screw in 4 Screw
③ fixing in total.



Note: The middle holes aligned with the small
hole on the Panel #C.

Install the middle hole with Panel #C.


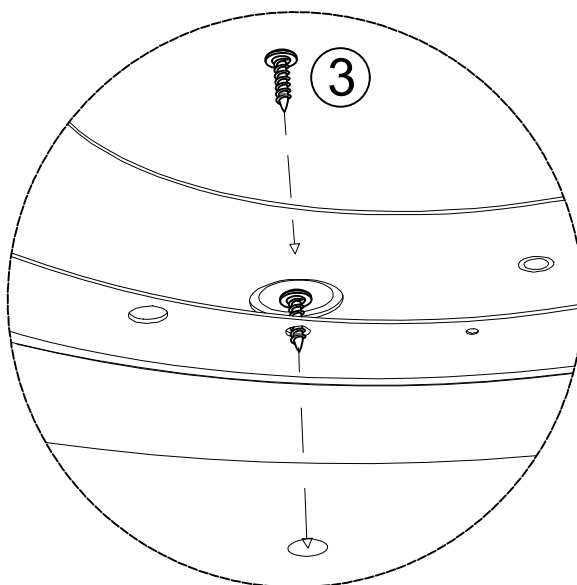


Note: Please use a magnetic scewdriver
when installing Srew ③.


STEP 6

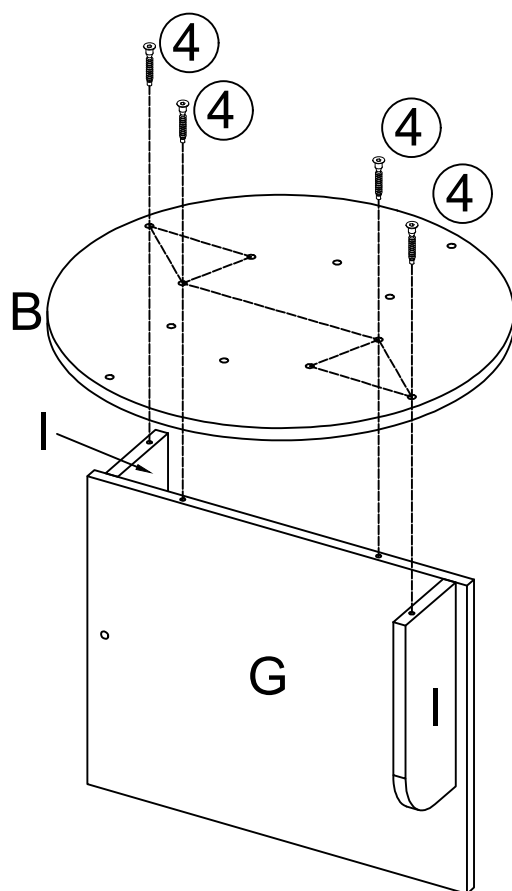

STEP 7

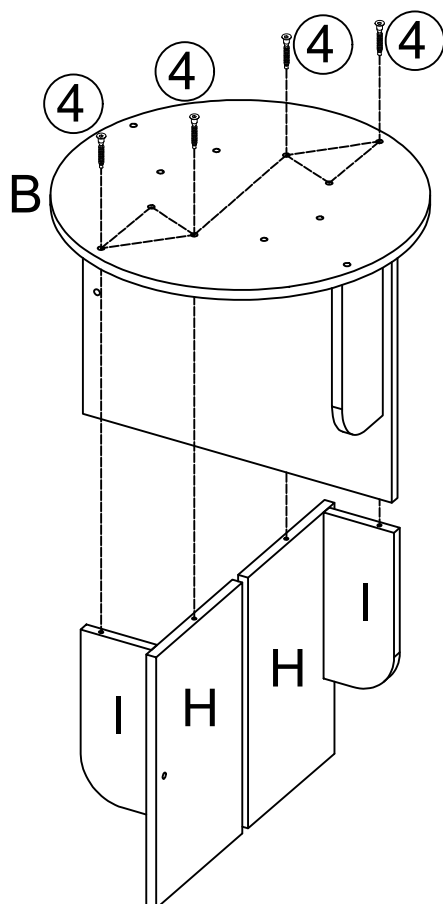


STEP 8

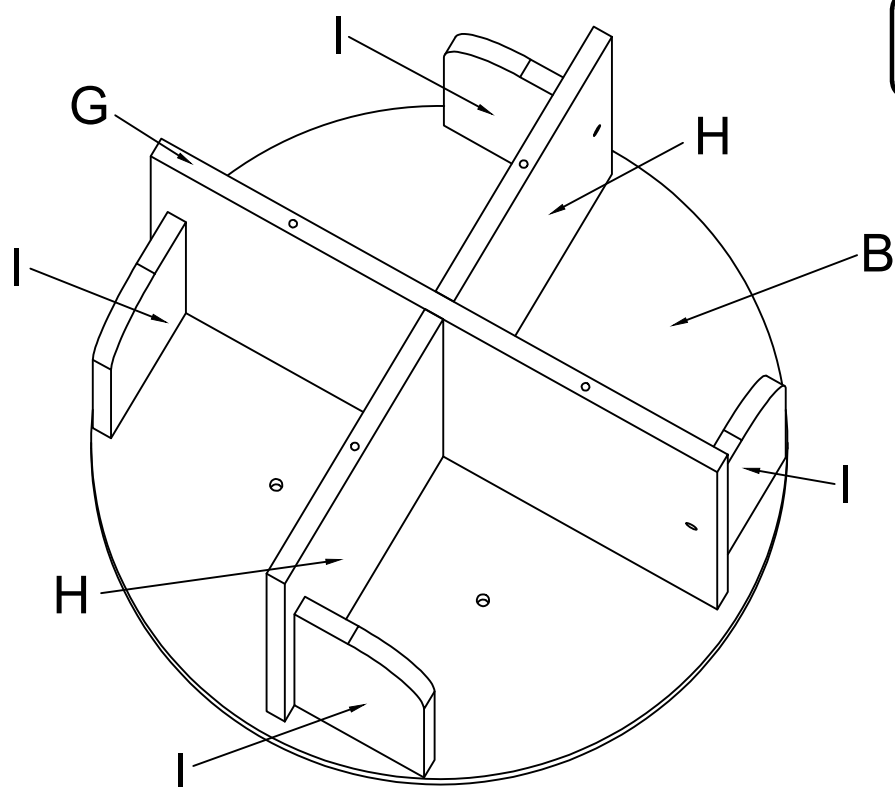

4  x16





Repeat Steps 6 to Steps 7 you'll get two this components.

STEP 9




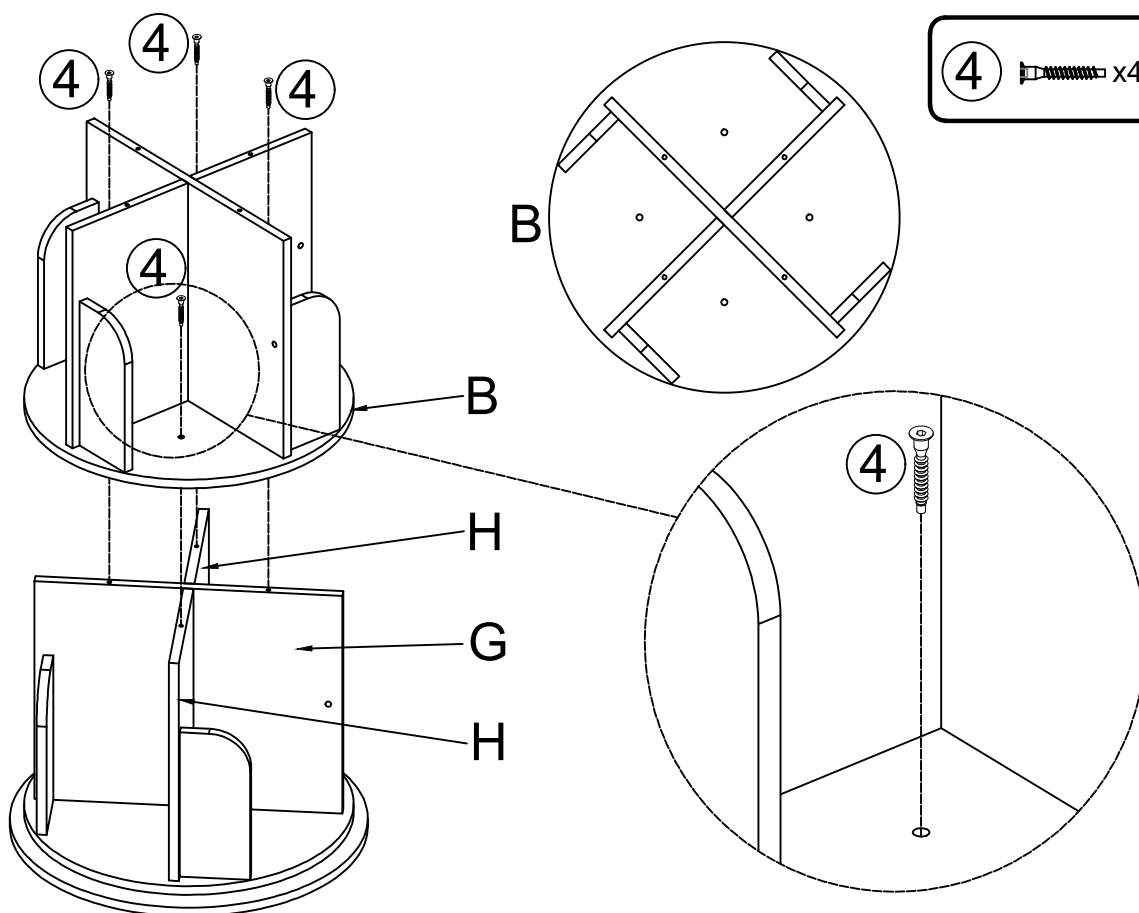


4  x4



STEP 10

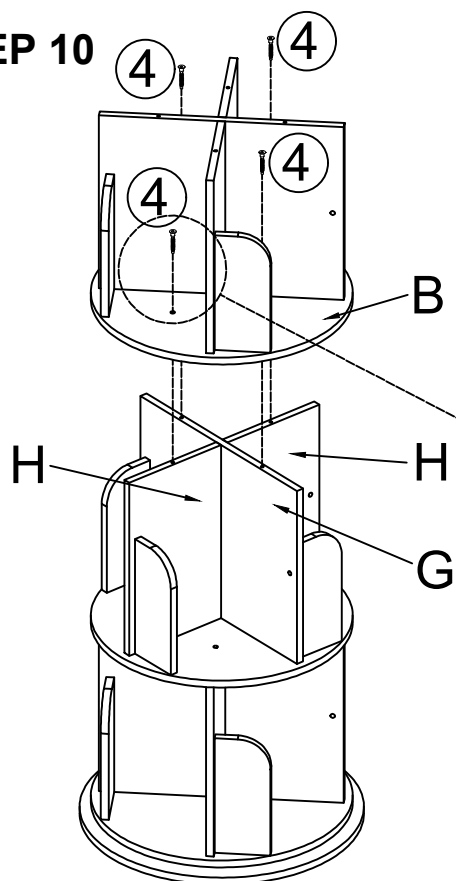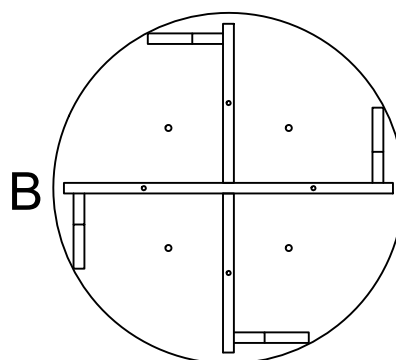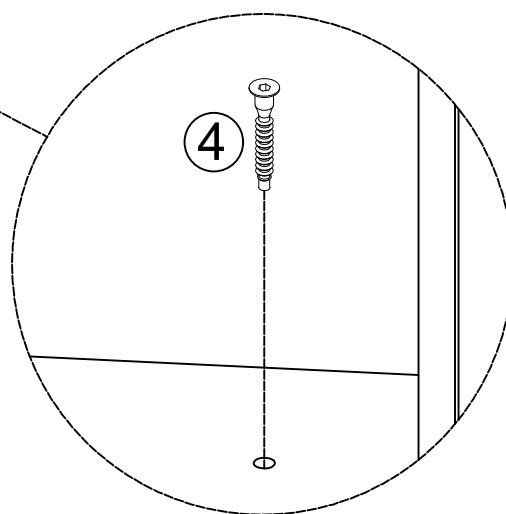



STEP 11

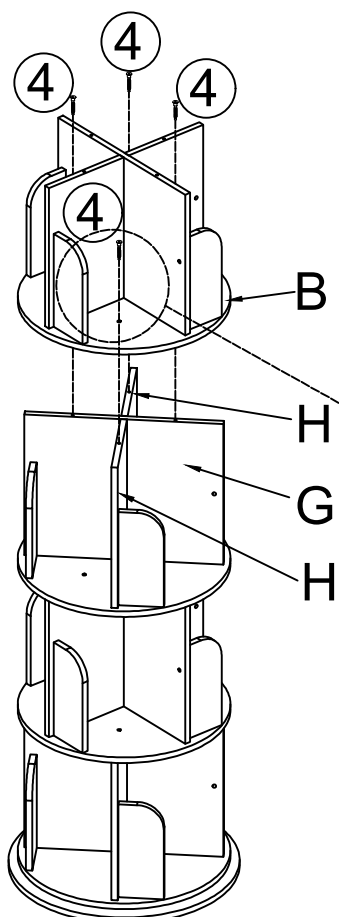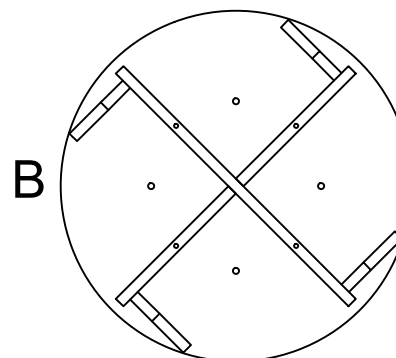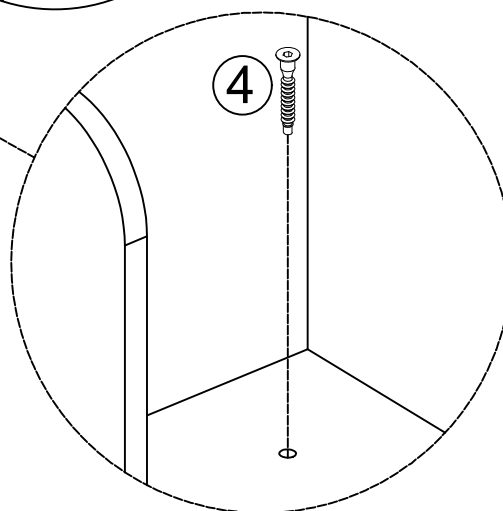





STEP 12

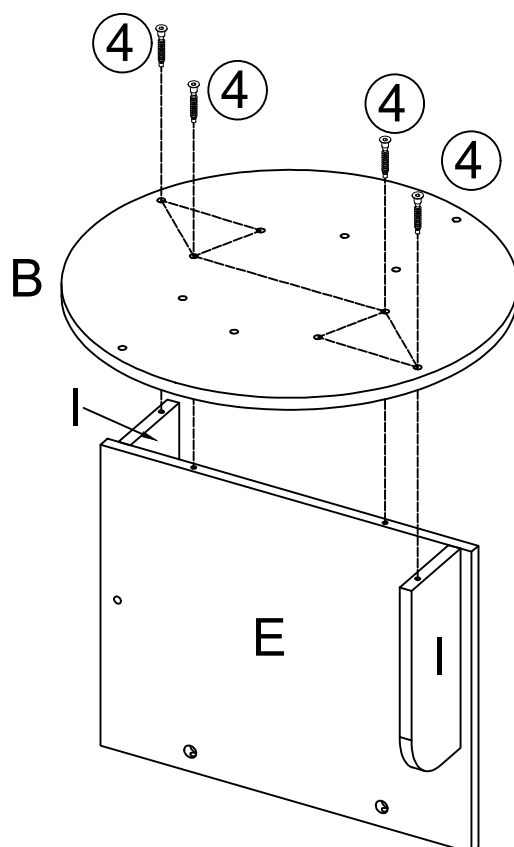



STEP 13

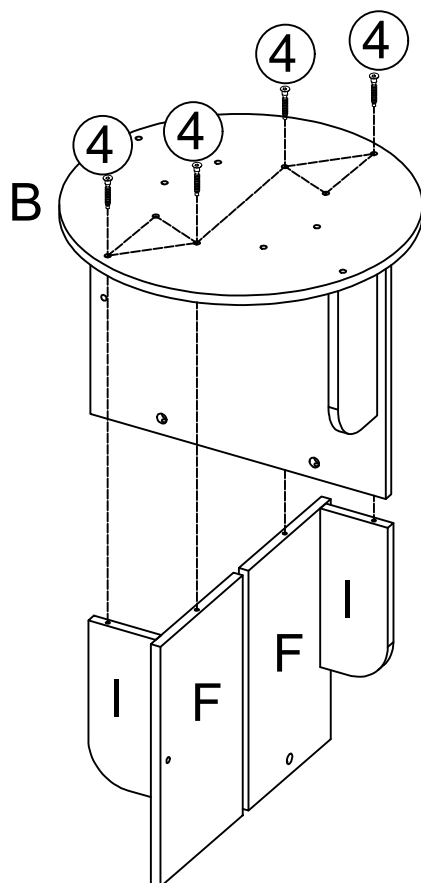

STEP 14

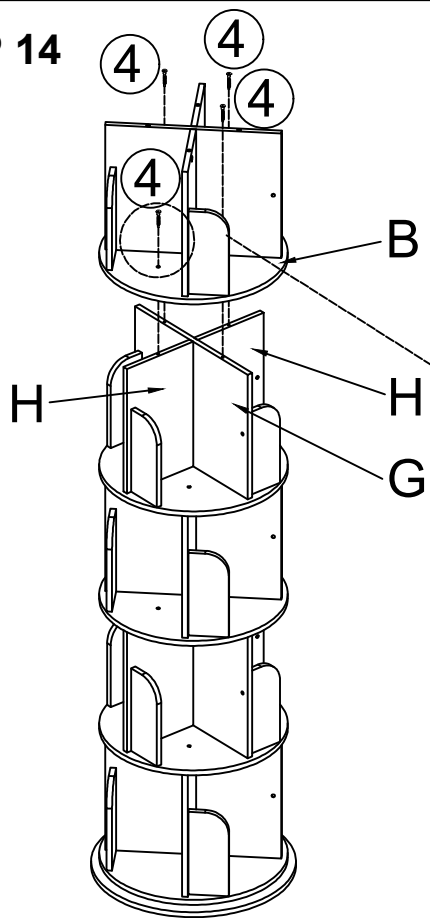
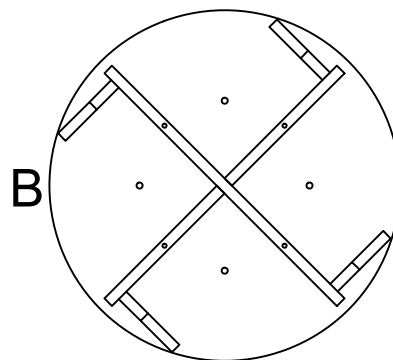
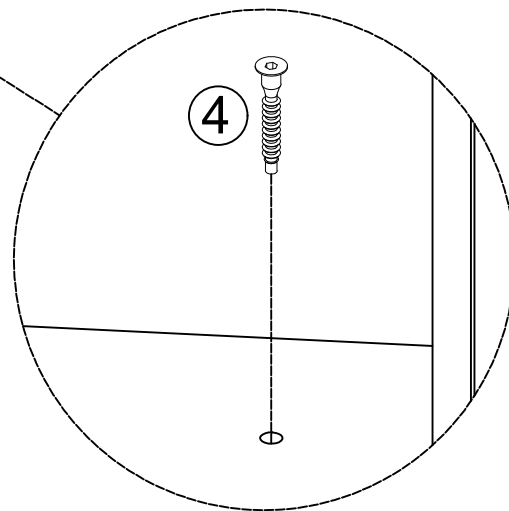


STEP 15

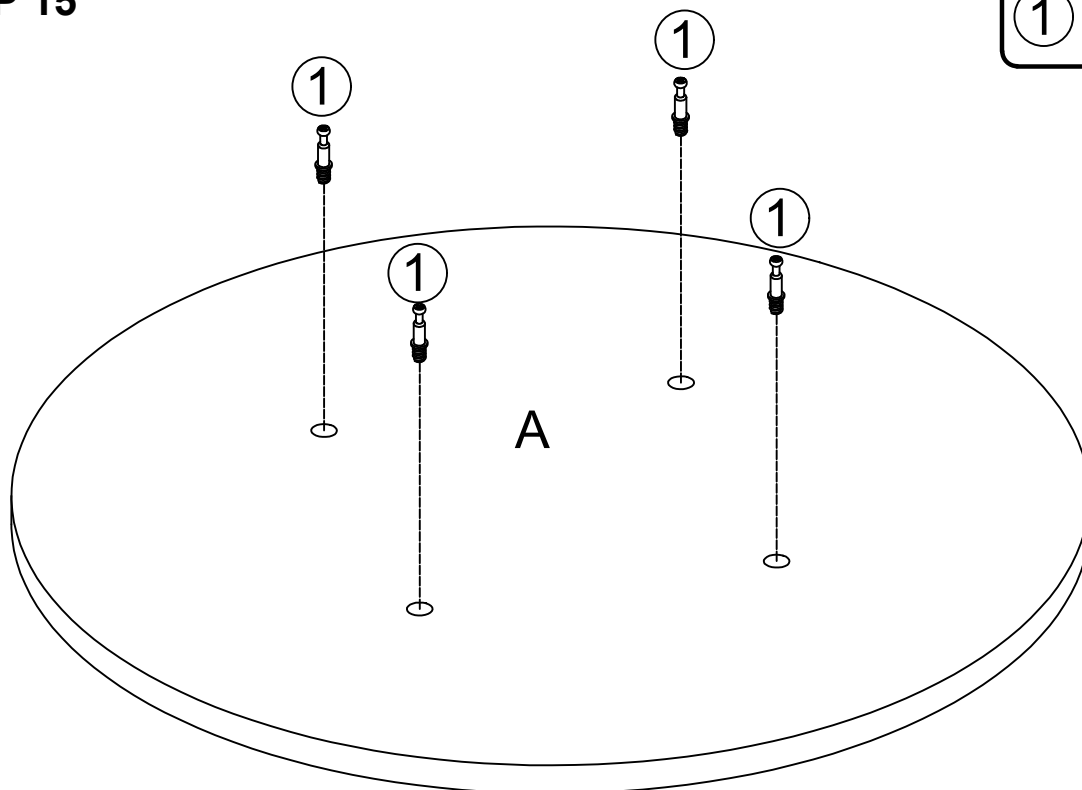

STEP 16

②  x4

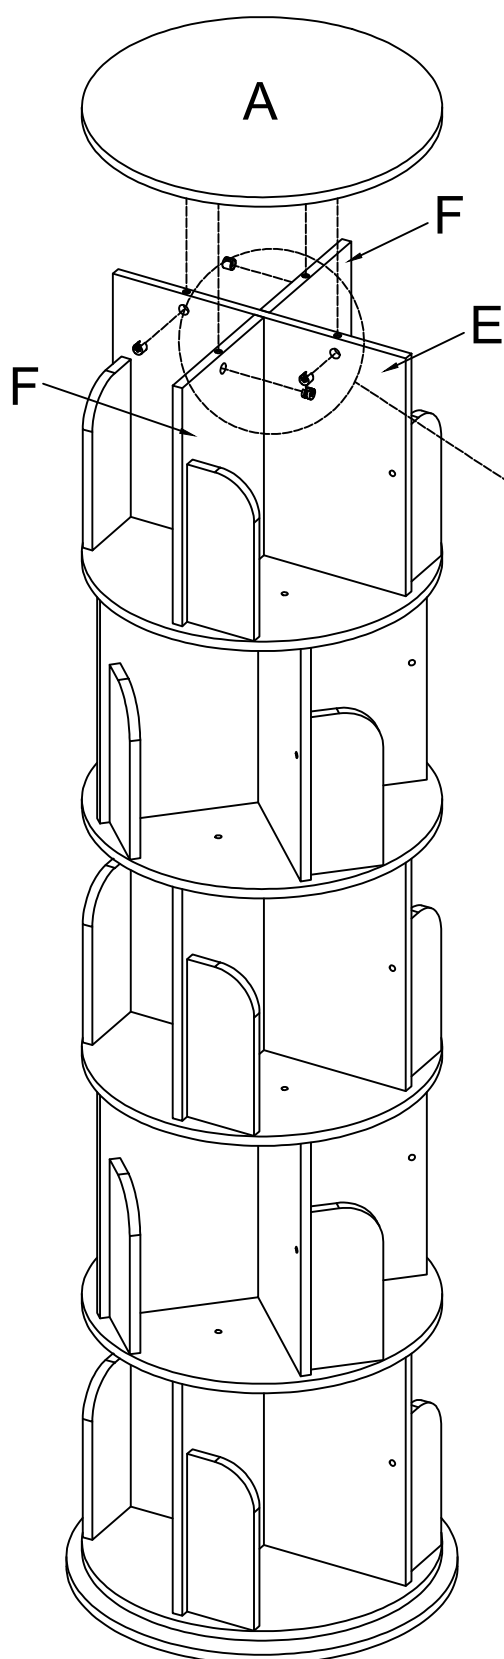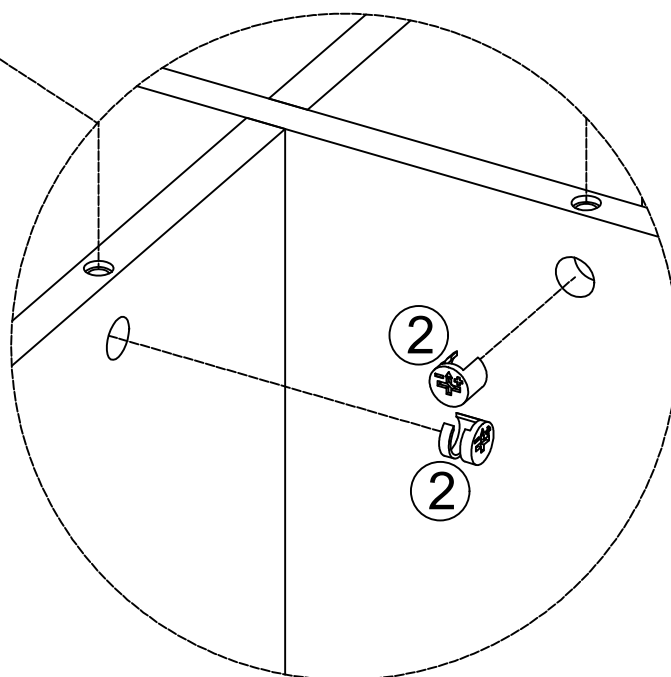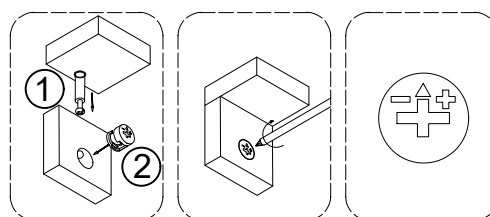

Cam Lock Fastening System

Please point the arrow upward to the mounting hole when installing Part ②.