
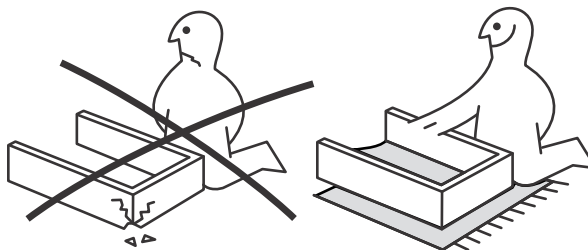
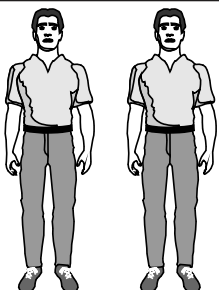
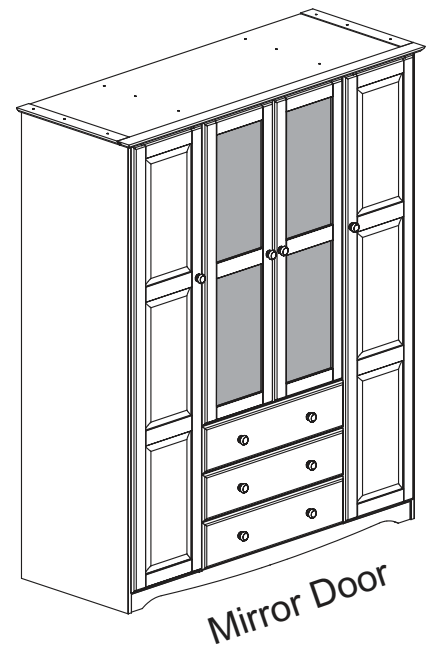


ASSEMBLY GUIDE


FAMILY 4-DOOR WARDROBE

Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

SKU S-5961D - Raised Panel Doors / SKU S-5961M - Mirrored Doors - White
SKU S-5963D - Raised Panel Doors / SKU S-5963M - Mirrored Doors - Mocha
SKU S-5966D - Raised Panel Doors / SKU S-5966M - Mirrored Doors - Java

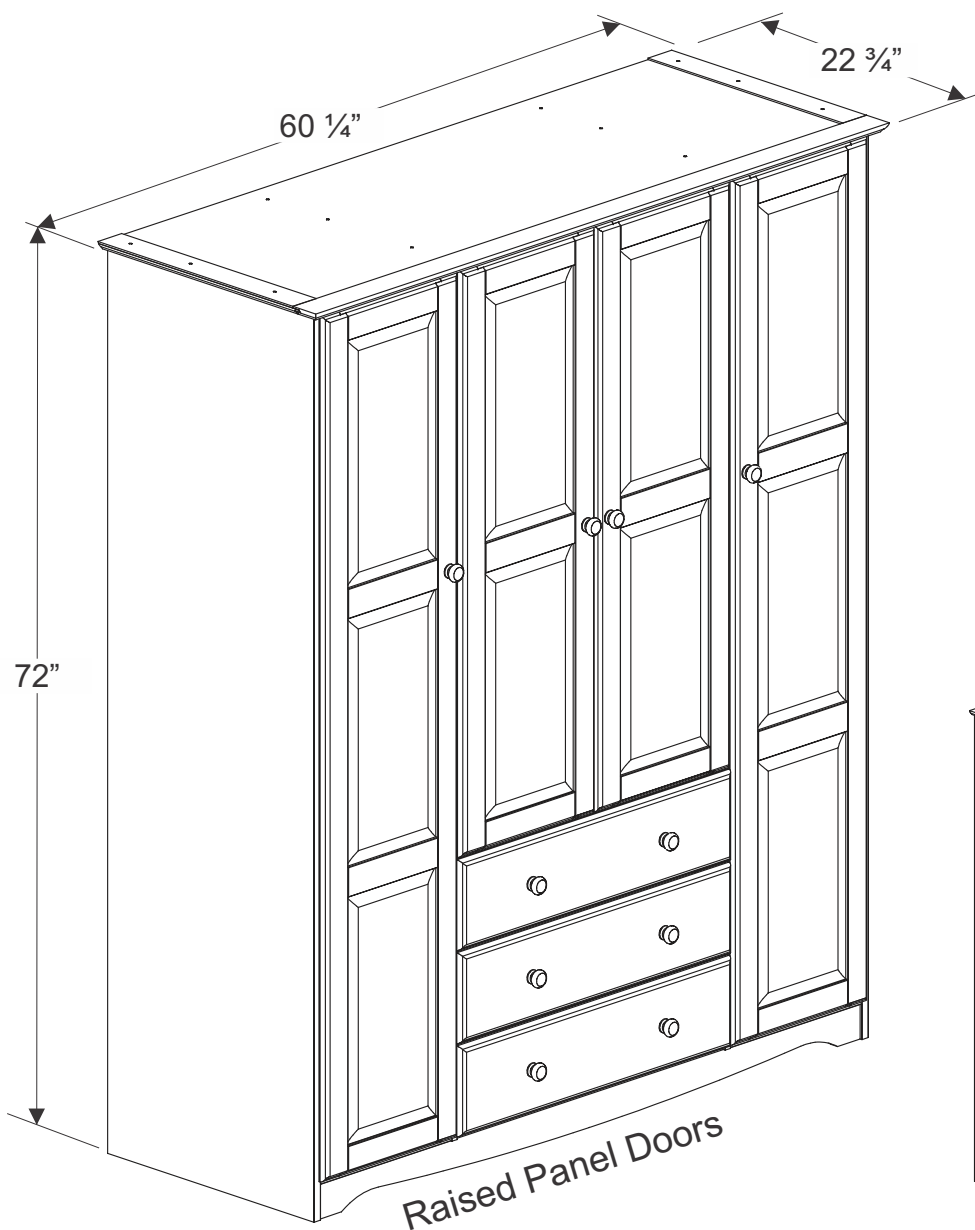

REV - 07/2025

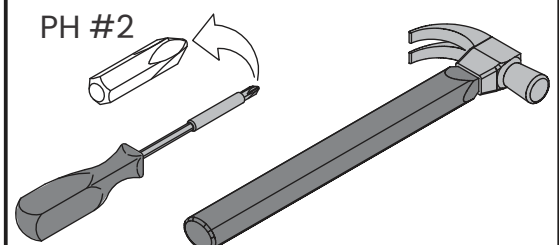

page 2/25


Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsinc.com for assistance.









Assembly Tips


- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

PARTS LAYOUT

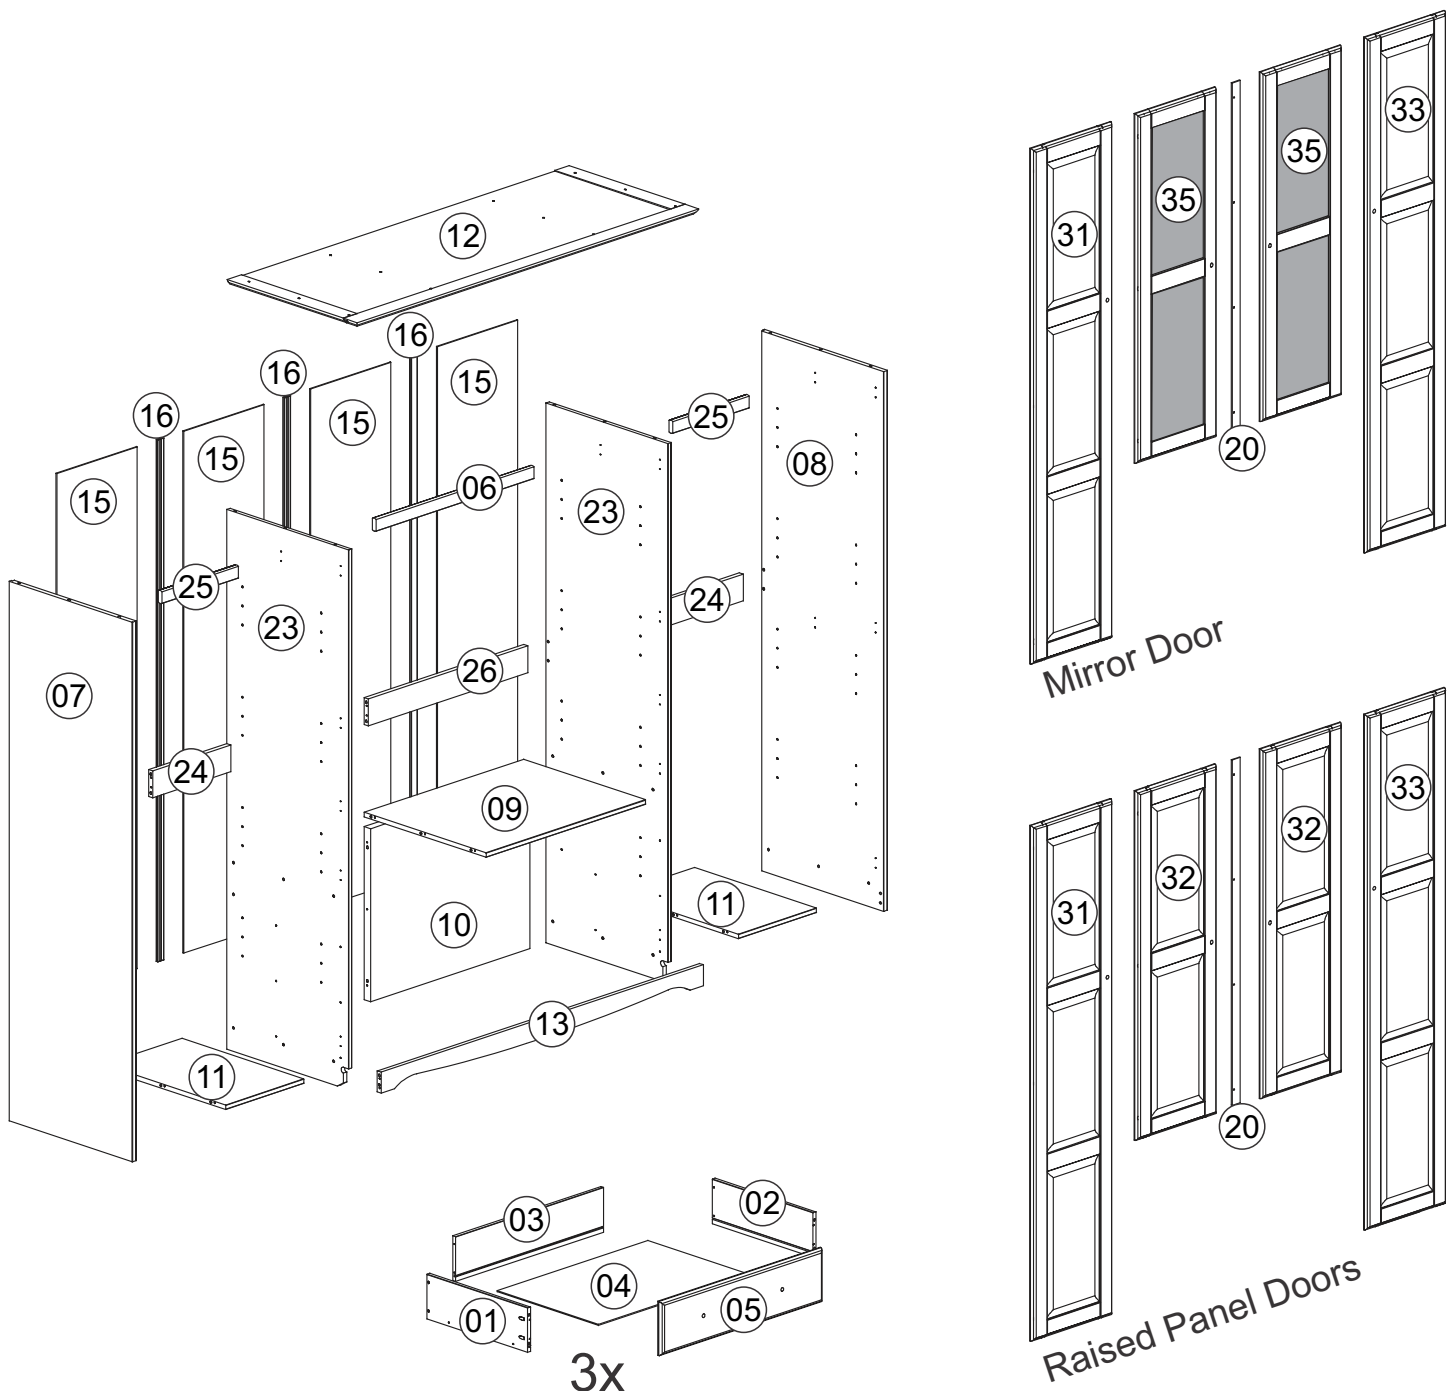

Screws Are Illustrated at Actual Size for Accurate Reference

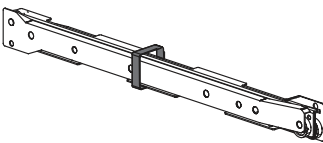A1	 4,0x30	64+4
A4	 3,5x14	18+1
A16	 4,0x40	12+1
A41	 4,0x30	10+1
A44	 3,5x14	66+4
B31	 6,0x10	24+2
C2	 8,0x25	62+3
D3	 45x27x12	01
D10	 	06
D16	 17,5x17,5x13	02
E21	 385mm - 15 1/4"	03
E22		03
F10		12
G1	 10x10	50
H1		10

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01



**WARNING:
CHOKING HAZARD**

Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.




WARNING:



Important Safety Notice:

This furniture includes tip-over prevention hardware, which **MUST** be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.

01)


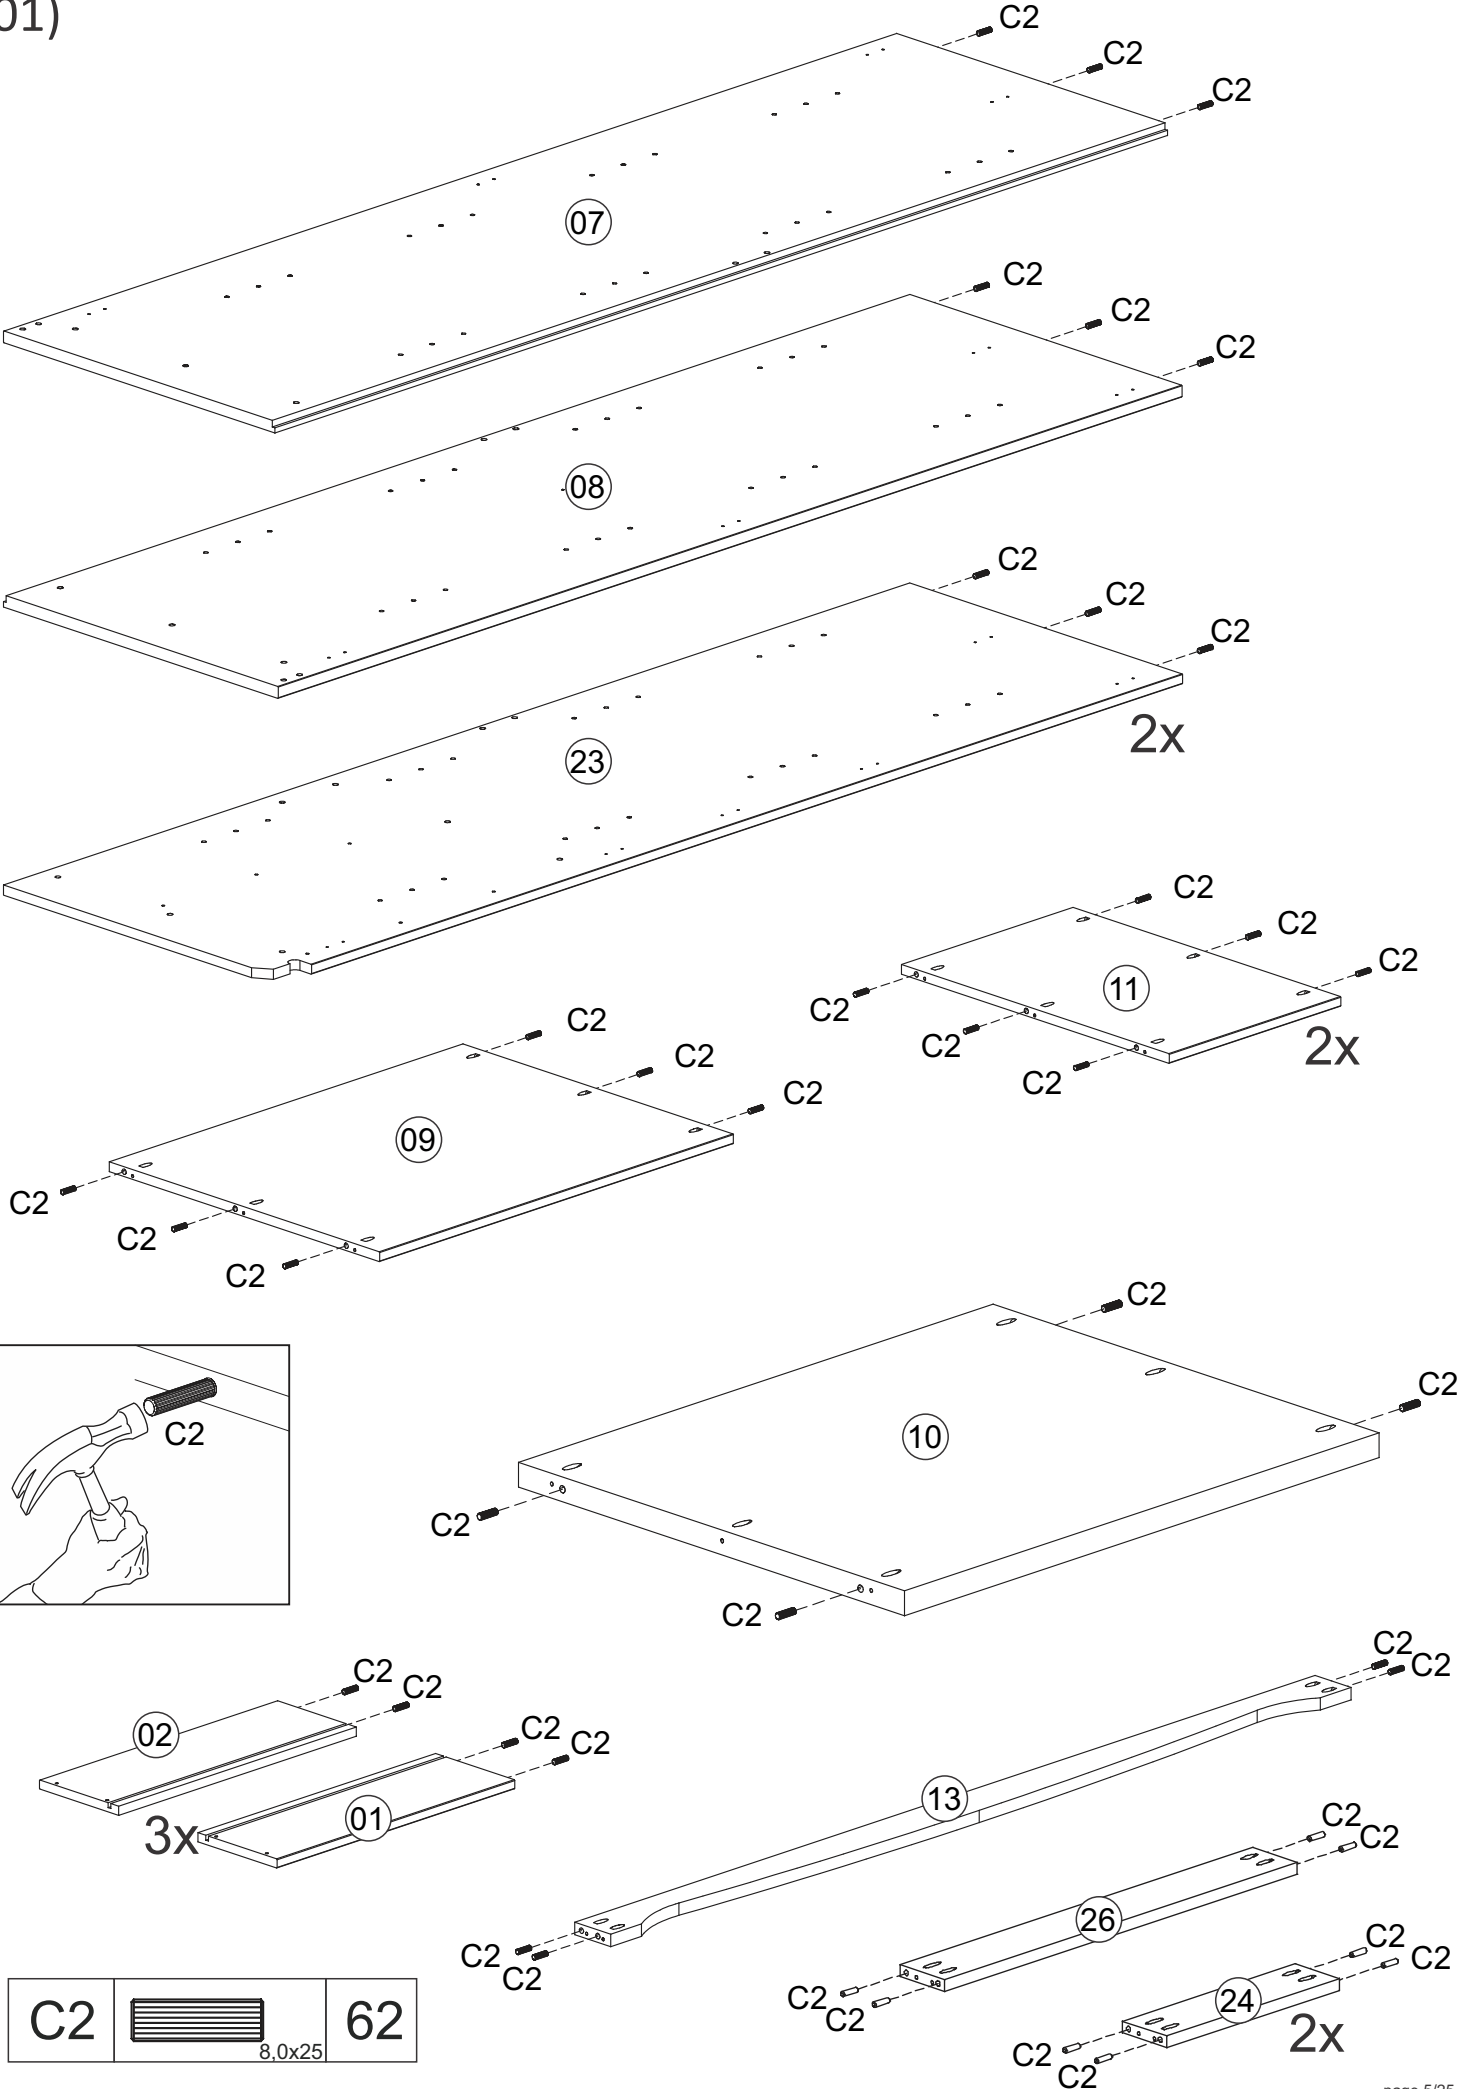


02)

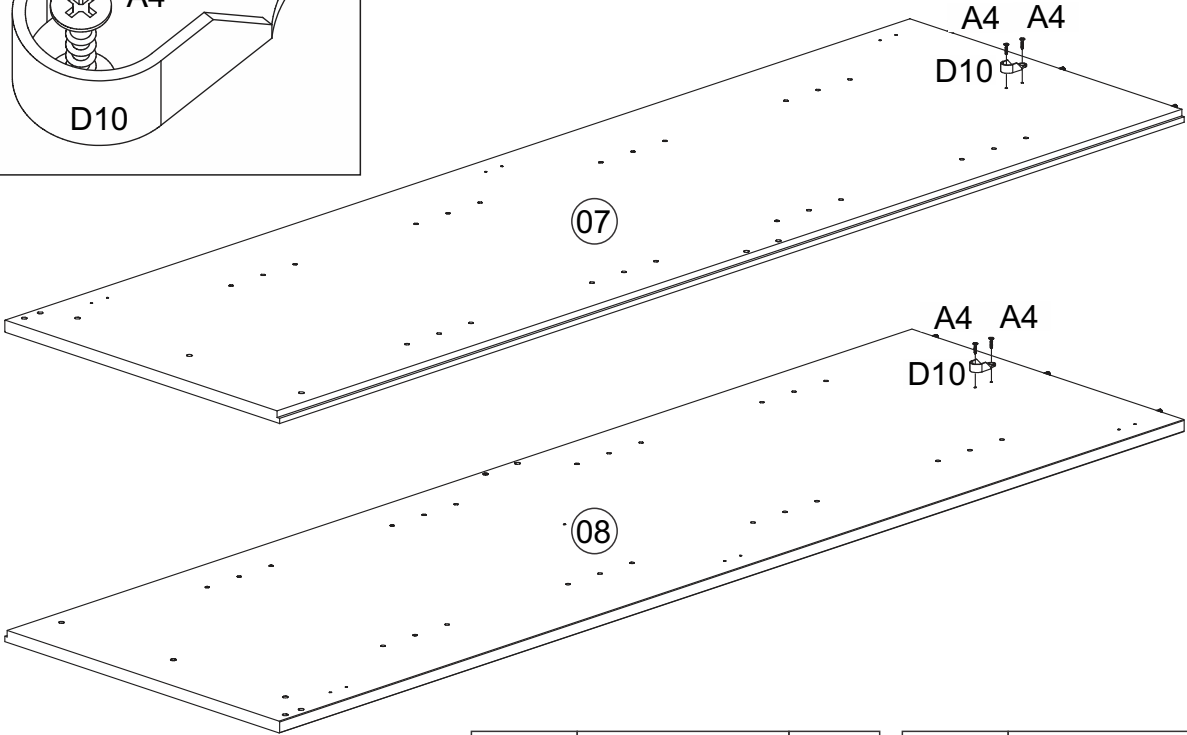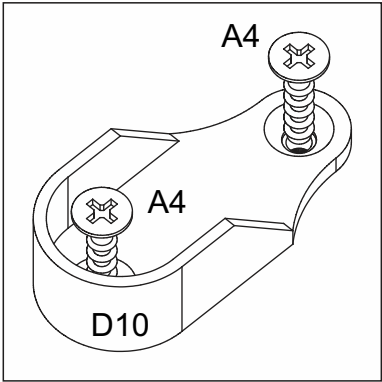



A4		04	D10		02
3,5x14					

03)

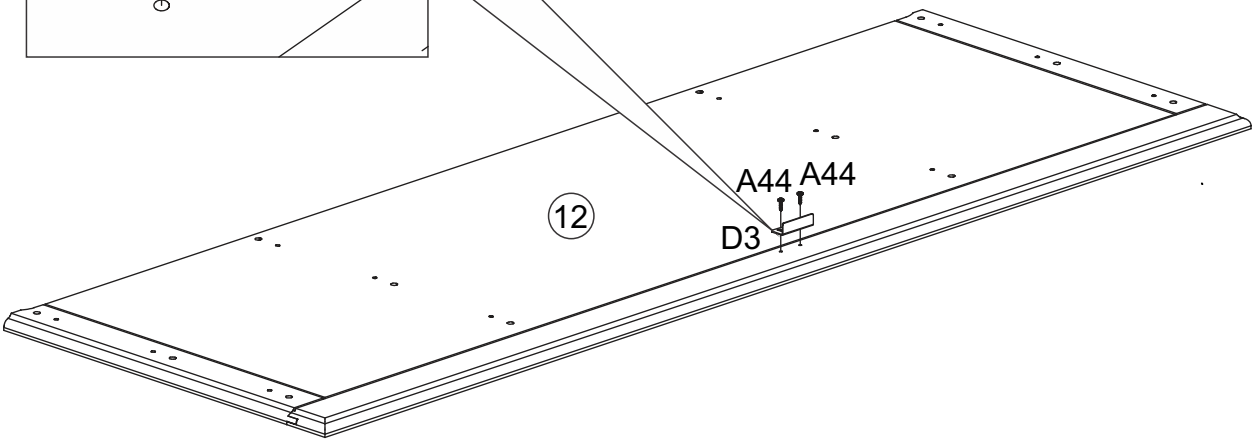
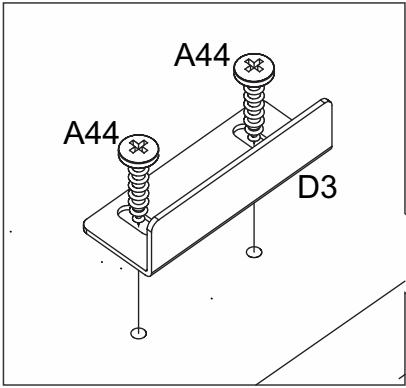


A44		02	D3		01
3,5x14					



04)

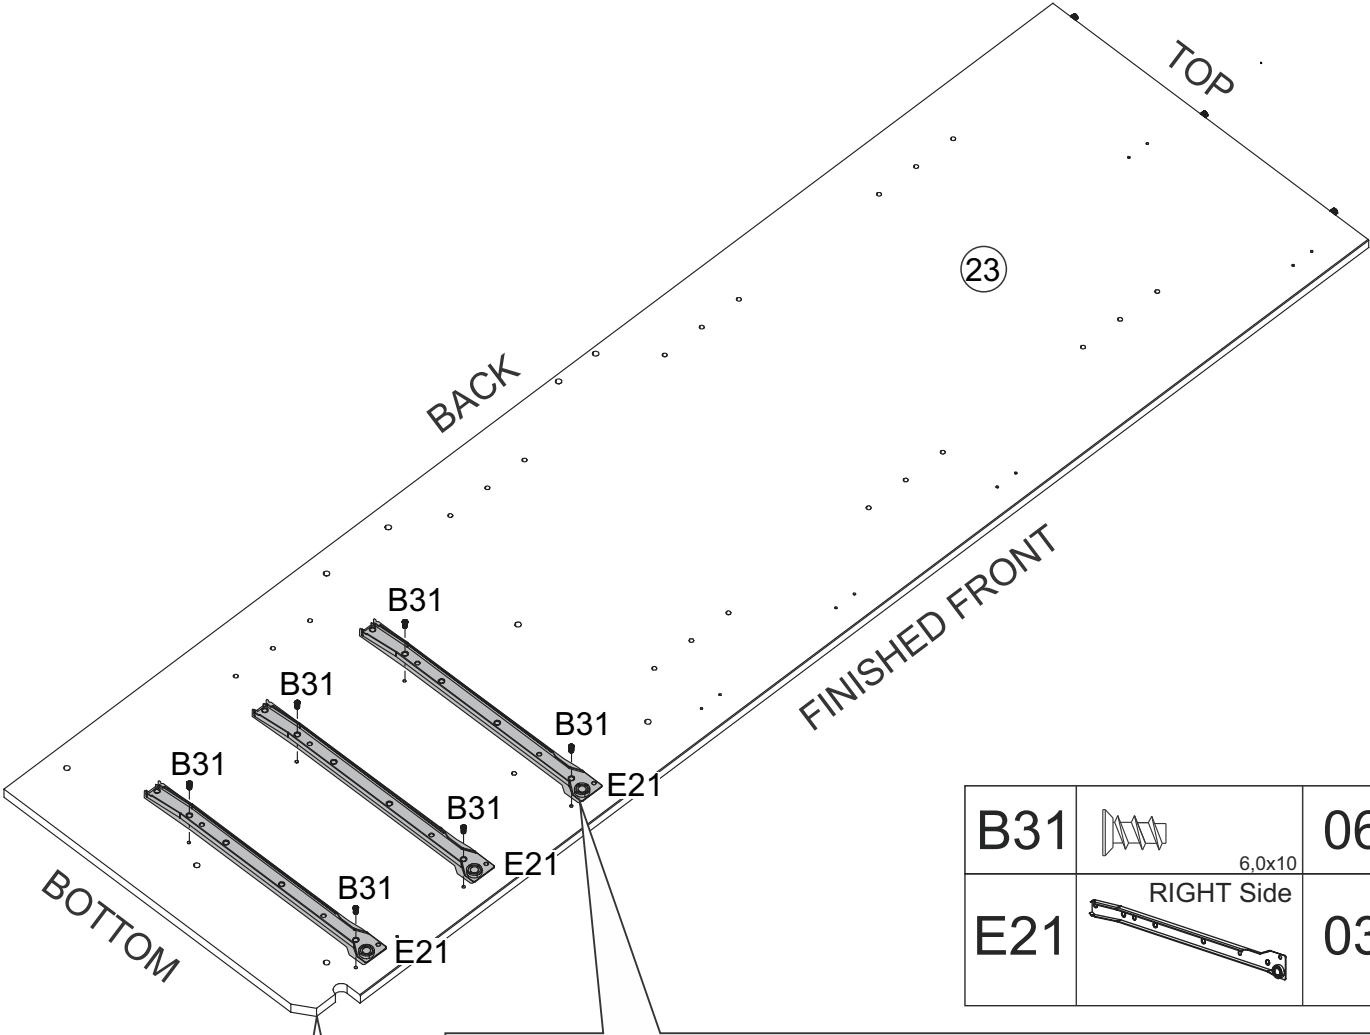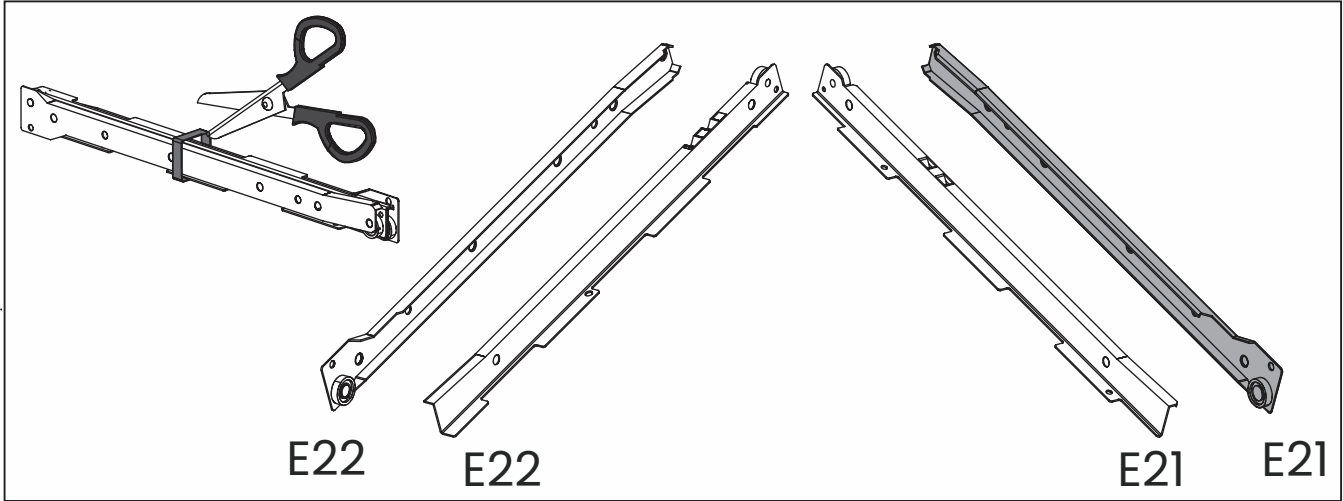


B31	 6.0x10	06
E21	 RIGHT Side	03

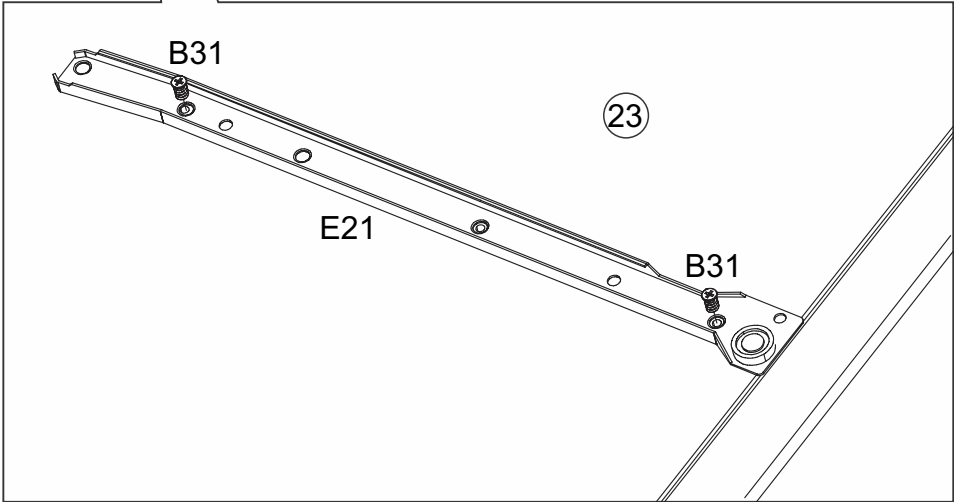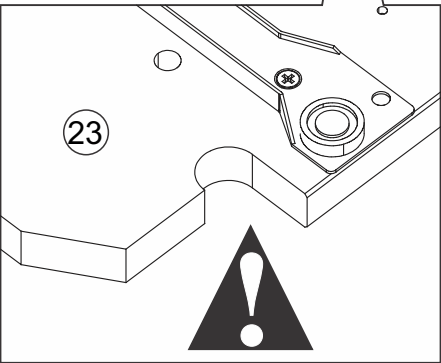




05)

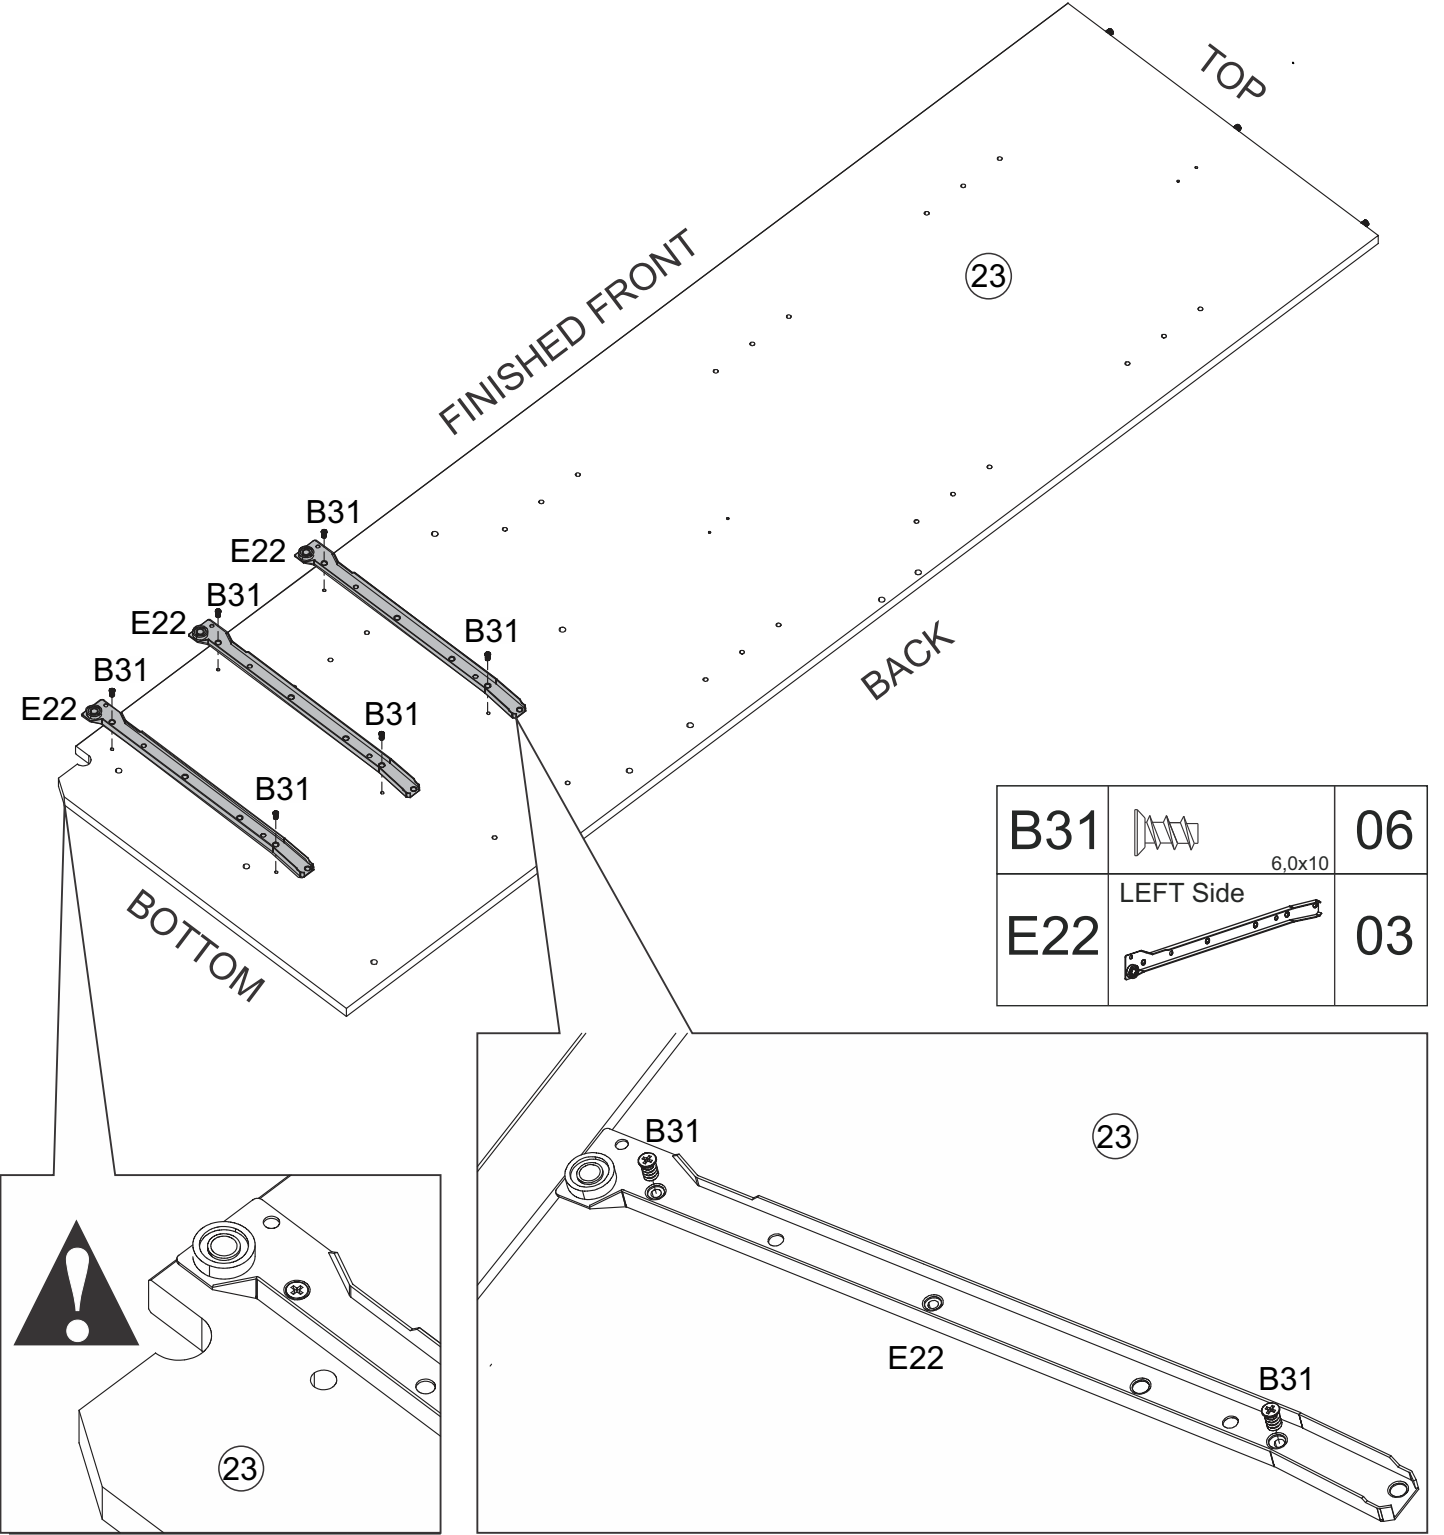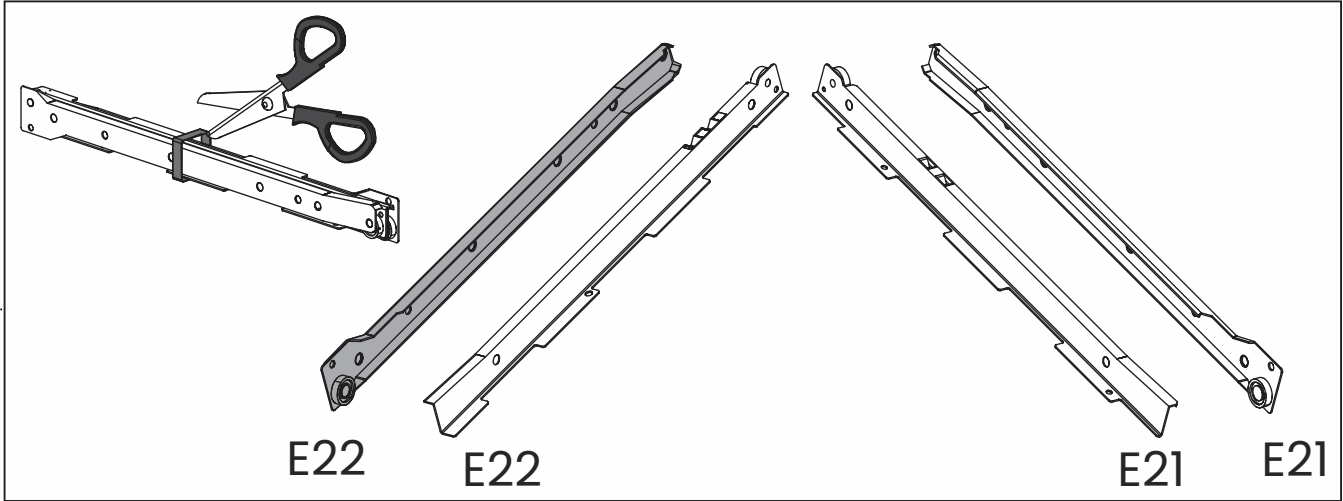




06)

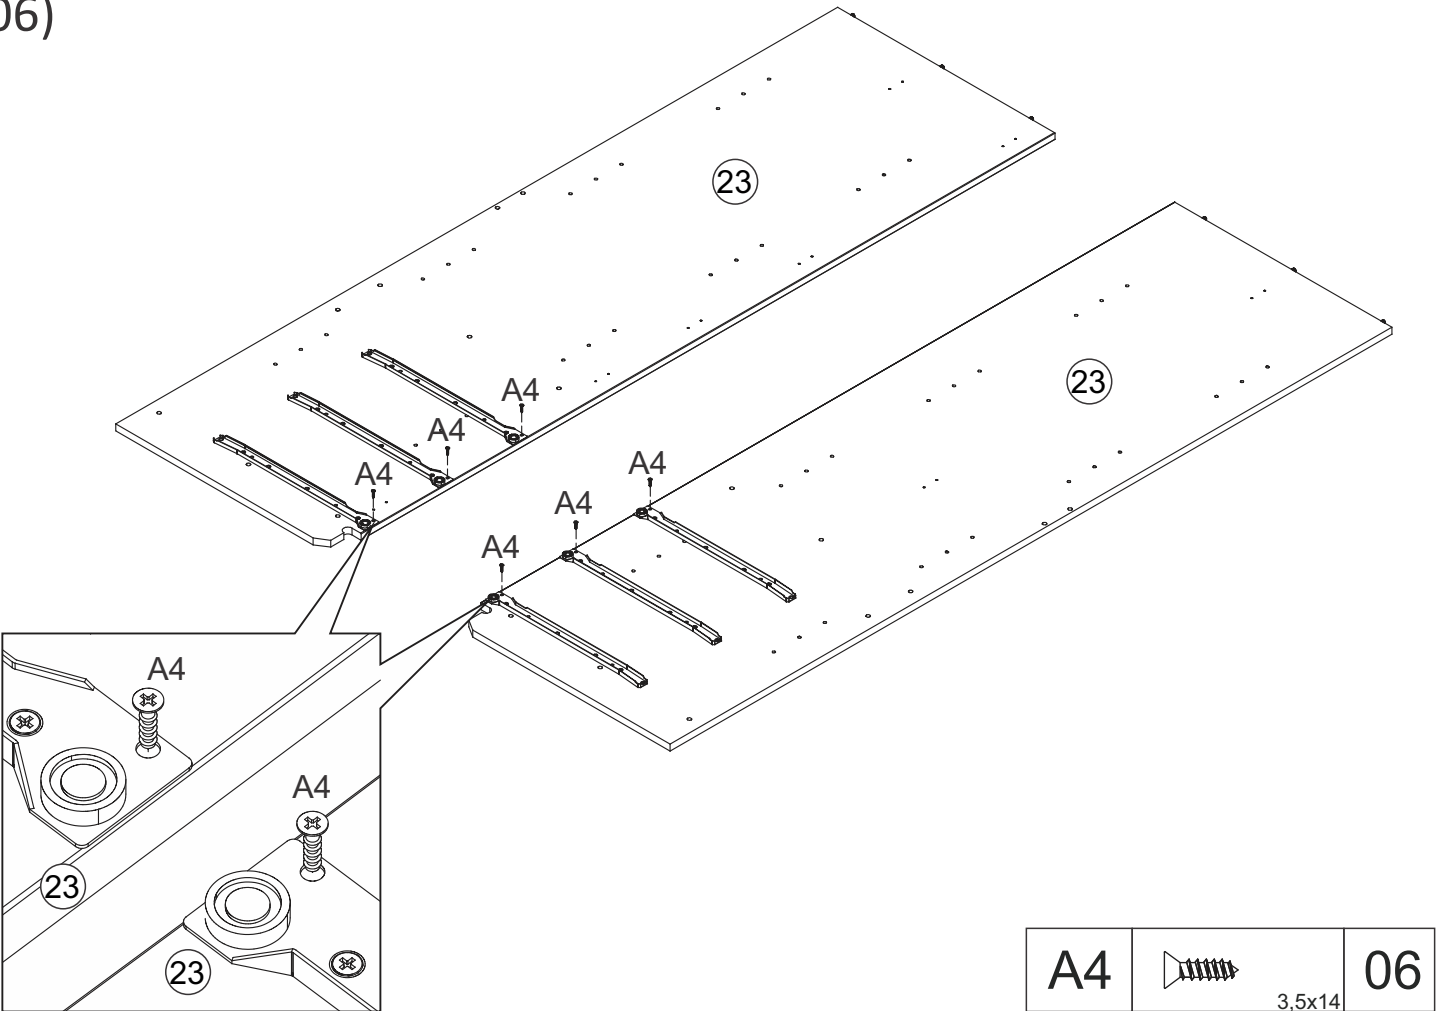




07)

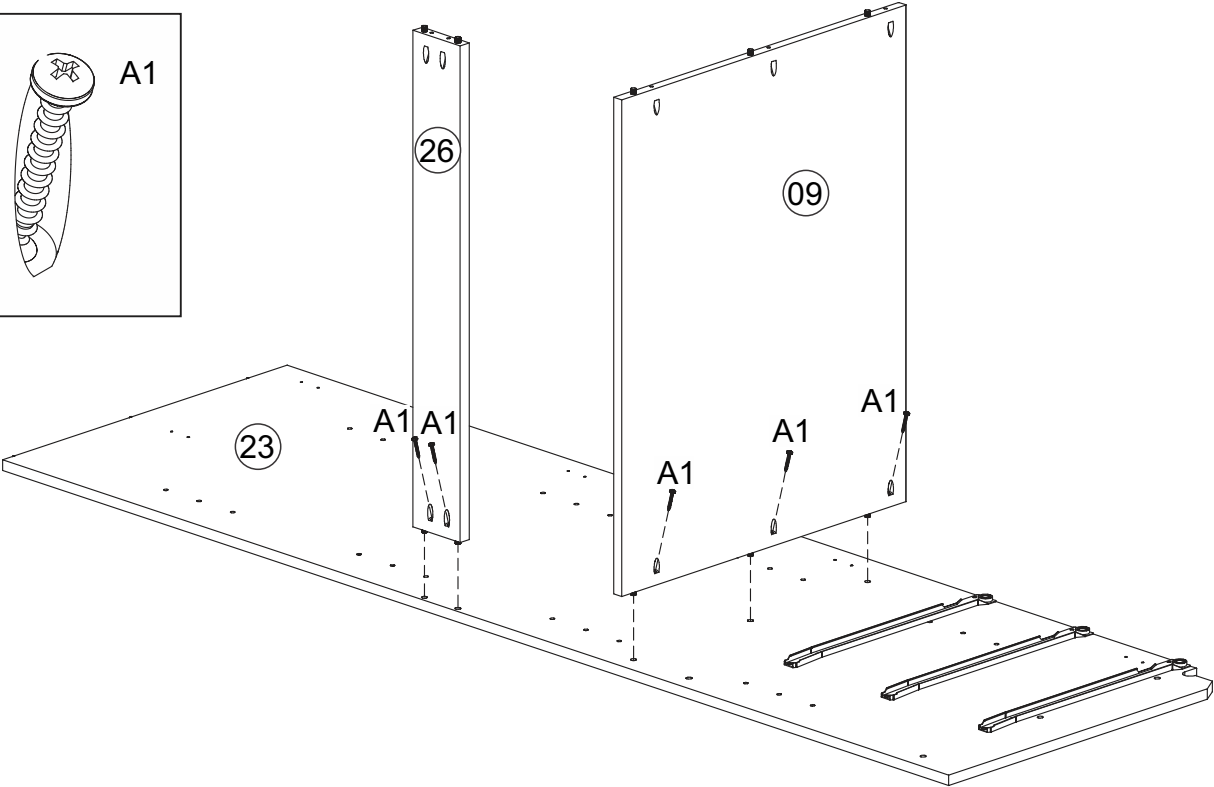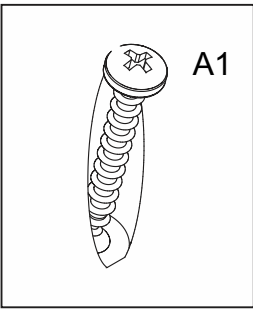




08)

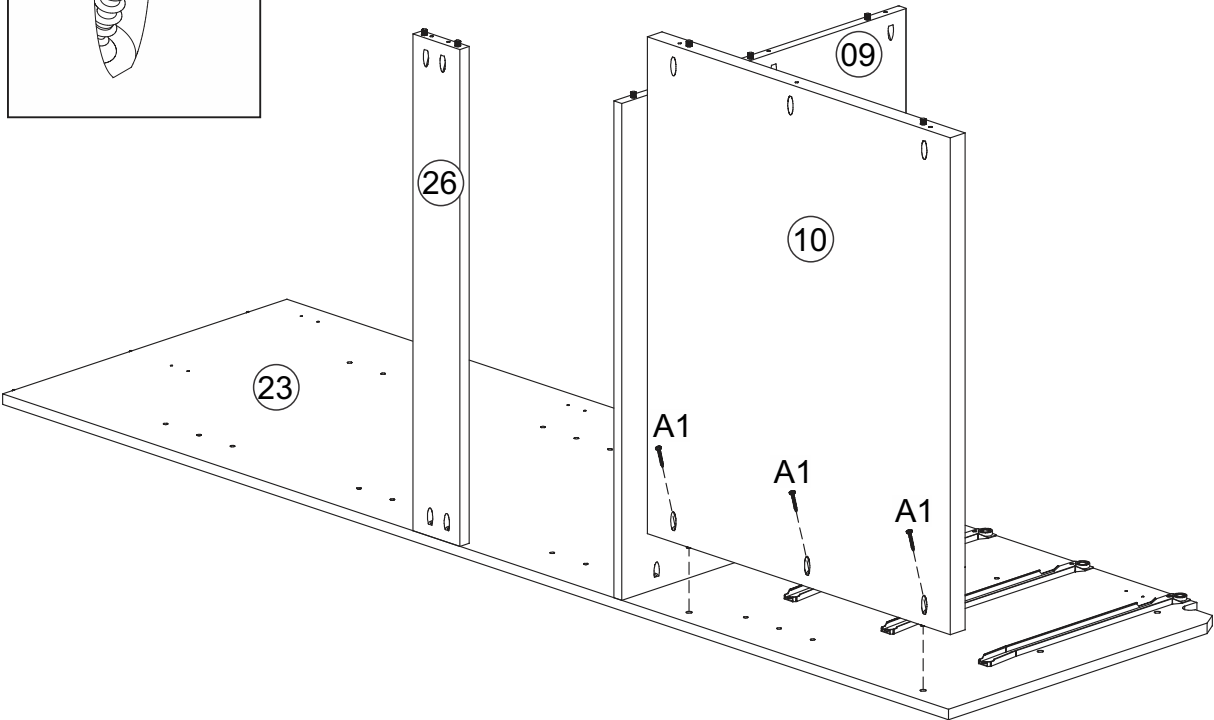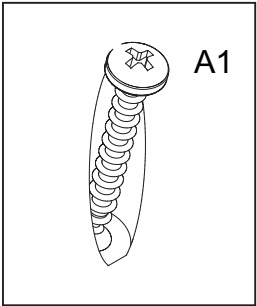





09)

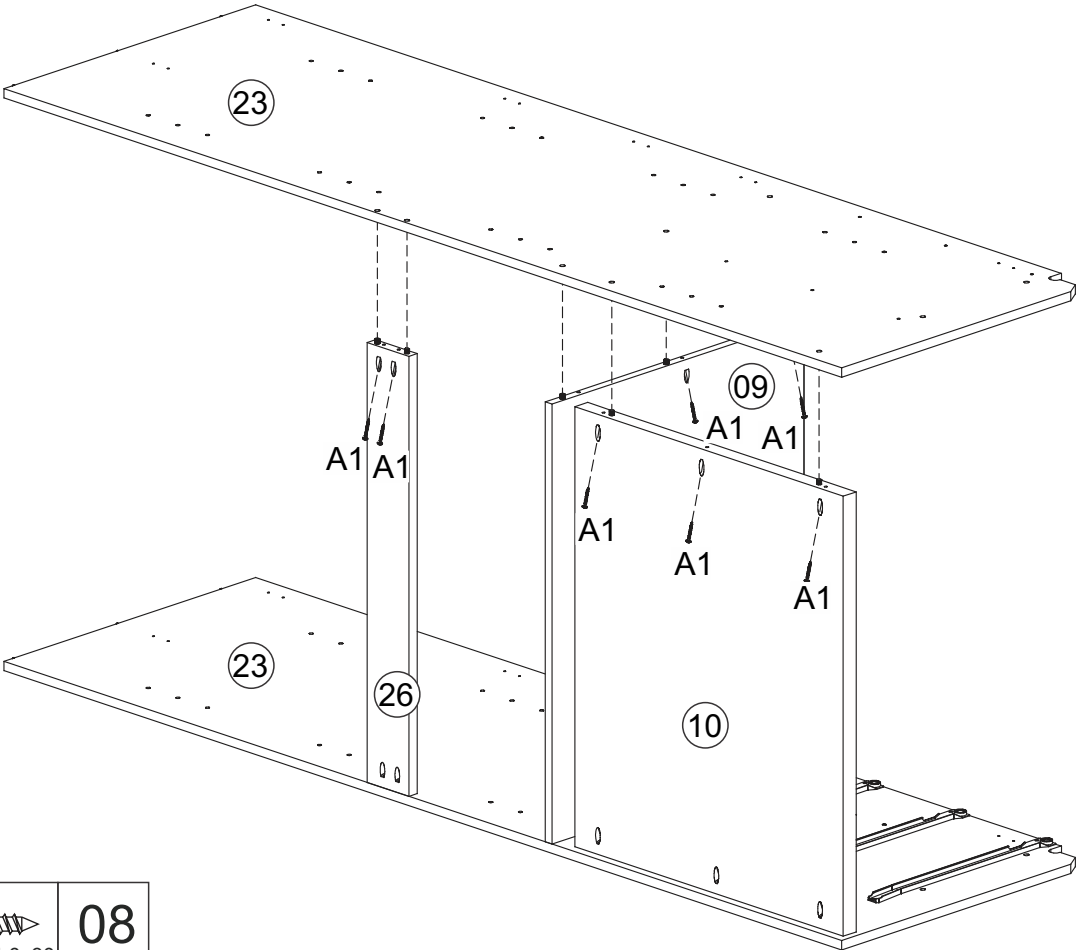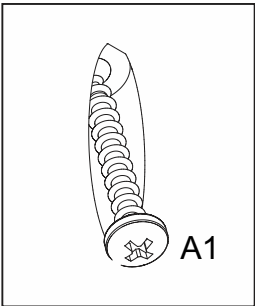




10)

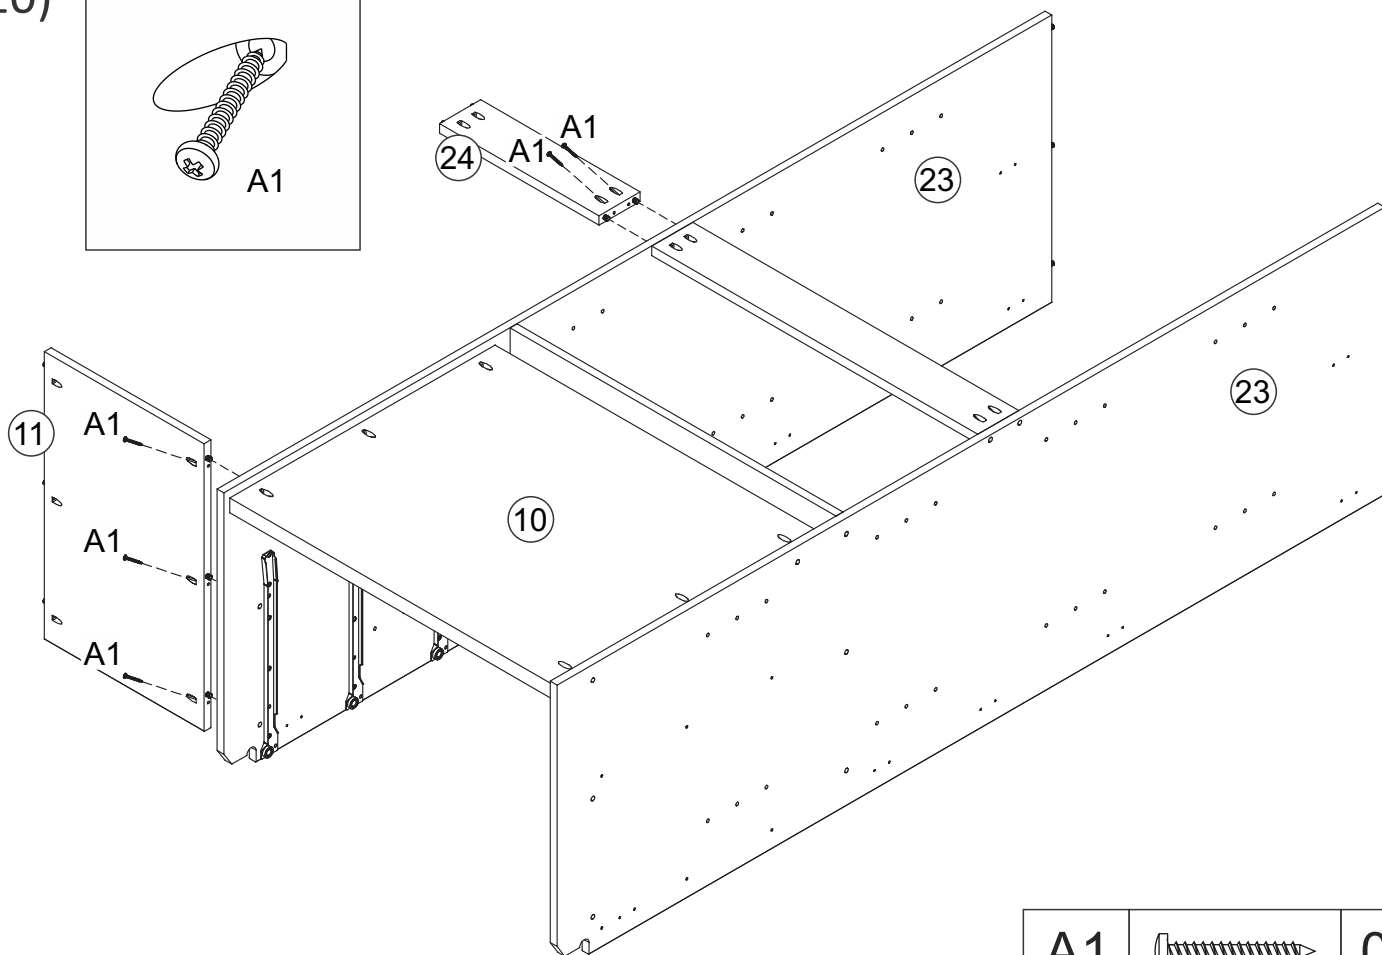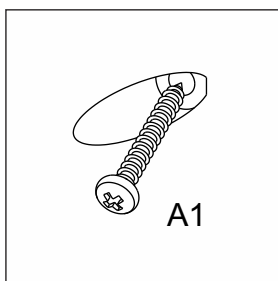




11)

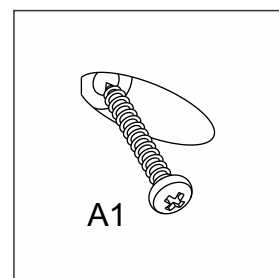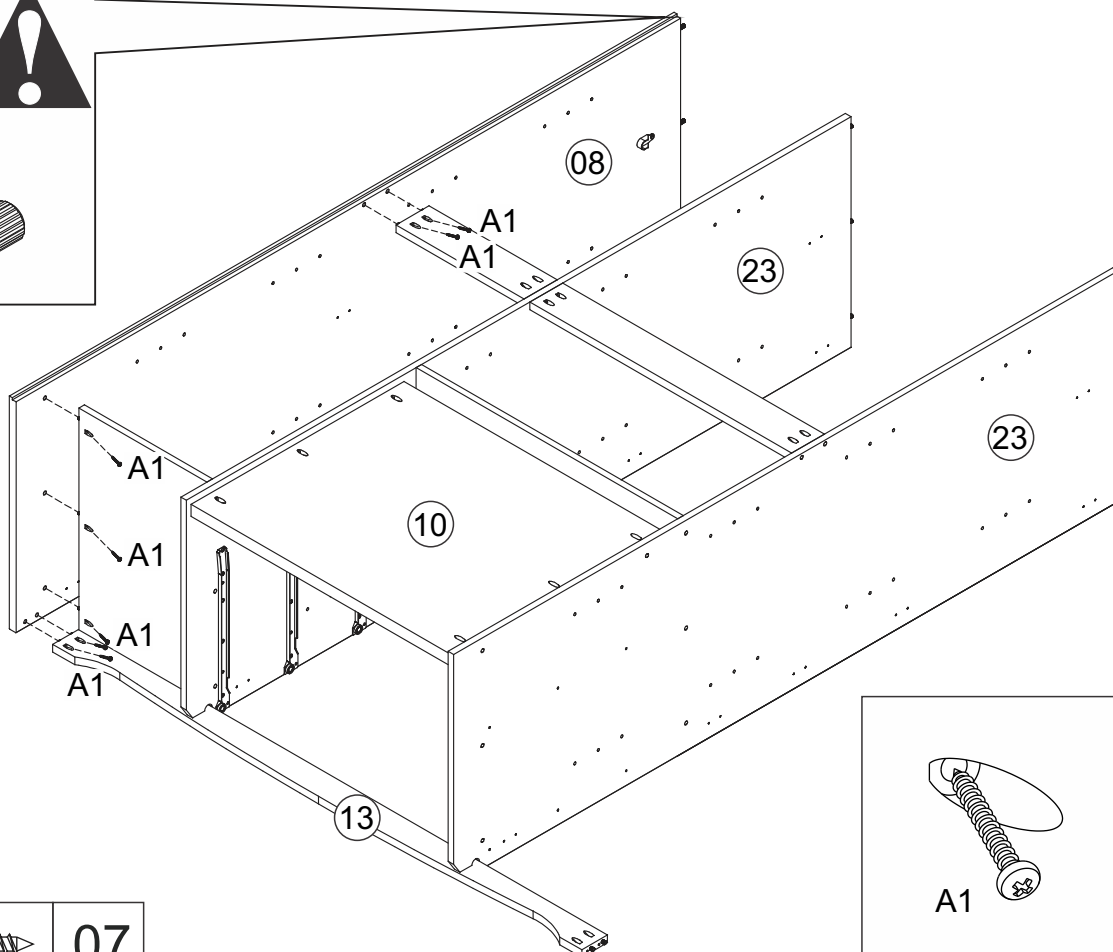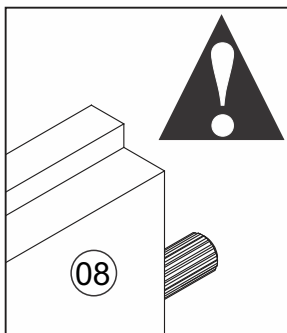


12)

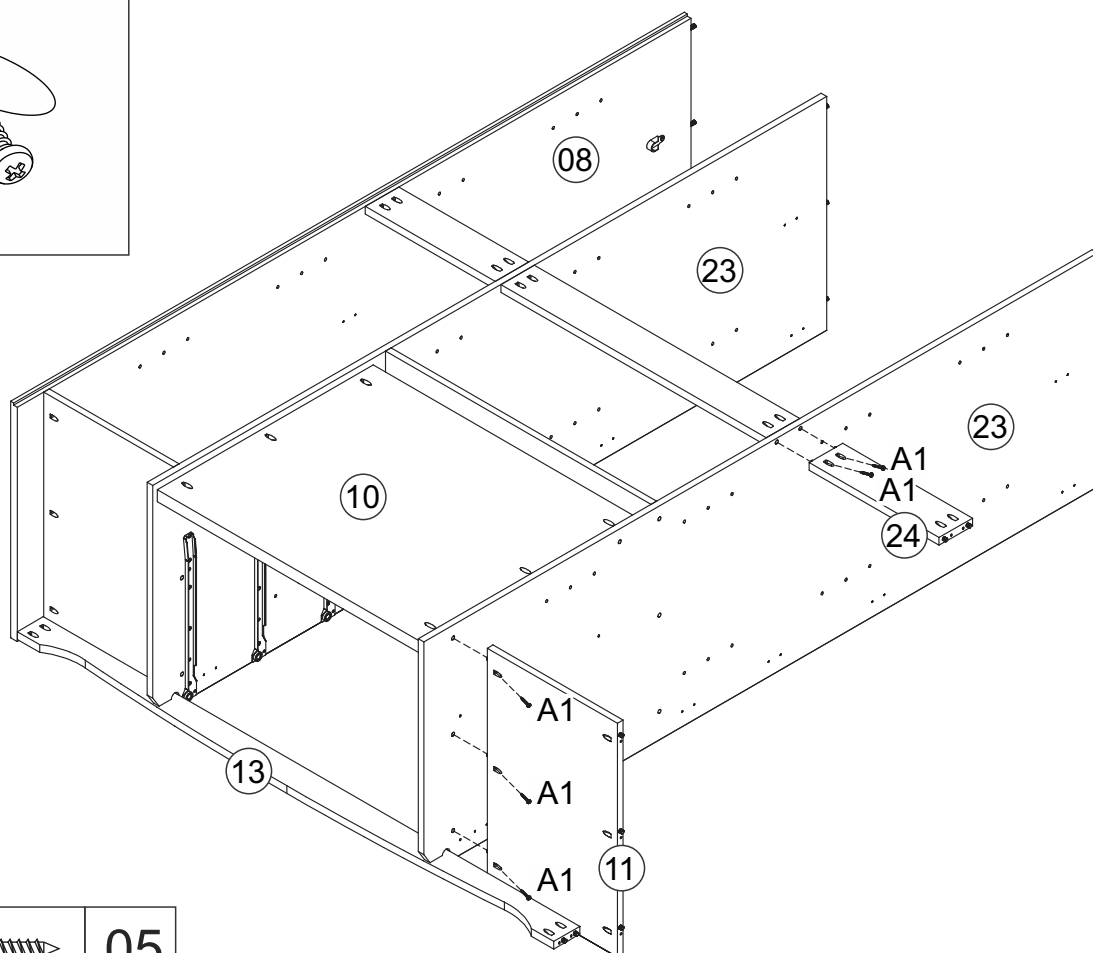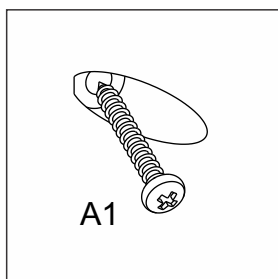


13)

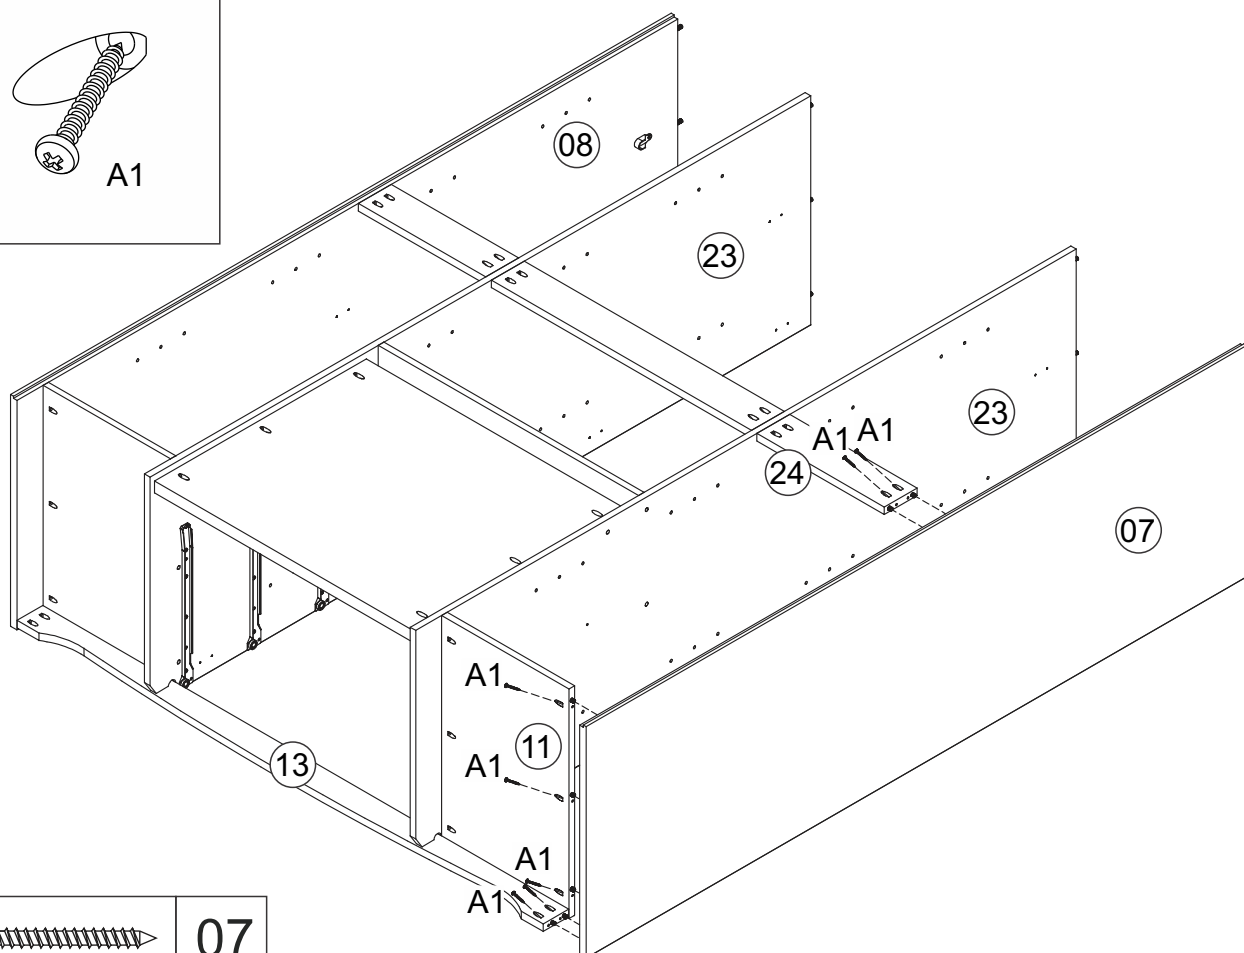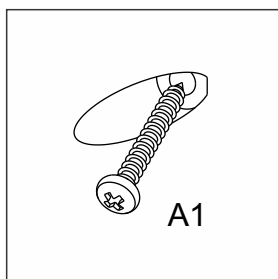



14)

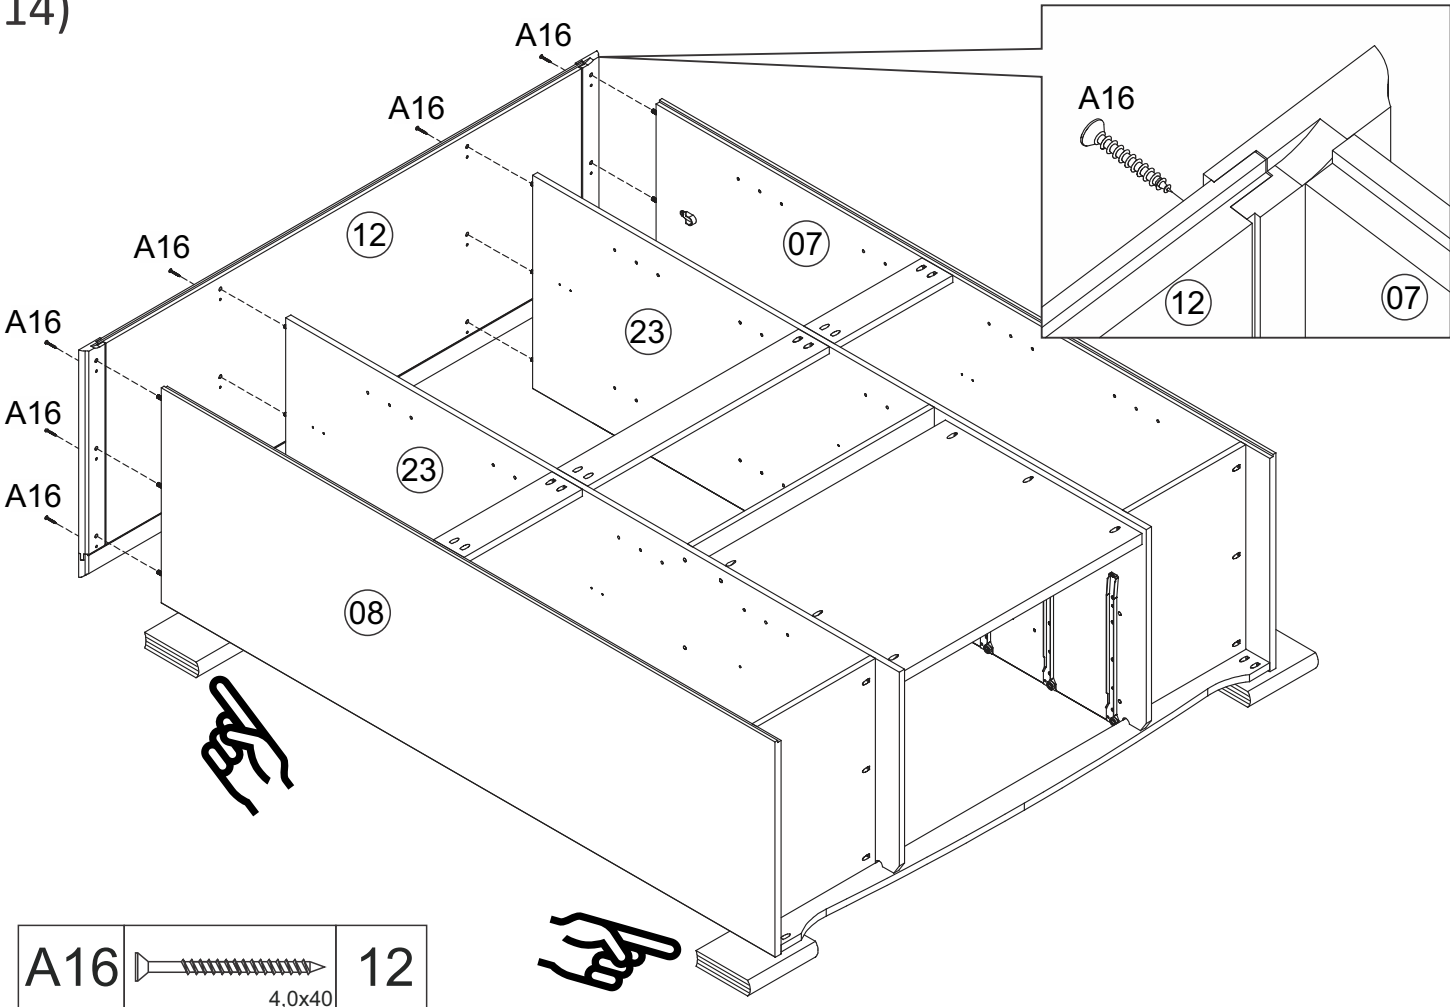

15)

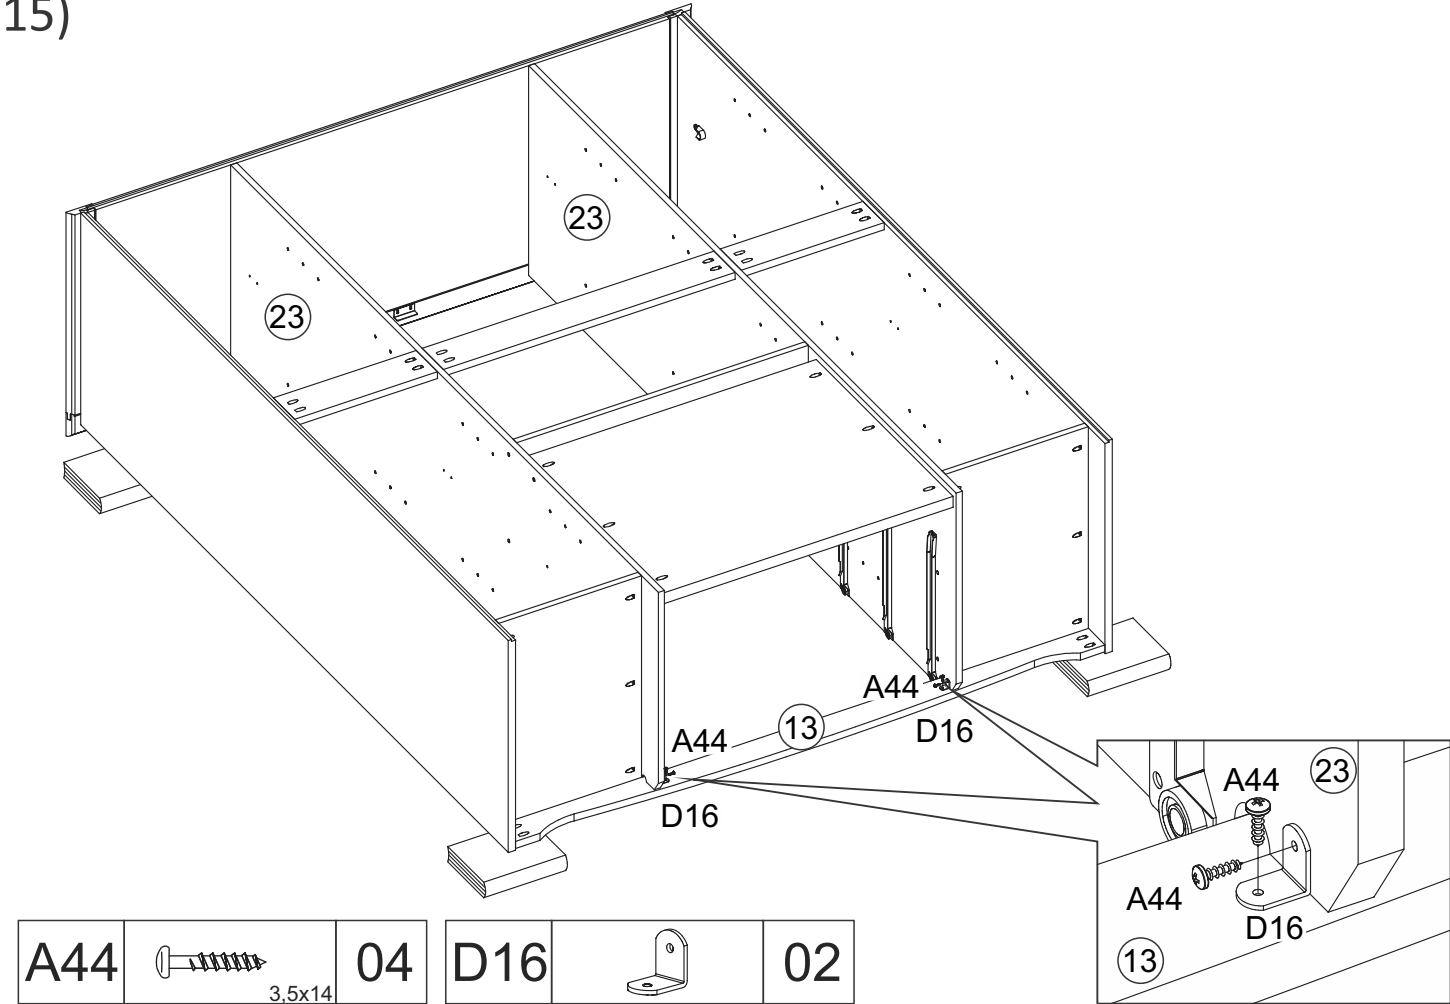



16)

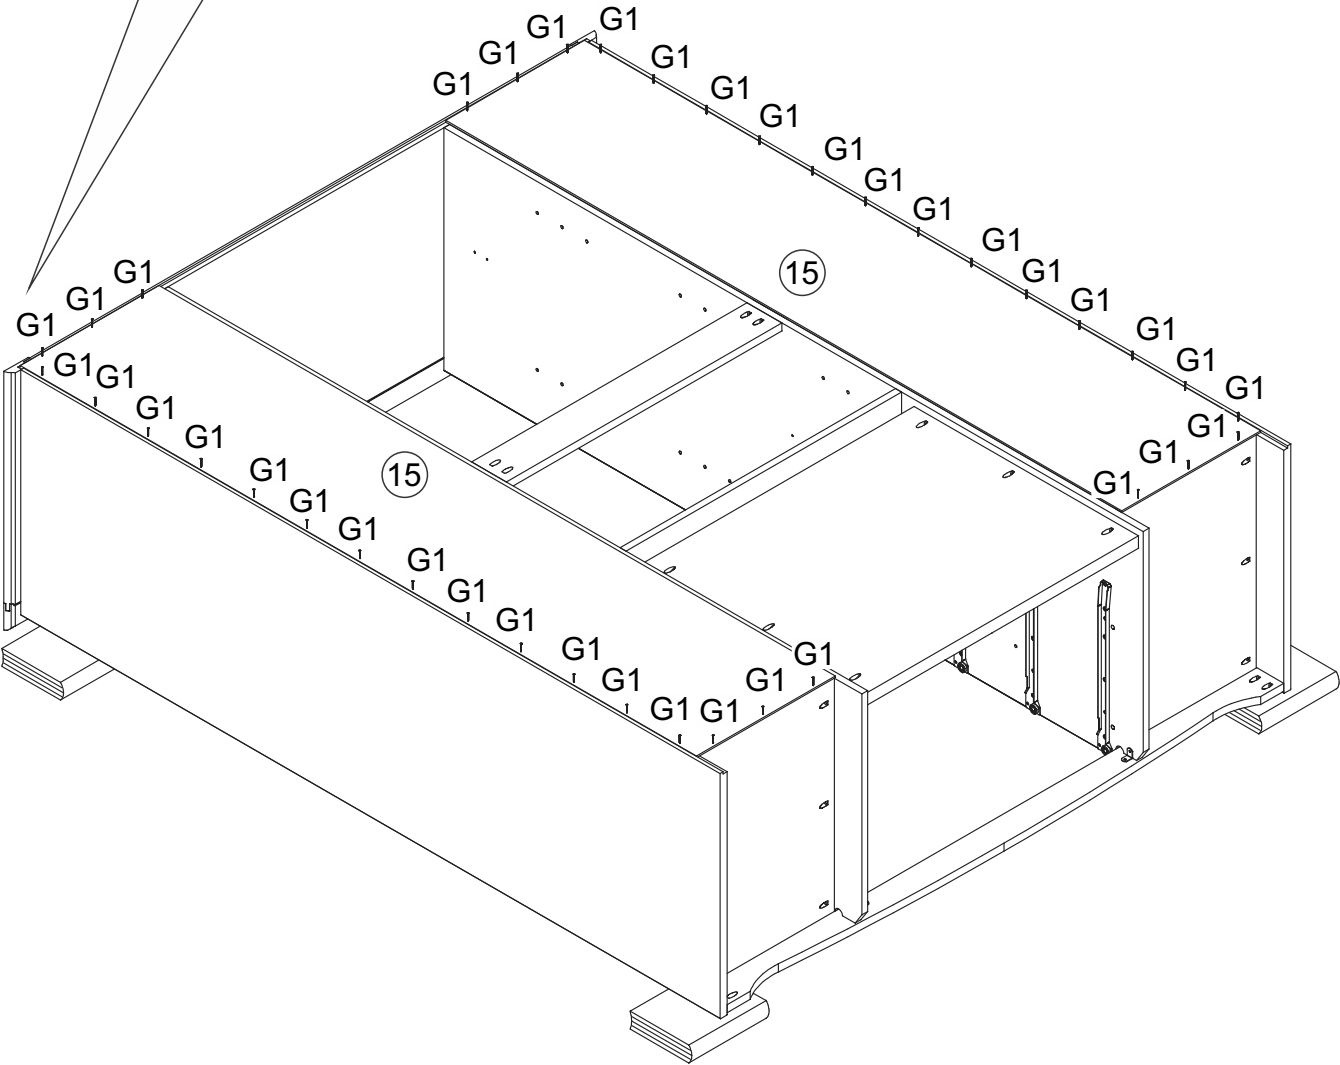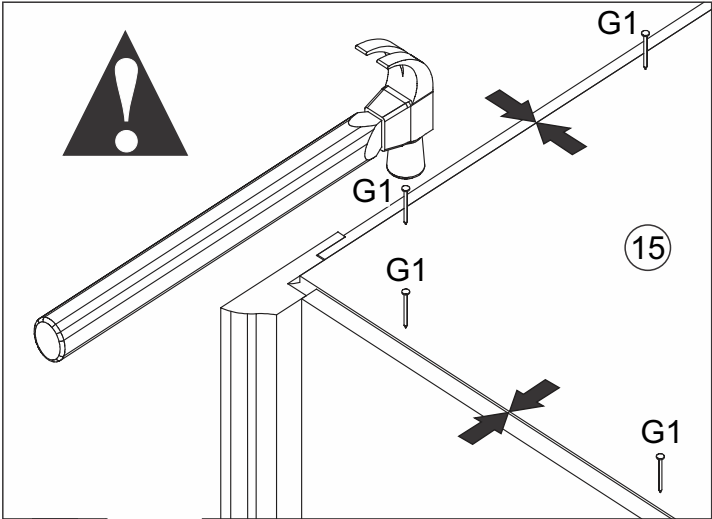



G1	 10x10	38
----	--	----


17)

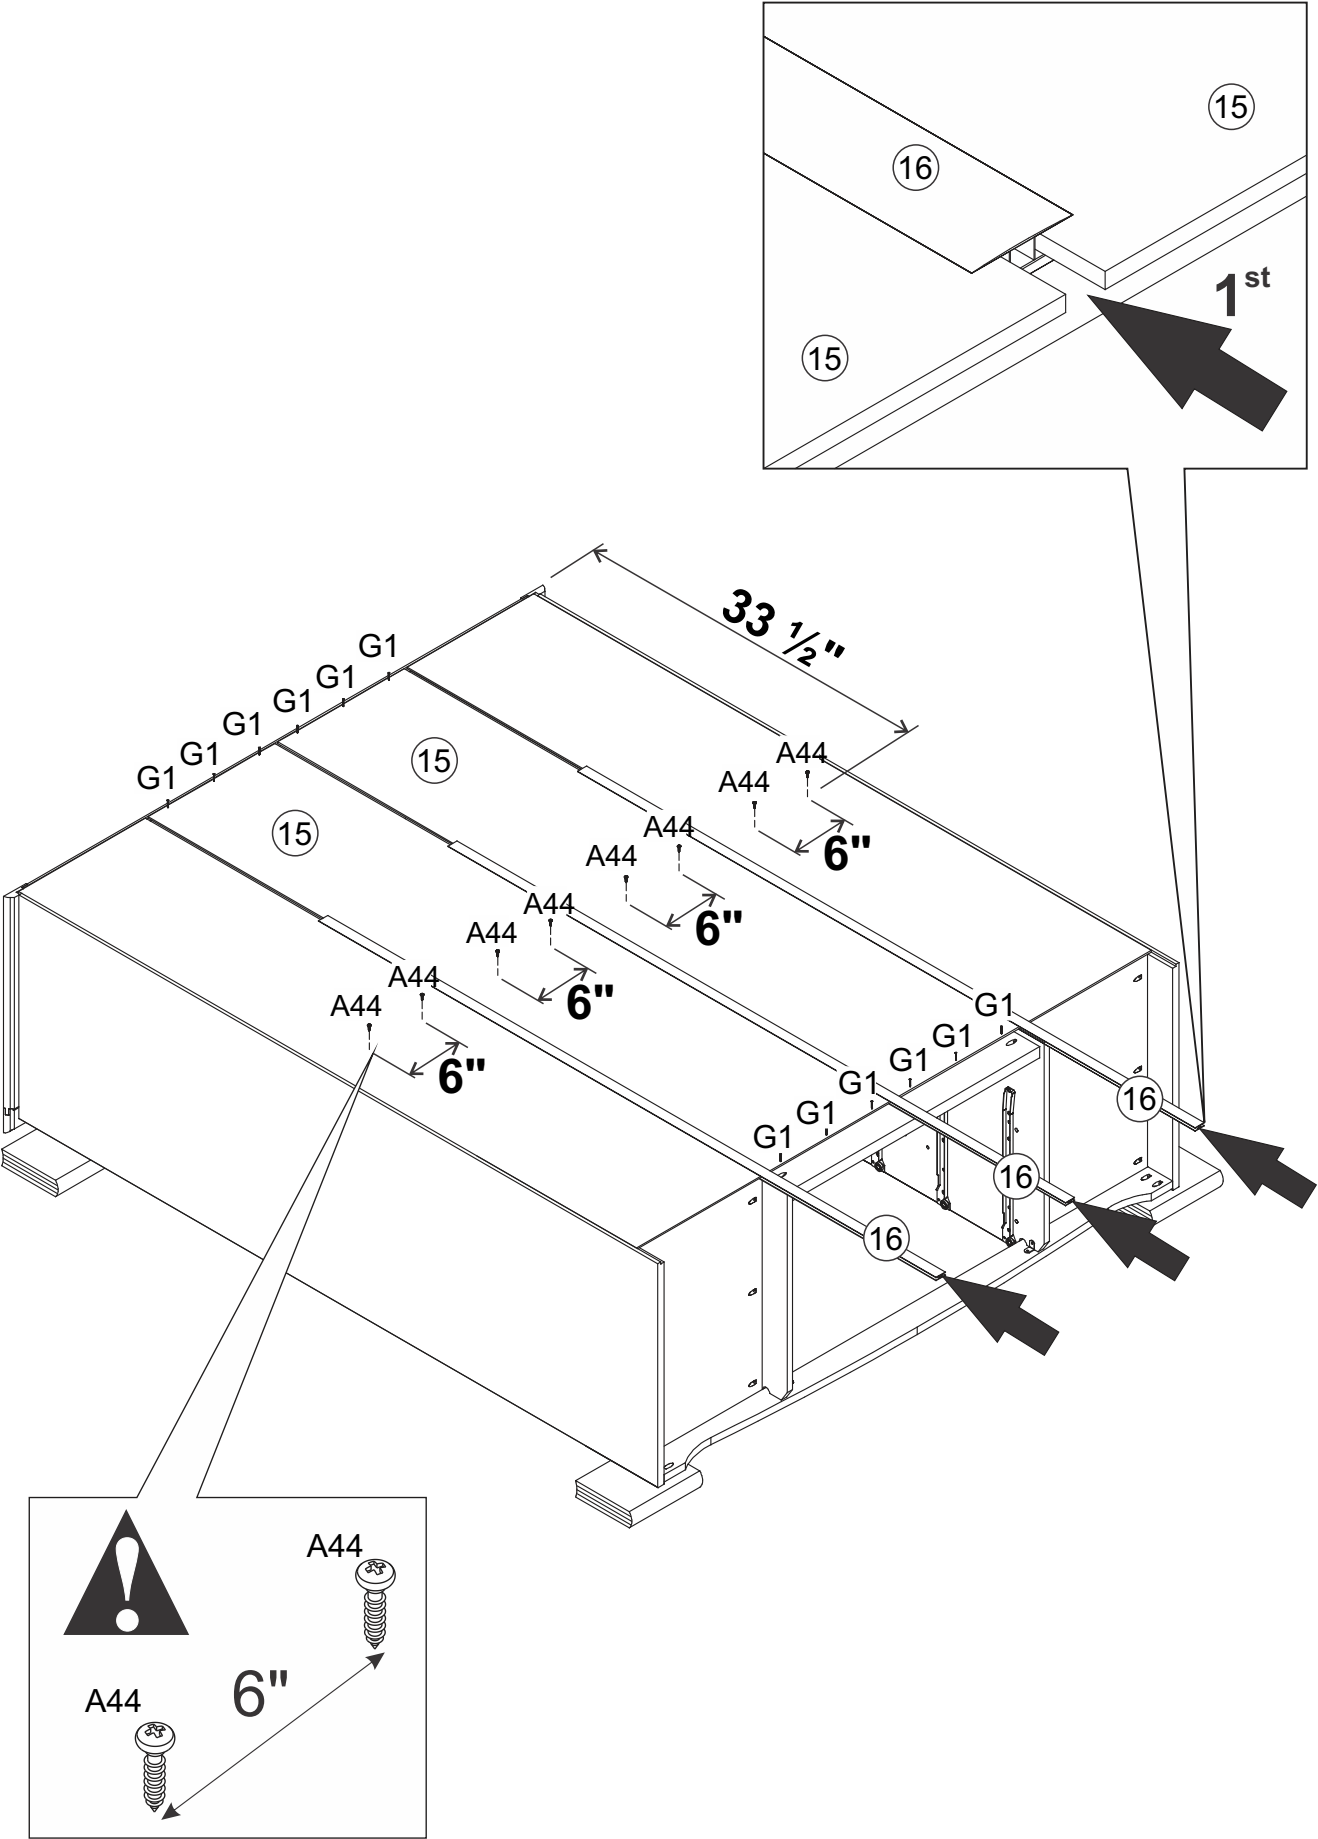



A44	 3,5x14	08	G1	 10x10	12
-----	---	----	----	---	----

18)

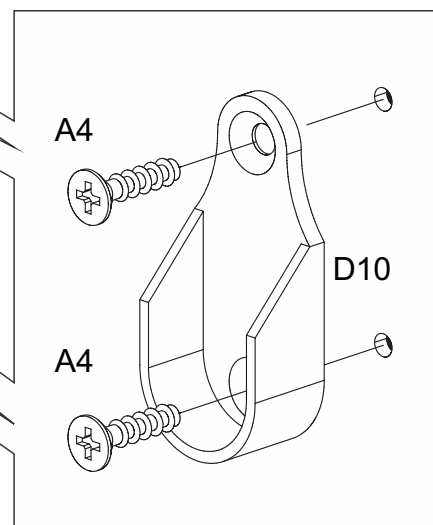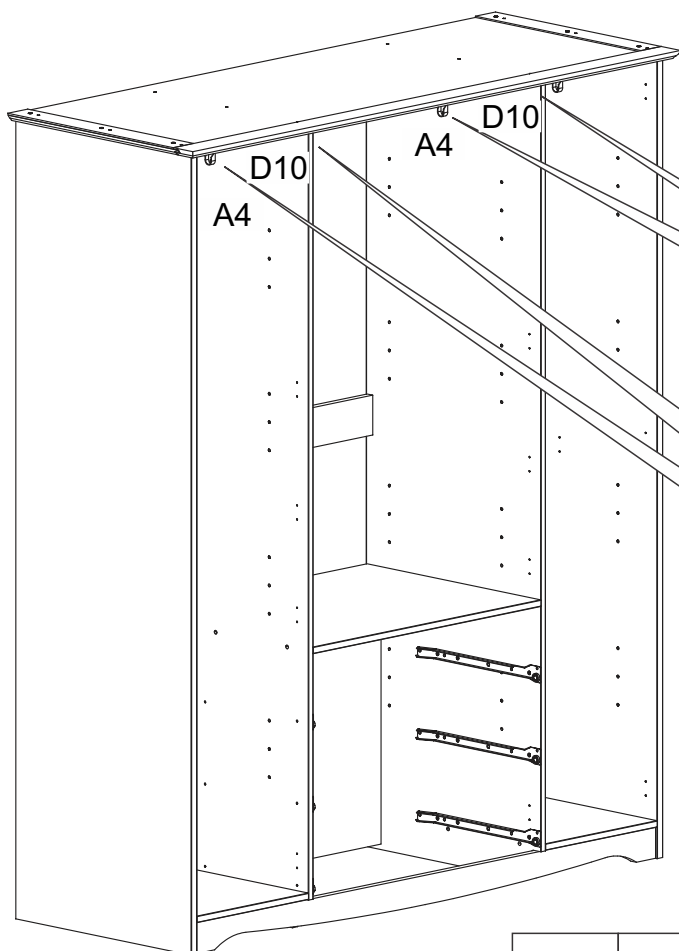


A4	 3.5x14	08	D10		04
----	--	----	-----	---	----

19)

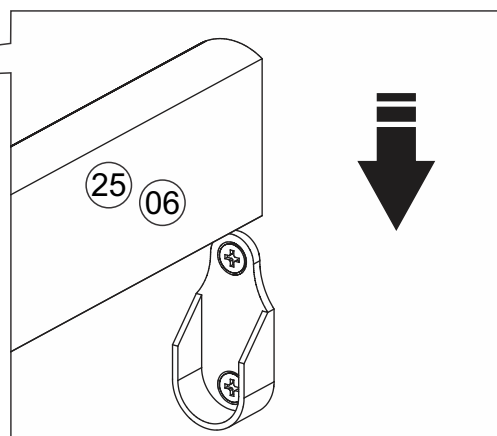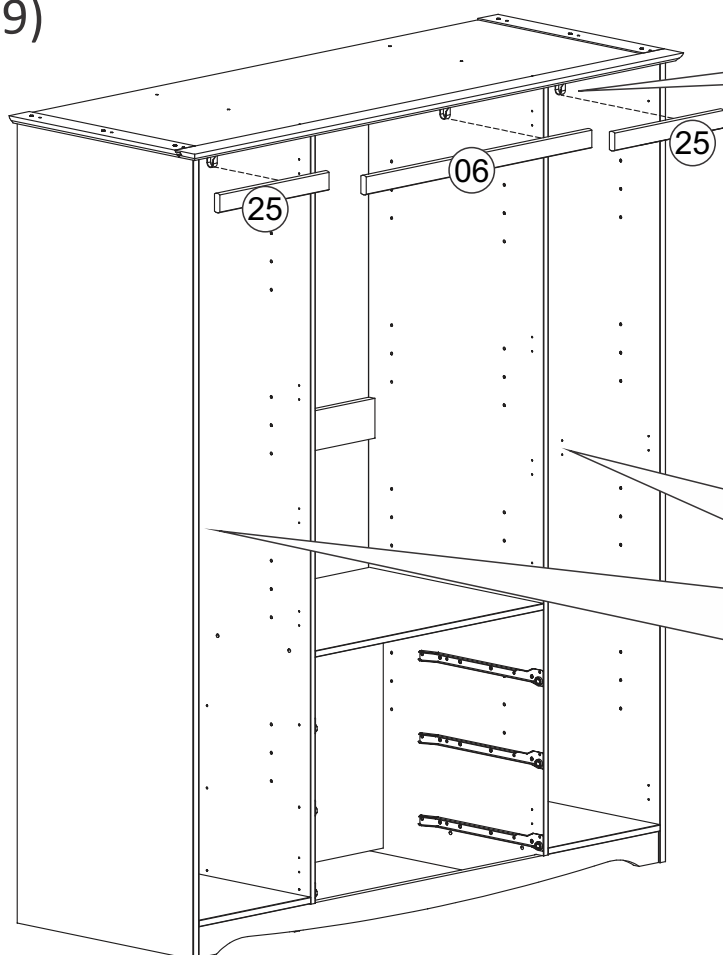


If you need to use in the bottom position, please use these steps:


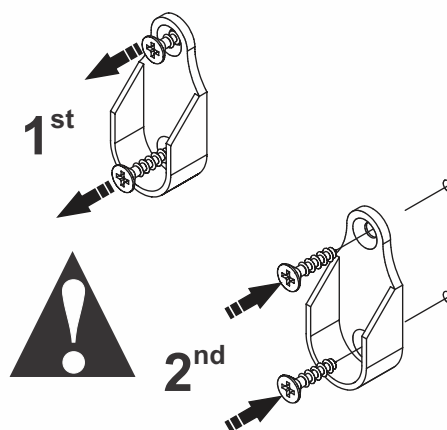


20)

If the hinge (F10) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.




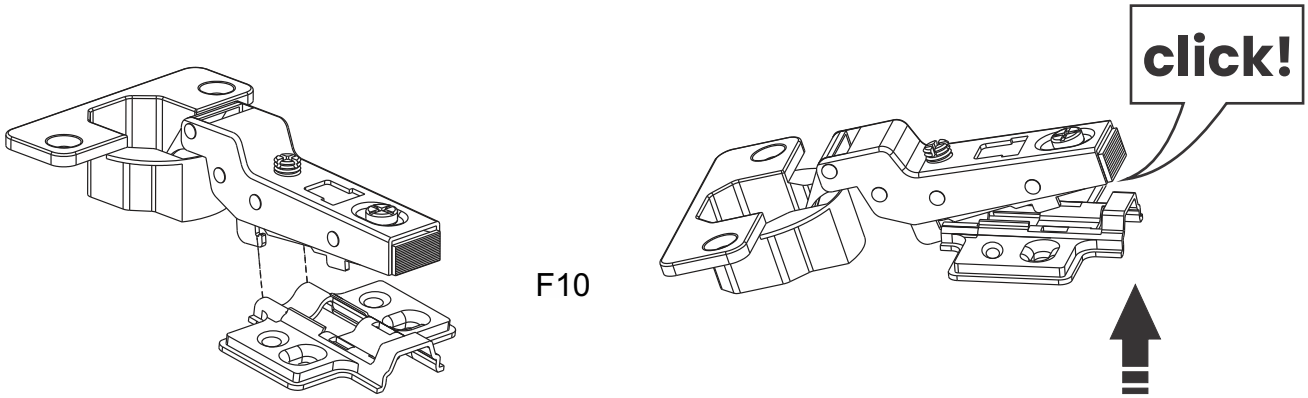


21)



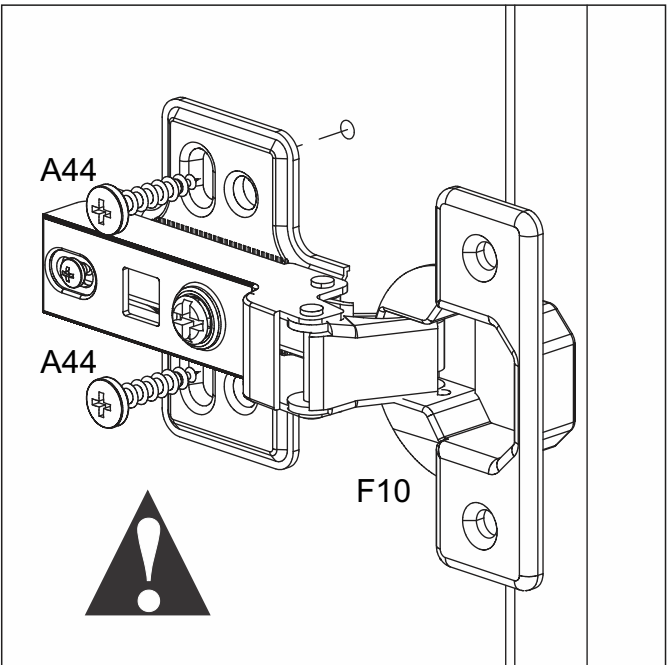
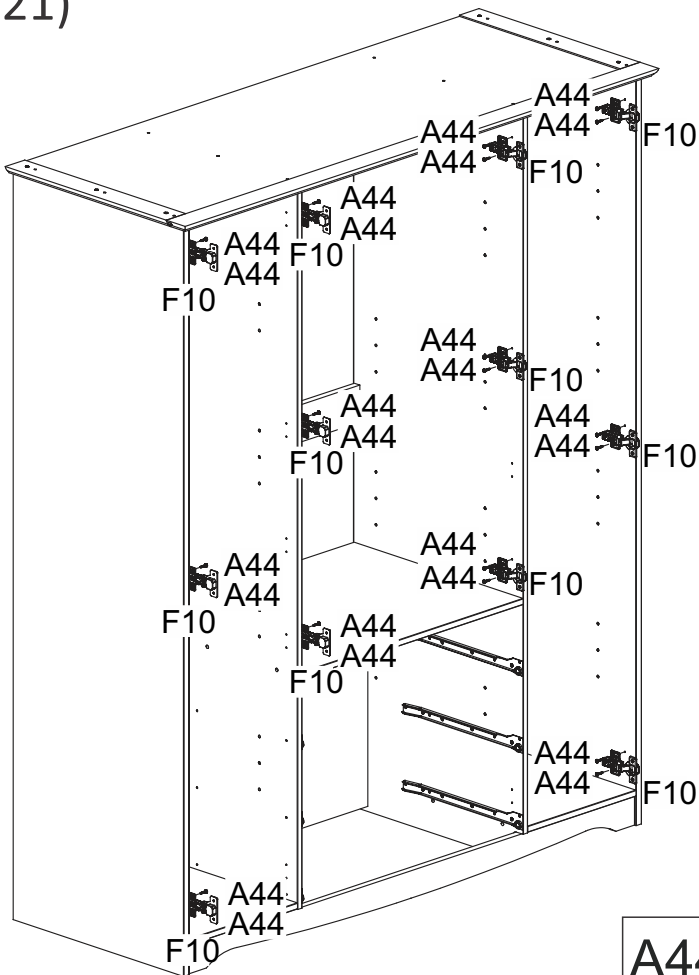


A44		24	F10		12
3,5x14					



22)

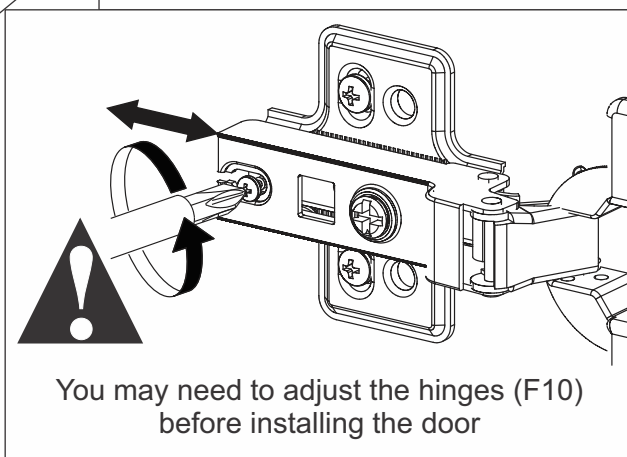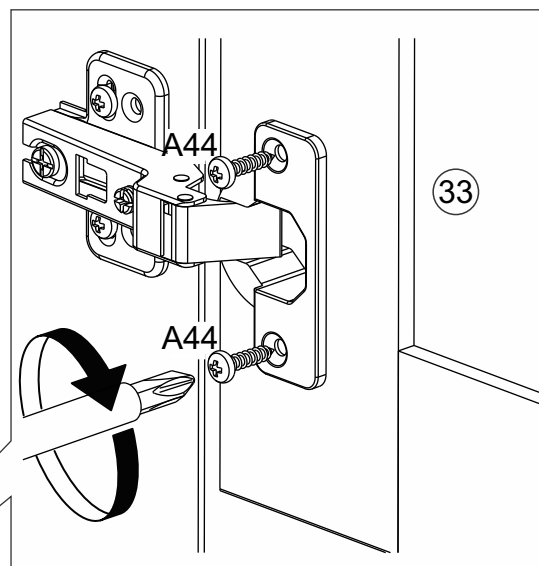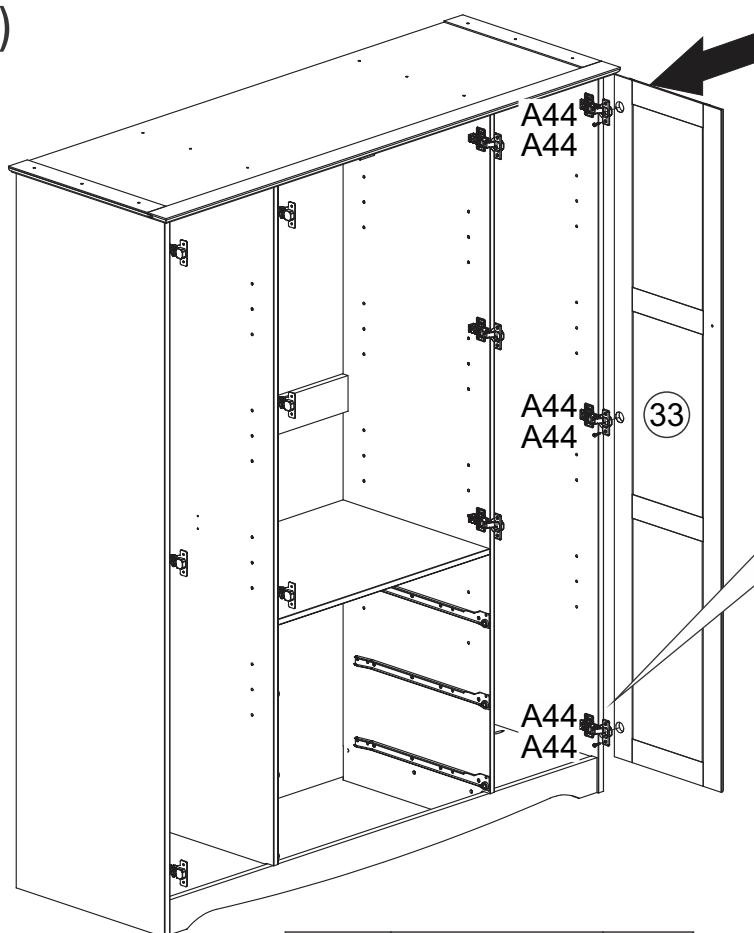


23)

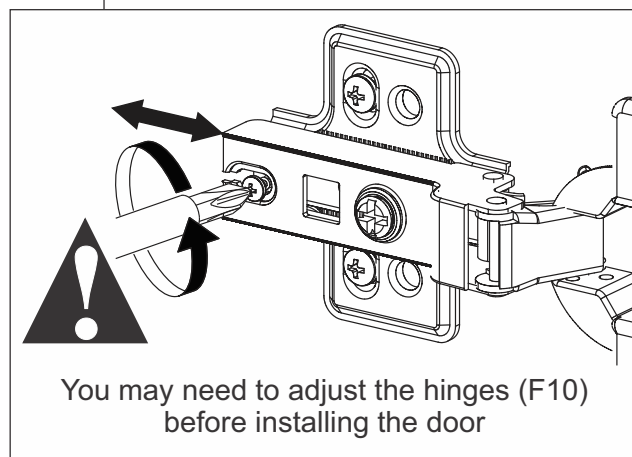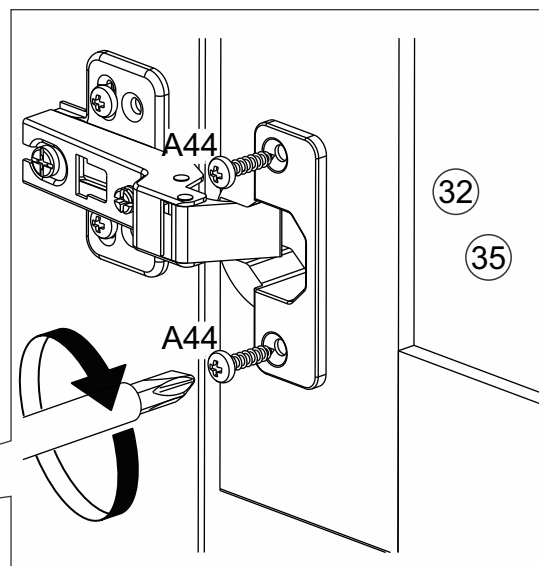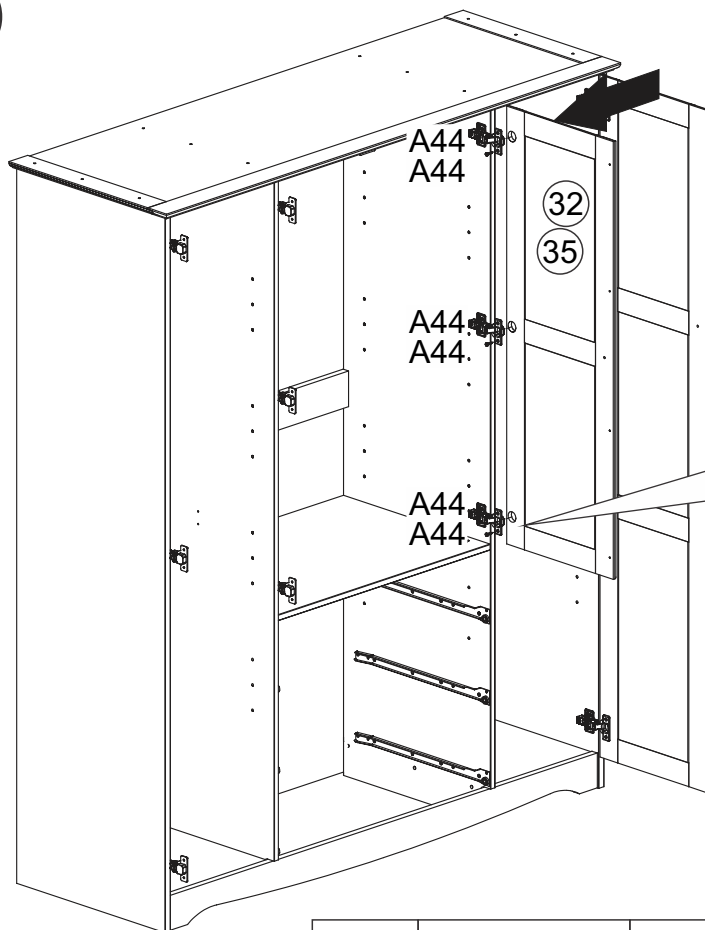


24)

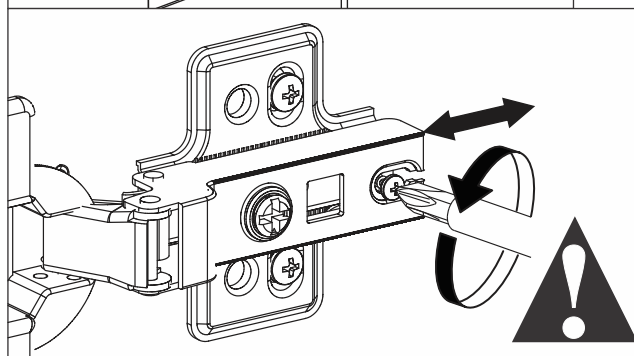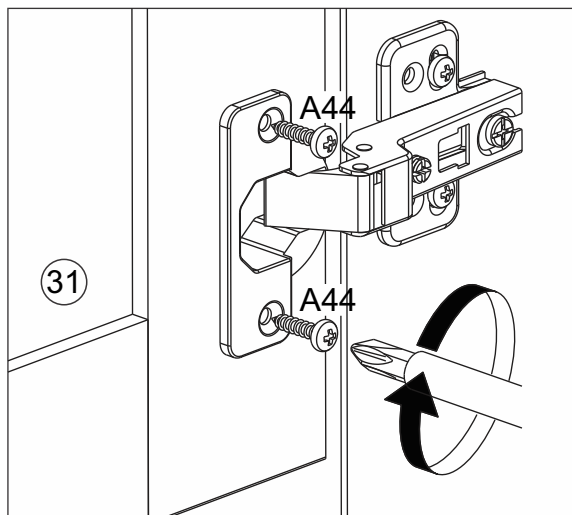

You may need to adjust the hinges (F10)
before installing the door

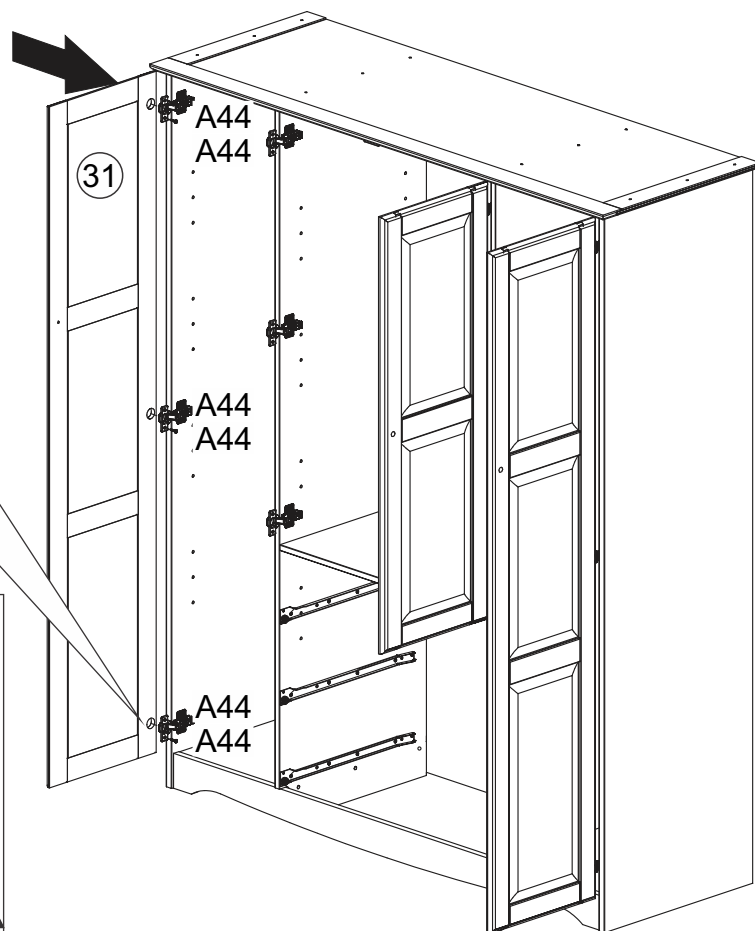



A44




3,5x14

06


25)

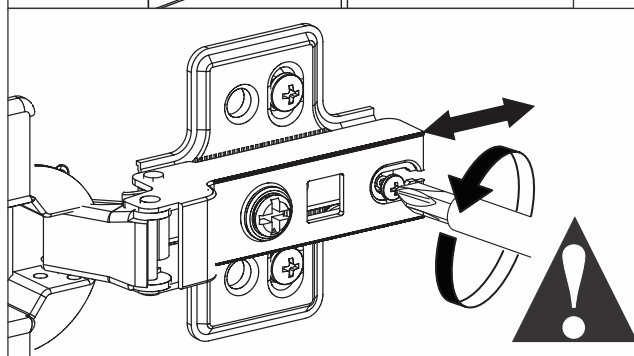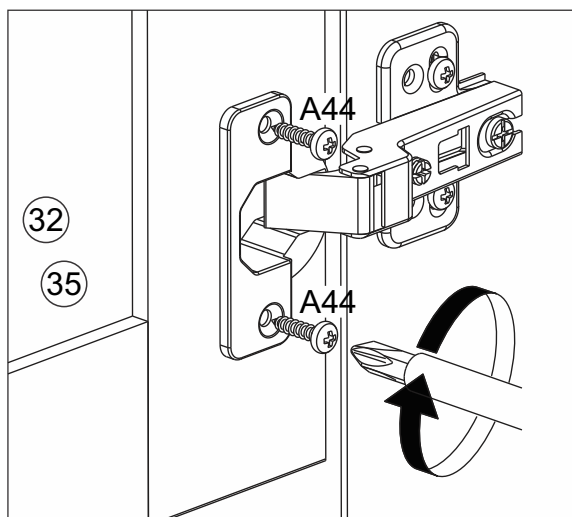

You may need to adjust the hinges (F10)
before installing the door

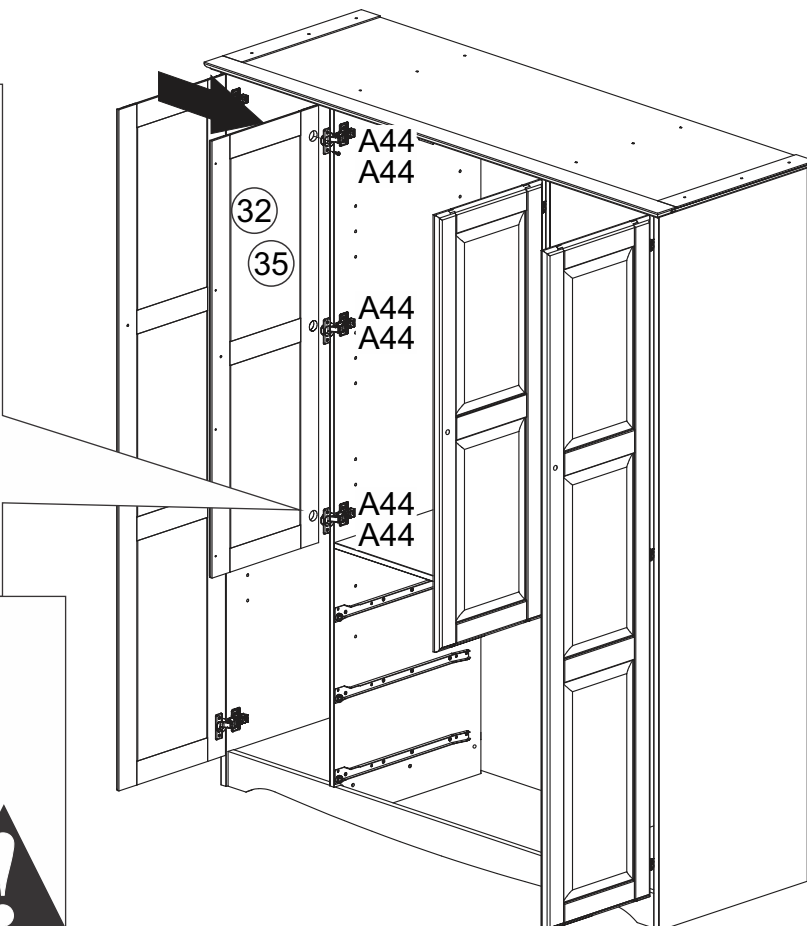



A44




3,5x14




06

26)

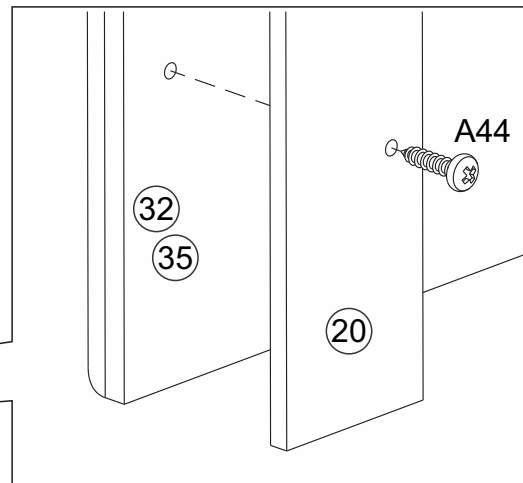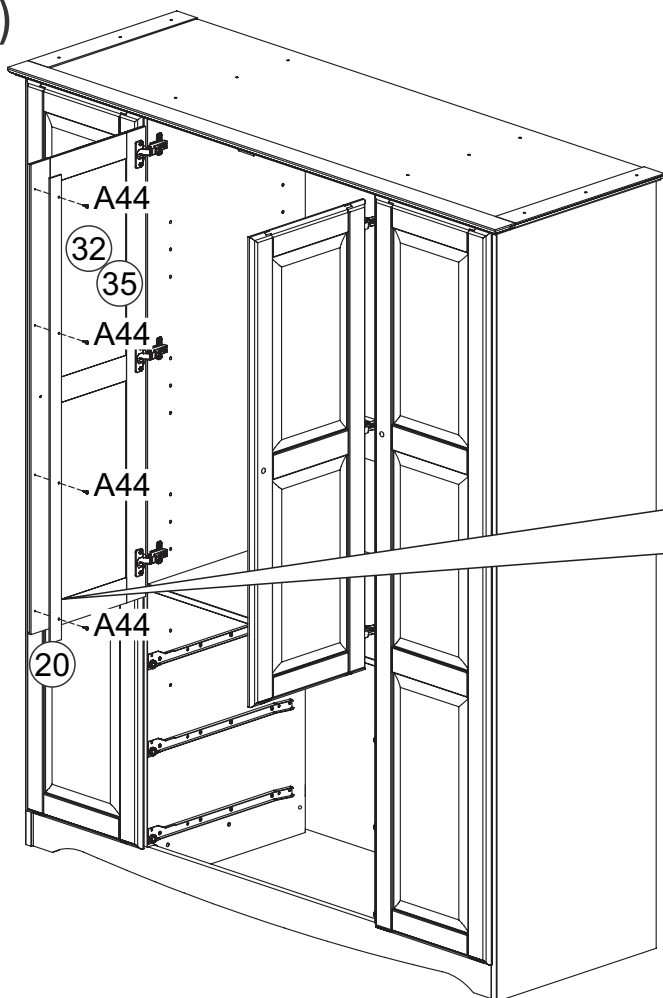













A44		04
3.5x14		

27)



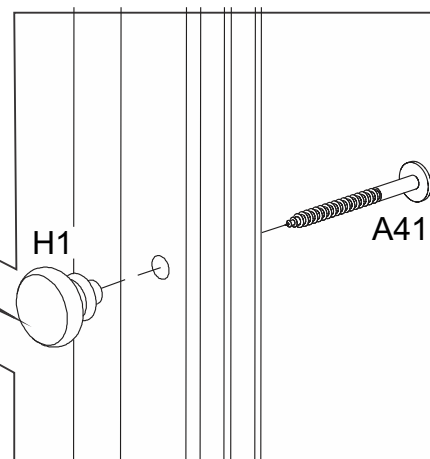
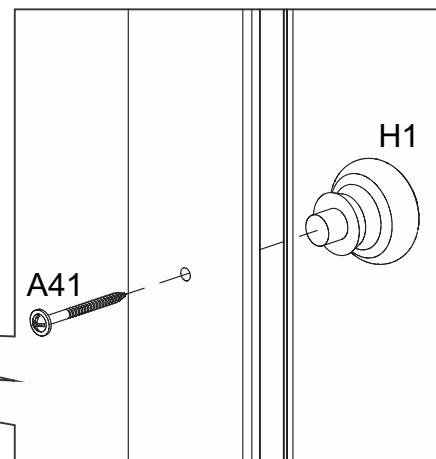
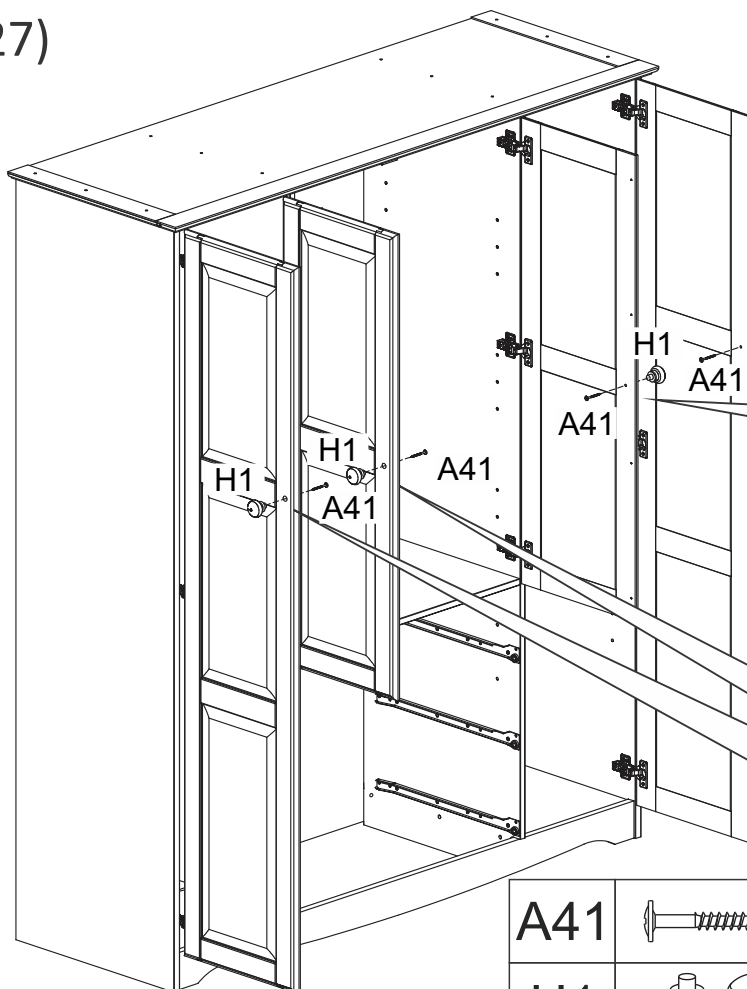


A41		04
4.0x30		
H1		04

28) HINGE ADJUSTMENT GUIDE.

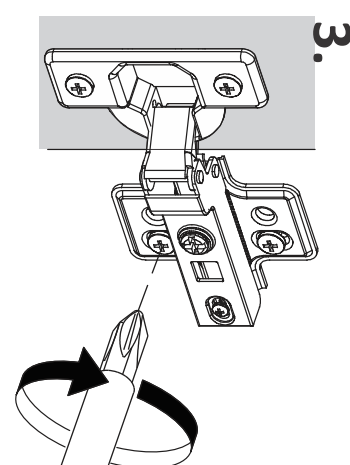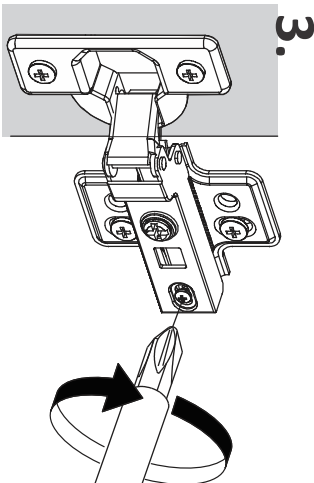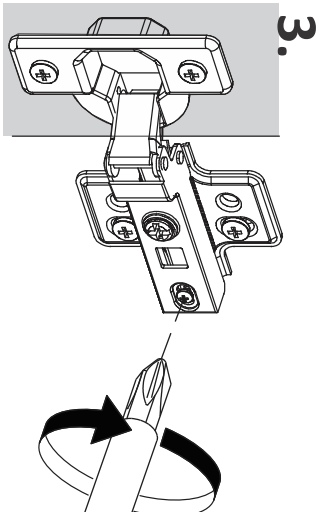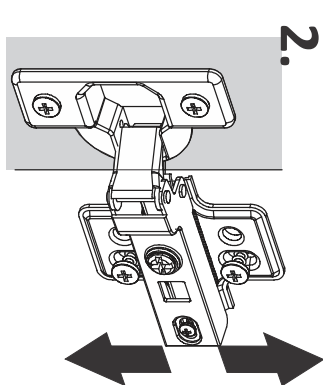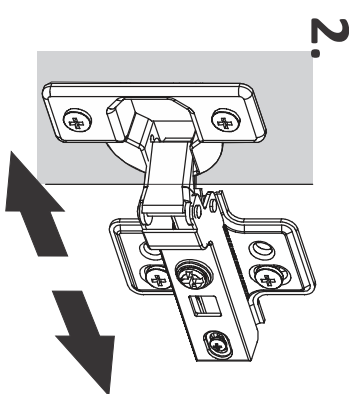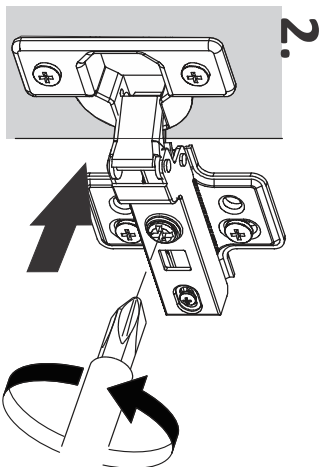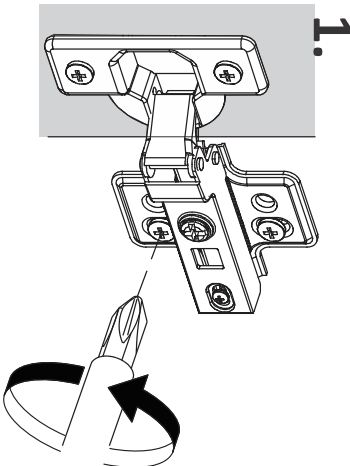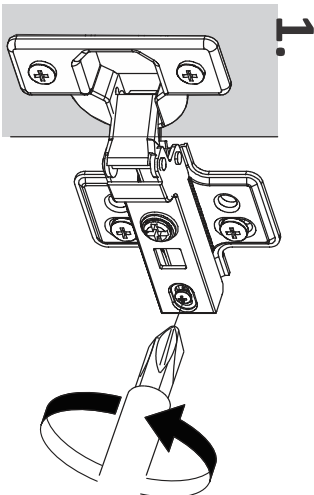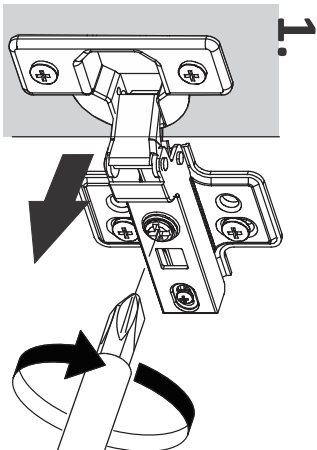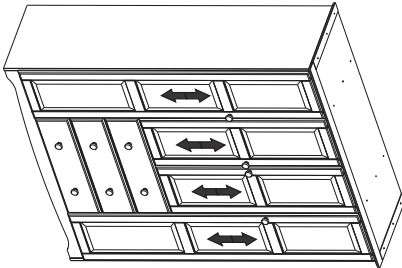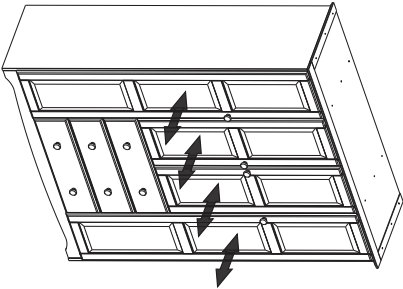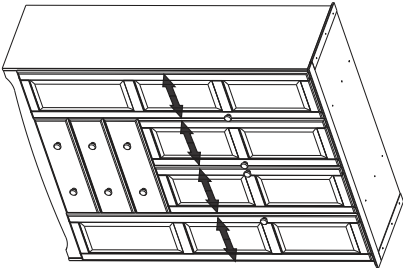


29) 3x

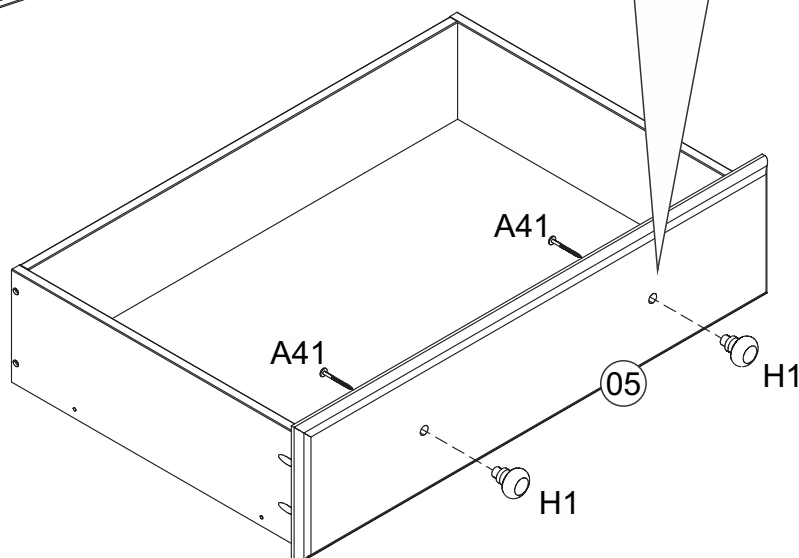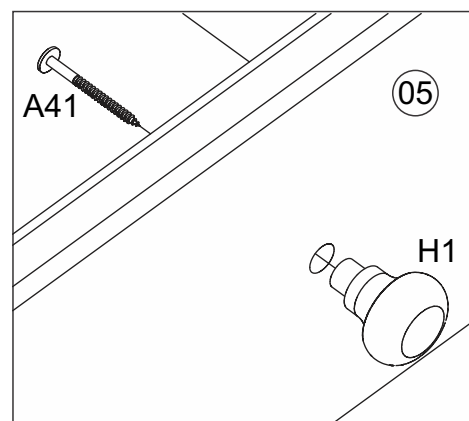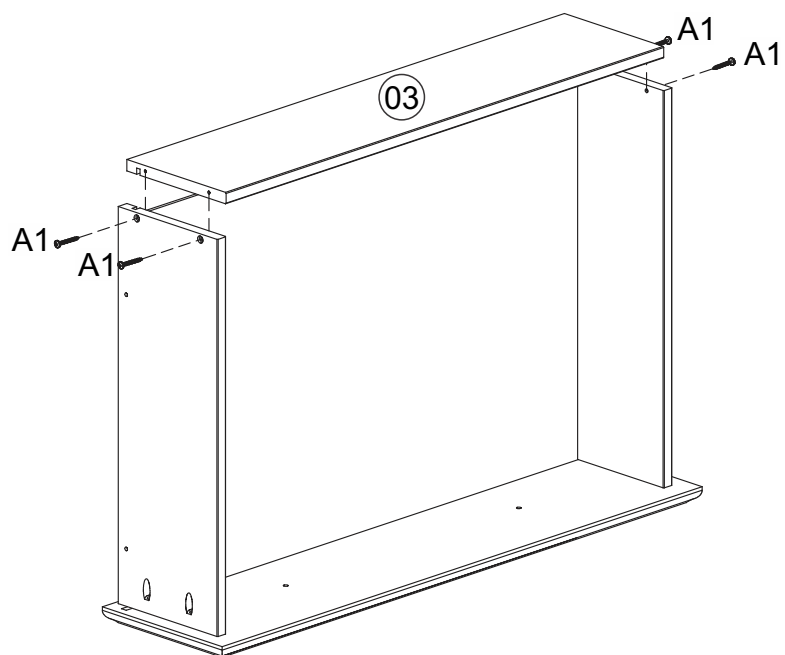
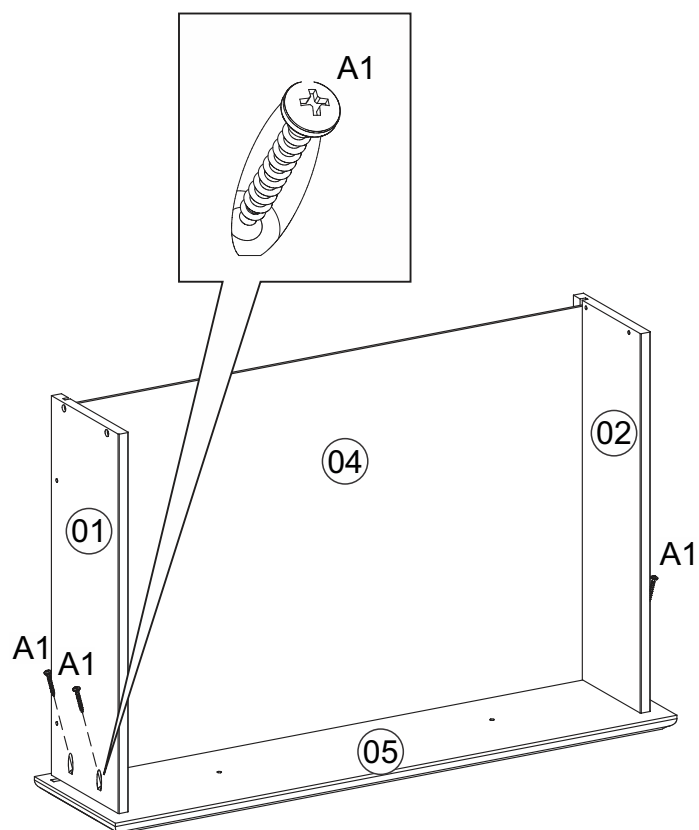
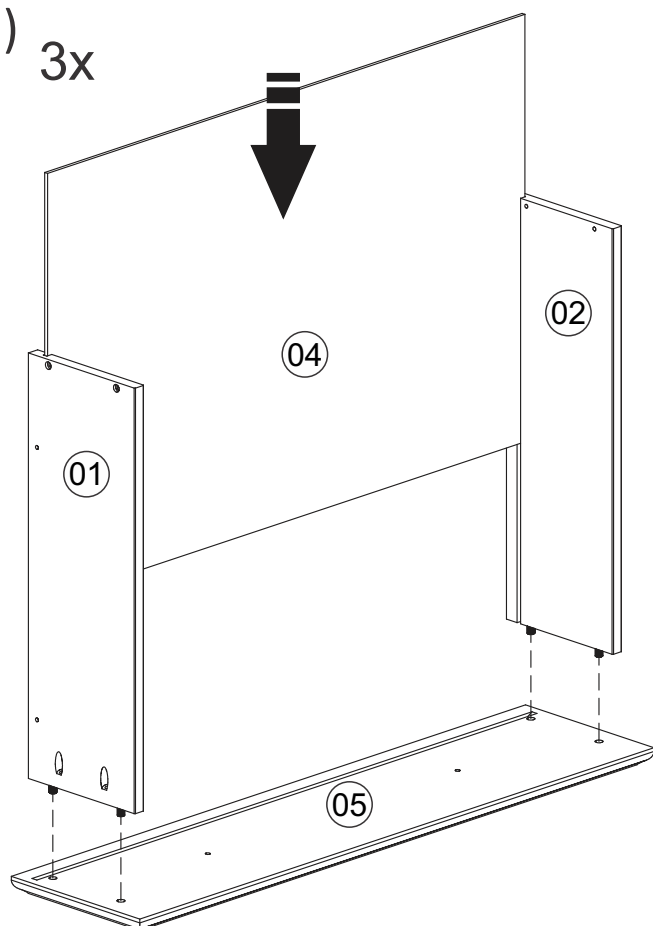


A1	 4,0x30	24
A41	 4,0x30	06
H1		06

30)

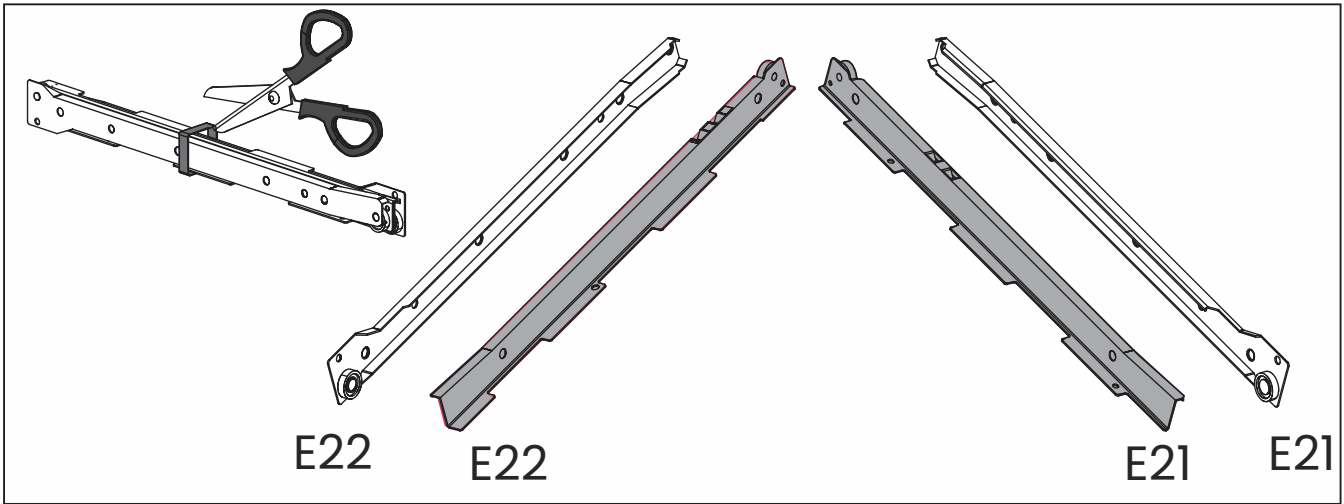




Flip the assembled drawer upside down to install glides.

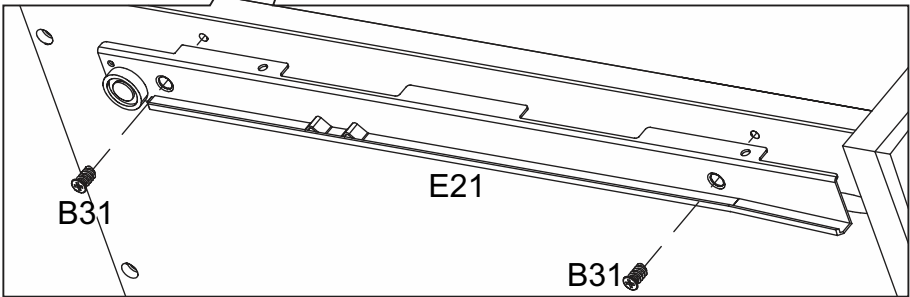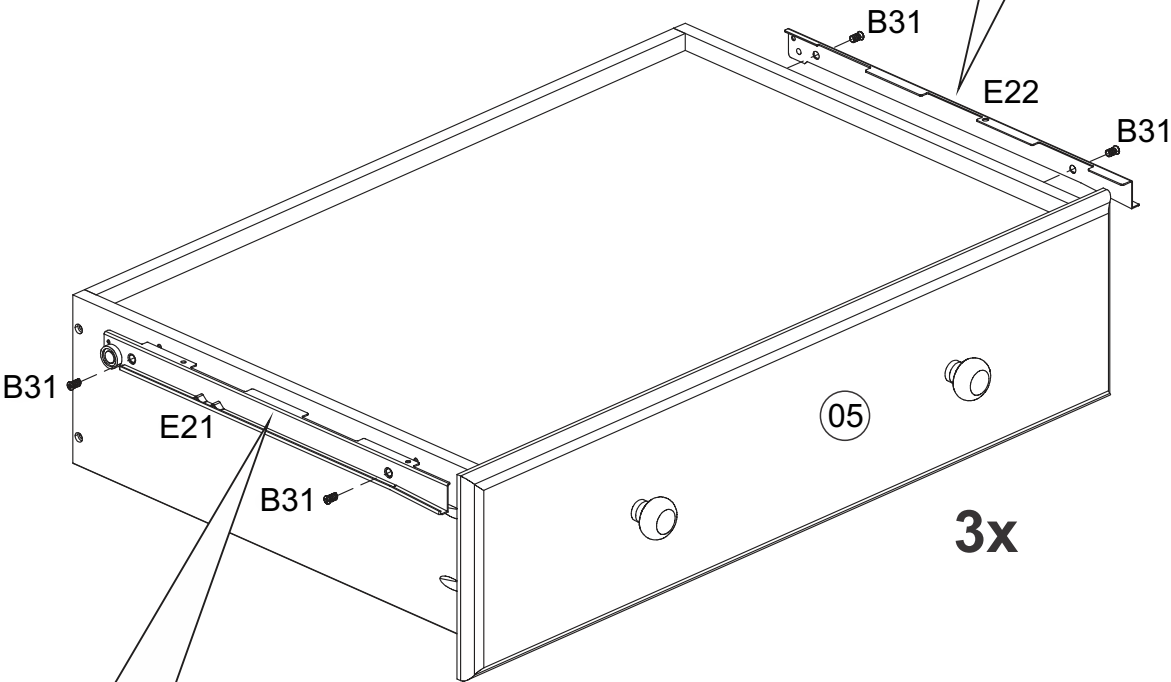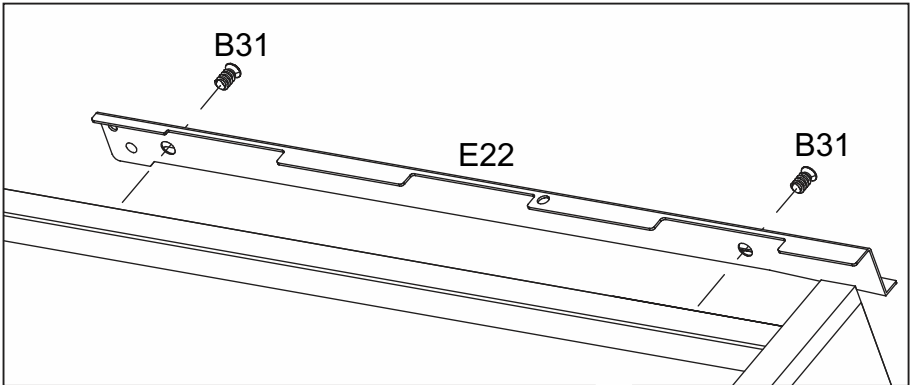






B31  6,0x10 12	E21  Drawer RIGHT 03	E22  Drawer LEFT 03
--	--	---

31)

Place the labeled drawer on the top position.

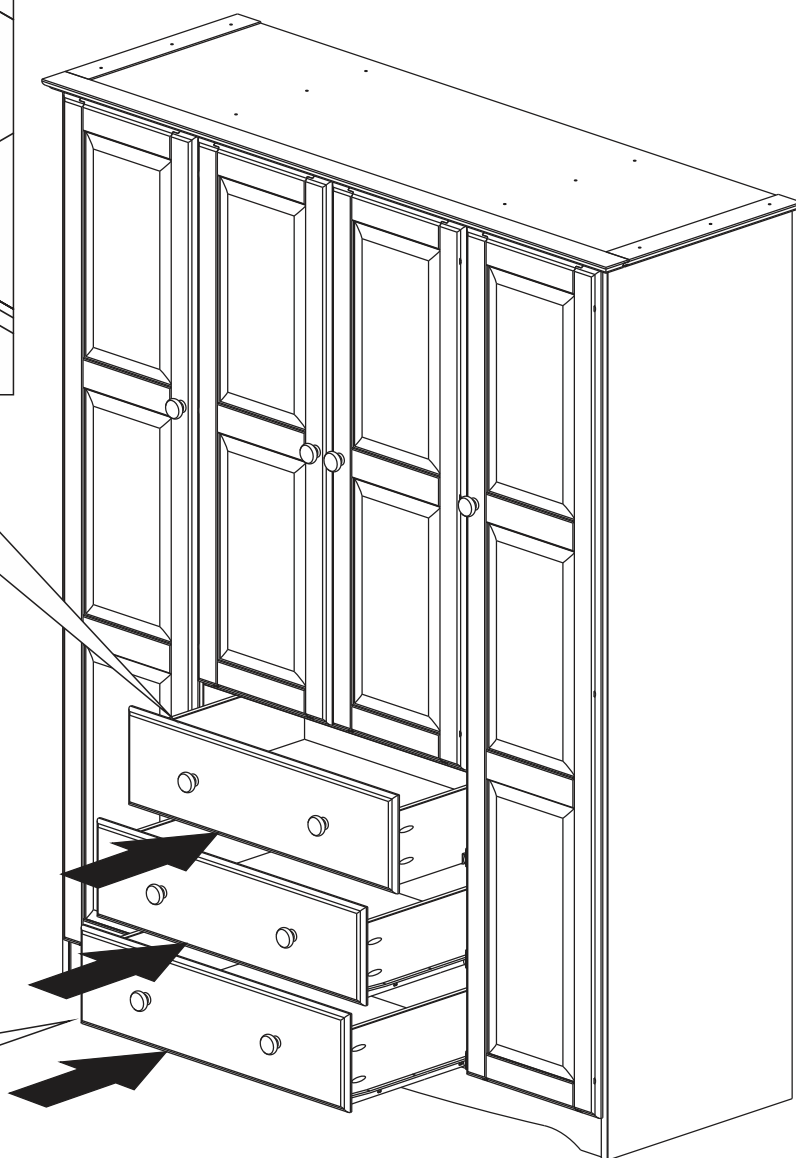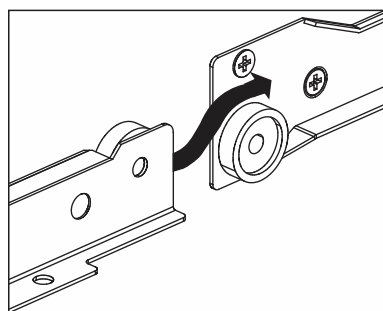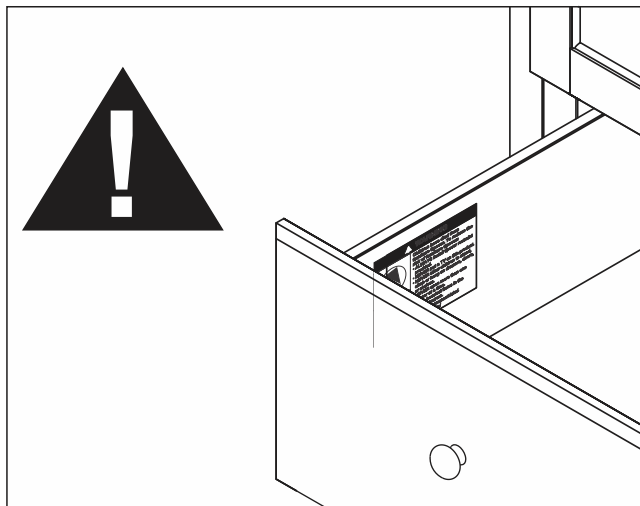

32) Tip-over Restraint Kit Installation

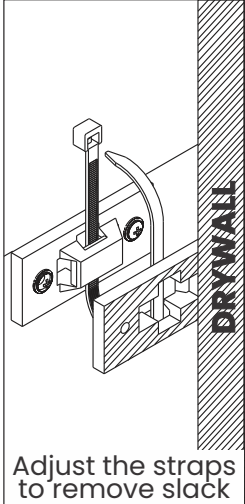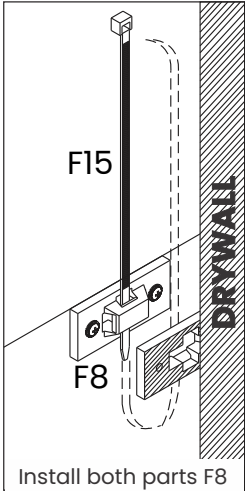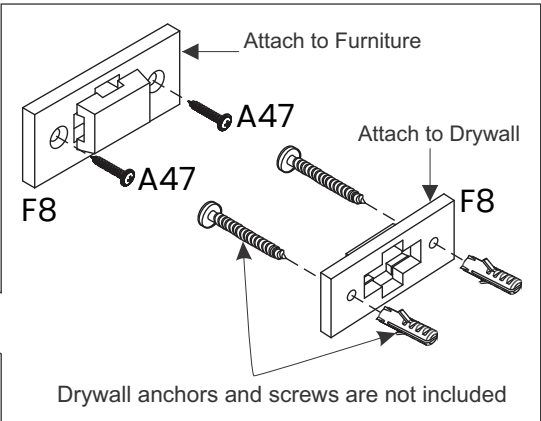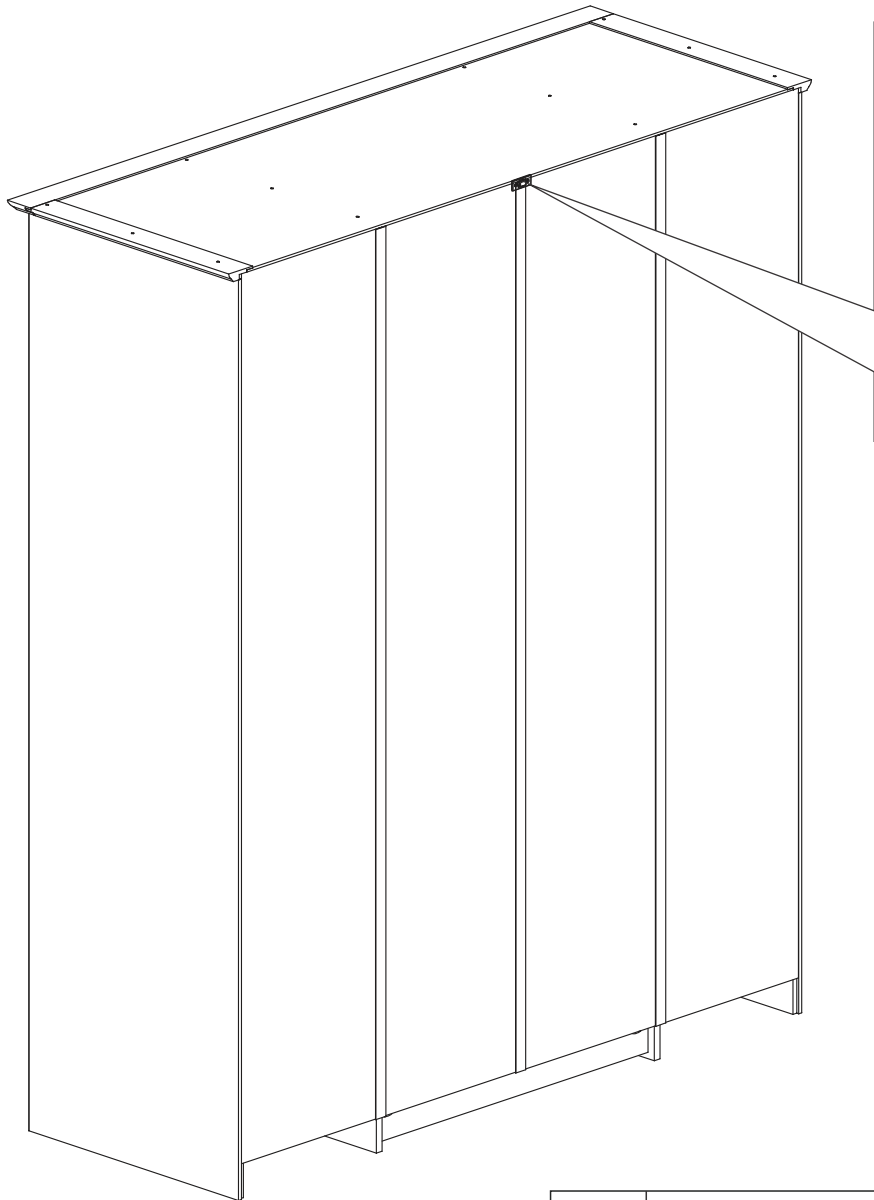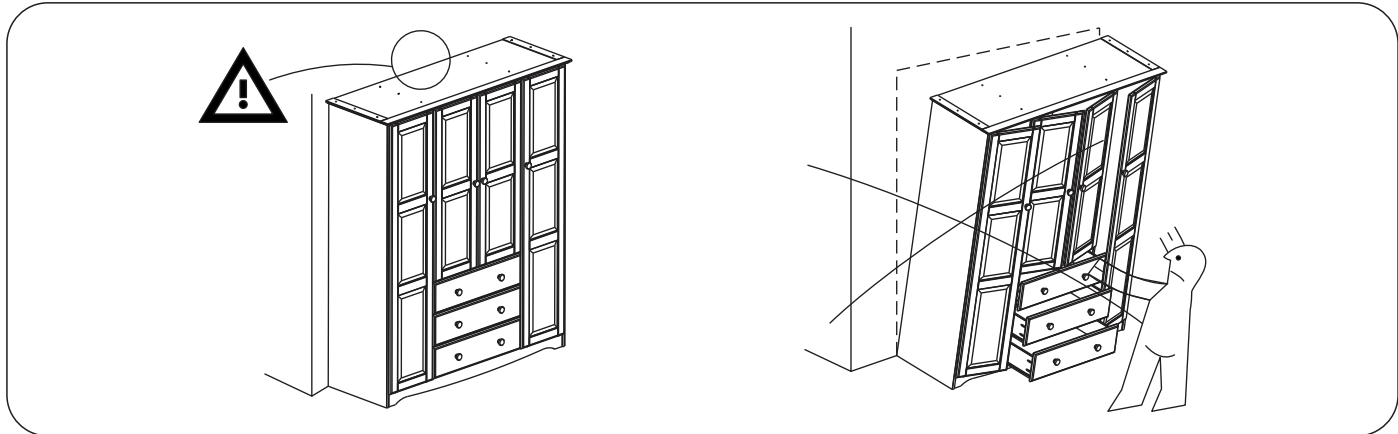

A47	 3,0x20	2
F8		2
F15		1