



Assembly Instructions

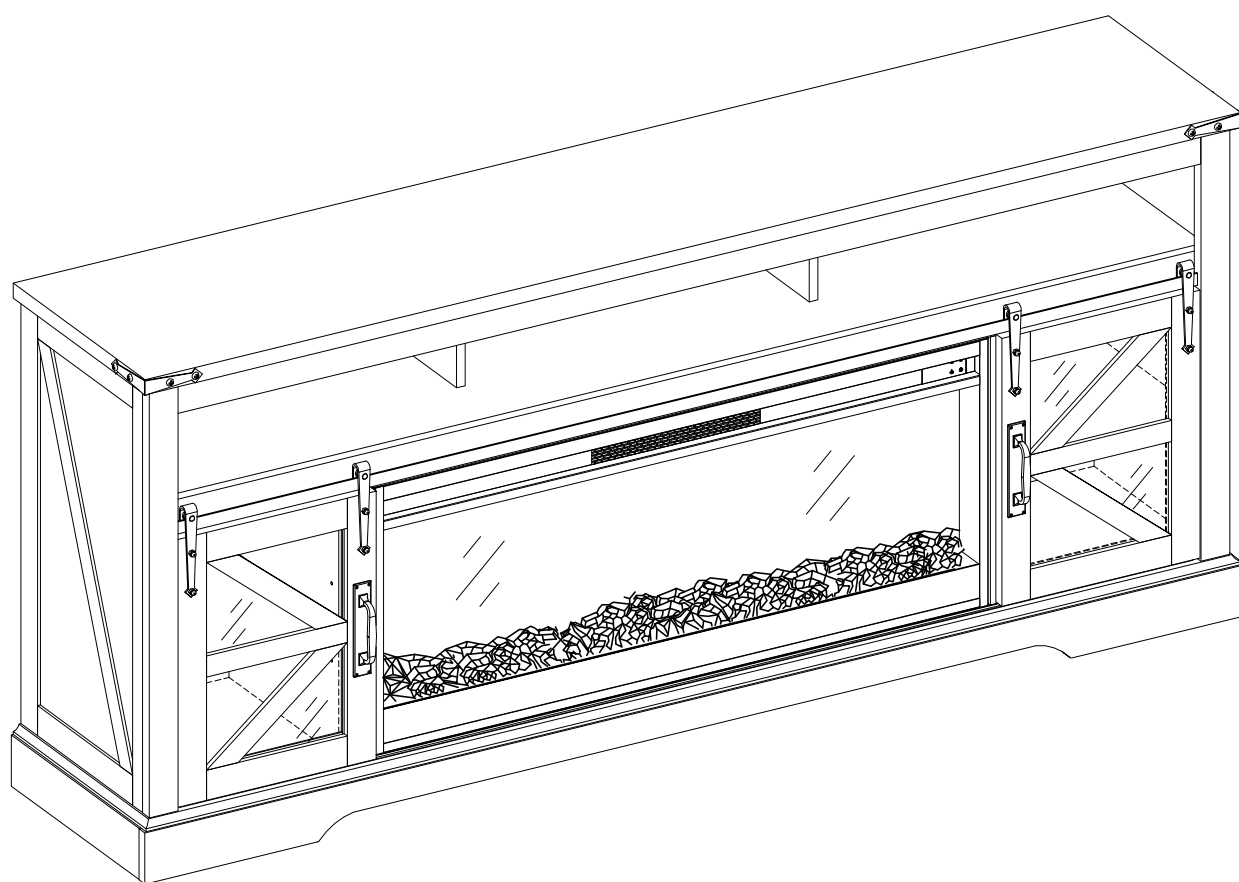


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

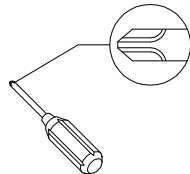

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

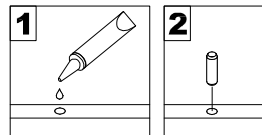


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

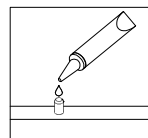


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

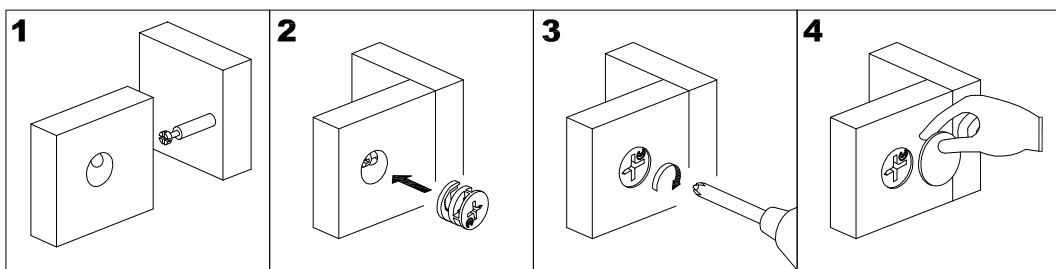








- VII. Power tools should not be used to assemble this product .

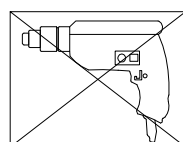


Parts List

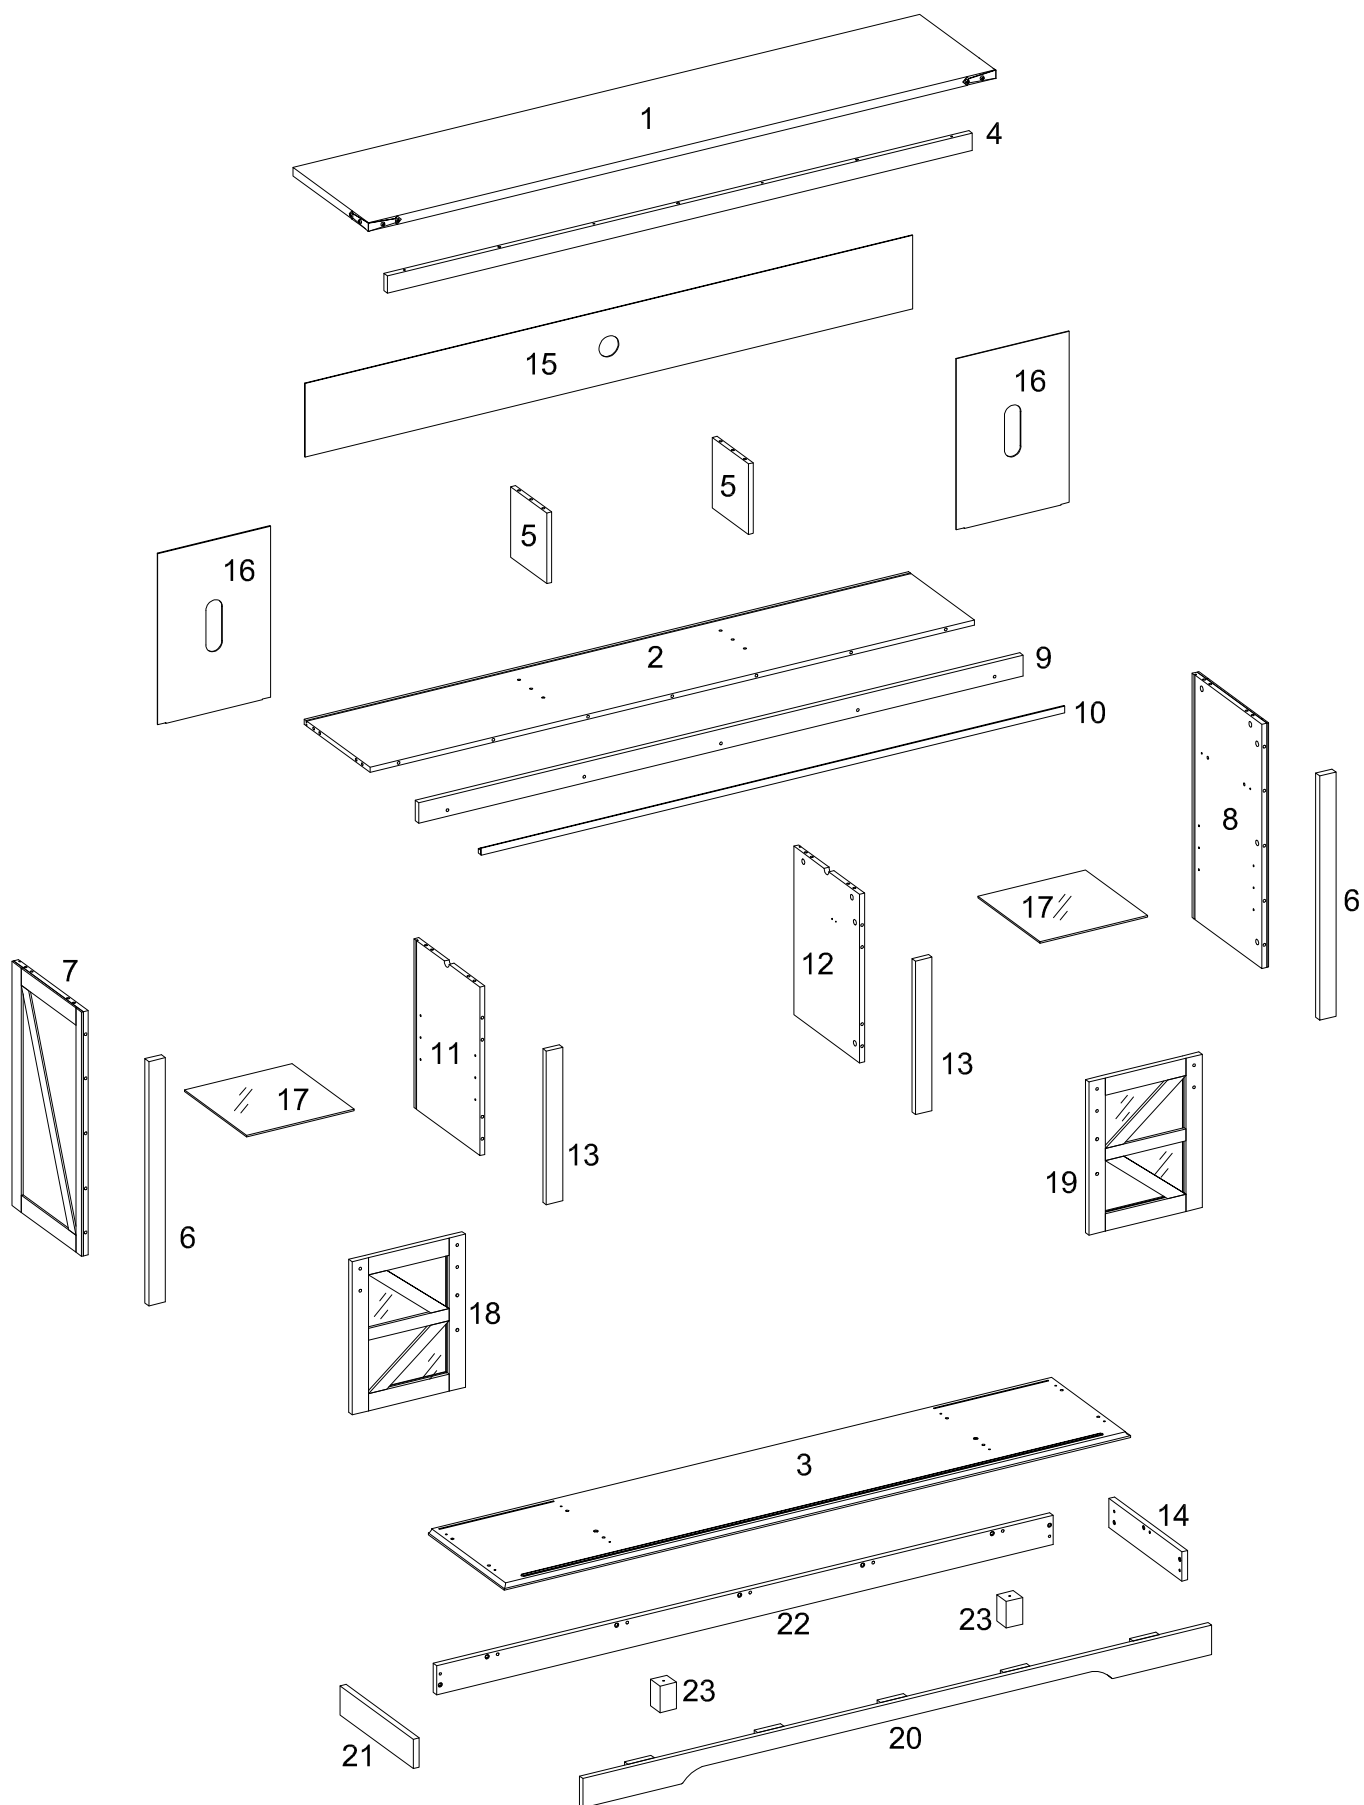


Hardware List

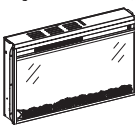A		Ø8x30mm	Wood dowel	38 pcs
B		Ø6x35mm	Cam bolt	30 pcs
C		Ø15x11mm	Cam lock	30 pcs
D			Sticker	30 pcs
E			Plate	4 pcs
F			Shelf support pin	8 pcs
G		Ø6x13mm	Bolt	32 pcs
H			Glue	1 pc
I		Ø4x50mm	Screw	4 pcs
J			Plastic wedge	20 pcs
K		Ø3x17mm	Flat-head screw	20 pcs
L		M 4	Hex key	1 pc
M			Pulley	4 pcs
N			Nut	8 pcs
O		Ø6x25mm	Bolt	13 pcs
P			Connector	16 pcs
Q			Wrench	1 pc
R		Ø4x16mm	Handle bolt	4 pcs
S			Handle	2 pcs
T		Ø4x12mm	Screw	12 pcs
U			Tipping Restraint Hardware	2 sets
V		Ø6x50mm	Screw	14 pcs
W			L shape bracket	2 pcs
X		RV42V80L-MT8	Fireplace Insert	1 pc
Y			Led strip light	2 pcs
Z		Ø3x12mm	Screw	12 pcs
AA			Clip	6 pcs




Philips head screwdriver required for assembly
(not included)



Step 1

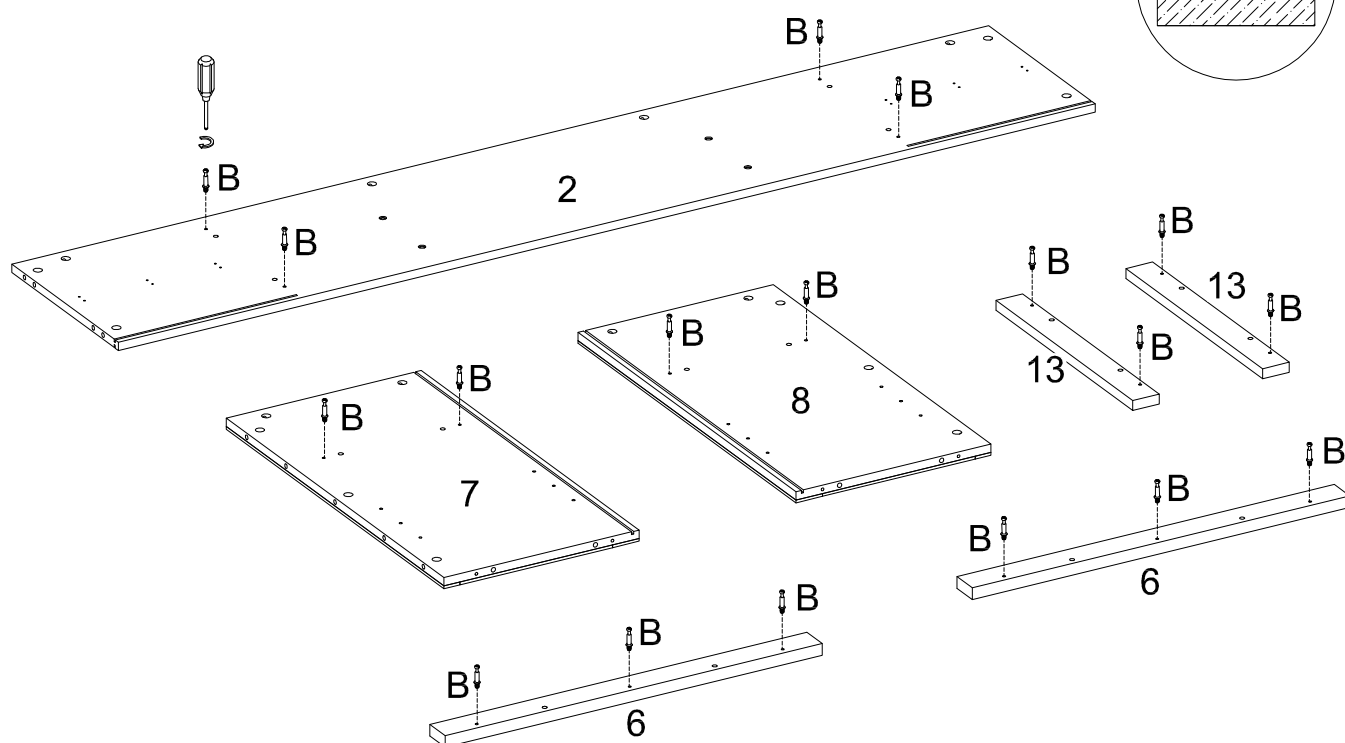


Step 2

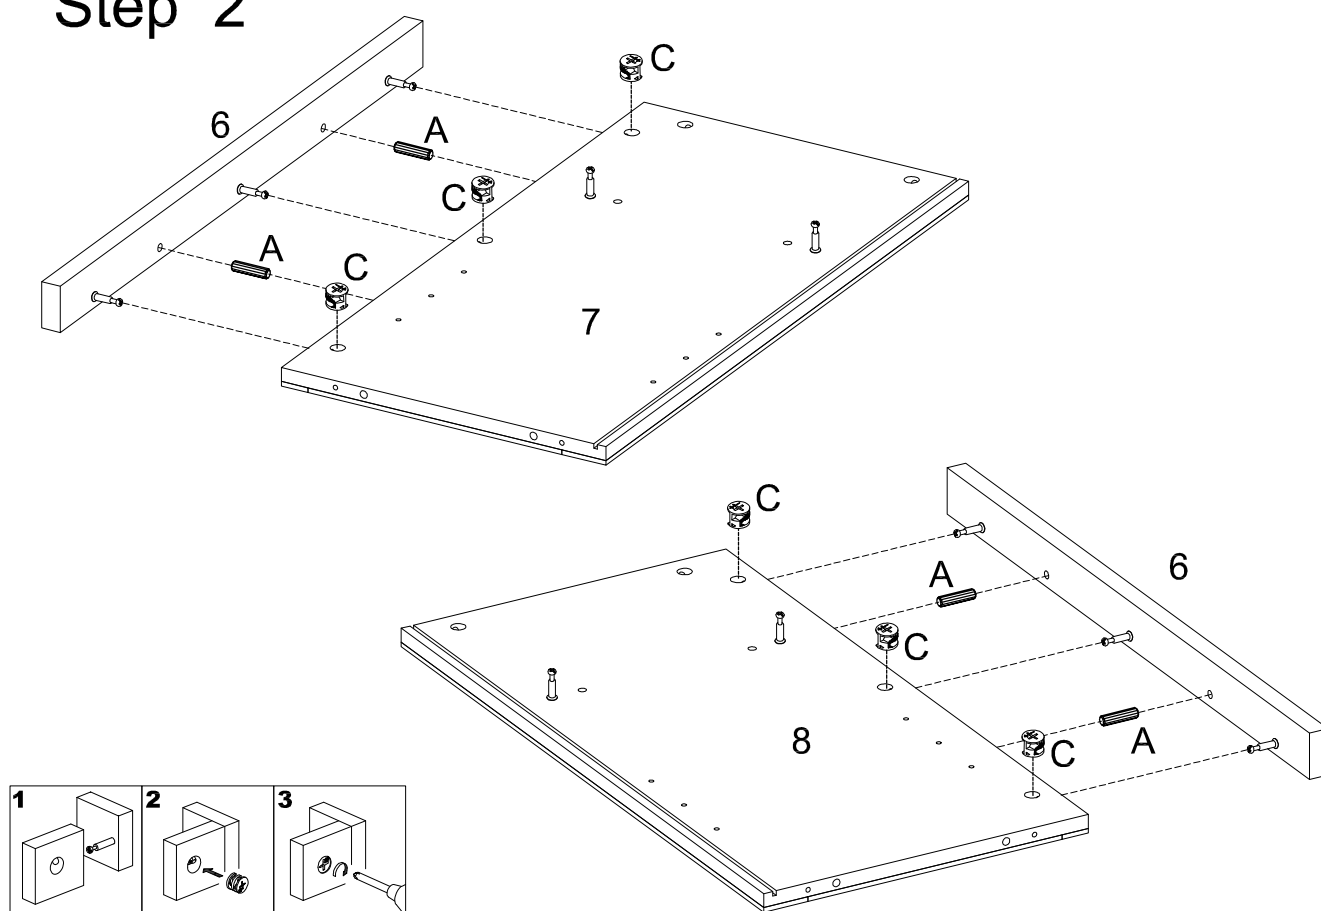


Step 3

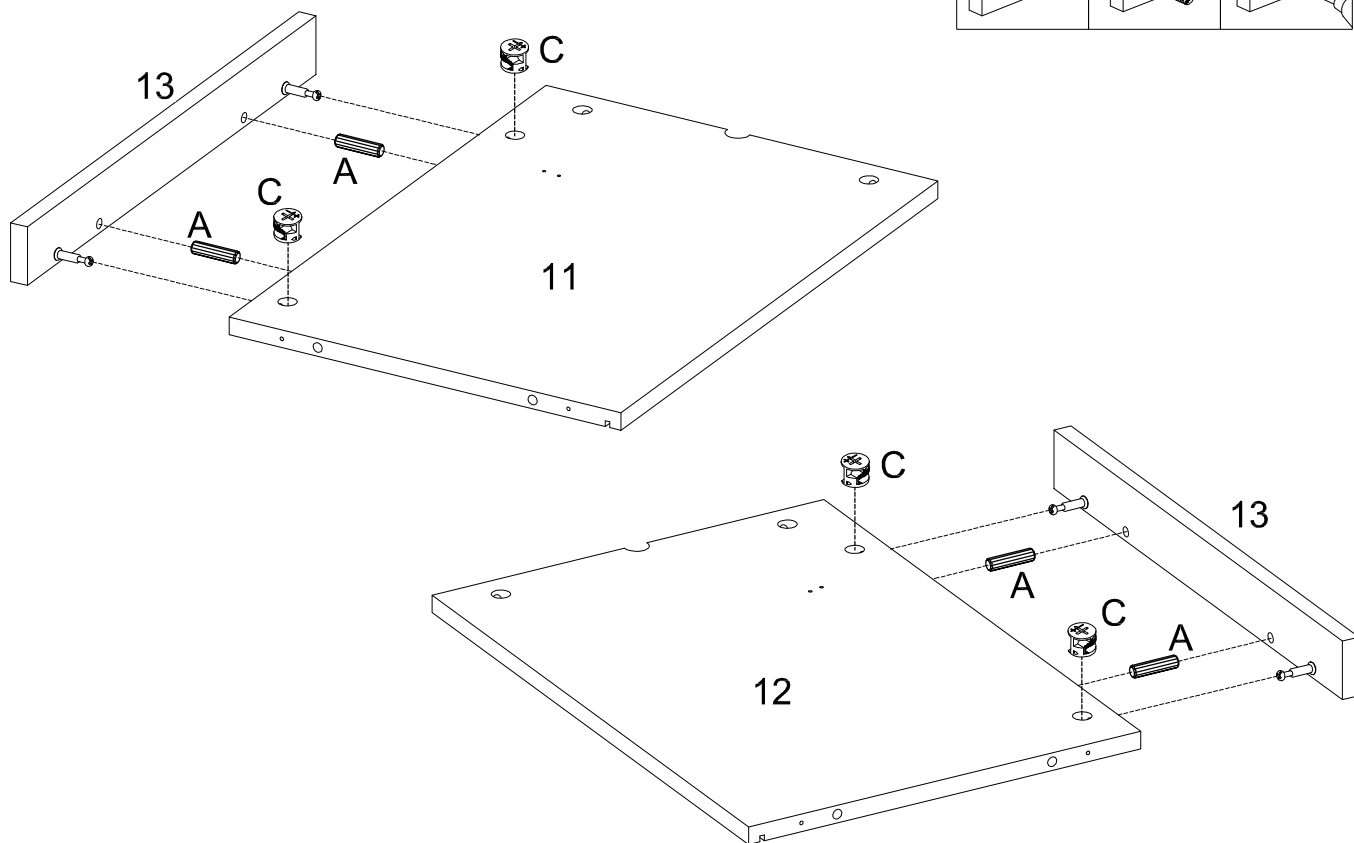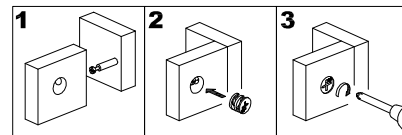


Step 4

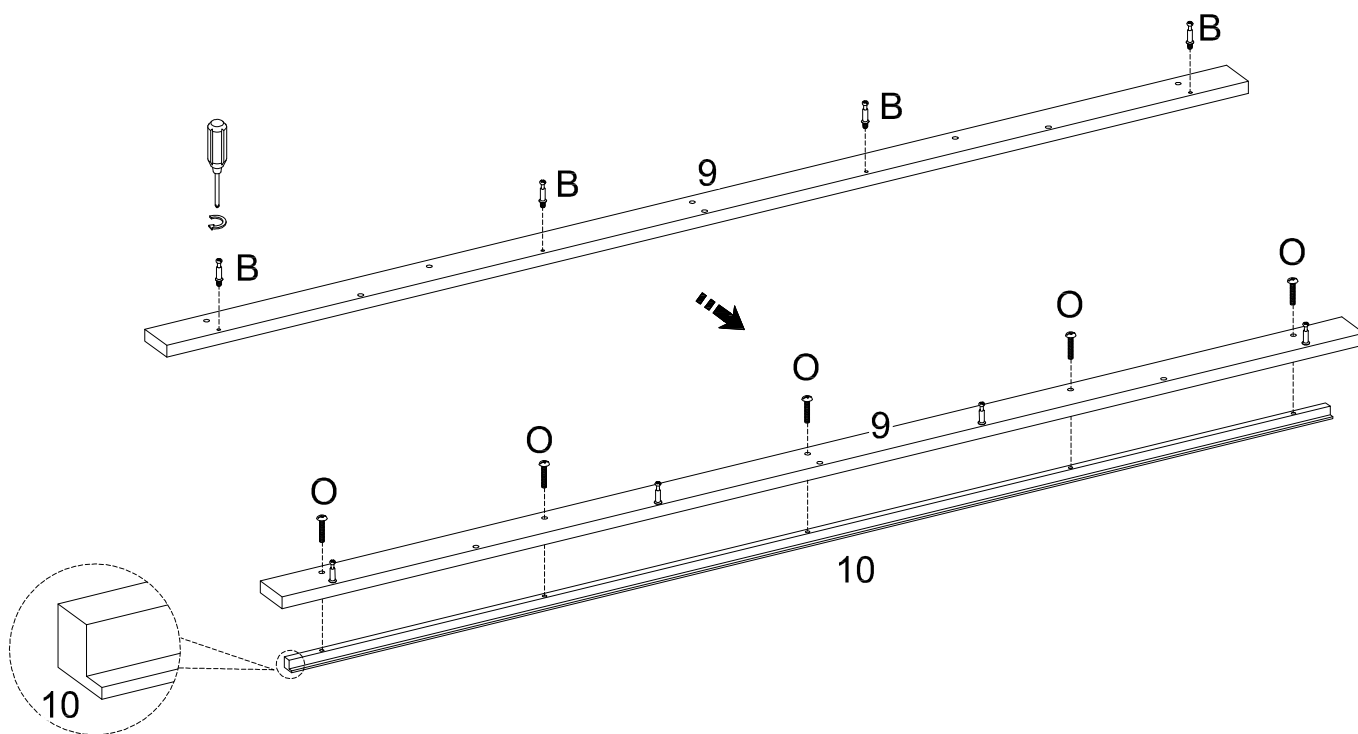


Step 5

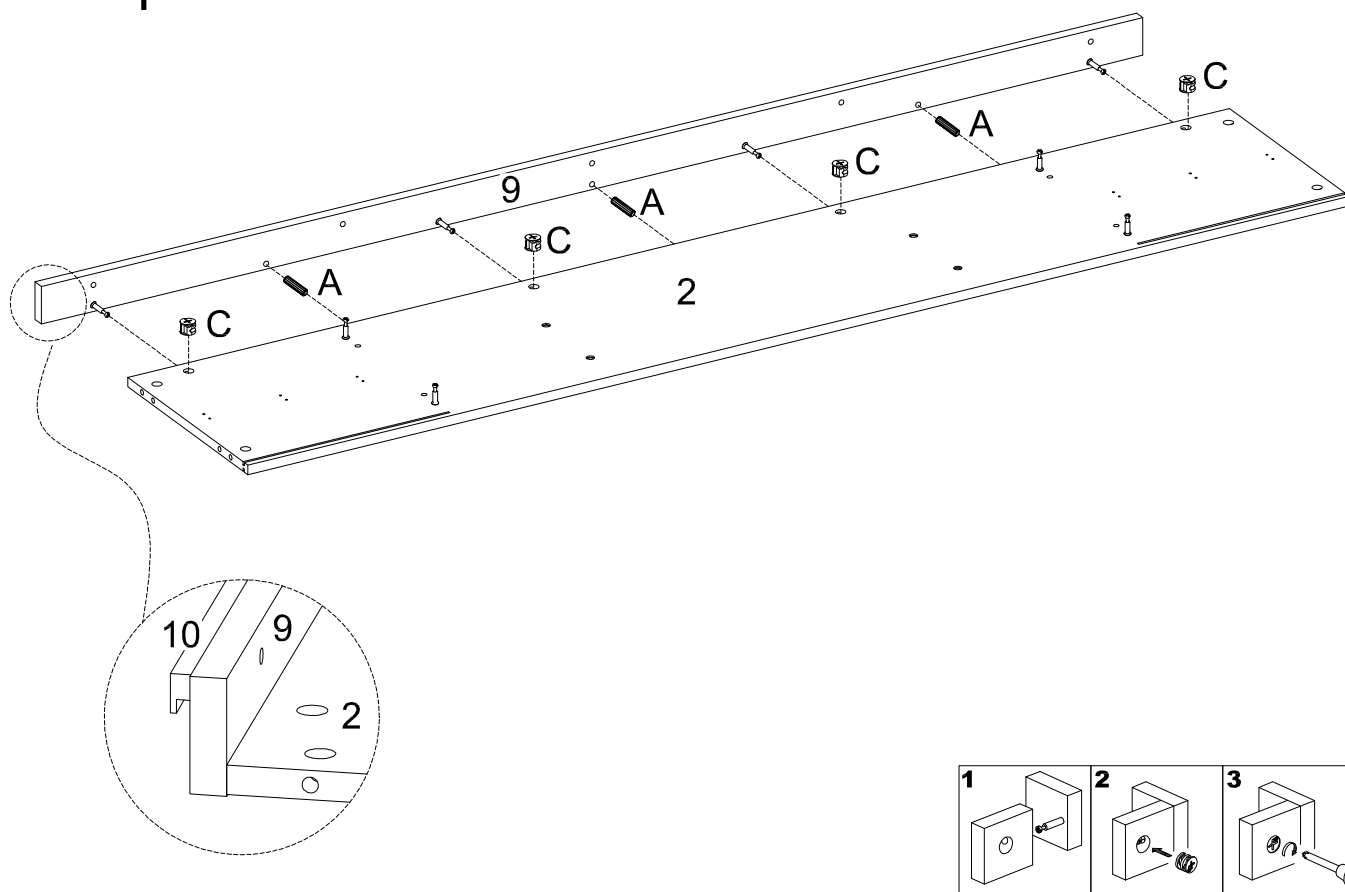



Step 6

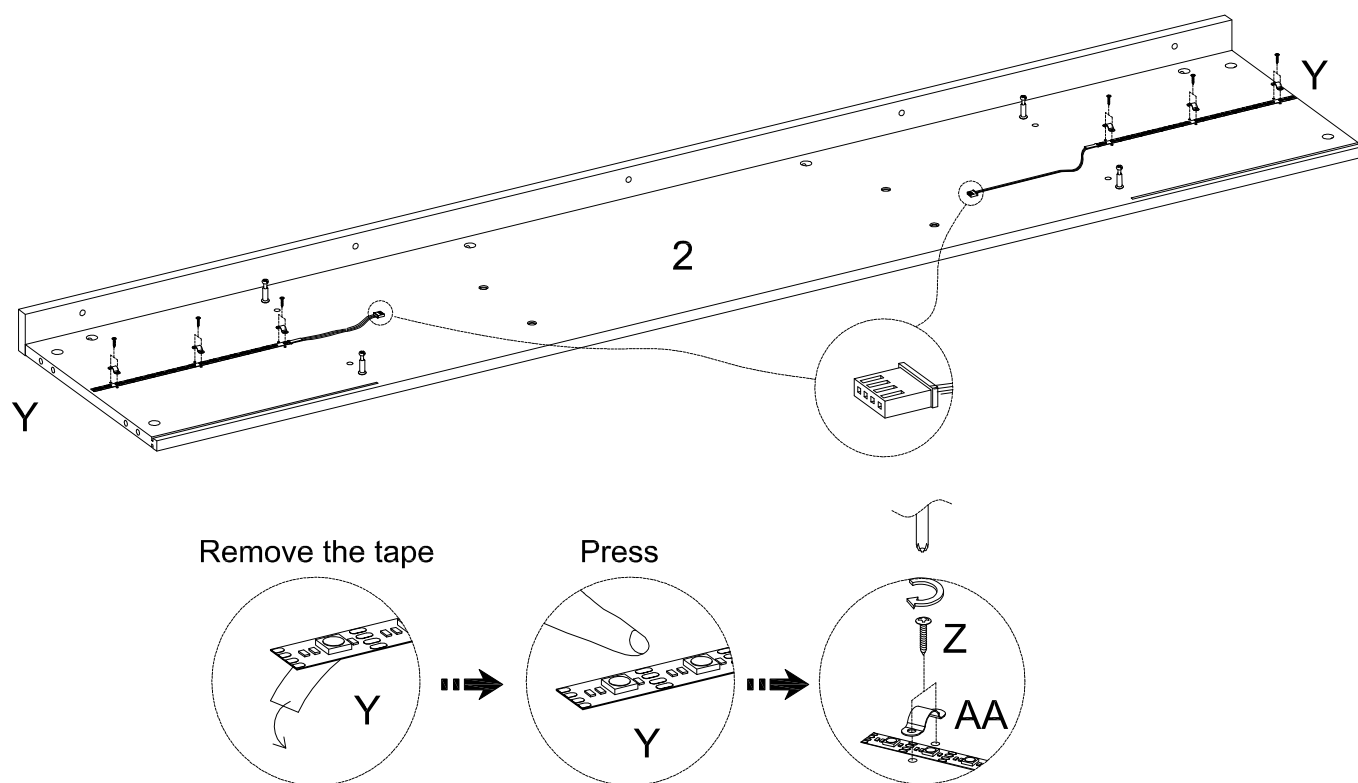



Step 7

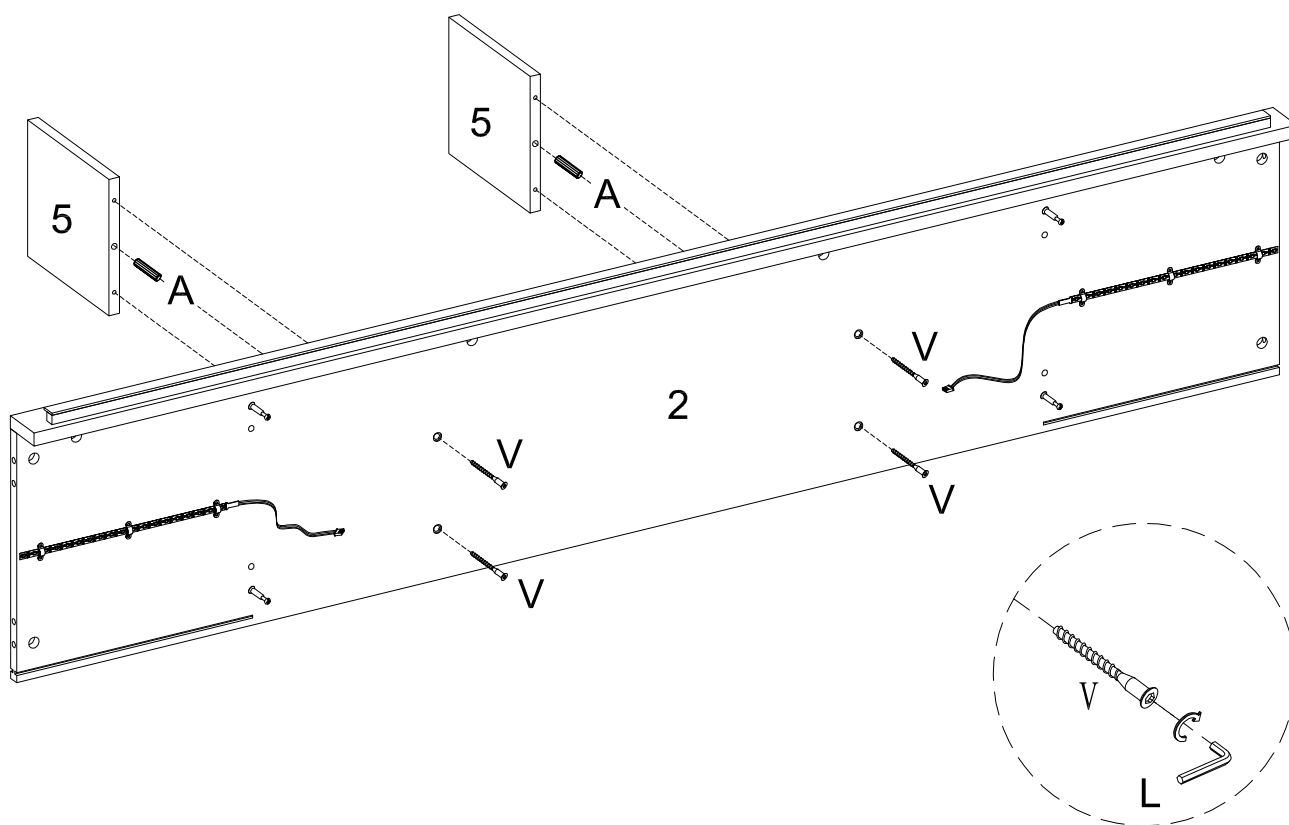


Step 8

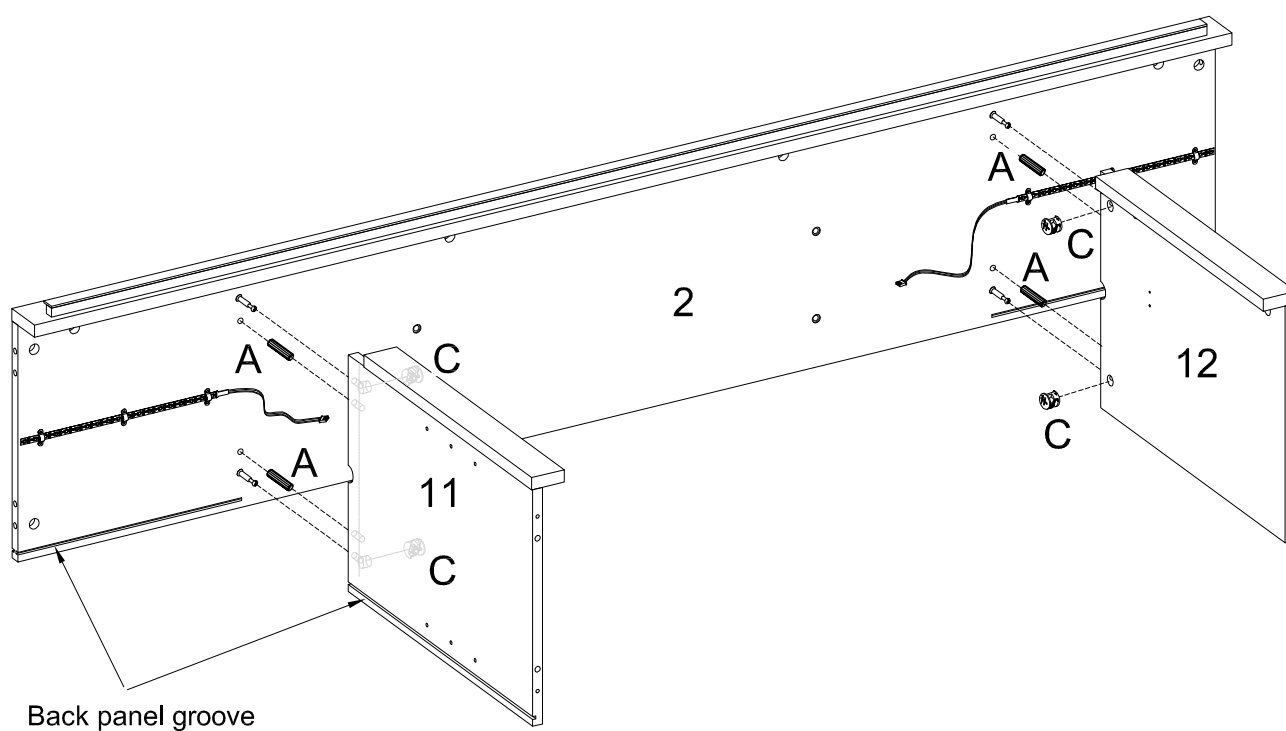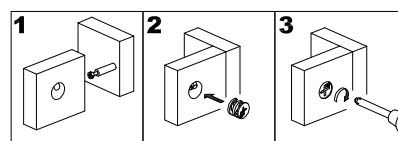


Step 9

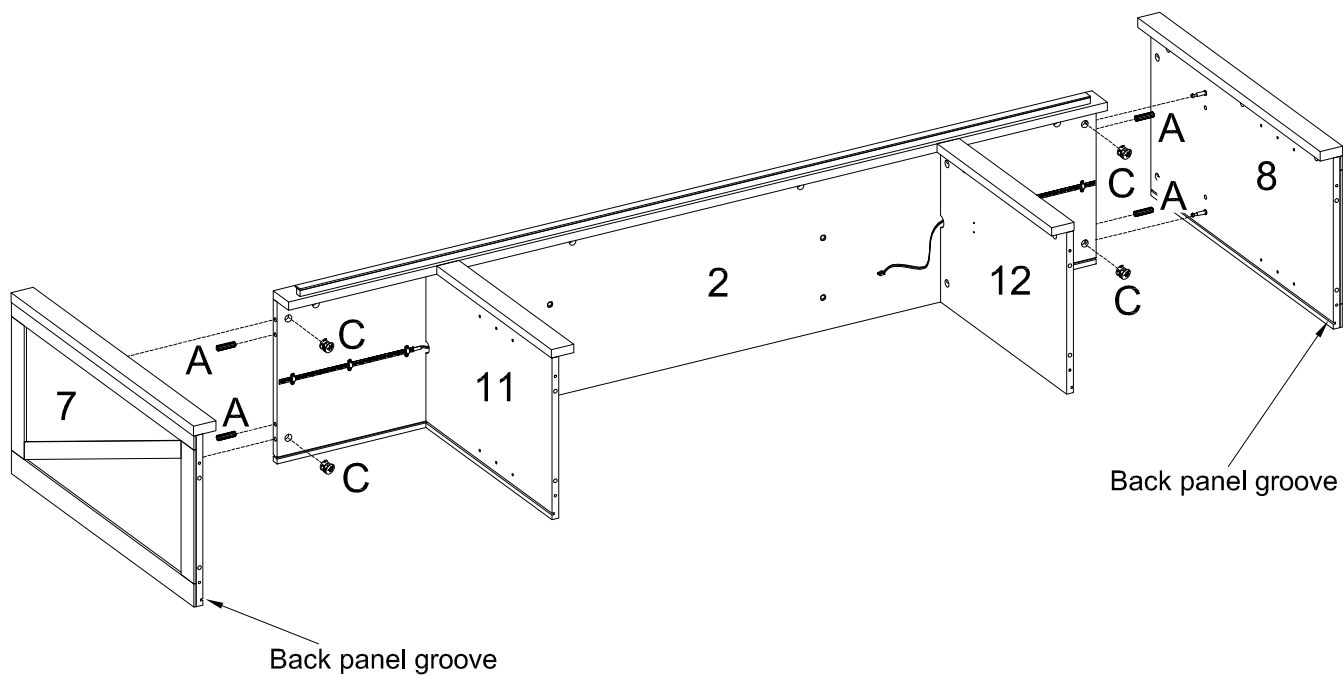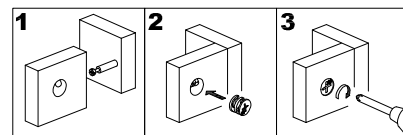


Step 10

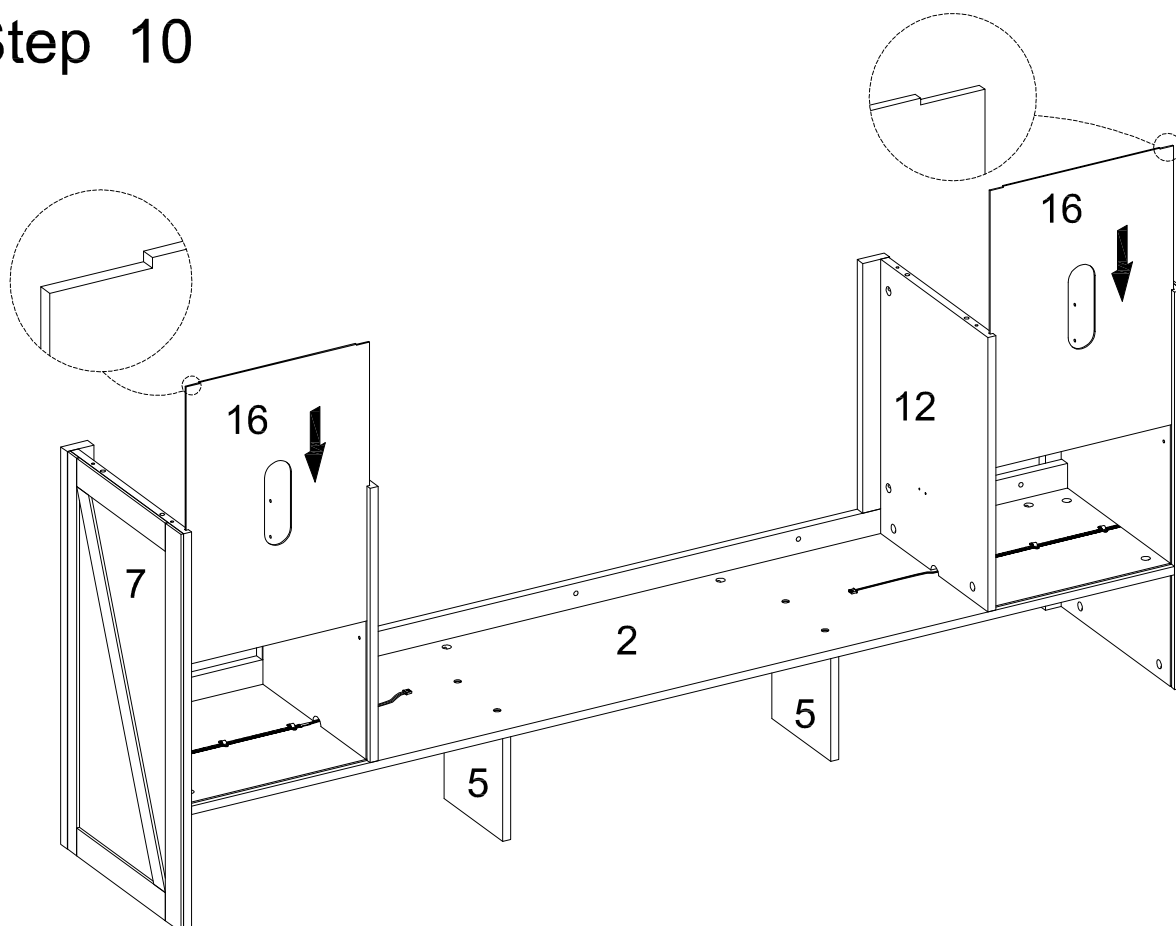


Step 11

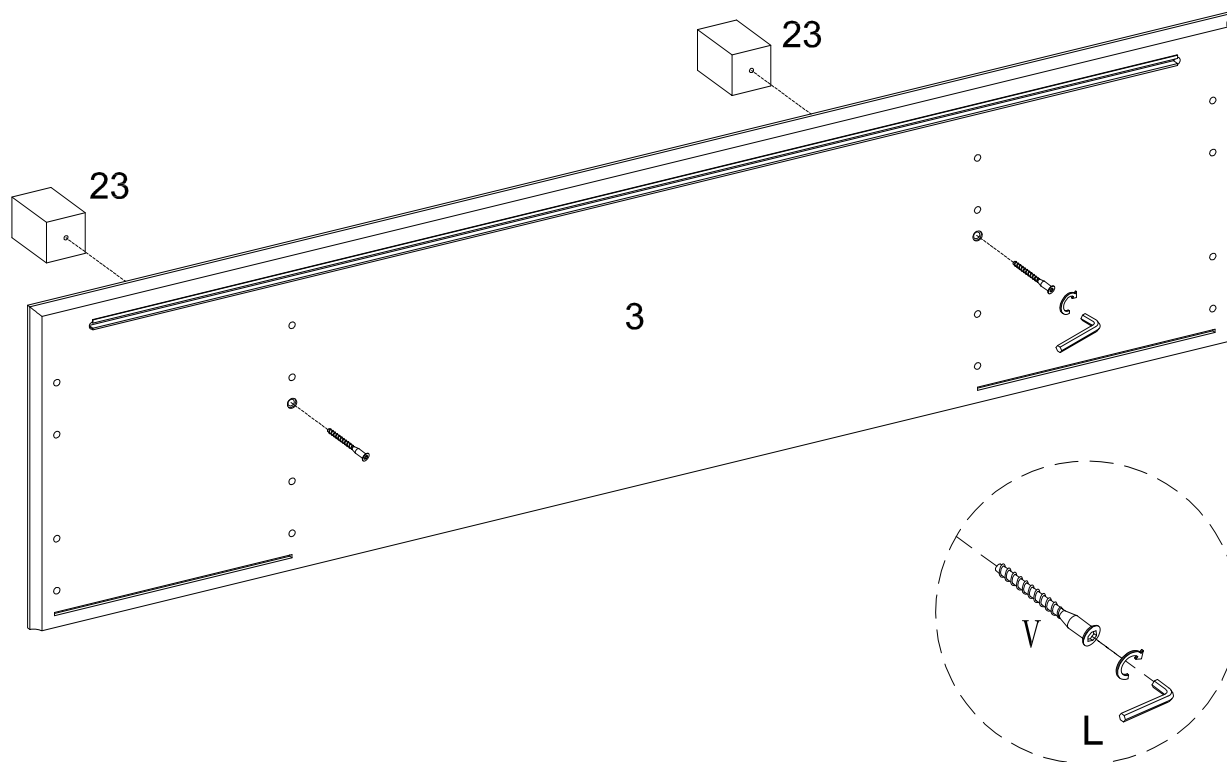


Step 12

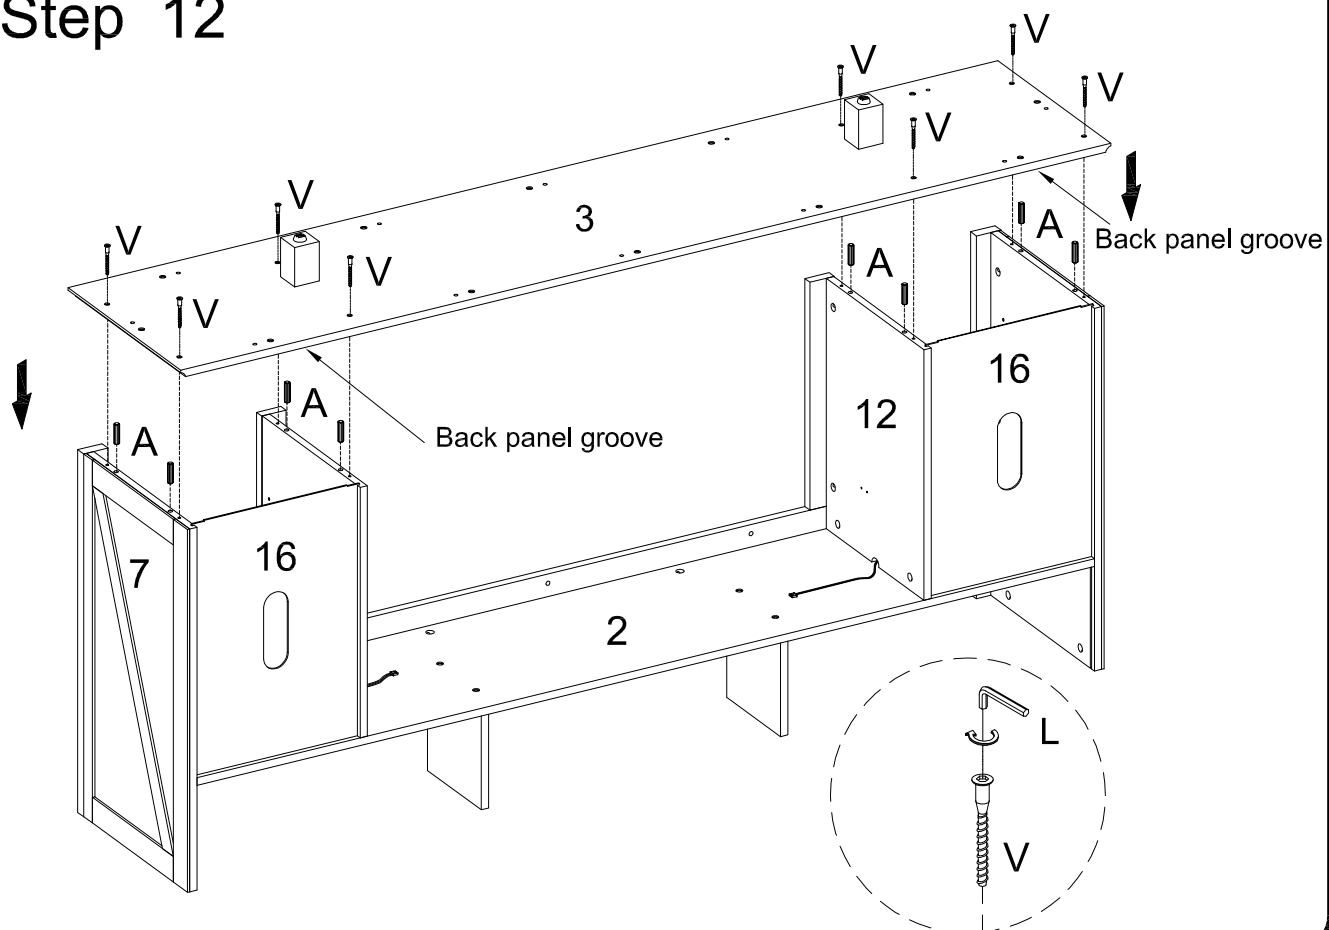


Step 13

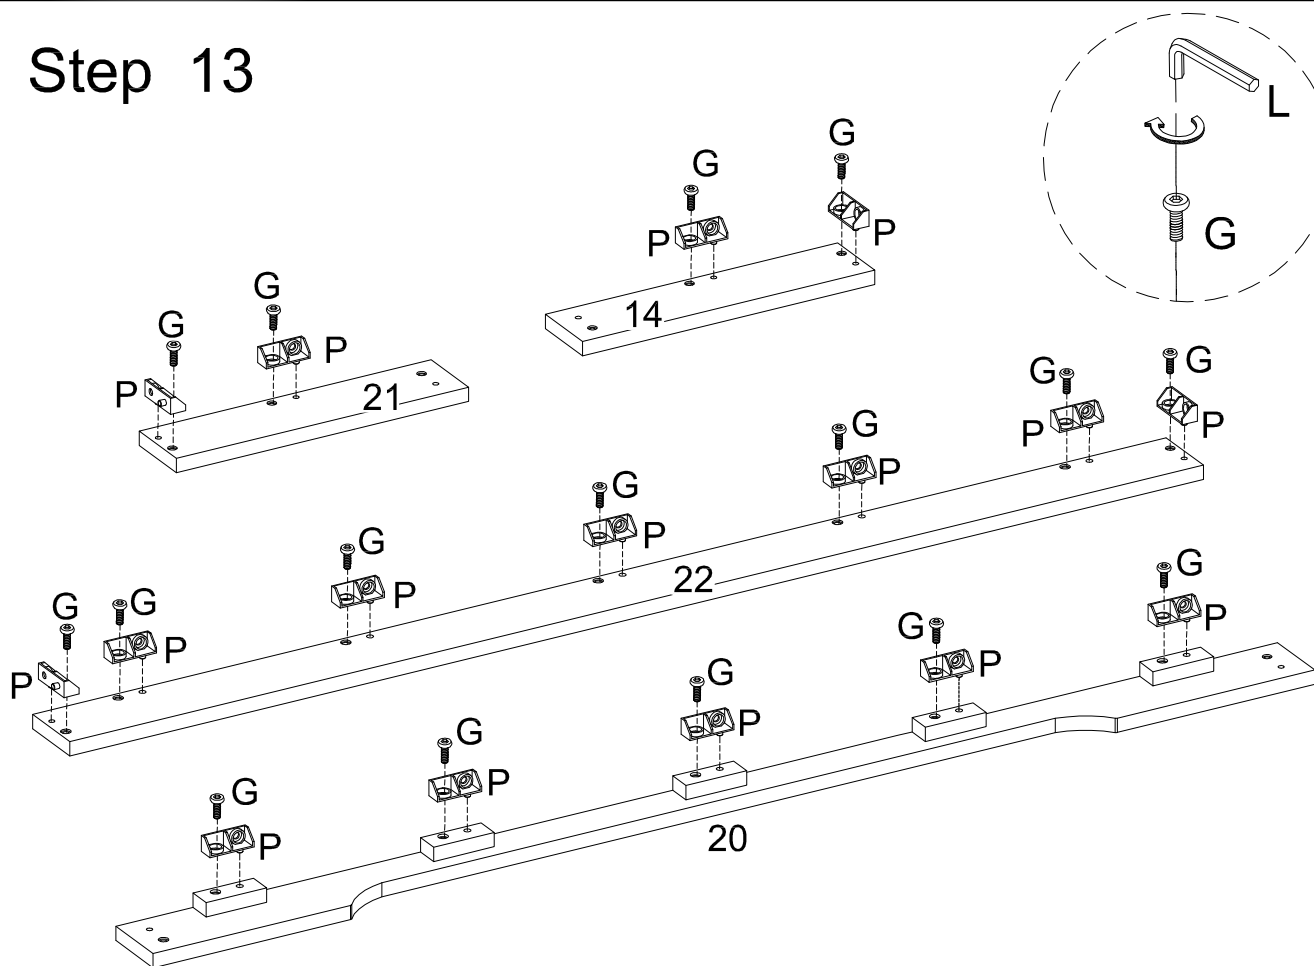


Step 14

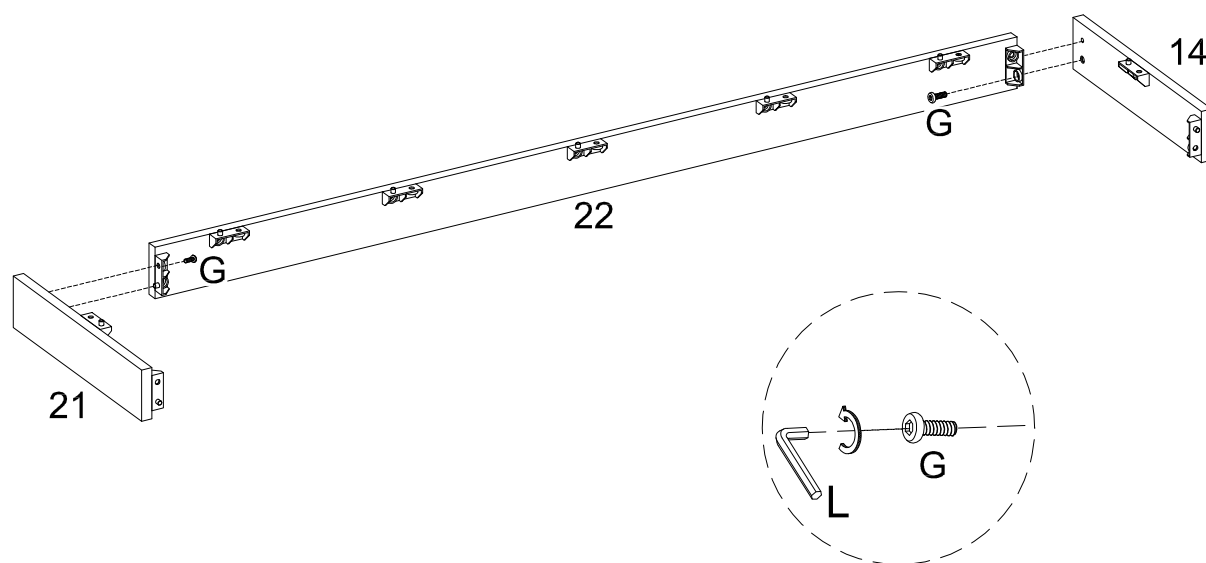


Step 15

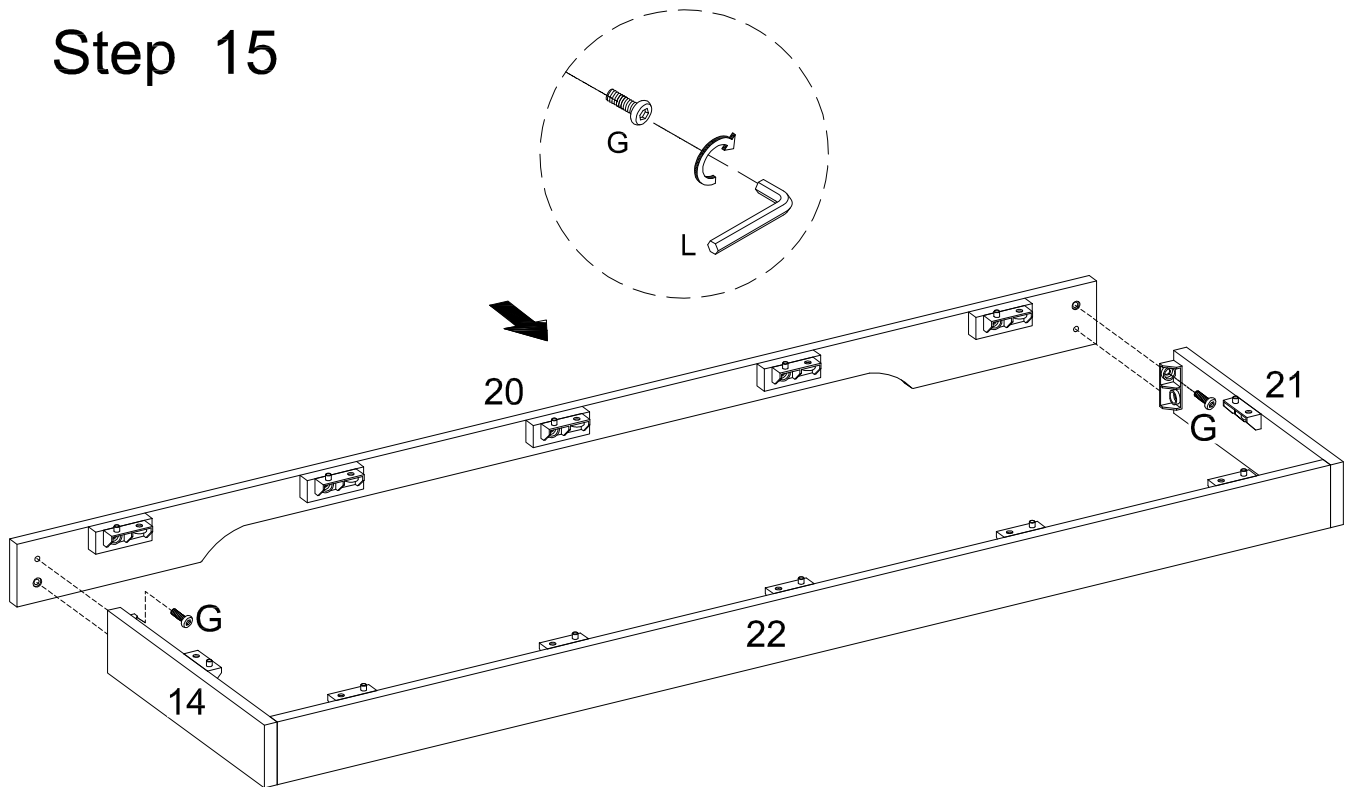


Step 16

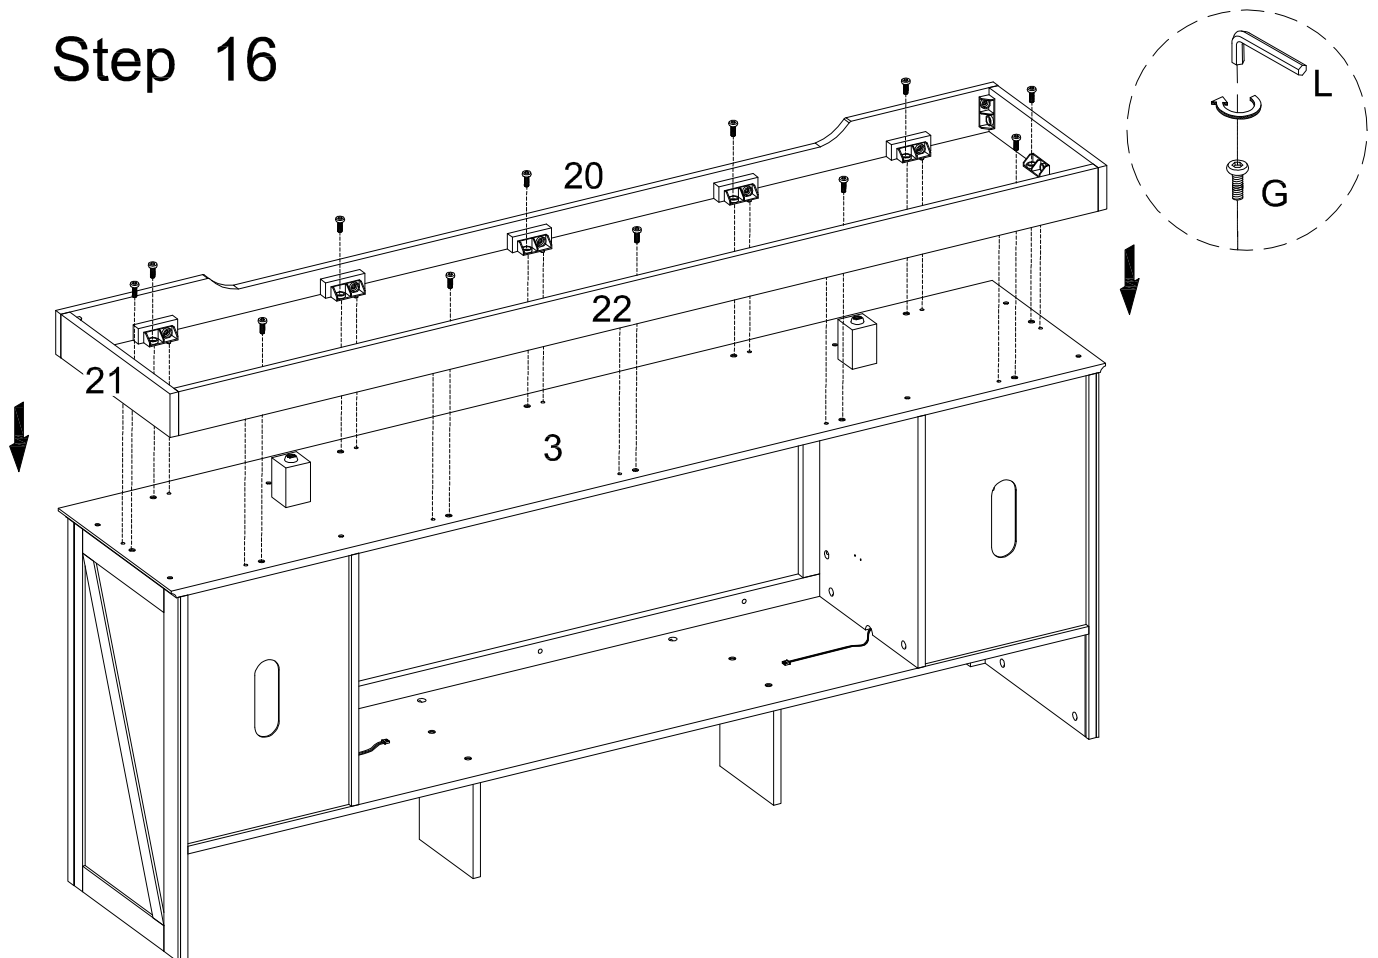


Step 17

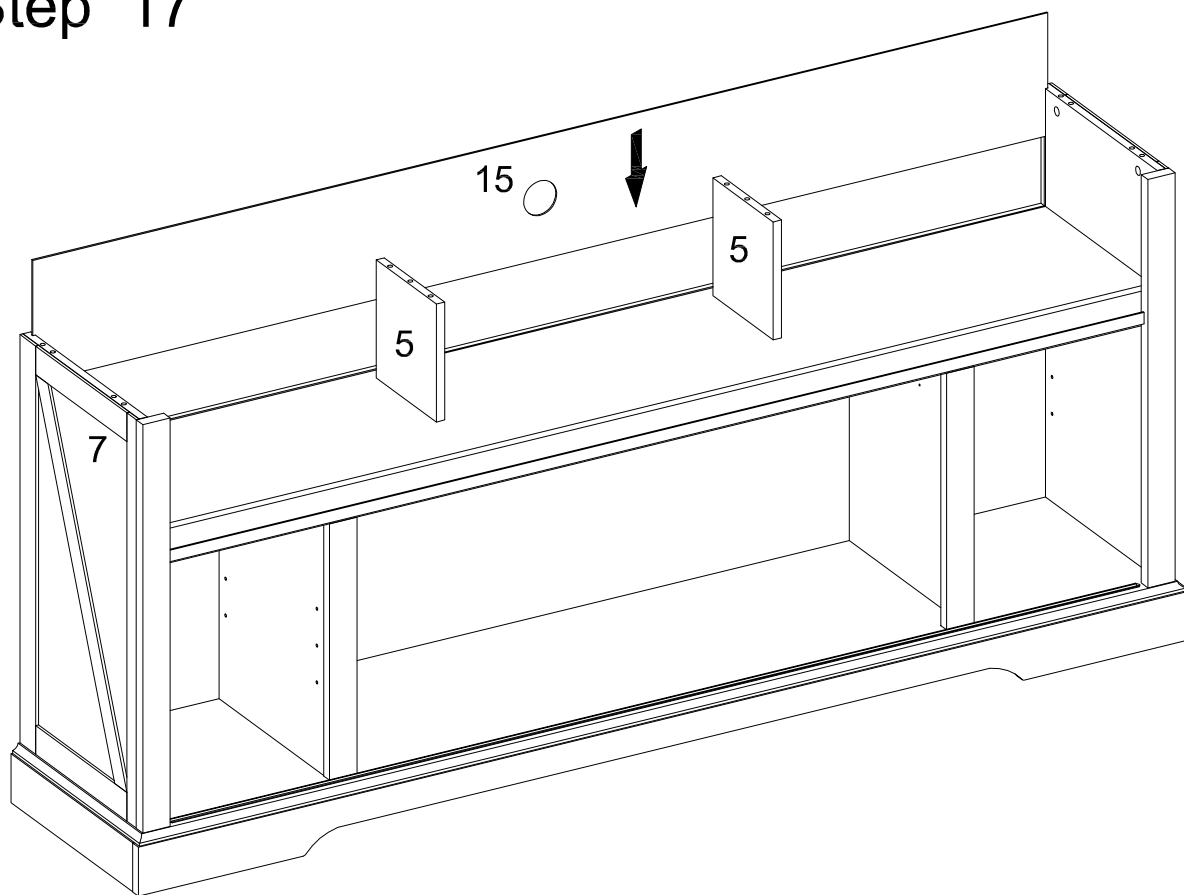


Step 18

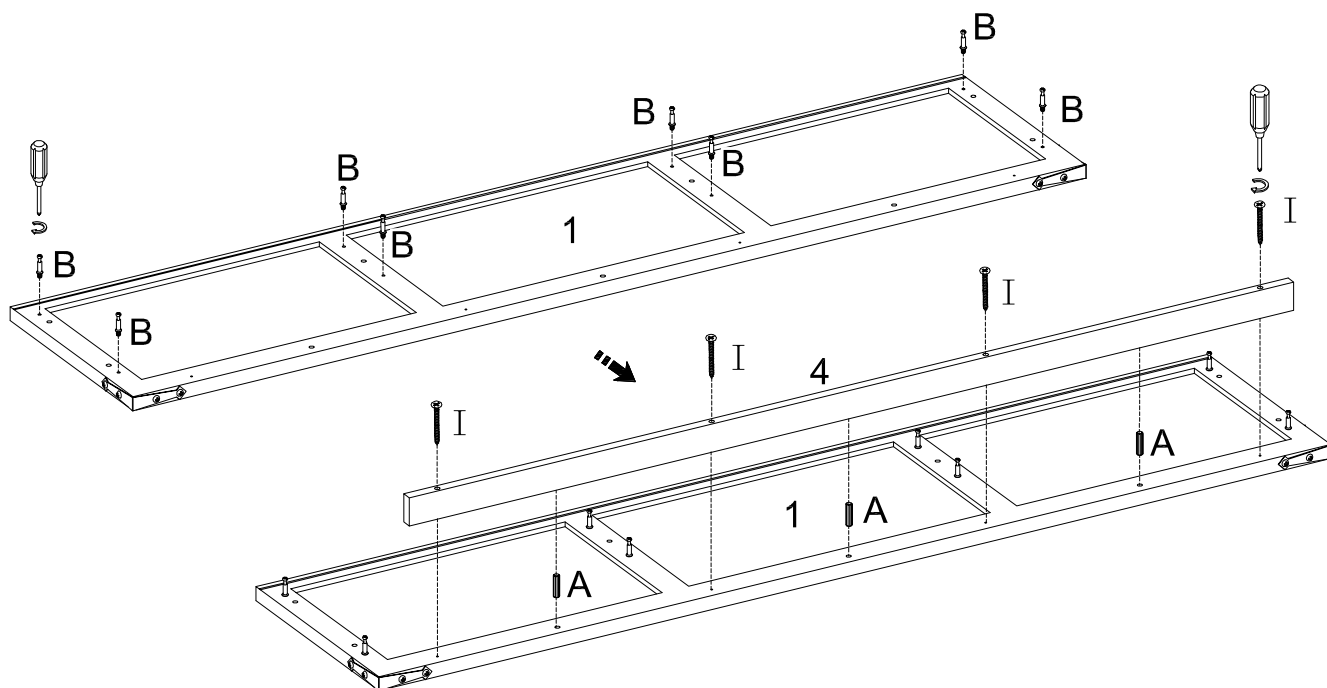


Step 19

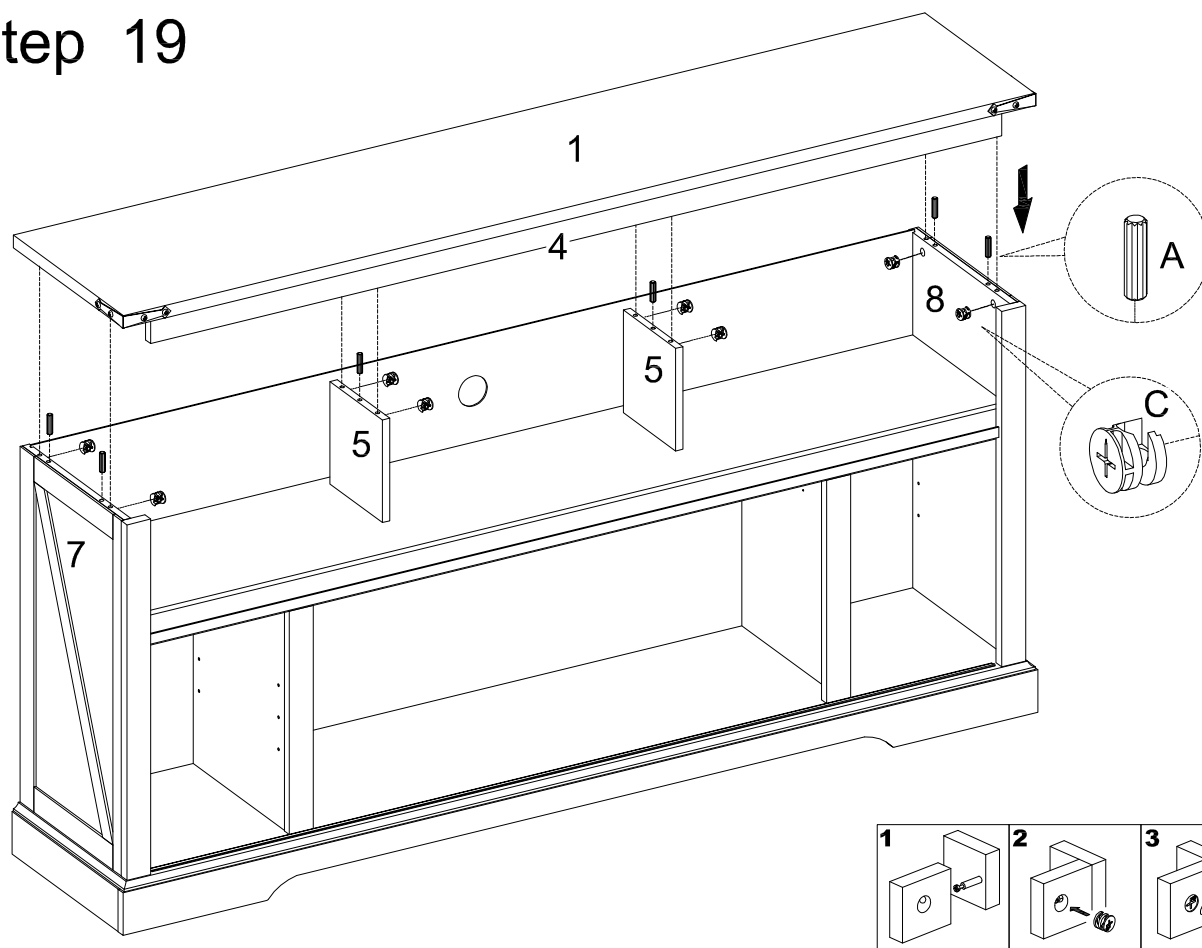


Step 20

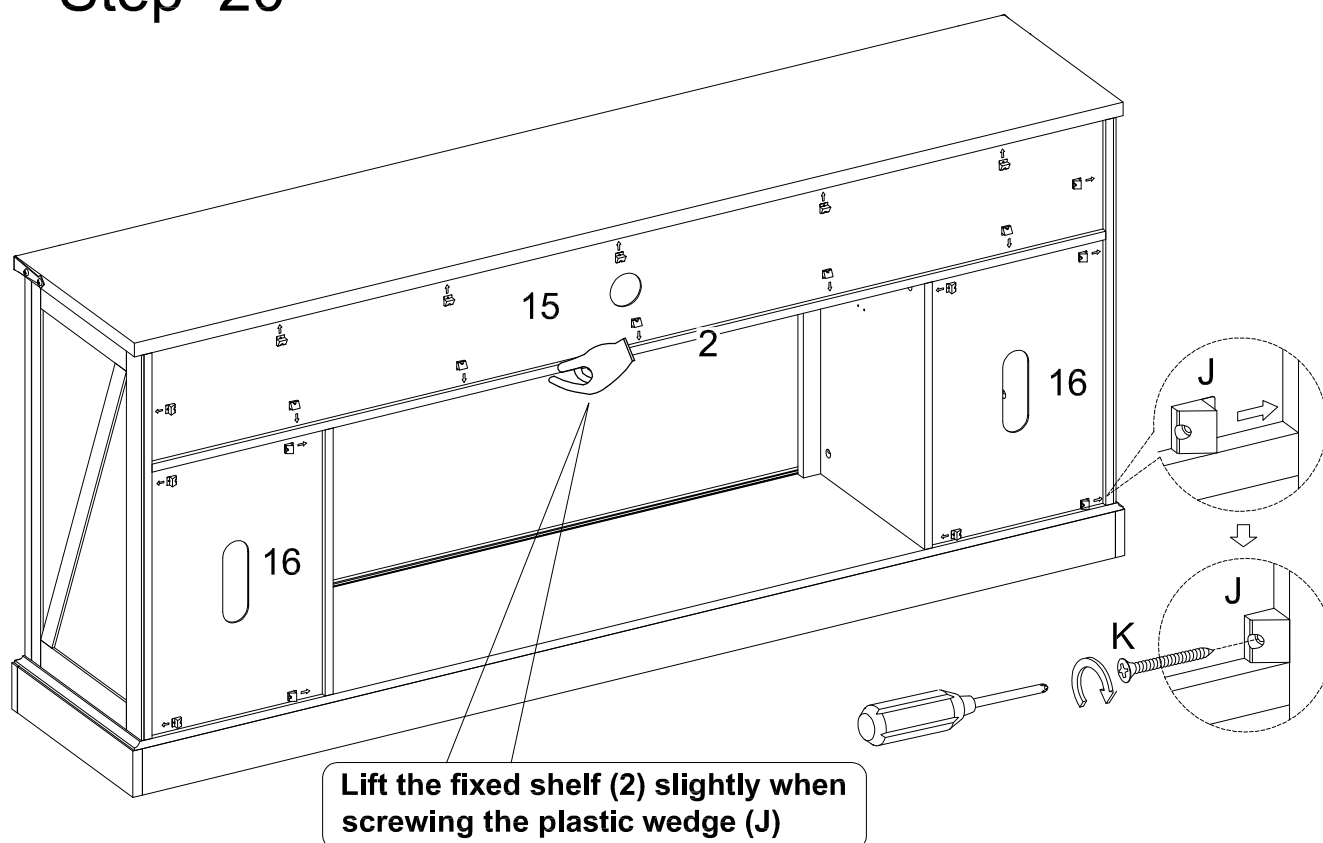


Step 21

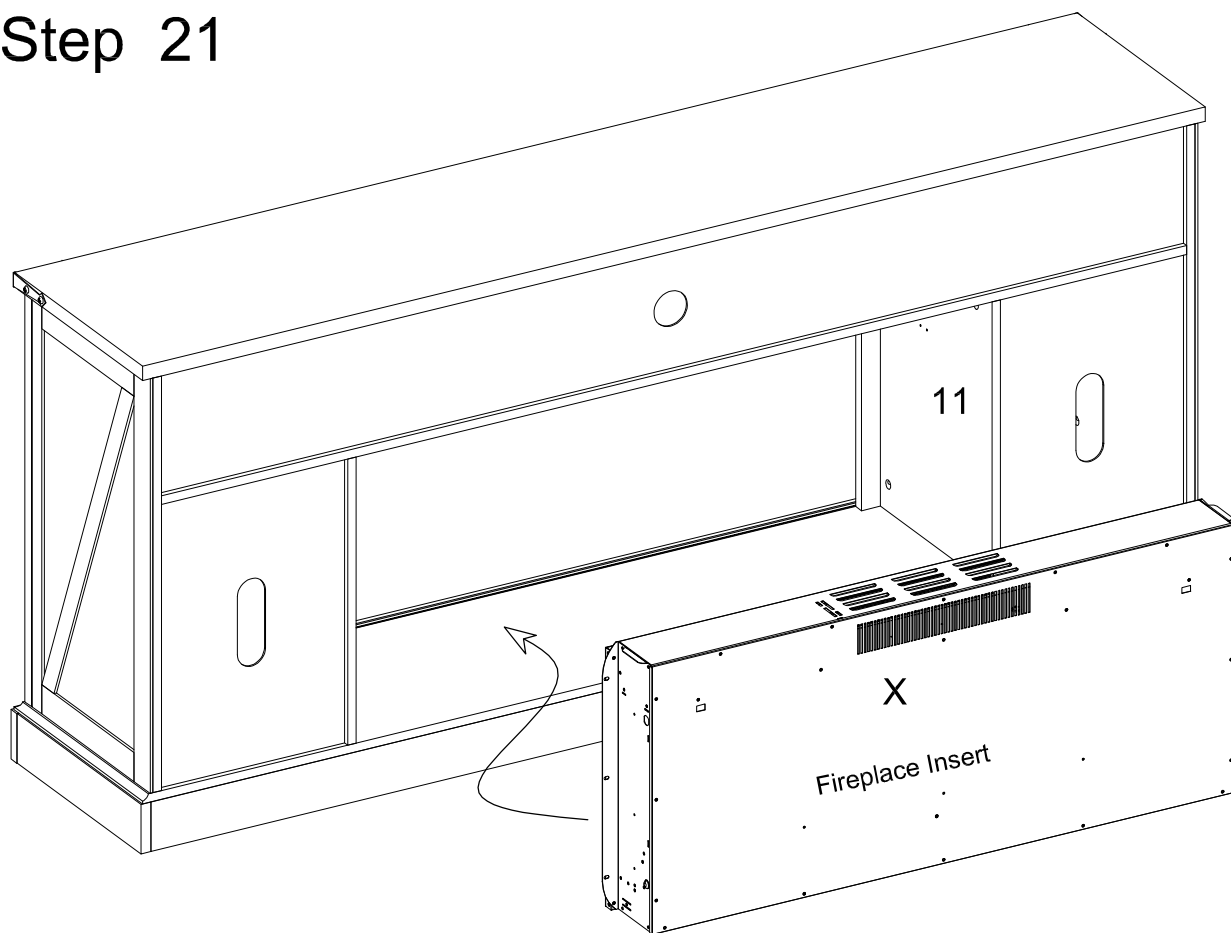


Step 22

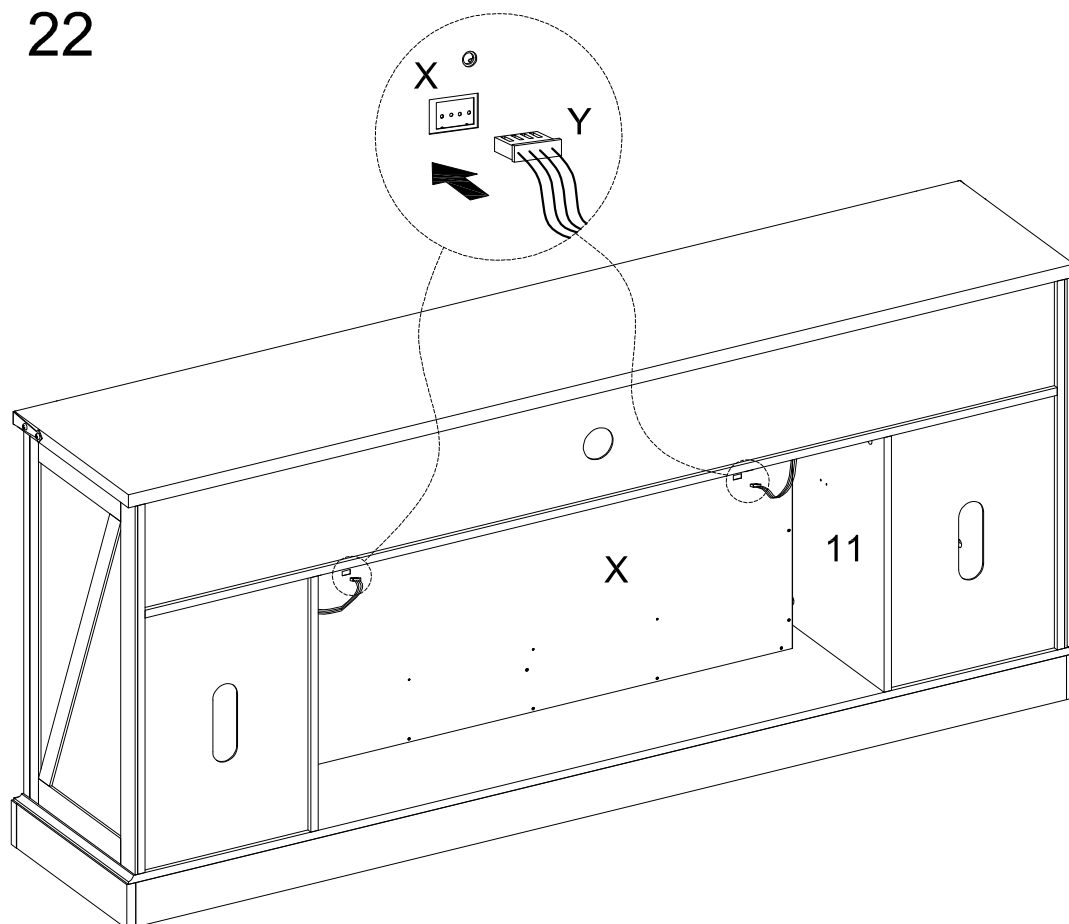


Step 23

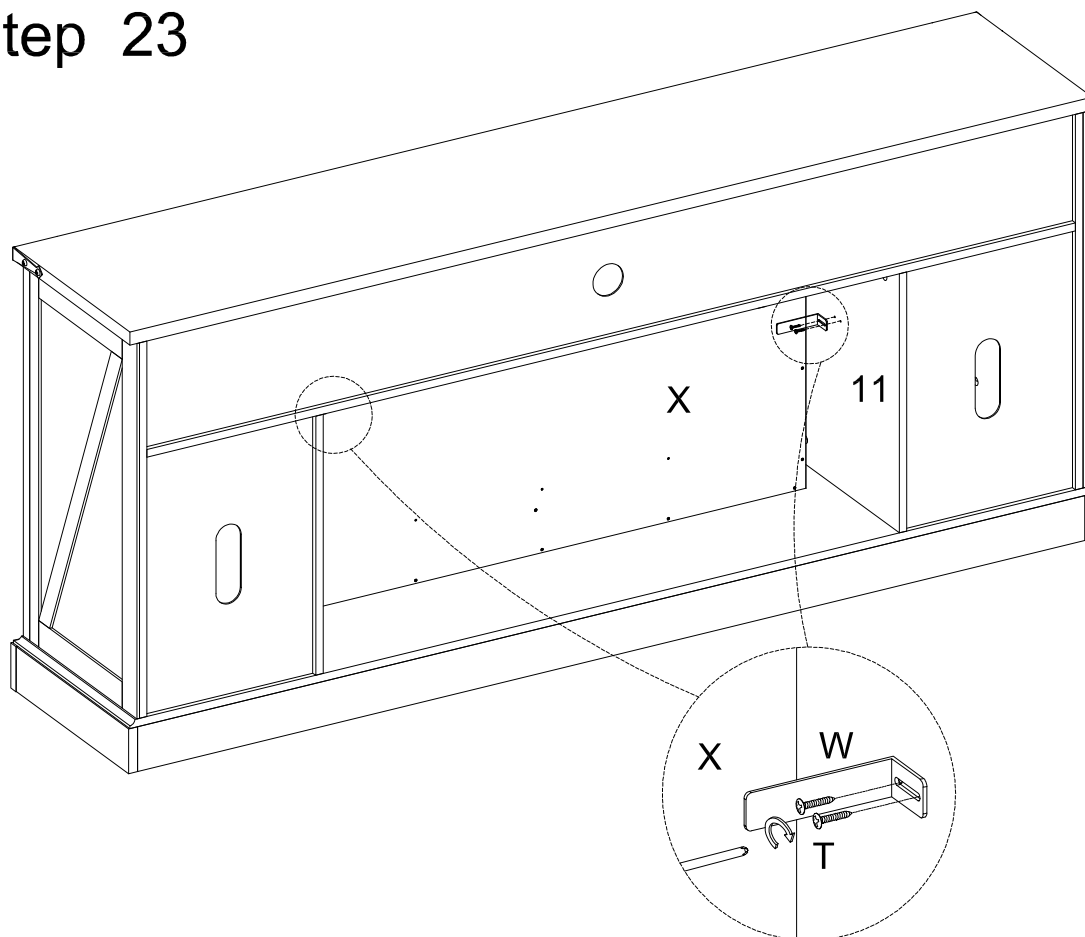


Step 24

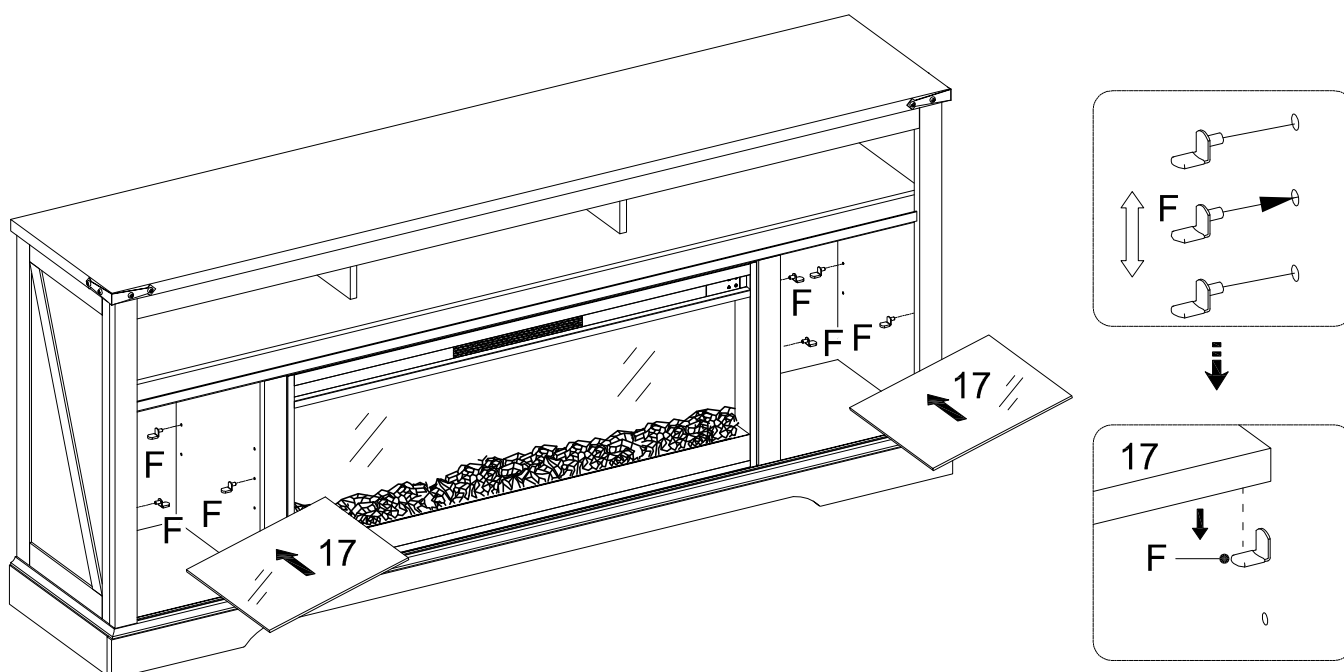


Step 25

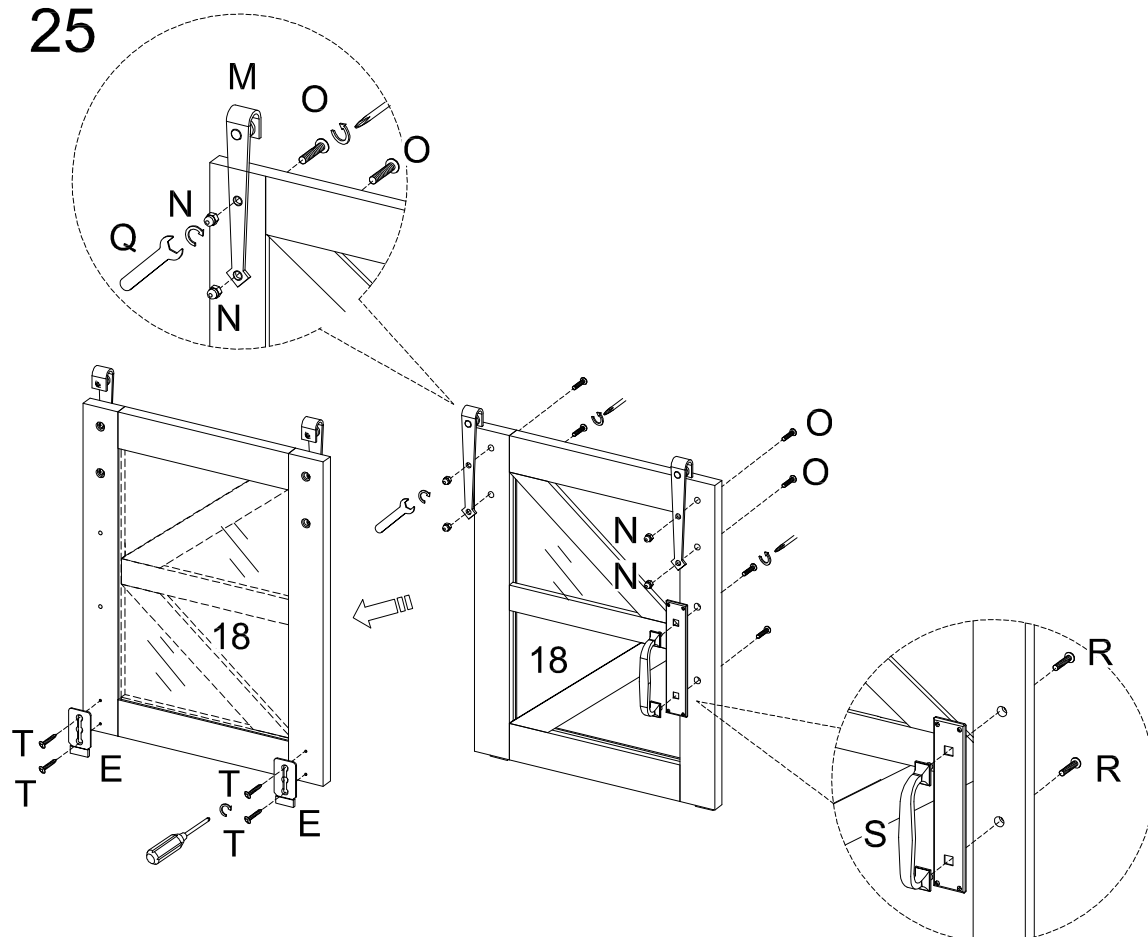


Step 26

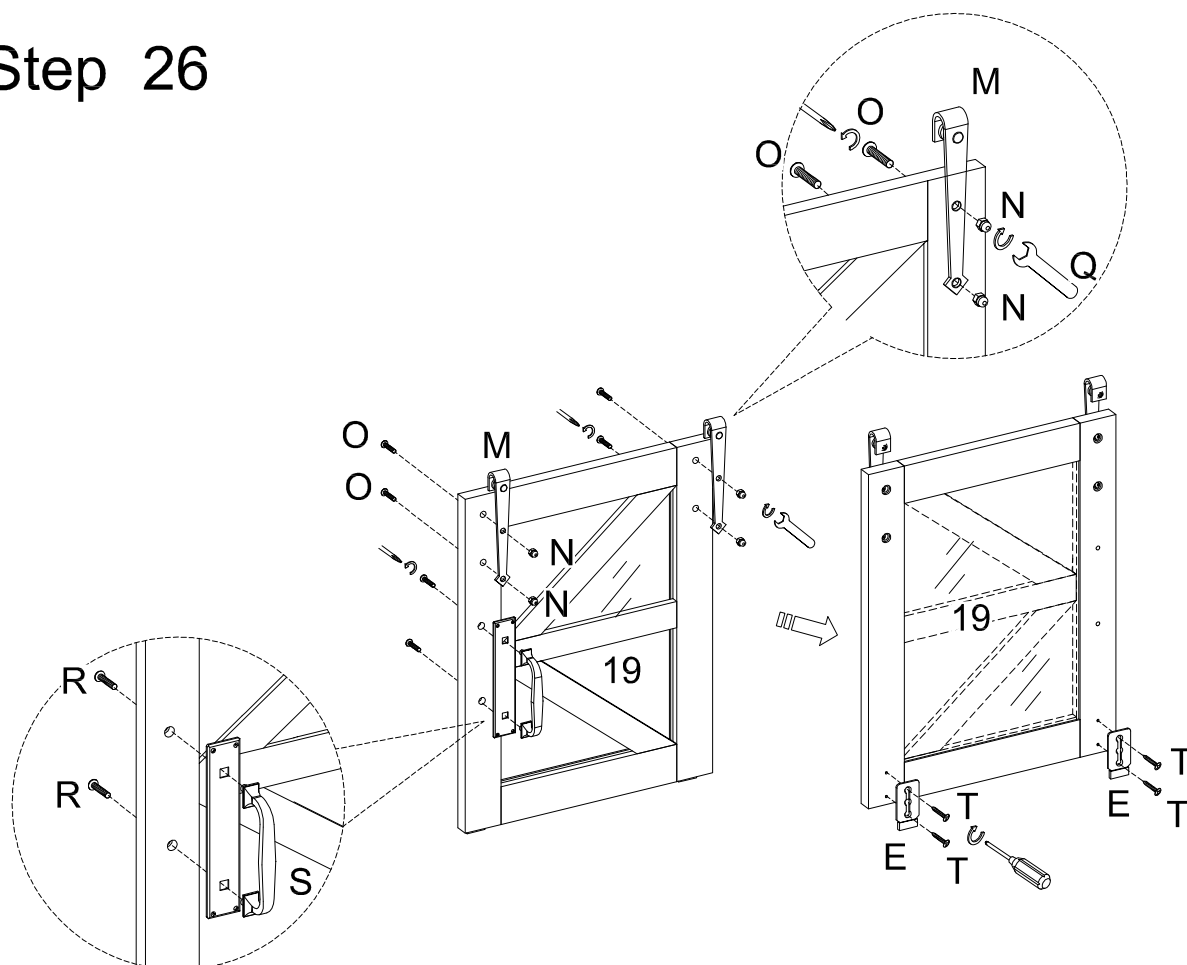


Step 27

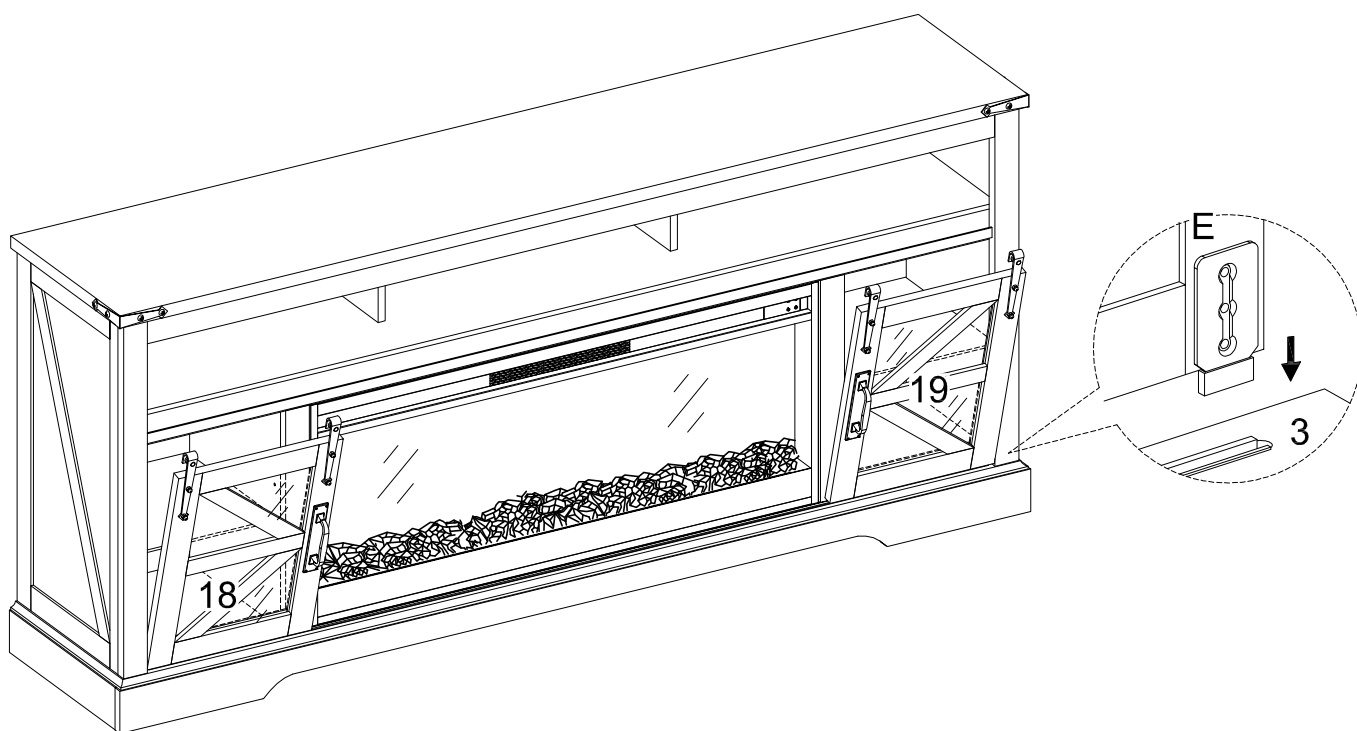


Step 28

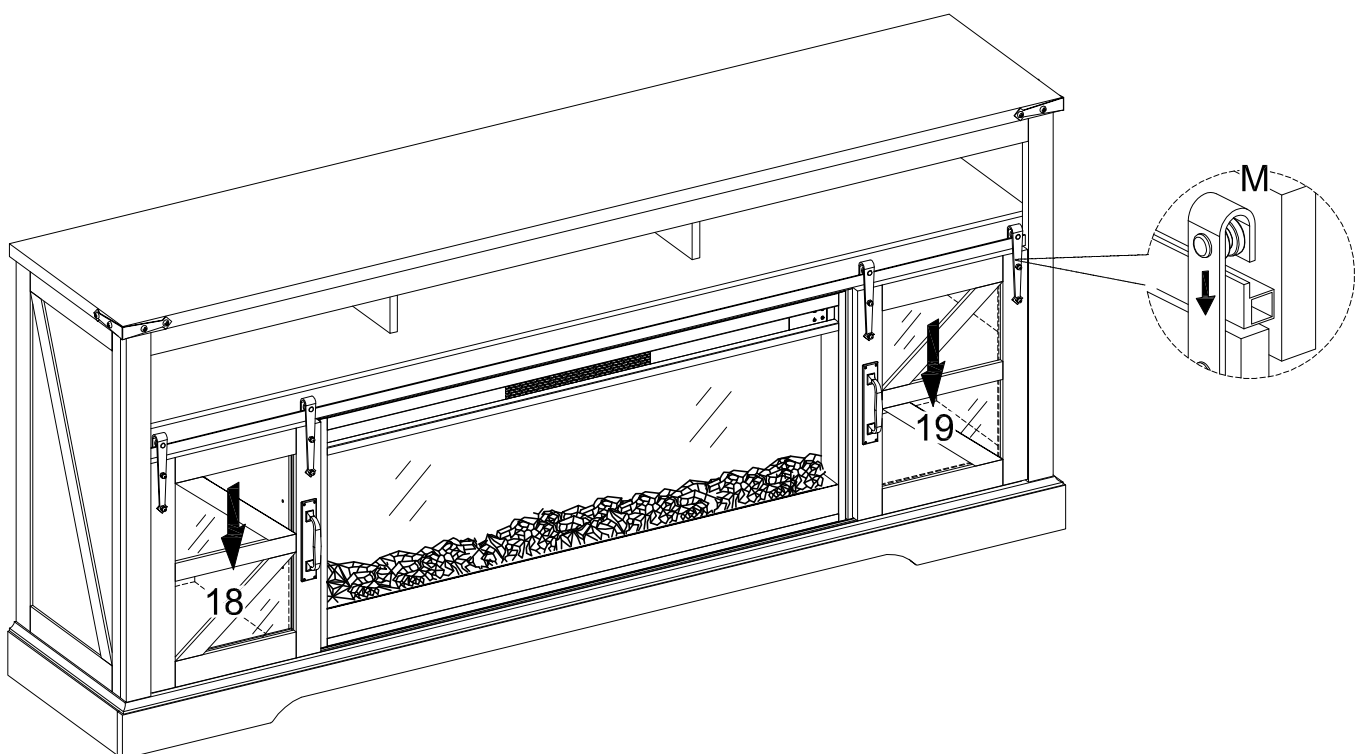

Step 29

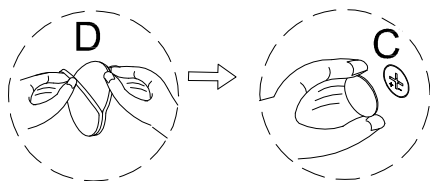


Use stickers(D) to conceal cam locks(C)

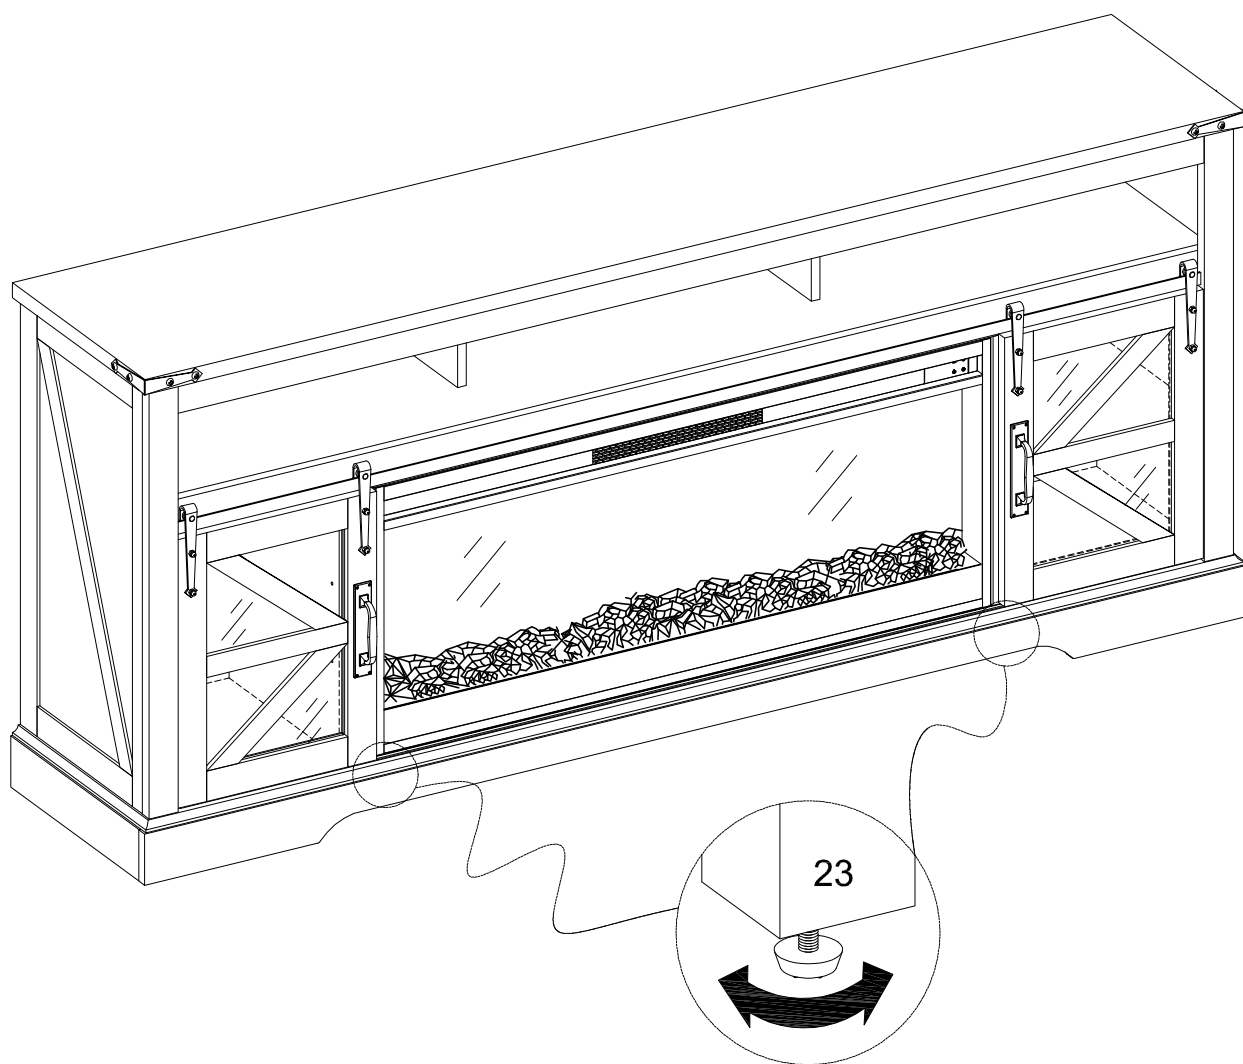

Step 30

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

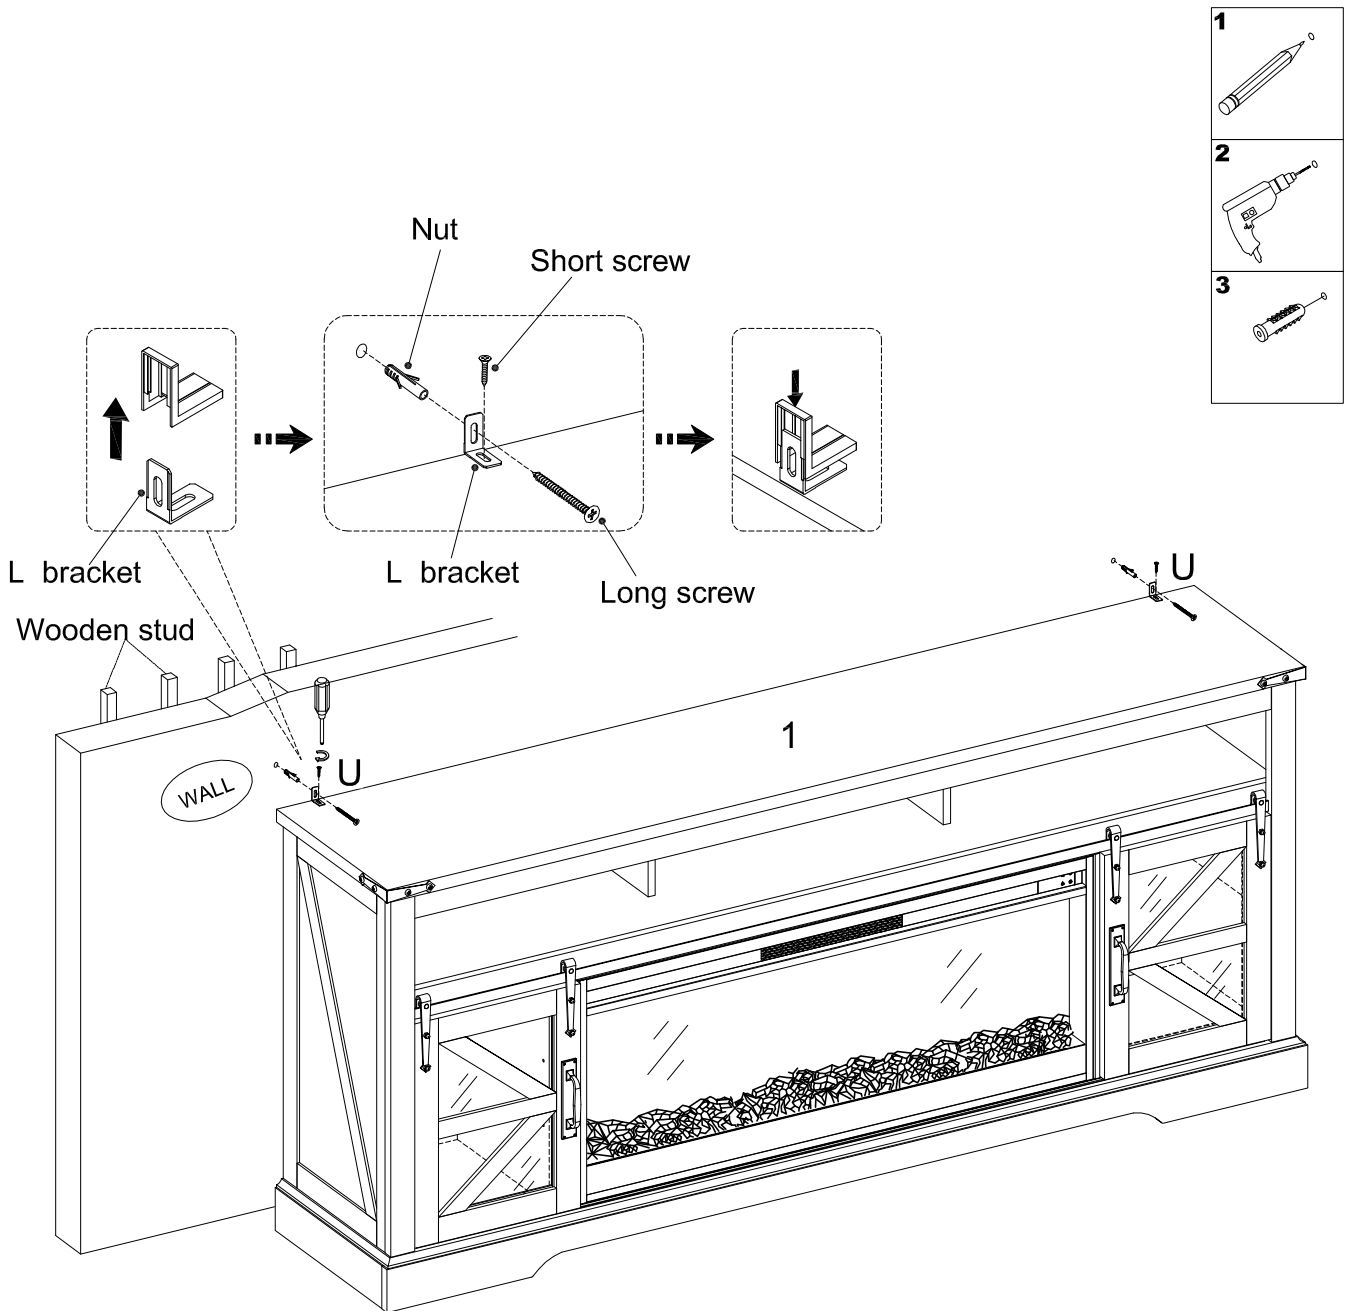

Final Assembly