



ASSEMBLY INSTRUCTIONS



SPU: N-HZR-C-0006

SKU: SY1226CD001W10023/SY1226CD001P10023
SY1226CD001W10024/SY1226CD001P10024

Spe: FULL/QUEEN

NOTICE



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

WICHTIG, FÜR SPÄTERE NACHSCHLAGE AUFBEWAHREN: SORGFÄLTIG LESEN

IMPORTANTE, GUARDAR PARA REFERENCIA POSTERIOR: LEER ATENTAMENTE

IMPORTANTE, CONSERVARE PER RIFERIMENTI FUTURI: LEGGERE ATTENTAMENTE

IMPORTANT, À CONSERVER POUR RÉFÉRENCE FUTURE : LIRE ATTENTIVEMENT

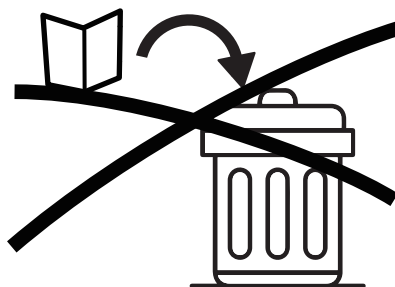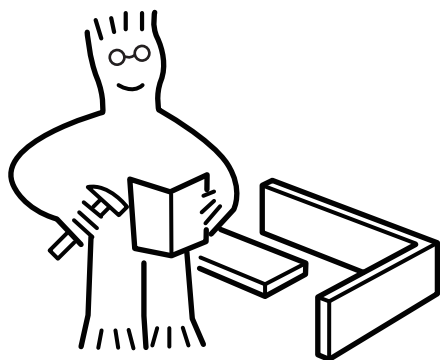



Assemble on a flat, clean and soft surface.

Auf einer flachen, sauberen und weichen Oberfläche zusammenbauen.

Assembler sur une surface plate, propre et douce.

Assemblare su una superficie piatta, pulita e morbida.

Ensamblar sobre una superficie plana, limpia y suave.

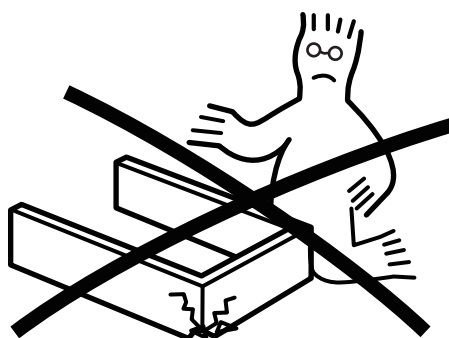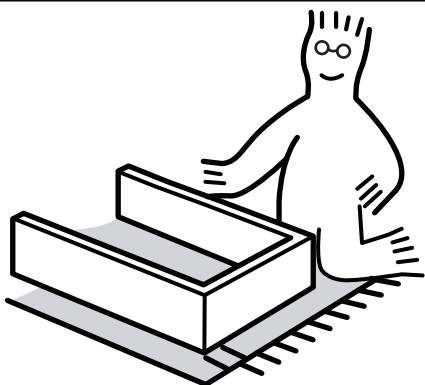

Professional installation is highly recommended.

Eine professionelle Installation wird dringend empfohlen.

Une installation professionnelle est fortement recommandée.

Si raccomanda vivamente l'installazione professionale.

Se recomienda altamente la instalación profesional.




Periodically check that all components are tightly secured.

Überprüfen Sie Regelmäßig, Dass Alle Komponenten Fest Gesichert Sind.


Vérifiez Périodiquement Que Tous Les Composants Sont Bien Fixés.

Controllare Periodicamente Che Tutti I Componenti Siano Ben Fissati.


Verifique Periódicamente Que Todos Los Componentes Estén Bien Asegurados.

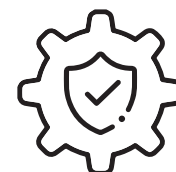

















It is recommended that multiple people assemble this product.
Es wird empfohlen, dass mehrere Personen dieses Produkt zusammenbauen.
Il est recommandé que plusieurs personnes assemblent ce produit.
Si raccomanda che più persone assemblino questo prodotto.
Se recomienda que varias personas ensamblen este producto.






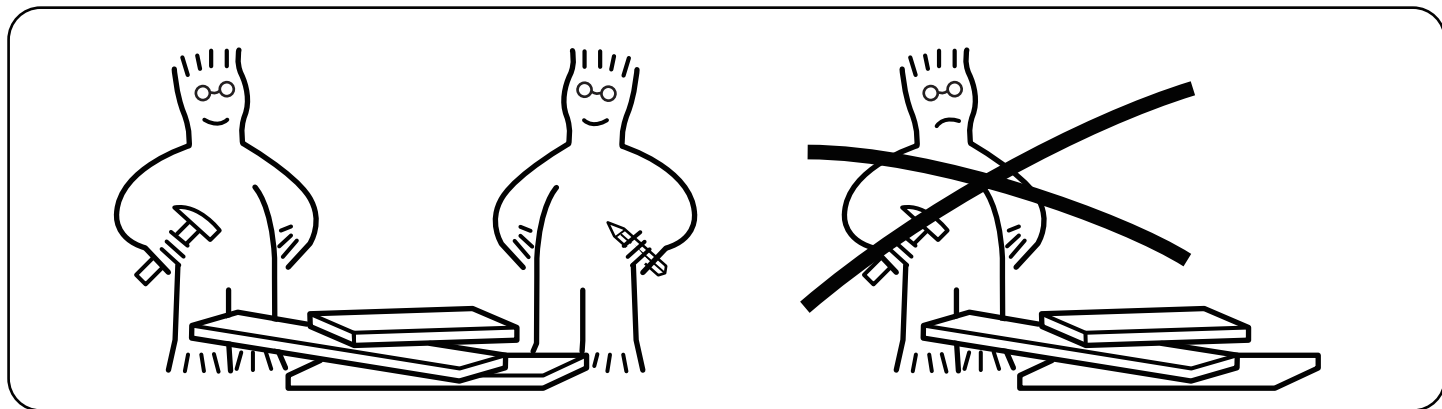







Please have the following auxiliary tools ready:
Bitte halten Sie folgende Hilfswerkzeuge bereit:
Veuillez préparer les outils auxiliaires suivants :
Si prega di avere pronti i seguenti strumenti ausiliari:
Por favor, tenga listas las siguientes herramientas auxiliares:





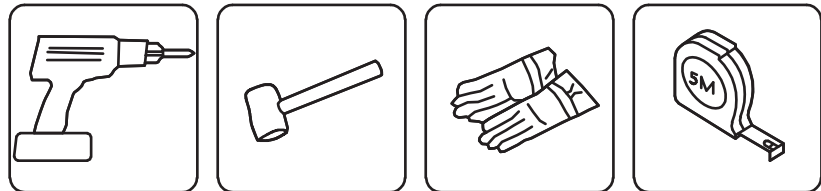







PARTS

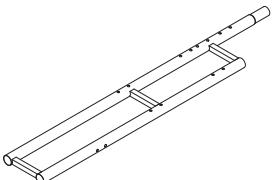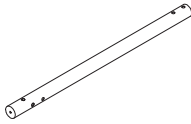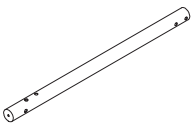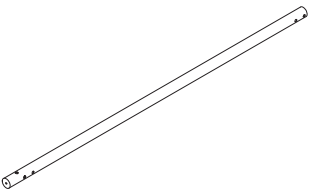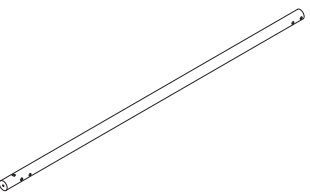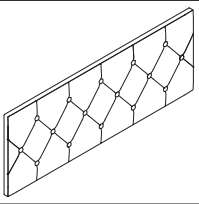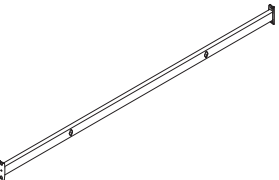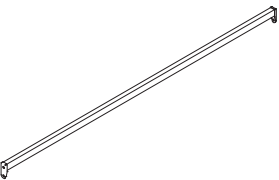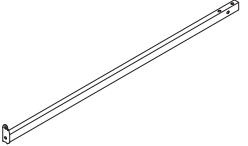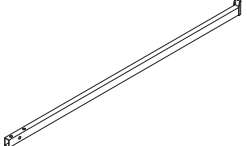
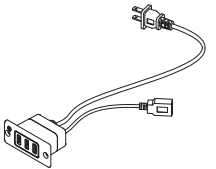
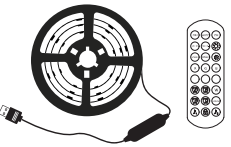
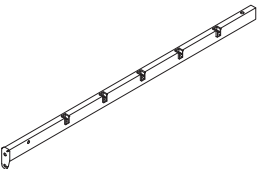
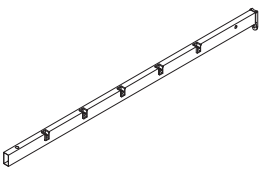
Item no. Nr. N° d'article Articolo No. Artículo No.	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.	Item no. Nr. ° d'article Articolo No. Artículo No.	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
1		X2	2		X1
3		X1	4		X1
5		X1	6		X1
7		X1	8		X1
9		X1	10		X2
11		X2	12		X2
13		X1	14		X1
15		X2	16		X2

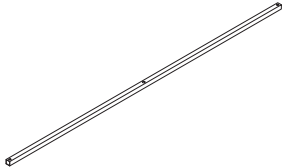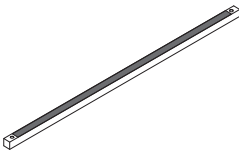

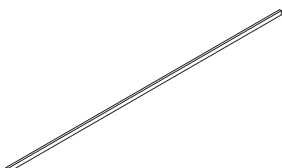
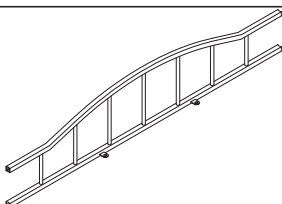
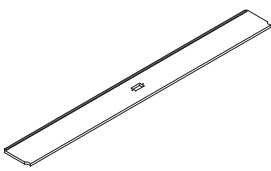
Item no. Nr. N° d'article Articolo No. Artículo No.	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
17		X1
19		X2
21		X1
24		X10
26		X4
28		X1
30		X1
32		X1

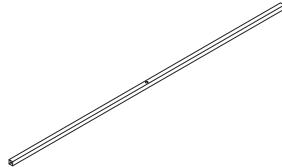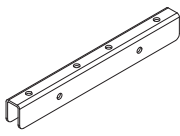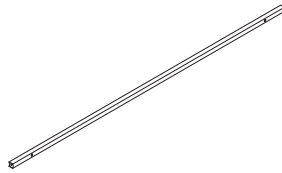Item no. Nr. ° d'article Articolo No. Artículo No.	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
18		X2
20		X2
22		X2
25		X2
27		X4
29		X2
31		X1
33		X1

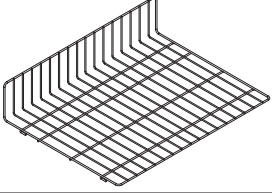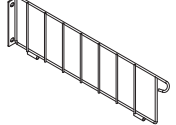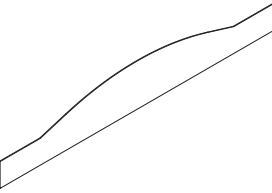
Item no. Nr. N° d'article Articolo No. Artículo No.	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
34		X1
36		X2
38		X10
40		X2
42		X2
44		X1

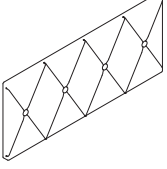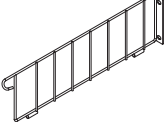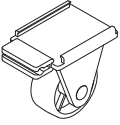Item no. Nr. ° d'article Articolo No. Artículo No.	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
35		X2
37		X2
39		X2
41		X2
43		X8
45		X1

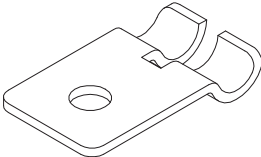
Item no. Nr. N° d'article Articolo No. Artículo No.	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
(A)	 1/4x11mm	X32 +2
(C)	 1/4x28mm	X10 +2
(E)	 5/16x19mm	X4 +1
(G)	 5/16x55mm	X21 +2
(J)	 1/4x16mm	X2 +1
(L)		X2
(P)	 4mm	X1
(R)		X1

Item no. Nr. ° d'article Articolo No. Artículo No.	Reference Image Referenzbild Image de référence Immagine di riferimento Imagen de referencia	Qty. Menge Qté. Qtà Cant.
(B)	 1/4x16mm	X32 +2
(D)	 1/4x48mm	X12 +2
(F)	 5/16x35mm	X2 +1
(H)	 M3.5x11mm	X2 +1
(K)	 1/4	X2 +1
(M)	 M5x35mm	X24 +2
(Q)	 3mm	X1

EXPLODED VIEW



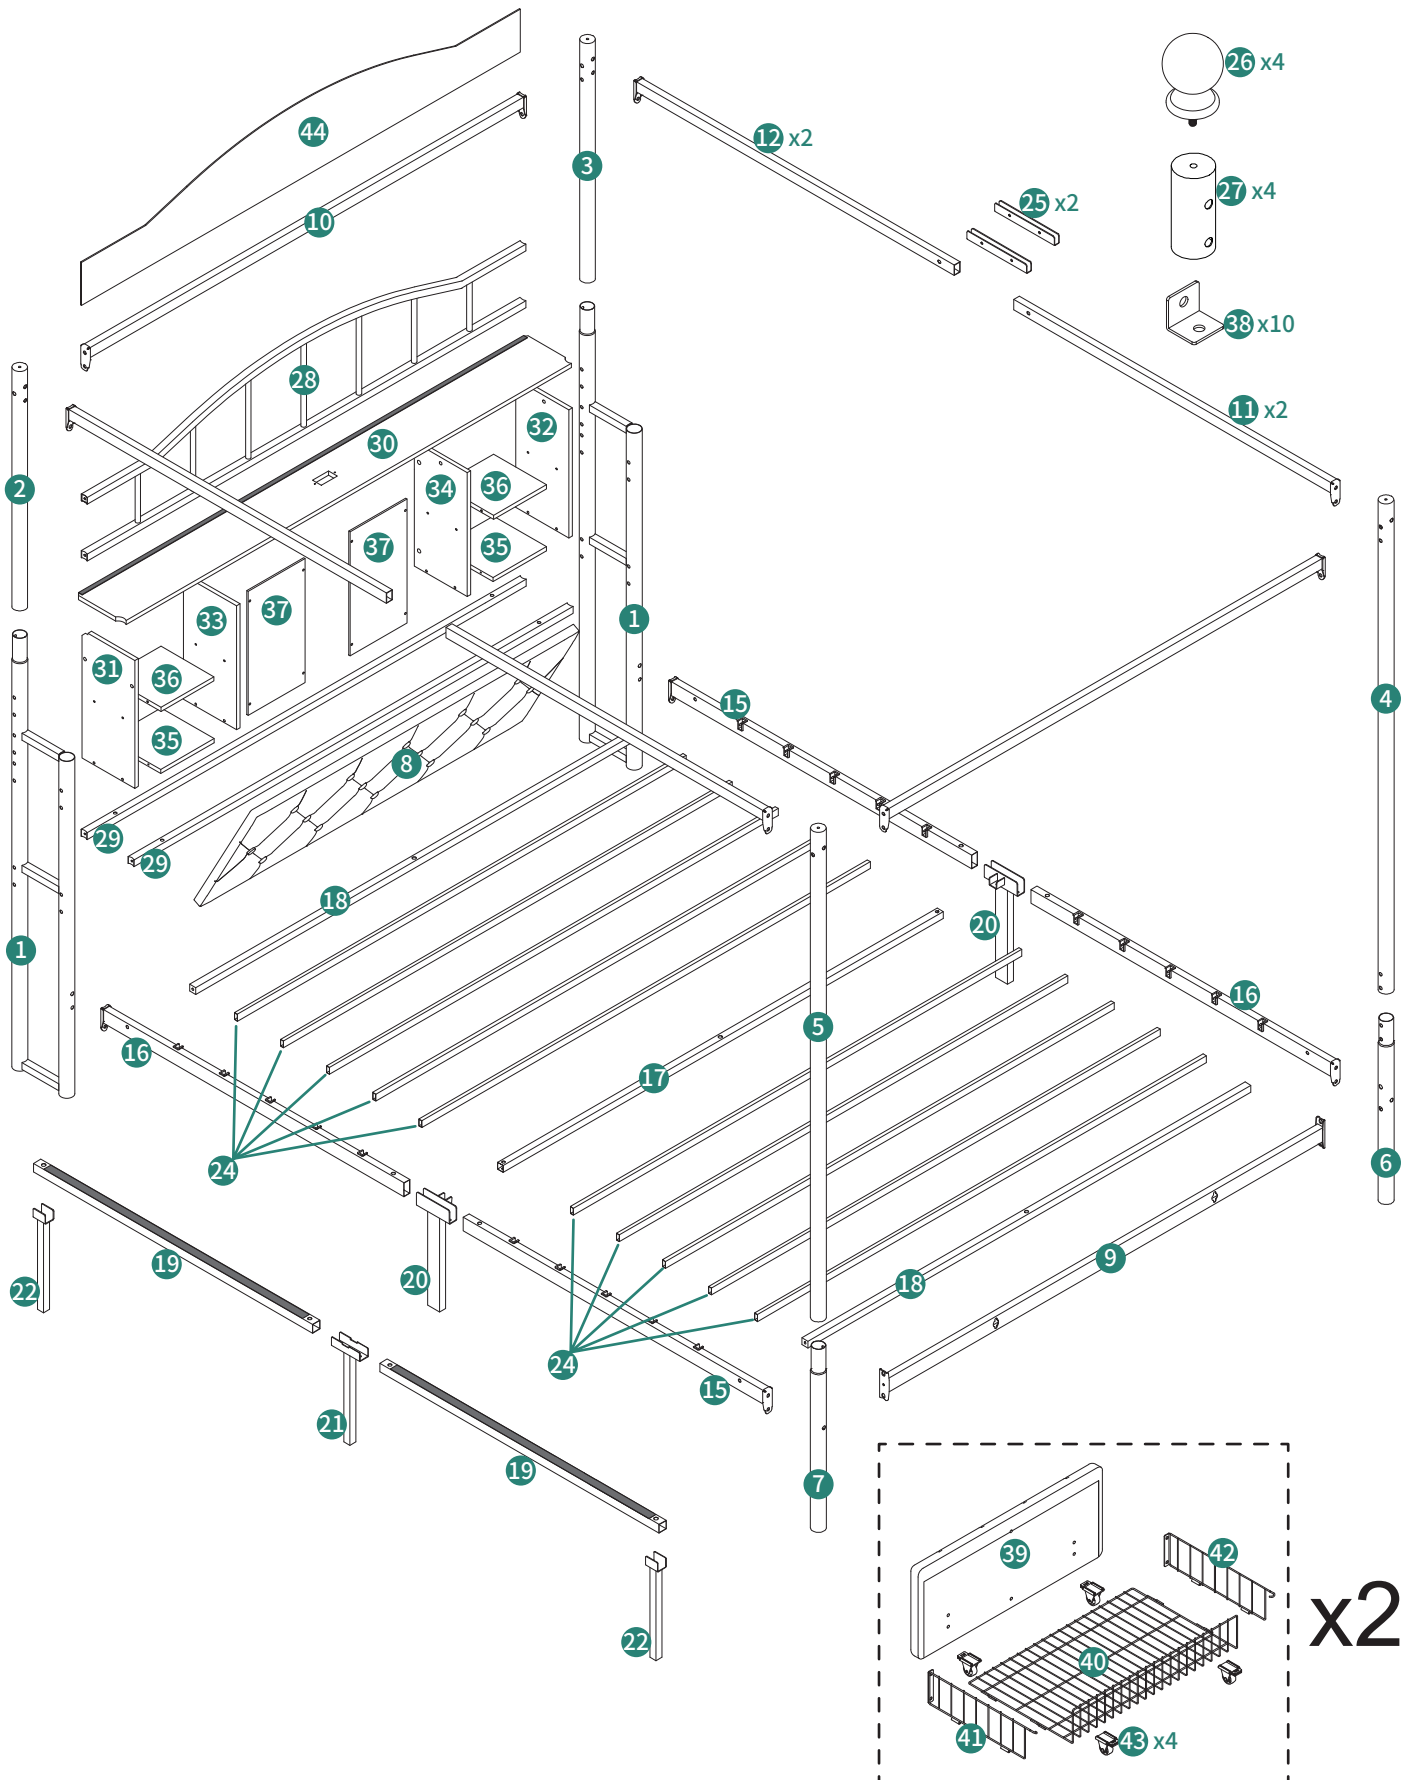


TYPE-A INSTALLTION

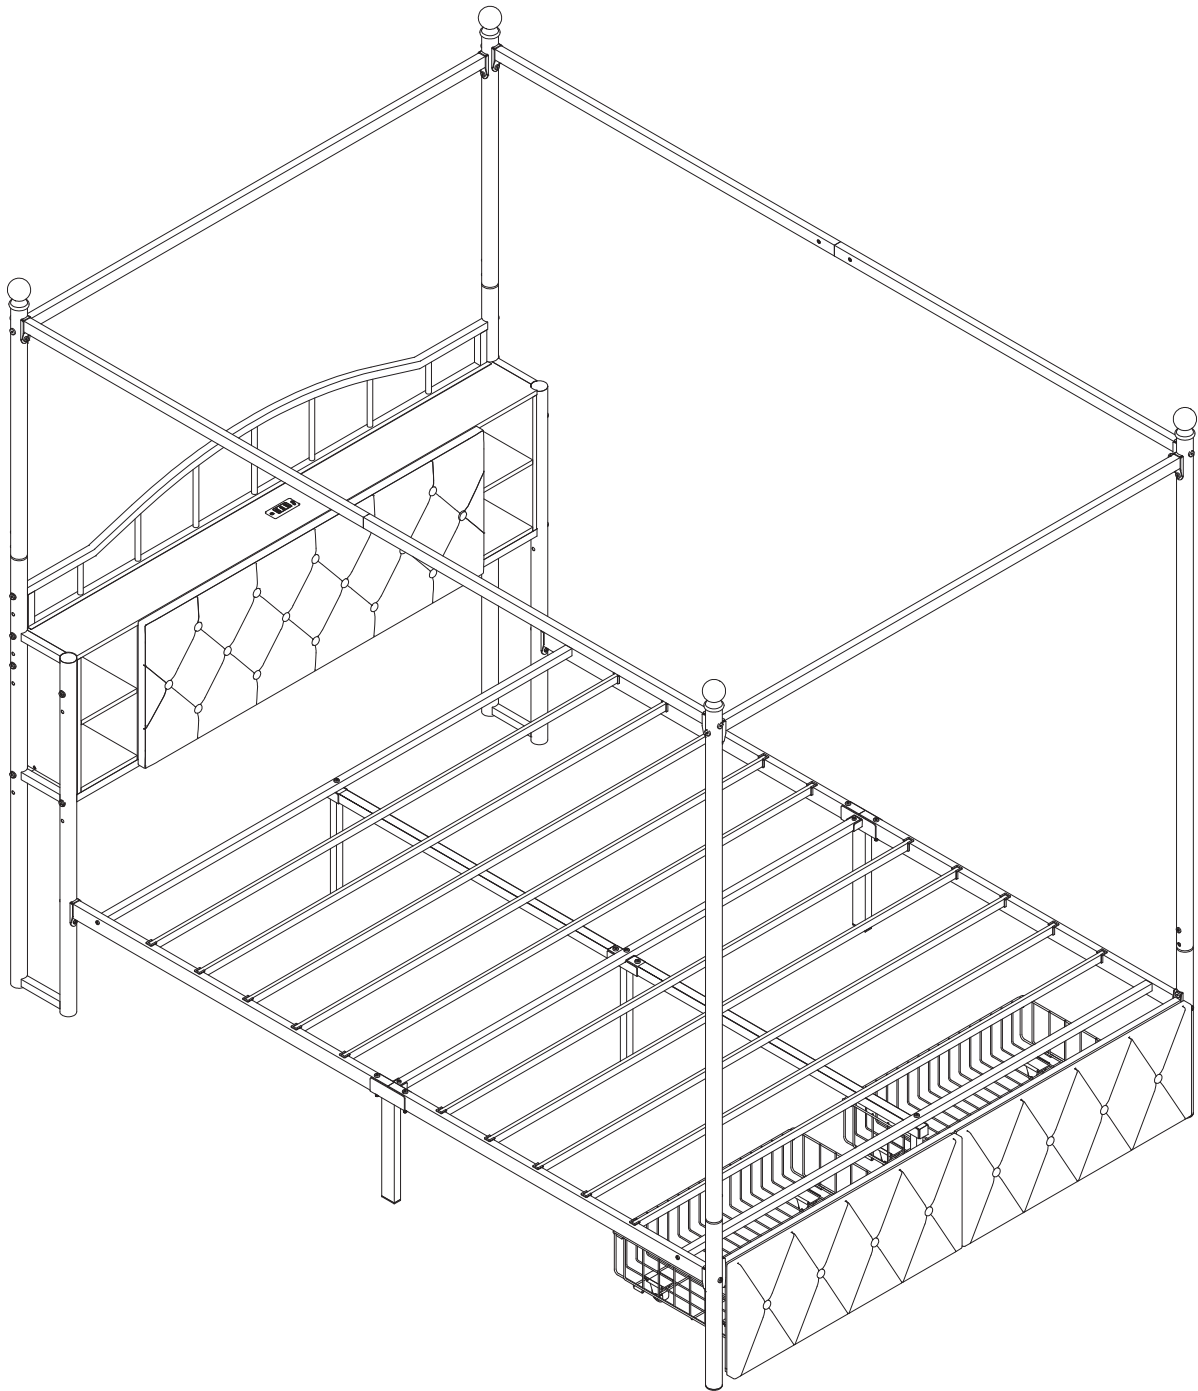

ASSEMBLY



1

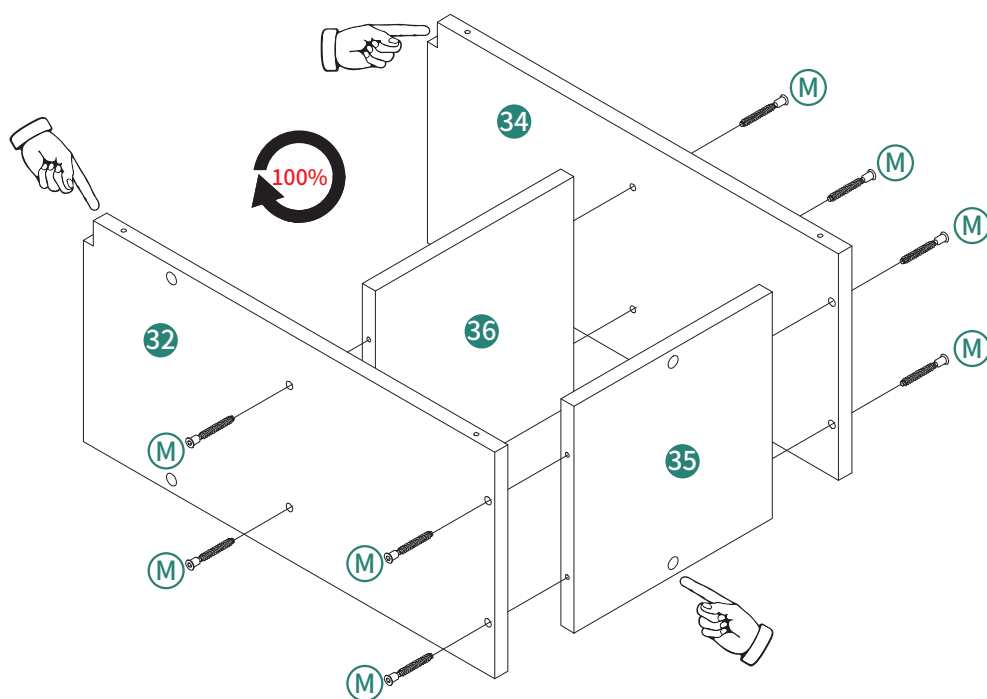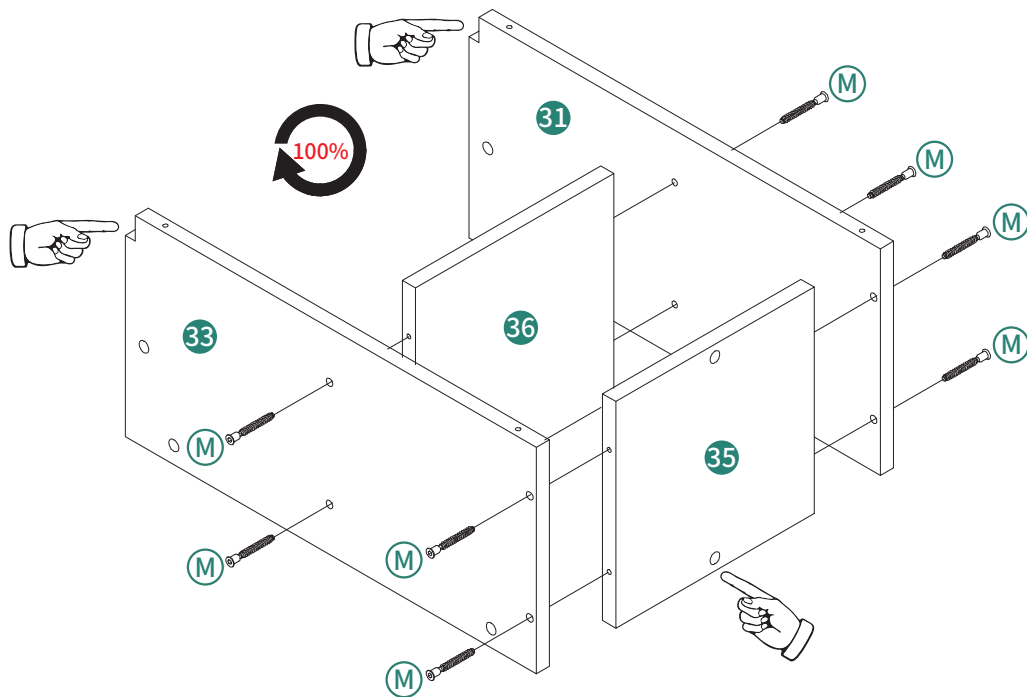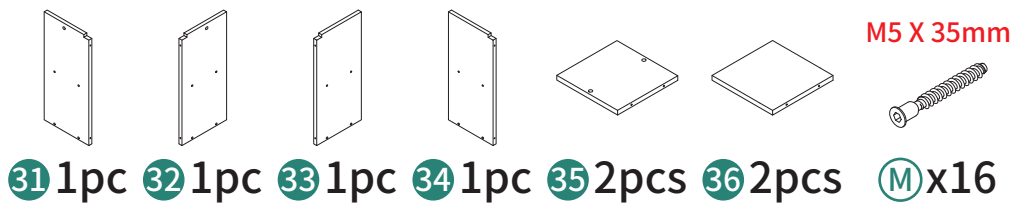

ASSEMBLY


2

1/4 X 11mm
38 4pcs (A) x4

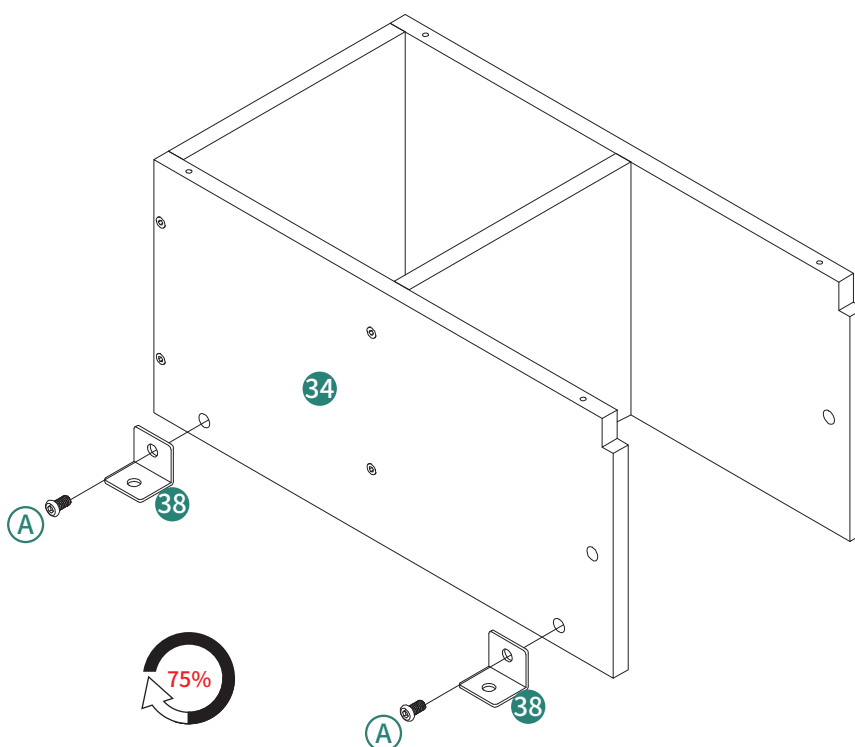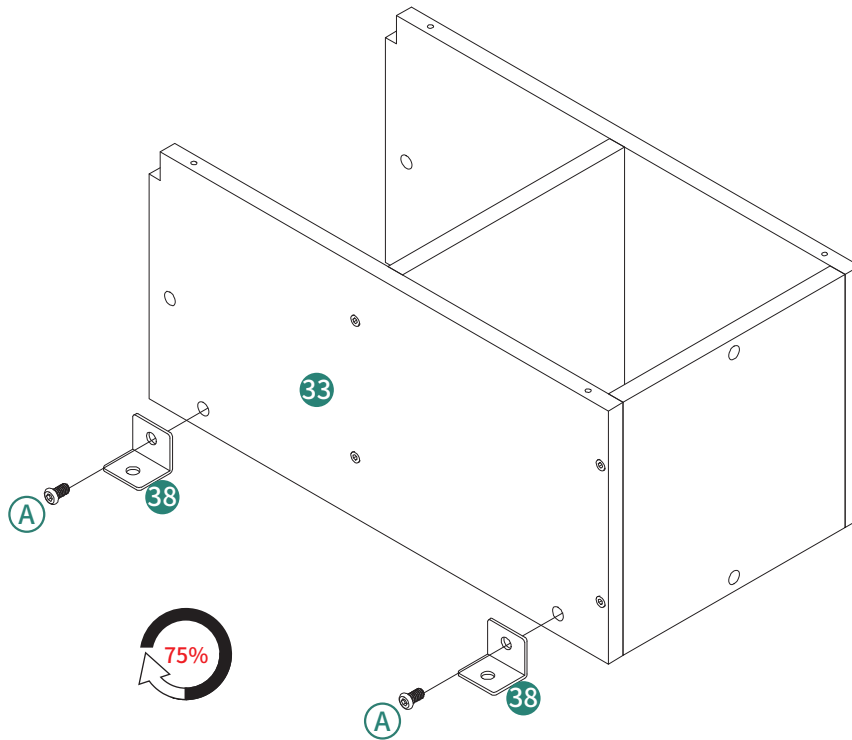


ASSEMBLY

3

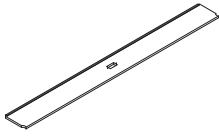

30 1pc




38 6pcs




1/4 X 11mm

A x10

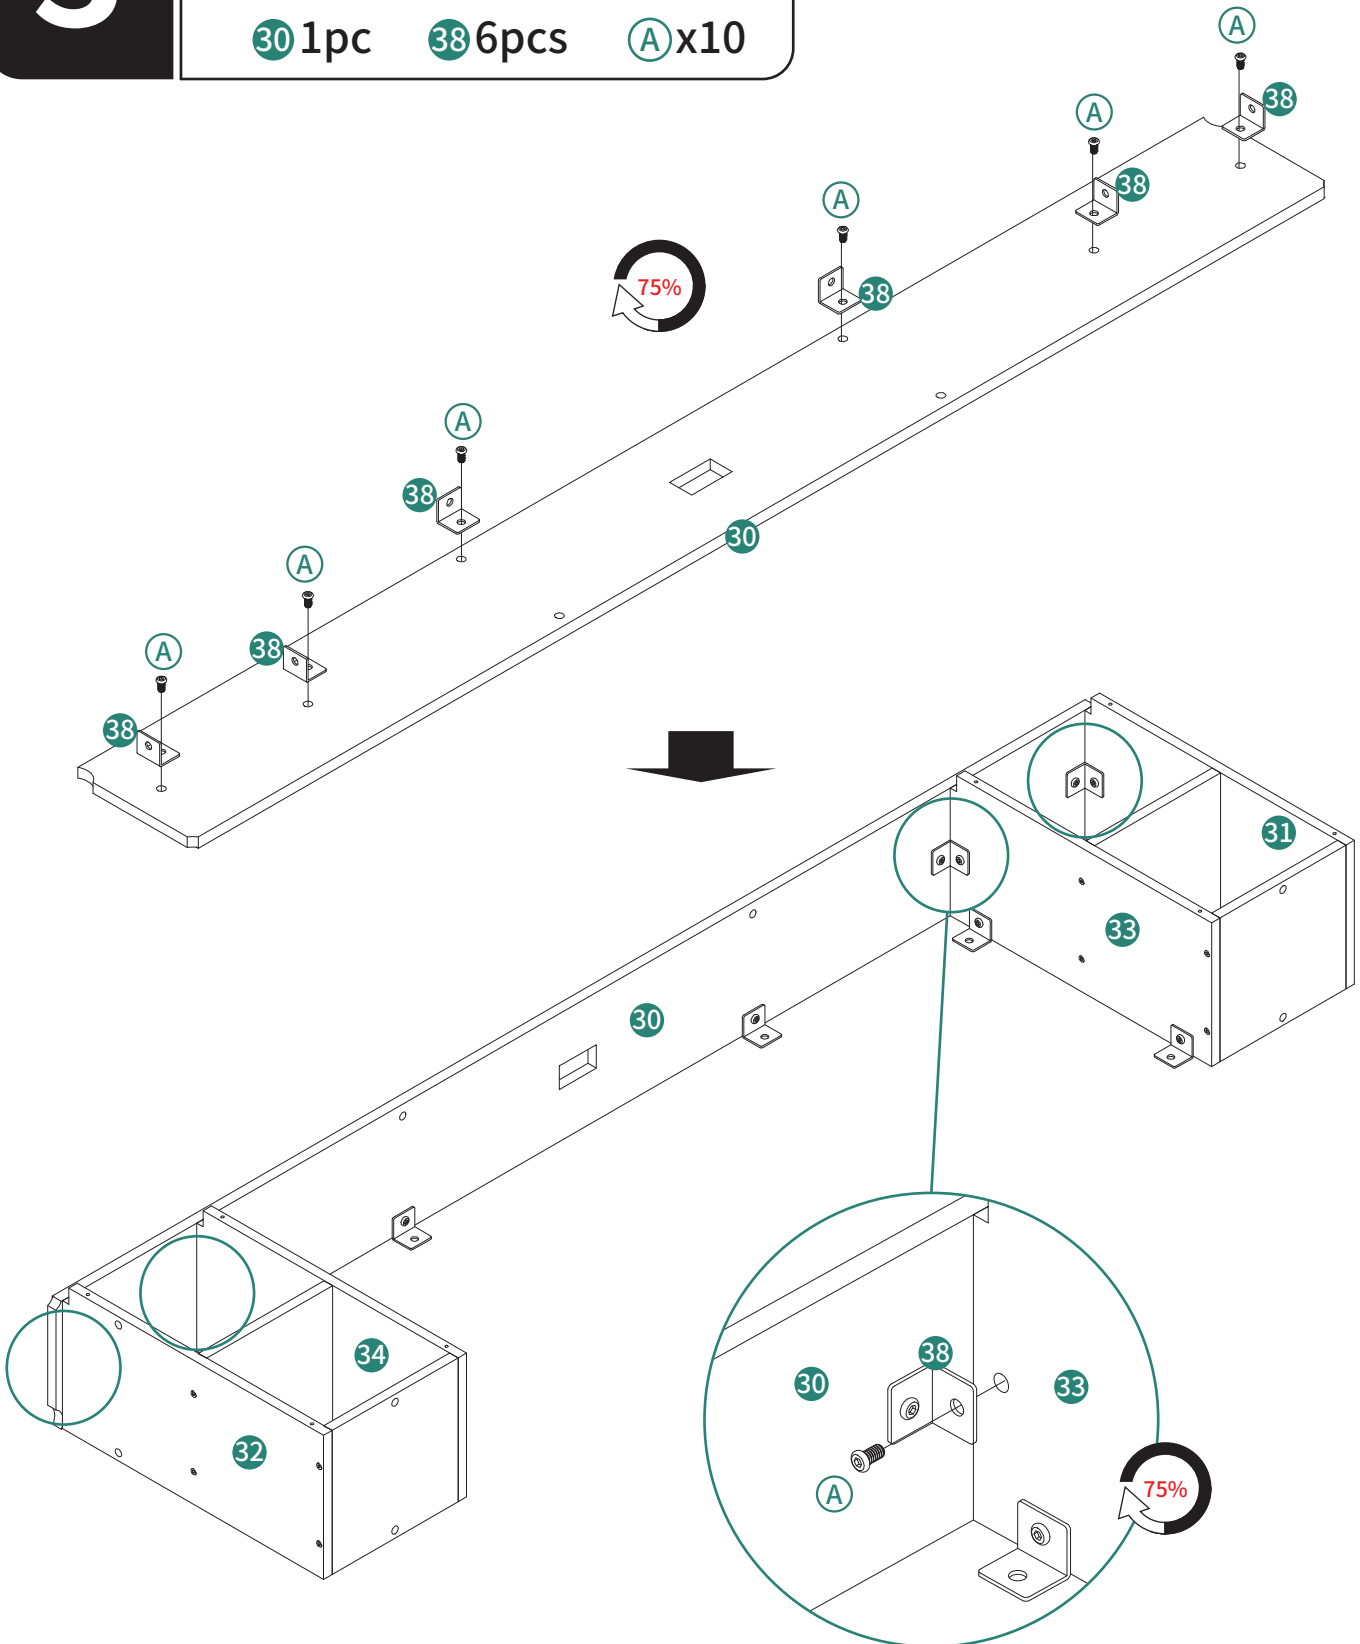


ASSEMBLY

4

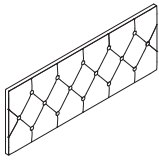

8 1pc

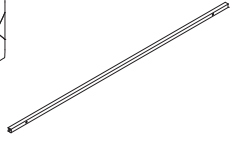


29 2pcs


1/4 X 11mm 1/4 X 28mm



A x6




C x4

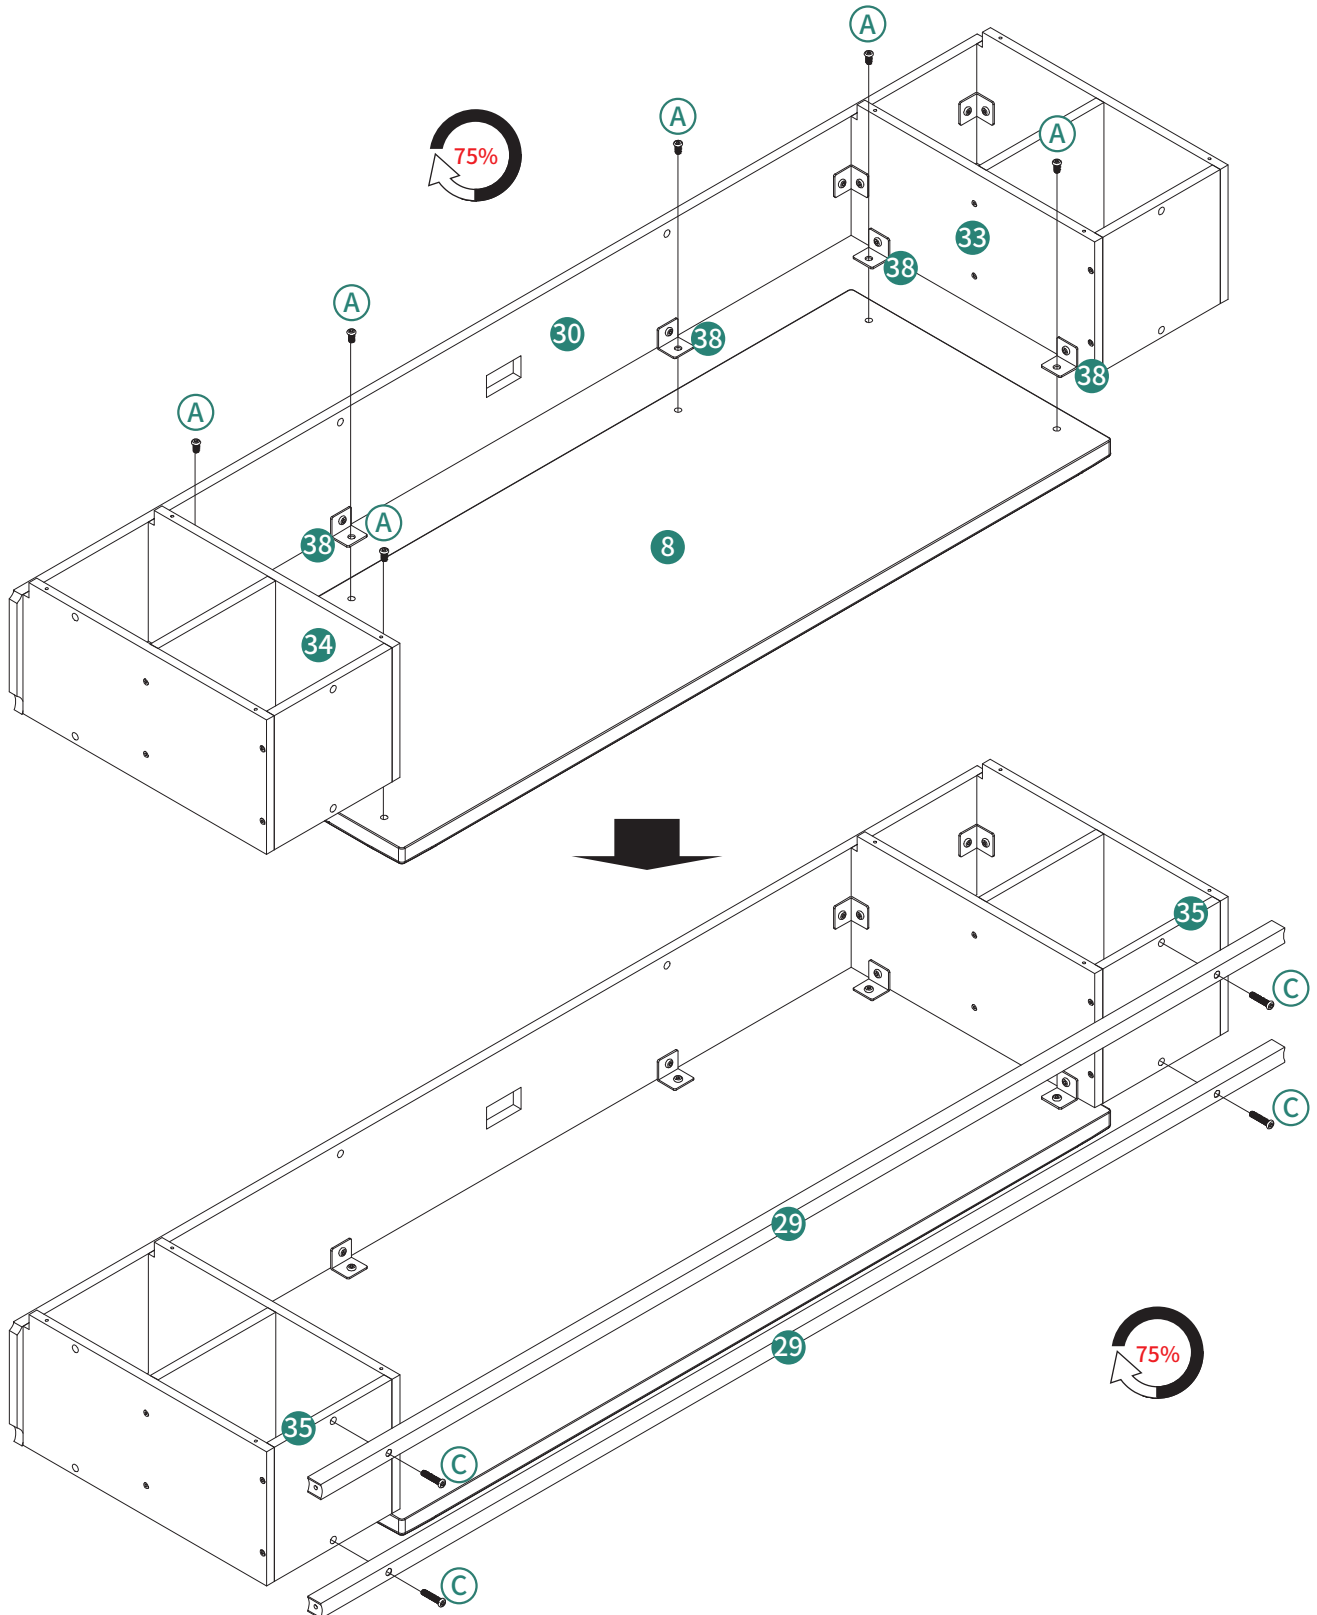

ASSEMBLY

5

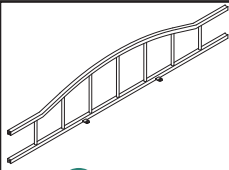

28 1pc




37 2pcs

1/4 X 11mm




A x2

M5 X 35mm




M x8

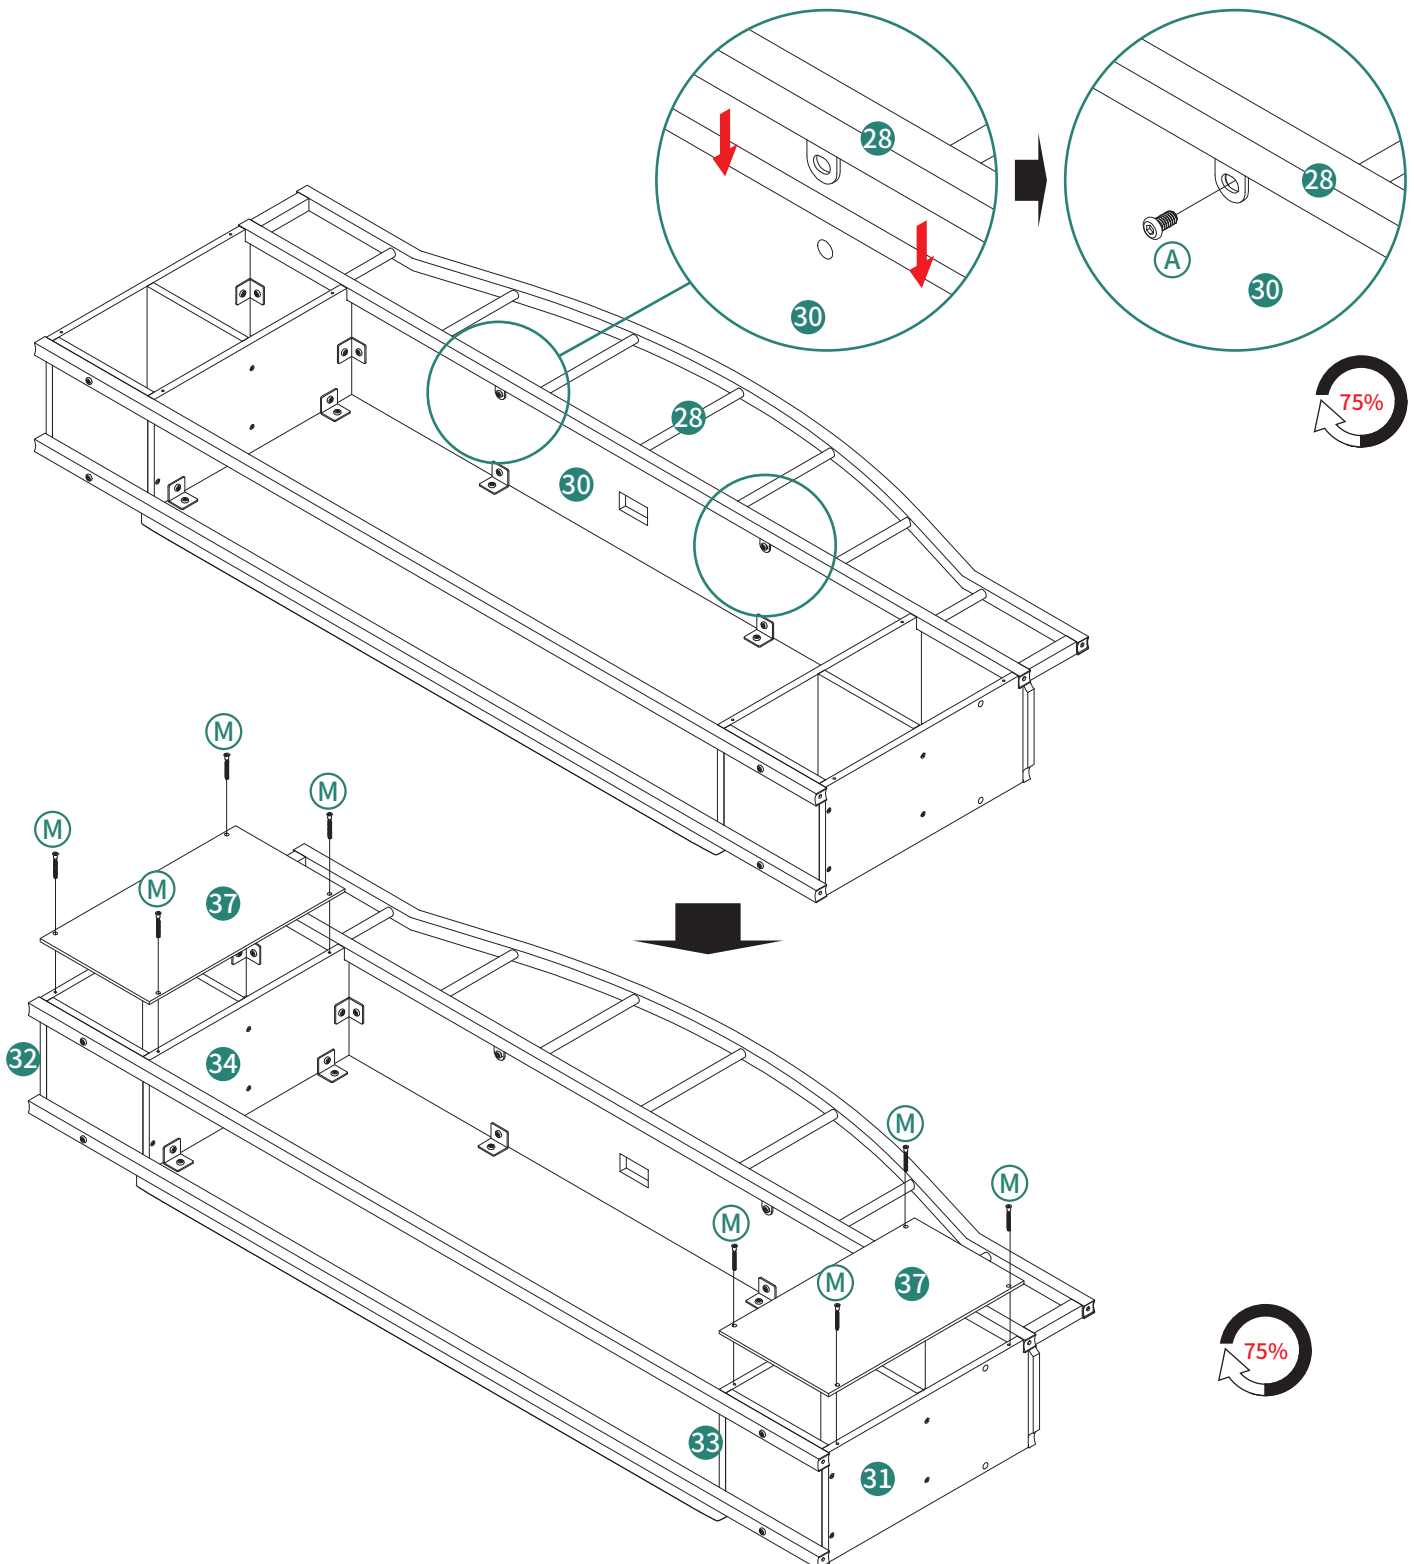

ASSEMBLY

6

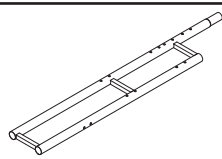


1/4 X 48mm

1 2pcs



D x12

Noted: This step could adjust the mattress height.

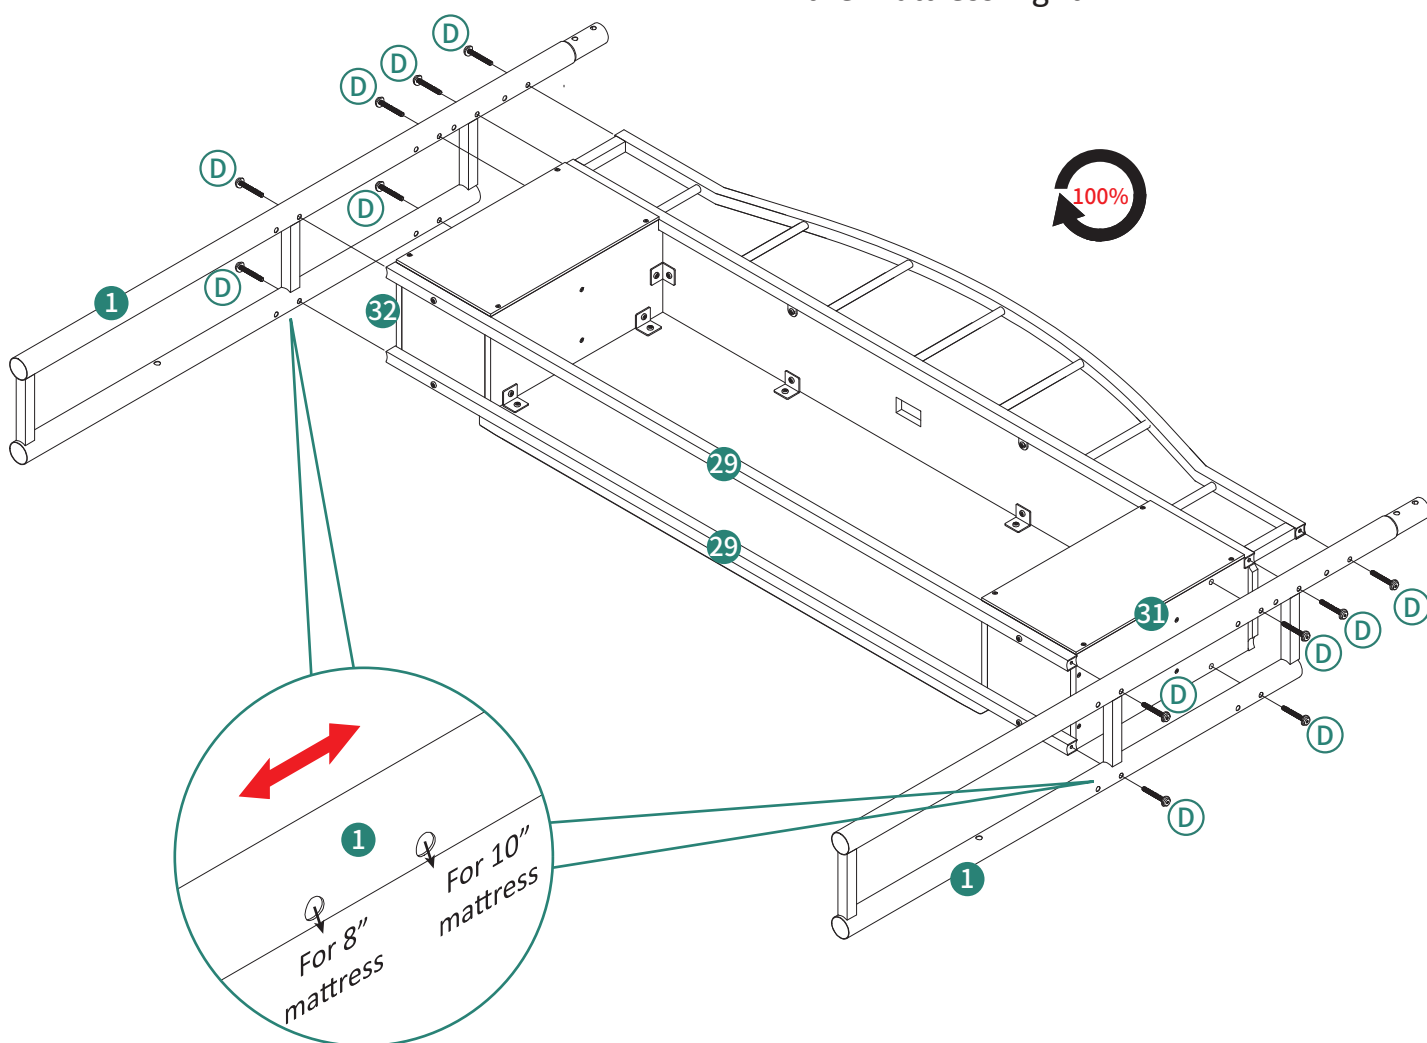

Tighten all screws installed in steps 2~6.


Ziehen Sie alle Schrauben an, die in den Schritten 2~6.

Serrez toutes les vis installées dans les étapes 2~6.


Stringere tutte le viti installate nei passaggi 2~6.

Apriete todos los tornillos instalados en los pasos 2~6.

ASSEMBLY


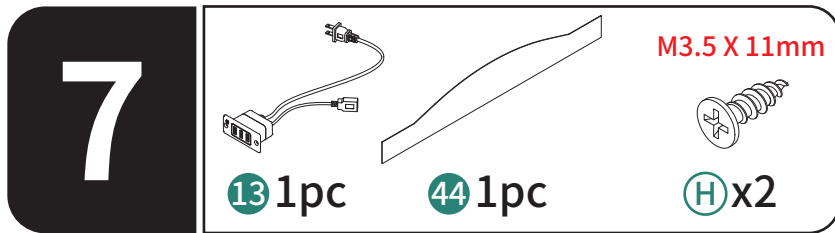


Please stick 44 onto the
Velcro of the 28.

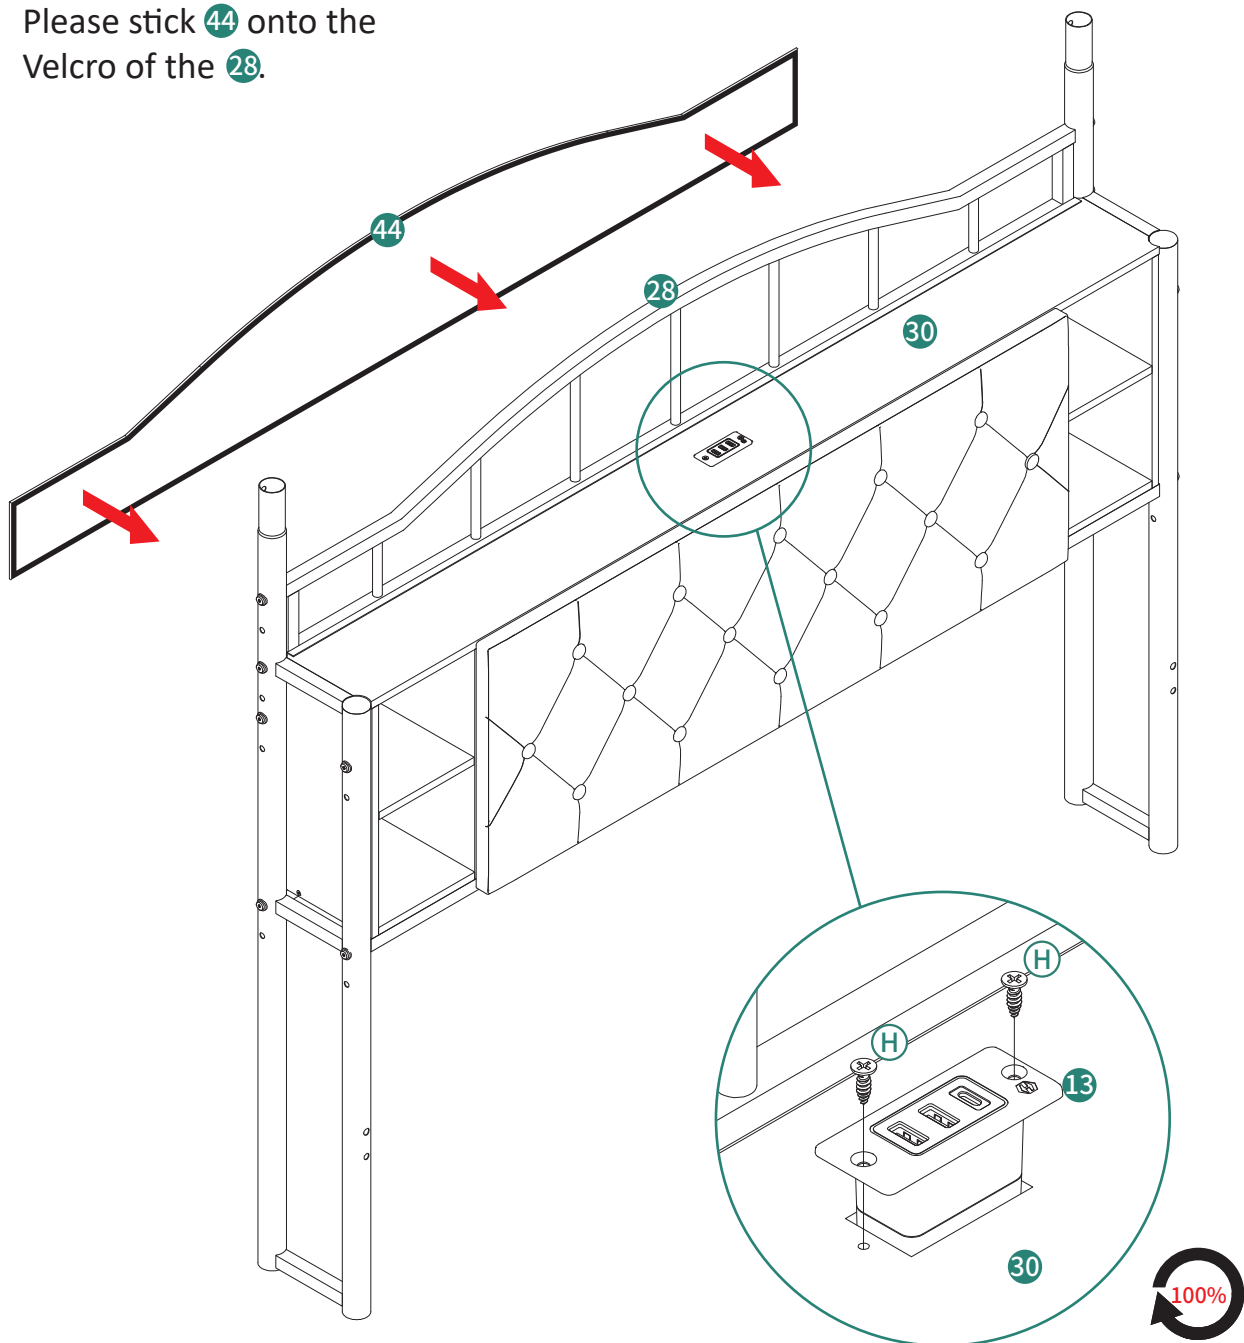


ASSEMBLY

8

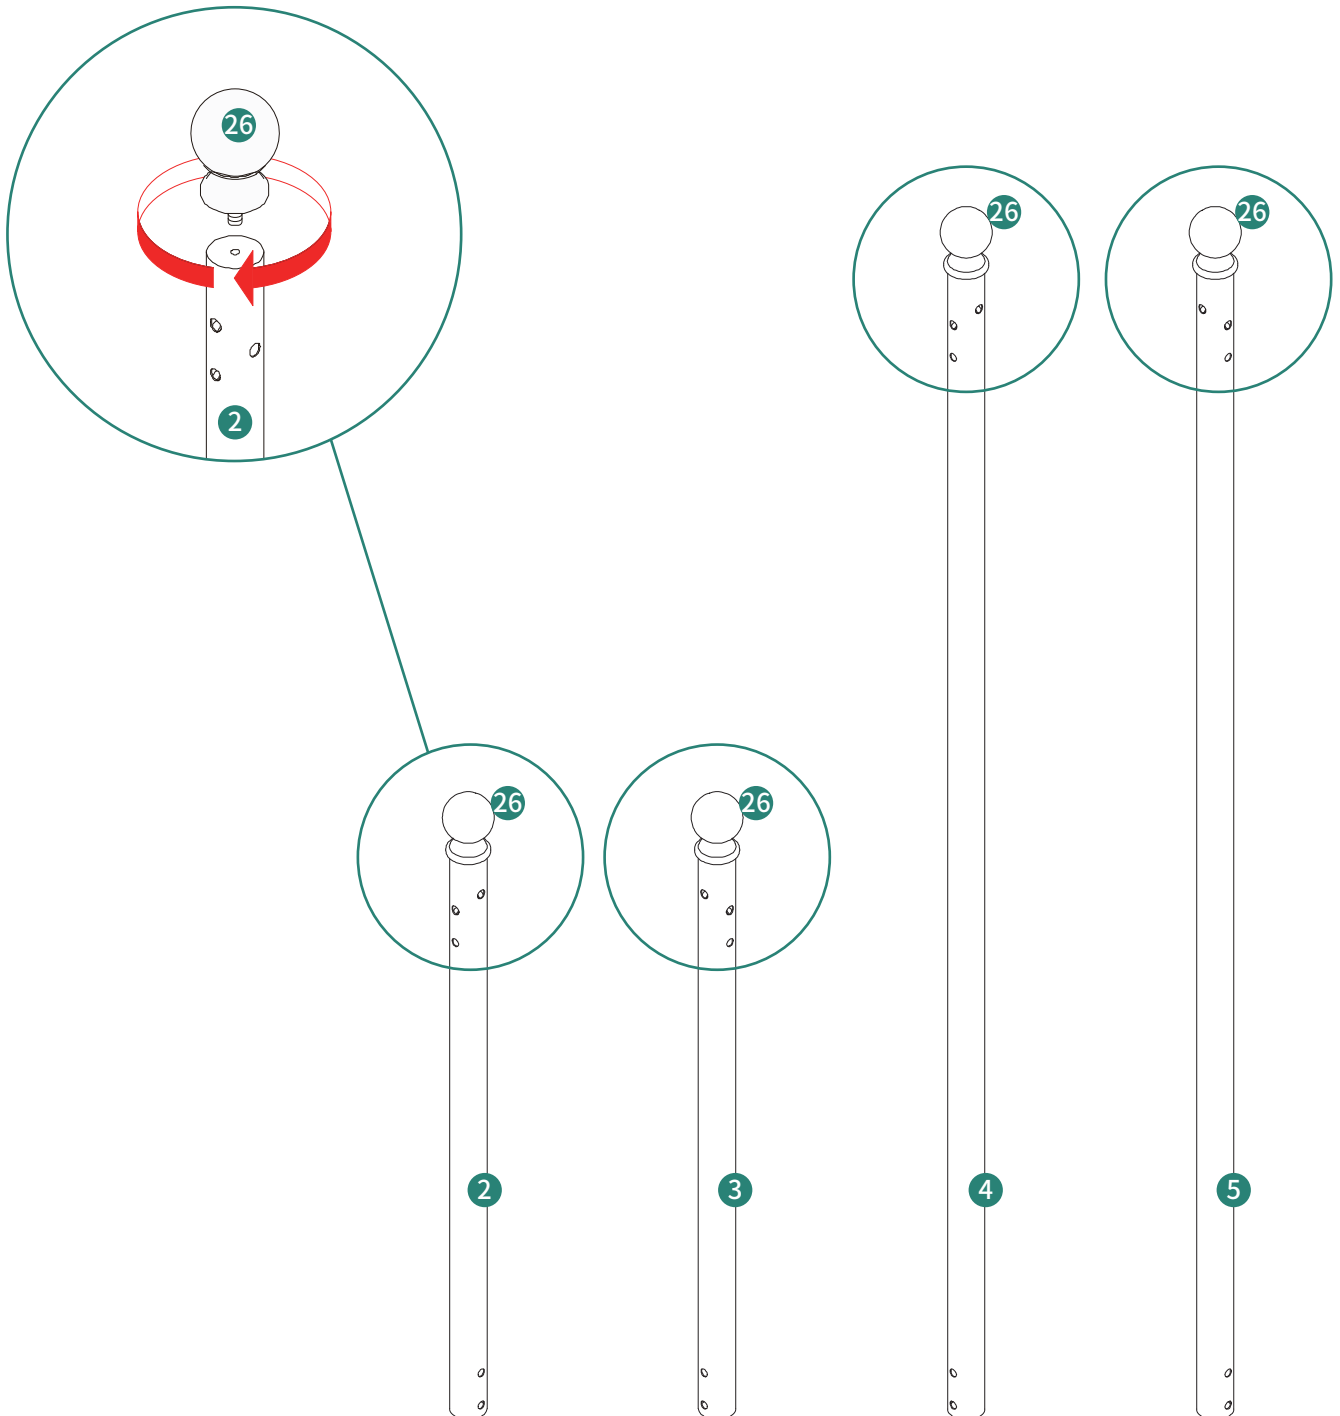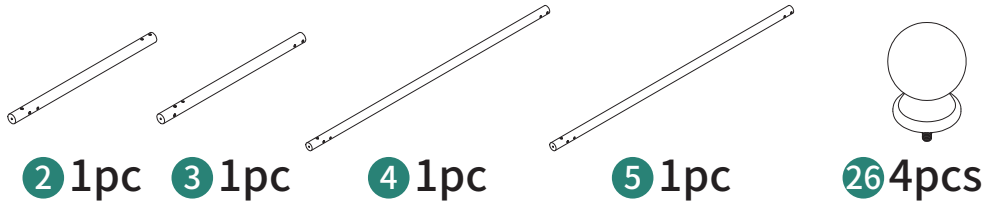


ASSEMBLY

9



6 1pc




7 1pc

1/4 X 16mm





B x4

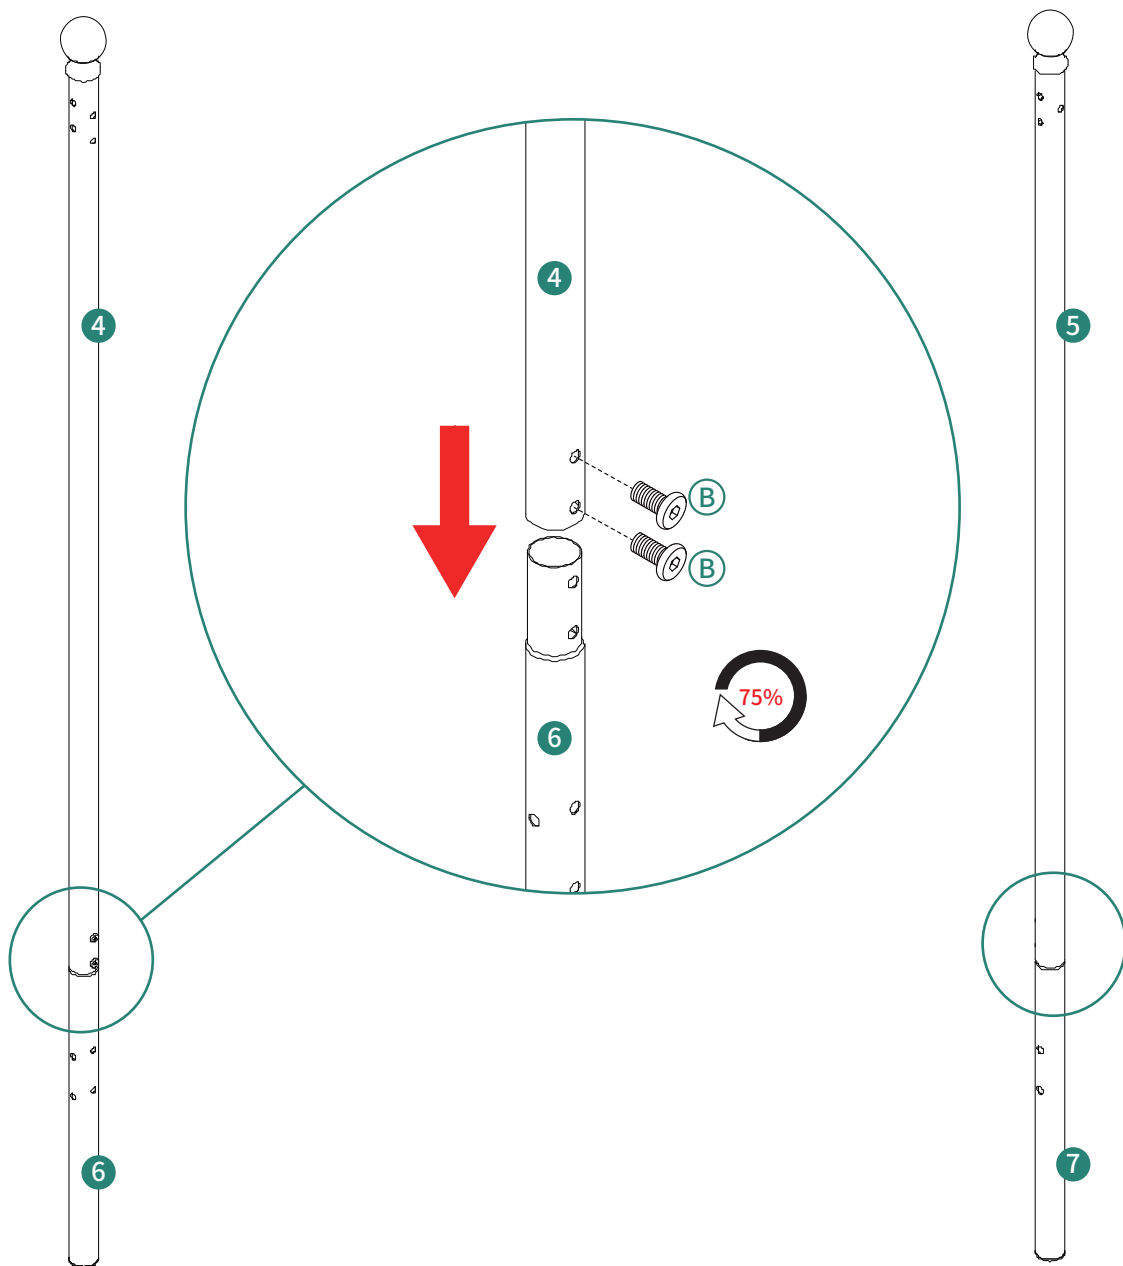


ASSEMBLY

10

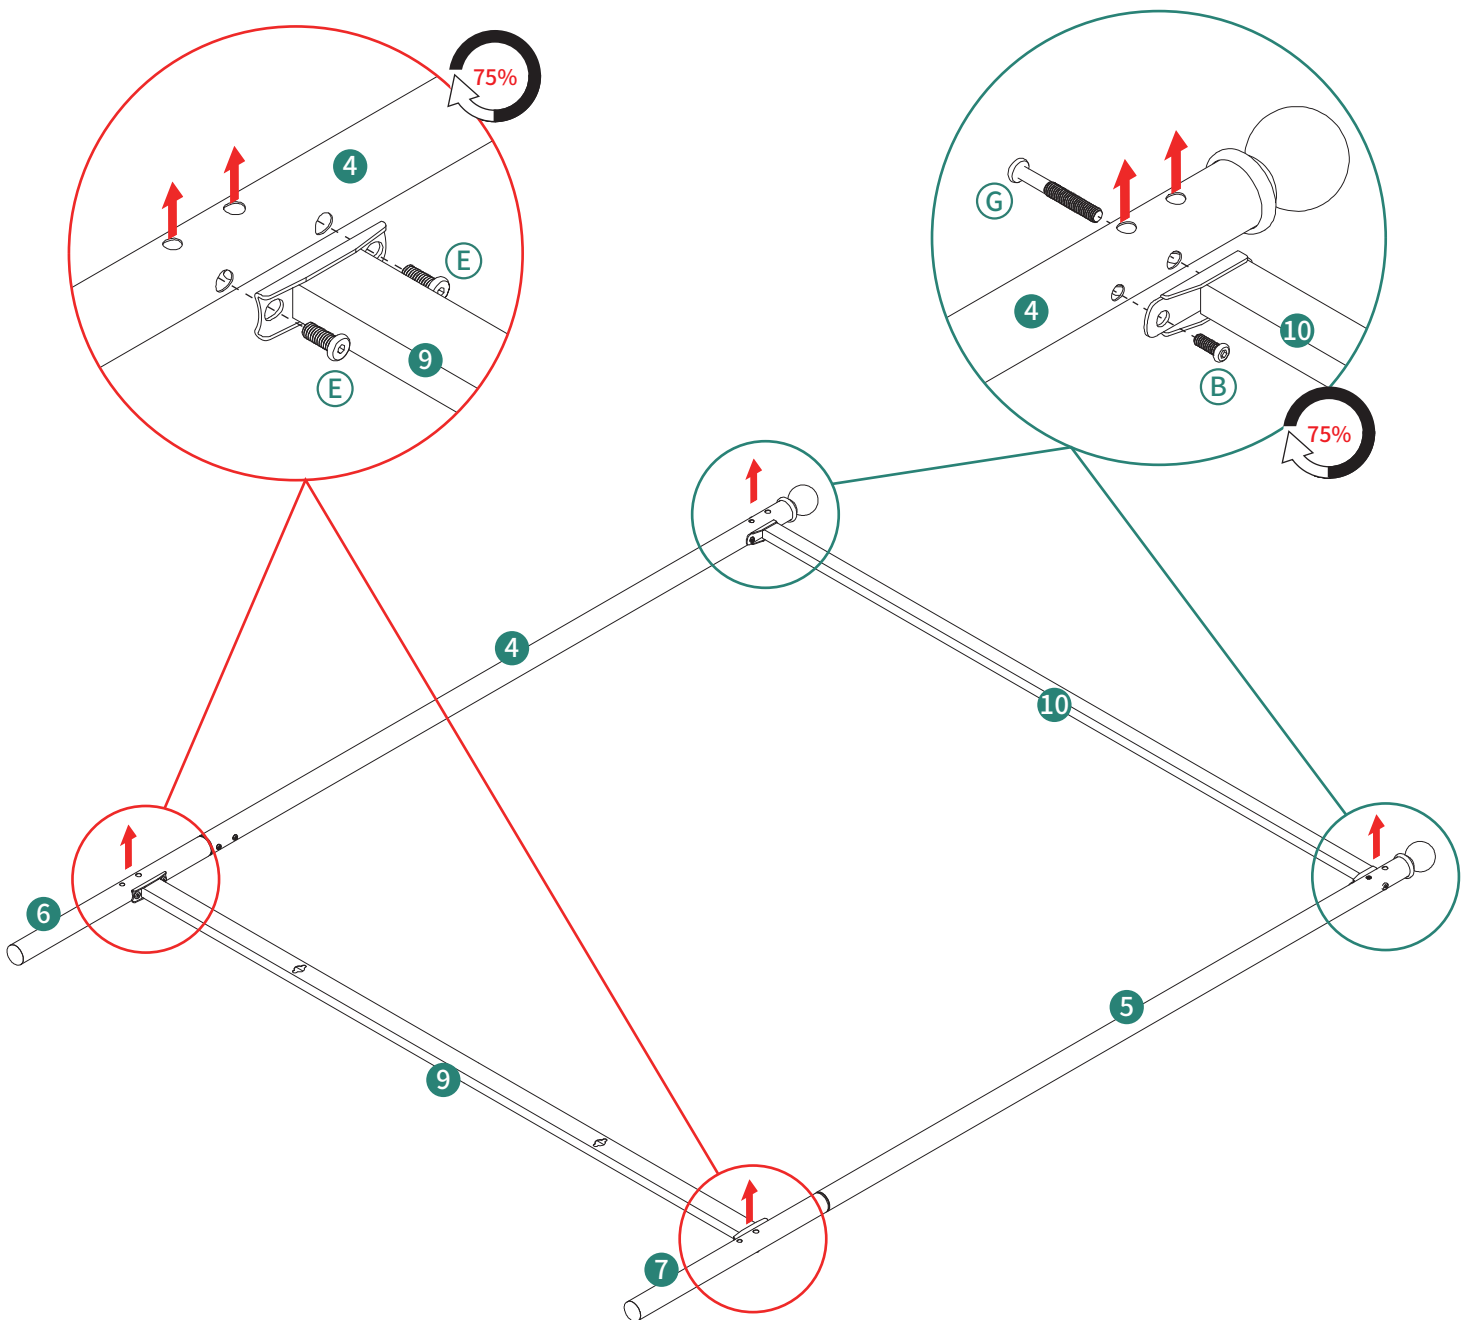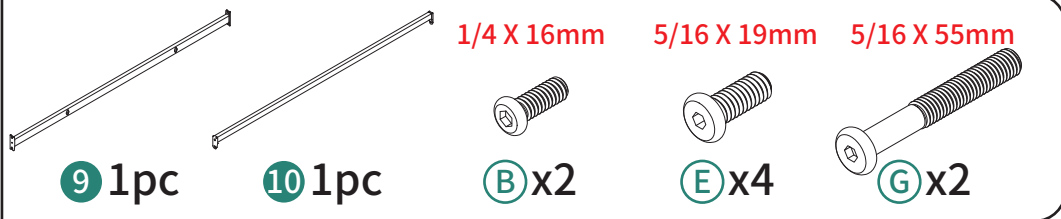

ASSEMBLY

11

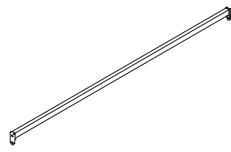


10 1pc

1/4 X 16mm




B x6

5/16 X 55mm




G x2

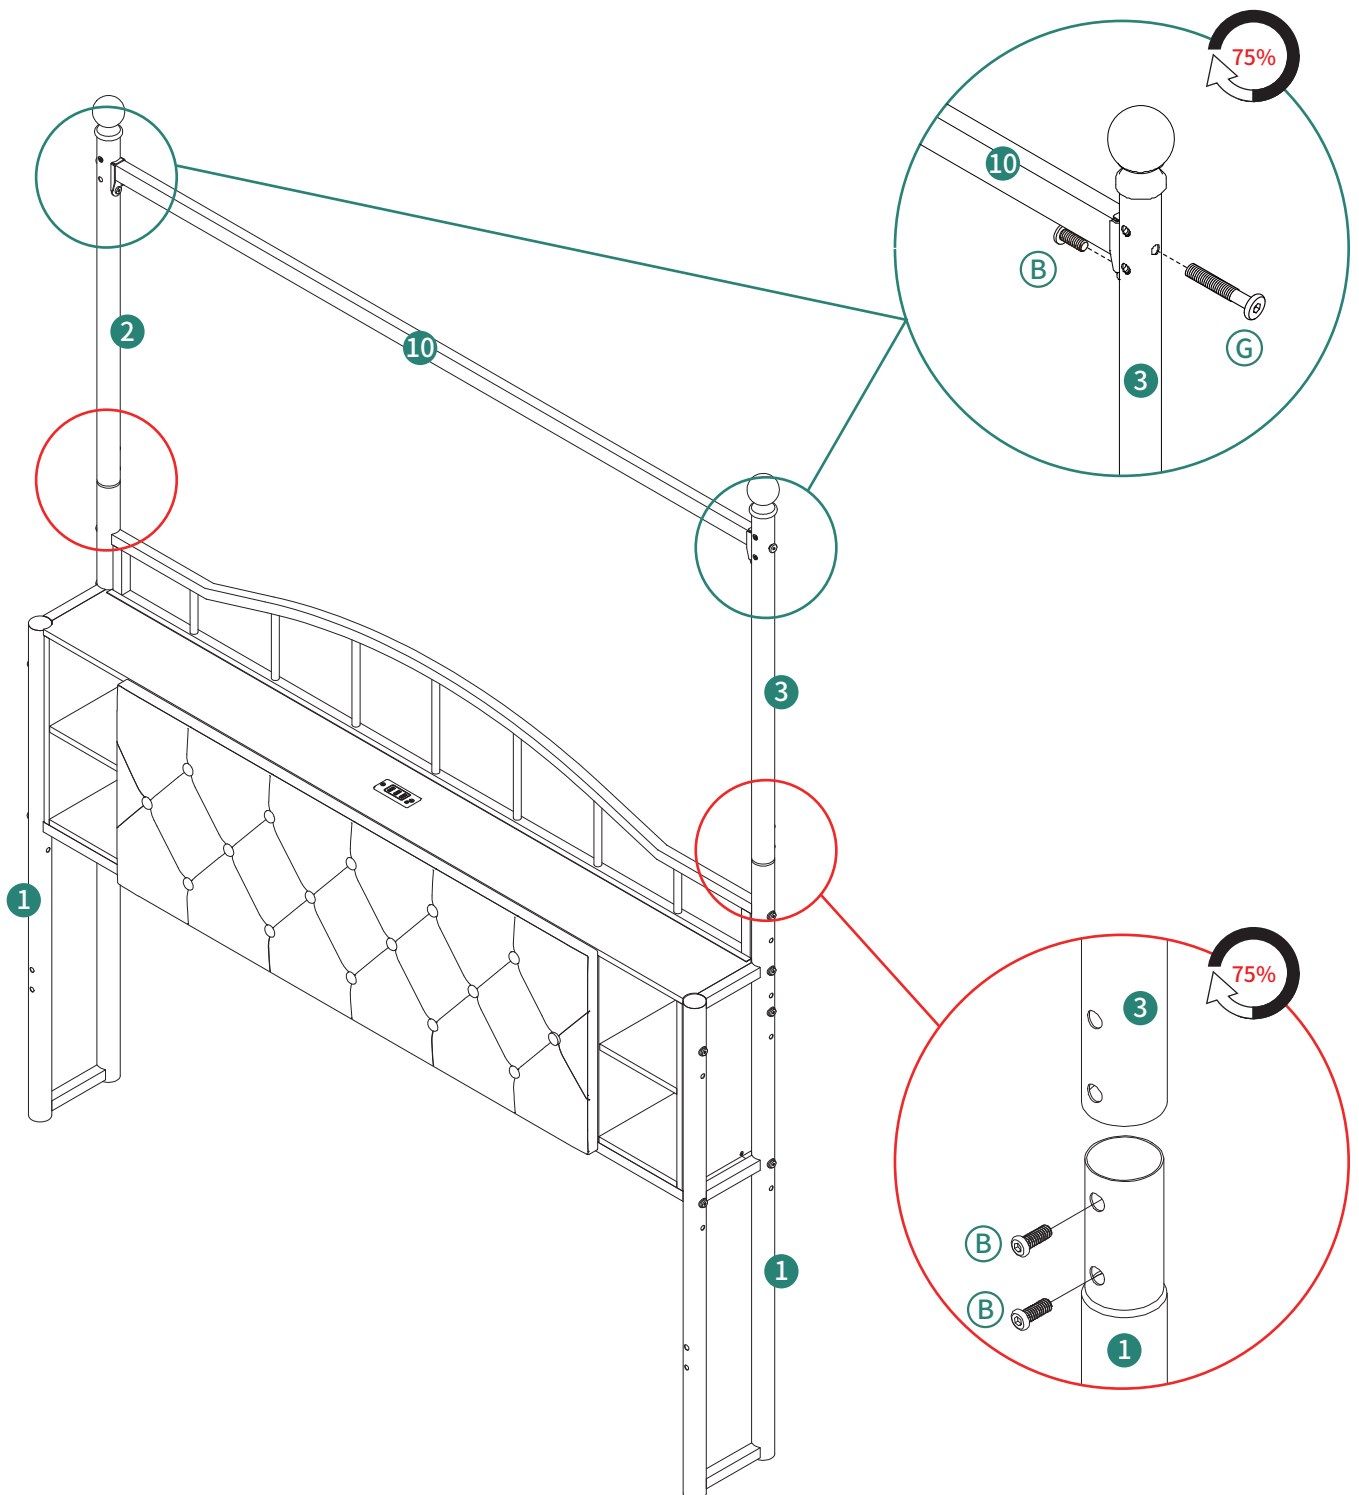


ASSEMBLY

12

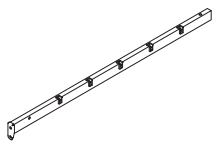

15 2pcs

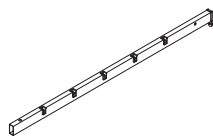

16 2pcs




20 2pcs

5/16 X 55mm



G x4

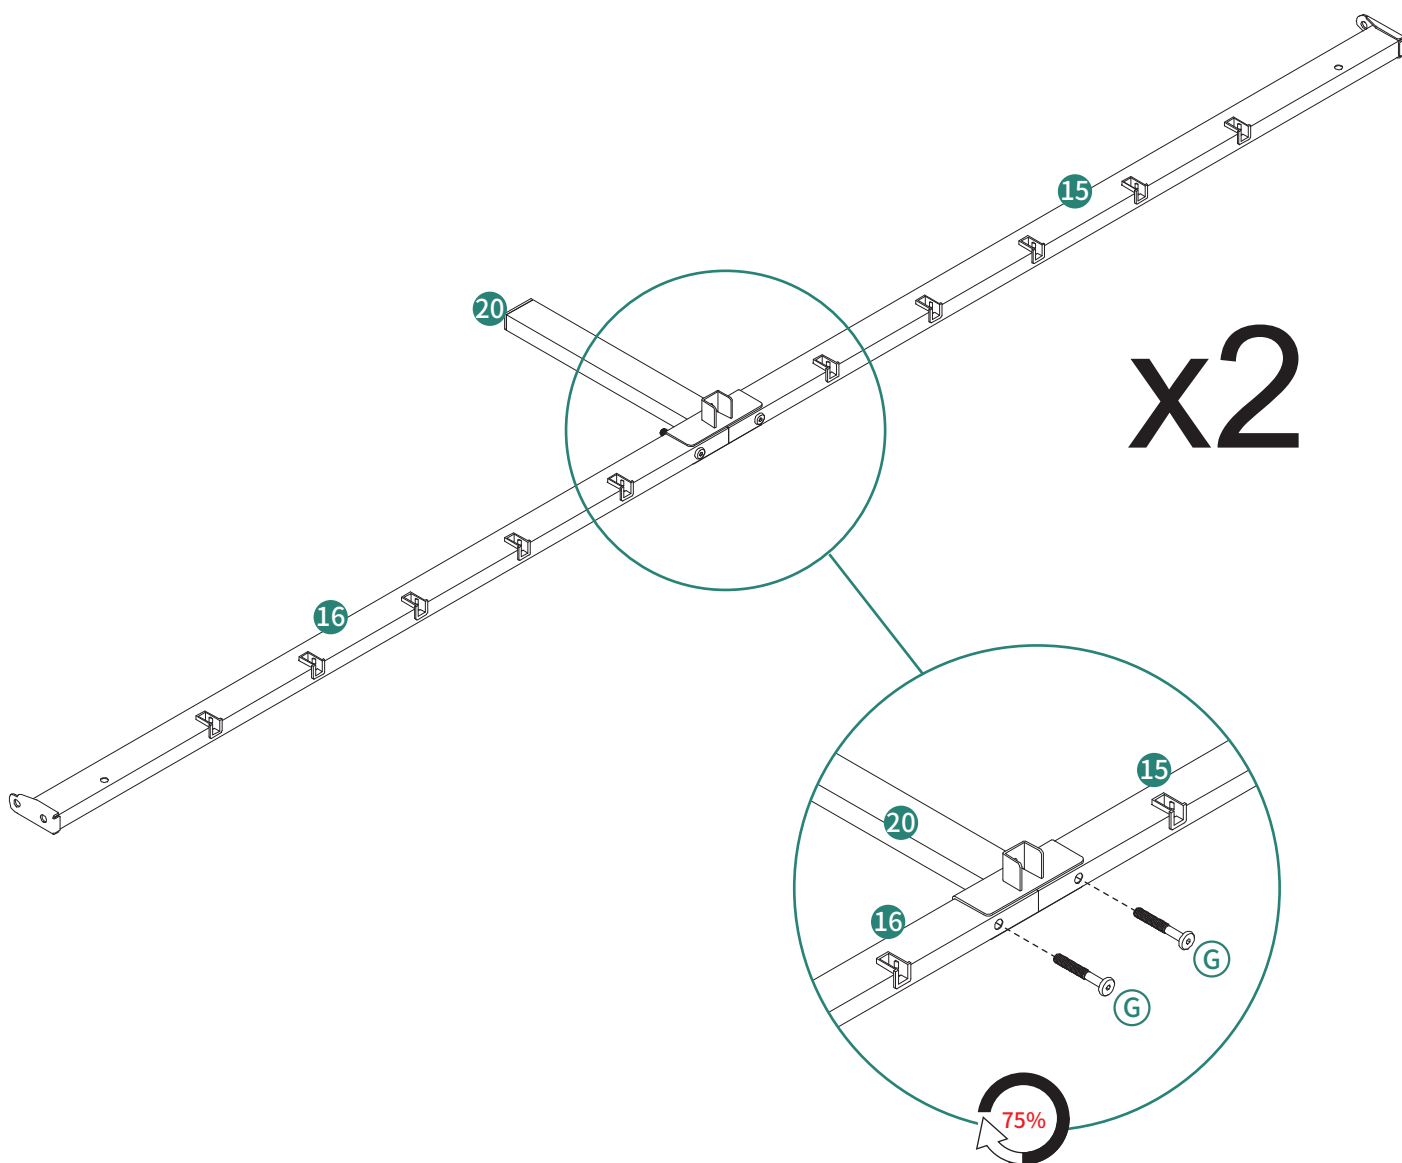

ASSEMBLY

13

1/4 X 16mm


5/16 X 55mm



(B) x4





(G) x4

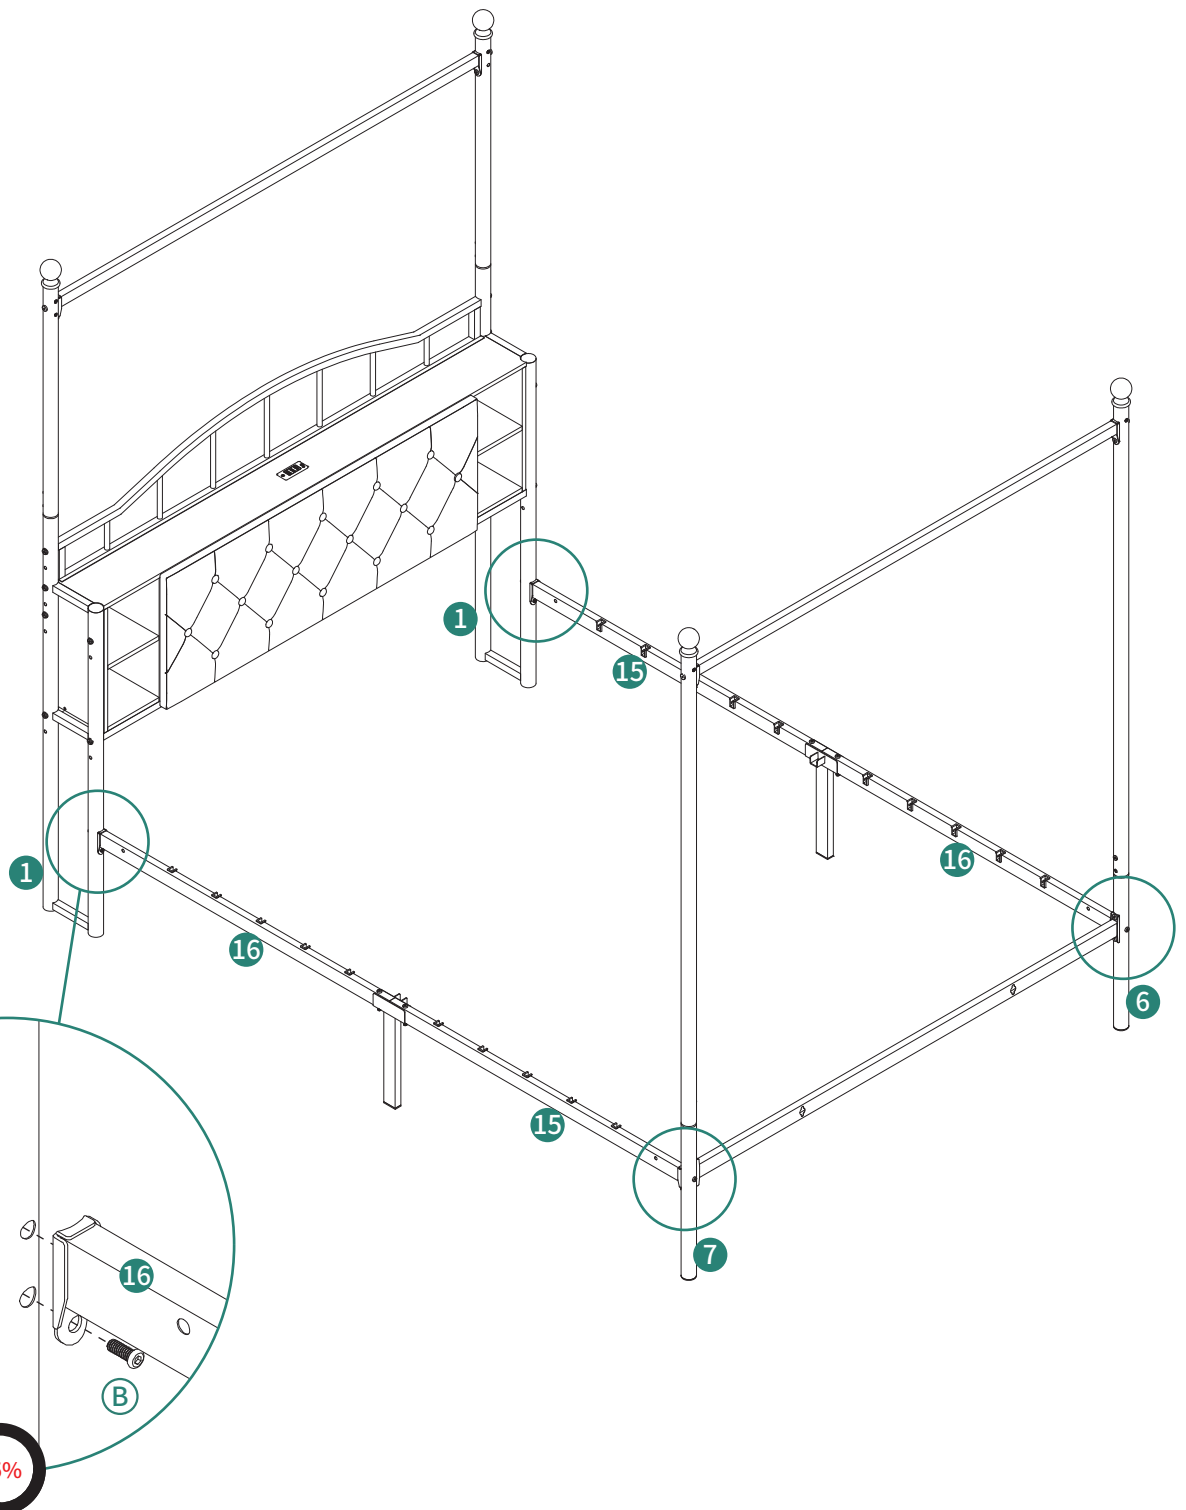

ASSEMBLY

14

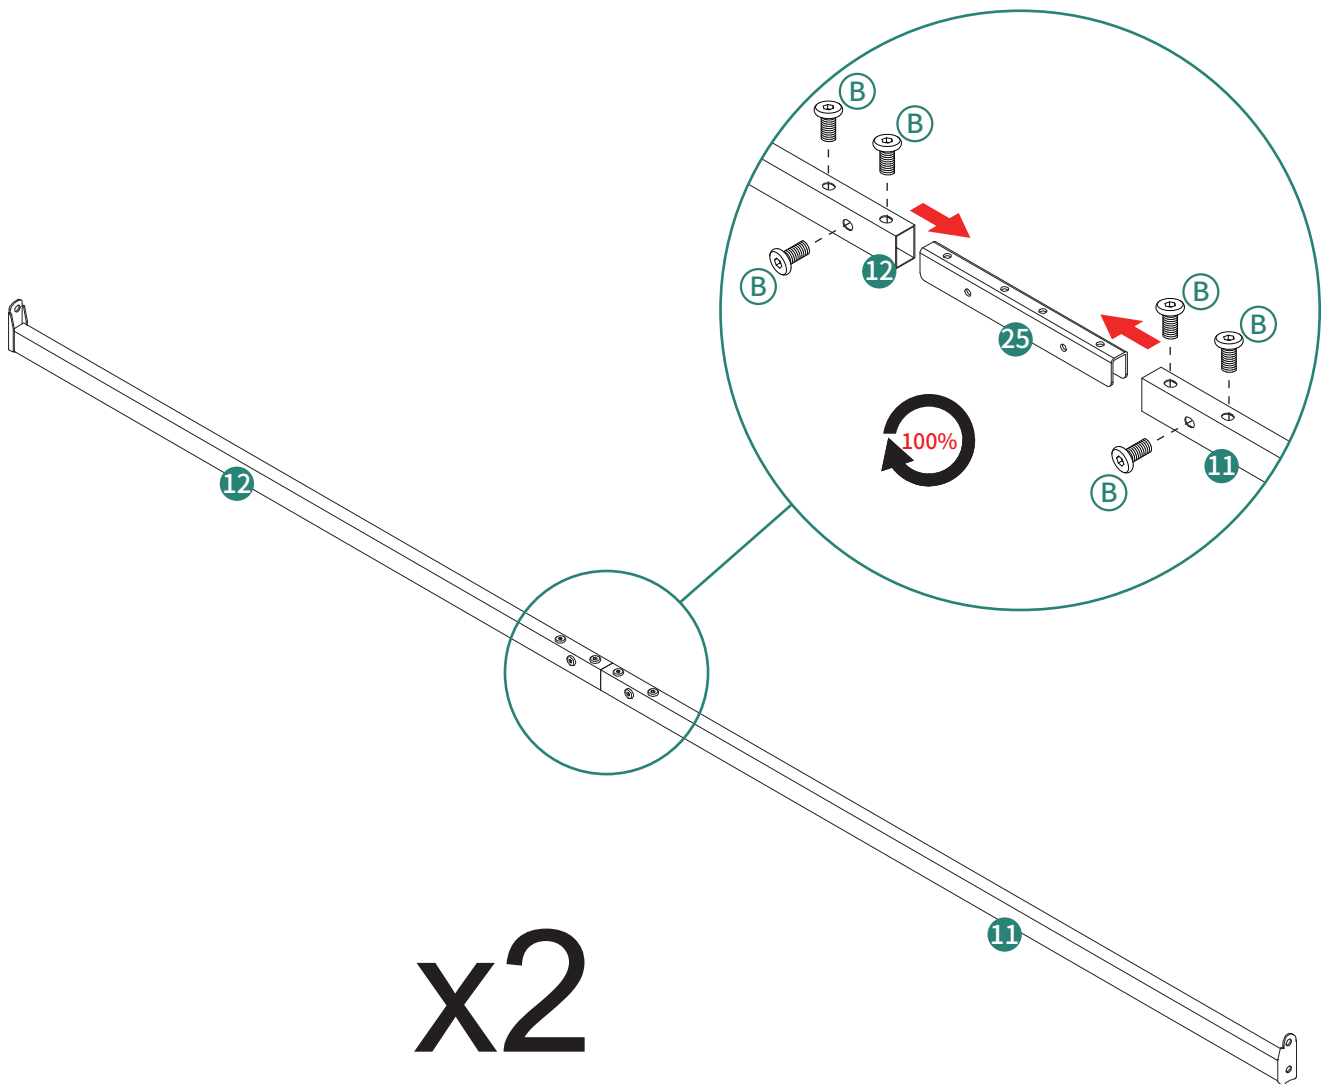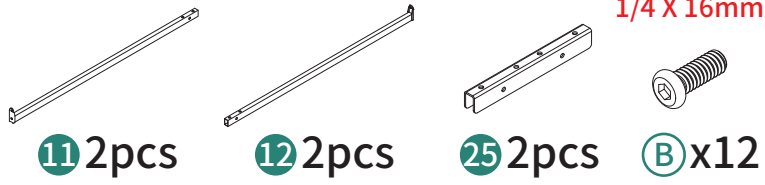

ASSEMBLY


15

1/4 X 16mm



5/16 X 55mm



(B) x4



(G) x4

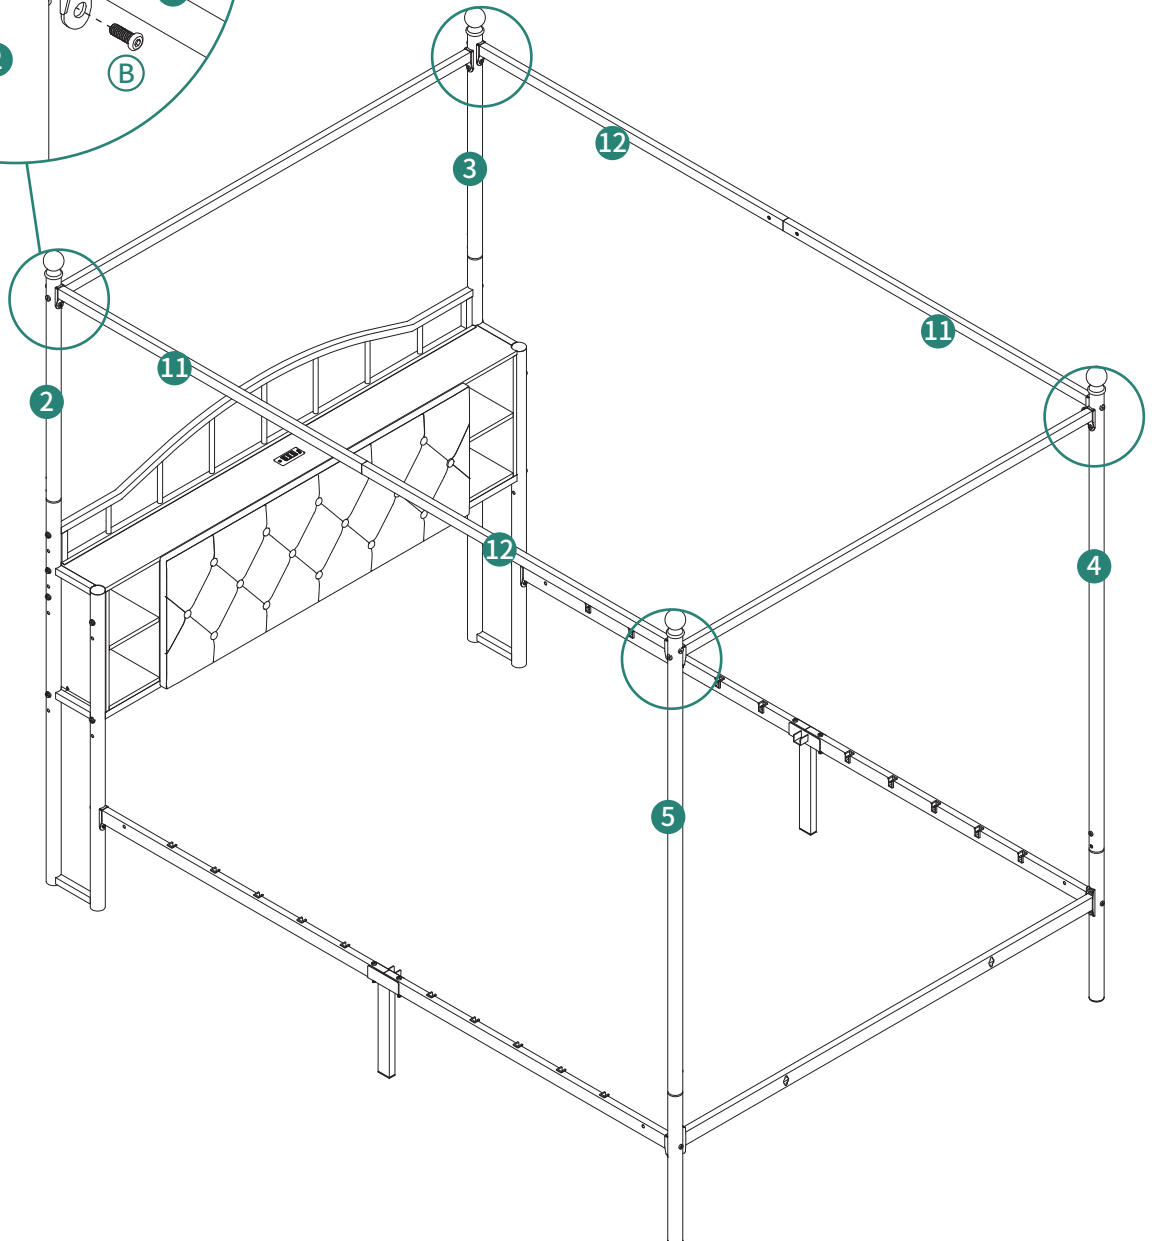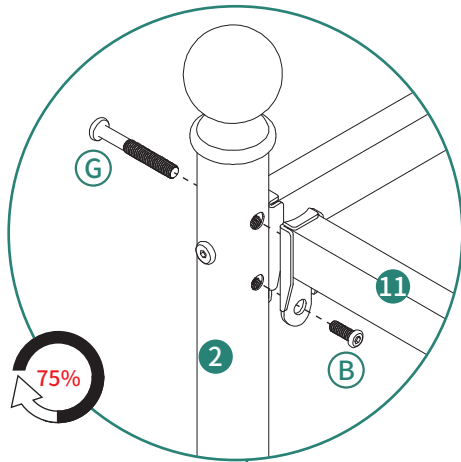

ASSEMBLY

16




19 2pcs




21 1pc

5/16 X 35mm




F x2

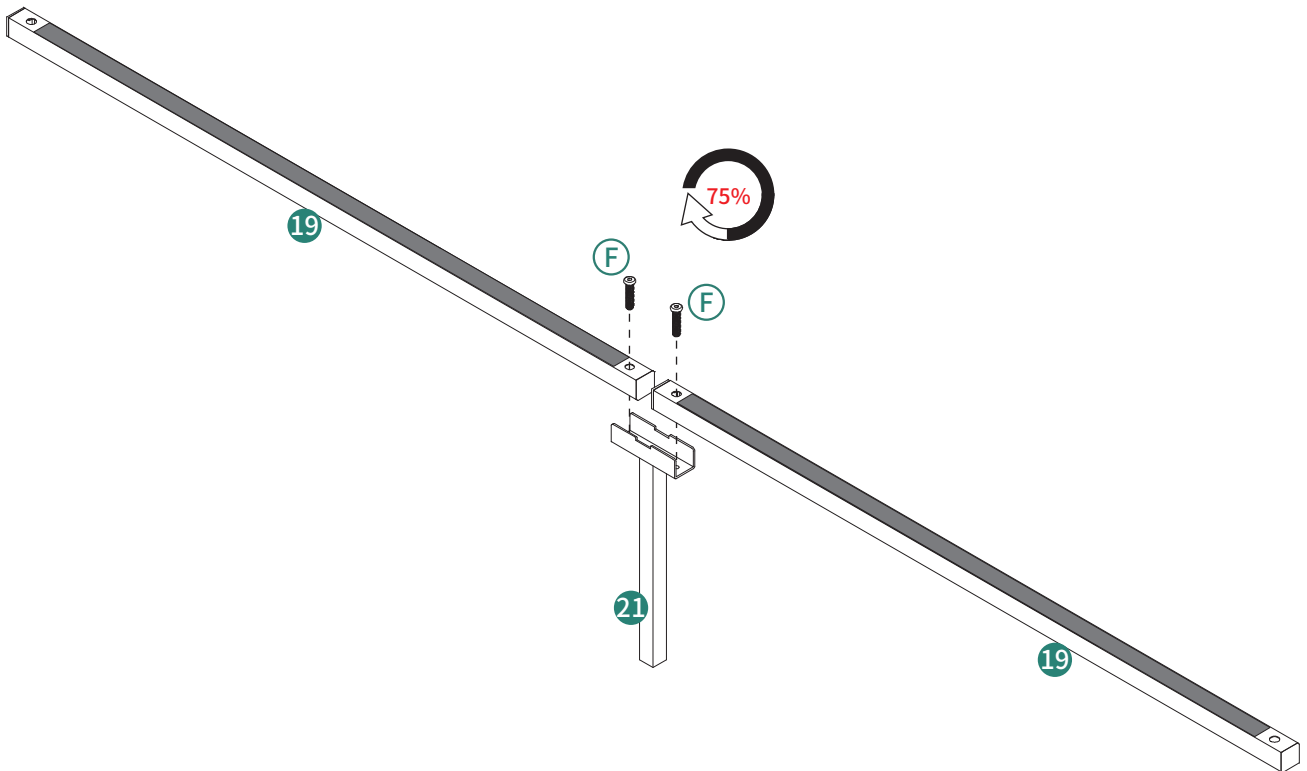


ASSEMBLY

17

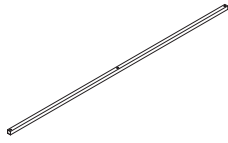

17 1pc




1/4 X 28mm 5/16 X 55mm



C x2




G x1

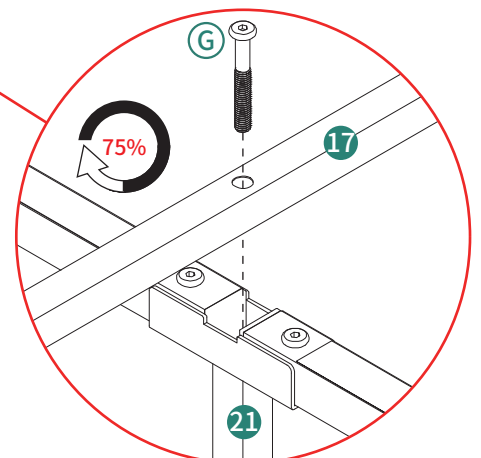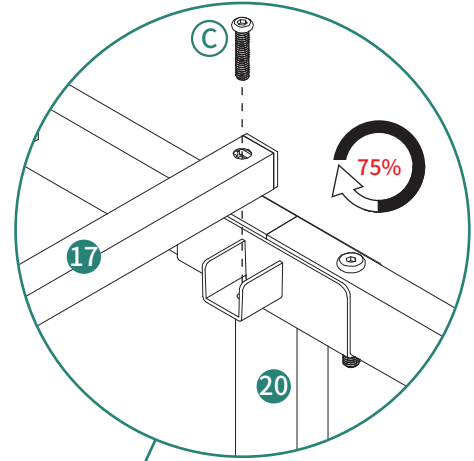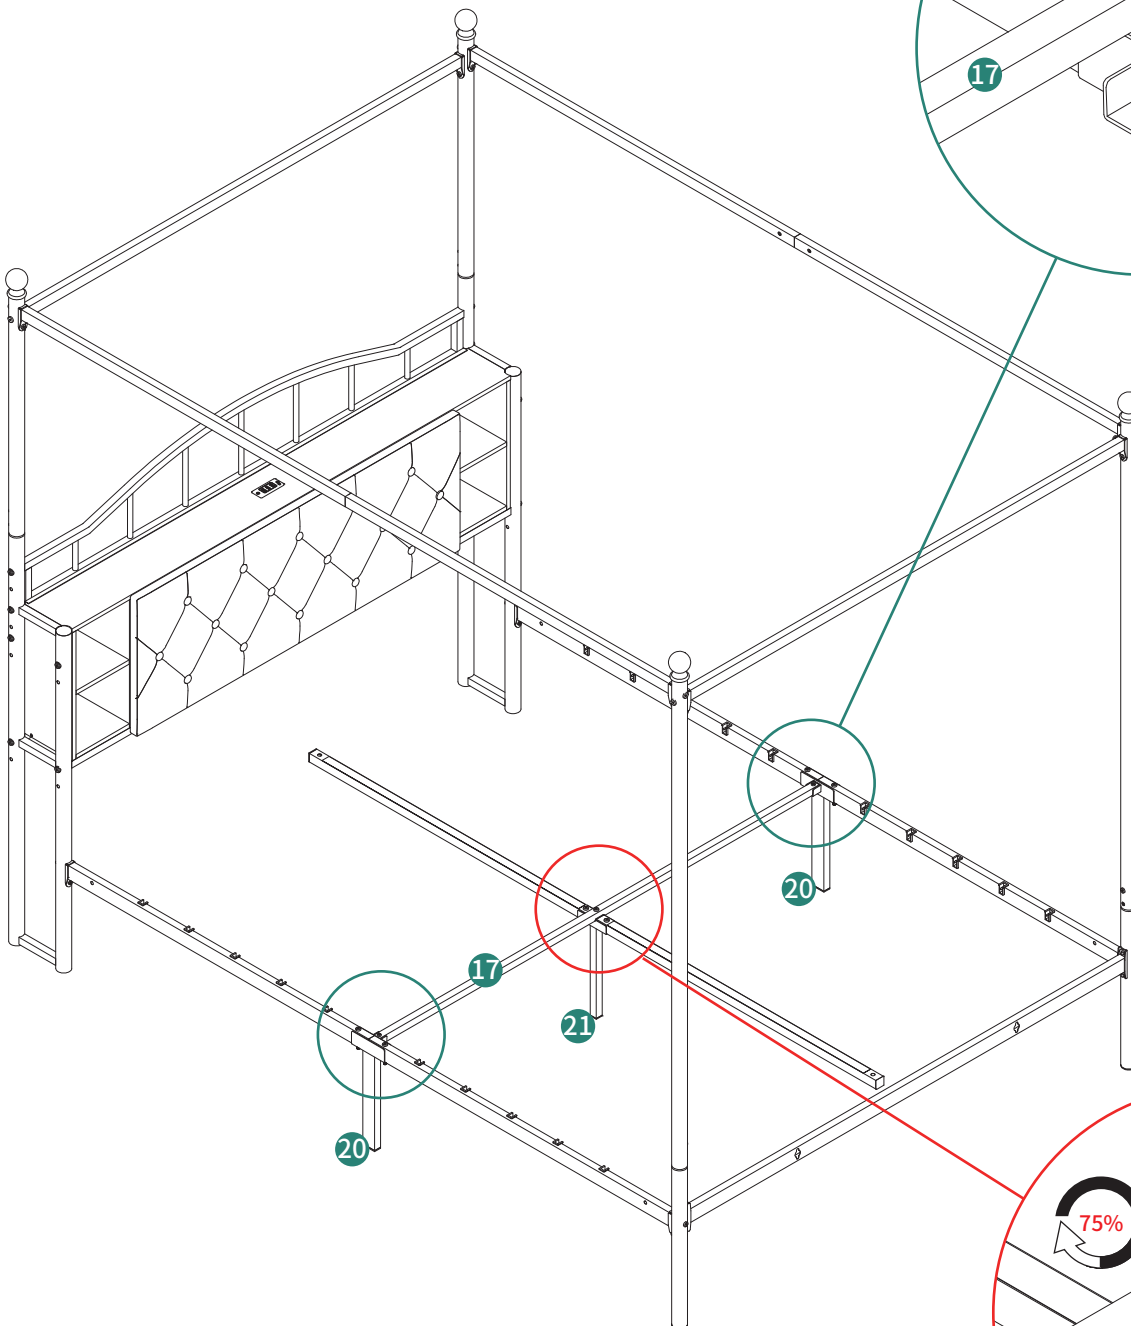

ASSEMBLY

18

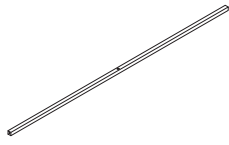

18 2pcs




22 2pcs

5/16 X 55mm




G x2

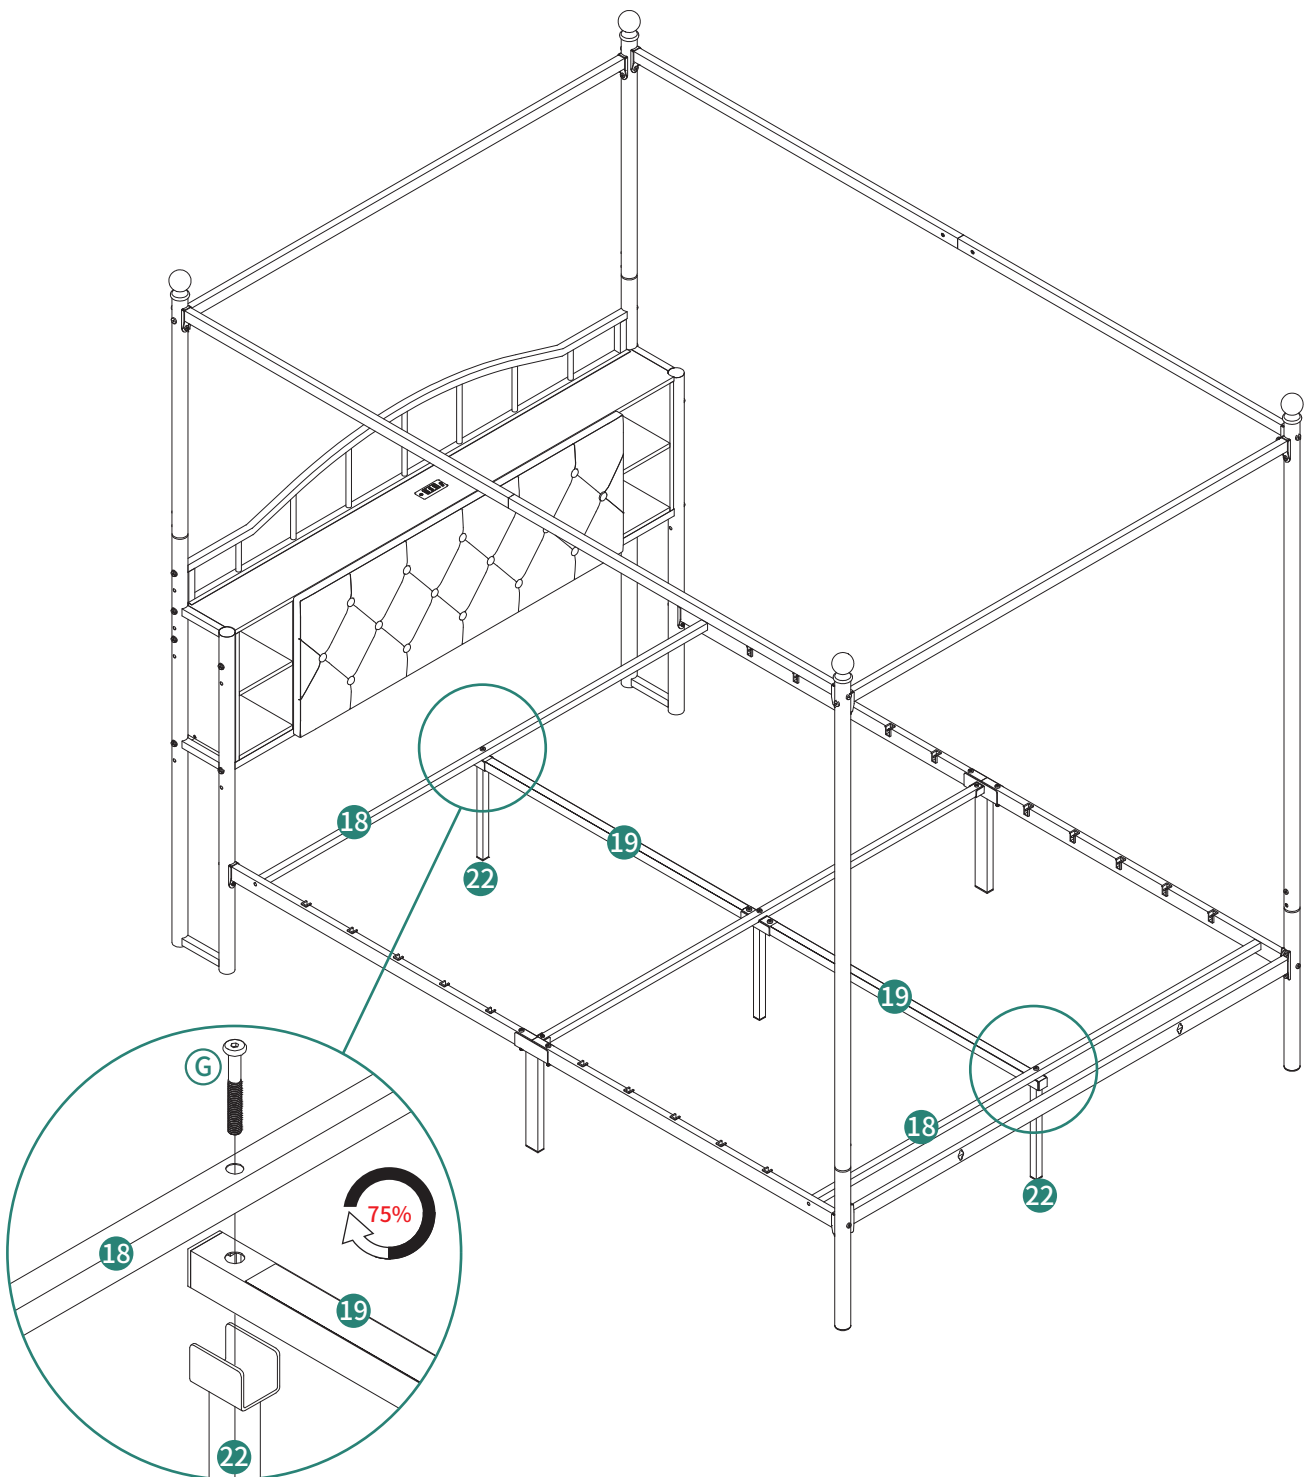



ASSEMBLY

19

1/4 X 28mm





Ⓒ x4

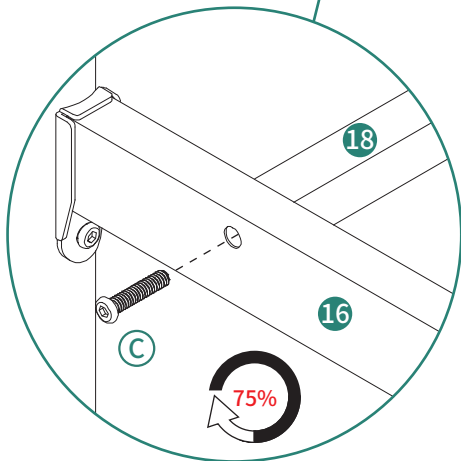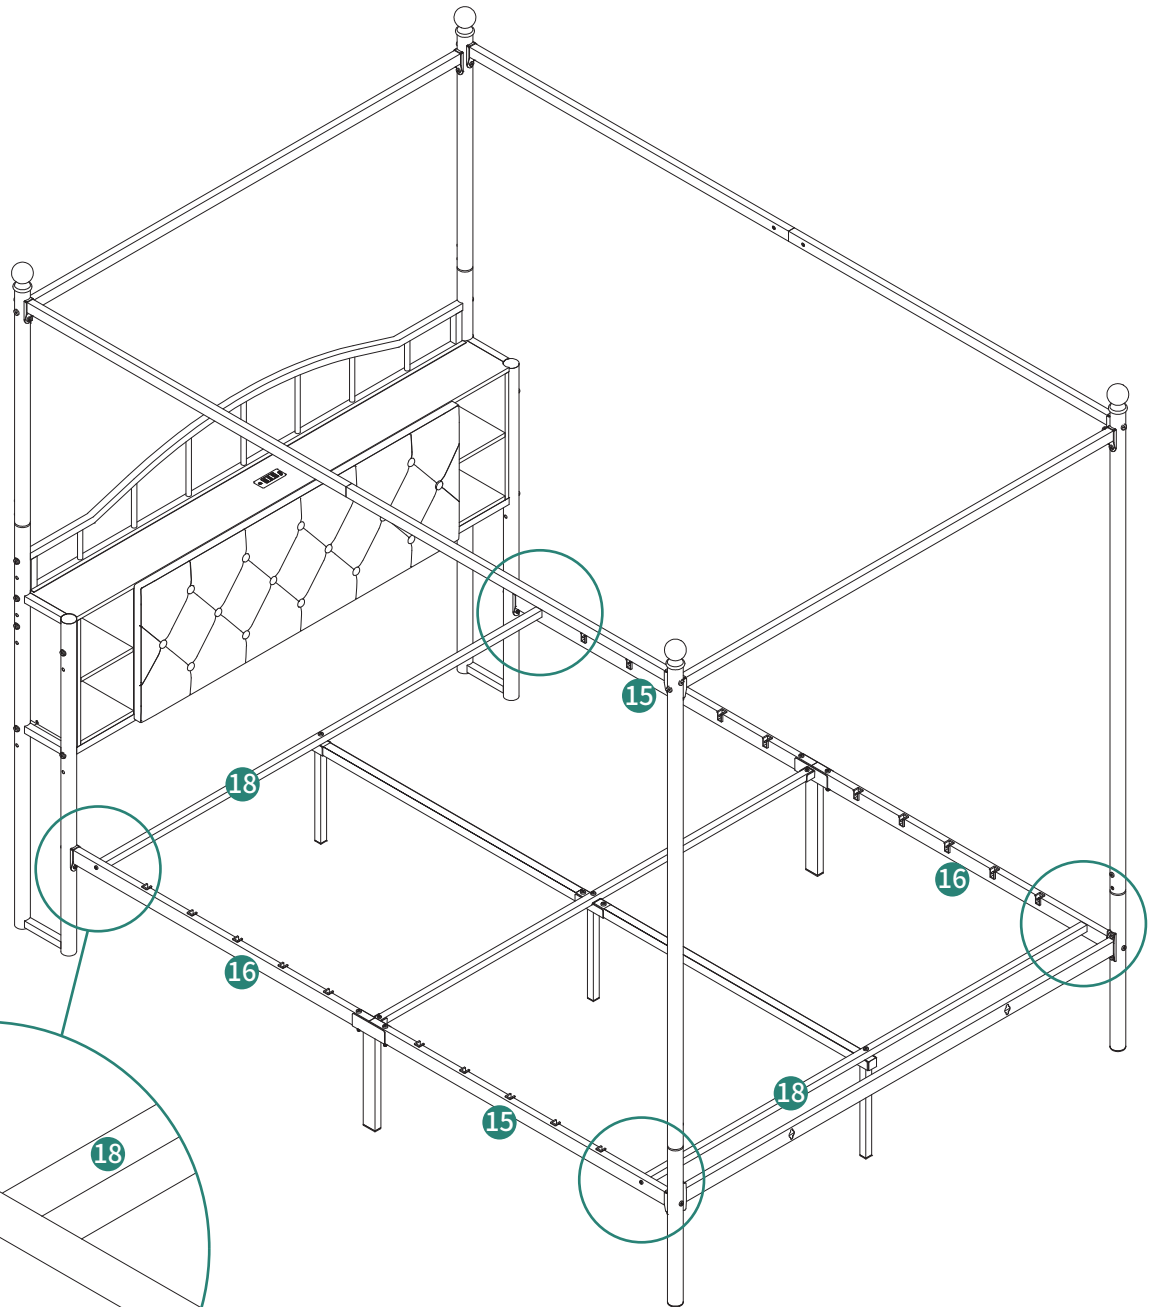

ASSEMBLY

20

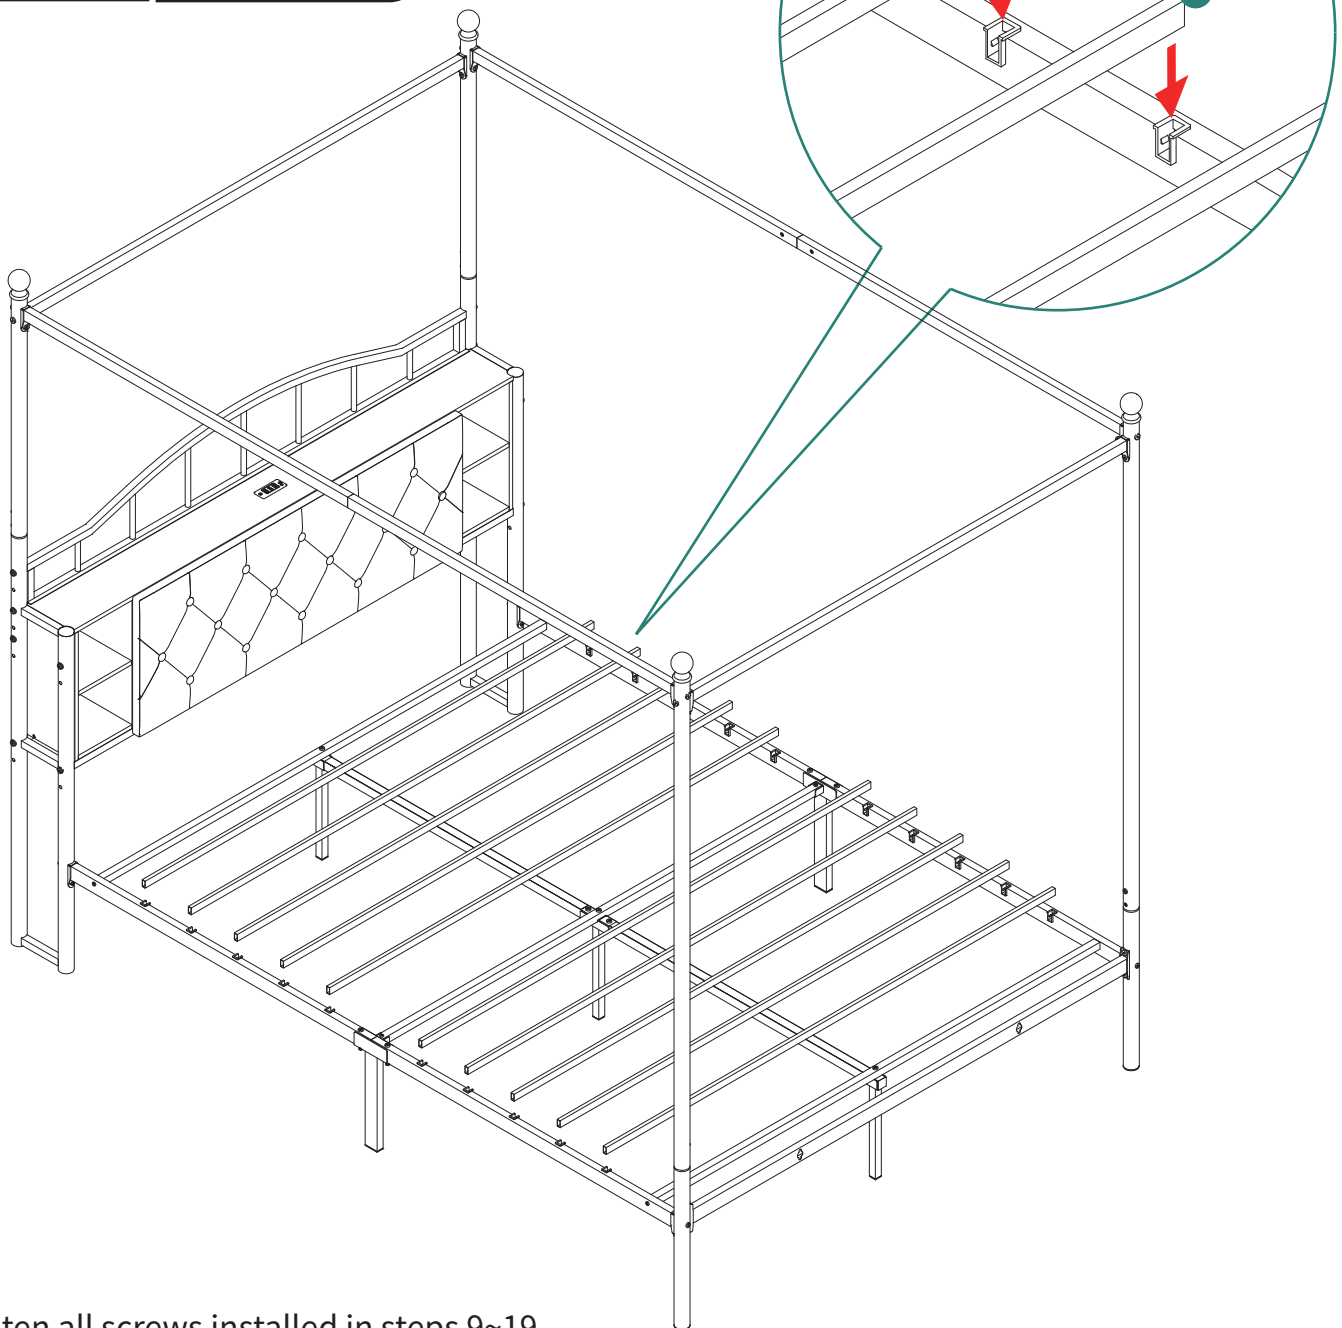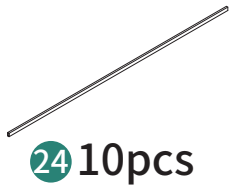

Tighten all screws installed in steps 9~19.

Ziehen Sie alle Schrauben an, die in den Schritten 9~19.


Serrez toutes les vis installées dans les étapes 9~19.

Stringere tutte le viti installate nei passaggi 9~19.


Apriete todos los tornillos instalados en los pasos 9~19.

ASSEMBLY


21

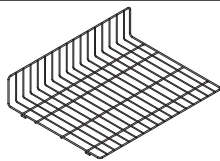


40 2pcs




41 2pcs






42 2pcs



43 8pcs

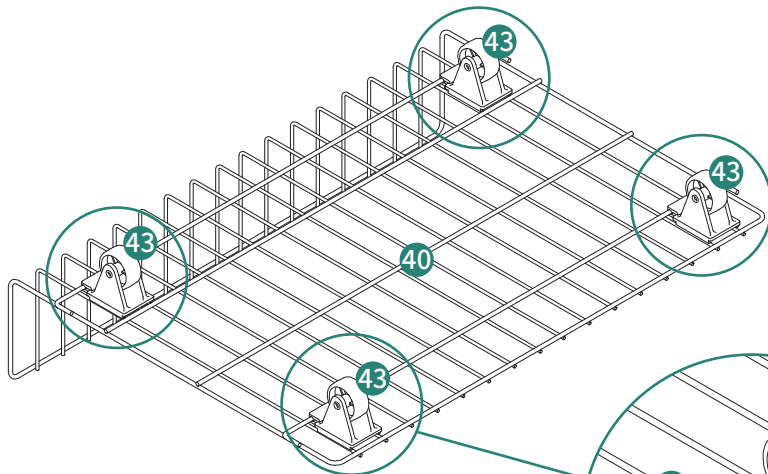


x2

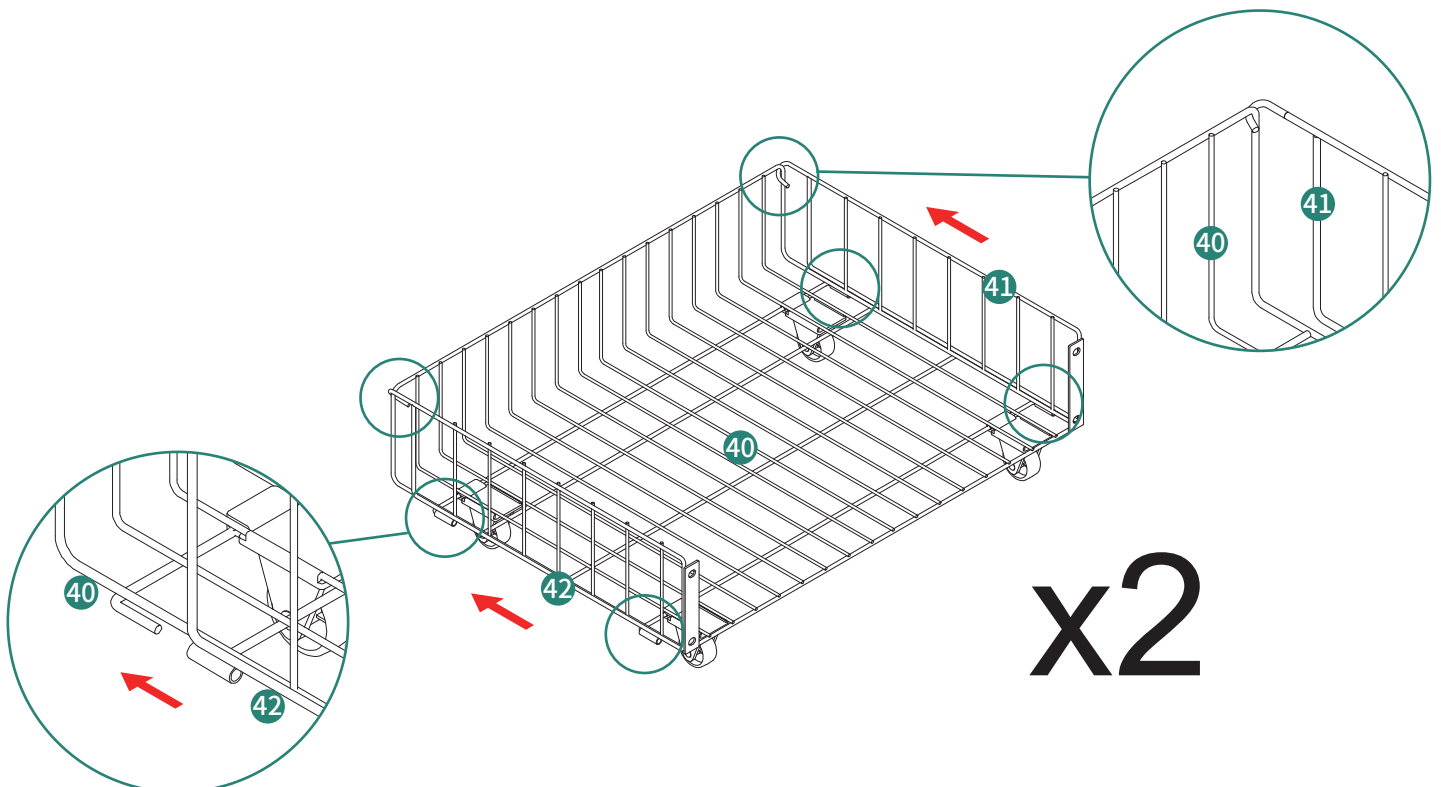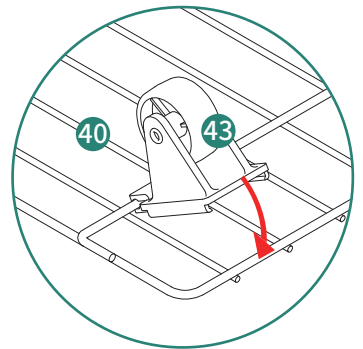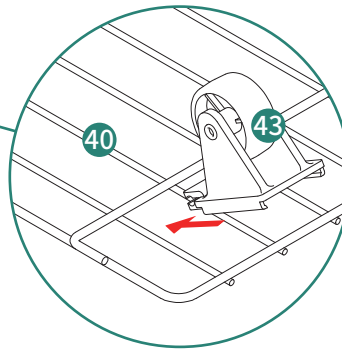

x2

ASSEMBLY

22

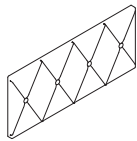


39 2pcs

1/4 X 11mm




A x10

1/4 X 16mm




J x2




1/4




K x2

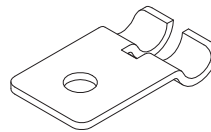

L x2

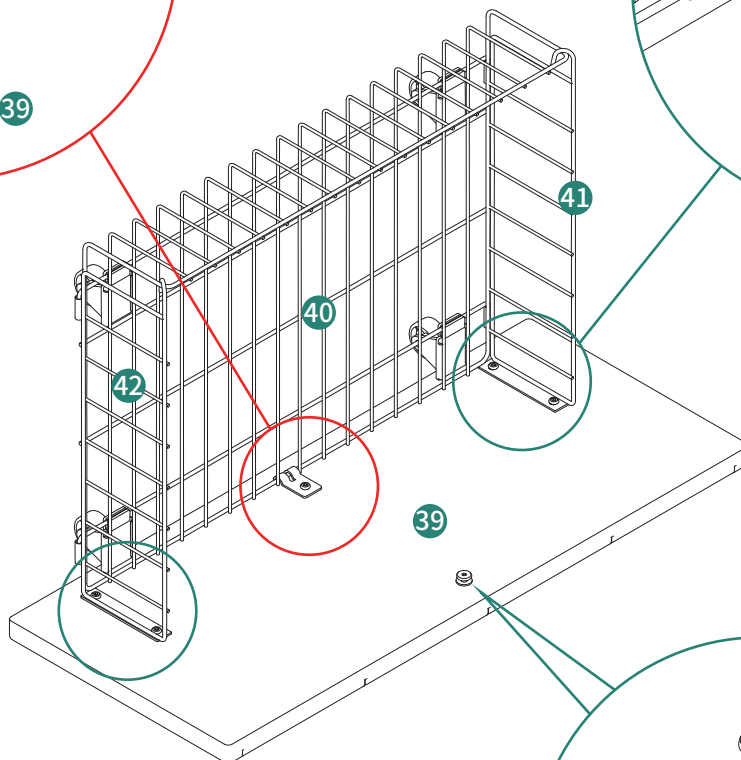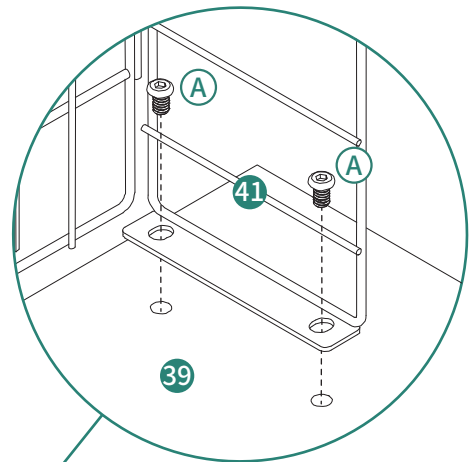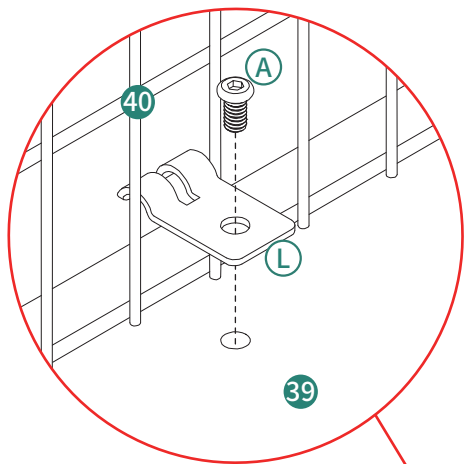

x2

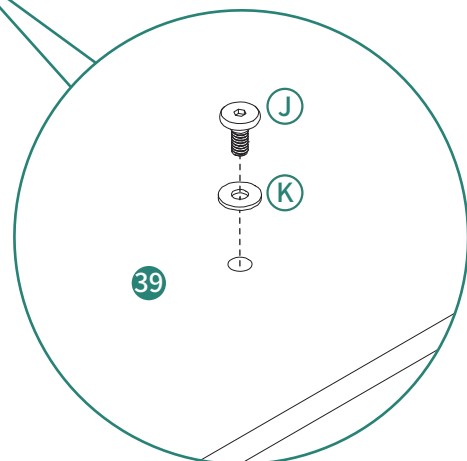


ASSEMBLY


23




14 1pc




45 1pc

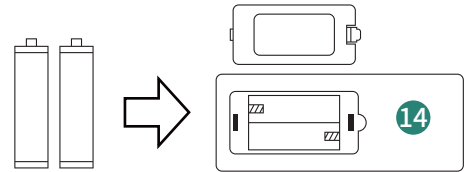

Before using the remote control,
please put 2 AAA batteries in
remotd control(not provided).

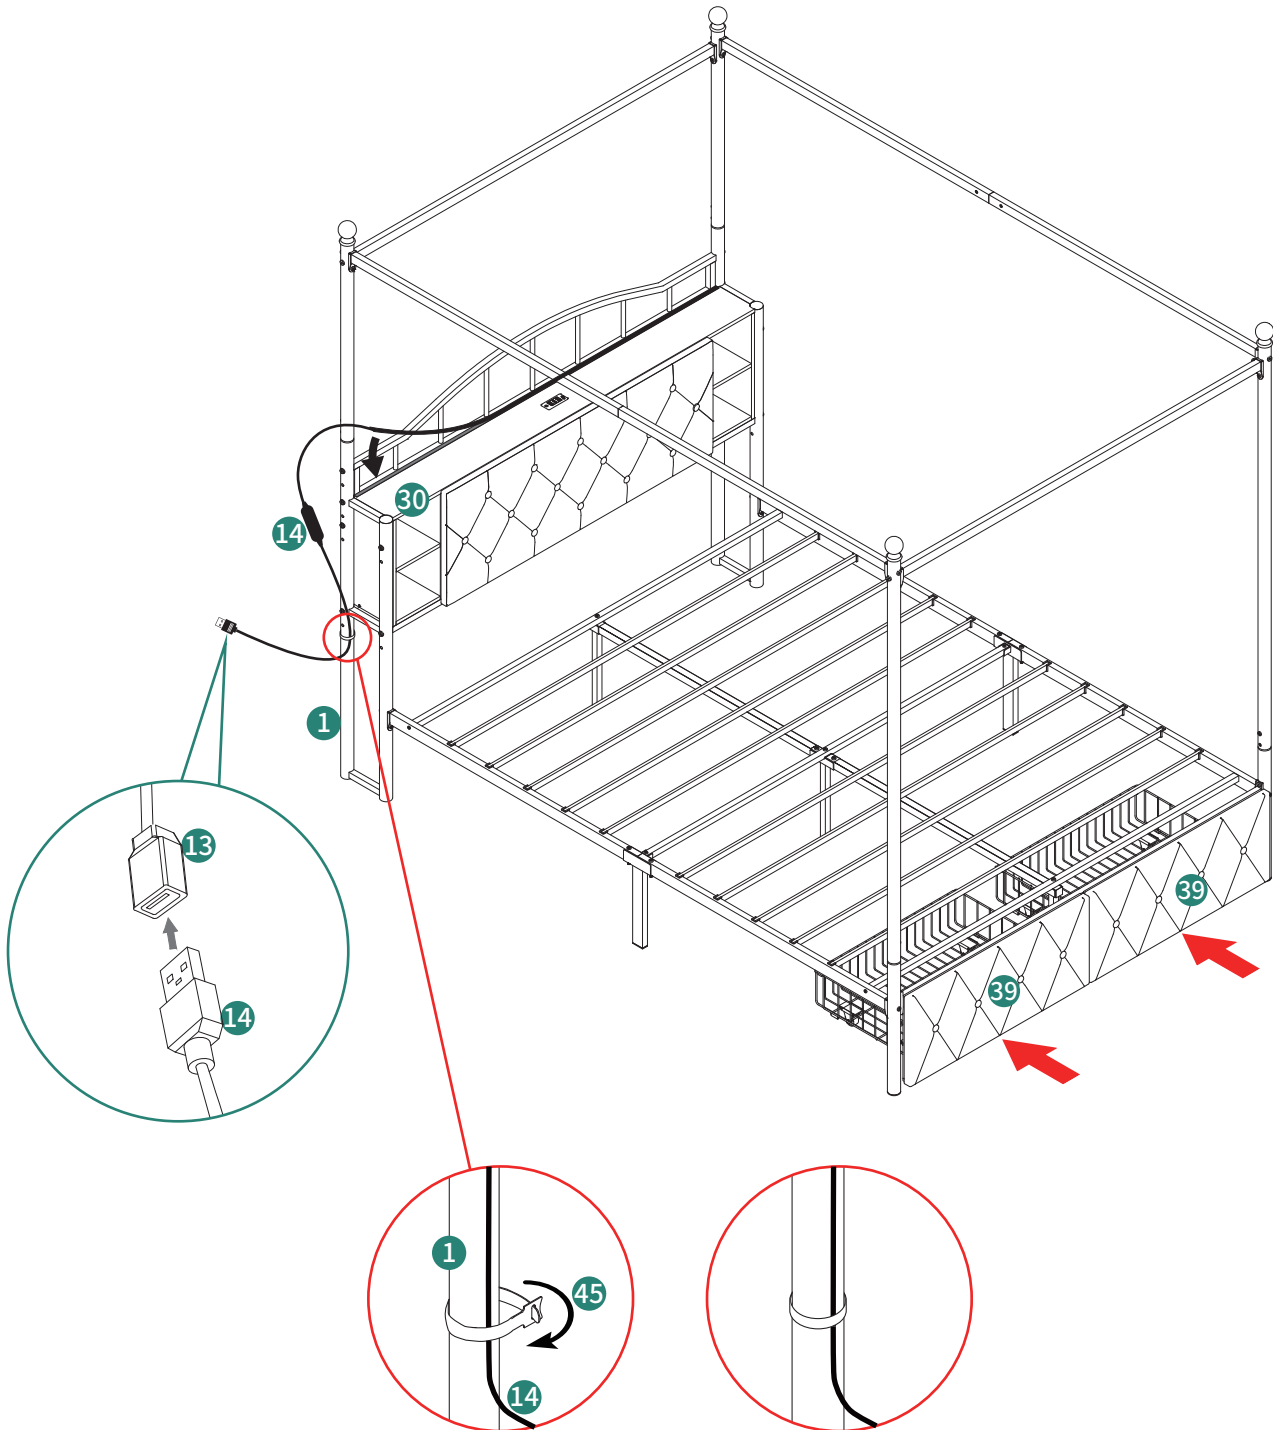


TYPE-B INSTALLTION

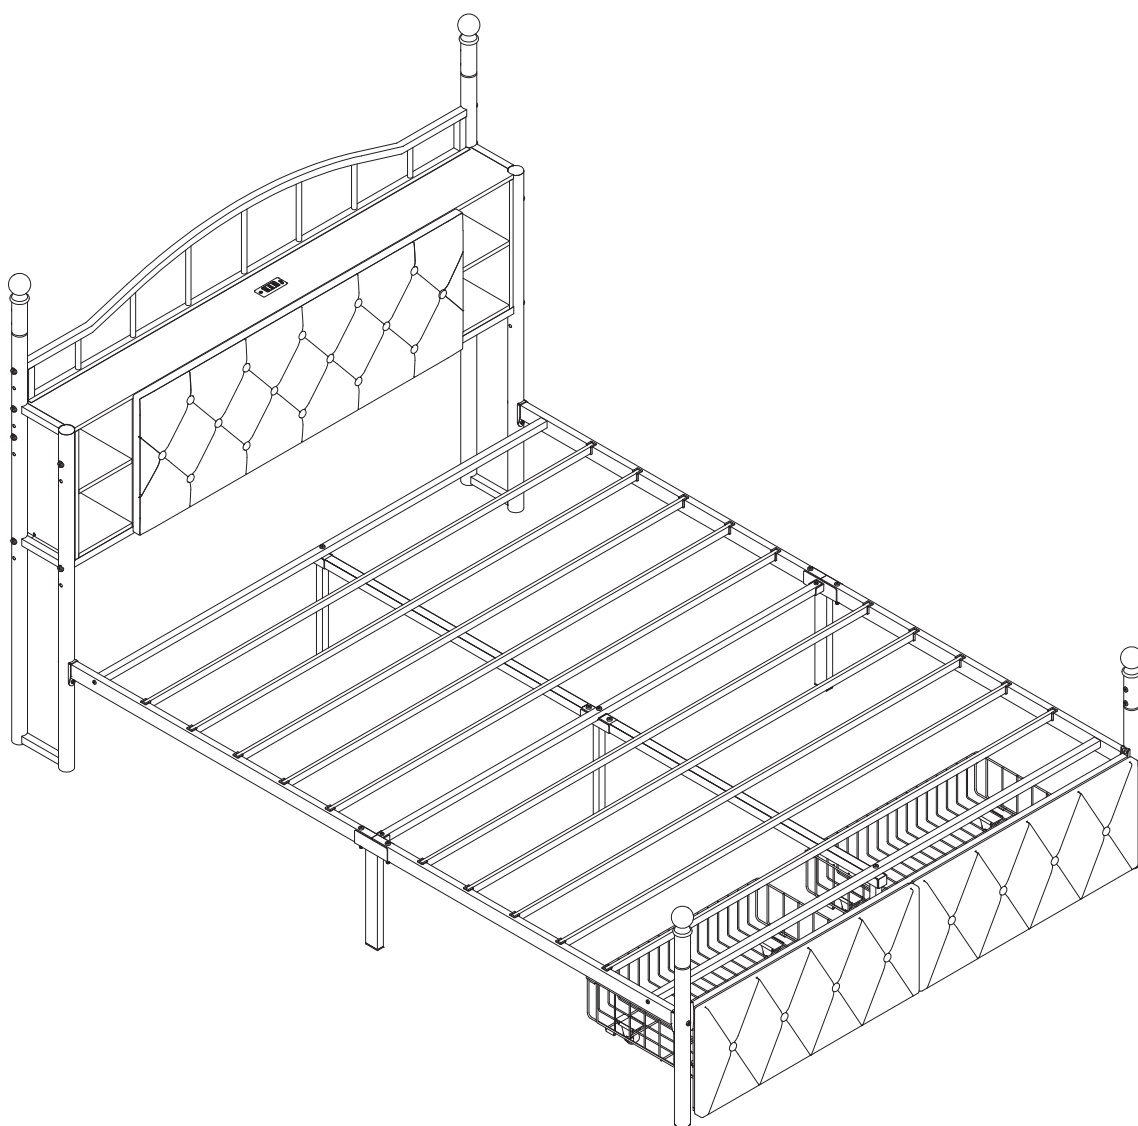

ASSEMBLY

24





27 4pcs




HEAVY! You may need assistance with this step.

NOTICE: If you do not need the canopy,
(1) Remove posts (2, 3, 4, 5) and part (26).

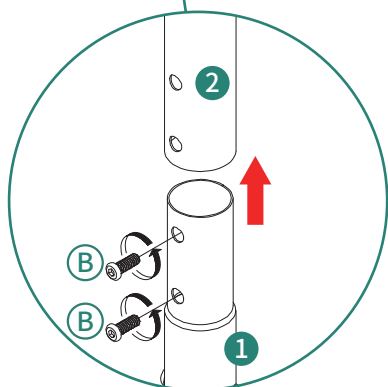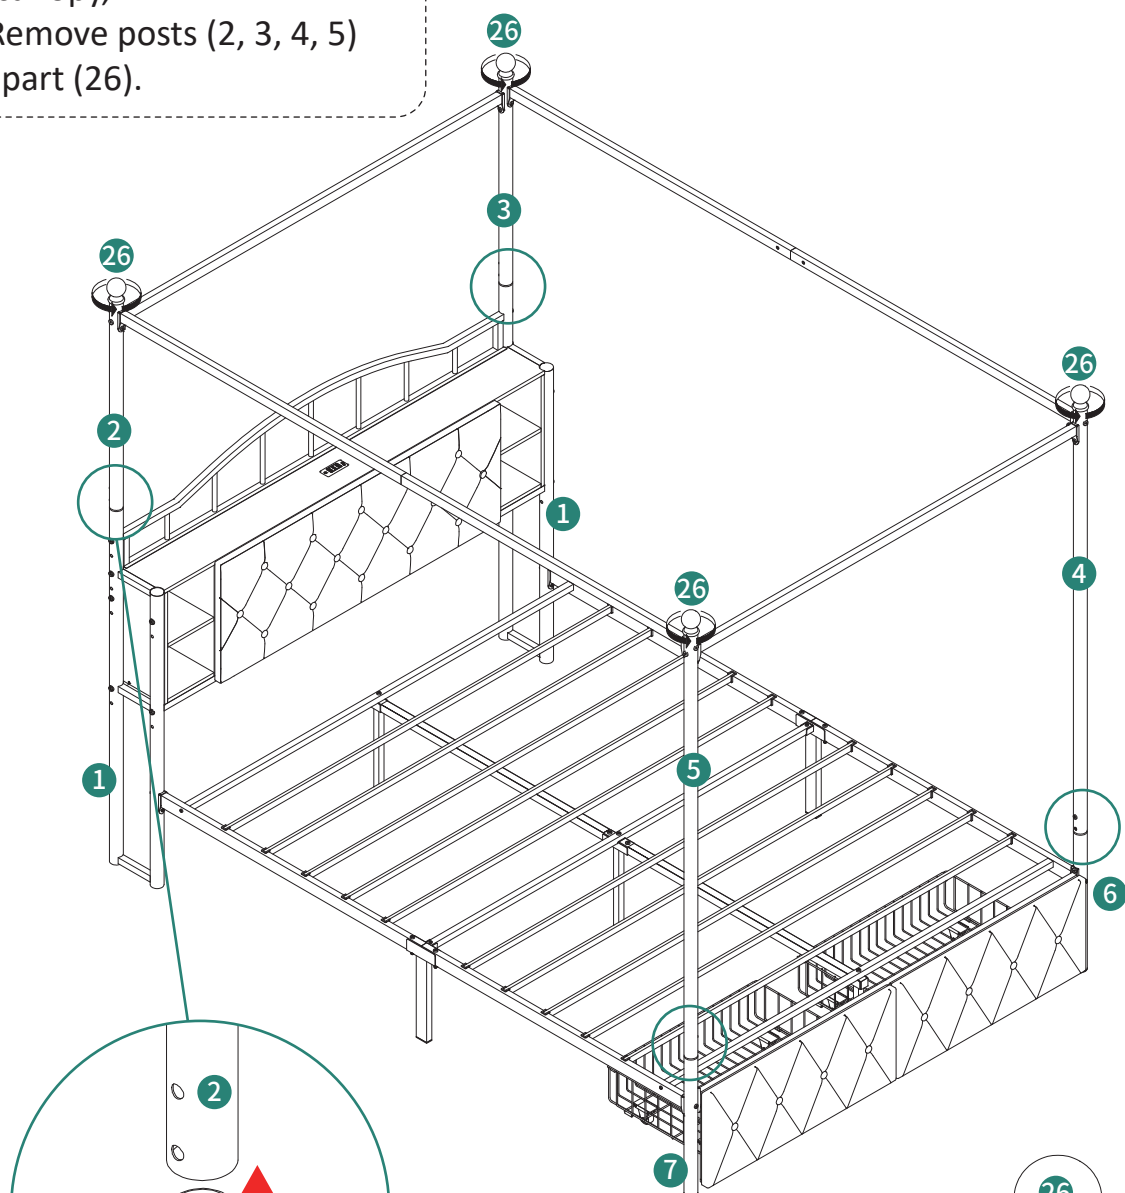

Loosen the bolts


(2) Install the removed part (26) onto part (27).

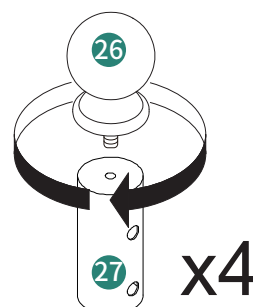

ASSEMBLY

25

Use the bolts (B) removed in the previous step to install part (27).

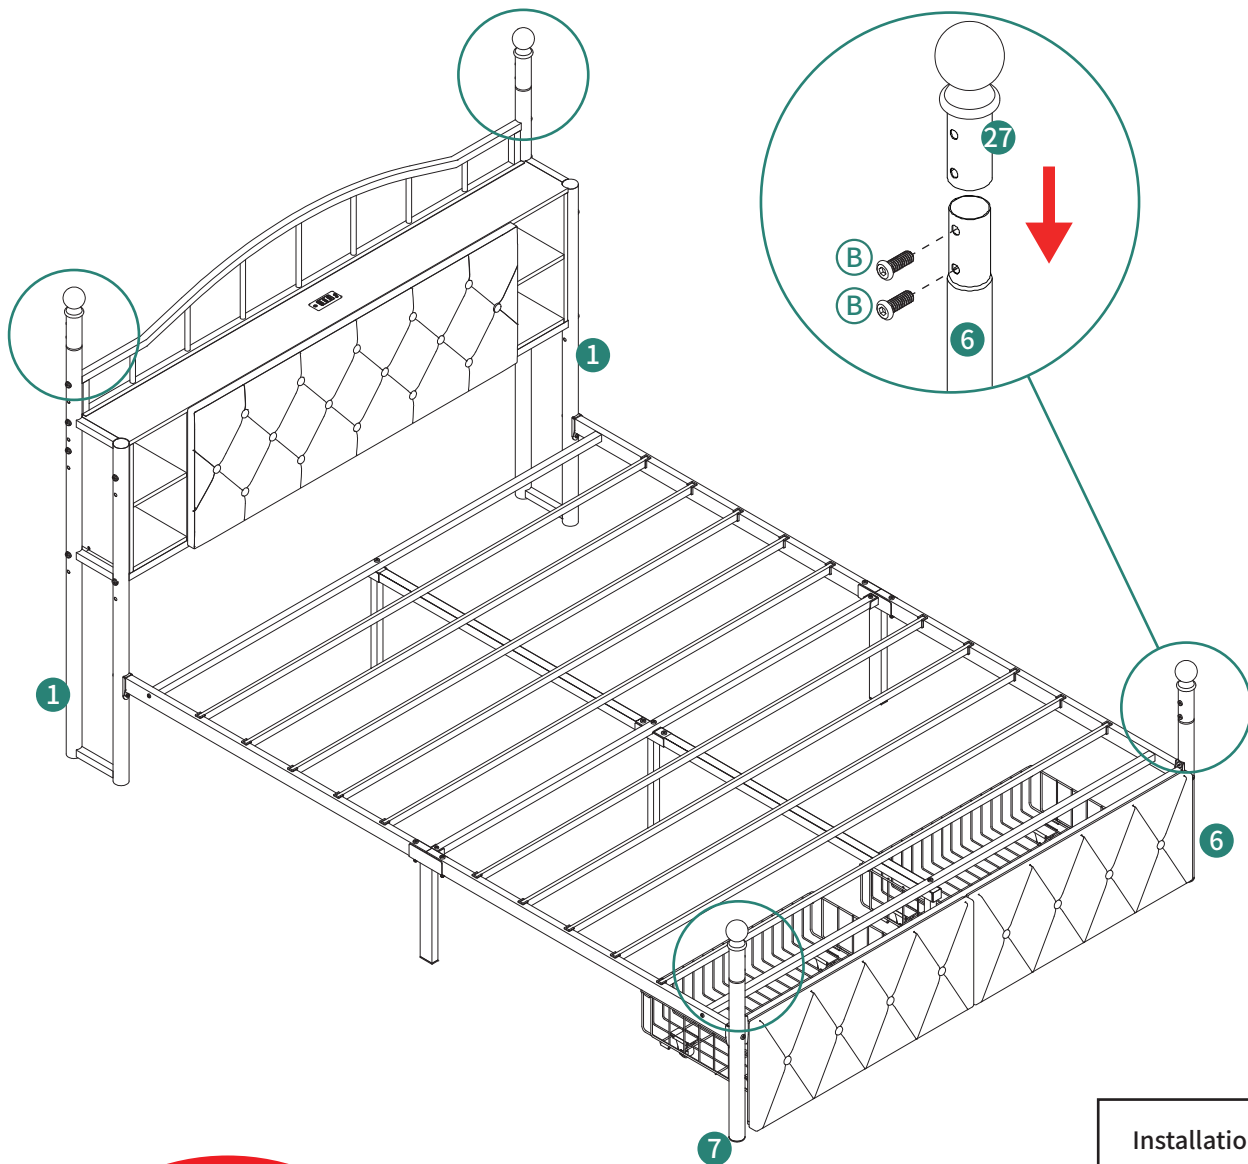

Installation Completed

Installation Abgeschlossen

Installation Complétée

Installazione Completata

Instalación Completada