

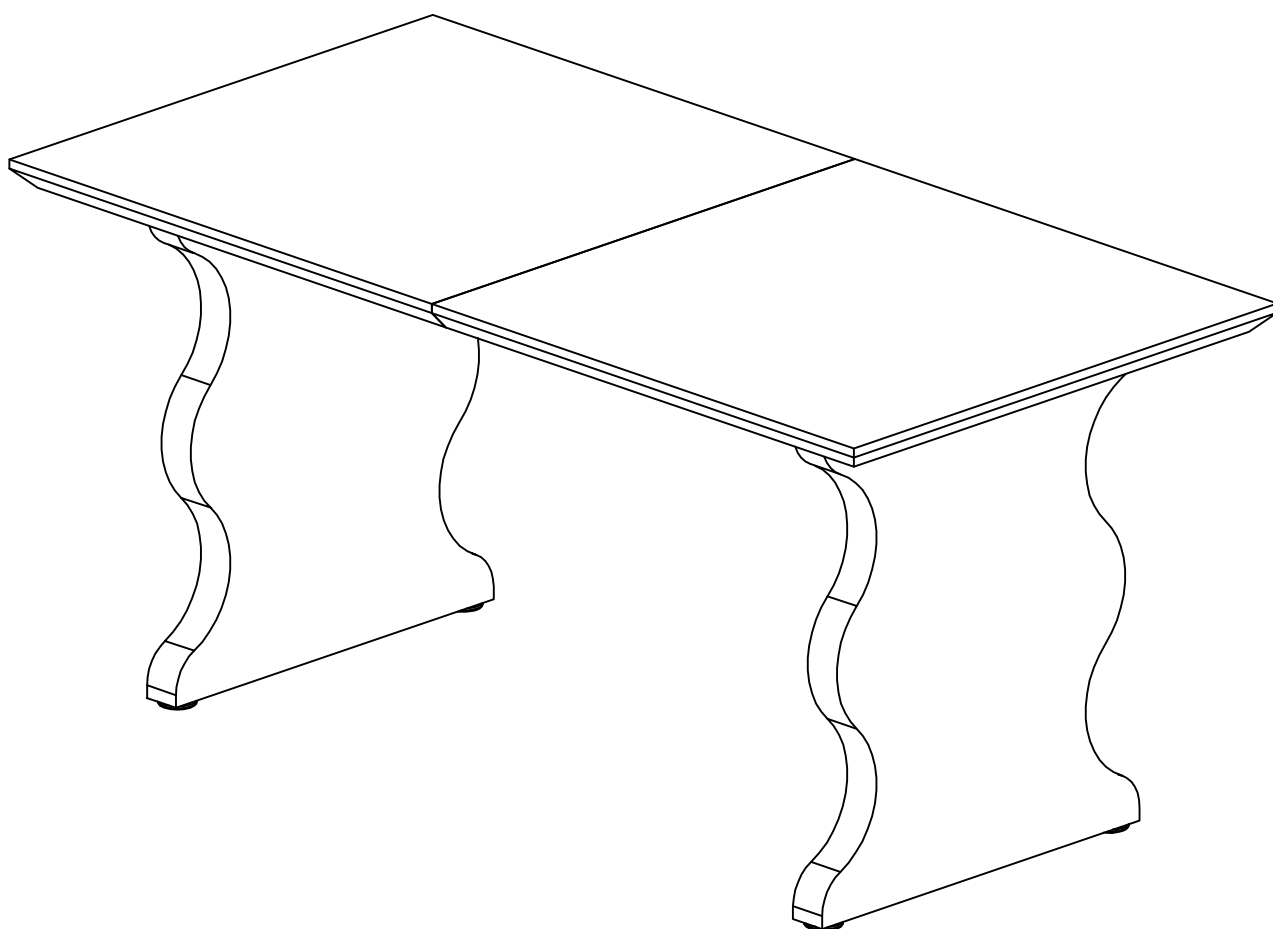
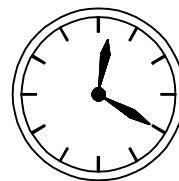
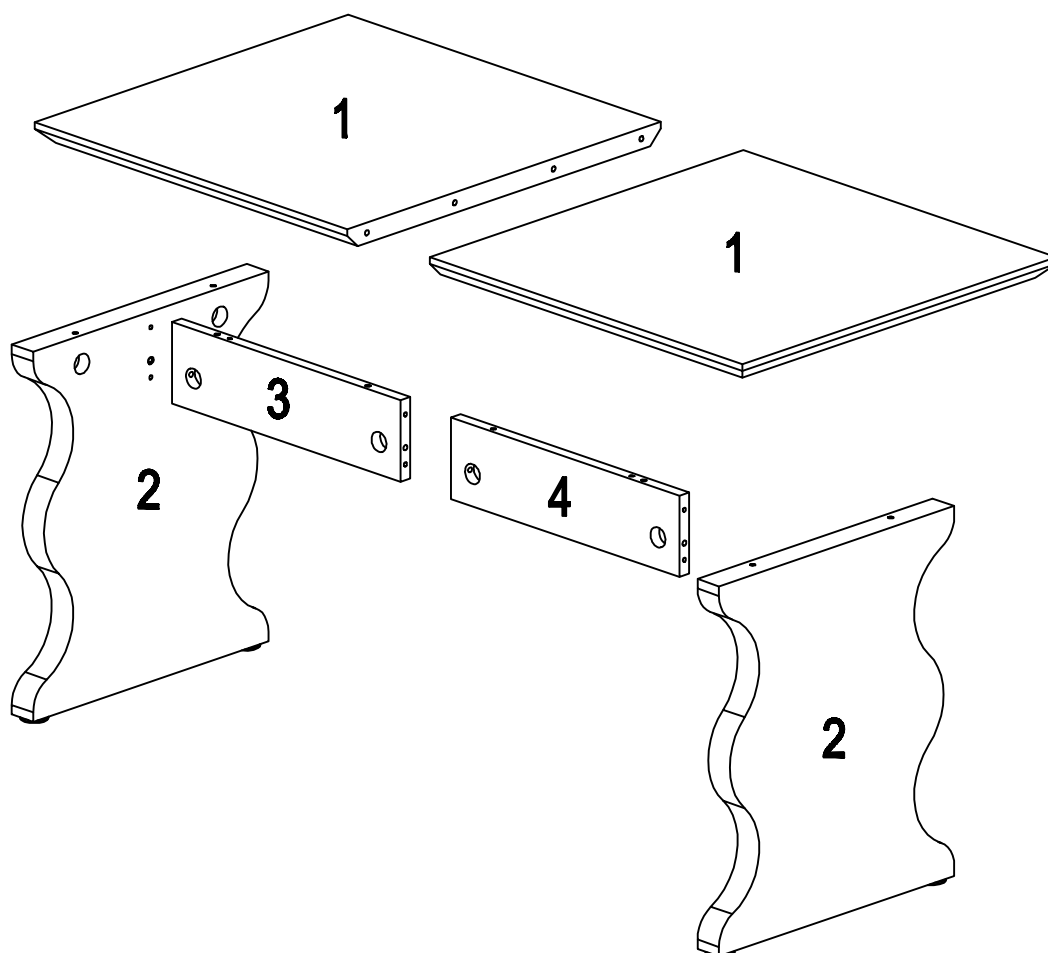



Installation & Assembly





+Spare X 1	+Spare X 1	+Spare X 1			
A x5	B x5	C x9	D x1	E x6	F x2
					
M8*160mm	M6*12mm	Ø7.8*30mm	M8*110mm	M8*70mm	60*20*2mm
+Spare X 1	+Spare X 1	+Spare X 1	+Spare X 1		
G x9	H x9	I x9	J x5	K x2	L x1
					
M8	Ø16mm		Ø9.8*30mm		5mm
	+Spare X 1				
M x1	N x9				
					
4mm	Ø50mm				

1

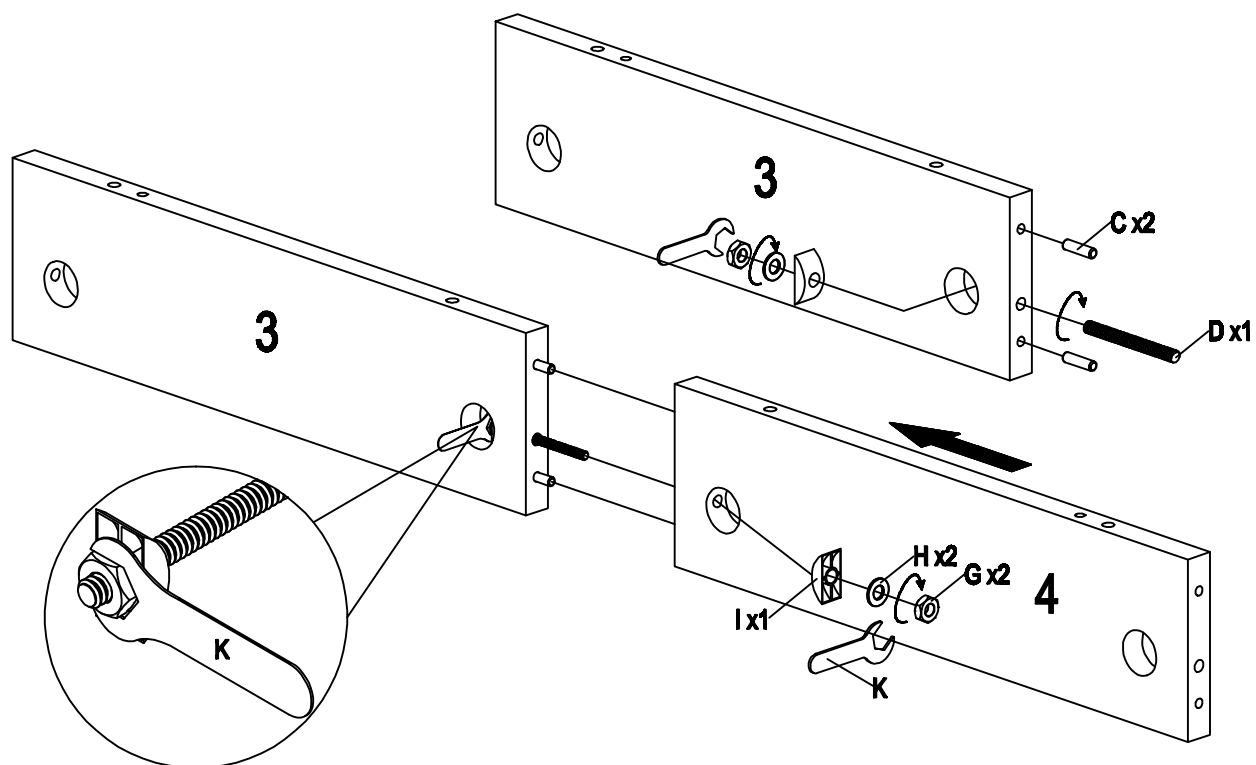

C	x2
	
Ø7.8*30mm	

D	x1
	
M8*110mm	


G	x2
	
M8	

H	x2
	
Ø16mm	

I	x2
	

K	x2
	


2

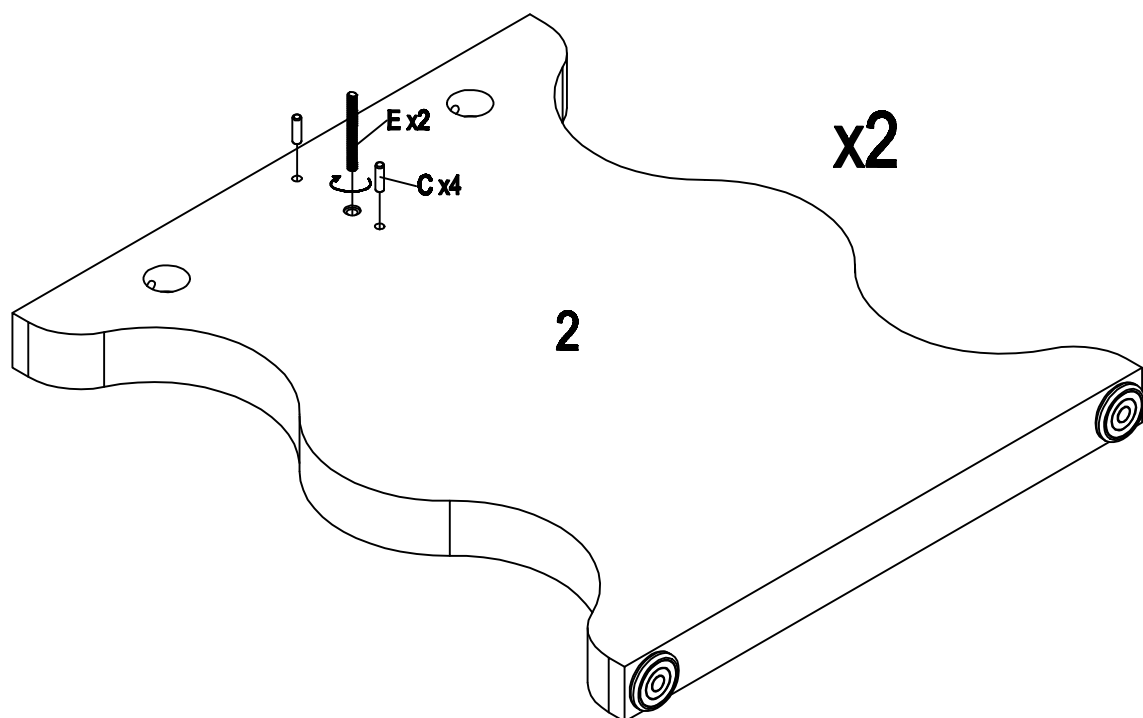

C	x4
	
Ø7.8*30mm	


E	x2
	
M8*70mm	

3

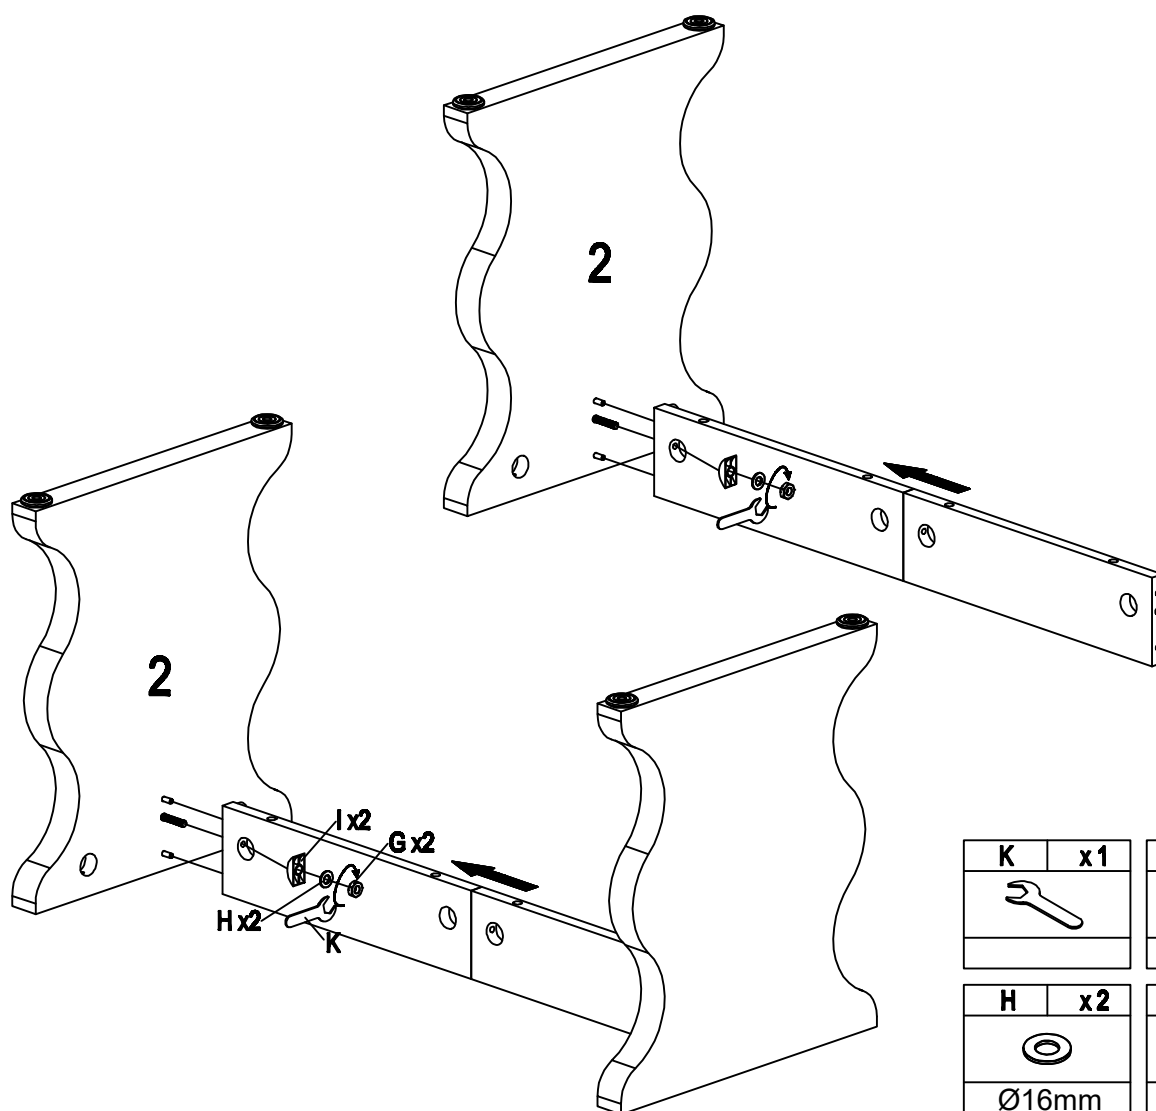


K	x1	I	x2
			
H	x2	G	x2
			
Ø16mm		M8	

4

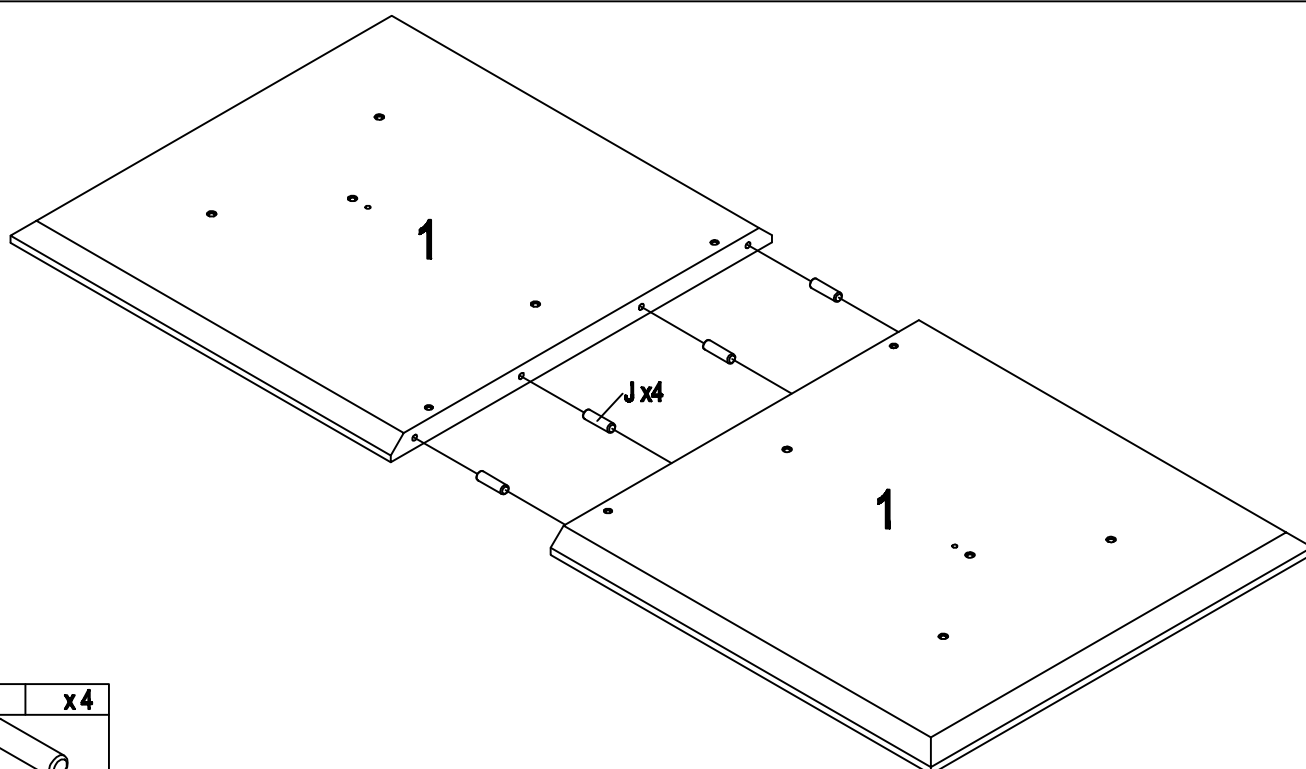

J	x4
	
Ø9.8*30mm	

5

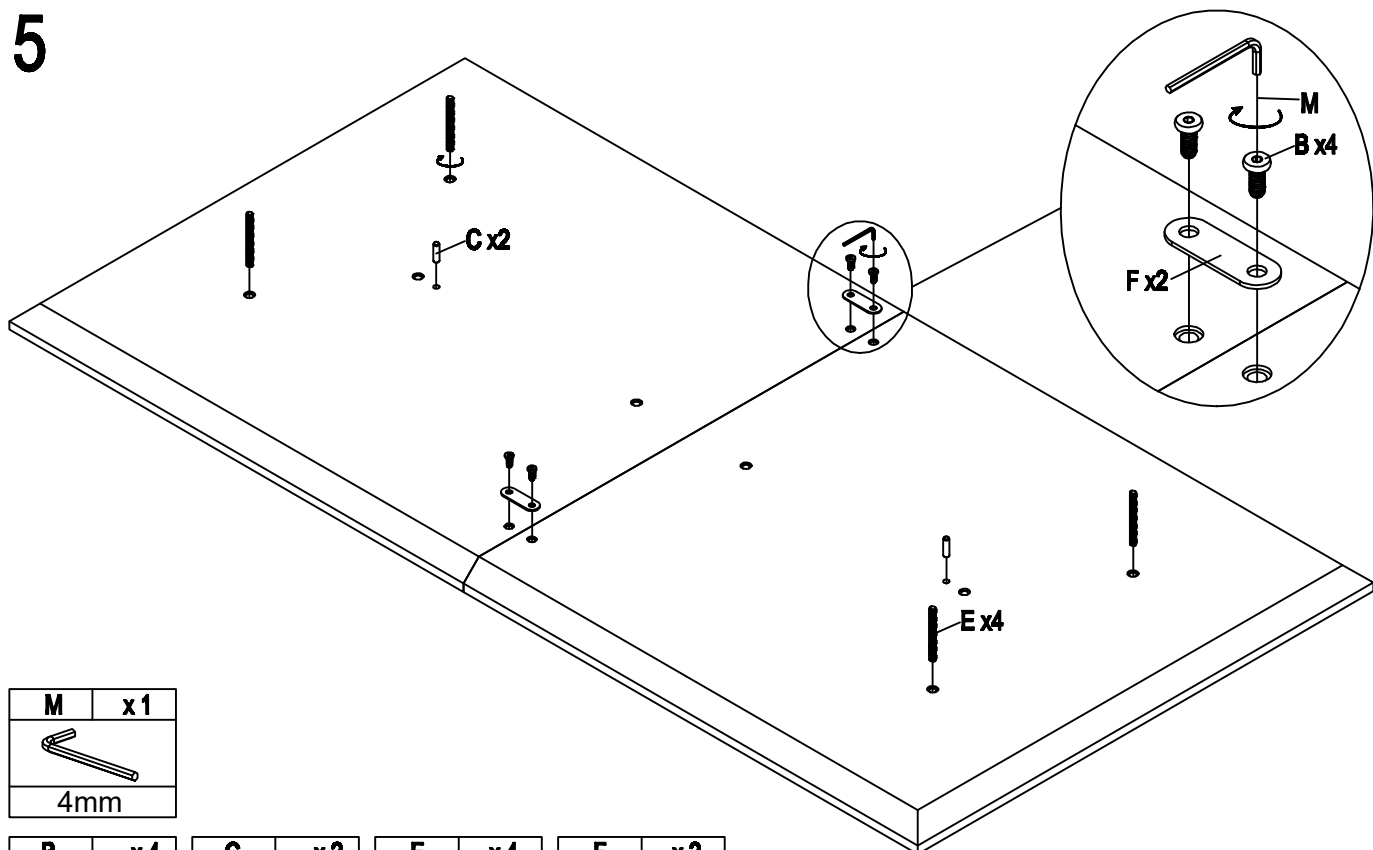

M	x1
4mm	


B	x4
M6*12mm	

C	x2
Ø7.8*30mm	

E	x4
M8*70mm	

F	x2
60*20*2mm	

6

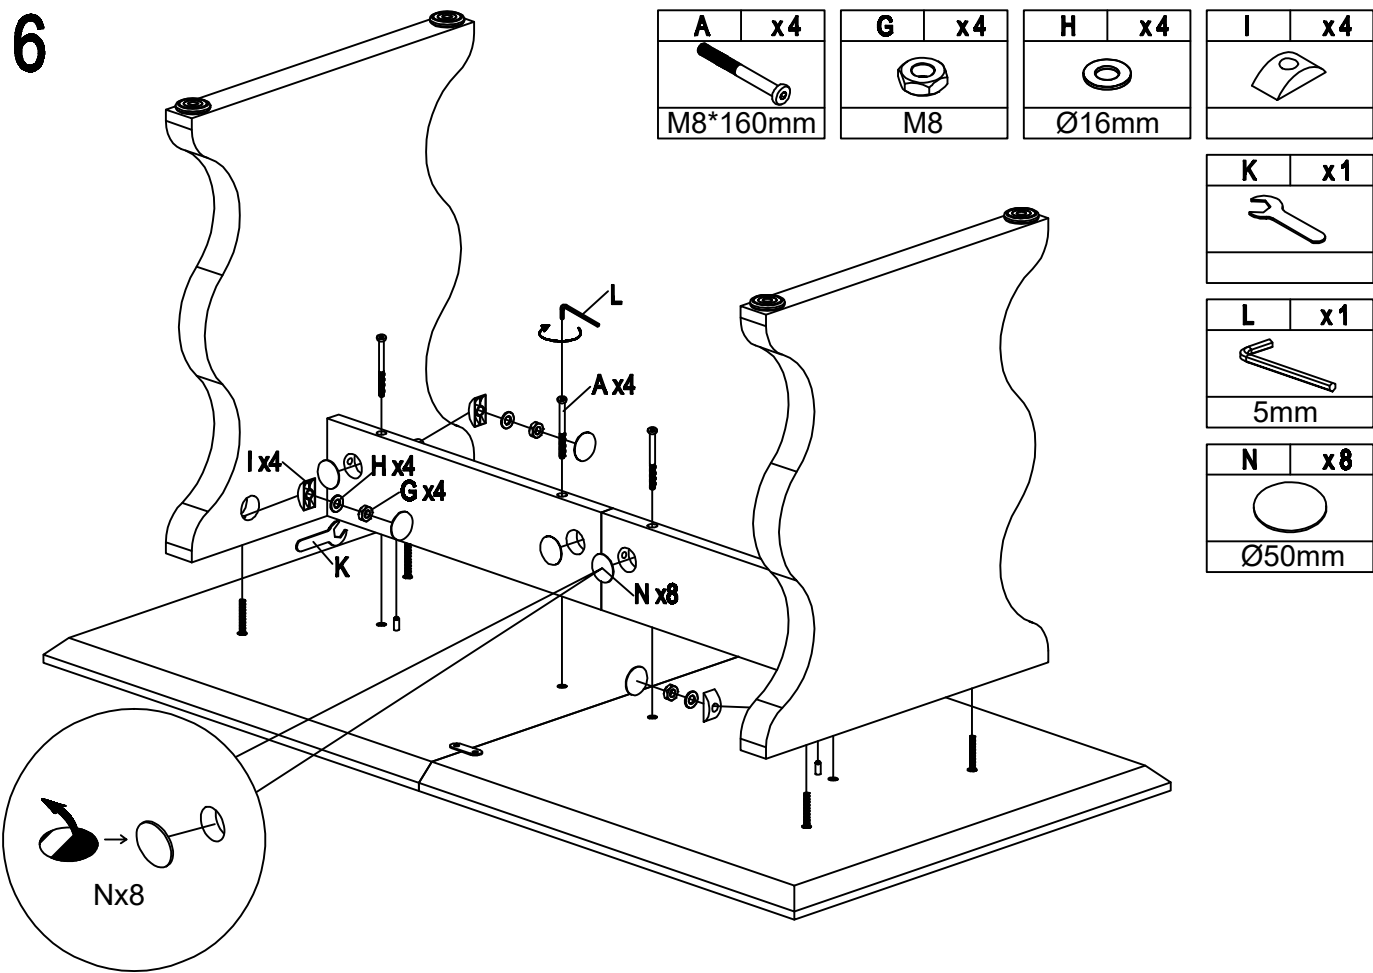

A	x4
M8*160mm	

G	x4
M8	


H	x4
Ø16mm	

I	x4

K	x1

L	x1
5mm	

N	x8
Ø50mm	

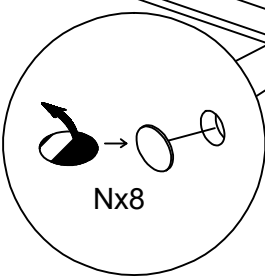

7

