

Assembly Instruction

01 : Right Side Panel

02 : Left Side Panel




03 : Front Panel

04 : Back Panel


05 : Support Leg

06 : Bottom Panel





07 : Cushion

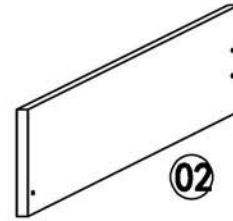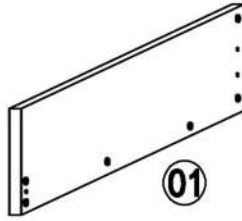


03




04

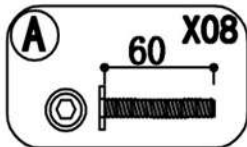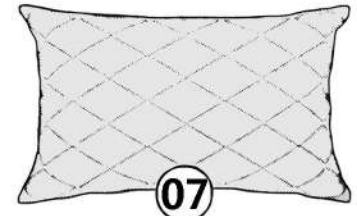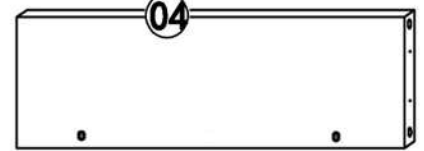


Longer Bolt

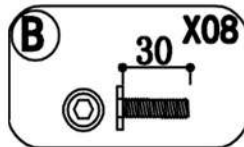


Short Bolt

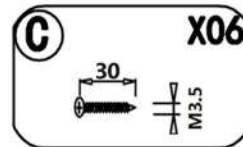


Screw

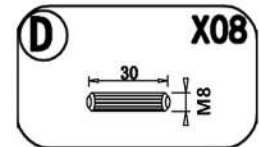


Wooden Dowel

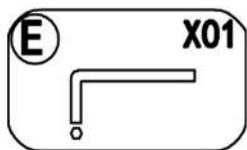

Allen Key

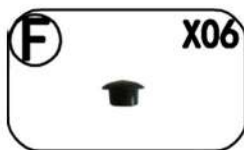


Screw Stopper

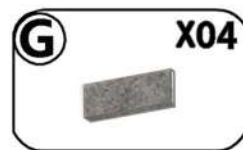

Foot Pad

Step 1

Insert all the wooden dowels into the front and back panels .

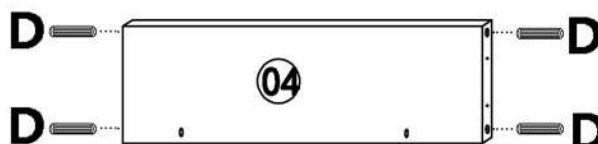


05* 4




Attach the foot pads to the support legs .

Step 2

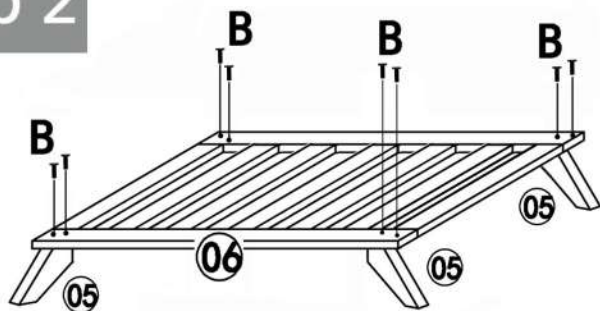

Secure the support legs to the bottom panel , using shorter bolts .
(Allen key needed)


Step 3

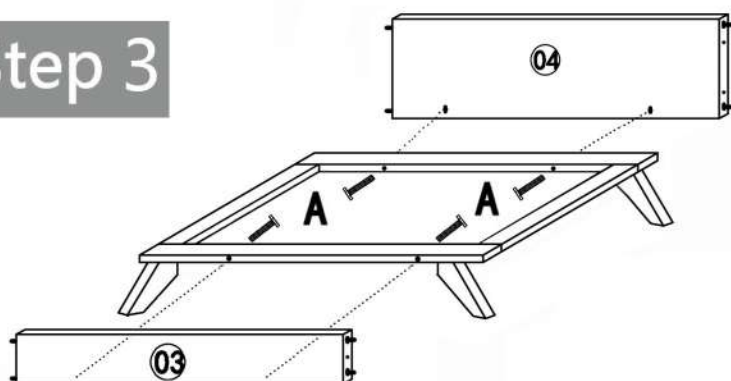

Secure the front and back panels to the bottom base , using longer bolts .
(Allen key needed)

Step 4


Secure the 2 side panels to the bottom base , using longer bolts .
(Allen key needed)

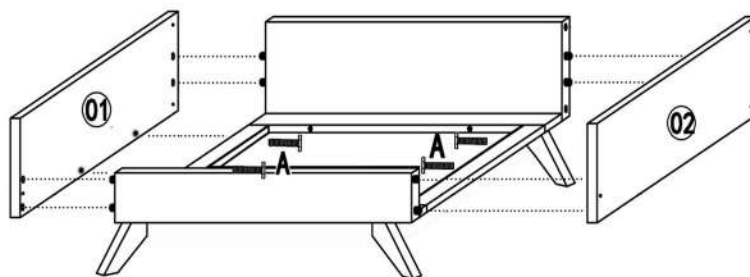

Step 5

Secure the 4 panels with screws using screwdriver.
(not included)

Insert the stoppers to cover the screw holes .

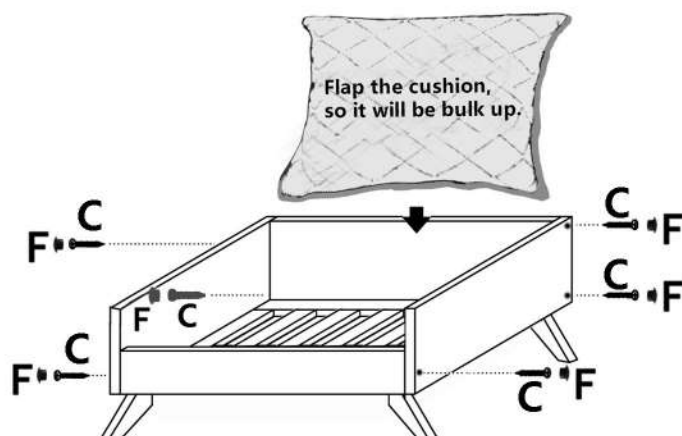

Care Instructions:

- Dust often using a clean, soft, dry, and lint-free cloth. Blot spills immediately and wipe with a clean, damp cloth.
 - We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.
 - Hardware may loosen over time. Periodically check to make sure all connections are tight, re-tighten if necessary.
-
- Please note that product specifications and design may change without prior notice for the purpose of quality improvement.
 - Product may experience different coloration of the wood grain as frames are made of wood materials.
 - If you have received your ordered item with any defective parts or if you find that some parts are missing, please do contact us immediately. Please include your order number and shipping address while contacting, to expedite the process.

Made in China