
















ASSEMBLY INSTRUCTION

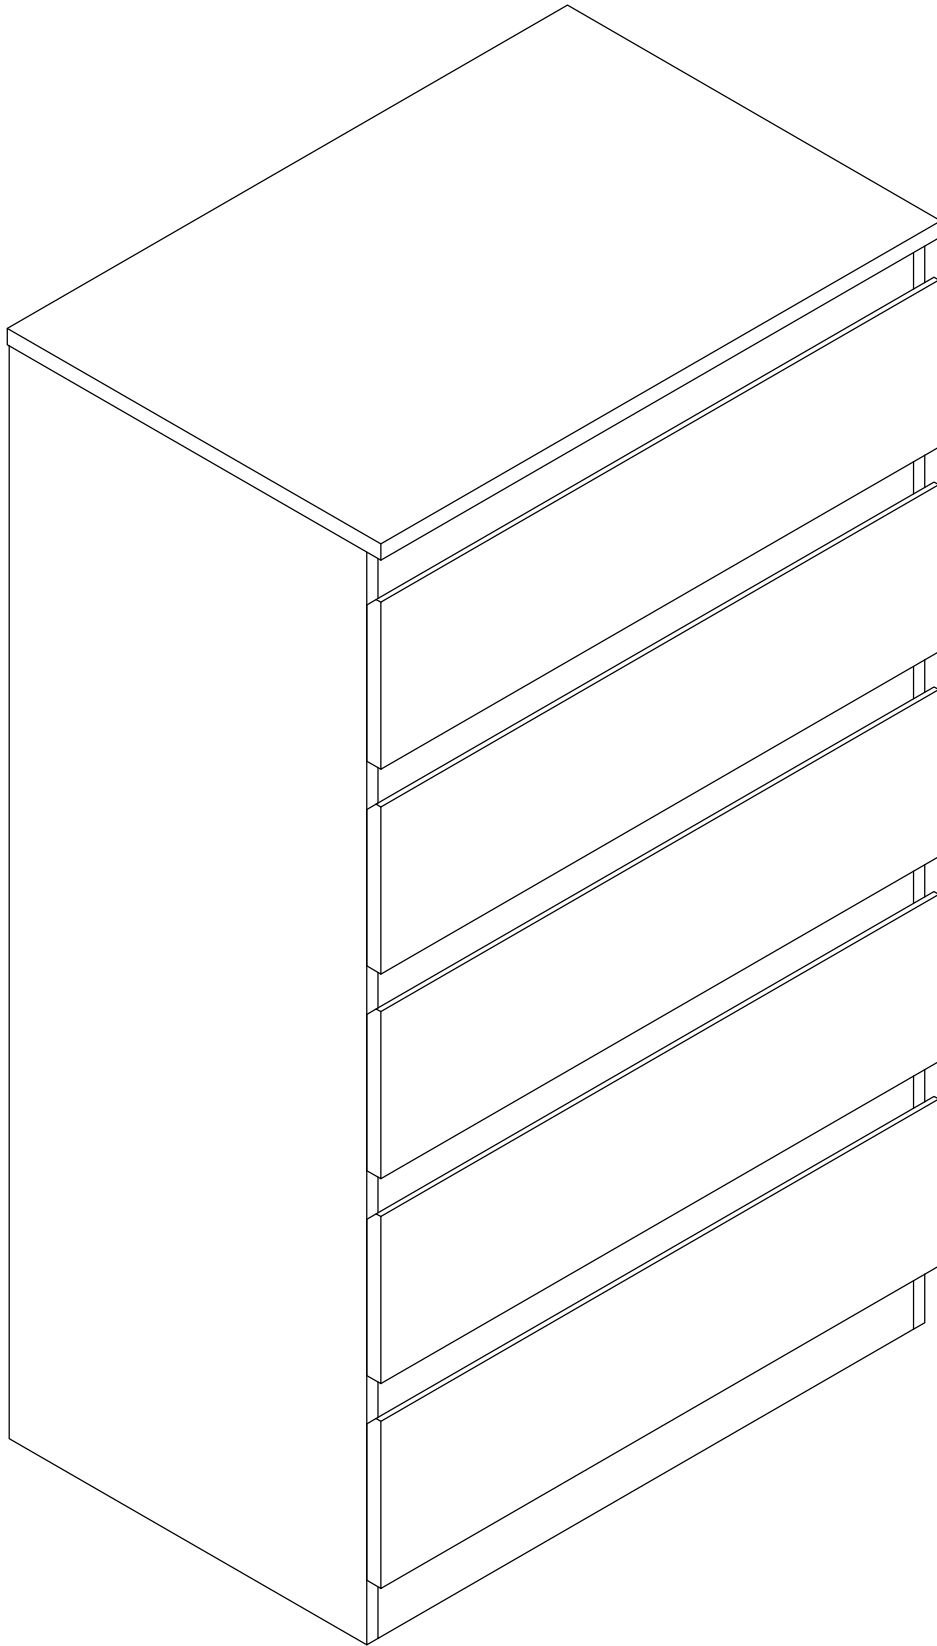

ASSEMBLY INSTRUCTION






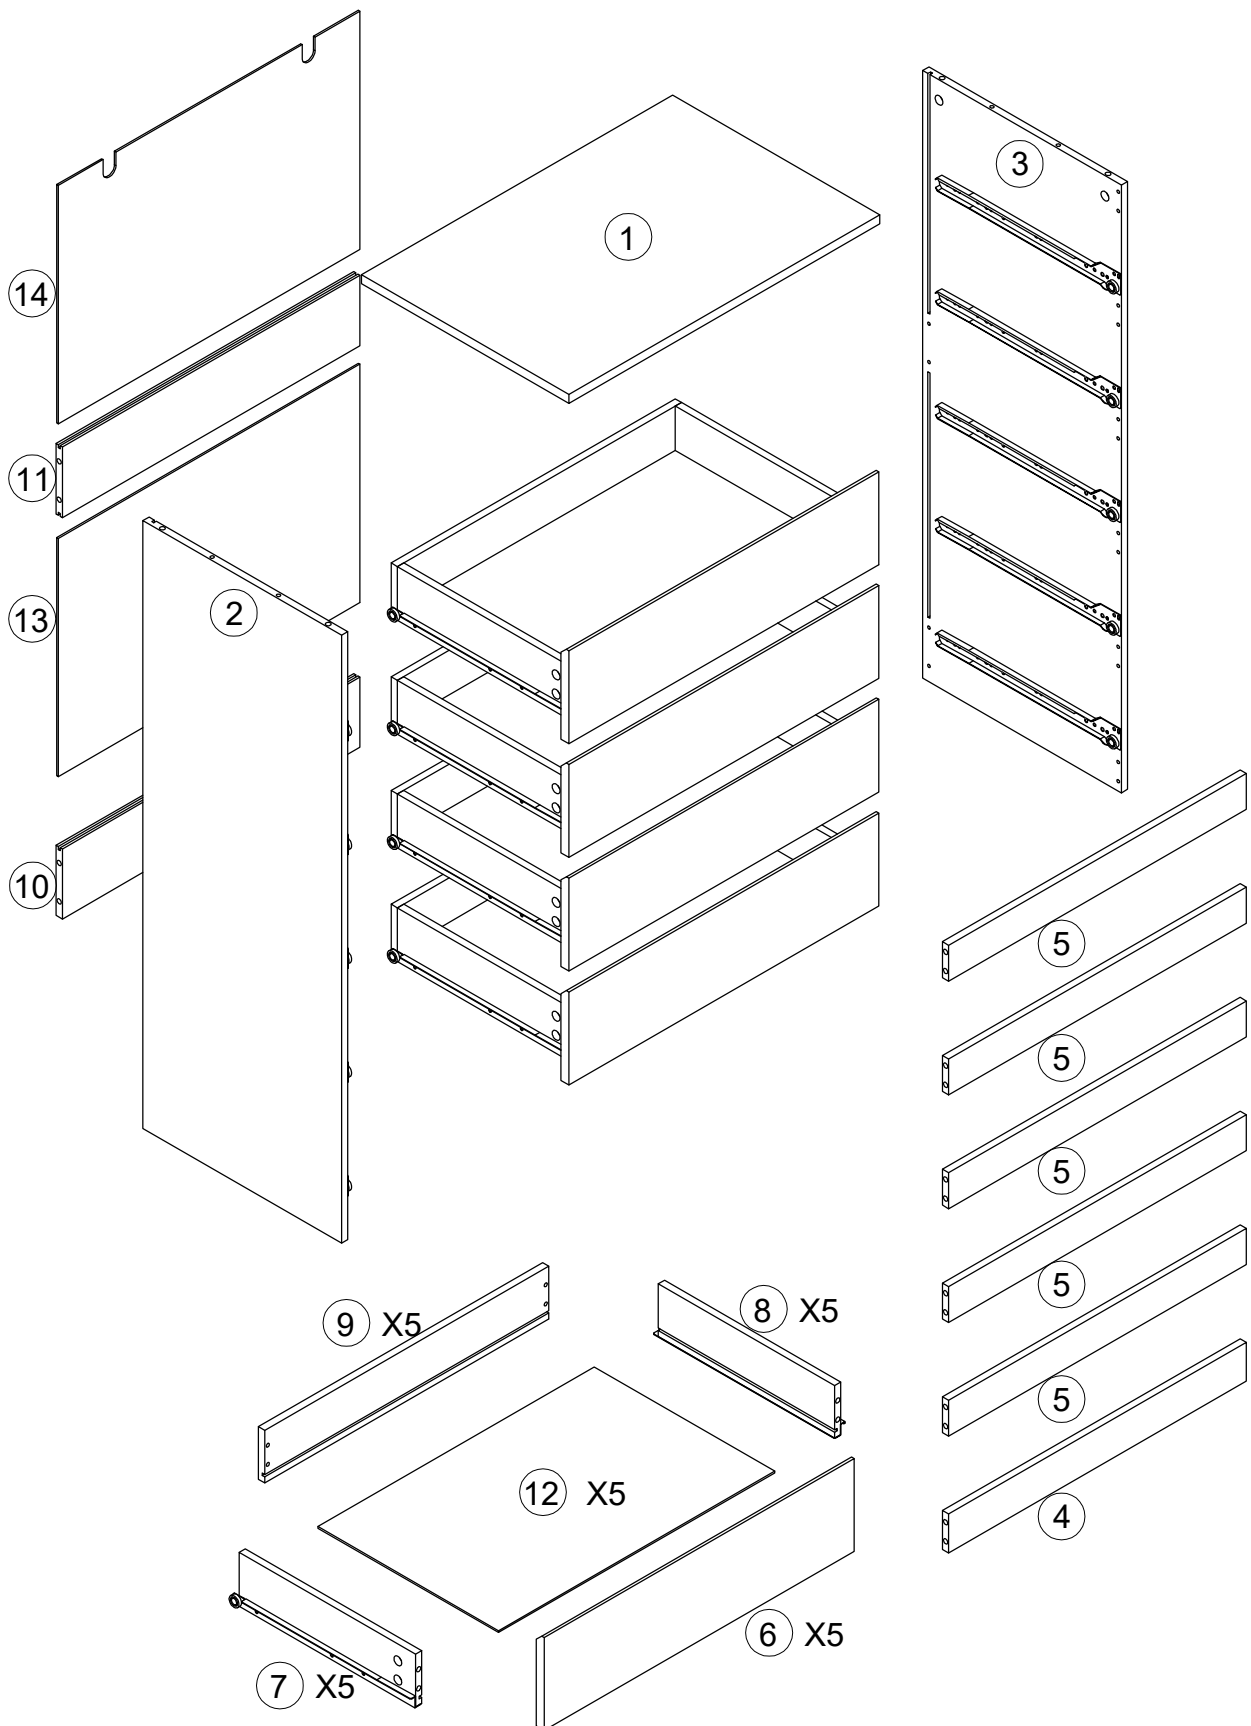


ASSEMBLY INSTRUCTION
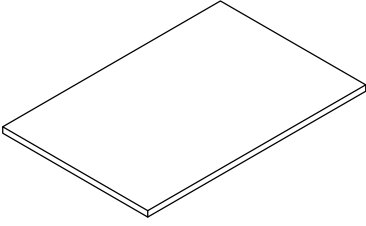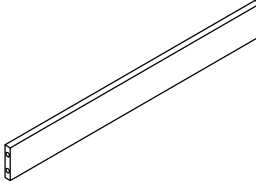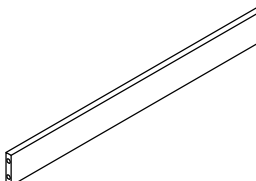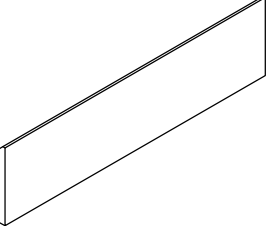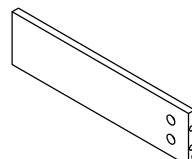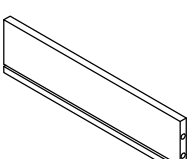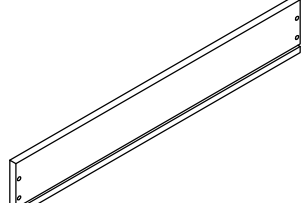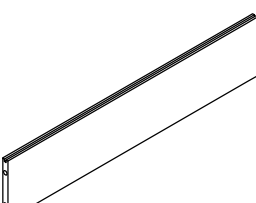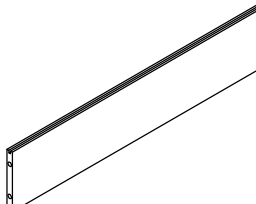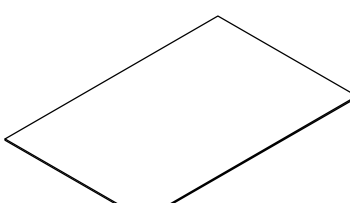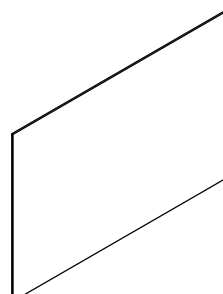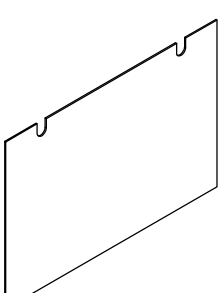
<p>①</p>  <p>X1</p>	<p>②</p>  <p>X1</p>	<p>③</p>  <p>X1</p>
<p>④</p>  <p>X1</p>	<p>⑤</p>  <p>X5</p>	<p>⑥</p>  <p>X5</p>
<p>⑦</p>  <p>X5</p>	<p>⑧</p>  <p>X5</p>	<p>⑨</p>  <p>X5</p>
<p>⑩</p>  <p>X1</p>	<p>⑪</p>  <p>X1</p>	<p>⑫</p>  <p>X5</p>
<p>⑬</p>  <p>X1</p>	<p>⑭</p>  <p>X1</p>	


ASSEMBLY INSTRUCTION

PART LIST

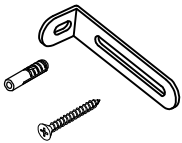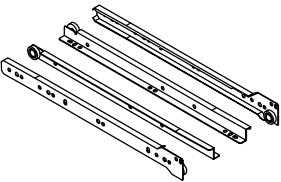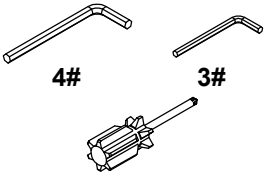A	B	C	D
			
ST6*40mm	9.5	Ø6*30mm	ST5*40mm
56PCS	56PCS	4PCS	20PCS
E	F	G	H
			
ST3.5*12mm		ST3.5*14mm	
40PCS	8PCS	12PCS	2PCS
M			
			
		56	4# 3#
4PCS	5PCS	1PC	1PC

ASSEMBLY INSTRUCTION


STEP 1

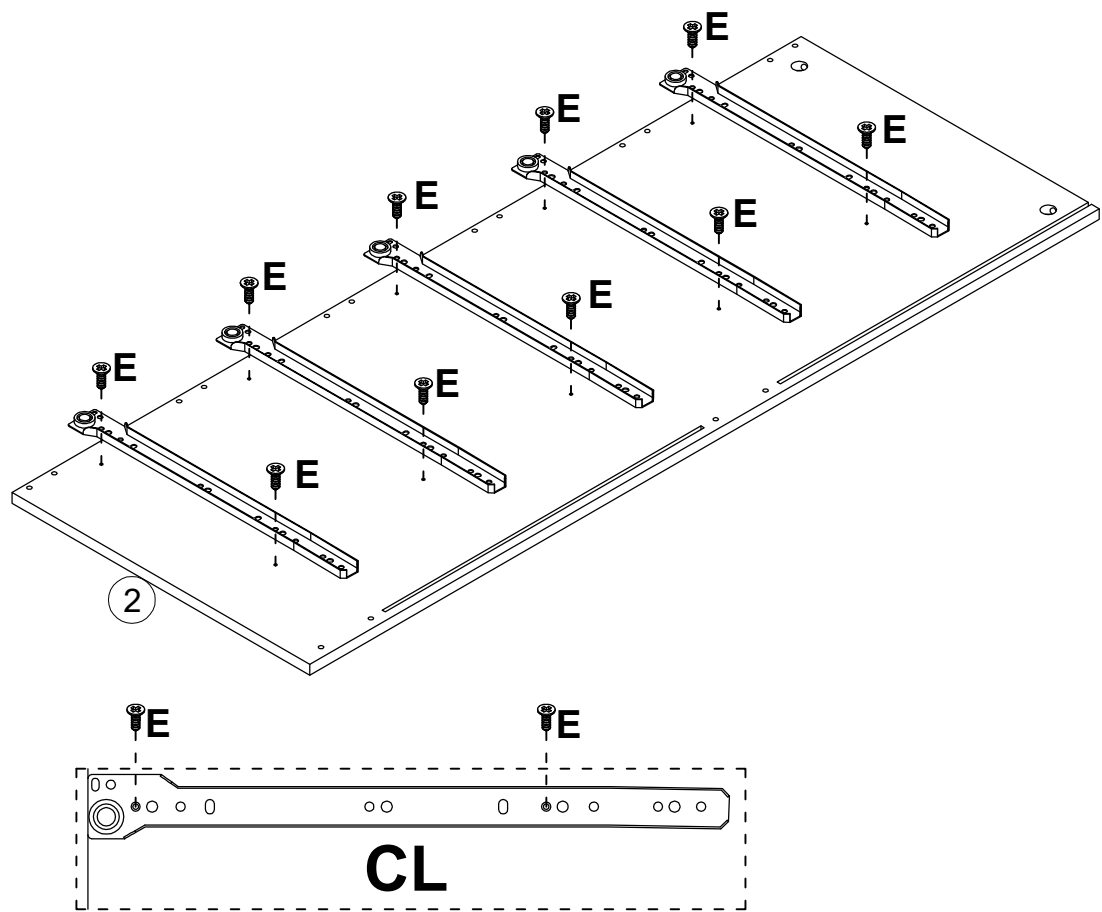

E

ST3.5*12mm
10PCS

STEP 2

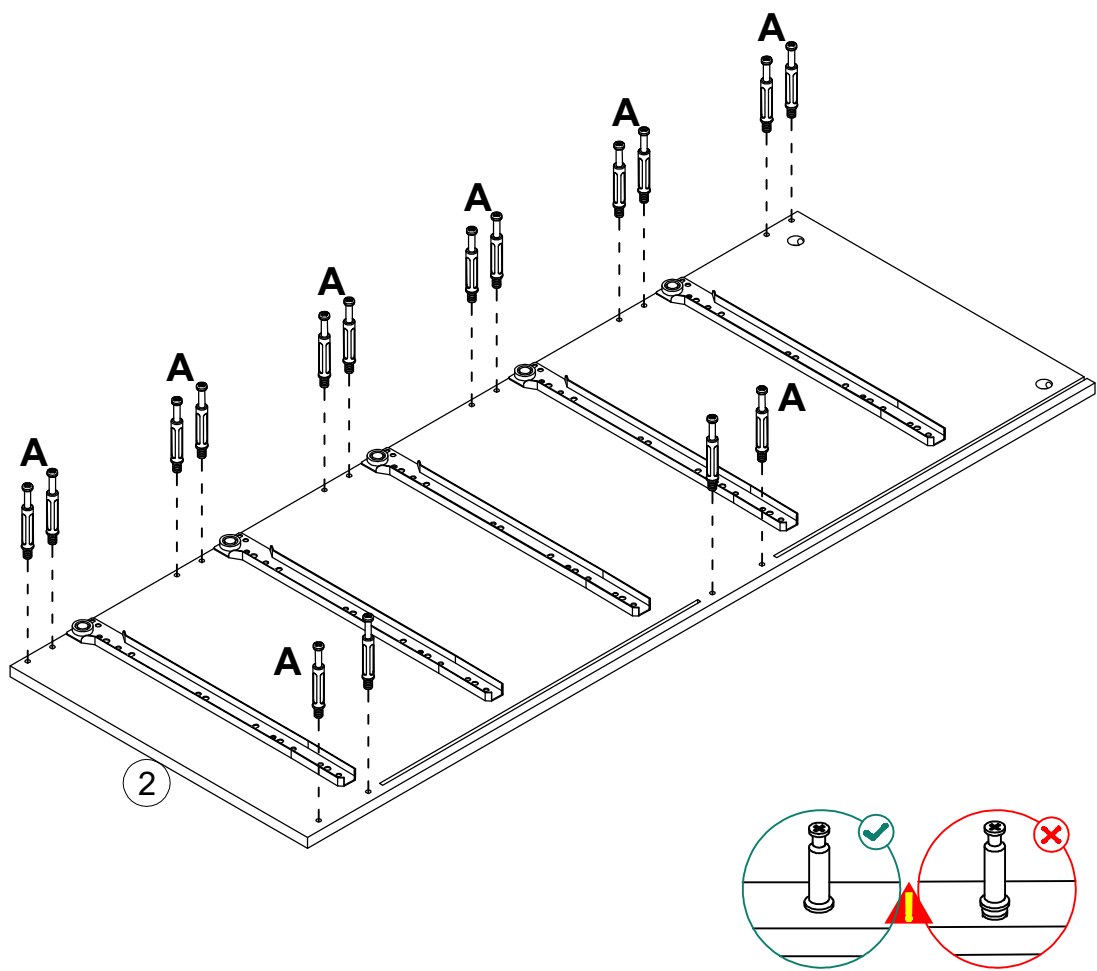


A


ST6*40mm
16PCS

ASSEMBLY INSTRUCTION

STEP 3

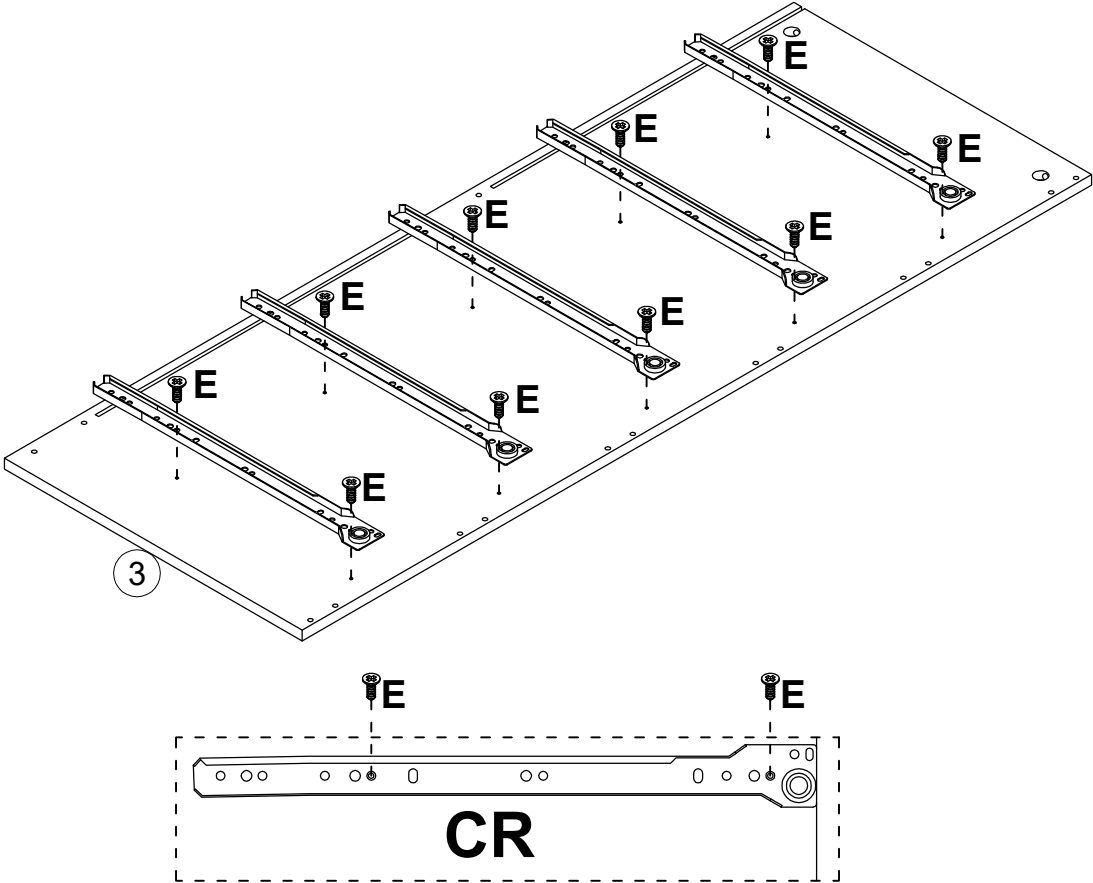


STEP 4

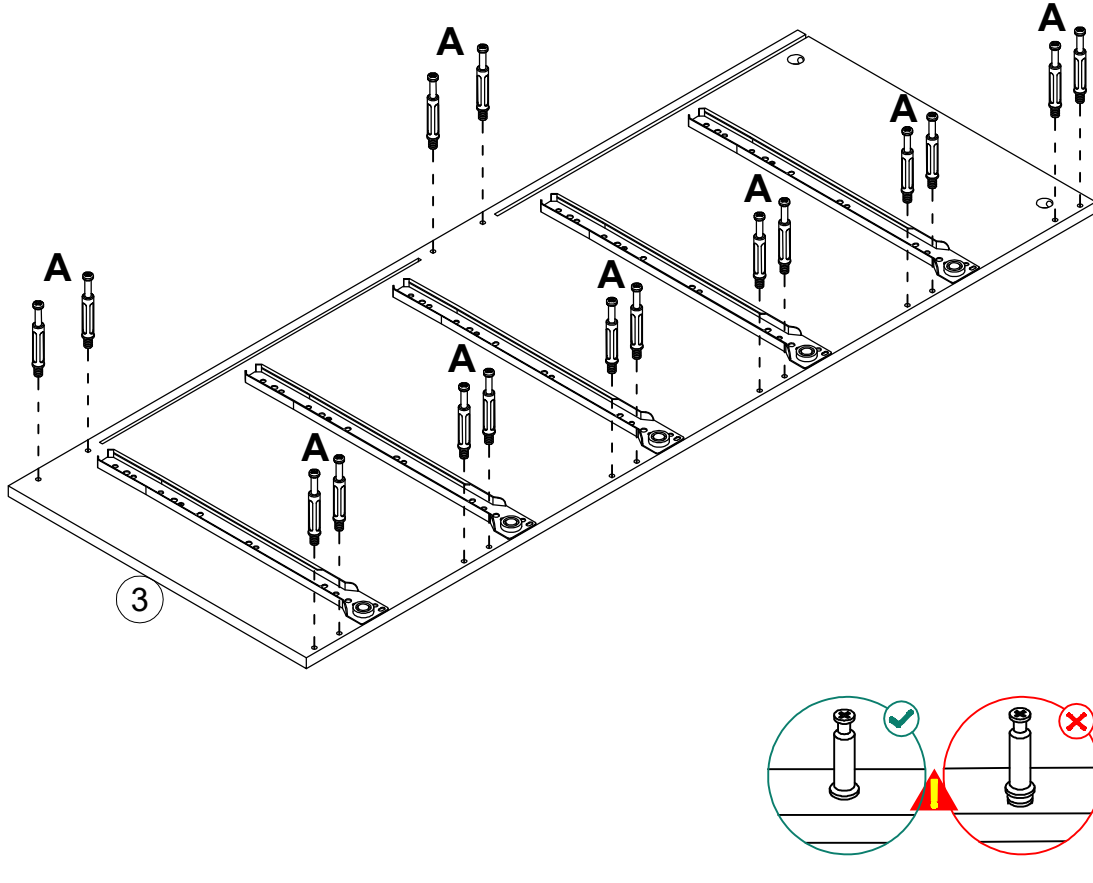

ASSEMBLY INSTRUCTION


STEP 5

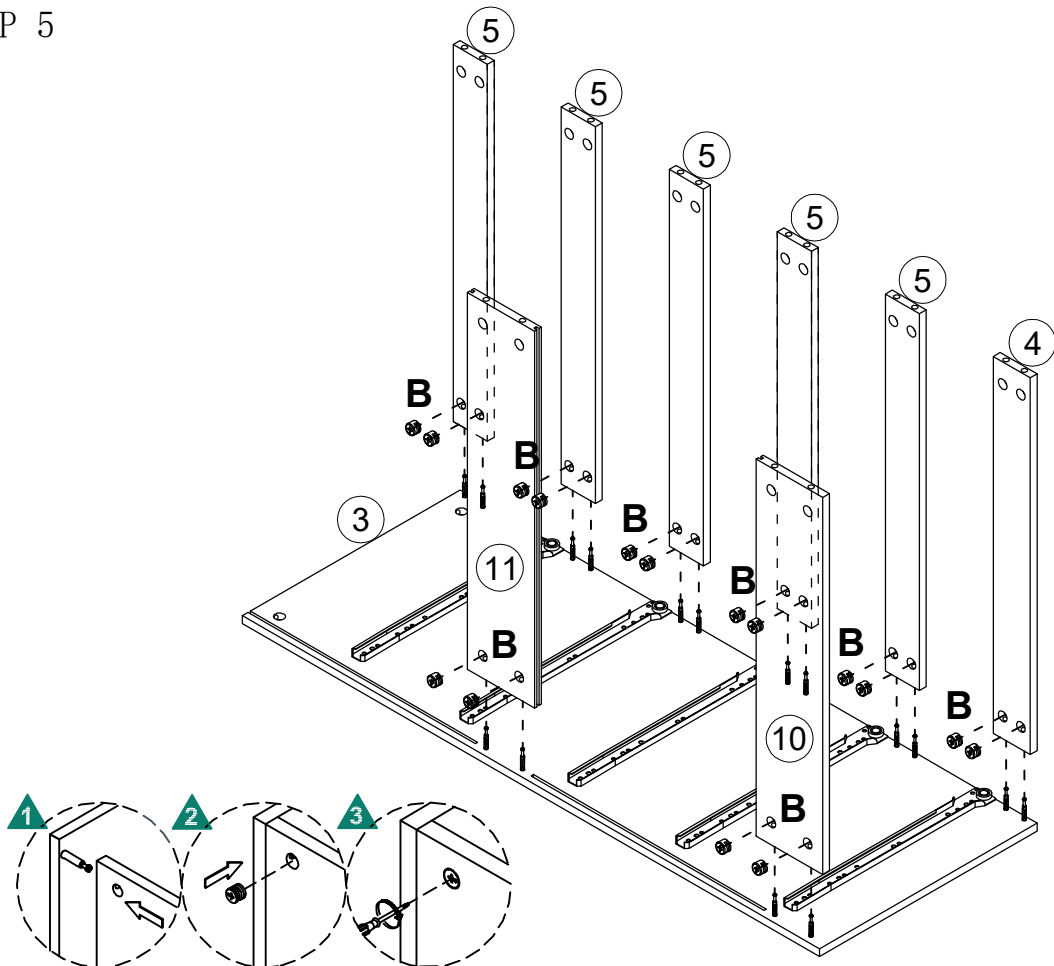

B


9.5
16PCS

STEP 6

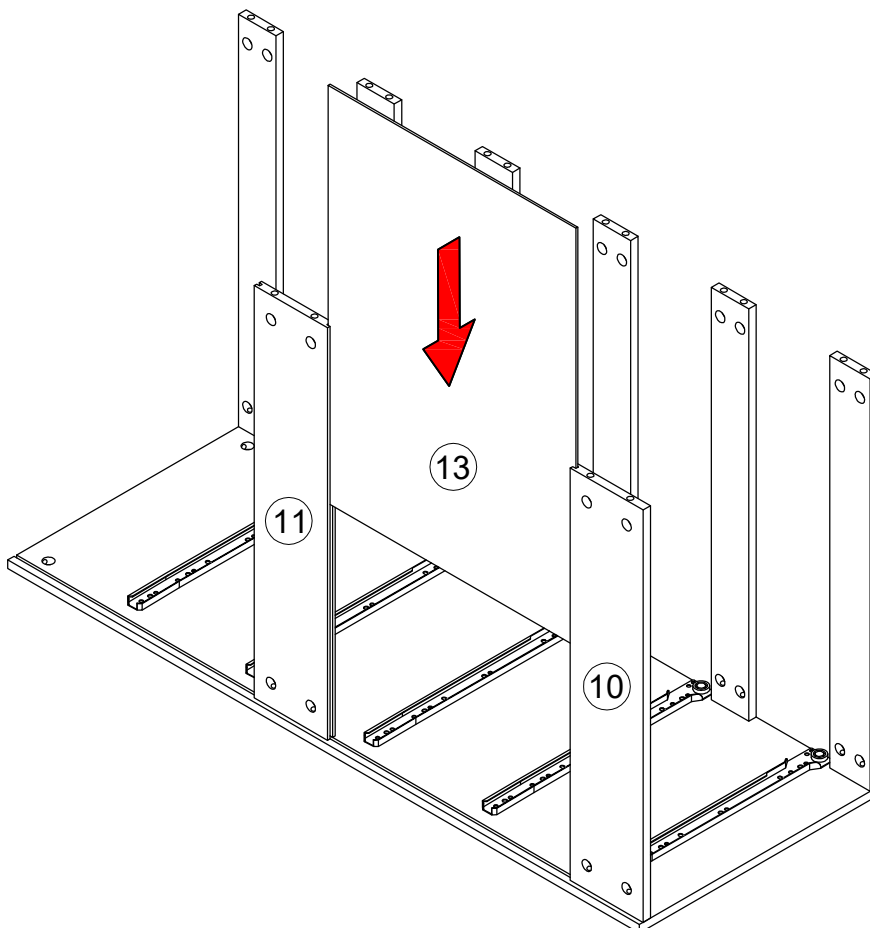

ASSEMBLY INSTRUCTION



STEP 7

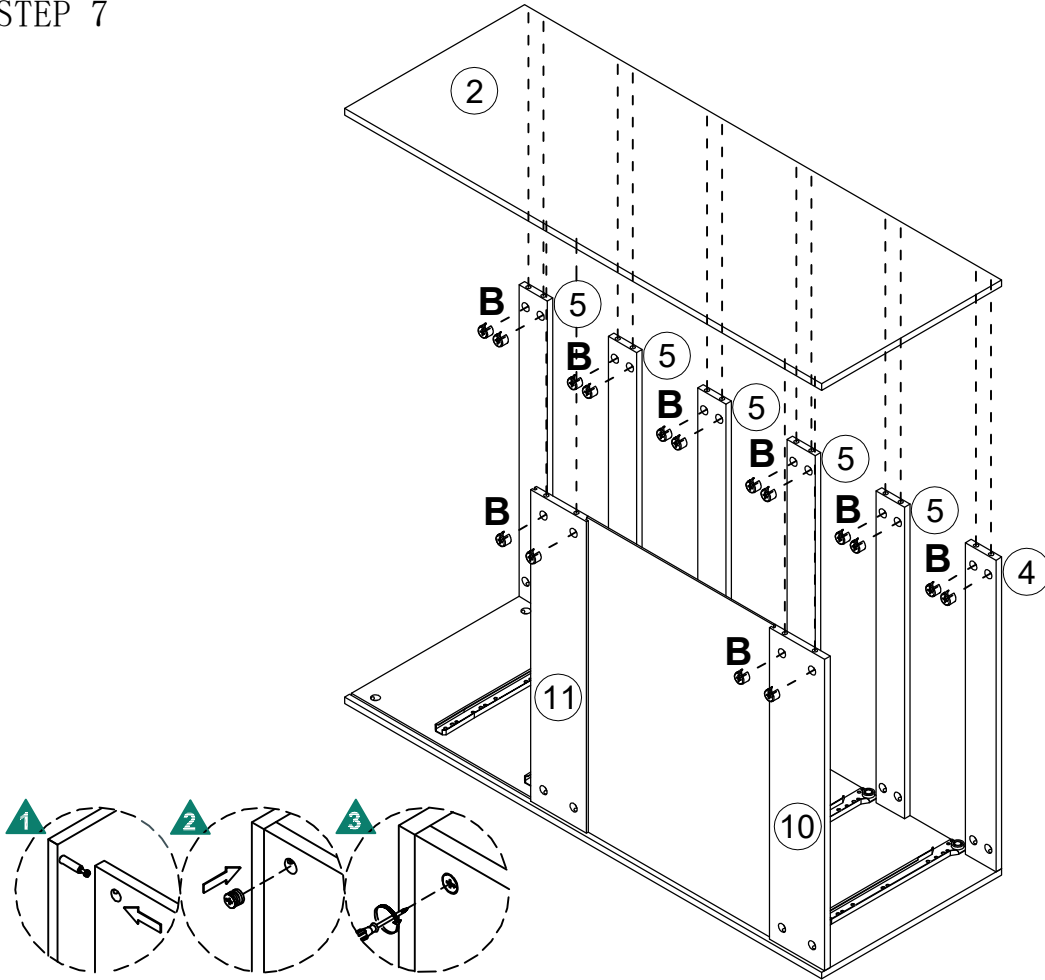

B

9.5
16PCS

STEP 8

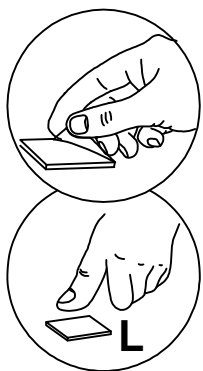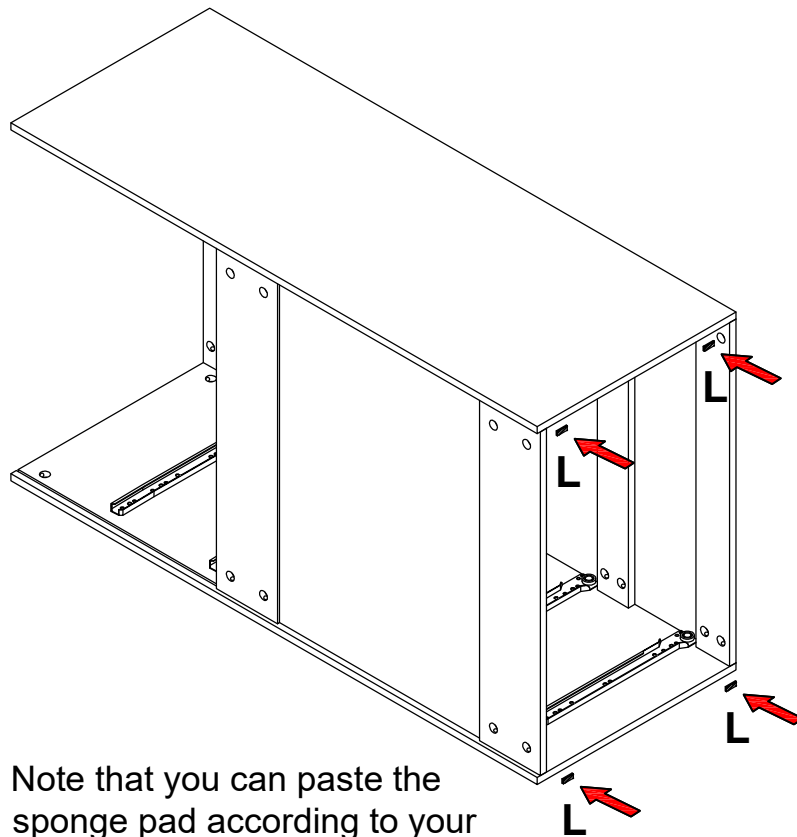


Note that you can paste the sponge pad according to your own needs.

L

4PCS


ASSEMBLY INSTRUCTION

STEP 9

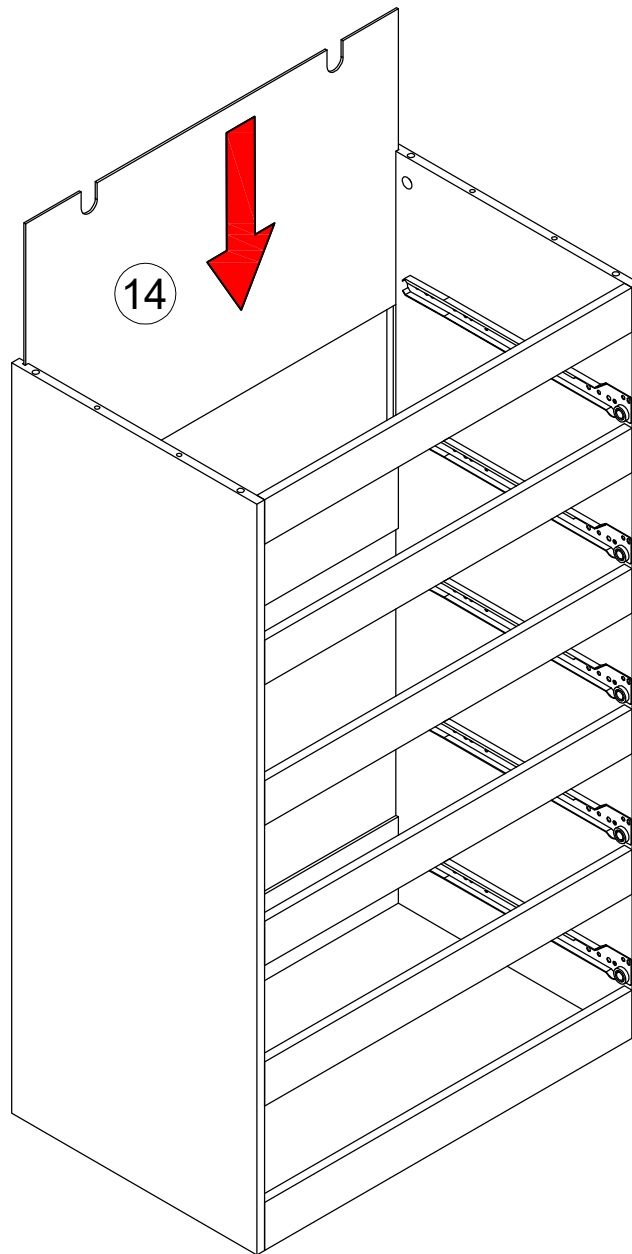

ASSEMBLY INSTRUCTION


STEP 10

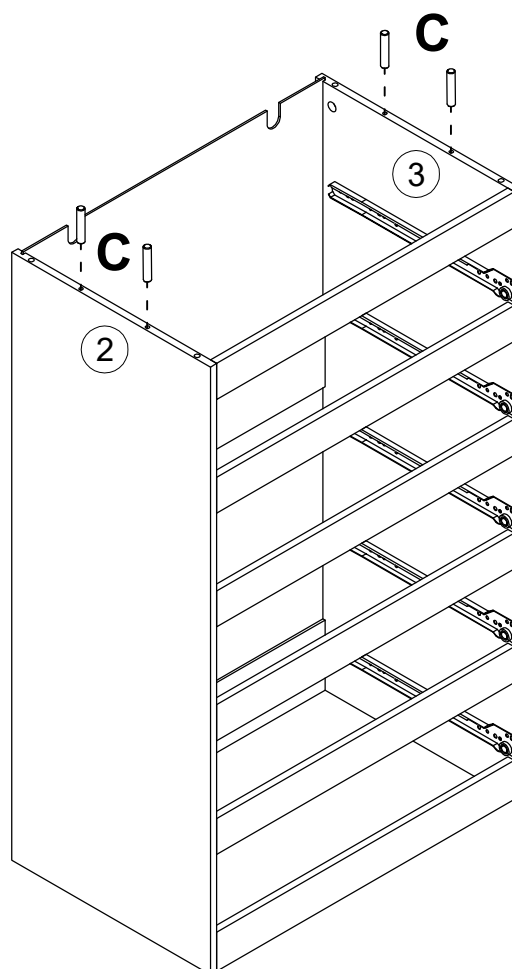

C

Ø6*30mm
4PCS


STEP 11

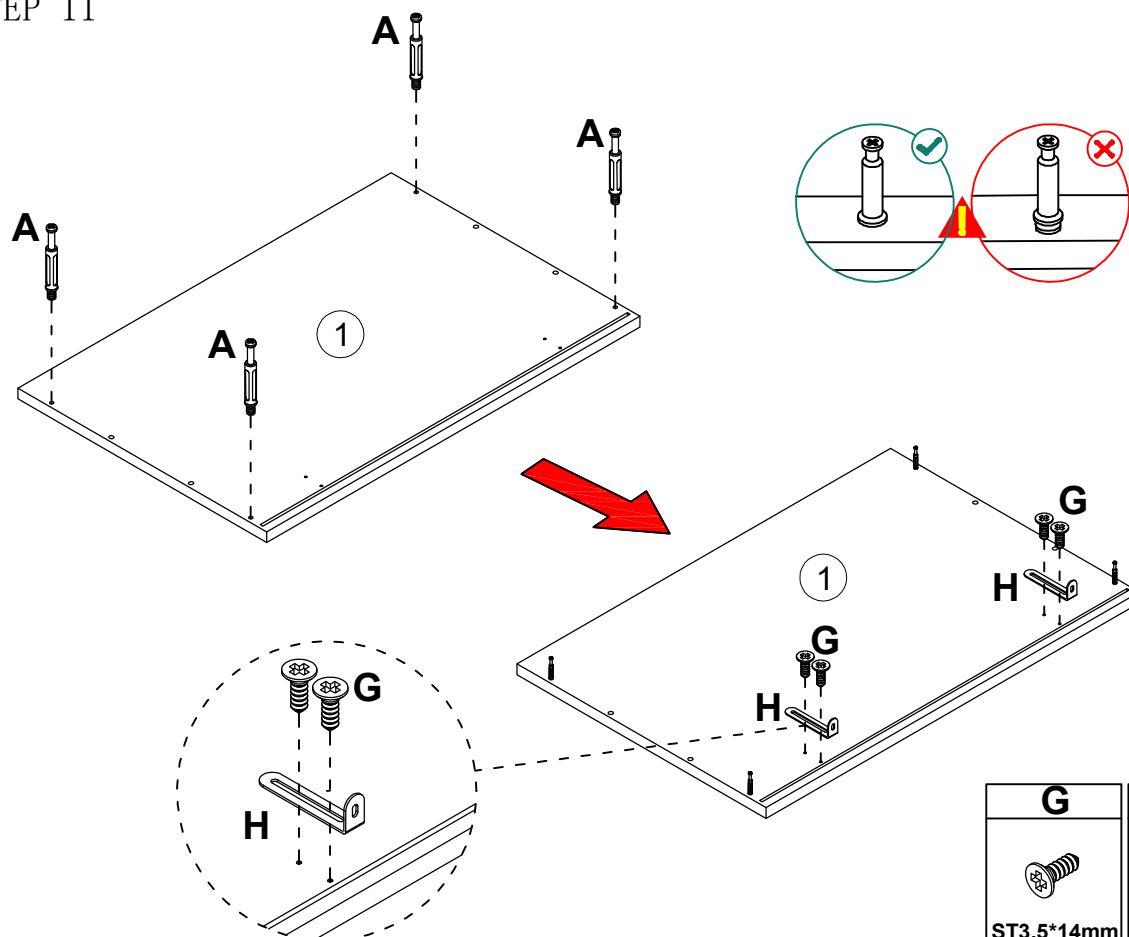

G	H	A
		
ST3.5*14mm		ST6*40mm
4PCS	2PCS	4PCS

ASSEMBLY INSTRUCTION



STEP 12

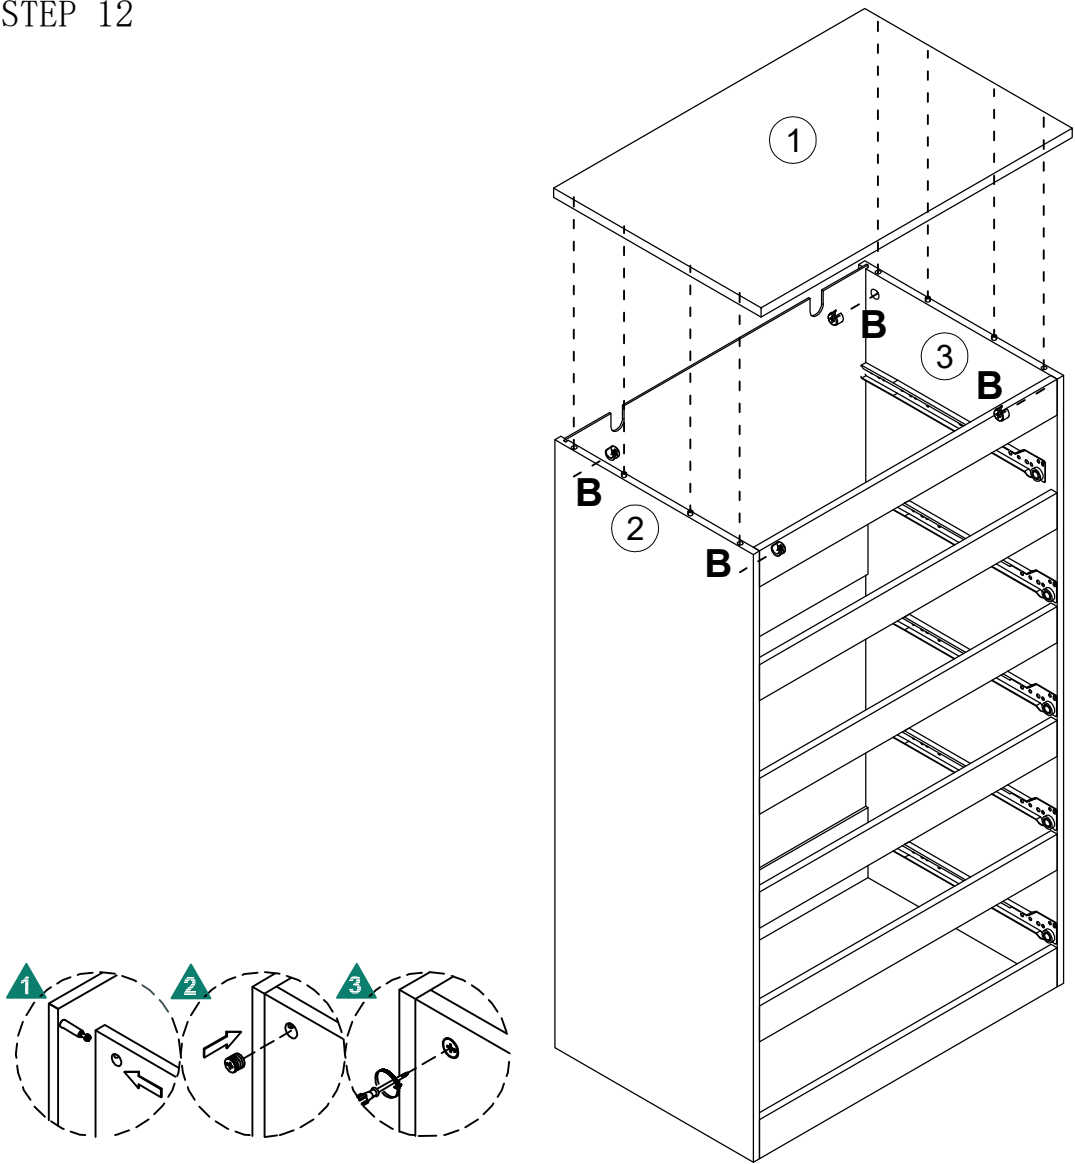

B

9.5
4PCS

STEP 13

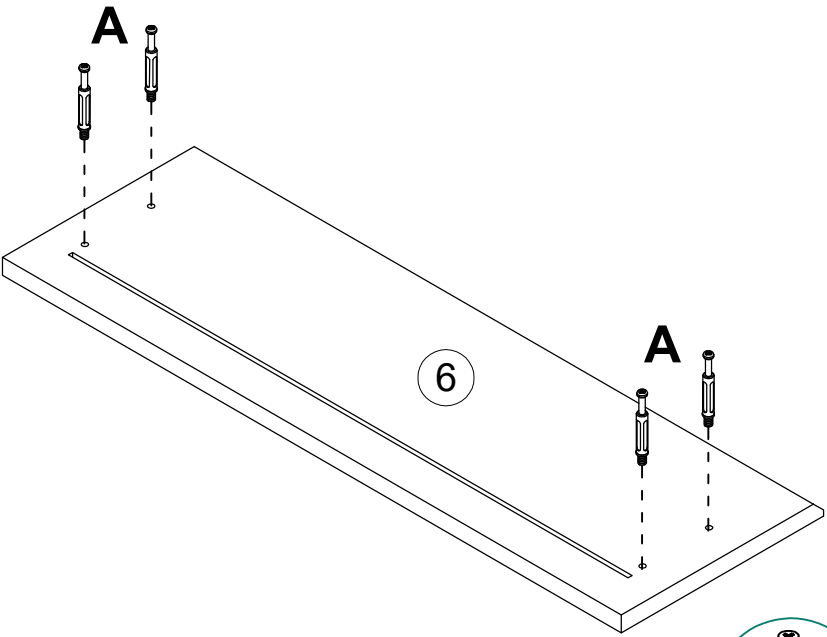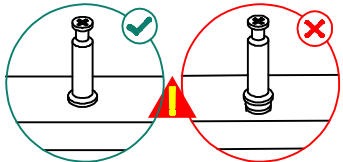


A

ST6*40mm
20PCS

X5

ASSEMBLY INSTRUCTION

STEP 14

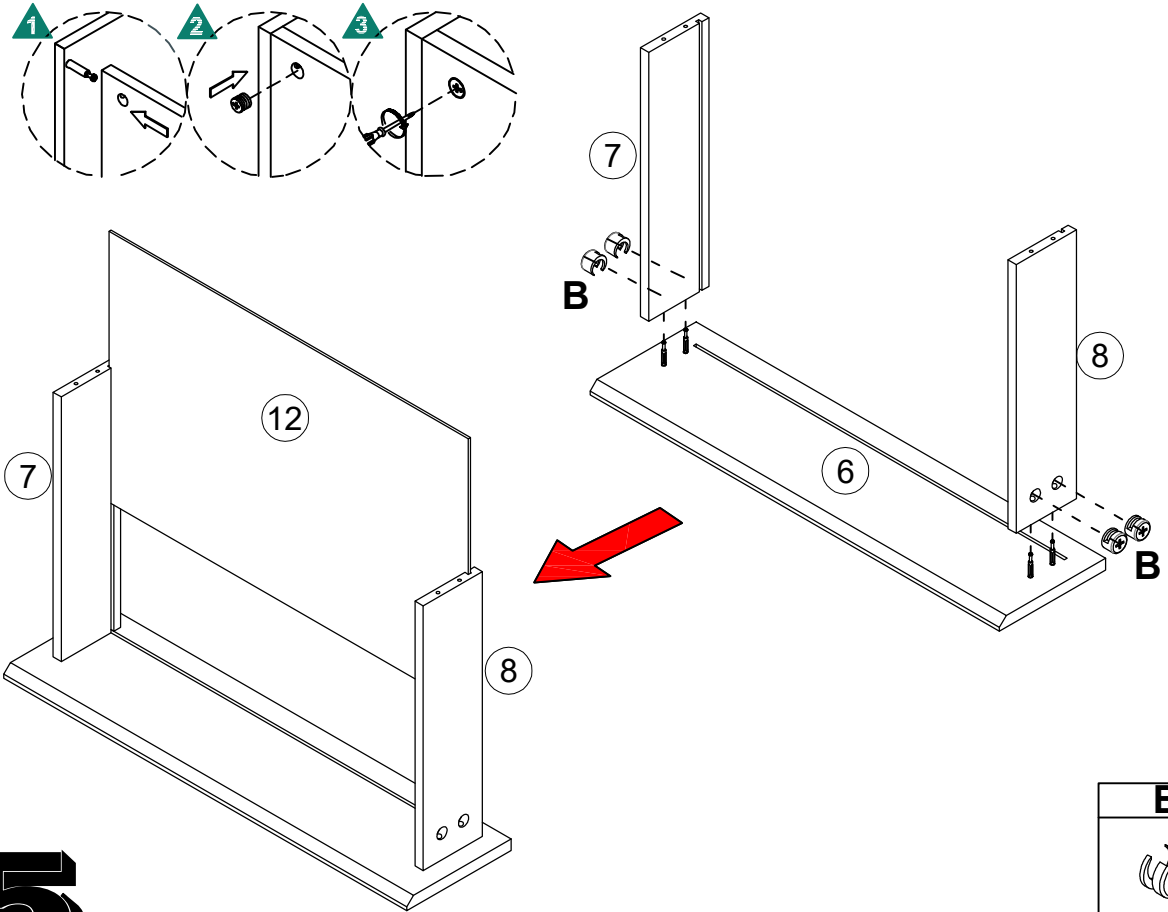


X5

B

9.5
20PCS

STEP 15

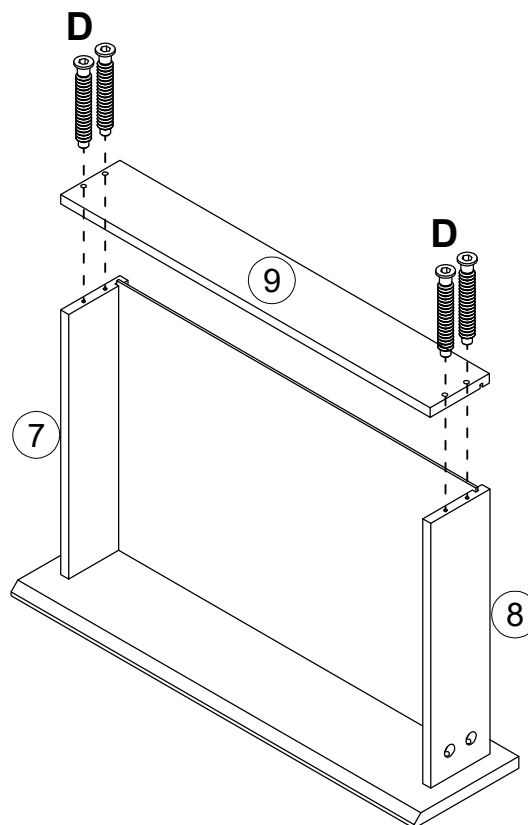


X5

D


ST5*40mm
20PCS

ASSEMBLY INSTRUCTION

STEP 16

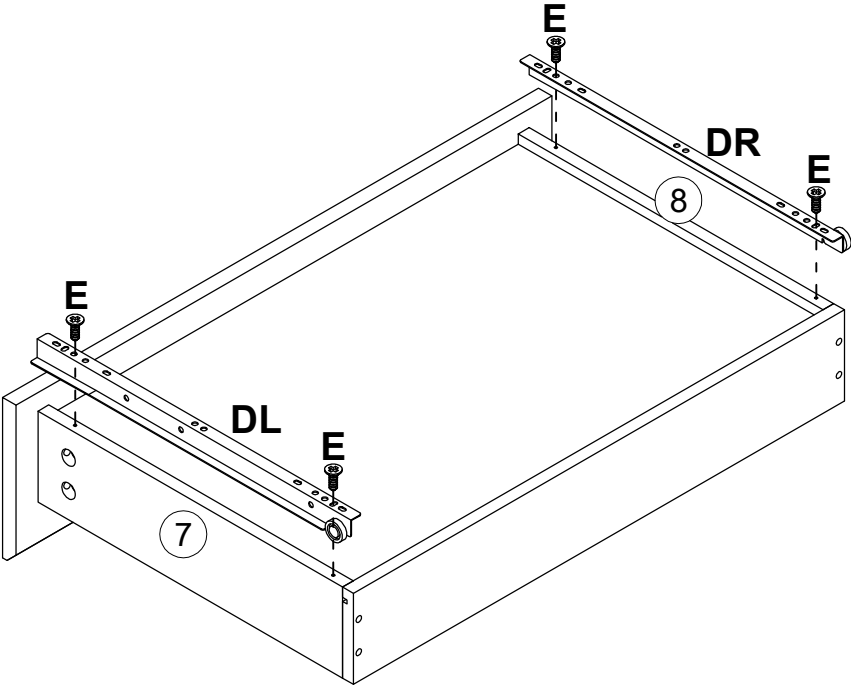


X5

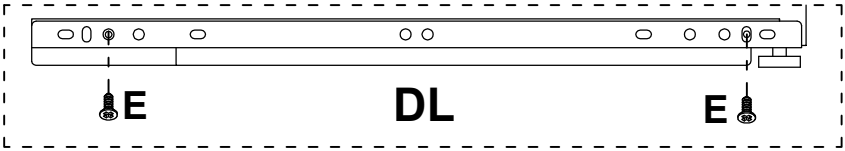

E

ST3.5*12mm
20PCS

STEP 17

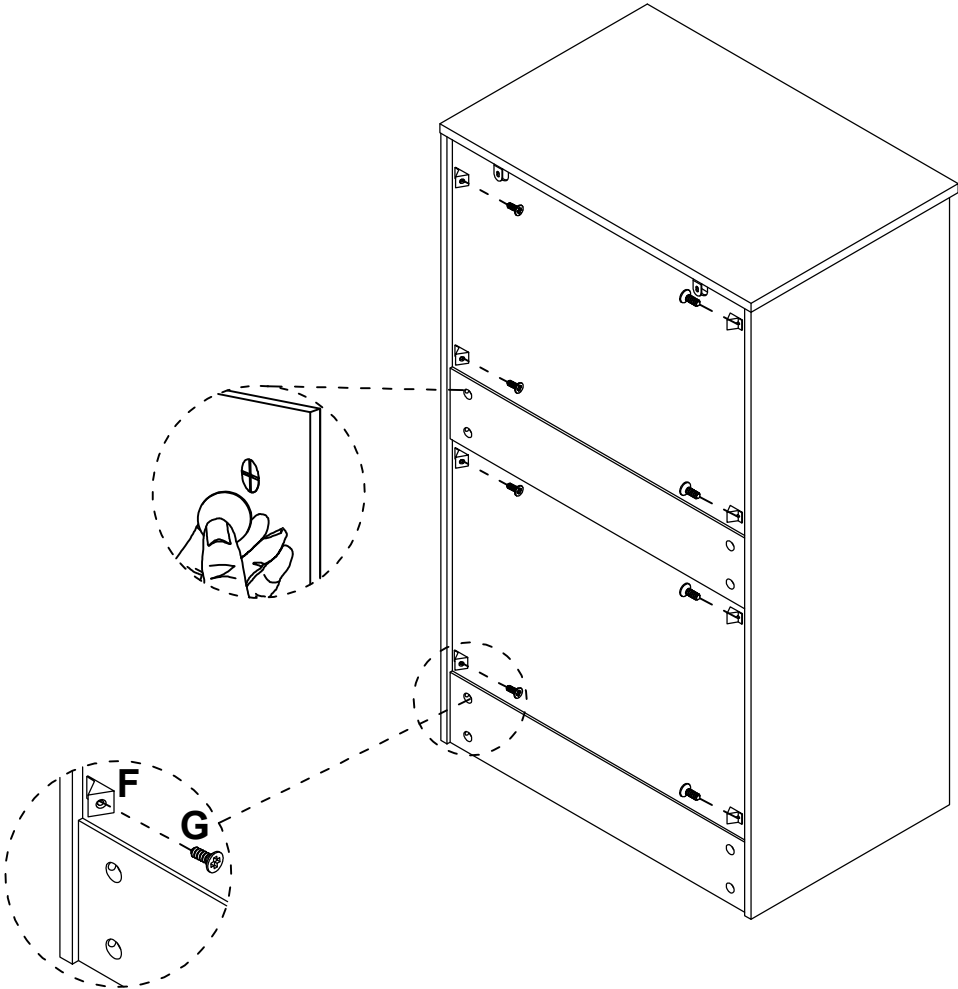


	F	G
		
1PC	ST3.5*14mm 8PCS	8PCS

ASSEMBLY INSTRUCTION

STEP 18

WARNING

In order to prevent overturning this product must be used with the wall attachment device provided.

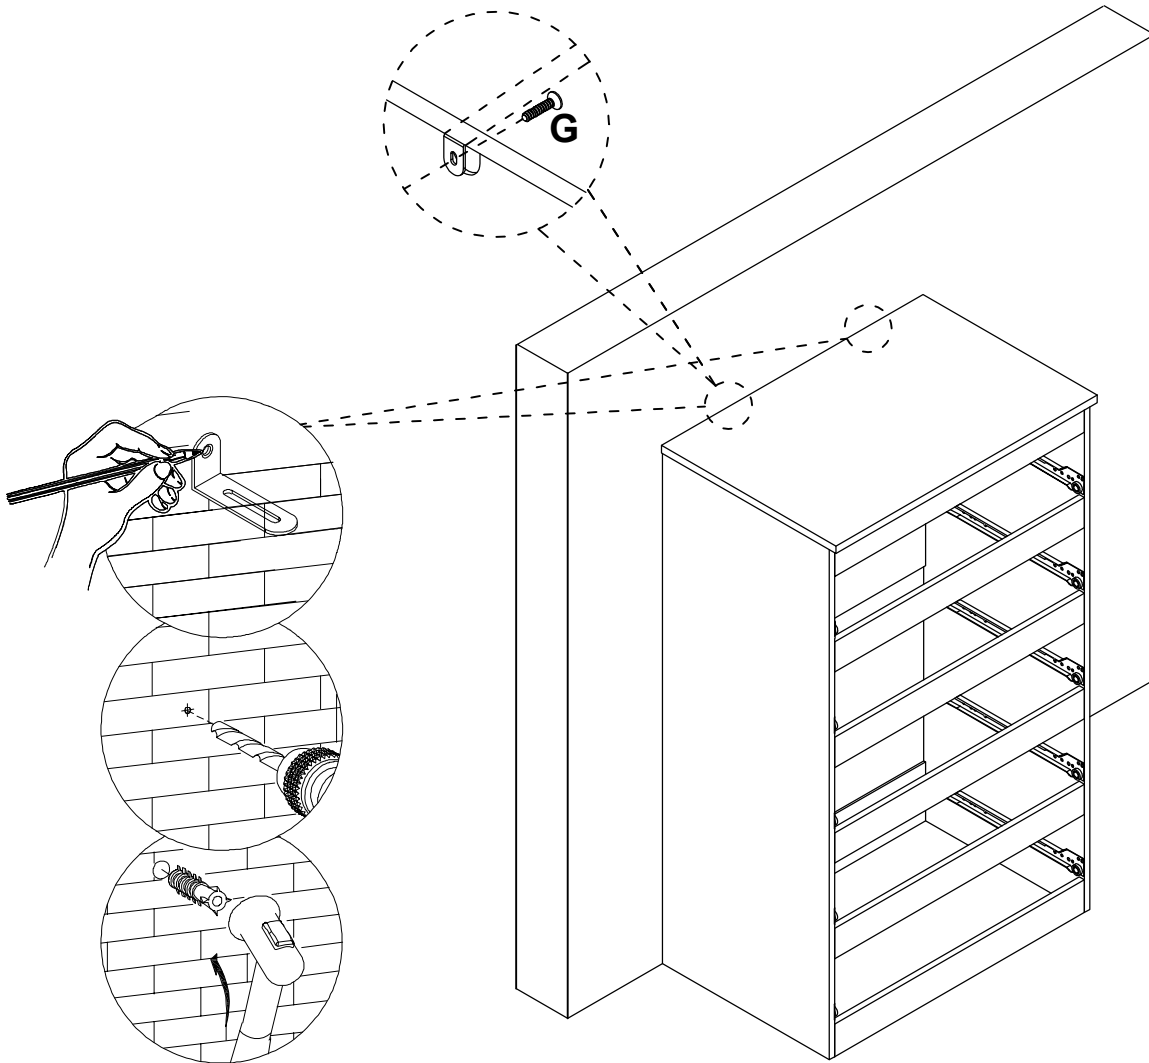


The furniture must be permanently fixed to the wall using the provided anti-tip device to prevent it from tipping over.

Mark the drilling positions on the wall with a pencil.

Drill a small hole at the marked position.


Insert the wall anchor into the hole.

Use the provided screws to fix the anti-tip belt to the wall.

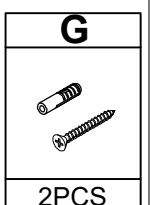

ASSEMBLY INSTRUCTION

STEP 19

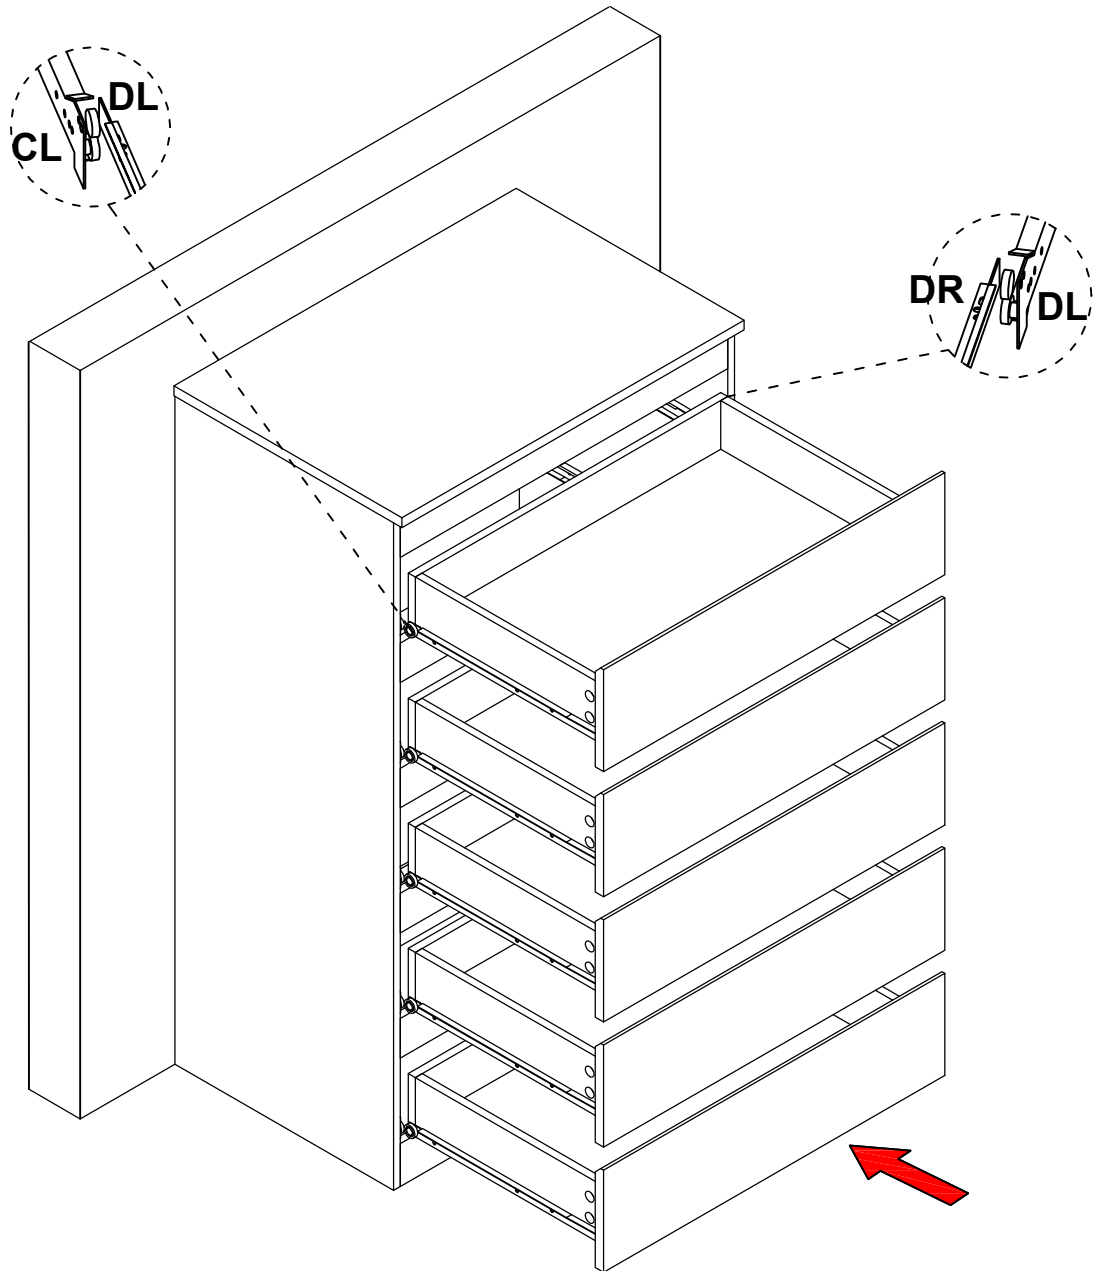

Note that when the drawer is installed, it is inclined upward and the bottom wheel of the drawer is stuck in the CR and CL rail grooves.