

D8L40BS01

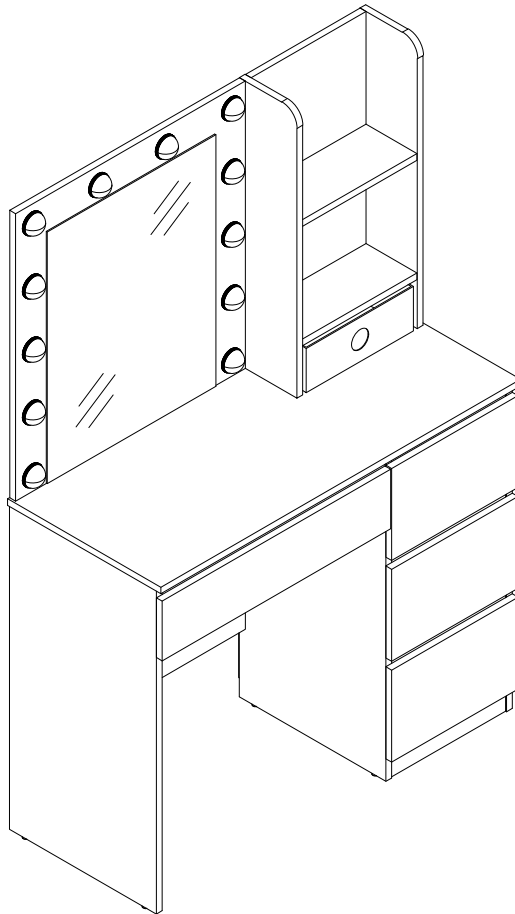


As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

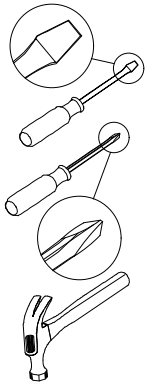


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

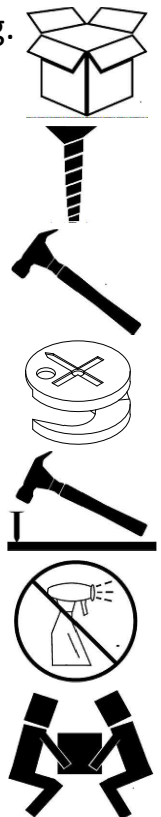


Board Identification

Not actual size

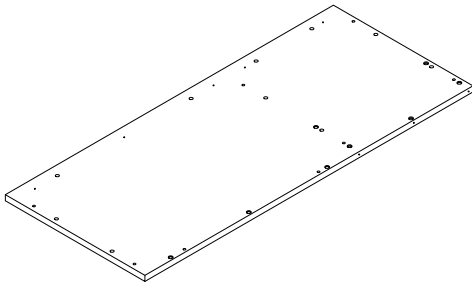


Ⓐ

TOP
Qty:1

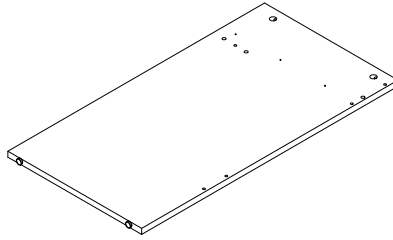


Ⓑ

LEFT SIDE PANEL
Qty:1

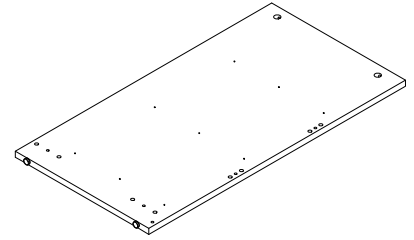


Ⓒ

RIGHT SIDE PANEL
Qty:1

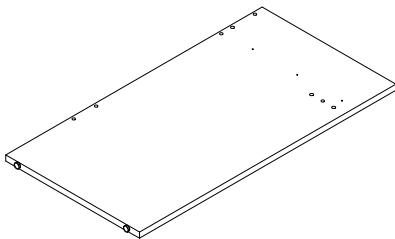


Ⓓ

MIDDLE PANEL
Qty:1

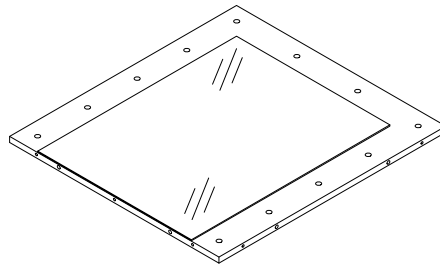


Ⓔ

DRESSING MIRROR
Qty:1

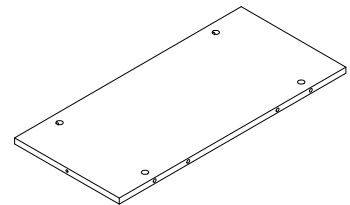


Ⓕ

UPPER BACKPANEL
Qty:1

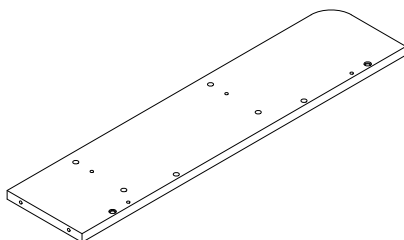


Ⓖ

UPPER LEFT SIDE PANEL
Qty:1

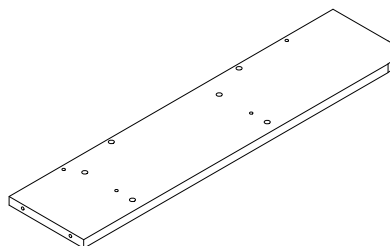

Ⓗ

UPPER RIGHT SIDE PANEL
Qty:1

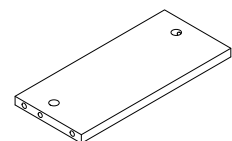


Ⓘ

FIXED SHELF
Qty:2


Board Identification

Not actual size

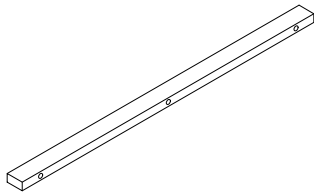


ⓐ

RAIL
Qty:1




ⓑ

RAIL
Qty:1

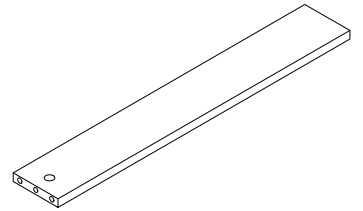


ⓒ

LEFT FRONT CROSS MEMBER
Qty:1

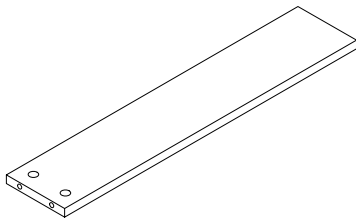


ⓓ

LOWER LEFT REAR RAIL
Qty:1

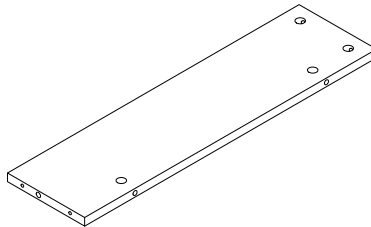


ⓔ

LEFT REAR PANEL
Qty:1




ⓕ

RIGHT FRONT SIDE MEMBER
Qty:2

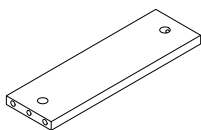


ⓖ

RIGHT BACK RAIL
Qty:1

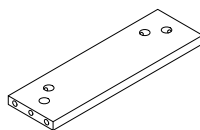

ⓗ

RIGHT FRONT RAIL
Qty:1




ⓘ

BOTTOM FRONT RAIL
Qty:1


Board Identification

Not actual size

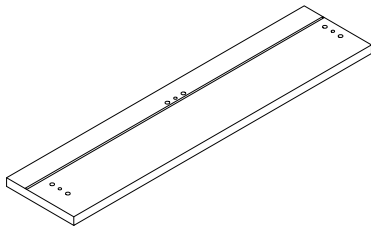


(S)

LARGE DRAWER FRONT
Qty:1

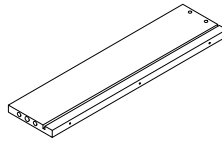


(T)

DRAWER LEFT PANEL
Qty:1

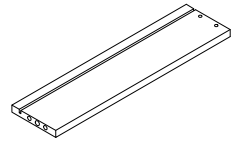


(U)

DRAWER RIGHT PANEL
Qty:1

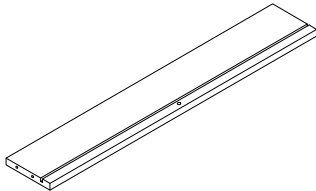


(V)

DRAWER BACK PANEL
Qty:1

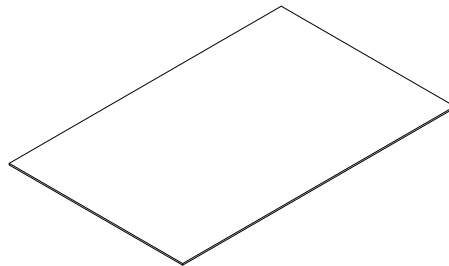


(W)

BOTTOM OF DRAWER
Qty:1

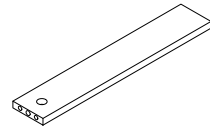


(X)

DRAWER SUPPORT RAIL
Qty:1

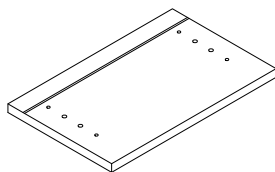


(Y)

SMALL DRAWER FRONT
Qty:3

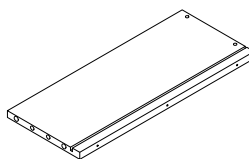

(Z)

DRAWER LEFT PANEL
Qty:3

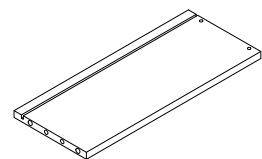


(AA)

DRAWER RIGHT PANEL
Qty:3


Board Identification

Not actual size

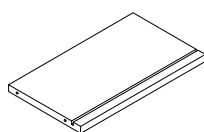


BB

DRAWER BACK PANEL
Qty:3

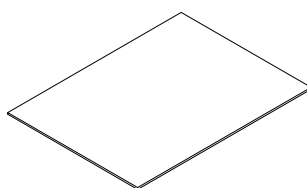


CC

BOTTOM OF DRAWER
Qty:3

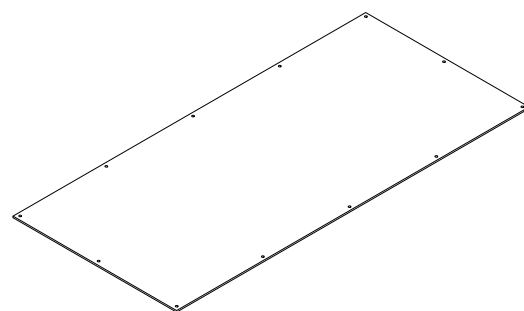

DD

LOWER RIGHT REAR PANEL
Qty:1

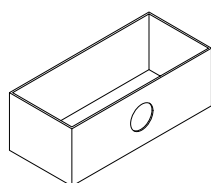


EE


STORAGE BOX
Qty:1

Board Identification


Not actual size

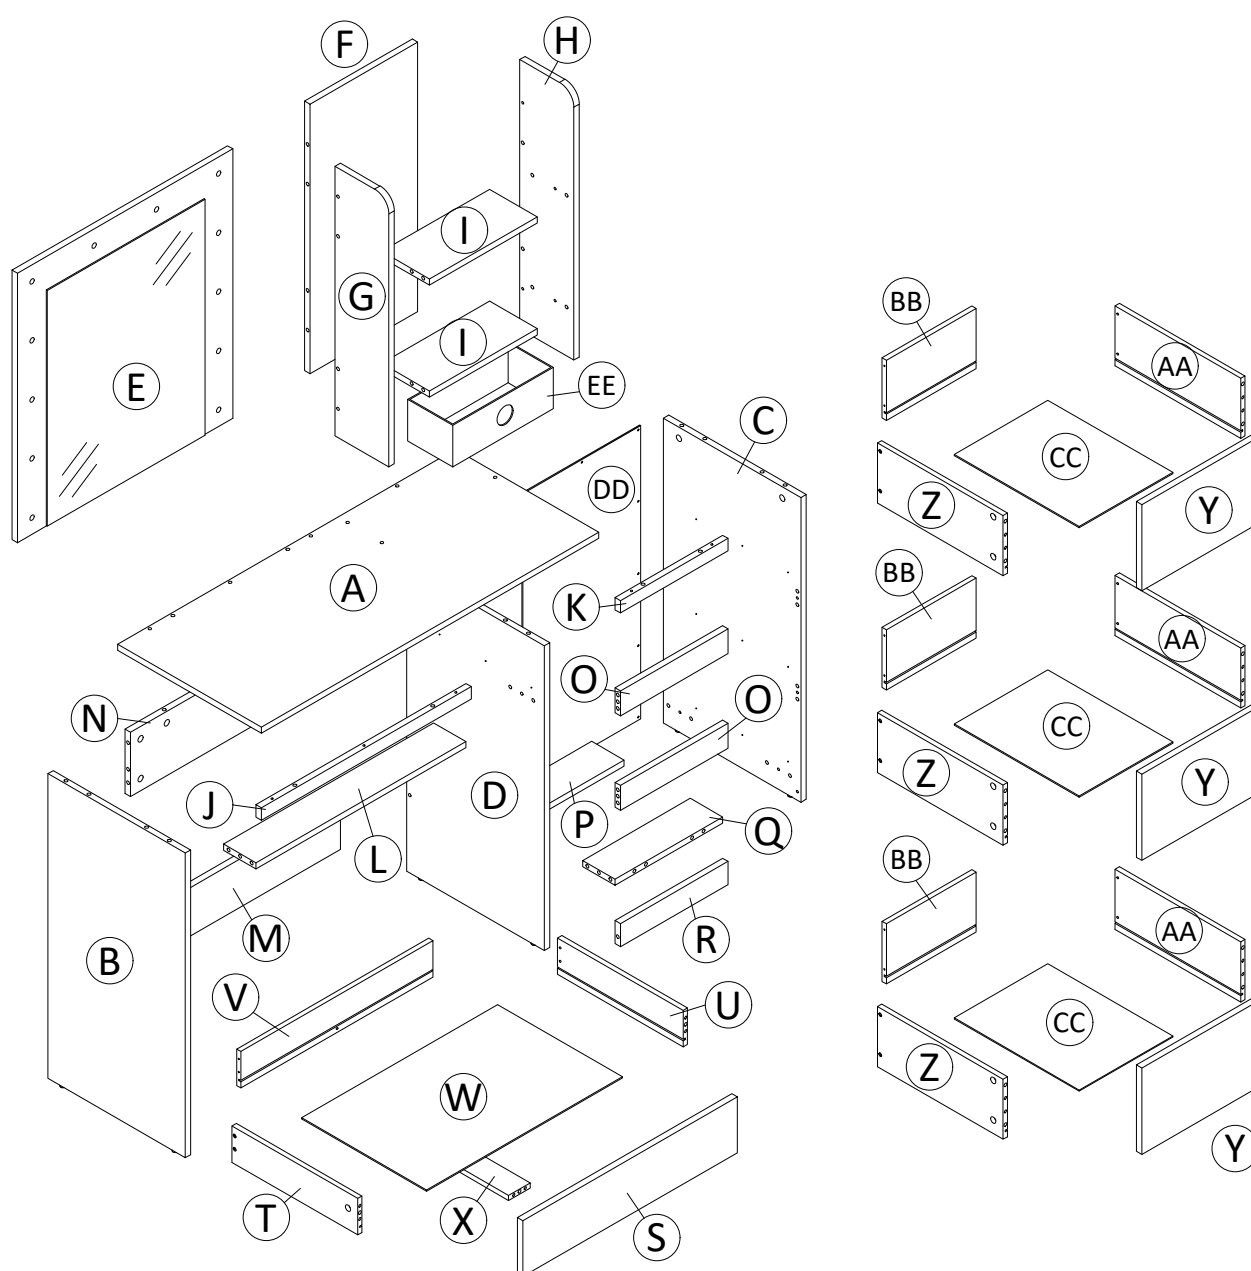


Part List

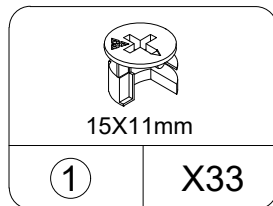


CAM LOCK
spare:3

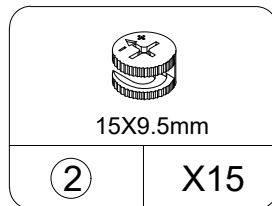


CAM LOCK
spare:2

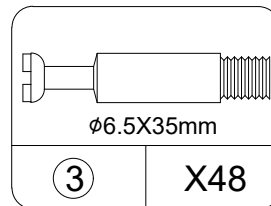


CAM BOLT
spare:3

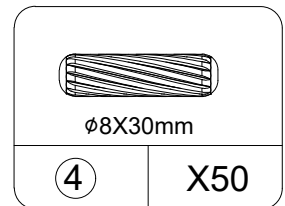


WOOD DOWEL
spare:3

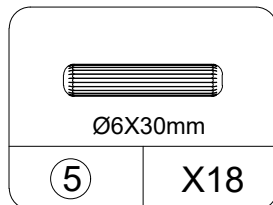


WOOD DOWEL
spare:2

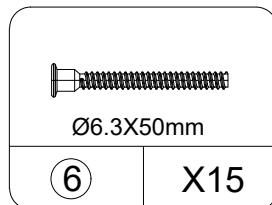


SCREW
spare:2

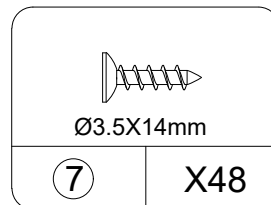


SCREW
spare:3

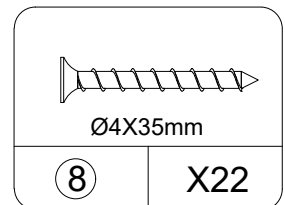


SCREW
spare:3

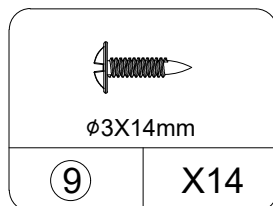


SCREW
spare:2

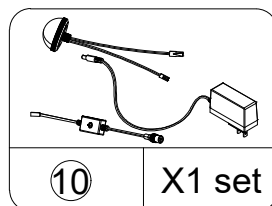


LIGHT BULB

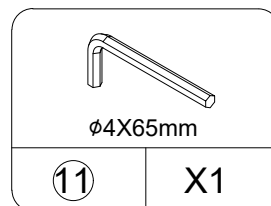


HEX KEY

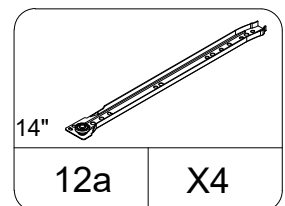


LEFT CABINET MEMBER

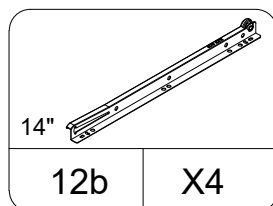


LEFT DRAWER RUNNER

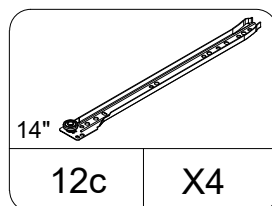

RIGHT CABINET MEMBER

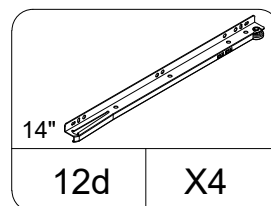

RIGHT DRAWER RUNNER

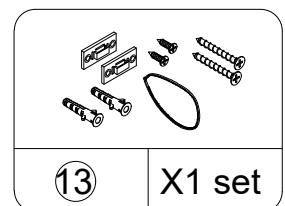


TIPPING RESTRAINT
HARDWARE KIT







Part List

Cam Lock Fastening System








This Cam Lock Fastening System will be used throughout the assembly process.

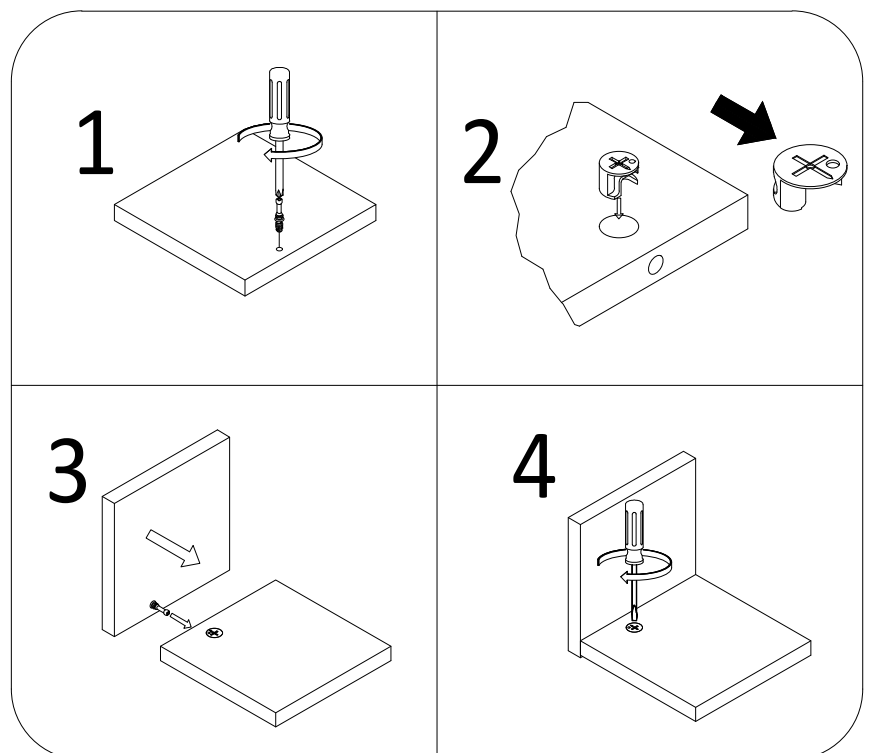












STEP1

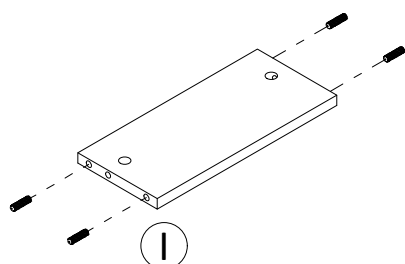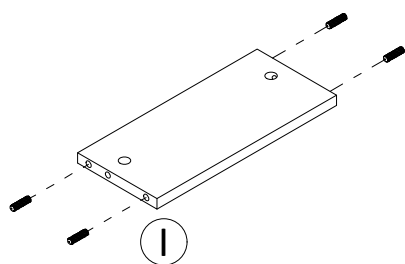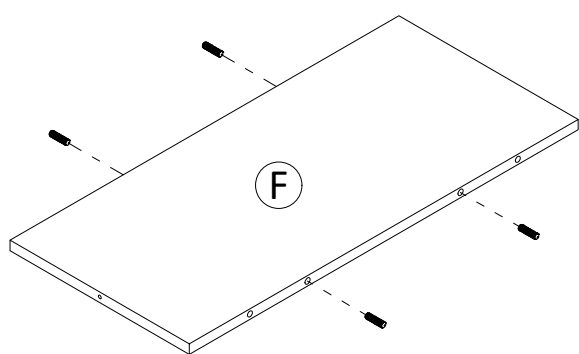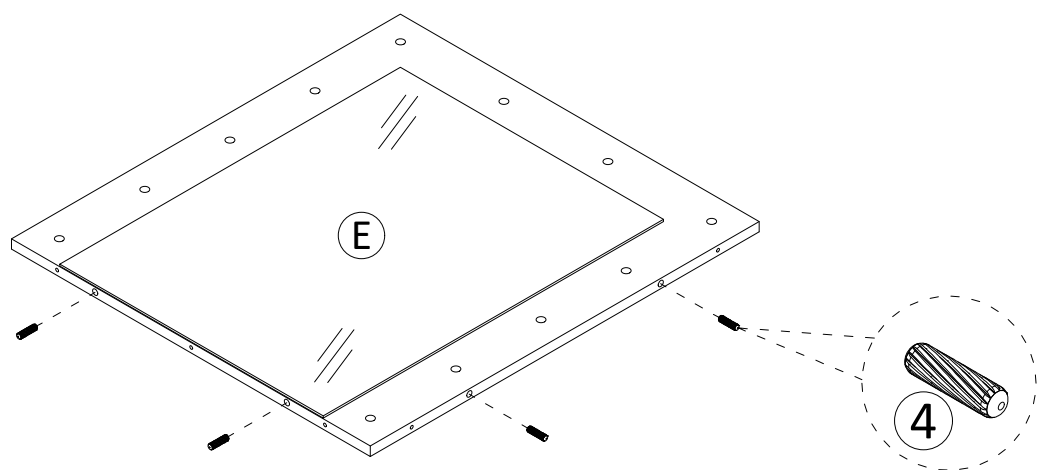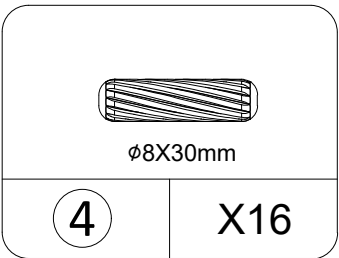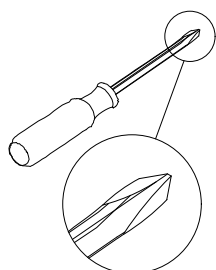

STEP2

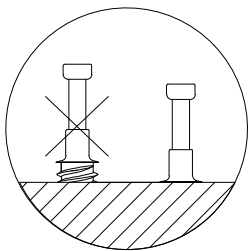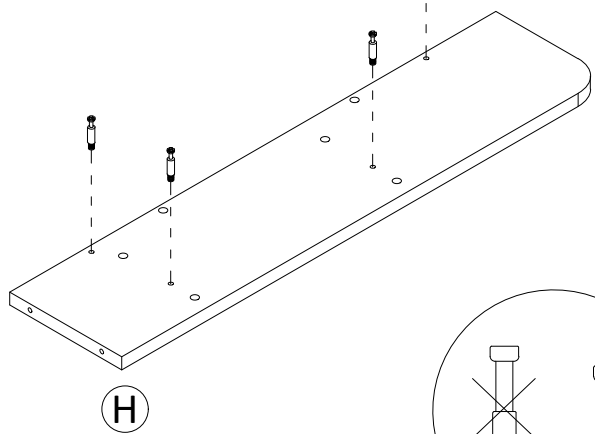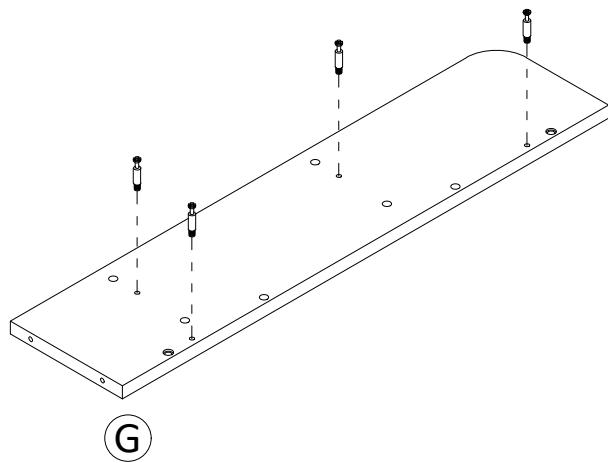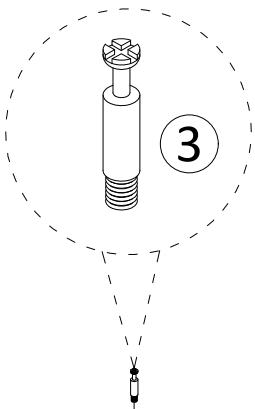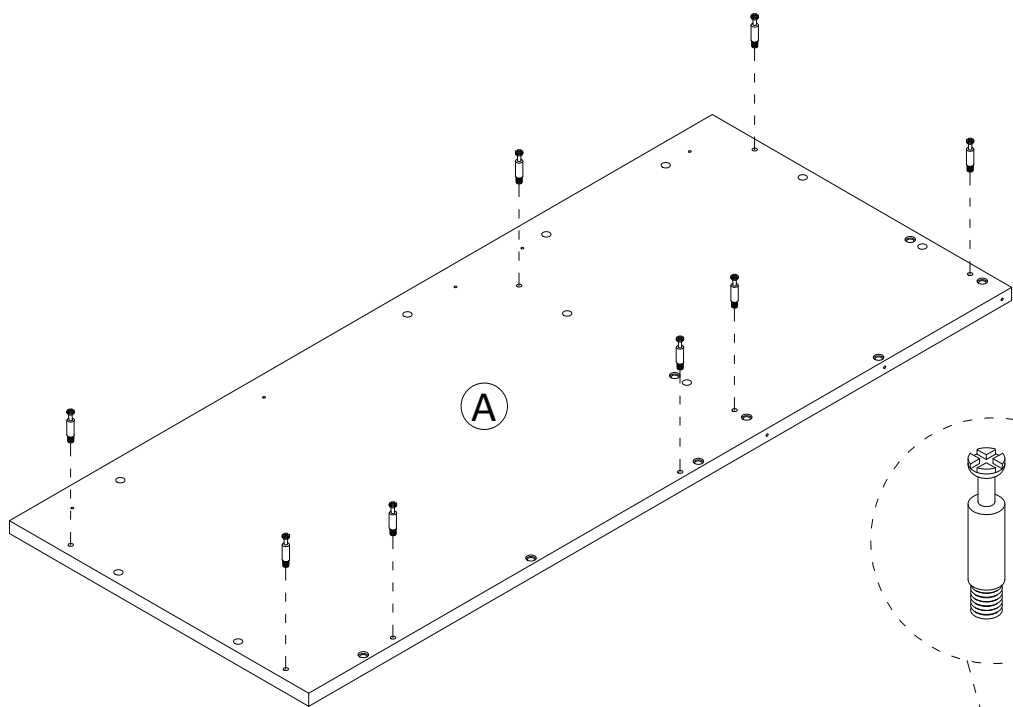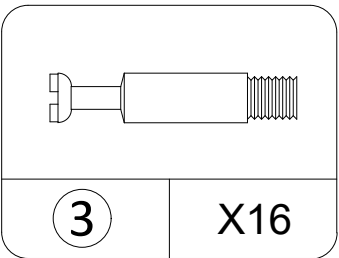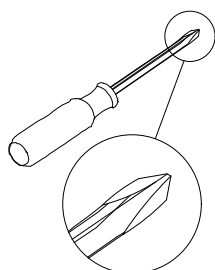


STEP3

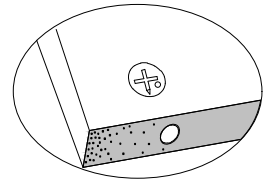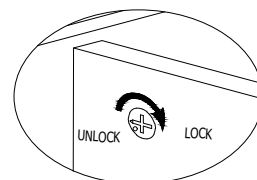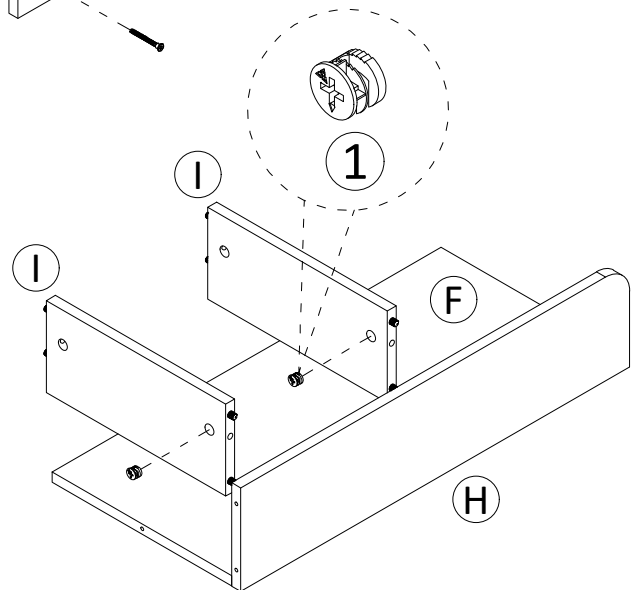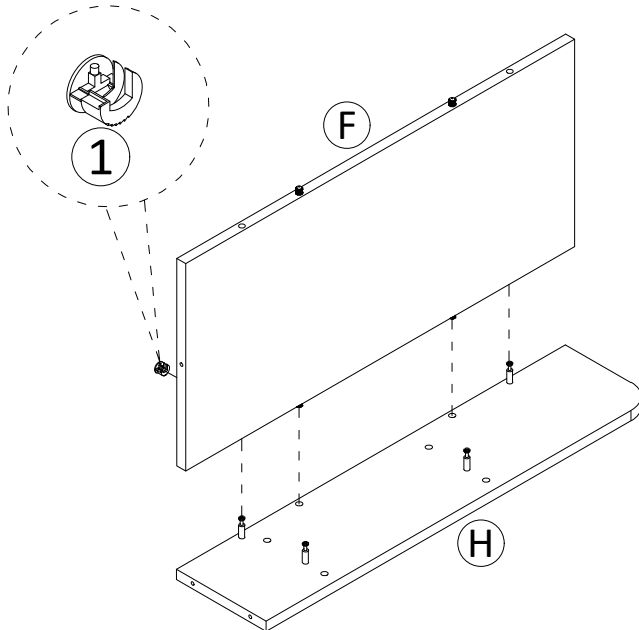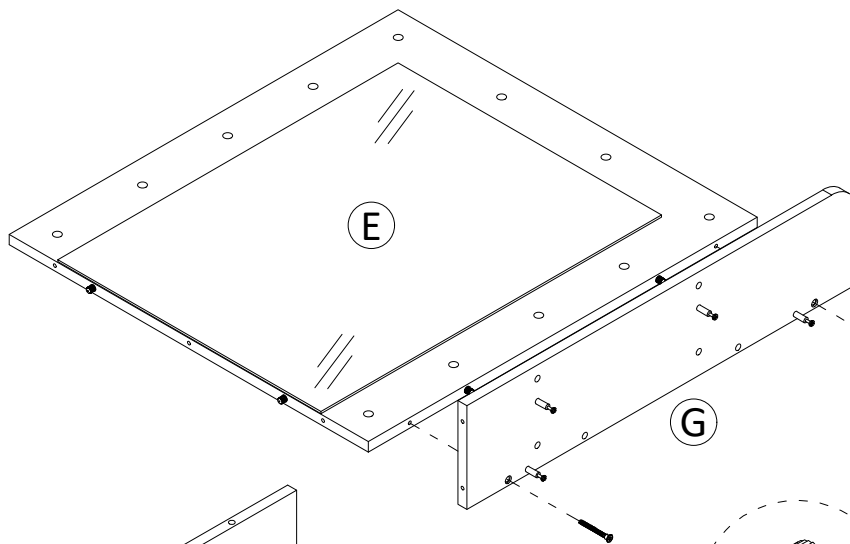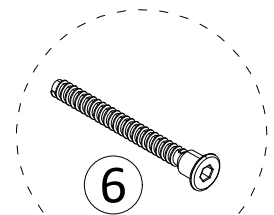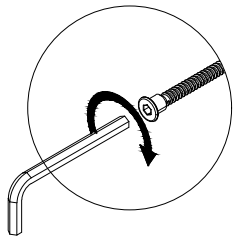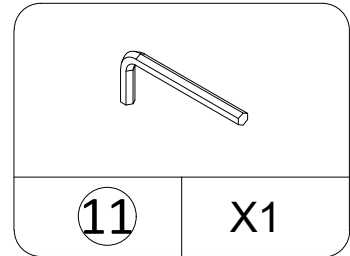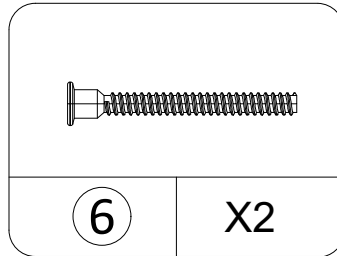
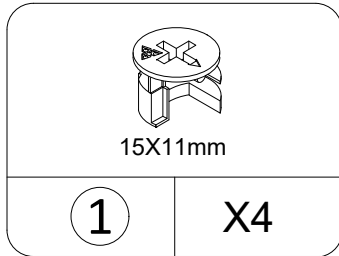
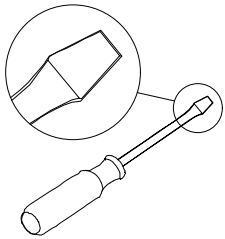


Proper orientation of CAM LOCK








STEP4

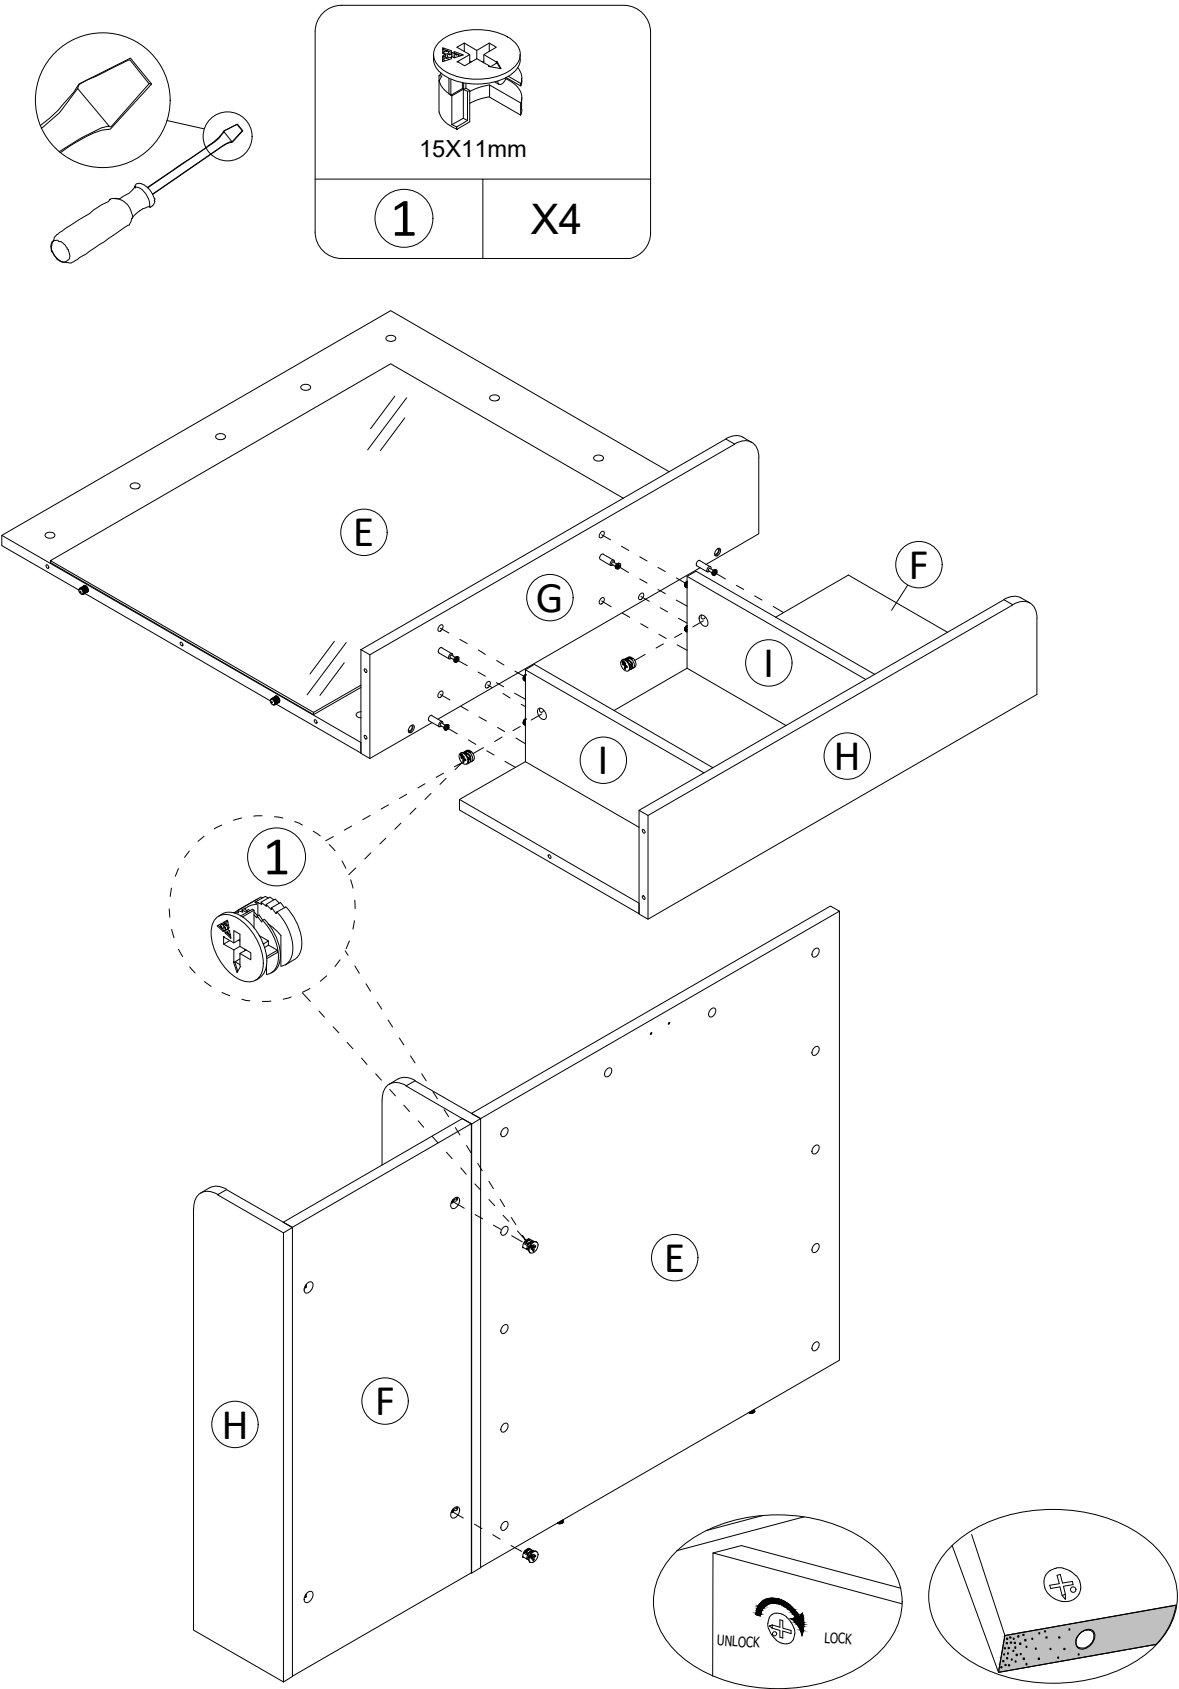









STEP5

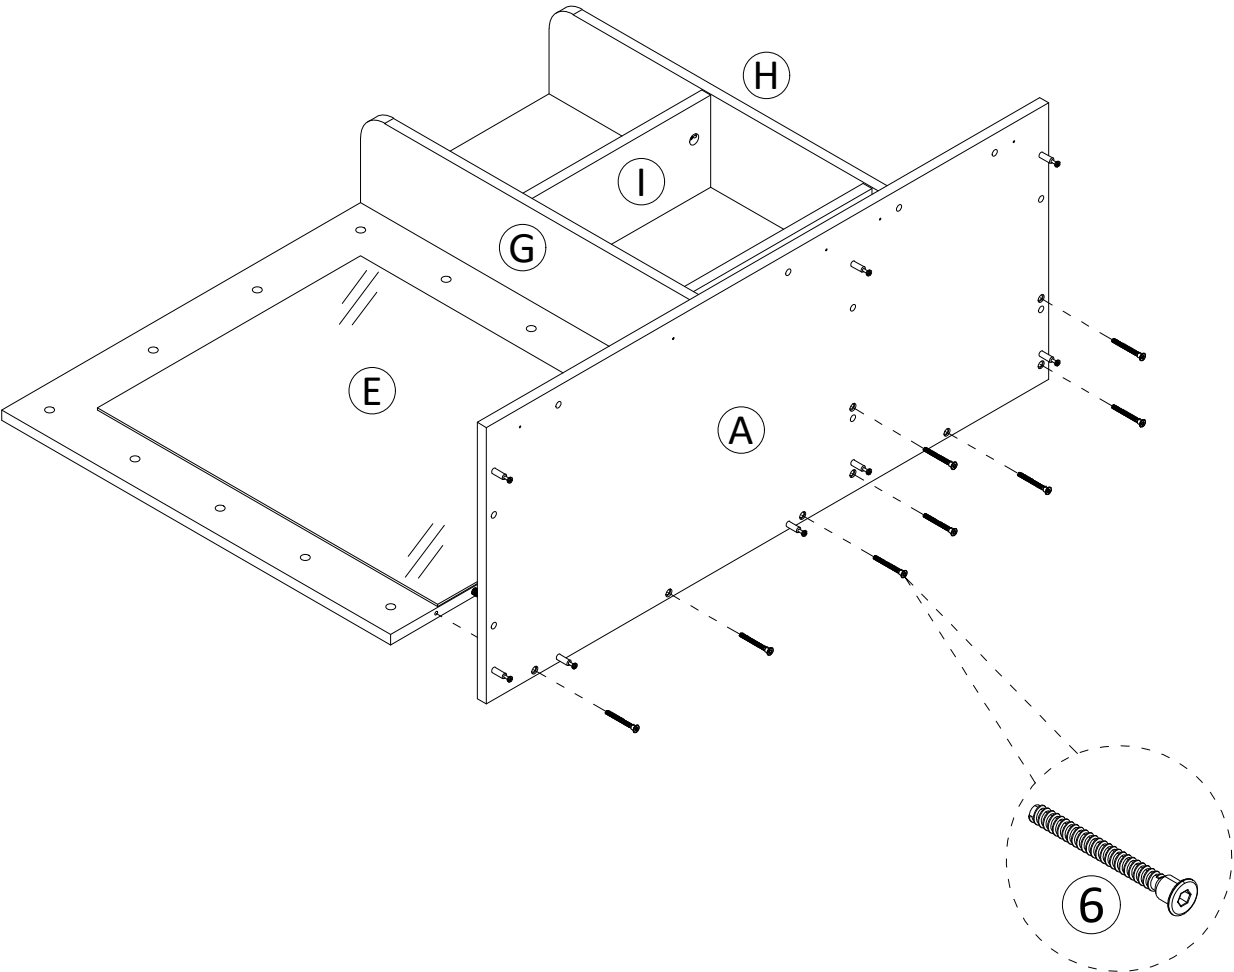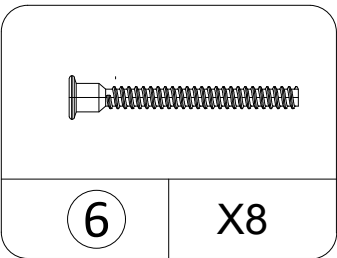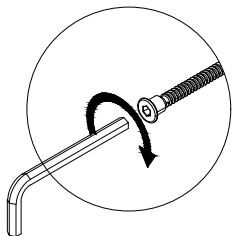










STEP6

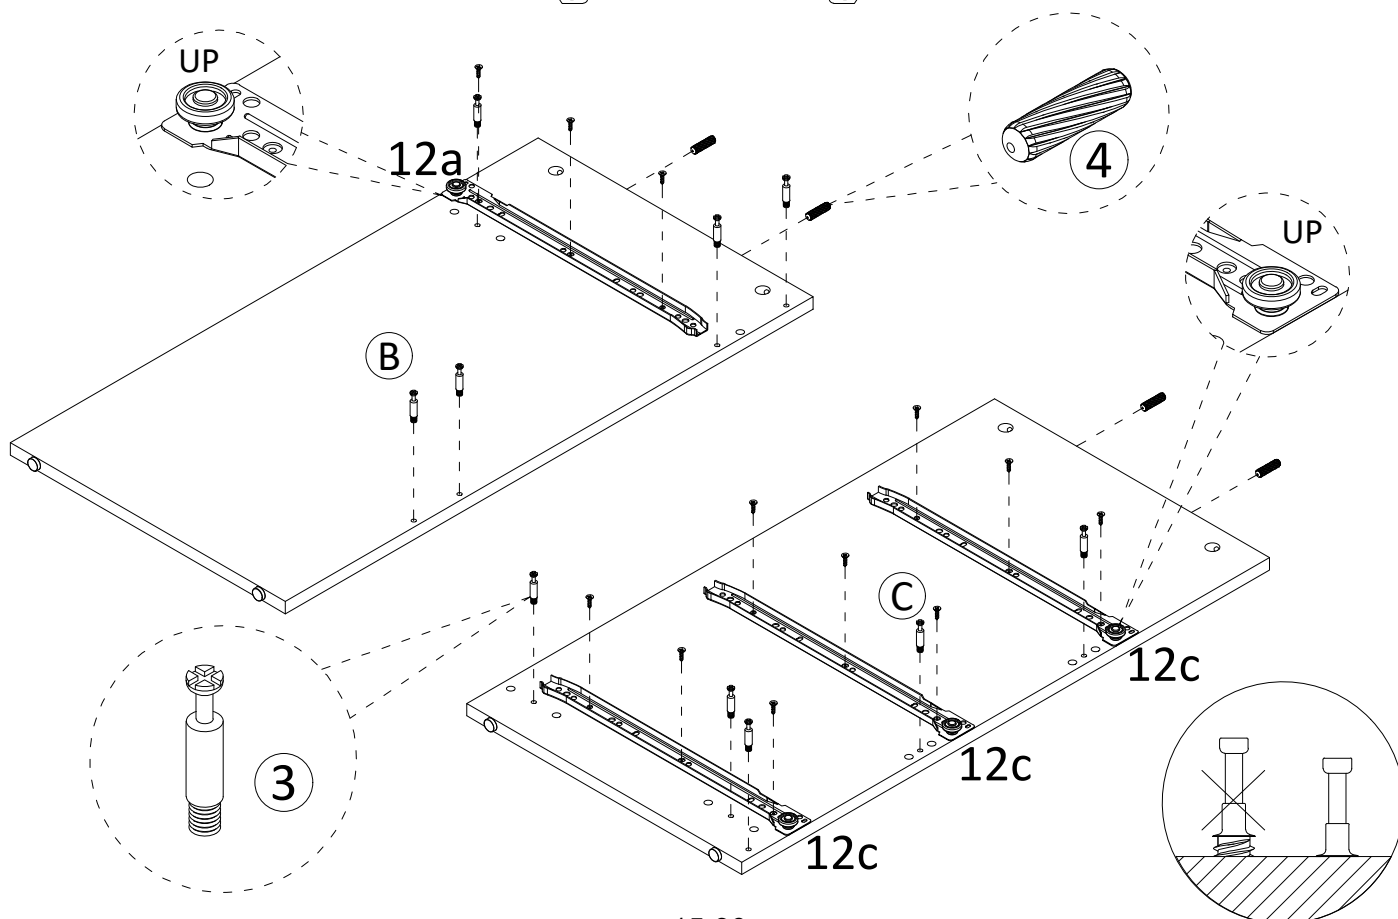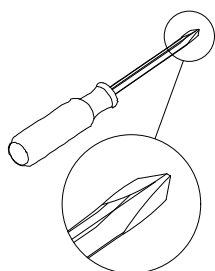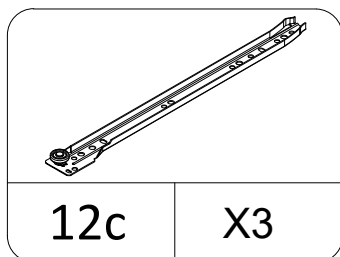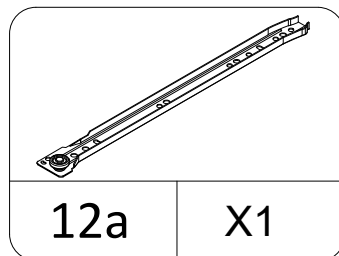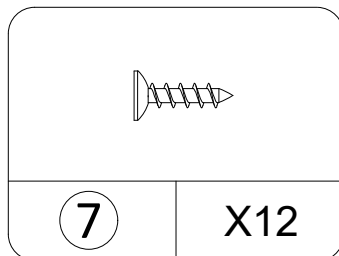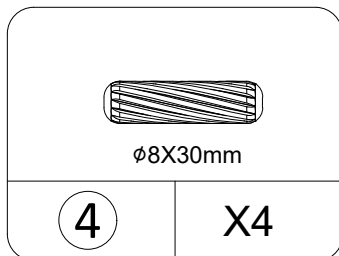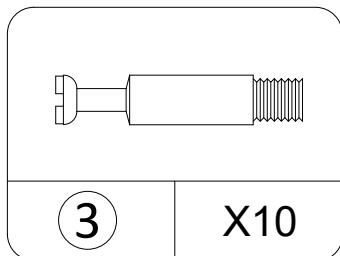

STEP7

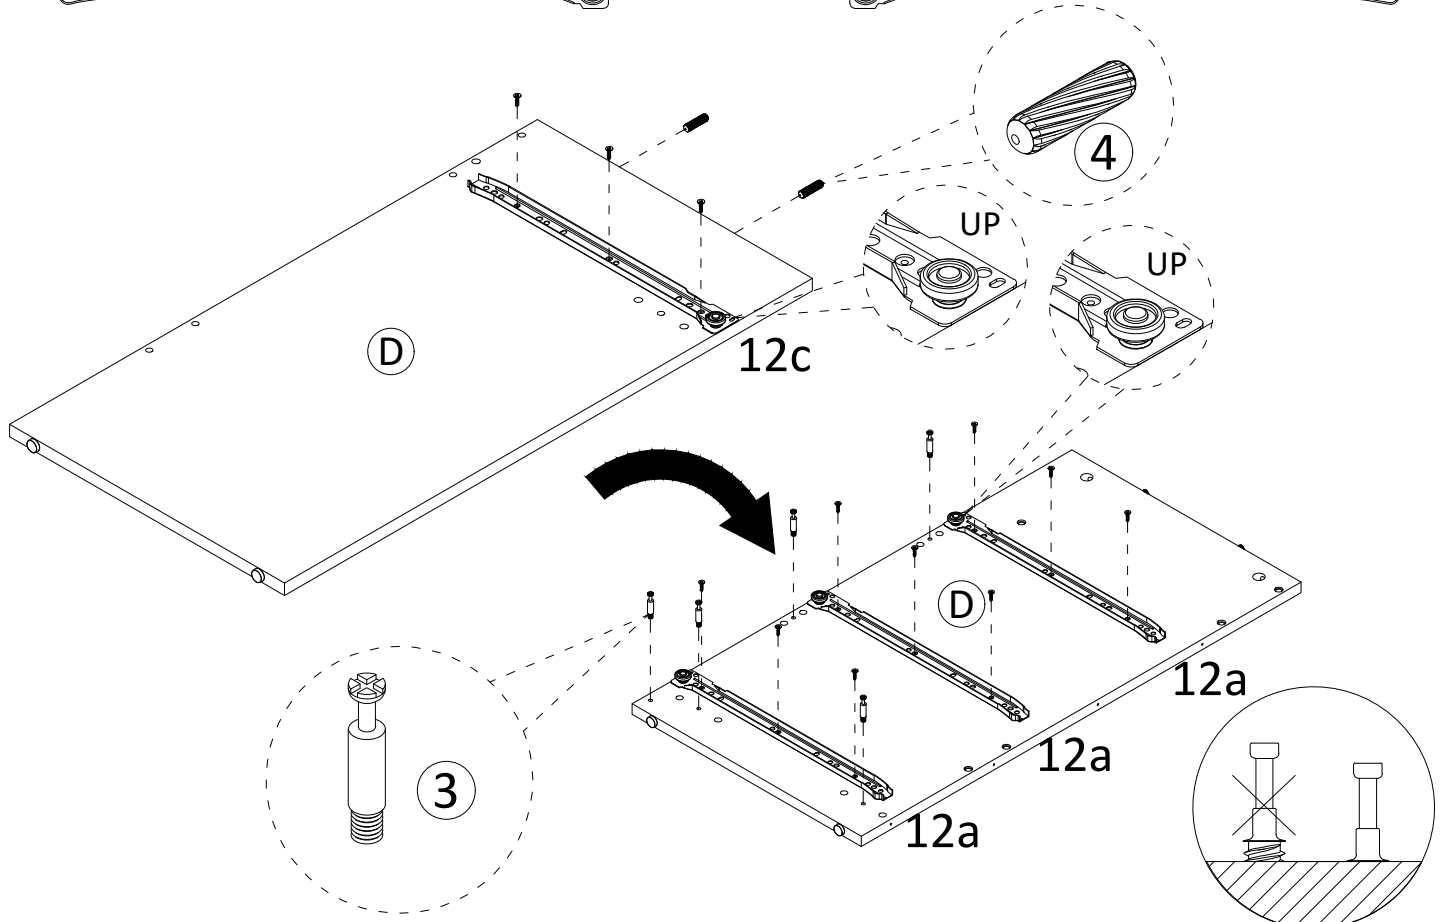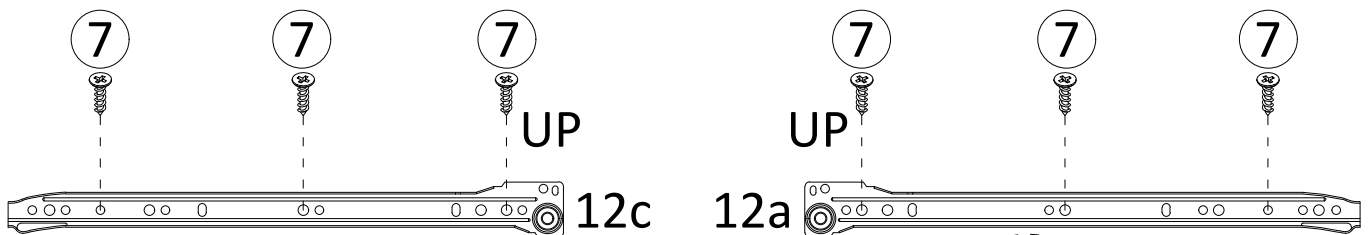
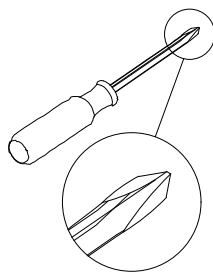
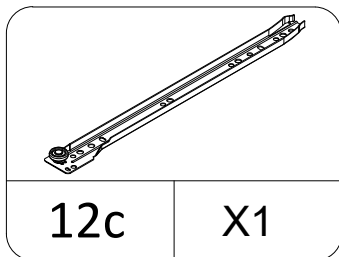
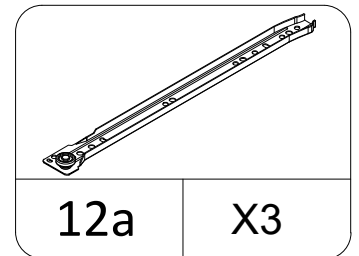
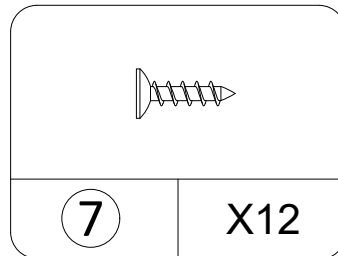
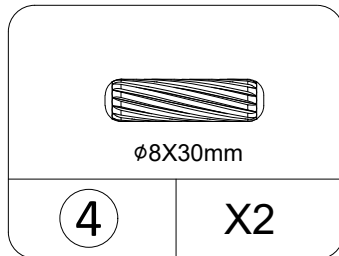
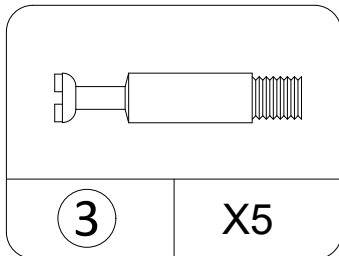


STEP8

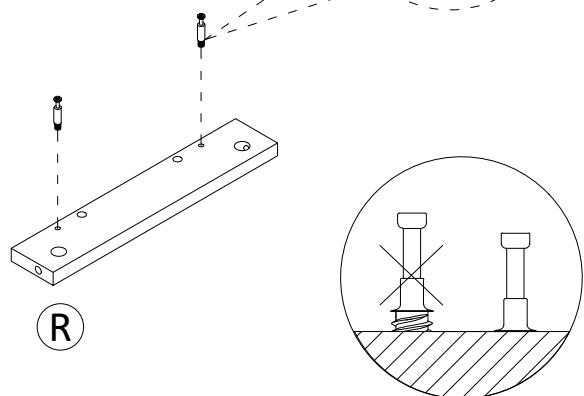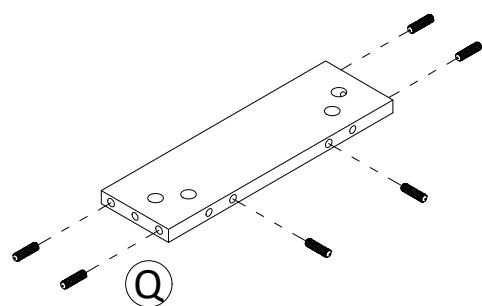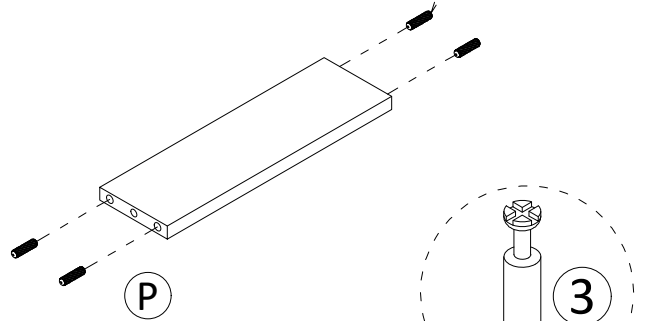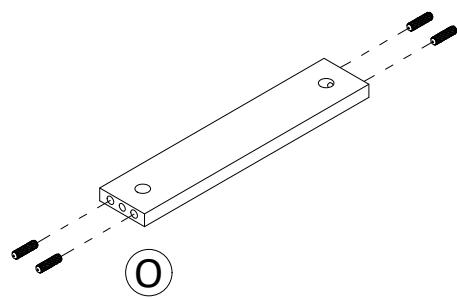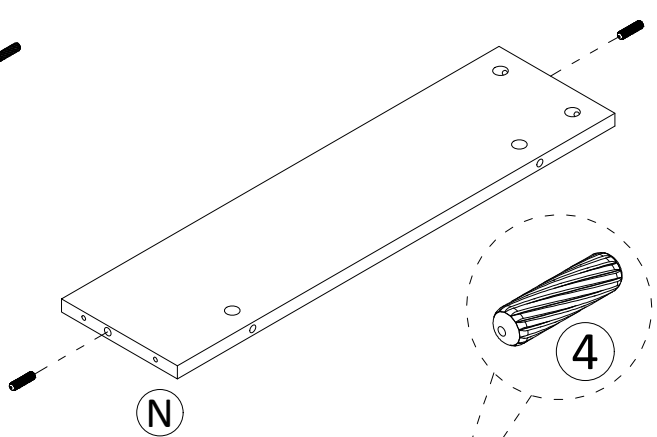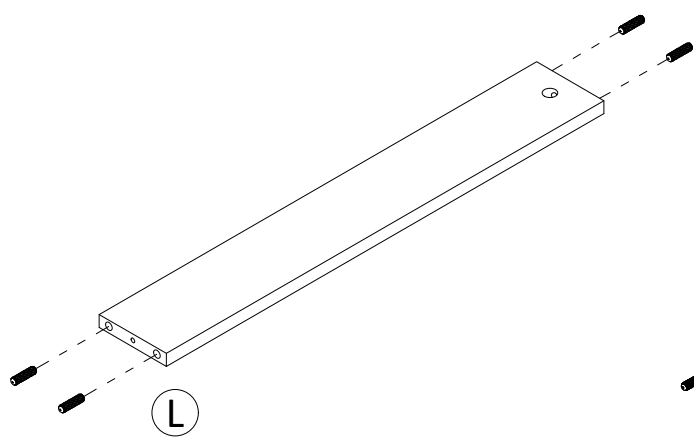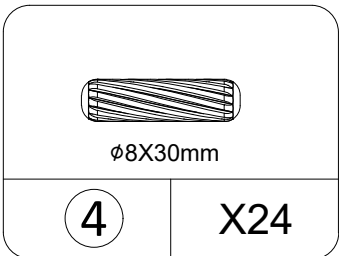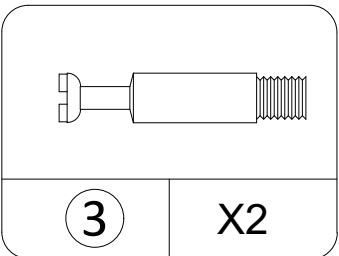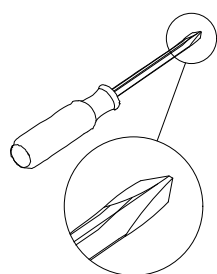


O x 2

STEP9

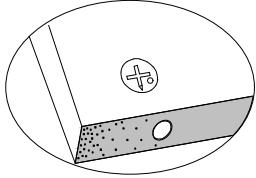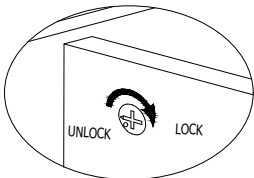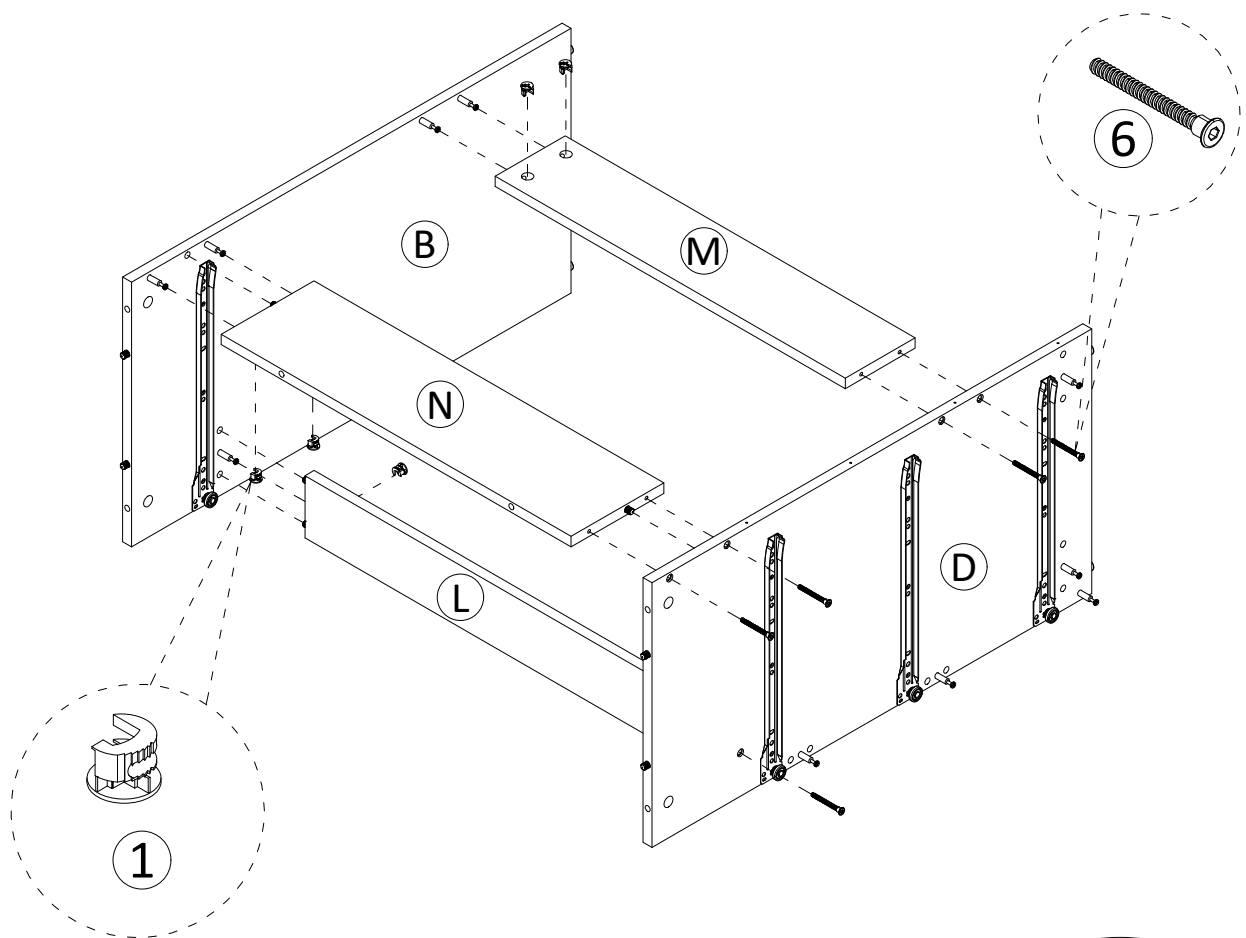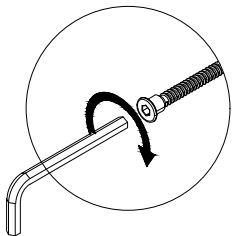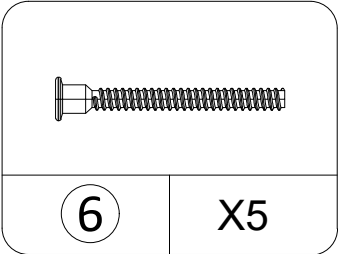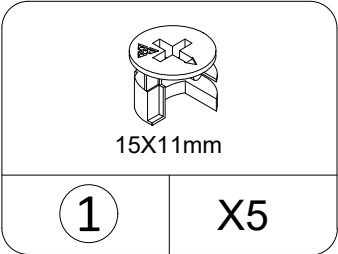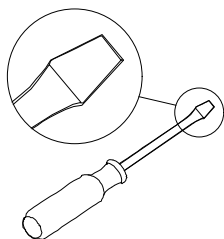






Proper orientation of CAM LOCK

STEP10

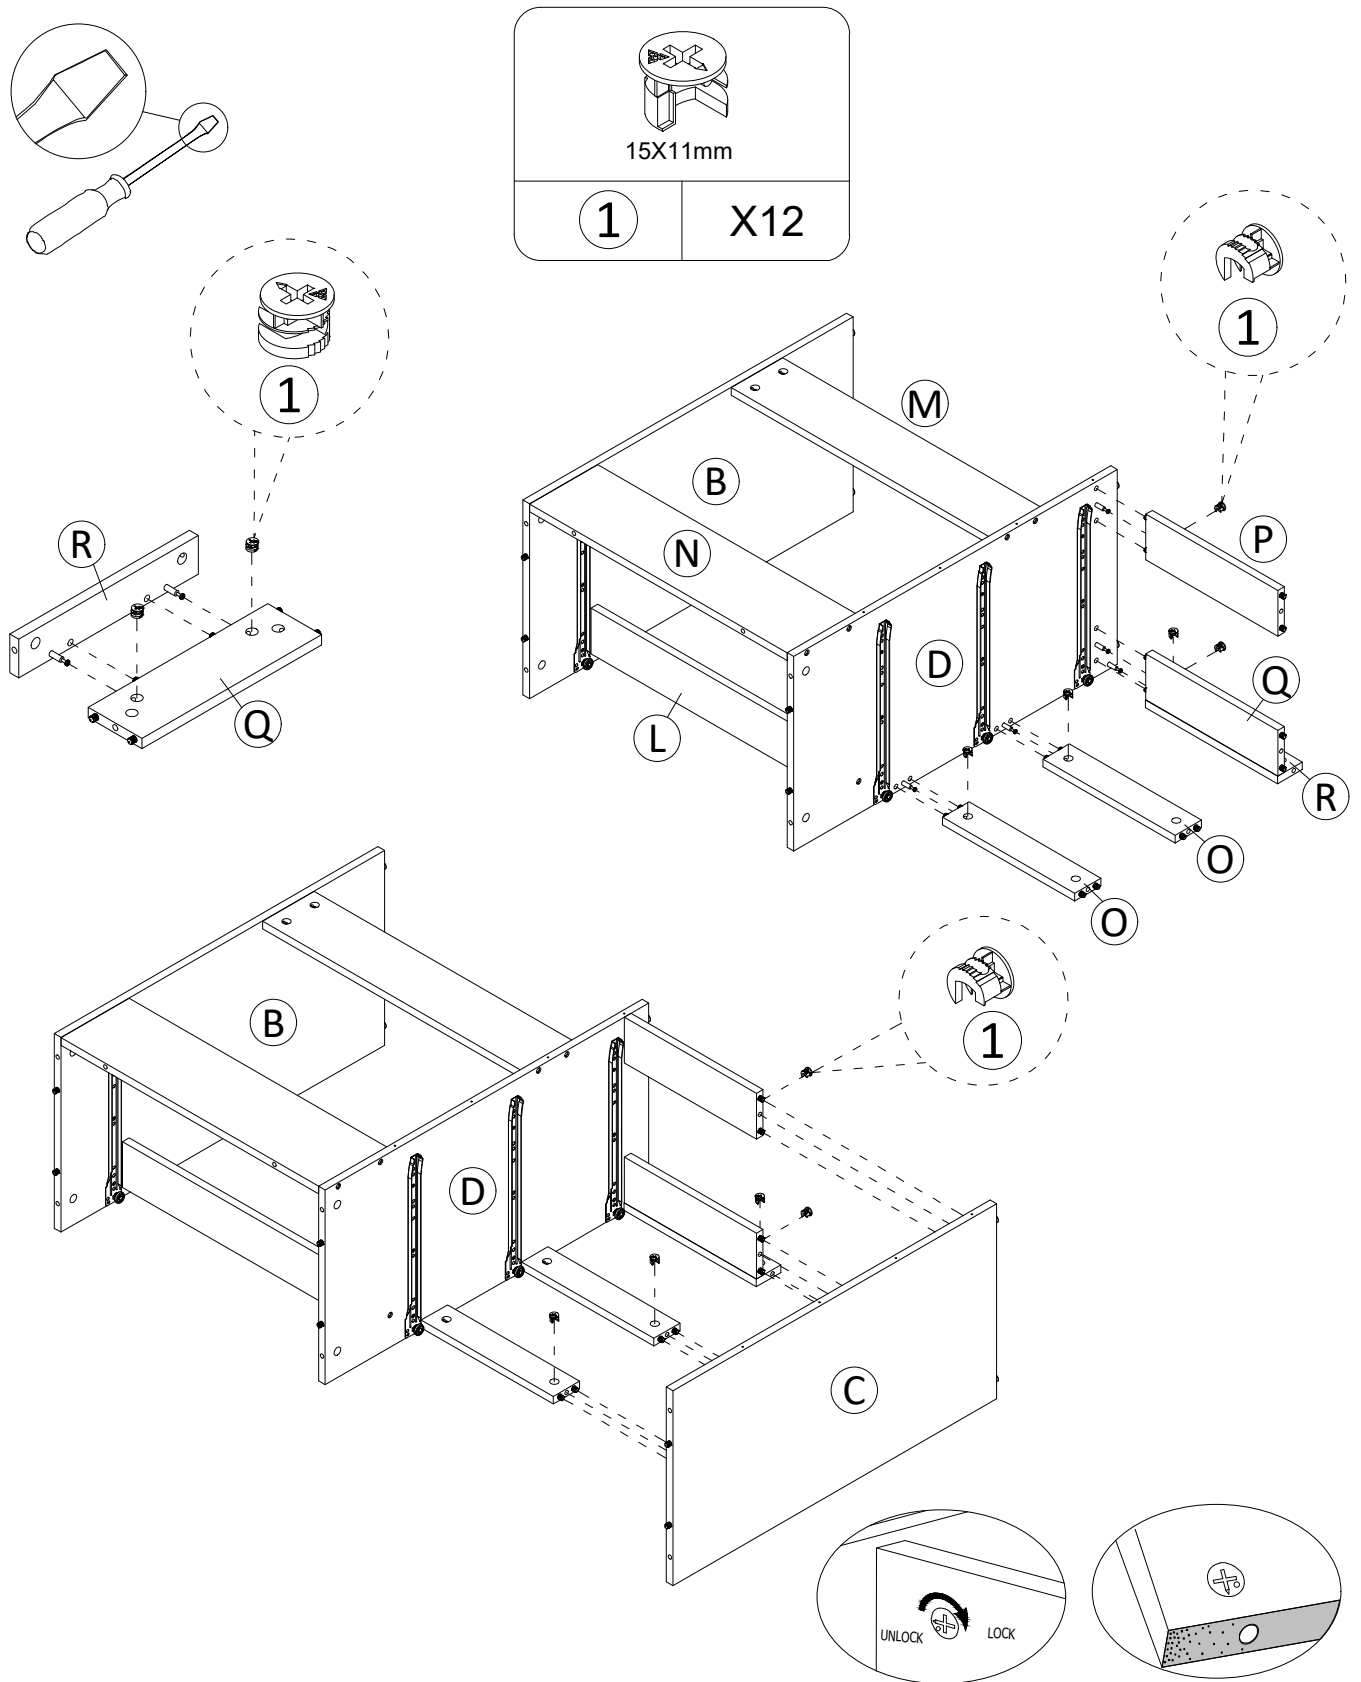


Proper orientation of CAM LOCK

STEP11

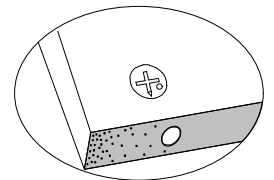
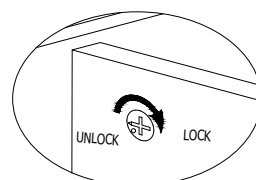
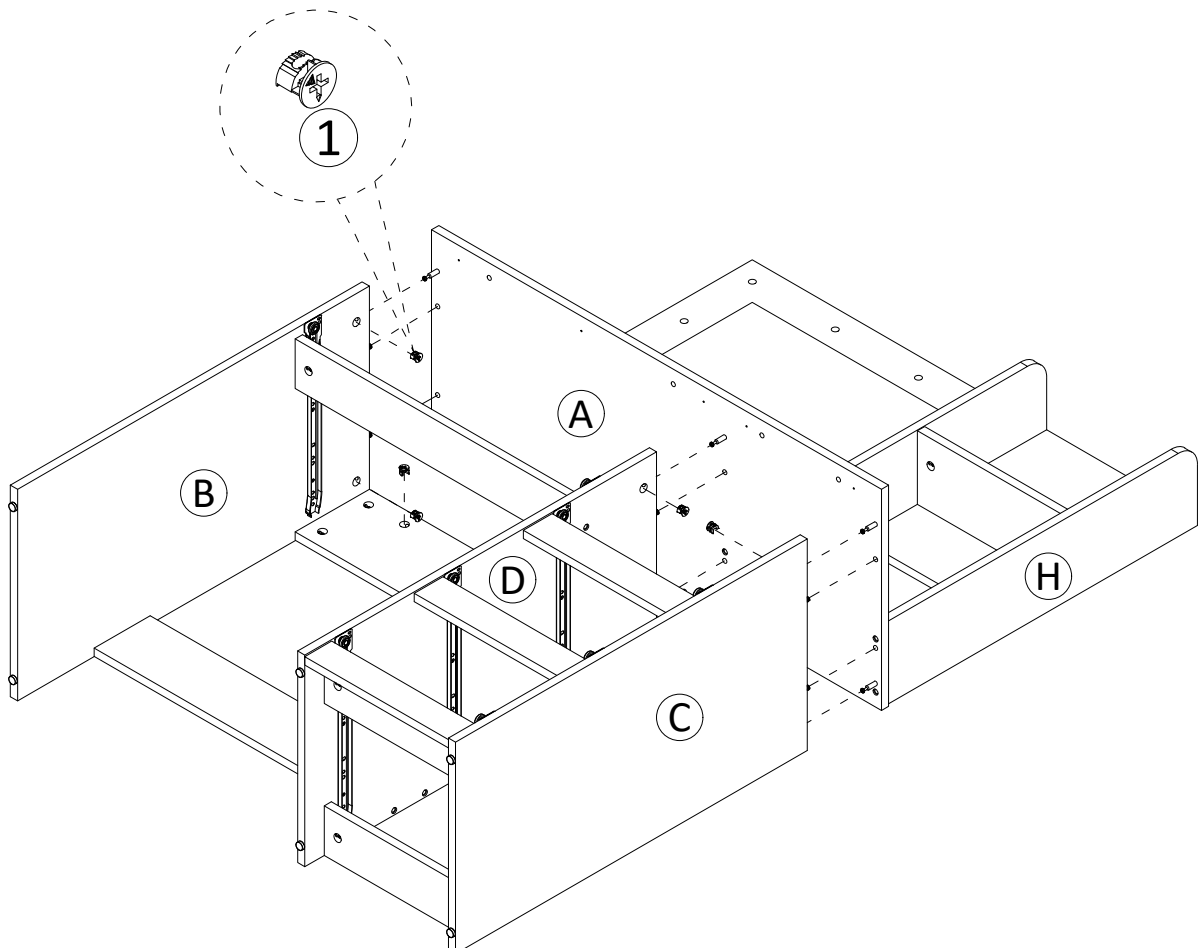
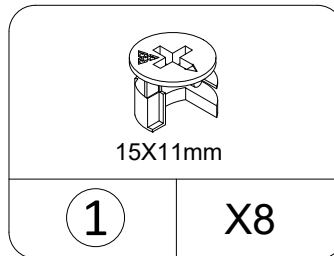
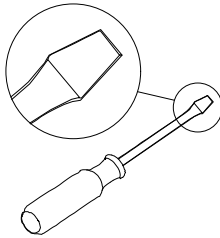


Proper orientation of CAM LOCK

STEP12

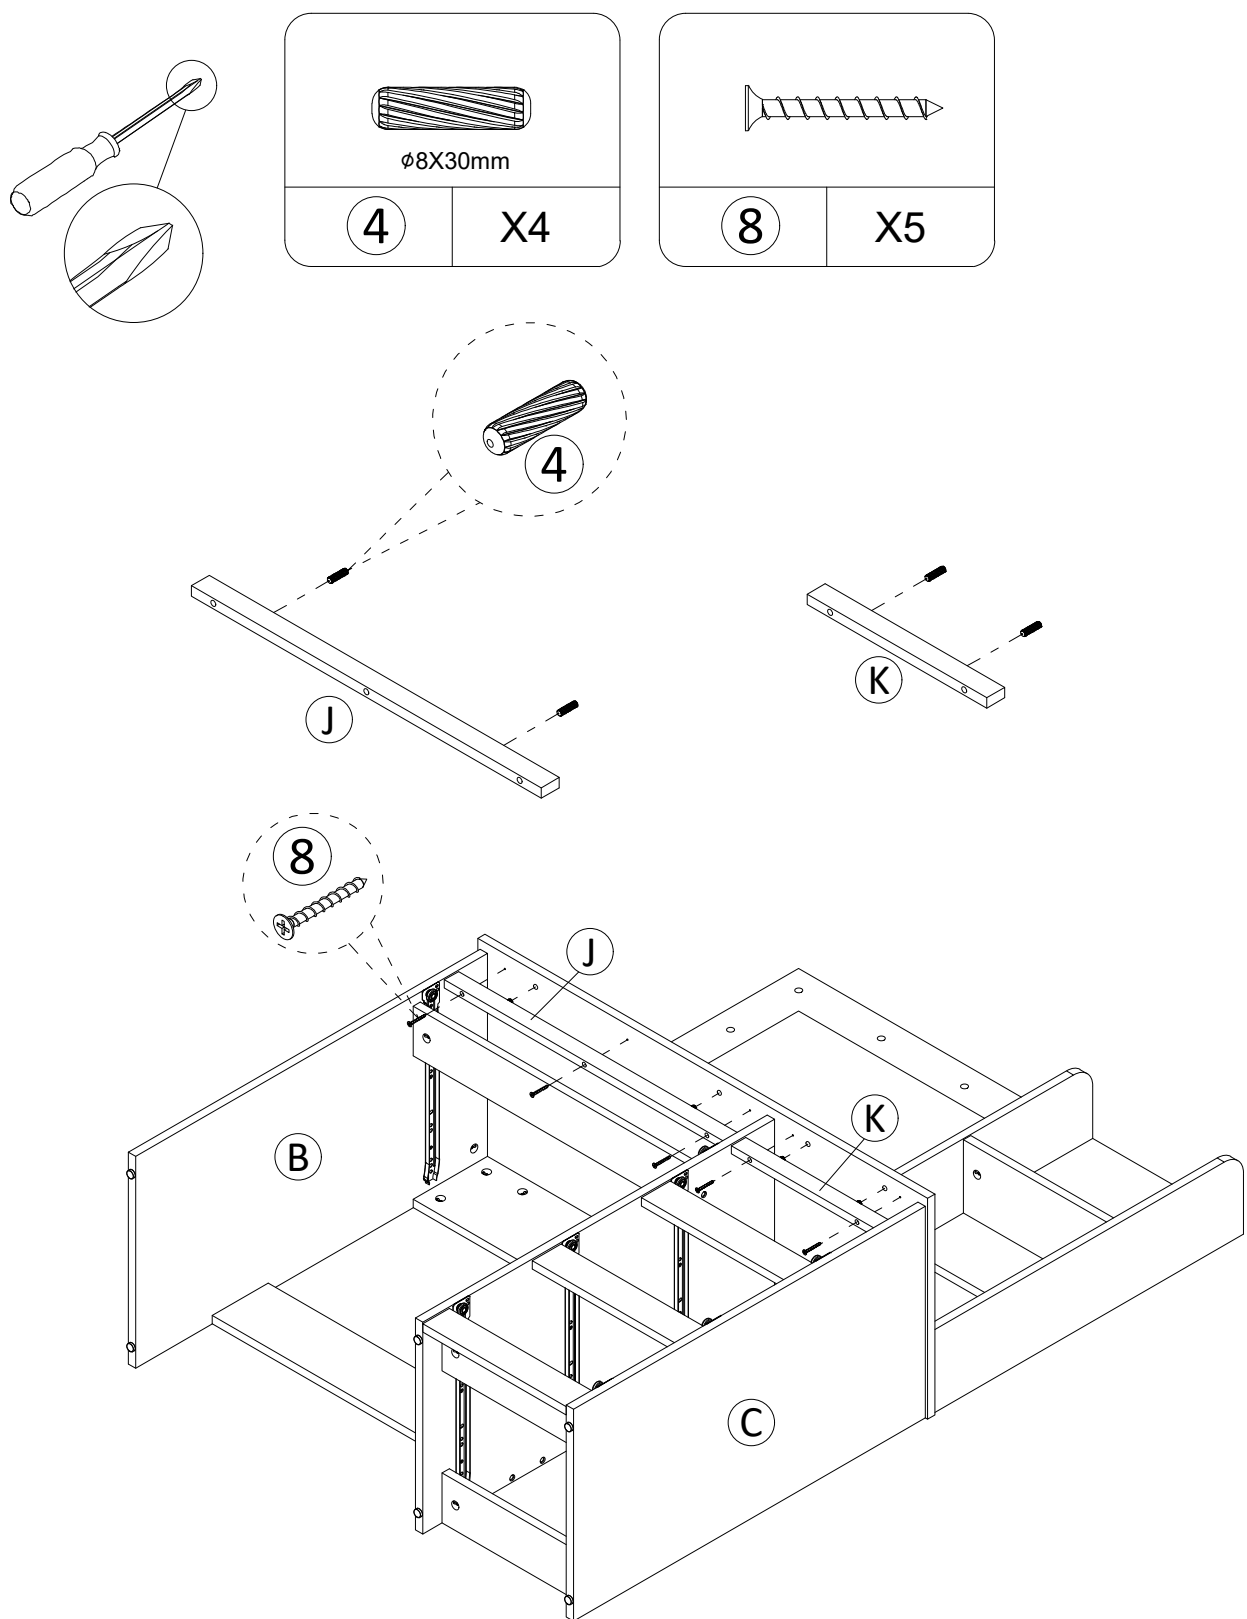


STEP13

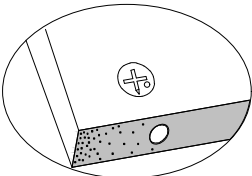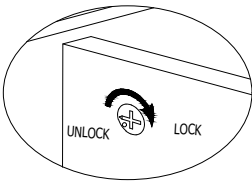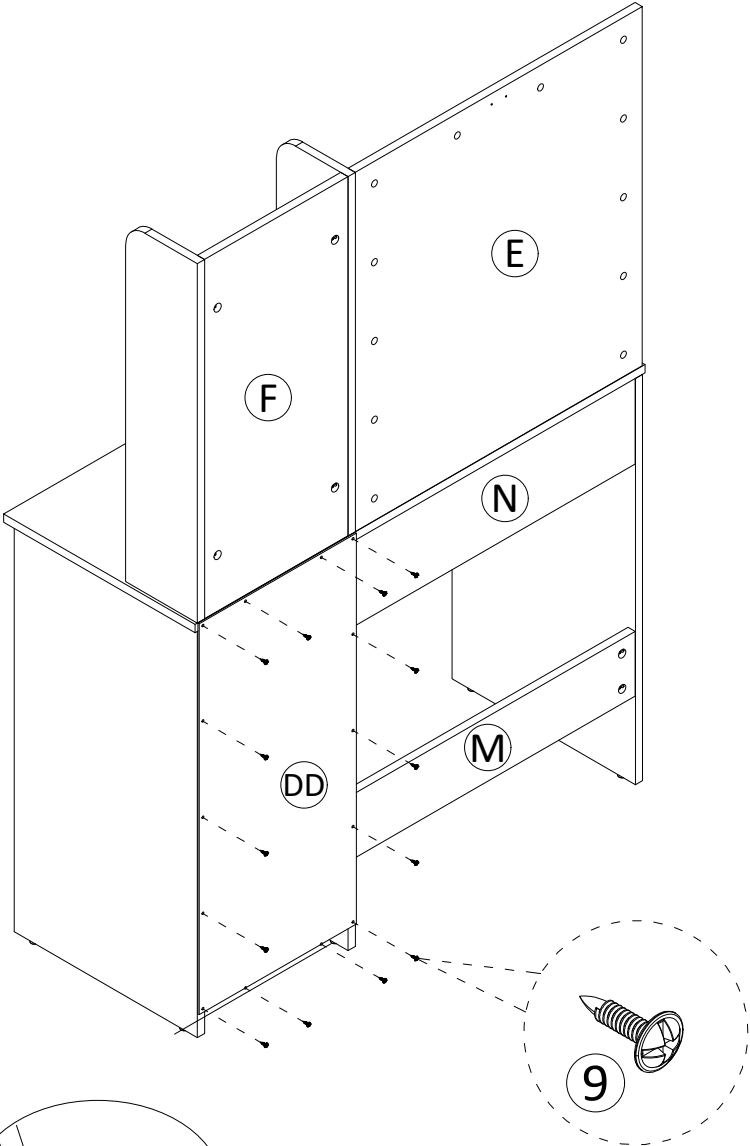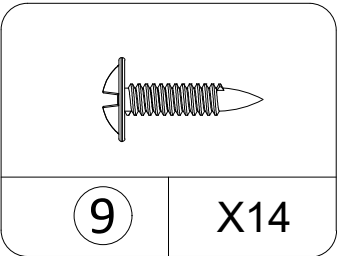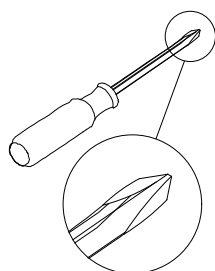


Proper orientation of CAM LOCK


STEP14

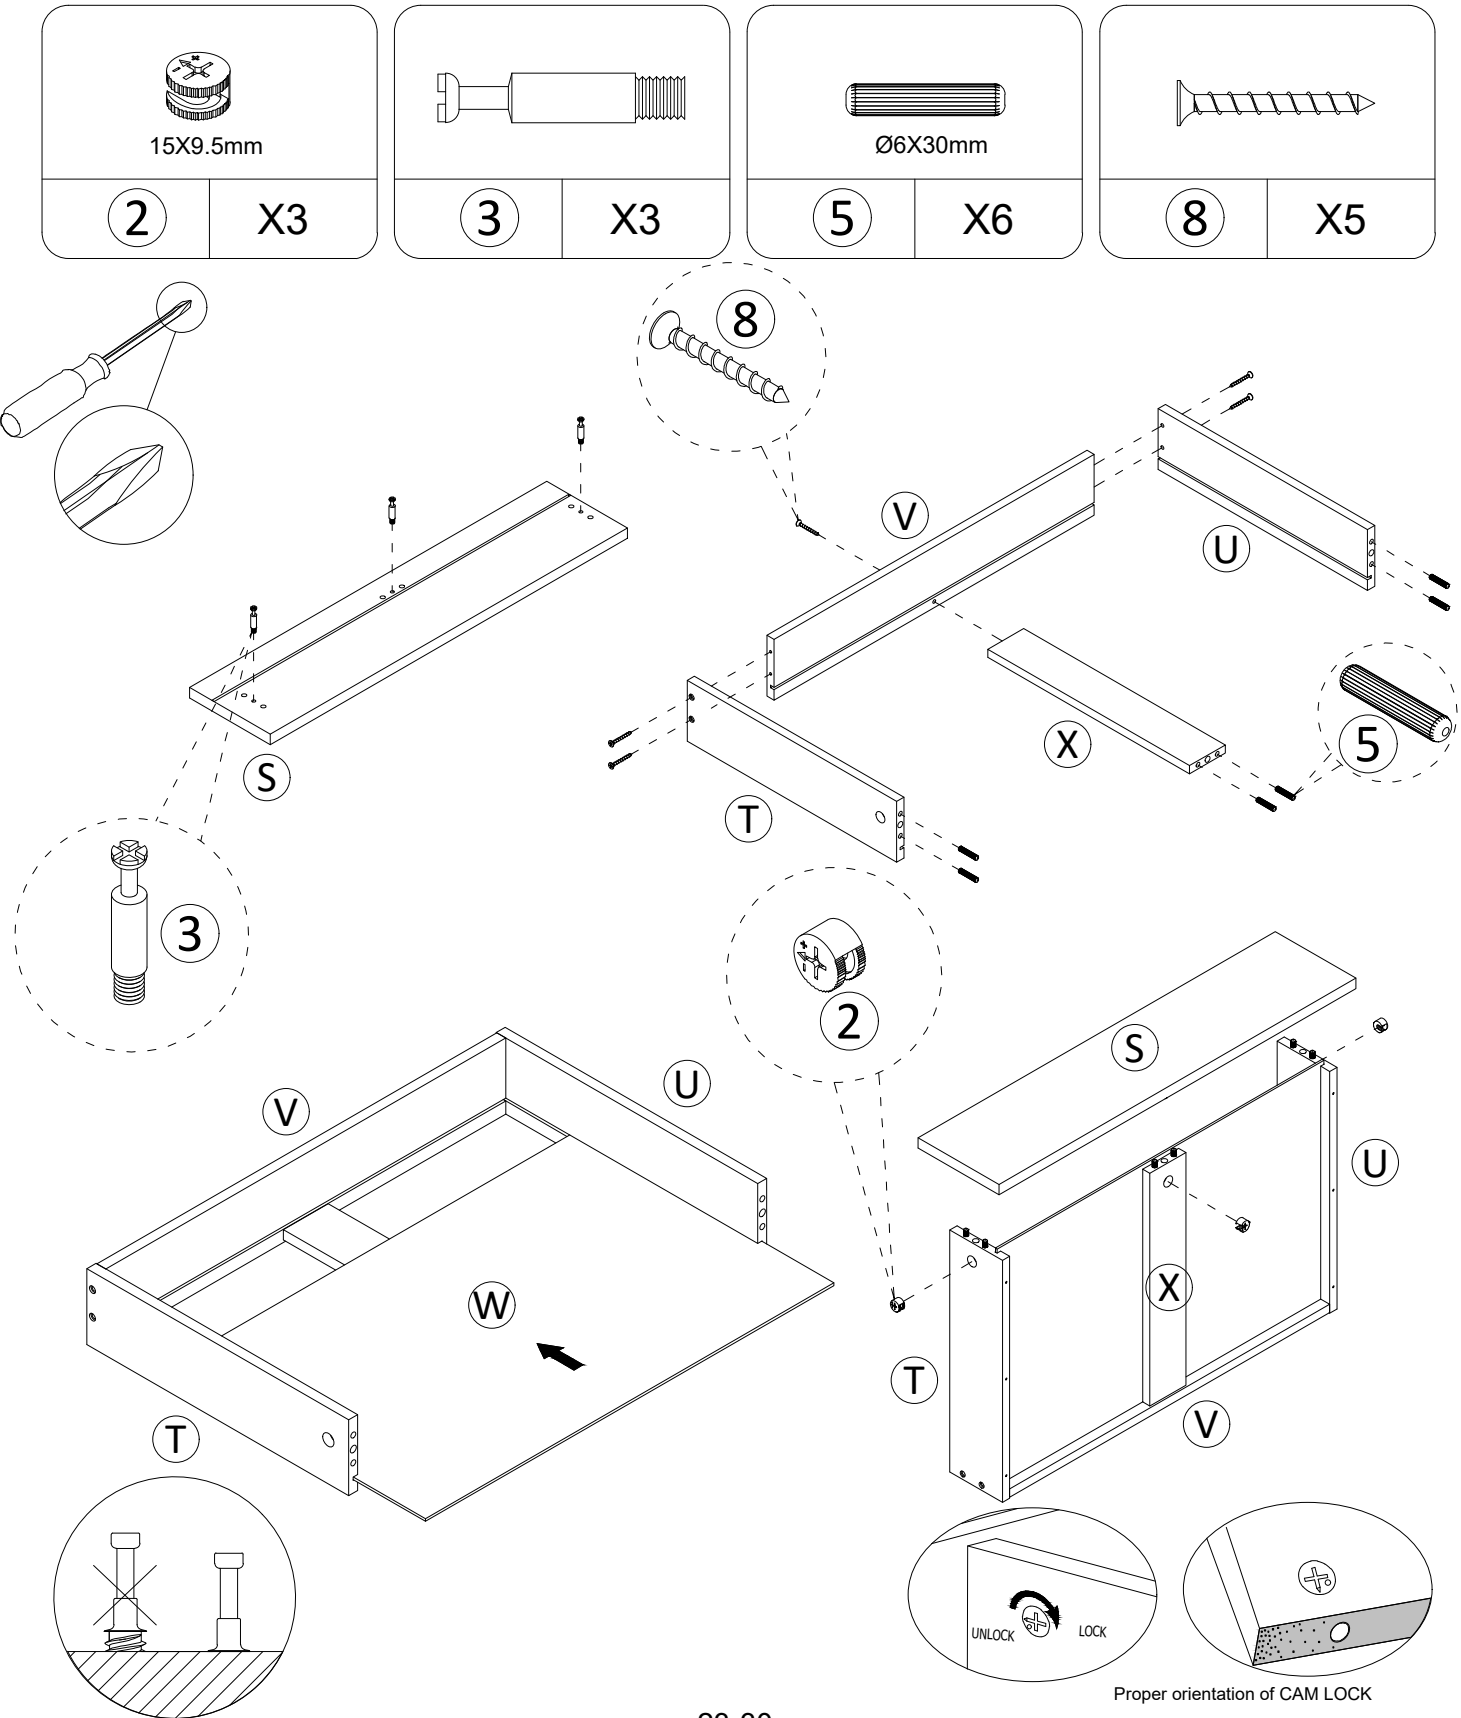



Proper orientation of CAM LOCK





STEP15

 15X9.5mm	
2	X12

	
3	X12






 Ø6X30mm	
5	X12

	
8	X12

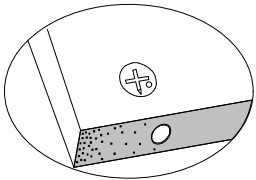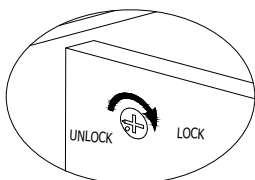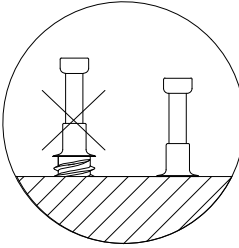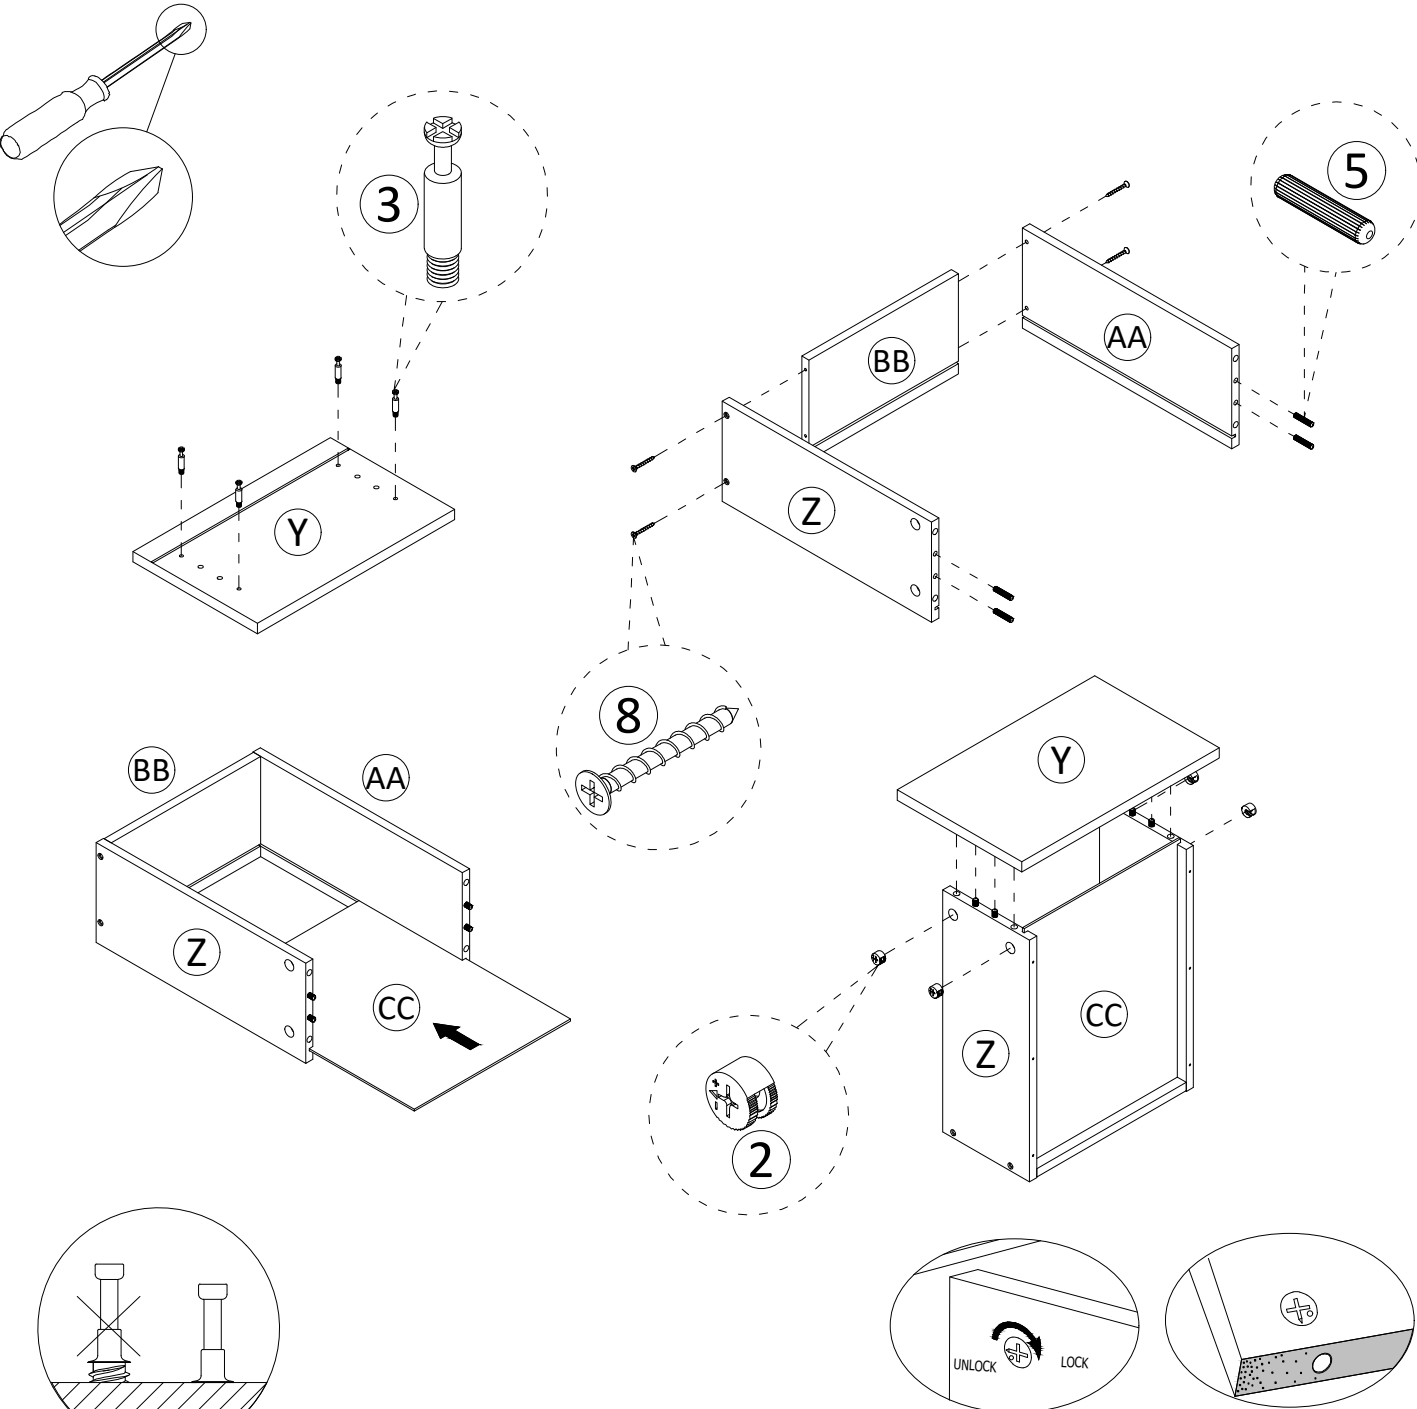


Proper orientation of CAM LOCK


STEP16

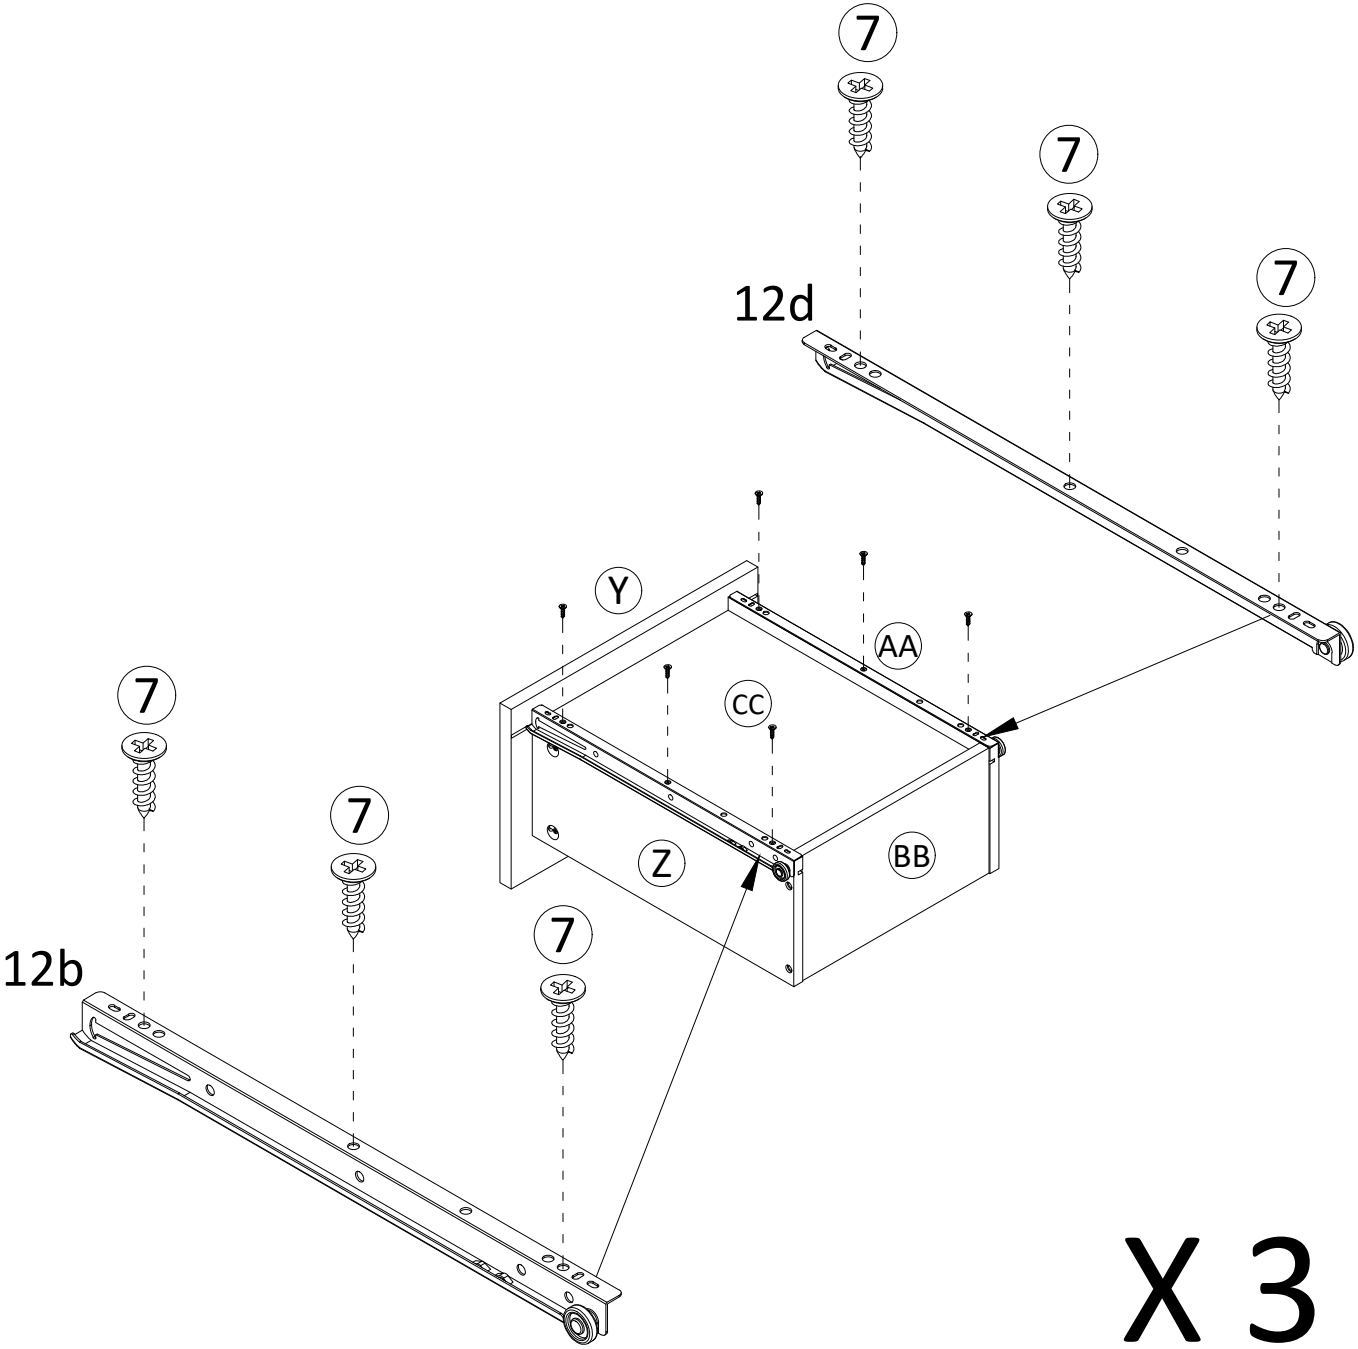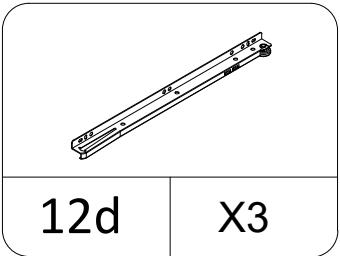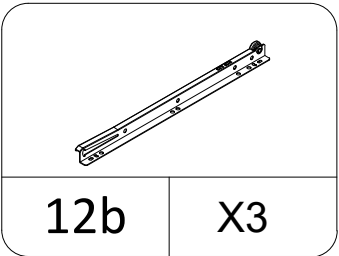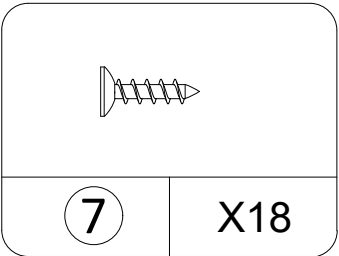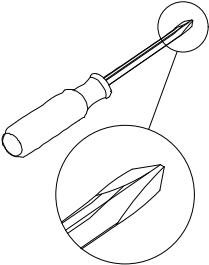


STEP17

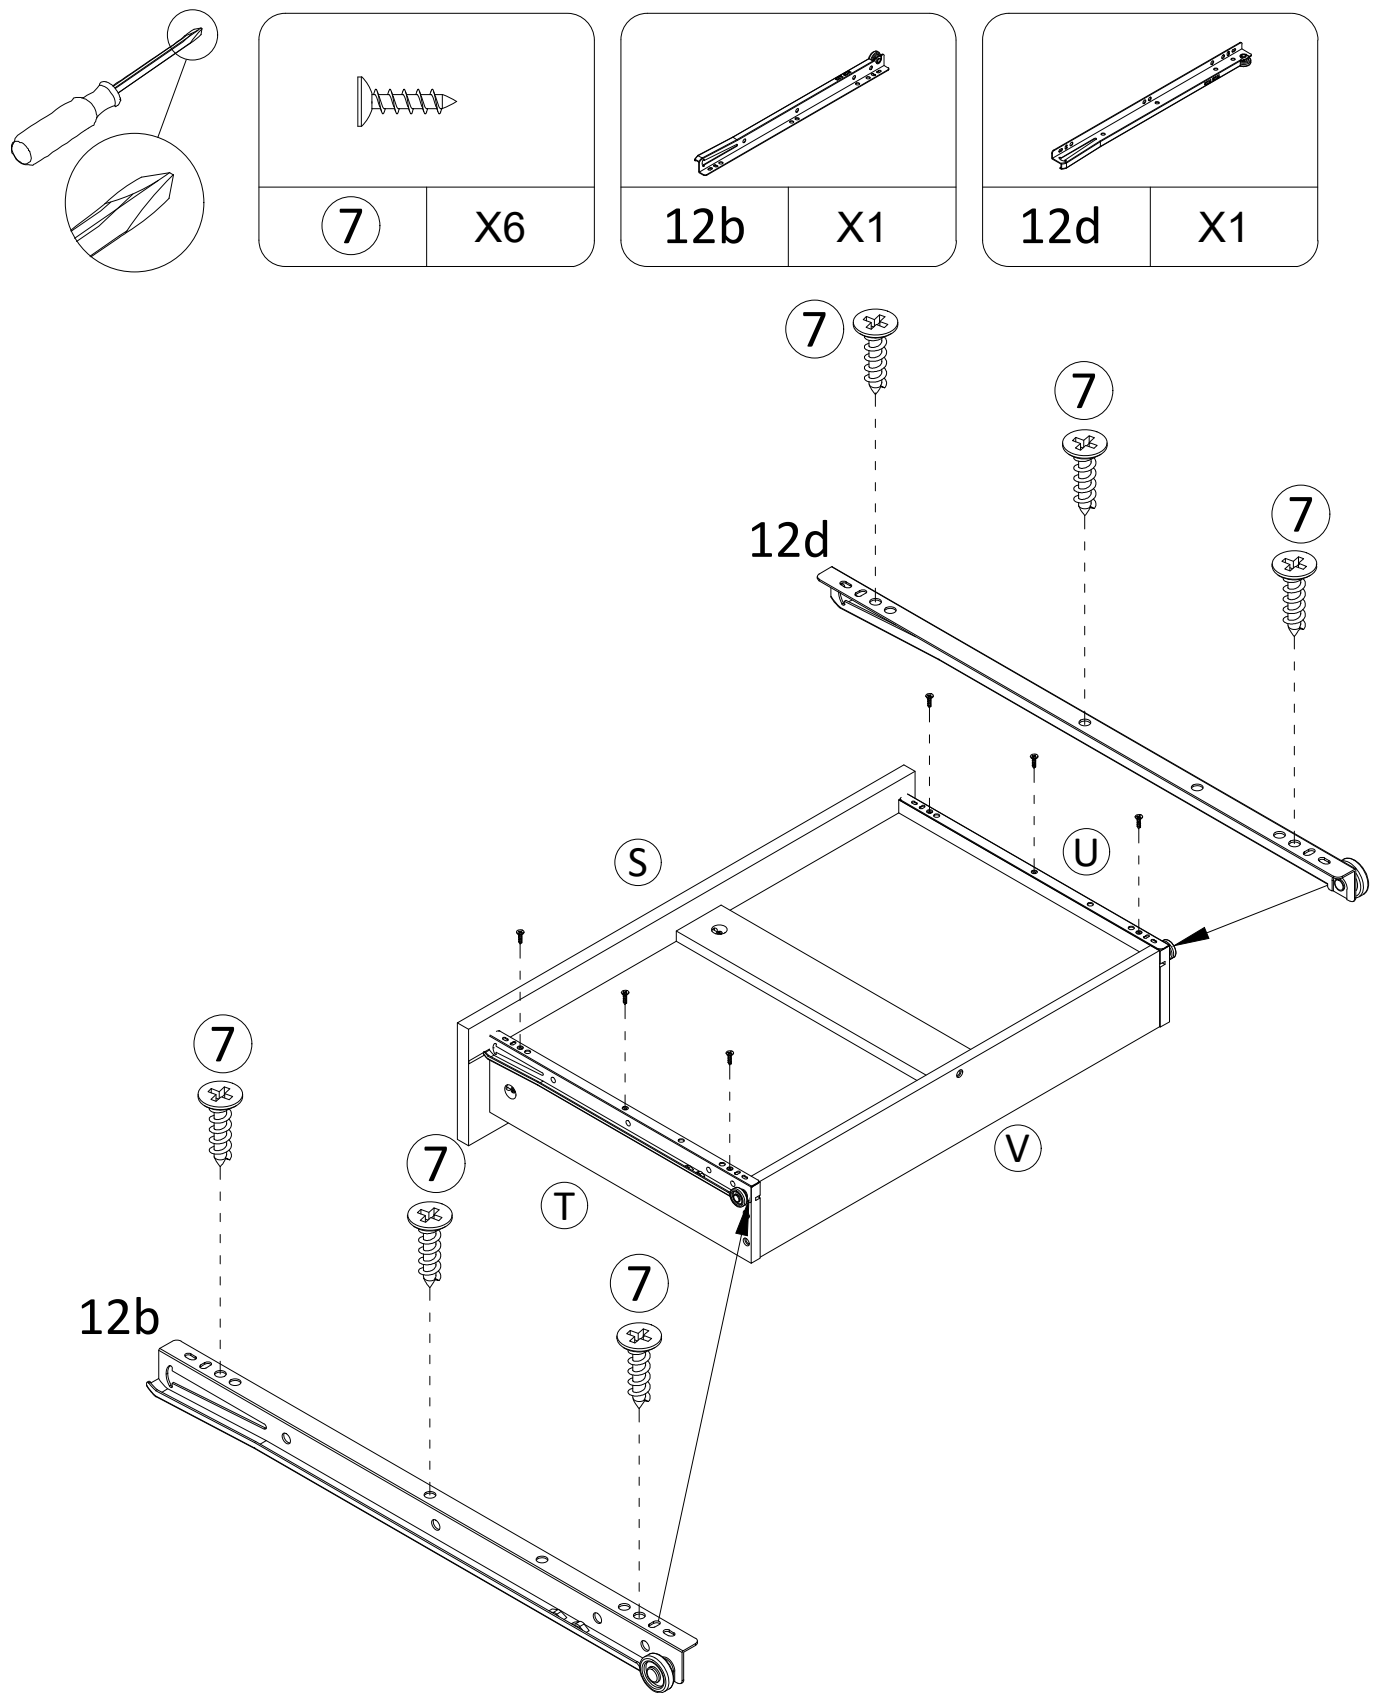


STEP18

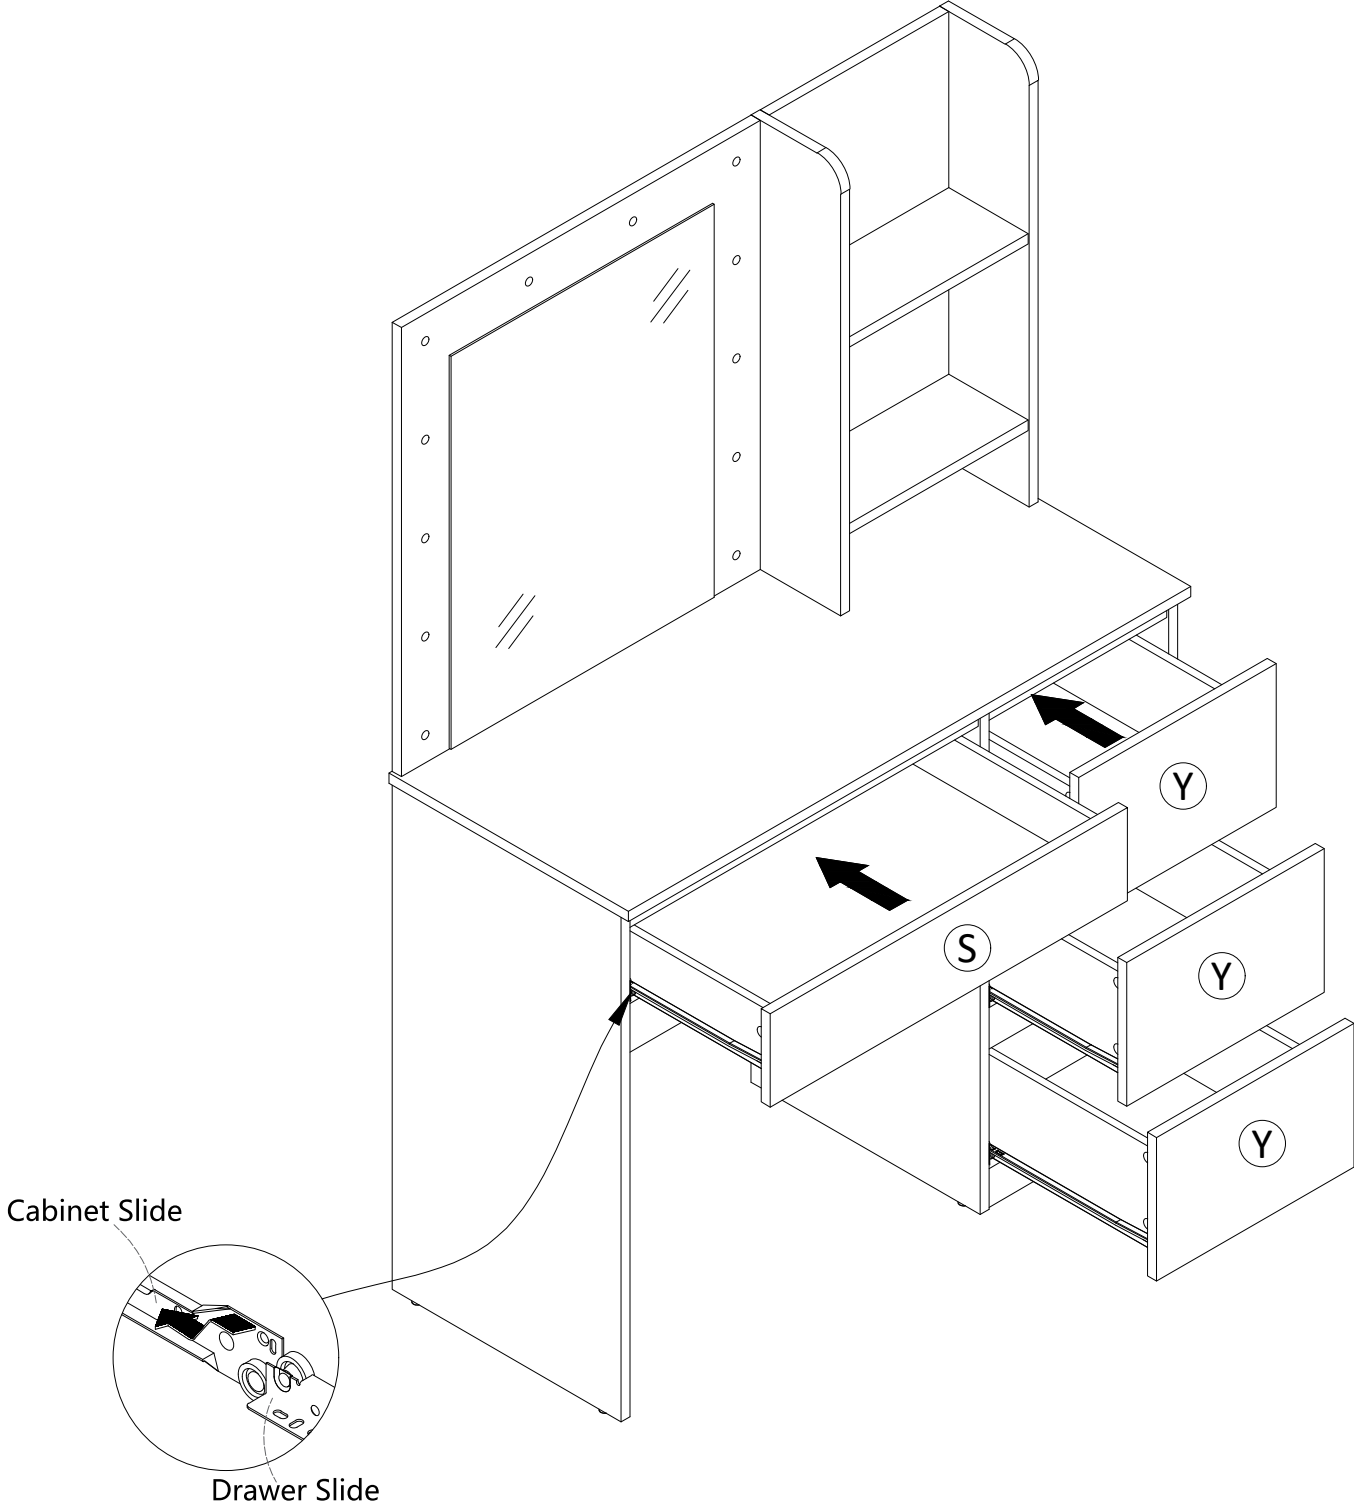


STEP19

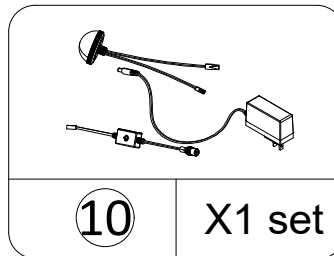


1. Insert the bulb wire into the corresponding hole in the frame and stick the bulb on the frame, finally connect the corresponding color line of the bulb.
2. You can turn on or off the light, or long press the switch button to adjust the perfect light and light color to provide brightness in preparation for makeup.

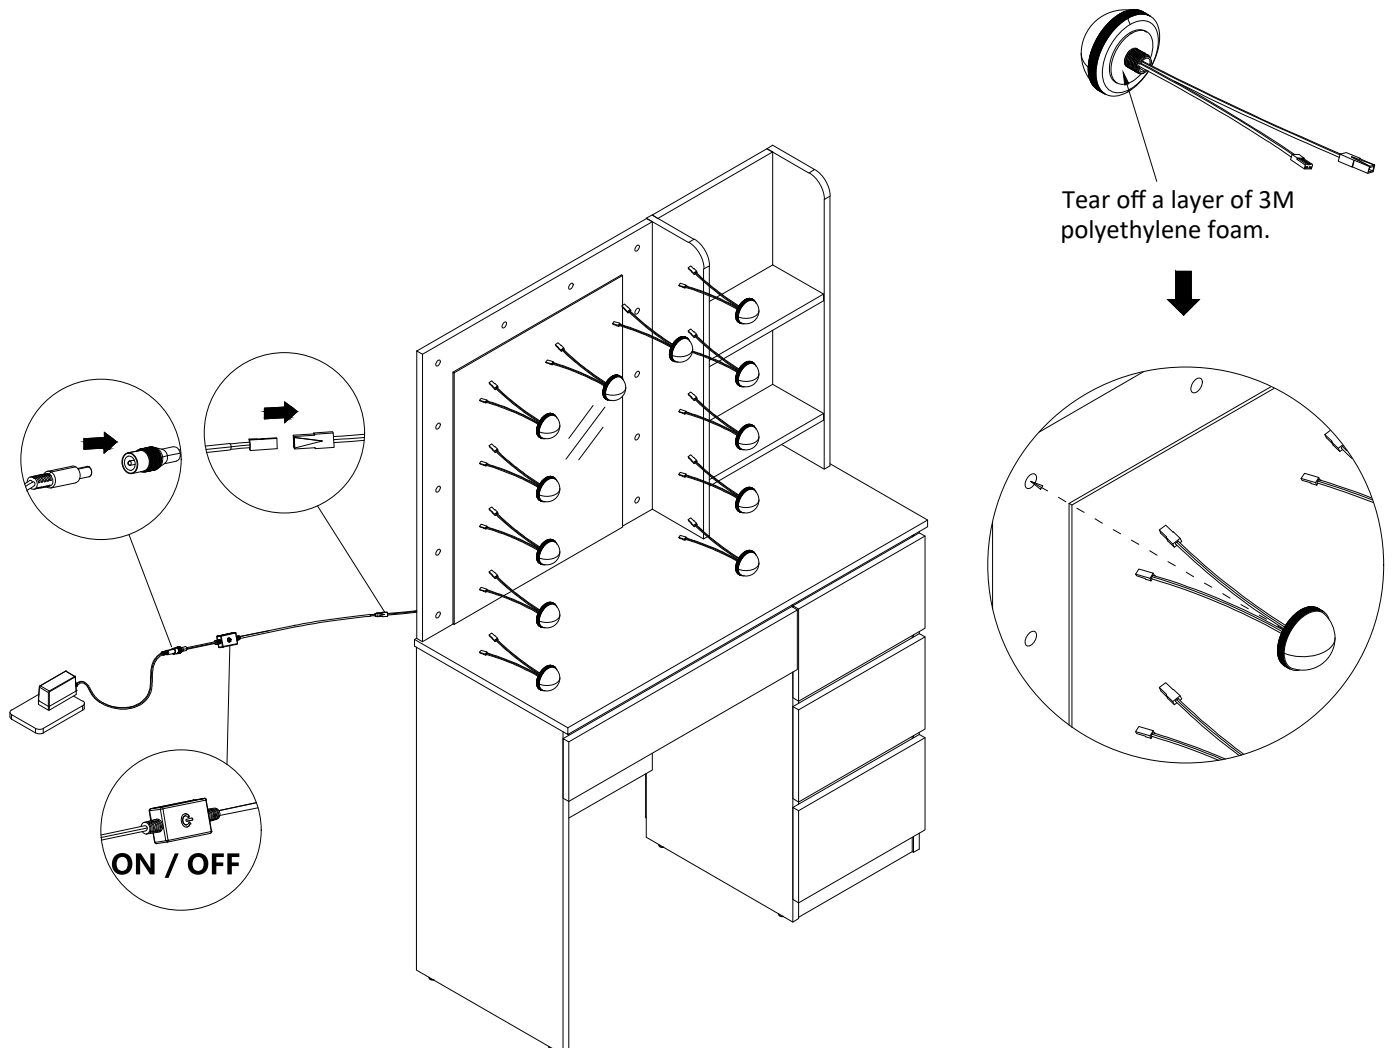

STEP20

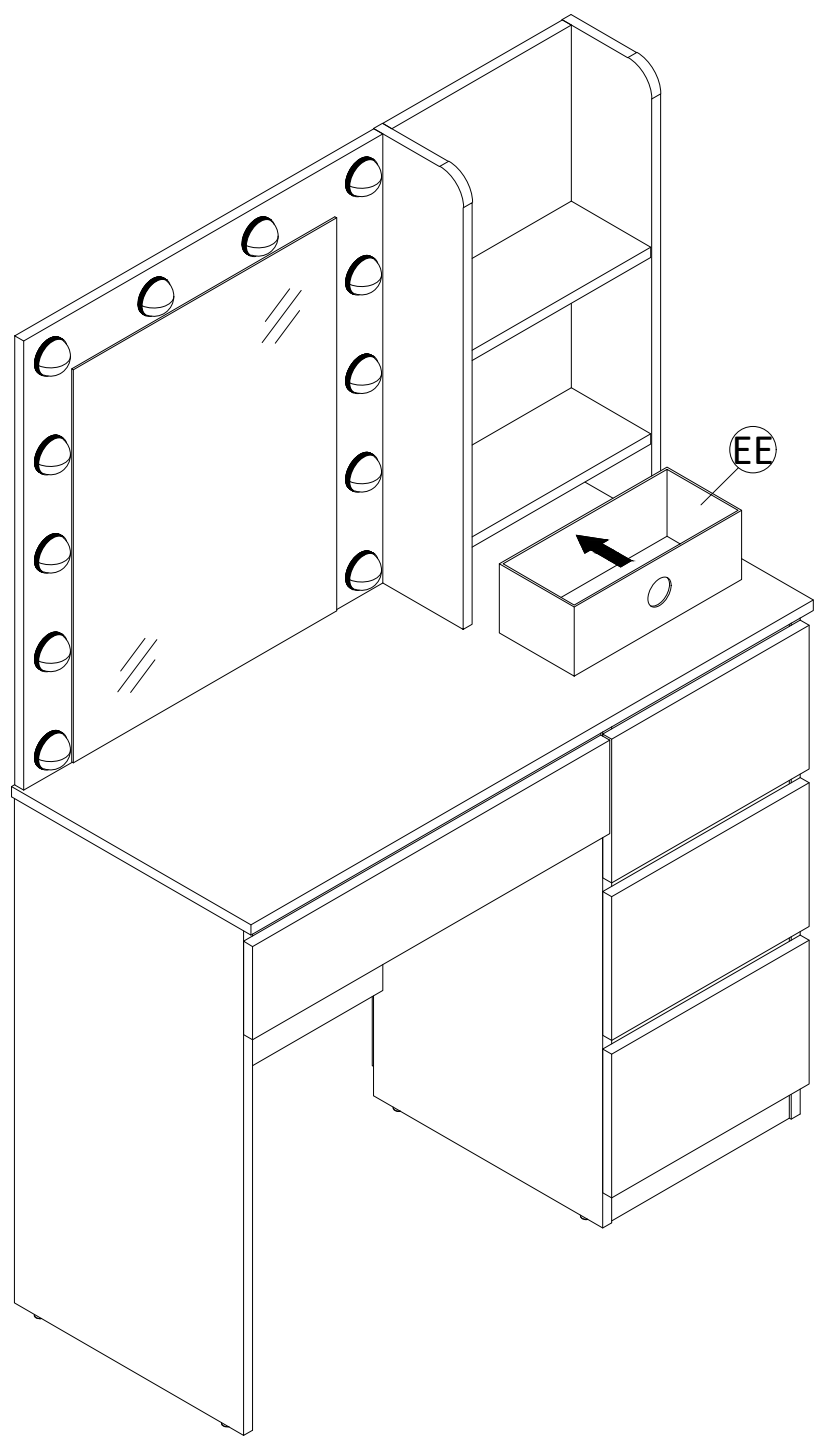

STEP21

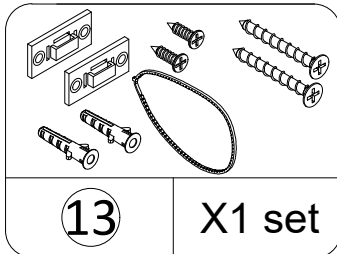


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.




NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Install the tipping restraint hardware

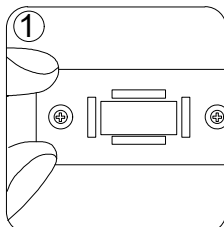


make mark on the wall

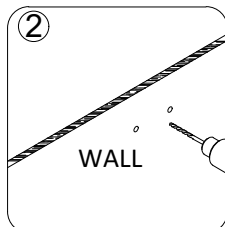


drill two Ø6 holes on the wall

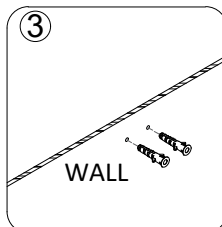

put two anchors in the holes

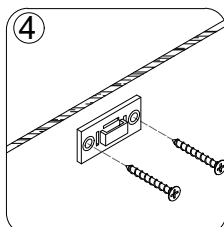

fix the device on the wall by the long screws

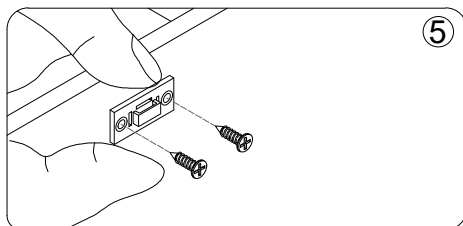

fix the device on the back of cabinet by short screws

