


ASSEMBLY INSTRUCTIONS

EEI-6399

V1.10.03.22

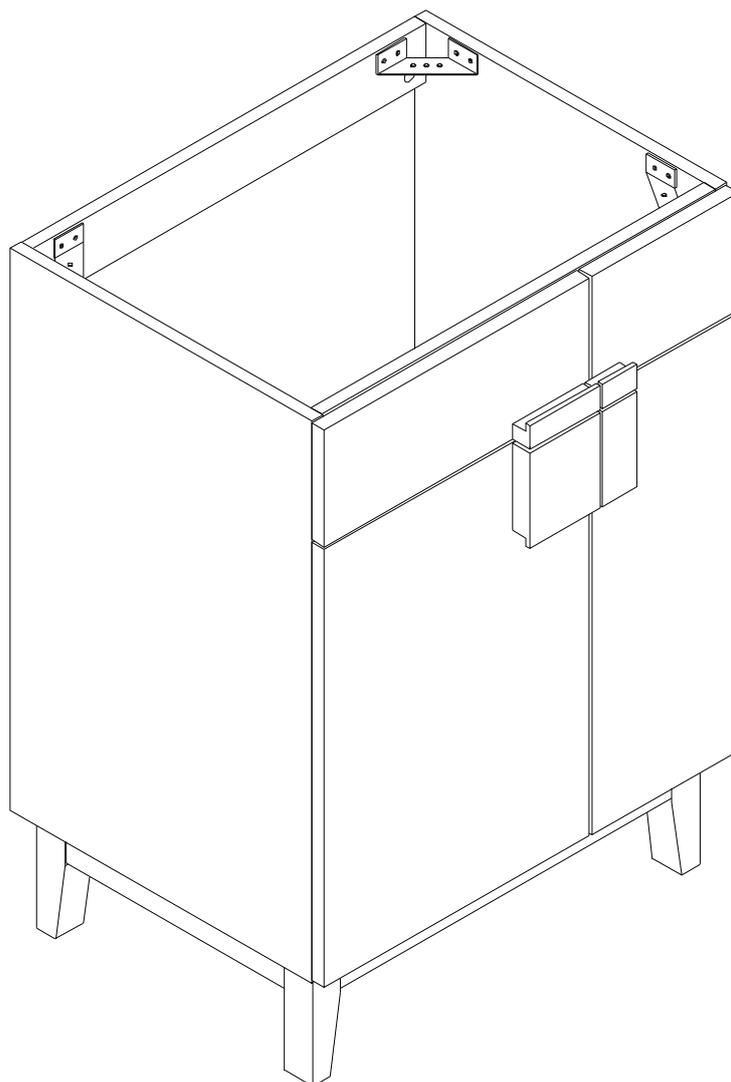

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.


For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Left Side Panel	x1	9	Front Panel 1	x1
2	Right Side Panel	x1	10	Front Panel 2	x1
3	Bottom Panel	x1	11	Door Panel Left	x1
4	Back Panel 1	x1	12	Door Panel Right	x1
5	Back Panel 2	x1	13	Wooden Leg	x4
6	Front Support	x1			
7	Shelf Panel	x1			
8	Shelf Back Rail	x2			

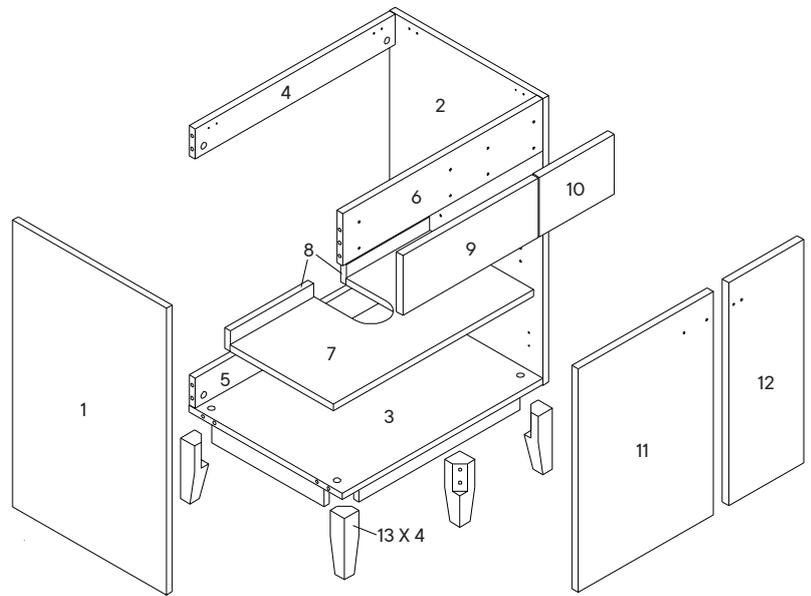

Provided hardware:

A		Wood Dowel M8 x 25mm	x12	H		Door Hinge	x4	O		Handle	x1
B		Cam Bolt Ø6 x 24mm	x10	I		Screw 4 x 30mm	x4	P		Handle	x1
C		Cam Lock Ø15	x10	J		Screw 6 x 50mm	x8	Q		Corner Bracket	x4
D		Screw 9 x 38mm	x4	K		Lock Washer	x8	R		Screw Cap	x6
E		Screw 8 x 30mm	x8	L		Flat Washer	x8				
F		Shelf Support	x4	M		Hex Wrench	x1				
G		Screw 4 x 14mm	x40	N		Rubber Pad	x4				

What you need:

Phillips Head Screwdriver

You may also need:

- + Power Drill
- + Level
- + Silicone Adhesive or Caulk
- + Drywall Anchors and Screws
- + Other Wall-Mounting Hardware

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Wood Dowel M8 x 25mm x12

COMPONENTS

- 3** Bottom Panel x1
- 4** Back Panel 1 x1
- 5** Back Panel 2 x1
- 6** Front Support x1

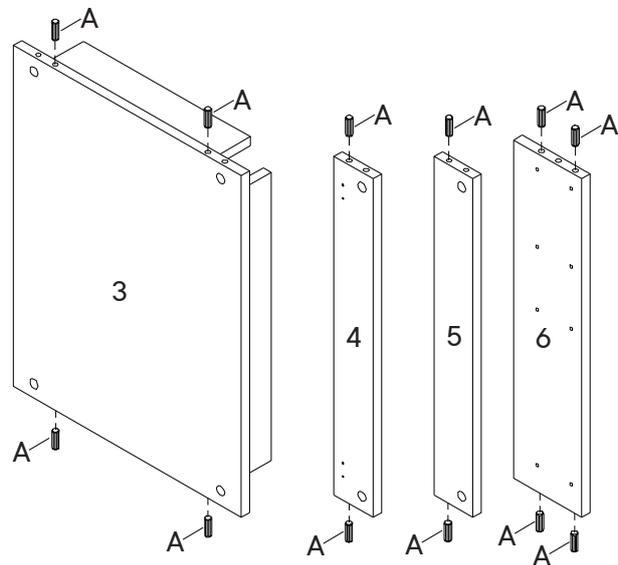


Step 2

HARDWARE

- B** Cam Bolt $\varnothing 6 \times 24\text{mm}$ x10

COMPONENTS

- 1** Left Side Panel x1
- 2** Right Side Panel x1

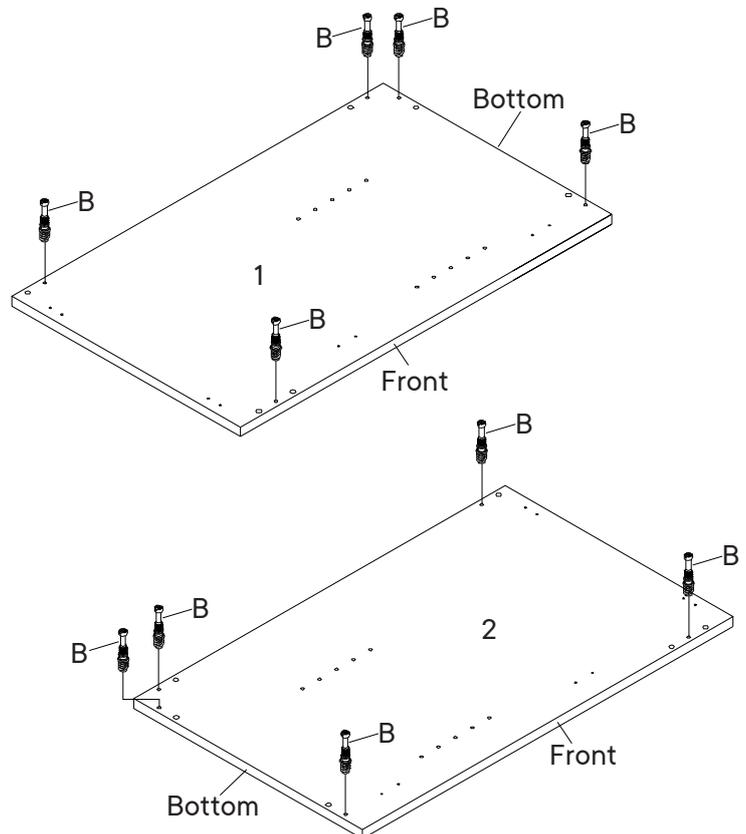

Step 3

HARDWARE


E Screw 8 x 30mm x8

COMPONENTS

6 Front Support x1

9 Front Panel 1 x1

10 Front Panel 2 x1

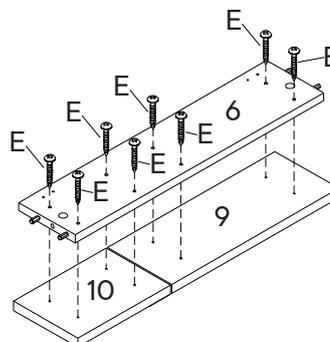

Step 4

HARDWARE

C Cam Lock Ø15 x5

COMPONENTS


2 Right Side Panel x1

3 Bottom Panel x1

4 Back Panel 1 x1

5 Back Panel 2 x1

6 Front Support x1

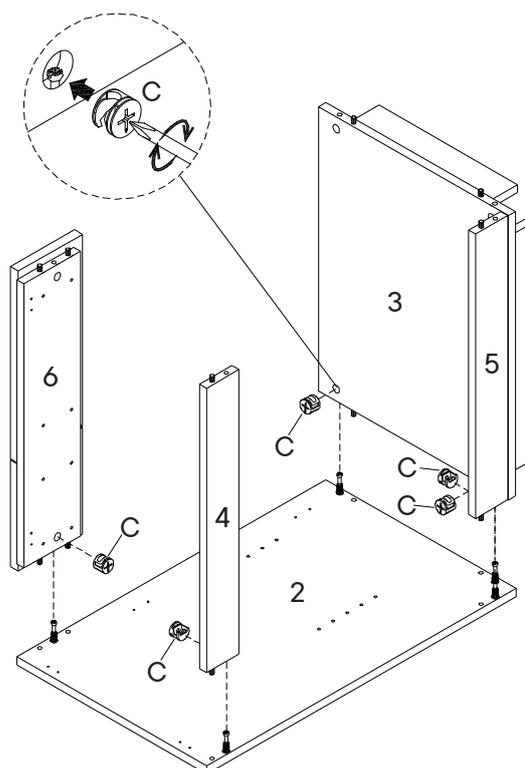


Step 5

HARDWARE

- C** Cam Lock Ø15 x5

COMPONENTS

- 1** Left Side Panel x1
- 3** Bottom Panel x1
- 4** Back Panel 1 x1
- 5** Back Panel 2 x1
- 6** Front Support x1

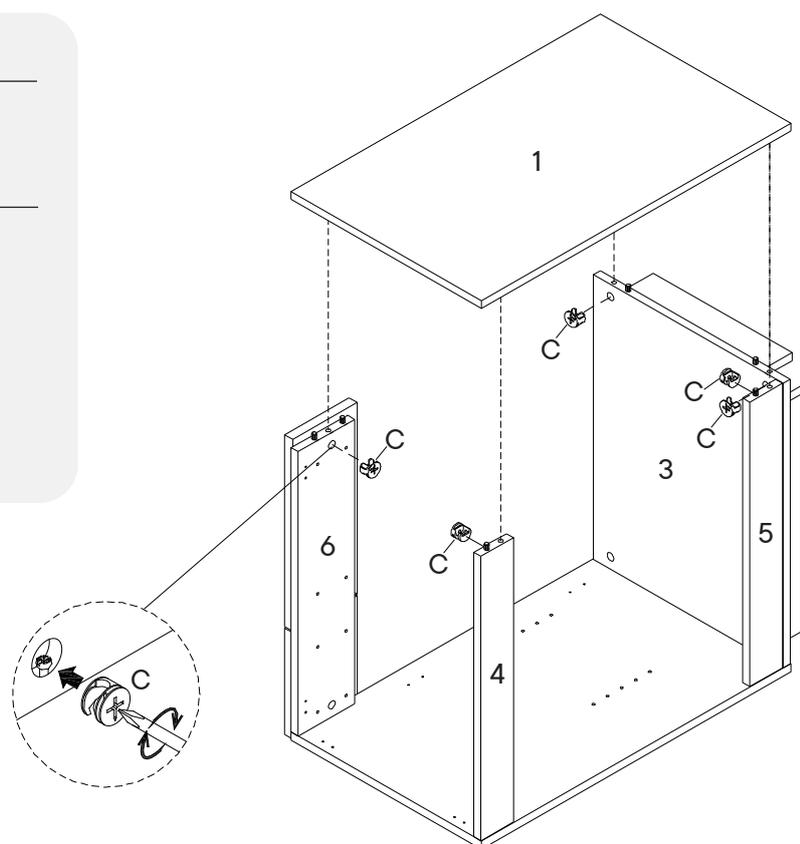


Step 6

HARDWARE

- J** Screw 6 x 50mm x8
- K** Lock Washer x8
- L** Flat Washer x8
- M** Hex Wrench x1

COMPONENTS

- 3** Bottom Panel x1
- 13** Wooden Leg x4

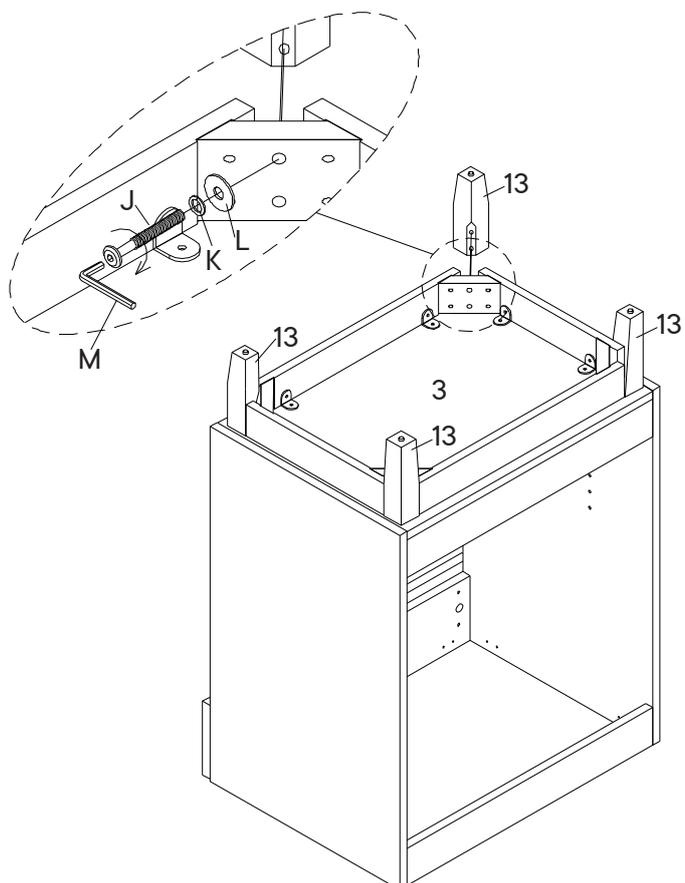


Step 7

HARDWARE

- F** Shelf Support x4
- R** Screw Cap x6

COMPONENTS

- 1** Left Side Panel x1
- 2** Right Side Panel x1
- 3** Bottom Panel x1
- 5** Back Panel 2 x1

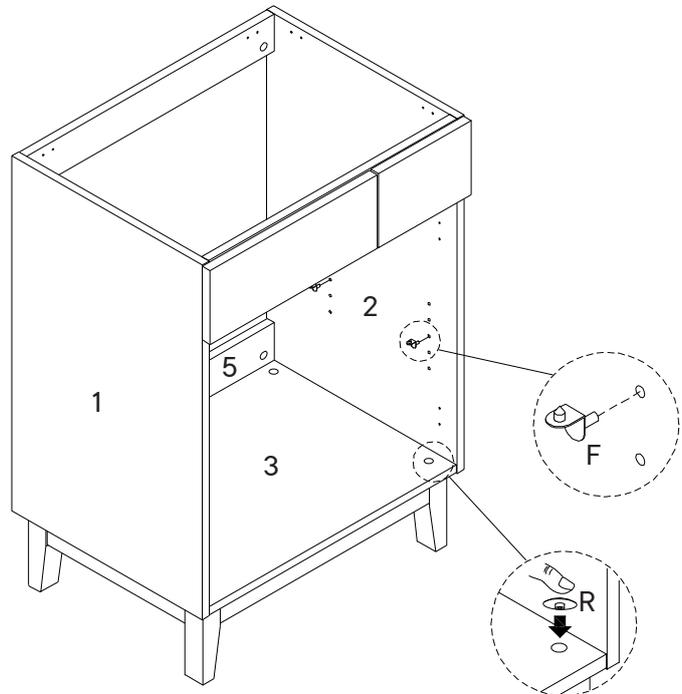


Step 8

HARDWARE

- D** Screw 9 x 38mm x4

COMPONENTS


- 7** Shelf Panel x1
- 8** Shelf Back Rail x2

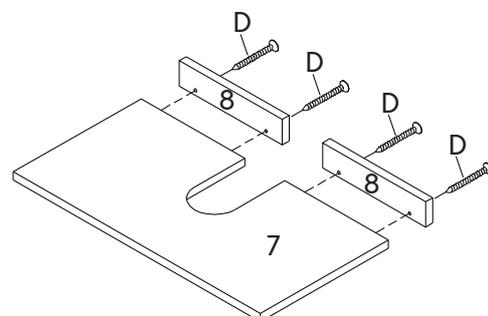

Step 9

COMPONENTS

- 7** Shelf Panel x1

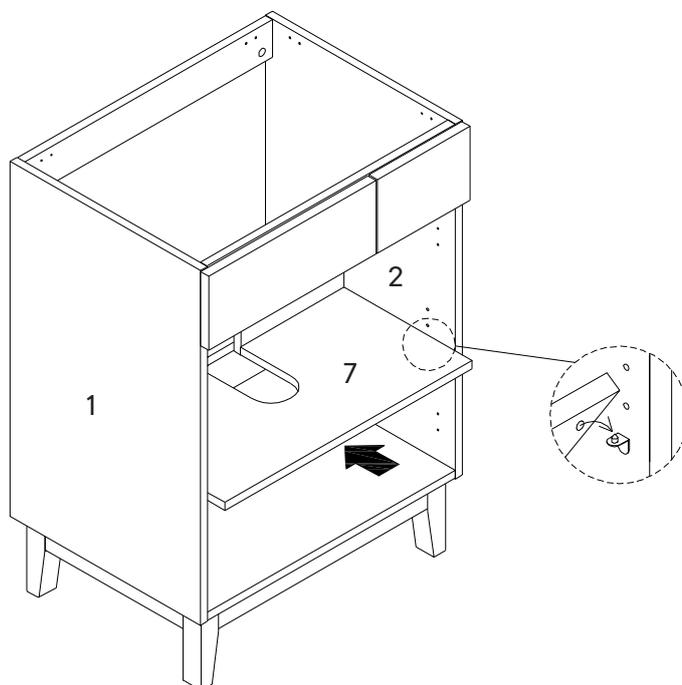


Step 10

HARDWARE

- G** Screw 4 x 14mm x16
- Q** Corner Bracket x4

COMPONENTS


- 1** Left Side Panel x1
- 2** Right Side Panel x1
- 4** Back Panel 1 x1
- 6** Front Support x1

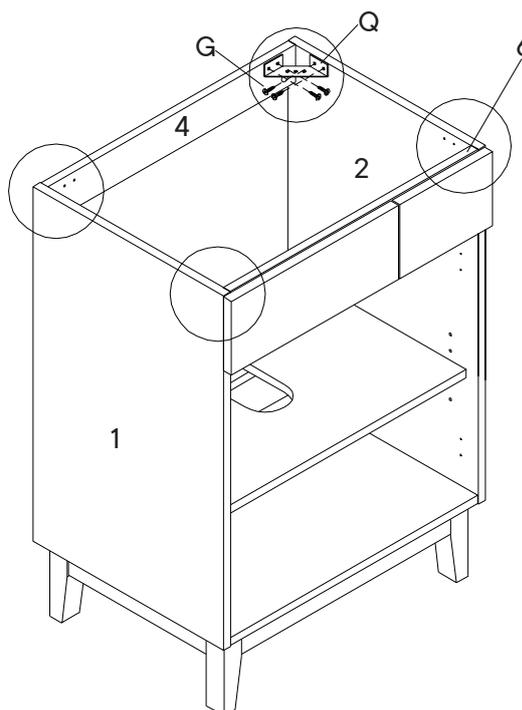


Step 11

NOTE: Mounting hardware and tools are not included.

We suggest professional installation.

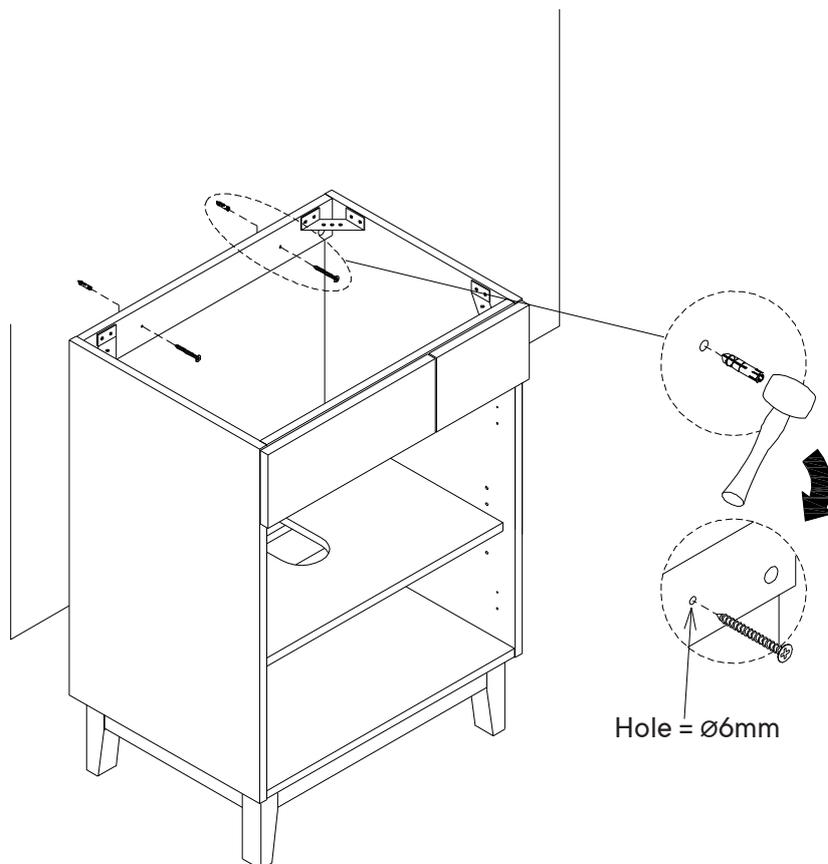

Step 12

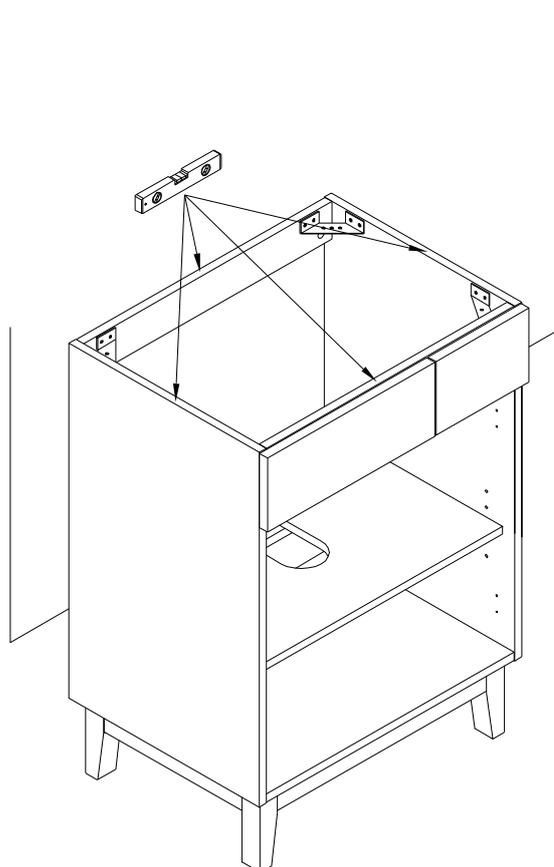


Step 13

HARDWARE

- G** Screw 4 x 14mm x8
- H** Door Hinge x4

COMPONENTS

- 11** Door Panel Left x1
- 12** Door Panel Right x1

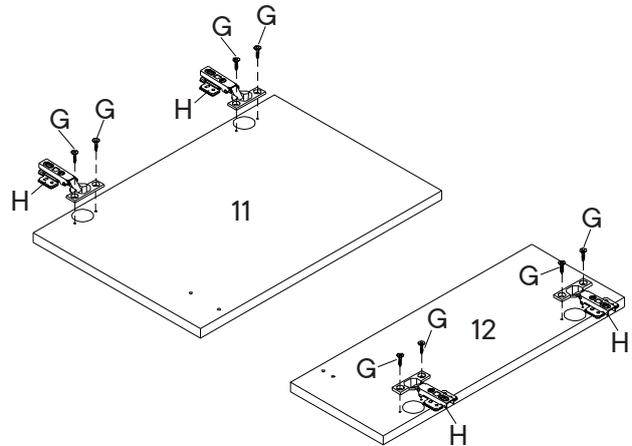

Step 14


HARDWARE

- G** Screw 4 x 14mm x16
- I** Screw 4 x 30mm x4
- N** Rubber Pad x4
- O** Handle x1
- P** Handle x1


COMPONENTS

- 11** Door Panel Left x1
- 12** Door Panel Right x1

Sold separately

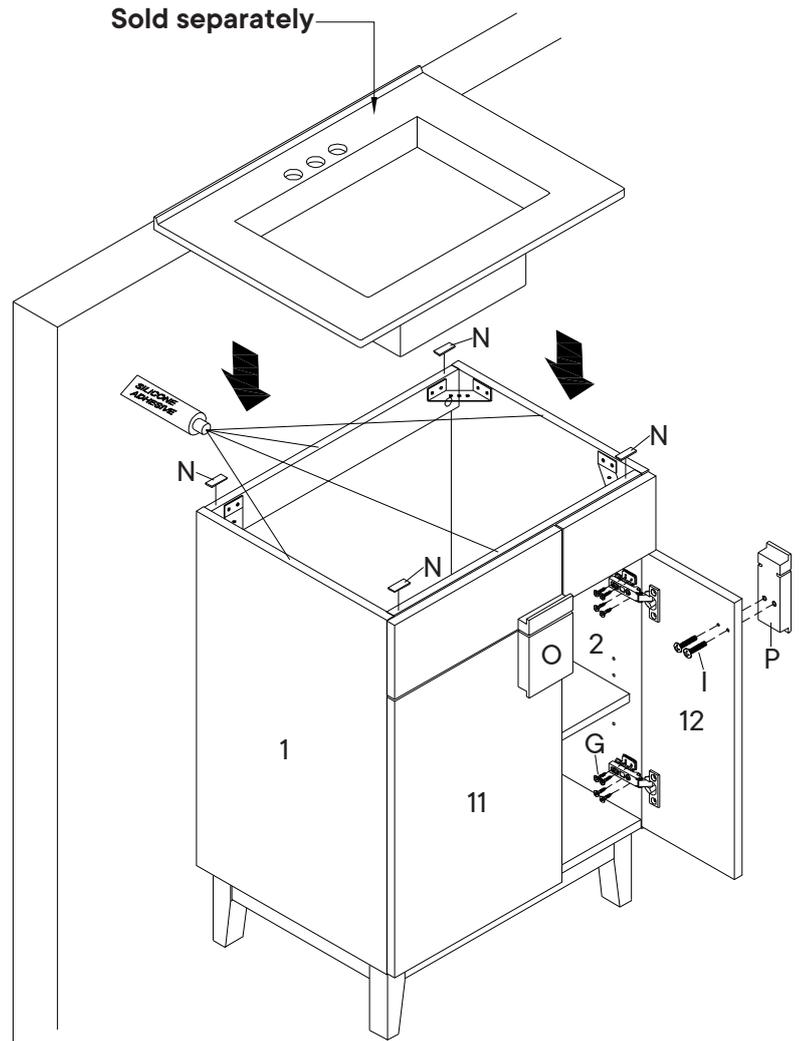

Adjust the hinges, if required.

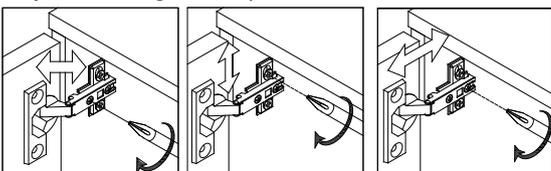


Adjust laterally Adjust height Adjust depth

Temporarily remove/dismantle the Door & Shelf during Basin/Sink /Plumbing work installation work to prevent water damage.

A quick note...

Your sink basin comes complete with a silver overflow ring.
If you'd like to remove this overflow ring, you can do so by hand.

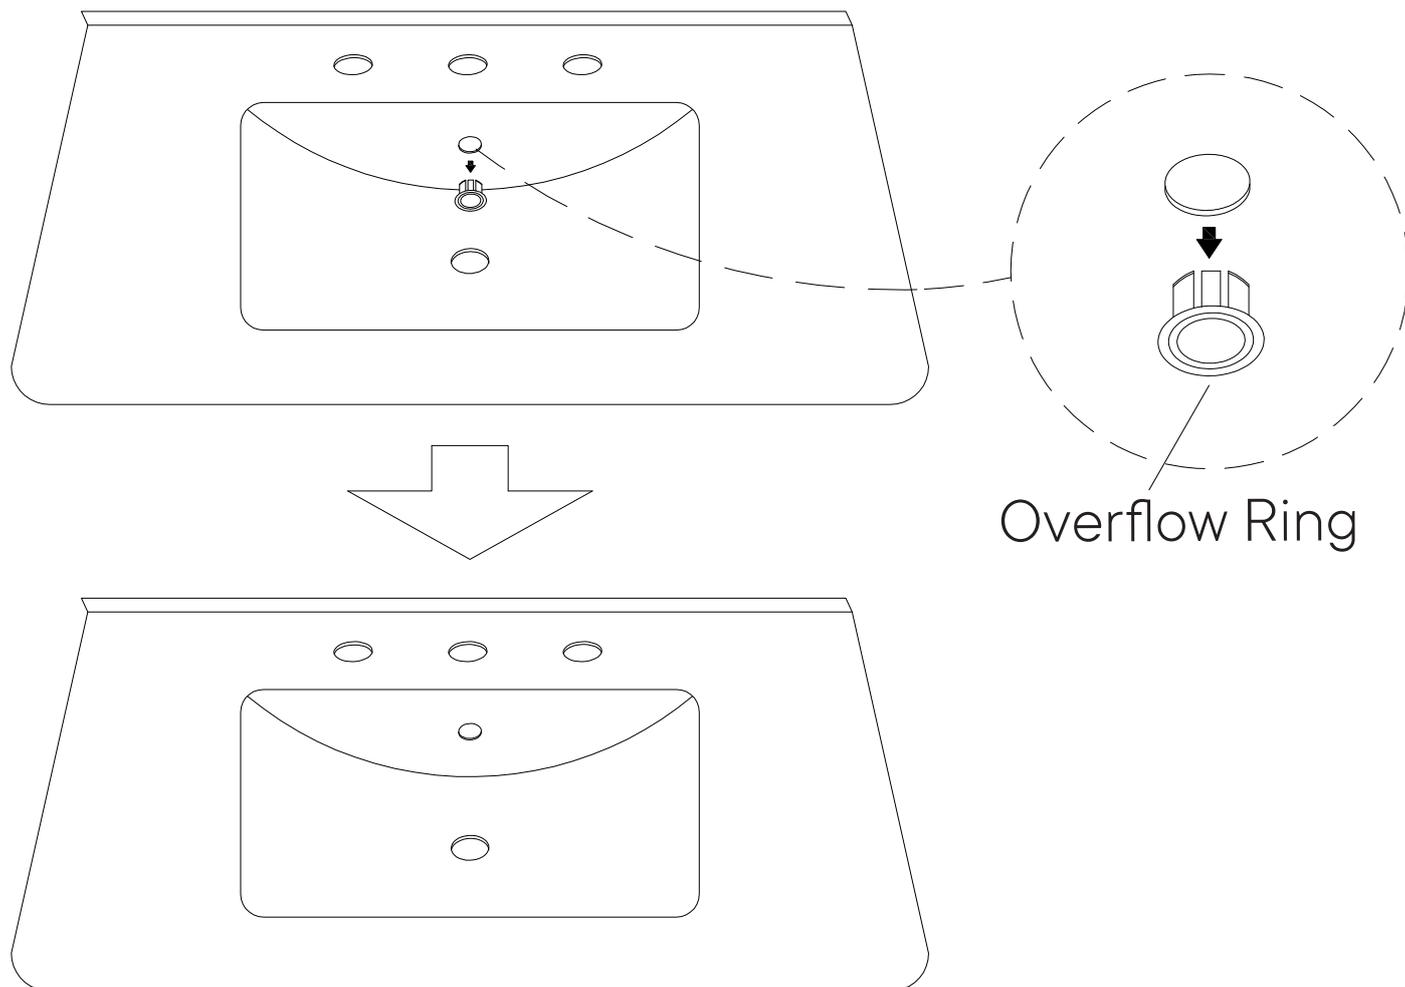

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Great job!

Cabinet assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.


Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!   

Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

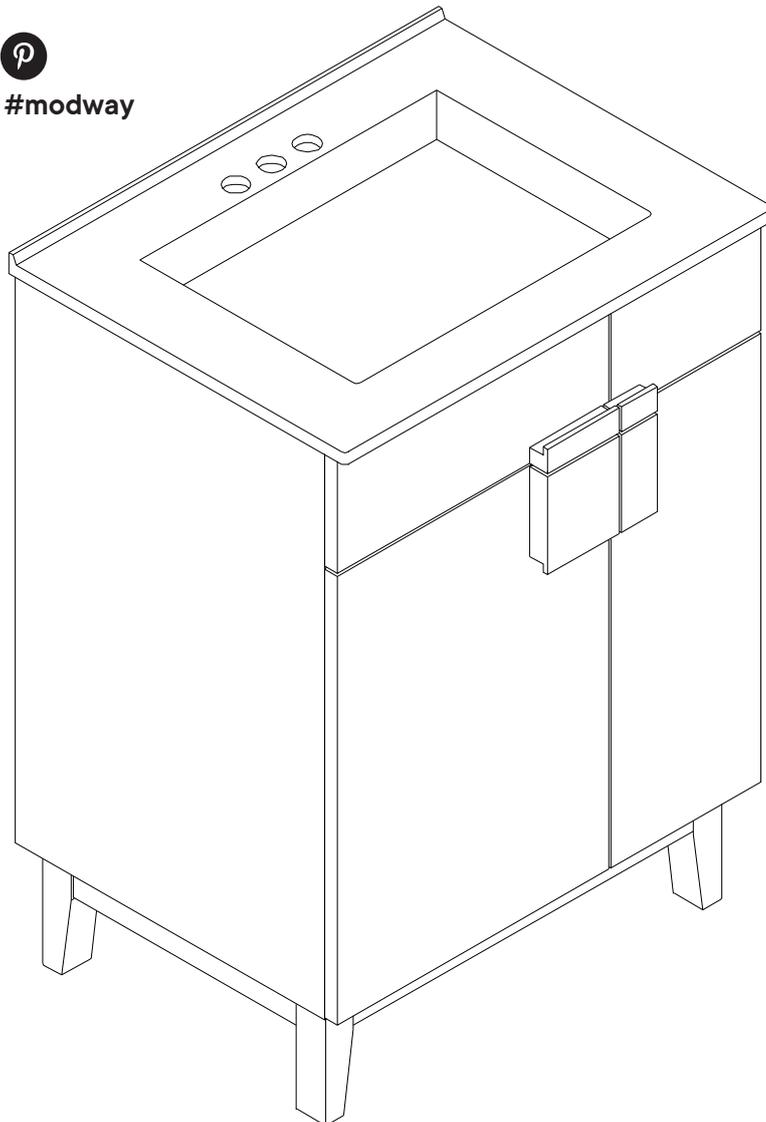

Great job!

Cabinet assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!   

Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

