


ASSEMBLY INSTRUCTIONS

KitchenBath

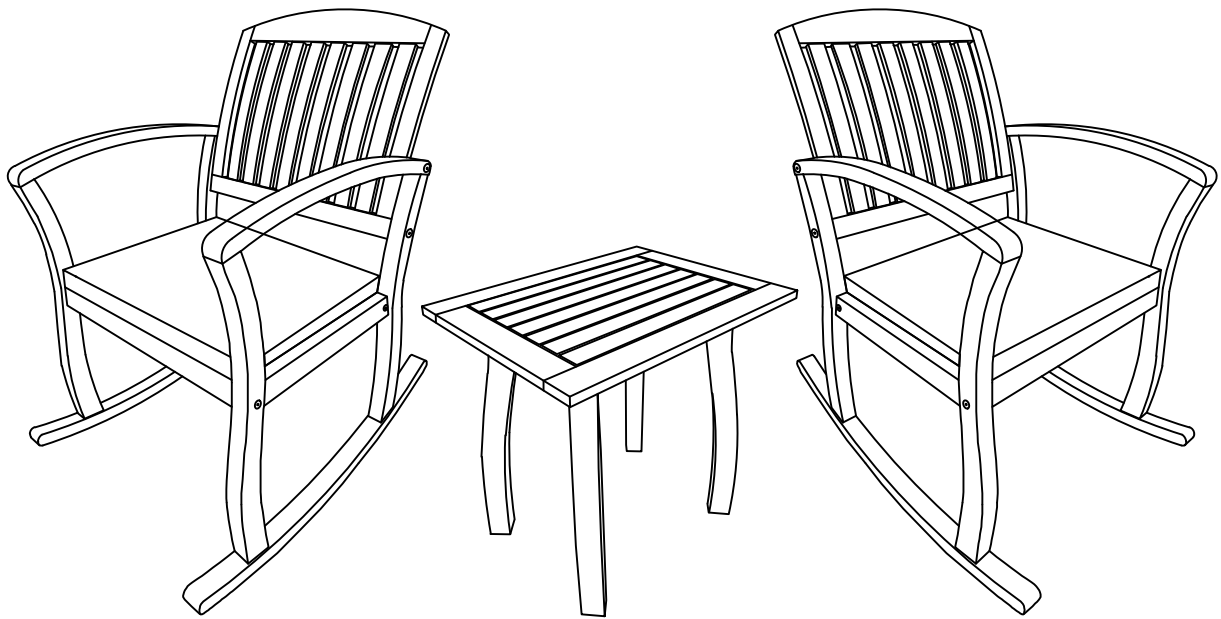

1. To begin assembly, make sure you're working on a flat, level surface throughout the assembly process. This will ensure a strong and stable final product.
2. Tighten all screws throughout lightly with the Allen wrench. Be sure each screw is aligned properly with their corresponding holes.
3. Once every component is loosely assembled, go back and tighten all of the screws gradually & firmly. This ensures each component is seated properly and prevents warping.
4. Be sure to give the furniture a wobble test once complete. If it feels unsteady, loosen all of the screws again on a flat surface, and repeat steps 2 & 3.
5. All holes meant for adjustments are designed to be larger, ensuring a perfect fit.

digital copy of this instruction manual available at Kitchenbathcollection.com

A Left Armrest (2Pcs)	B Right Armrest (2Pcs)	C Single Seat (2Pcs)	D Single Back (2Pcs)
E Single Seat Cushion (2Pcs)	F Table Top (1Pcs)	G Table leg (4PCS)	
1 Screw Bolt M6x70mm (12 Pcs)	2 Allen Bolt M6x50mm (12 Pcs)	3 Flat Washer (8Pcs)	4 Allen Key (2Pcs)
