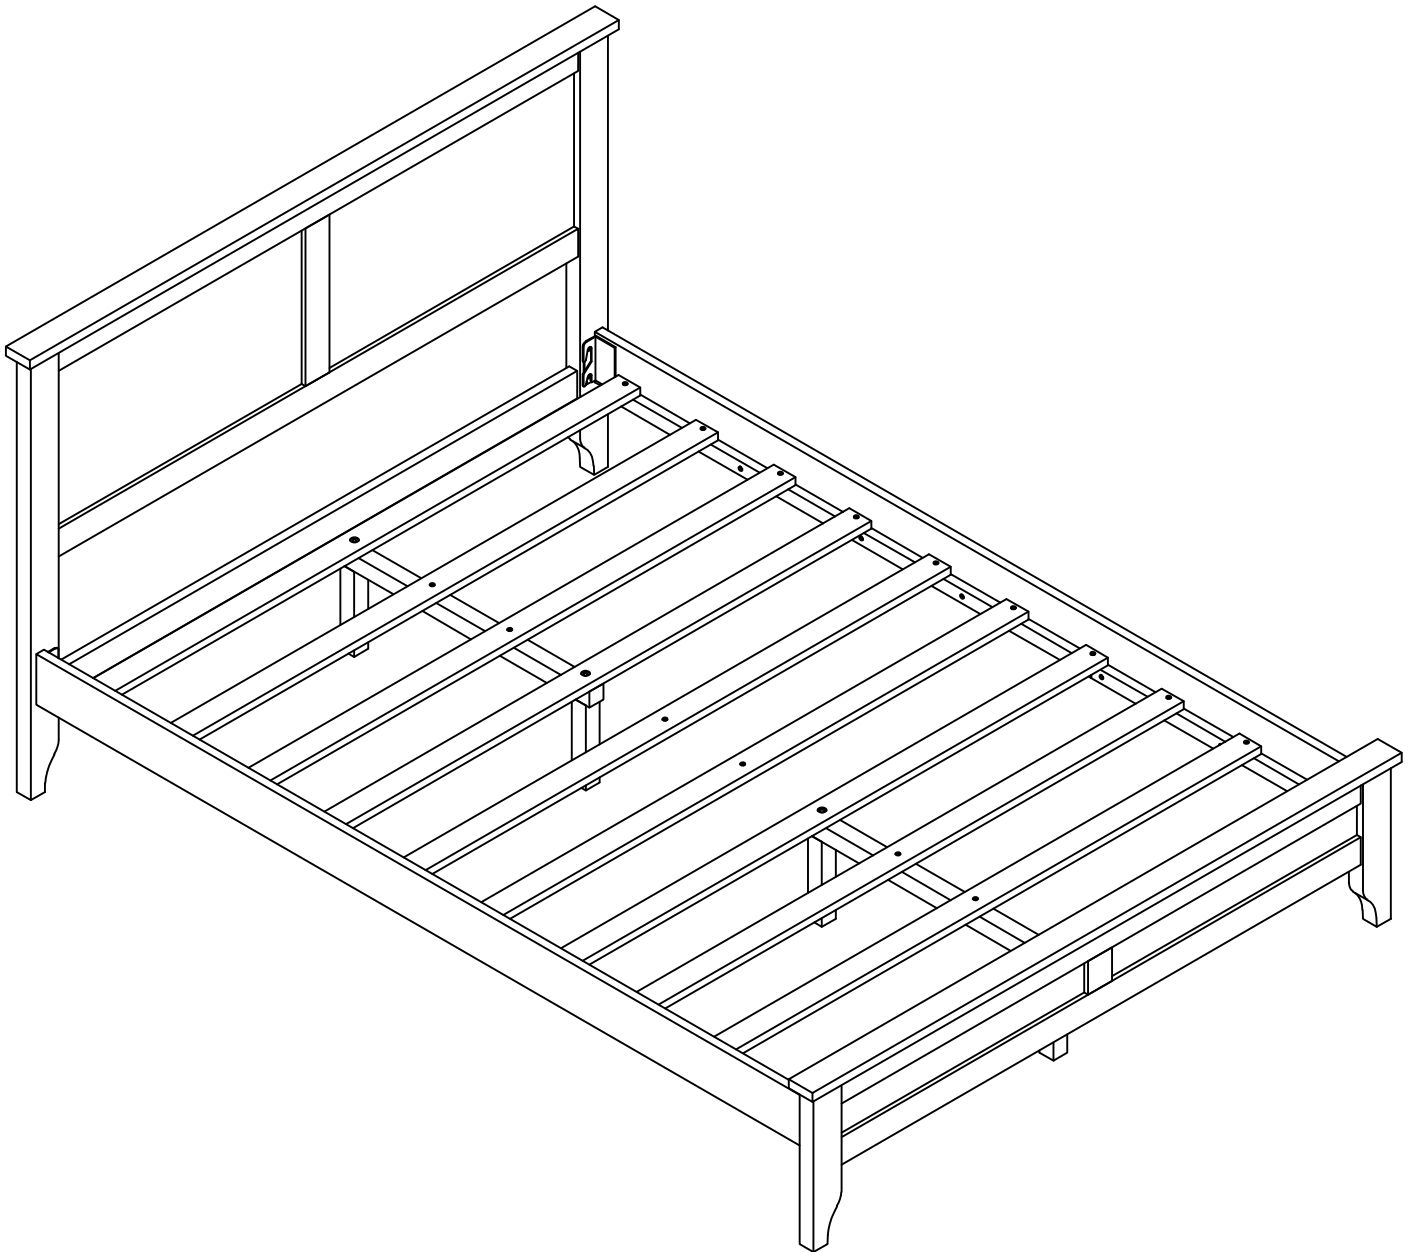
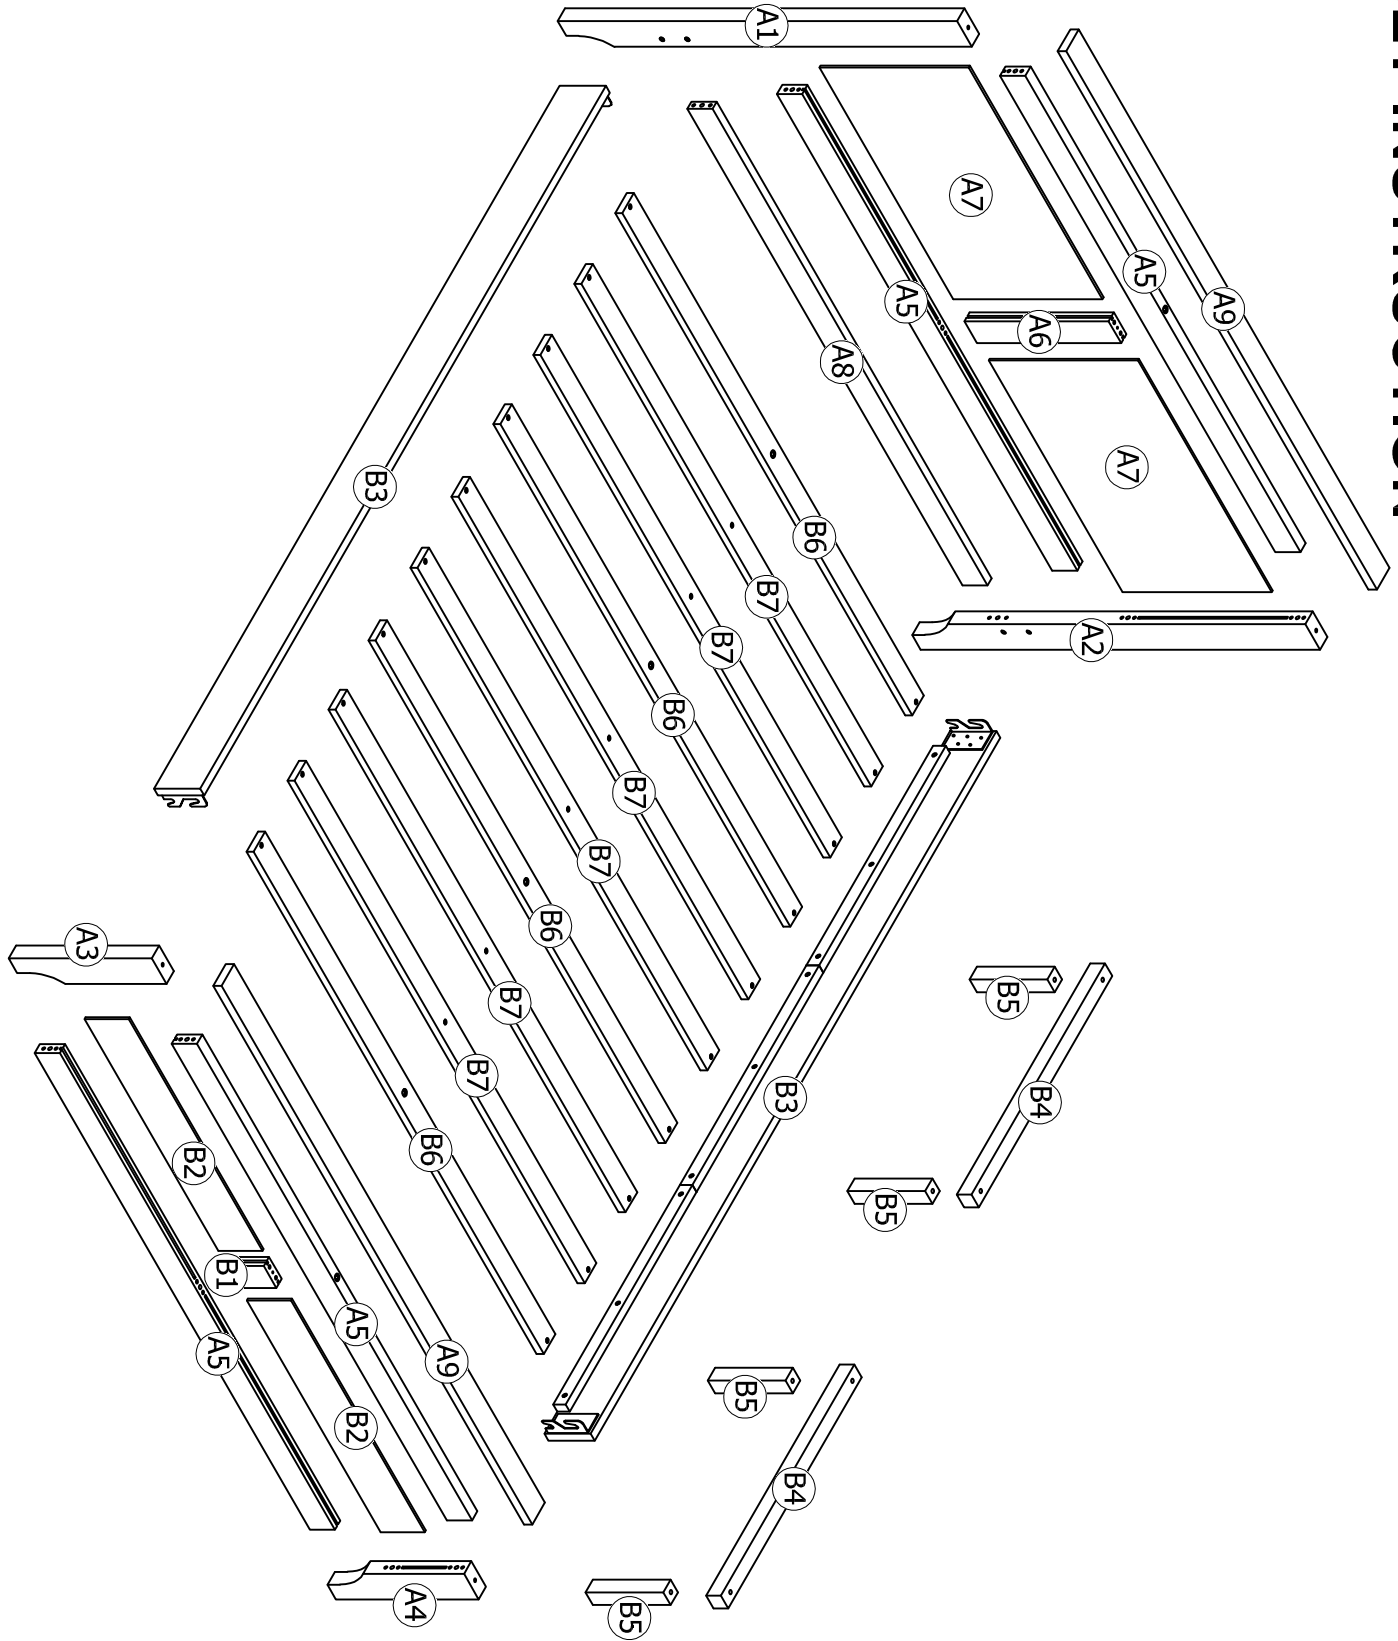


ASSEMBLY INSTRUCTION





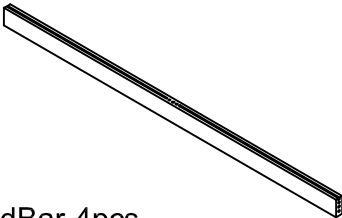

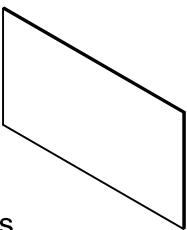
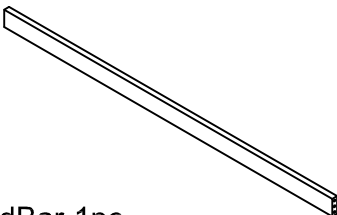
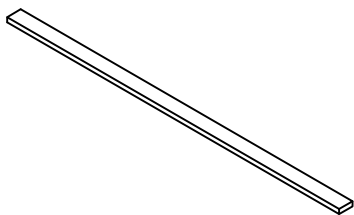

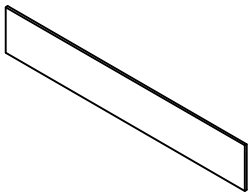
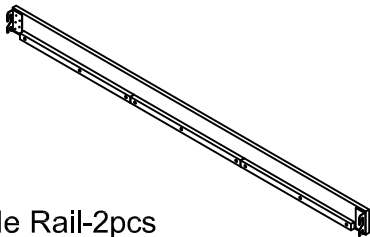
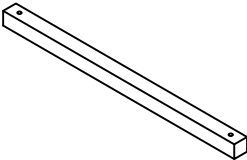

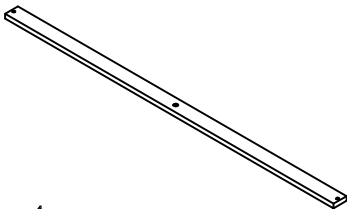
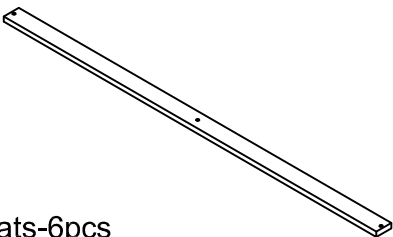
SKU CODE: (WF315100)



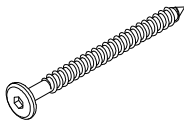







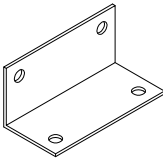


ASSEMBLY INSTRUCTION



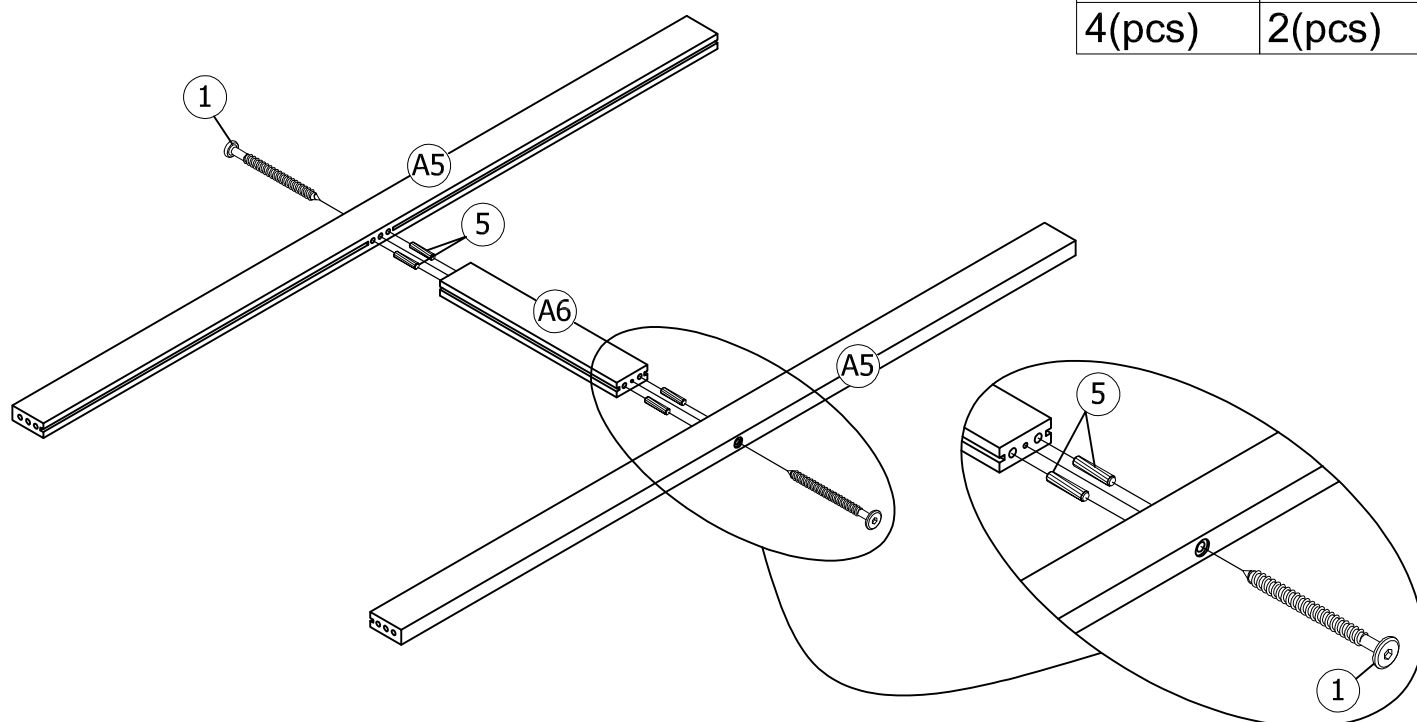
Part List & Hardware List (WF315100)

<div>A1</div> <div></div> <div>Leg-1pc</div>	<div>A2</div> <div></div> <div>Leg-1pc</div>	<div>A3</div> <div></div> <div>Leg-1pc</div>
<div>A4</div> <div></div> <div>Leg-1pc</div>	<div>A5</div> <div></div> <div>WoodBar-4pcs</div>	<div>A6</div> <div></div> <div>WoodBar-1pc</div>
<div>A7</div> <div></div> <div>Panel-2pcs</div>	<div>A8</div> <div></div> <div>WoodBar-1pc</div>	<div>A9</div> <div></div> <div>WoodBar-2pcs</div>
<div>B1</div> <div></div> <div>WoodBar-1pc</div>	<div>B2</div> <div></div> <div>Panel-2pcs</div>	<div>B3</div> <div></div> <div>Side Rail-2pcs</div>
<div>B4</div> <div></div> <div>WoodBar-2pcs</div>	<div>B5</div> <div></div> <div>WoodBar-4pcs</div>	<div>B6</div> <div></div> <div>Slats-4pcs</div>
<div>B7</div> <div></div> <div>Slats-6pcs</div>		

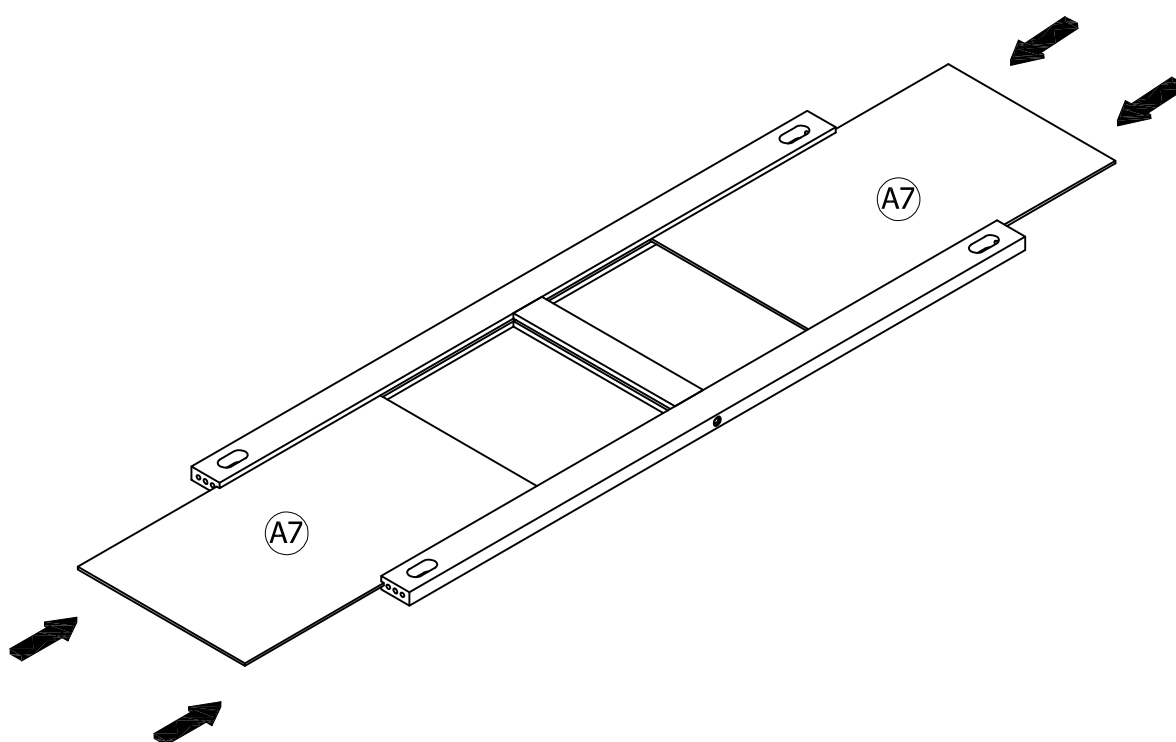
Hardware List (WF315100)

1		2		3	
	Screws 1/4" x80 4pcs		Ø1/4" x 50 mm Hex-Head bolts 10pcs		Ø1/4" x 70 mm Hex-Head bolts 4pcs
4		5		6	
	Ø1/4" x 20 mm Hex-Head bolts 8pcs		Ø8 x 30 mm Wood dowel 32pcs		M3.5 x 15 mm Wood Screws 24pcs
7		8		9	
	M4 x 30 mm Wood Screws 24pcs		Curved washer 10pcs		Angle Metal 6pcs
10					
	Allen Key 1pc	Assembly Tools Required (Not Included)			


STEP1: Following below illustration.

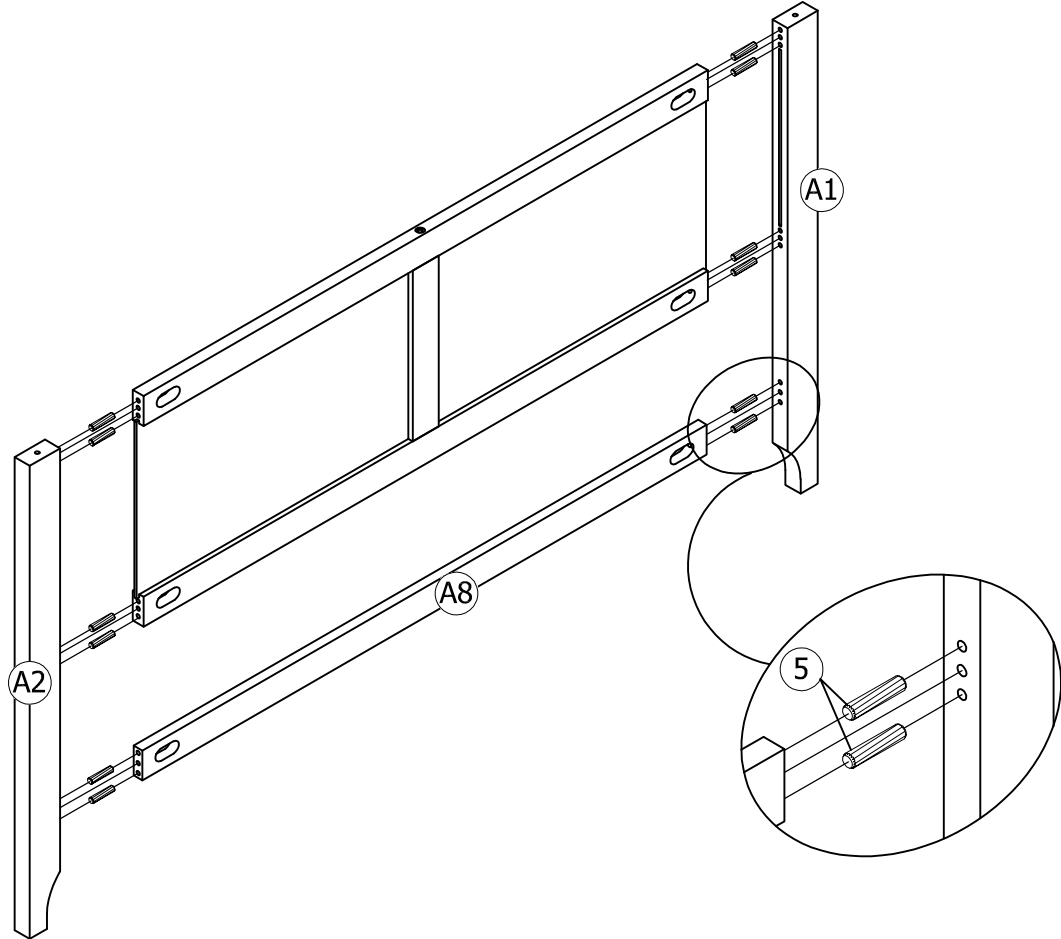


STEP2: Following below illustration.





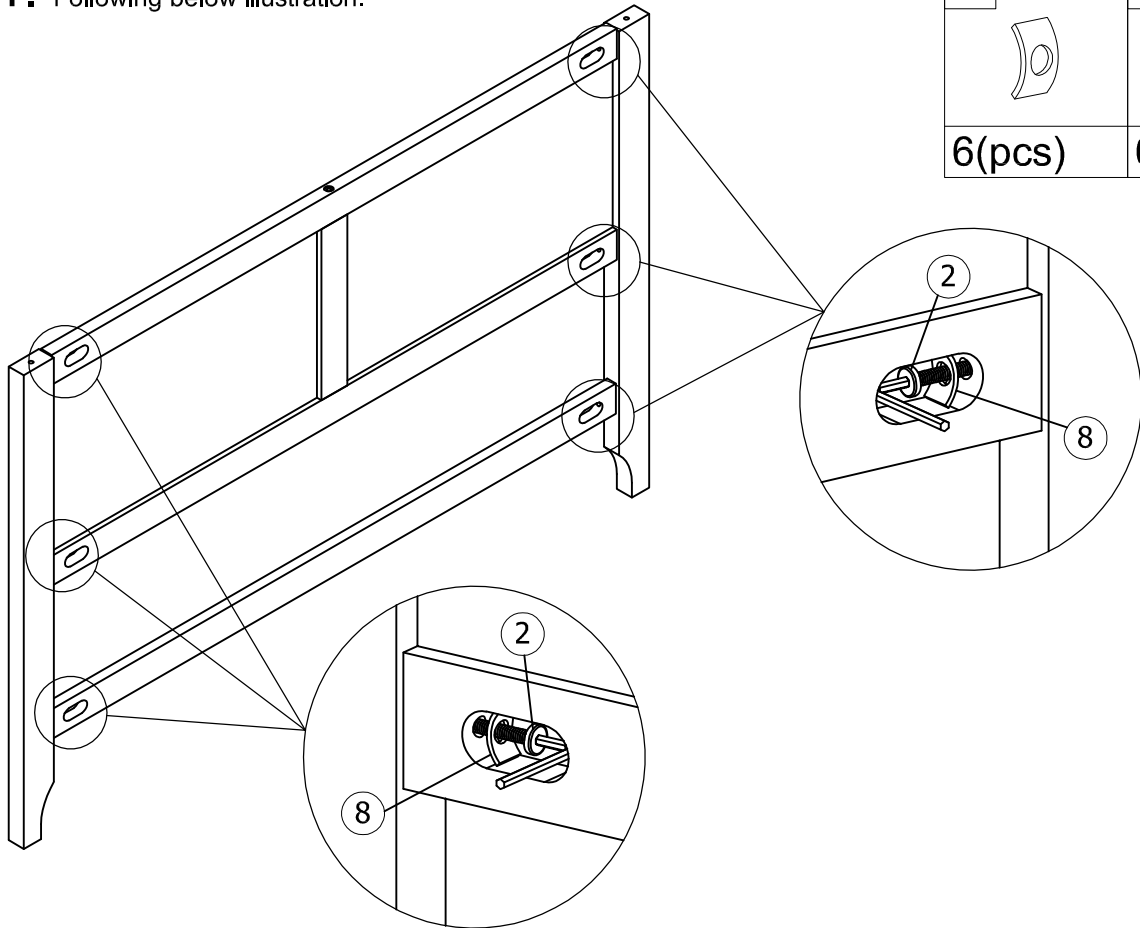
STEP3: Following below illustration.

5

12(pcs)




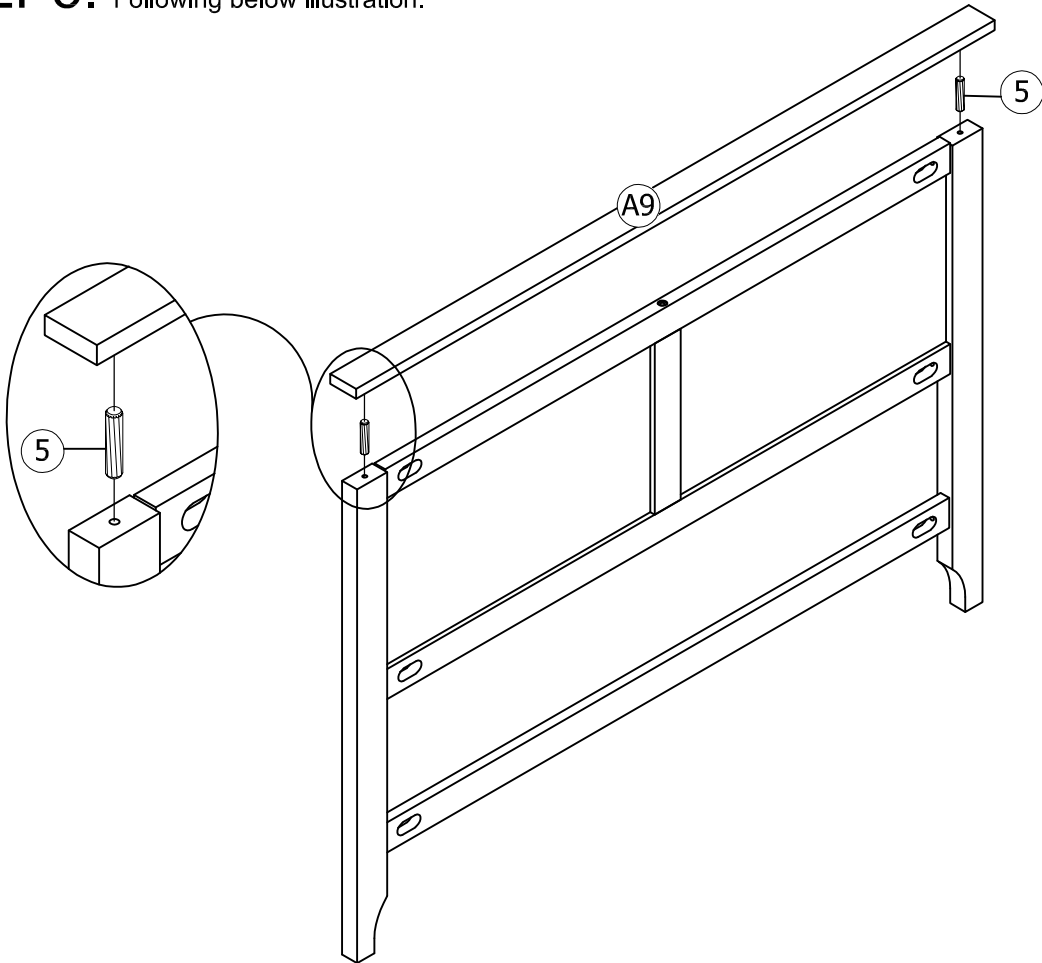
STEP4: Following below illustration.

8	2
	
6(pcs)	6(pcs)





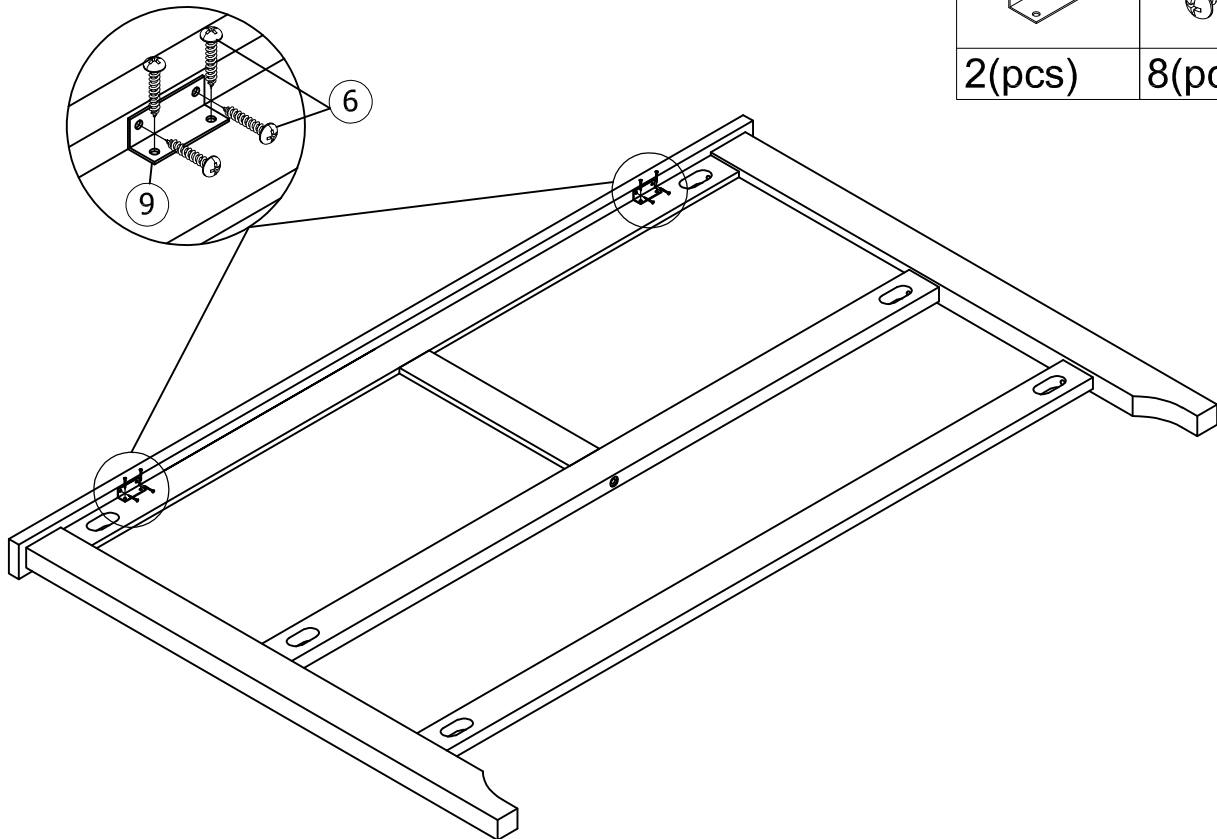
STEP5: Following below illustration.

5

2(pcs)





STEP6: Following below illustration.

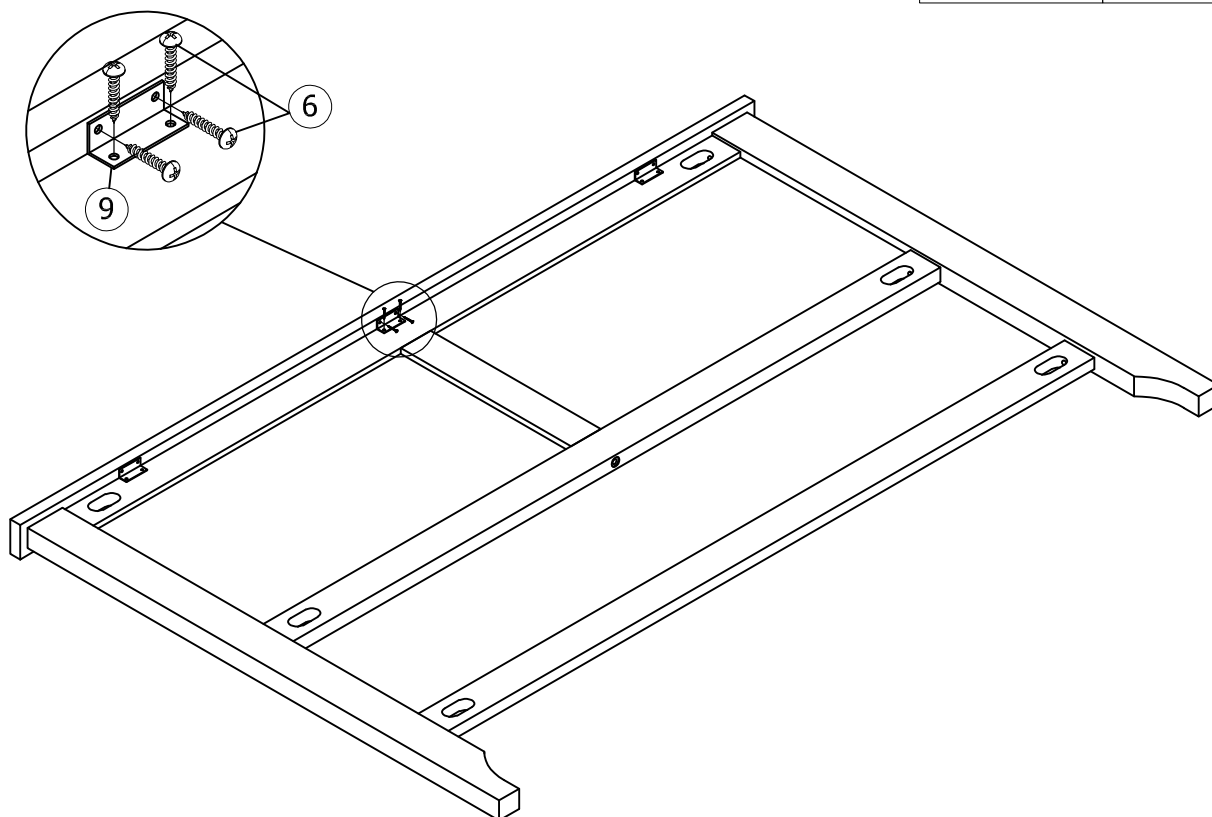
9	6
	
2(pcs)	8(pcs)





STEP7: Following below illustration.

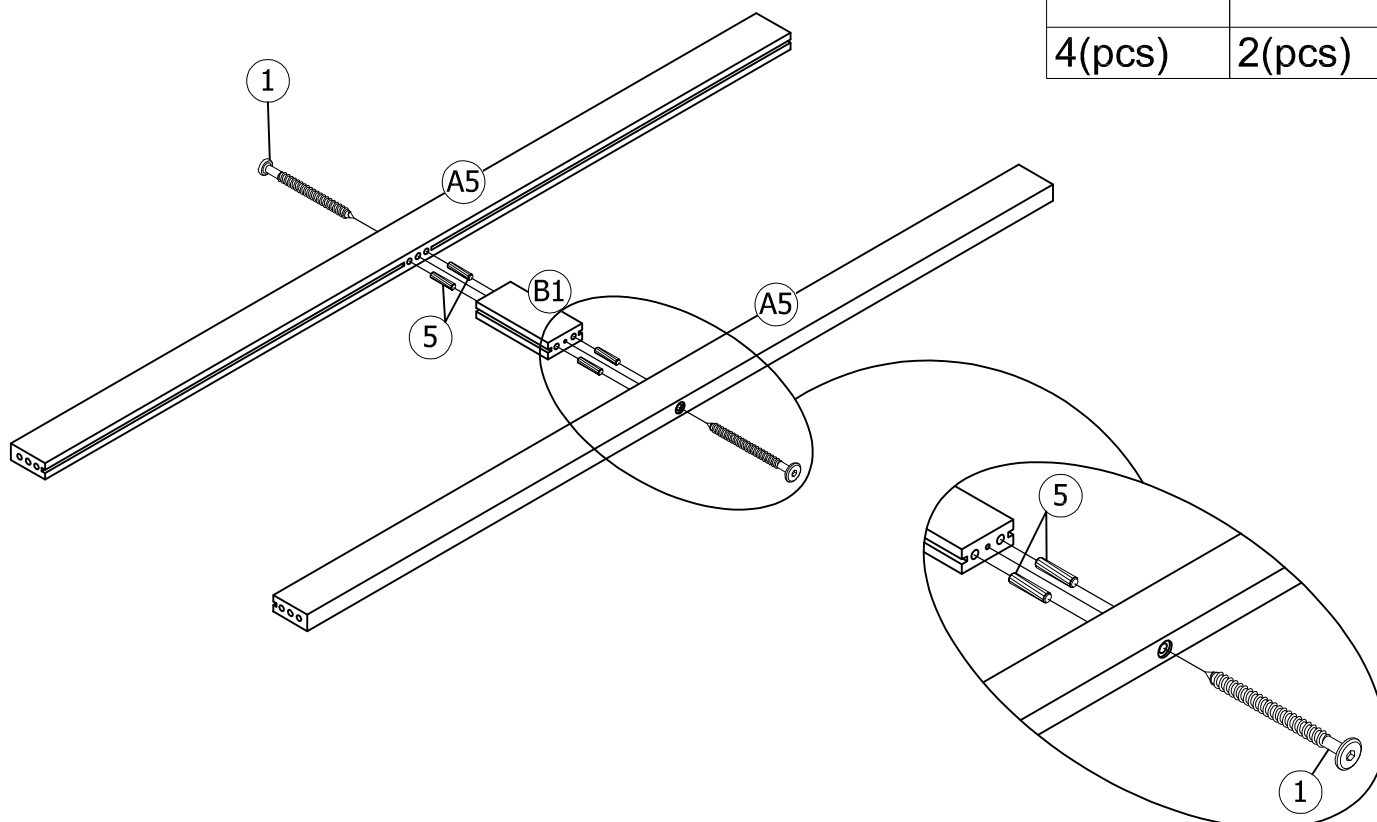
Please install at least two No. 9 parts in the footboard back, one on the left and one on the right. If you want more stability, you can install all Three No. 9 parts

9	6
	
1(pc)	4(pcs)

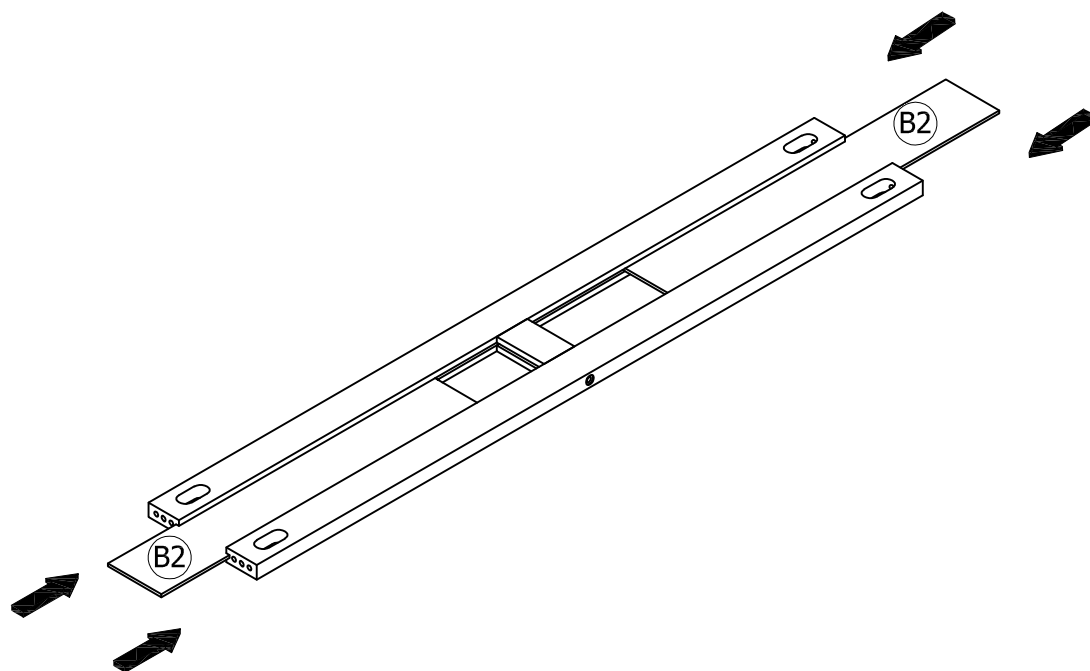


STEP8: Following below illustration.

5	1
	
4(pcs)	2(pcs)



STEP9: Following below illustration.

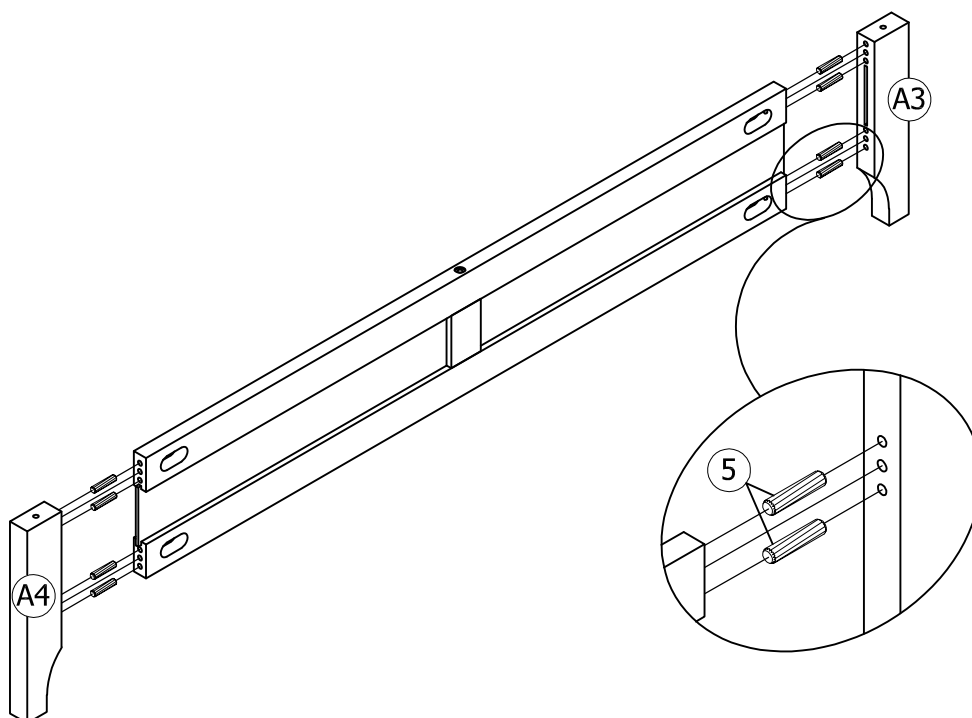


STEP10: Following below illustration.

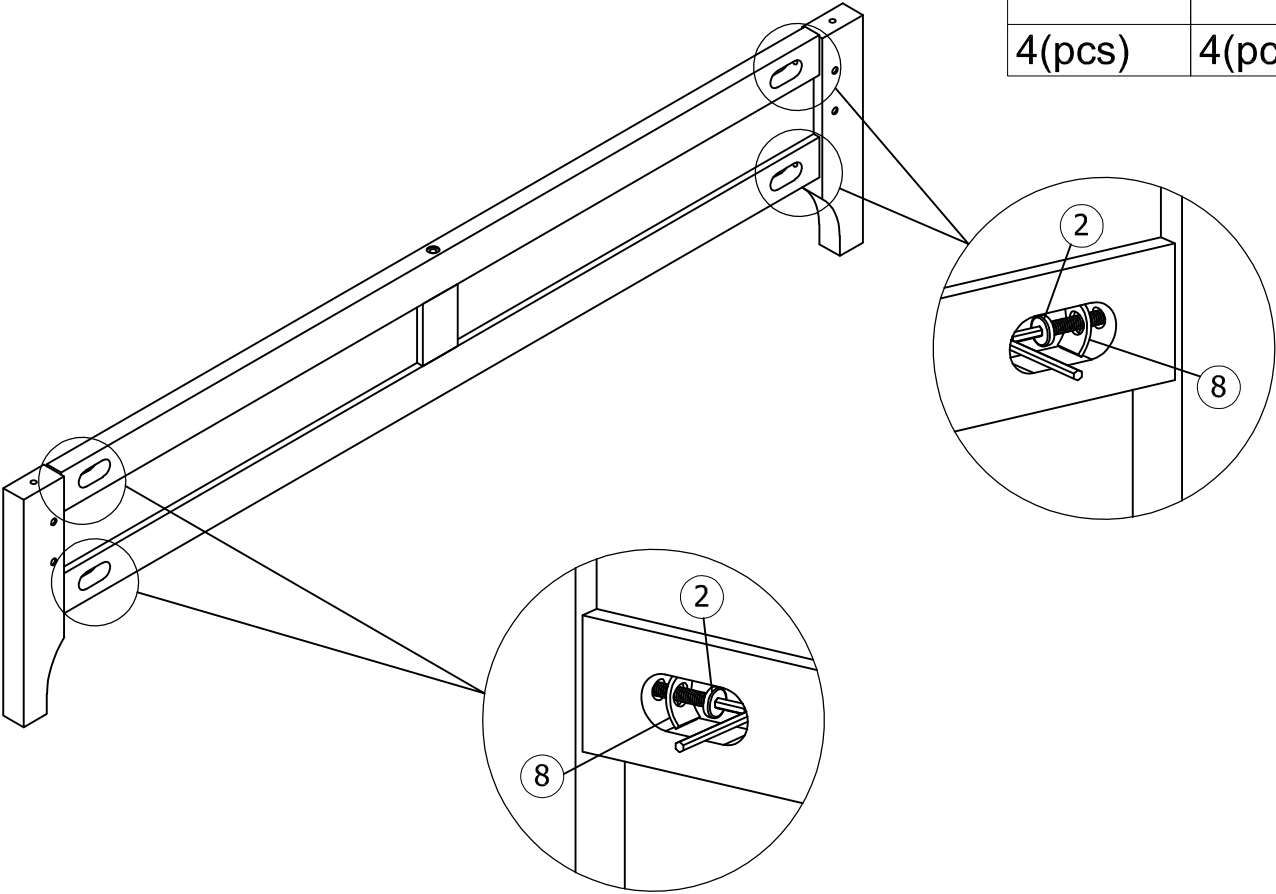
5



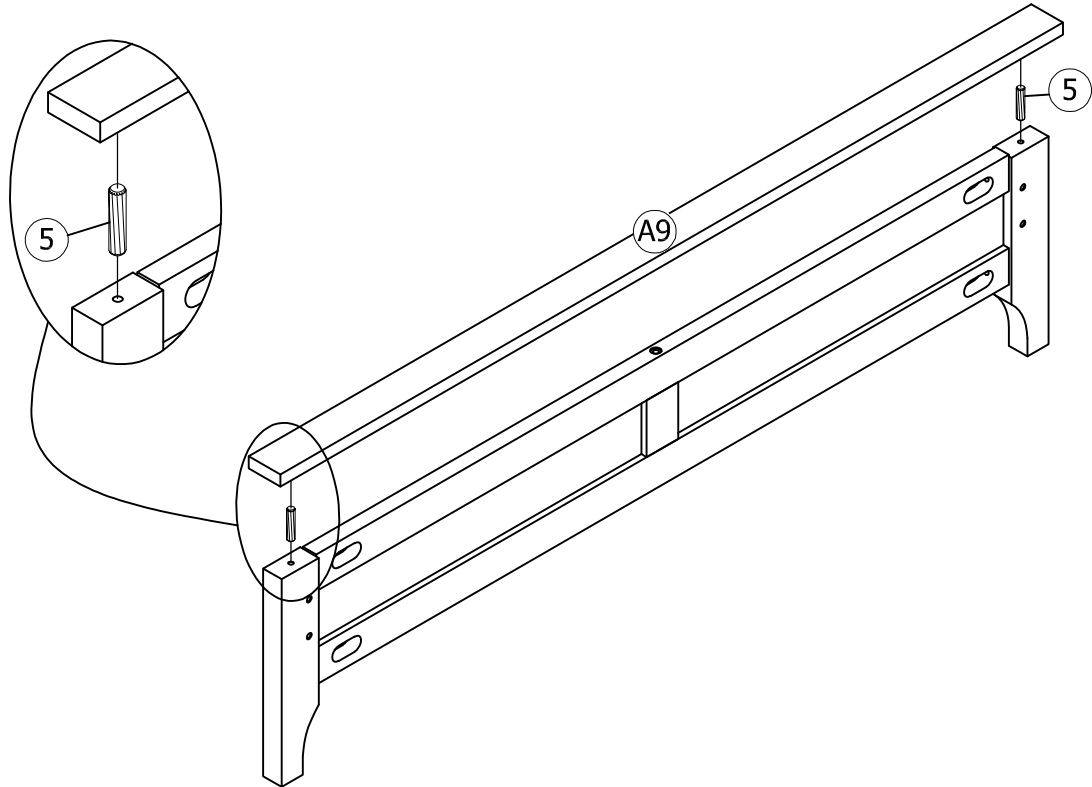
8(pcs)



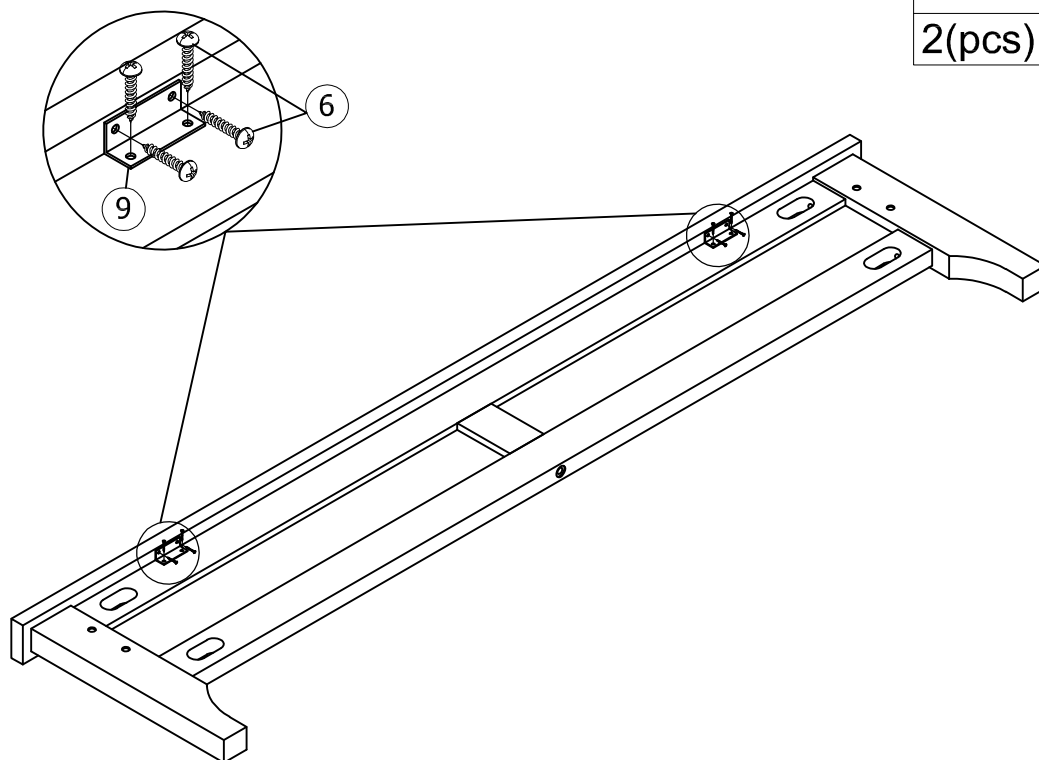
STEP11: Following below illustration.



STEP12: Following below illustration.



STEP13: Following below illustration.



9



2(pcs)

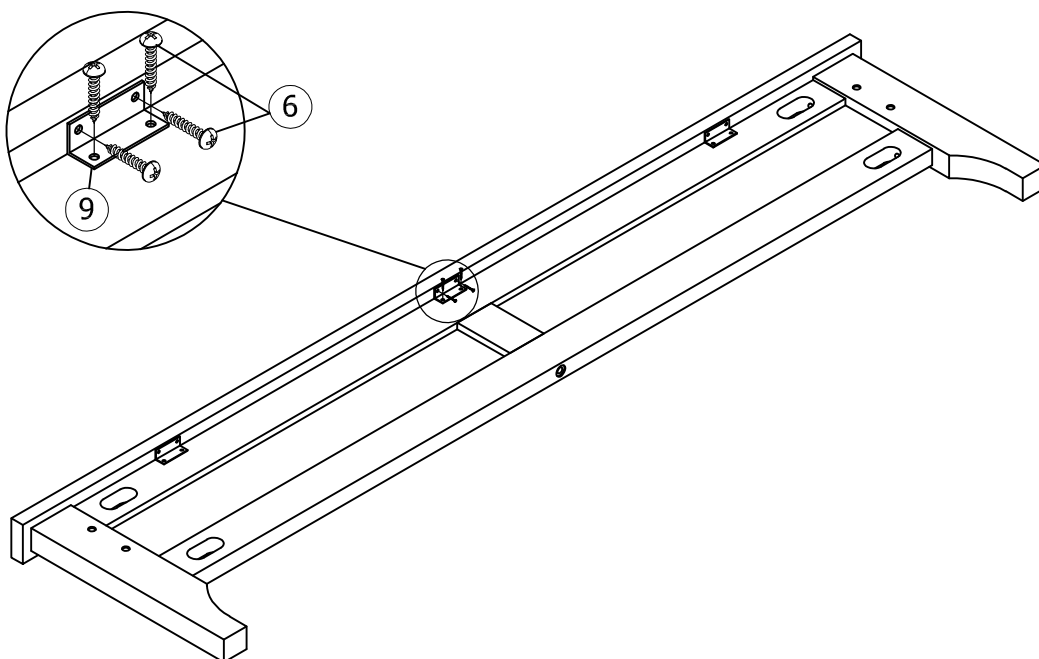
6



8(pcs)

STEP14: Following below illustration.

Please install at least two No. 9 parts in the footboard back, one on the left and one on the right. If you want more stability, you can install all Three No. 9 parts



9



1(pc)


6



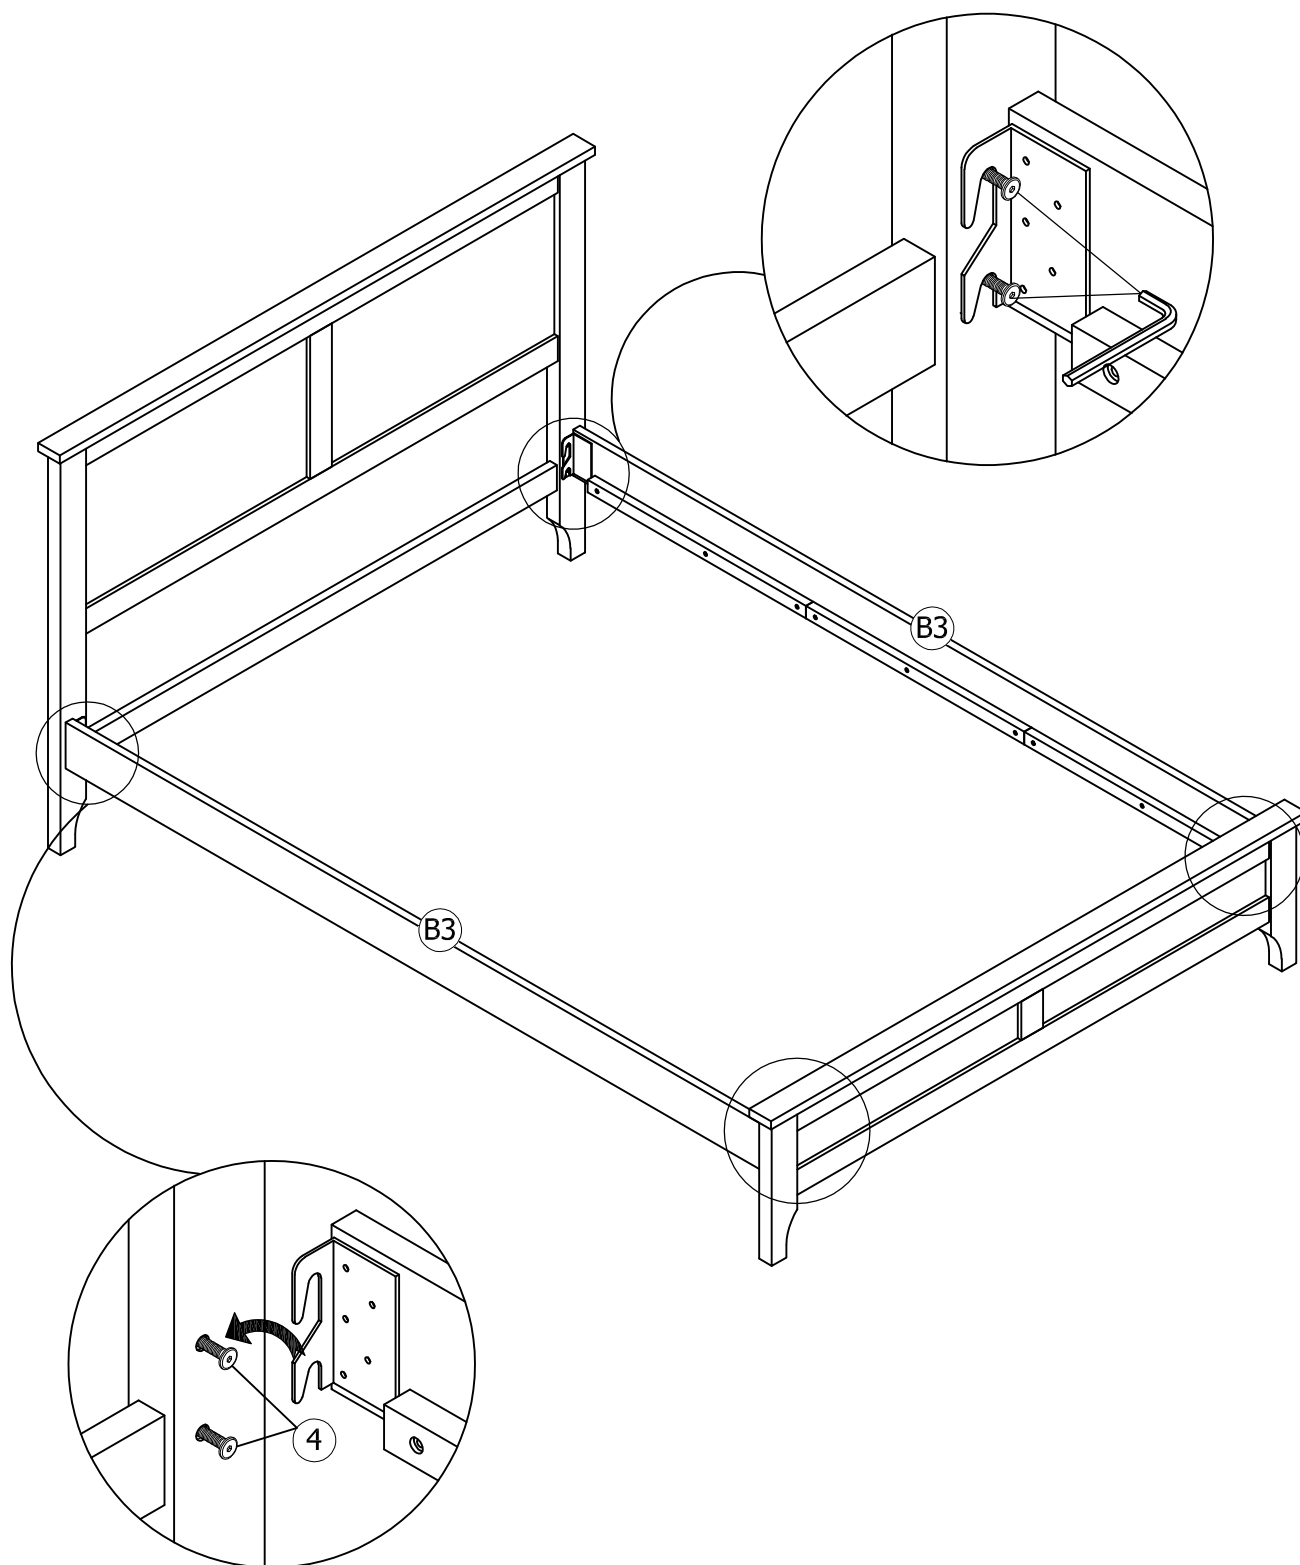
4(pcs)

STEP15: Following below illustration.

4




8(pcs)

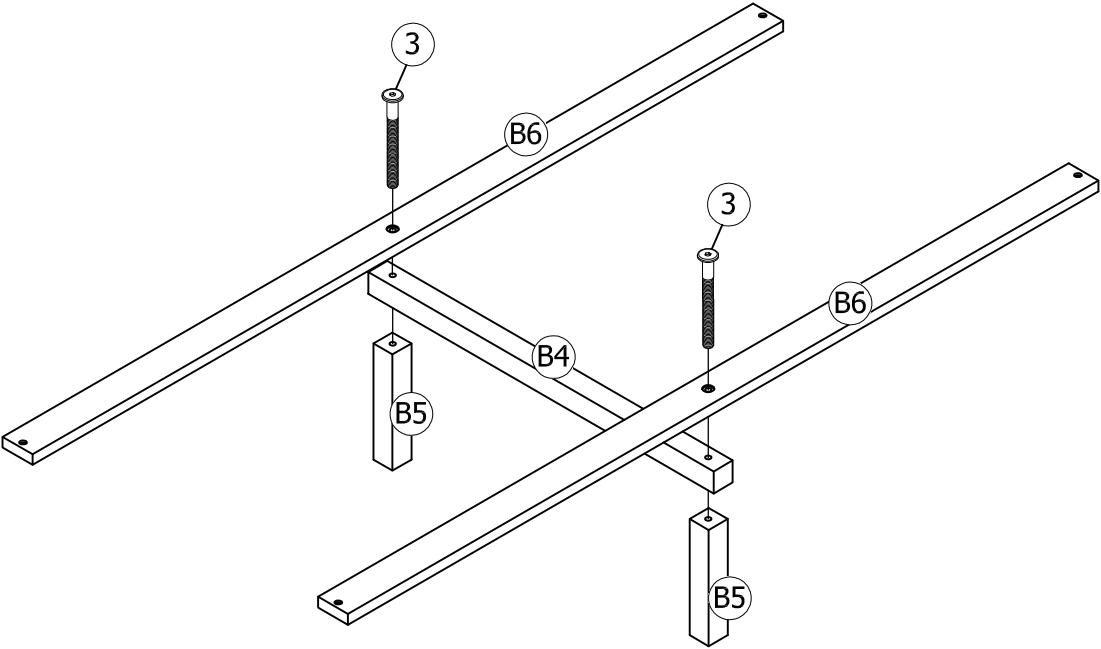


STEP16x2: Following below illustration.

3




4(pcs)

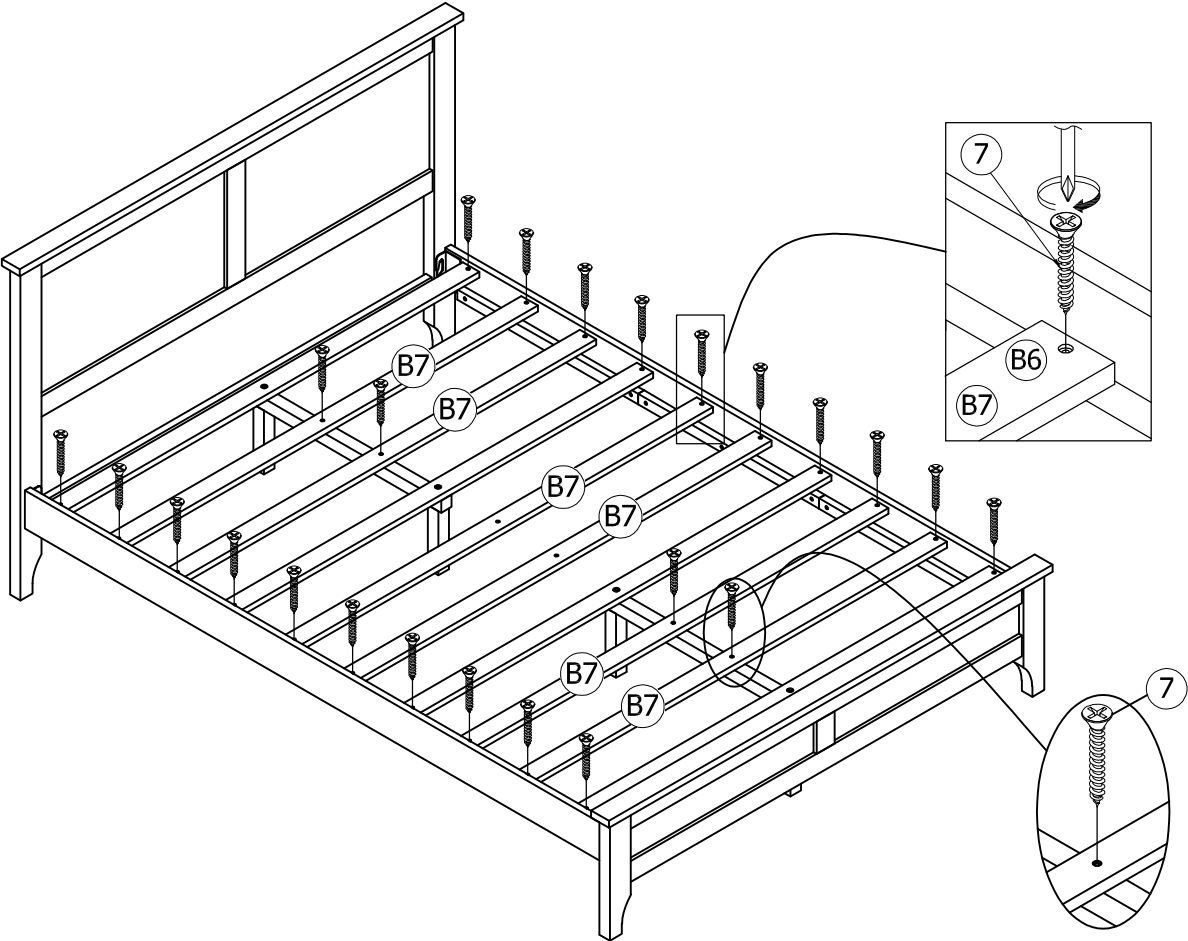


STEP17: Following below illustration.

7



24(pcs)



FINISH

