


# Assembly Instruction

Note: All parts are contained in one box. It is required that at least two people or more assemble this item. Please follow all instructions in order to assemble easily

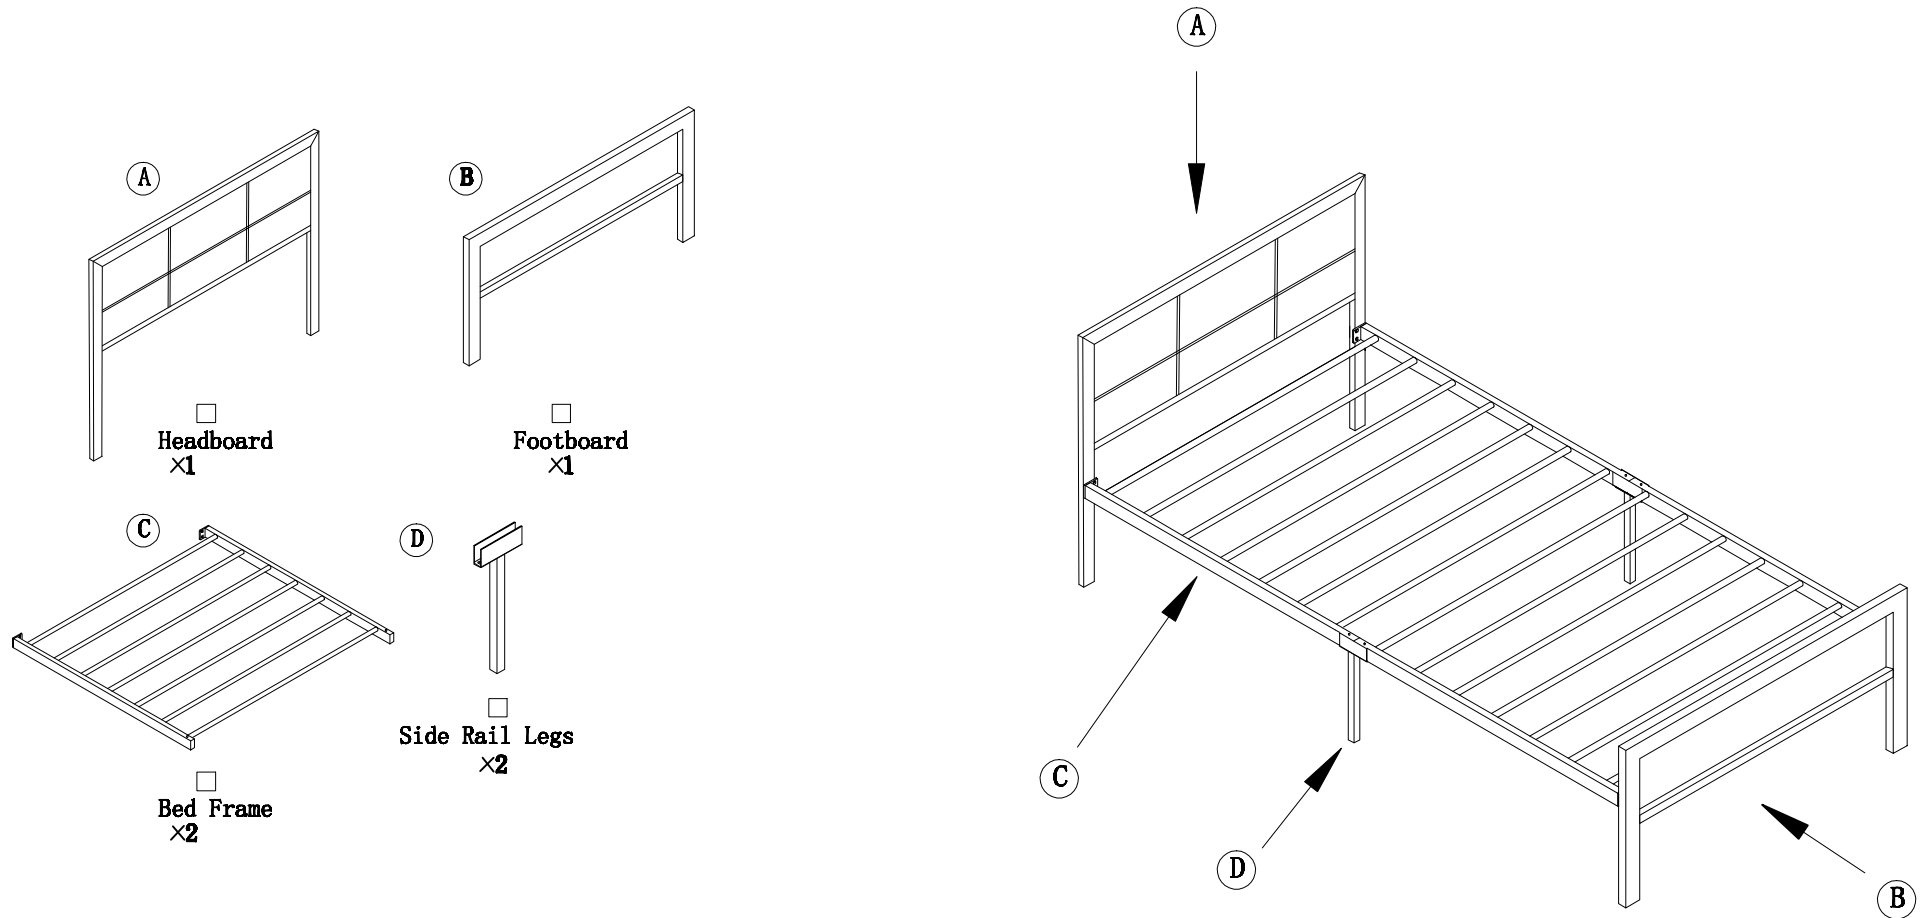


## Note:

All parts are contained in one box. It is required that at least two people assemble this item. Please follow all instructions in or to assemble easily

## Hardware Pack


The following hardware drawings on the left are to scale. During assembly if you are unsure which piece to use, please refer to this page and you can match the drawing to the right hardware.

①




M8 × 2"  
× 4

②




1/4" × 5/8"  
× 8

③

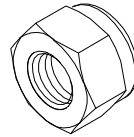


M8  
× 4

④

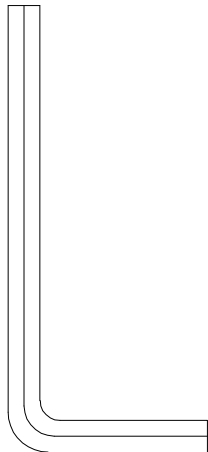


4mm  
× 1

⑤

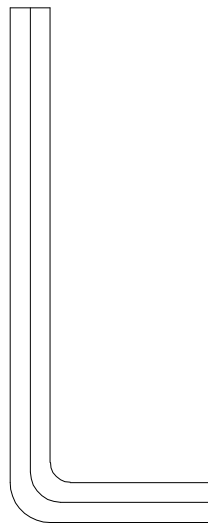

5mm  
× 1

⑥

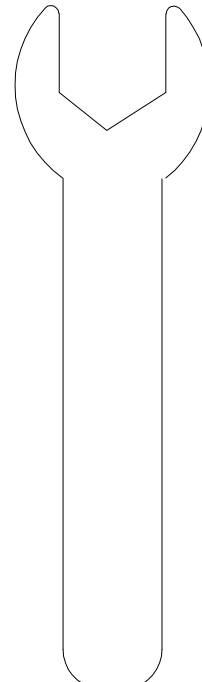


× 1





### Hardware Note:

Please do not completely tighten all the hardware, until the entire assembly is complete, unless otherwise indicated in the step-by-step instructions

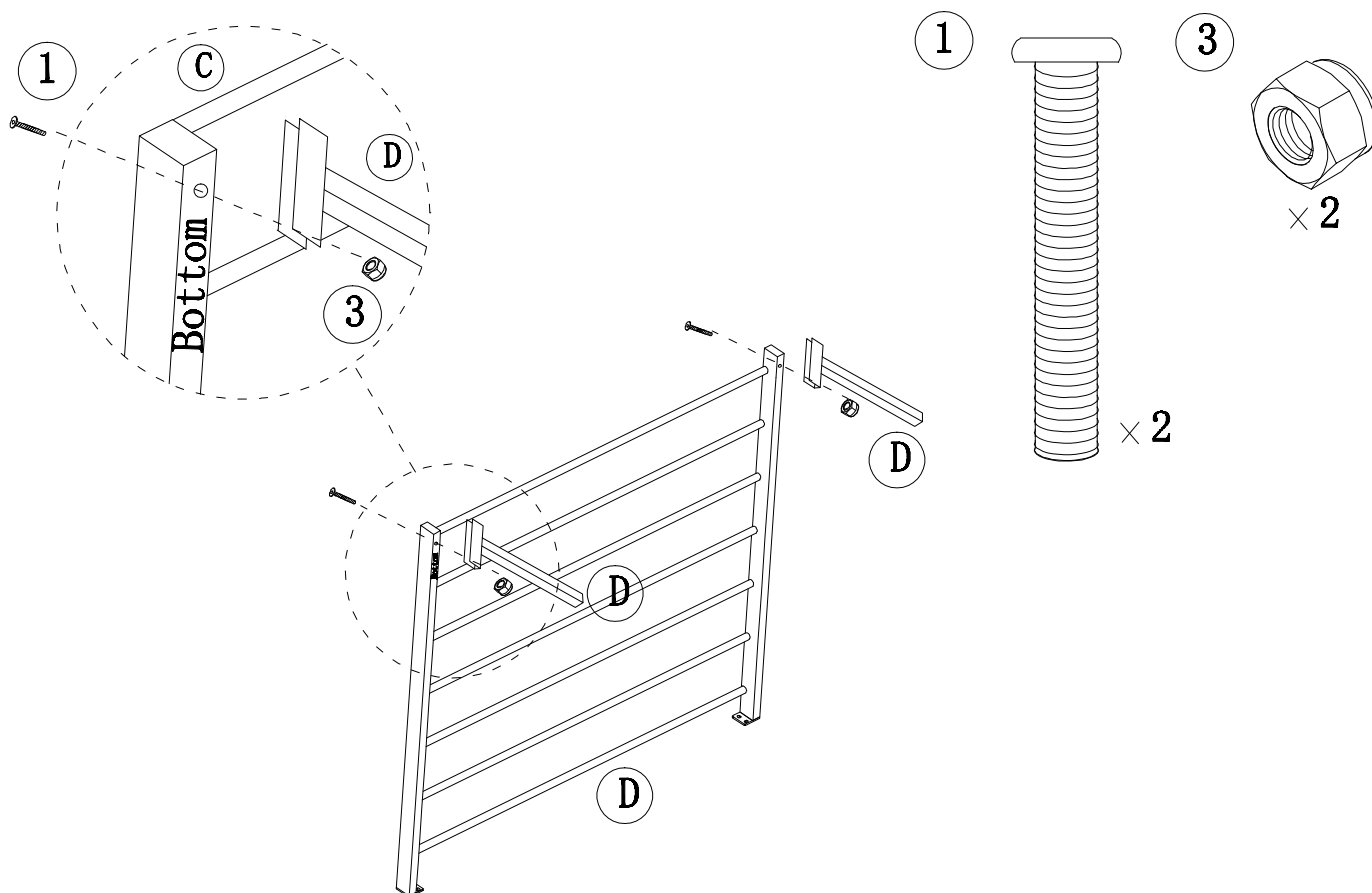


Step 1. Assemble the side rail legs onto the base frame, this can easily be done by having the frame upright like the photo. Use bolts (1) from the top side and nut (3) from the bottom to attach the legs. Attach the legs to the bottom of the bottom sticker, make sure only one bolt is only placed in. The finished look of Step 1 will look like the image below

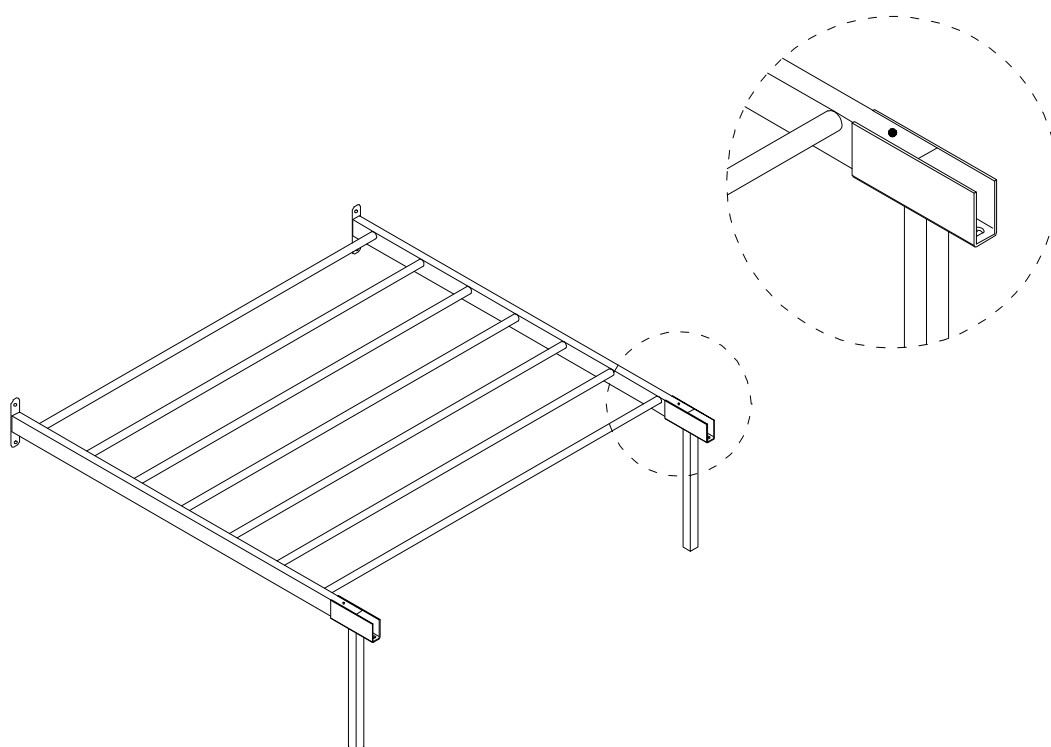


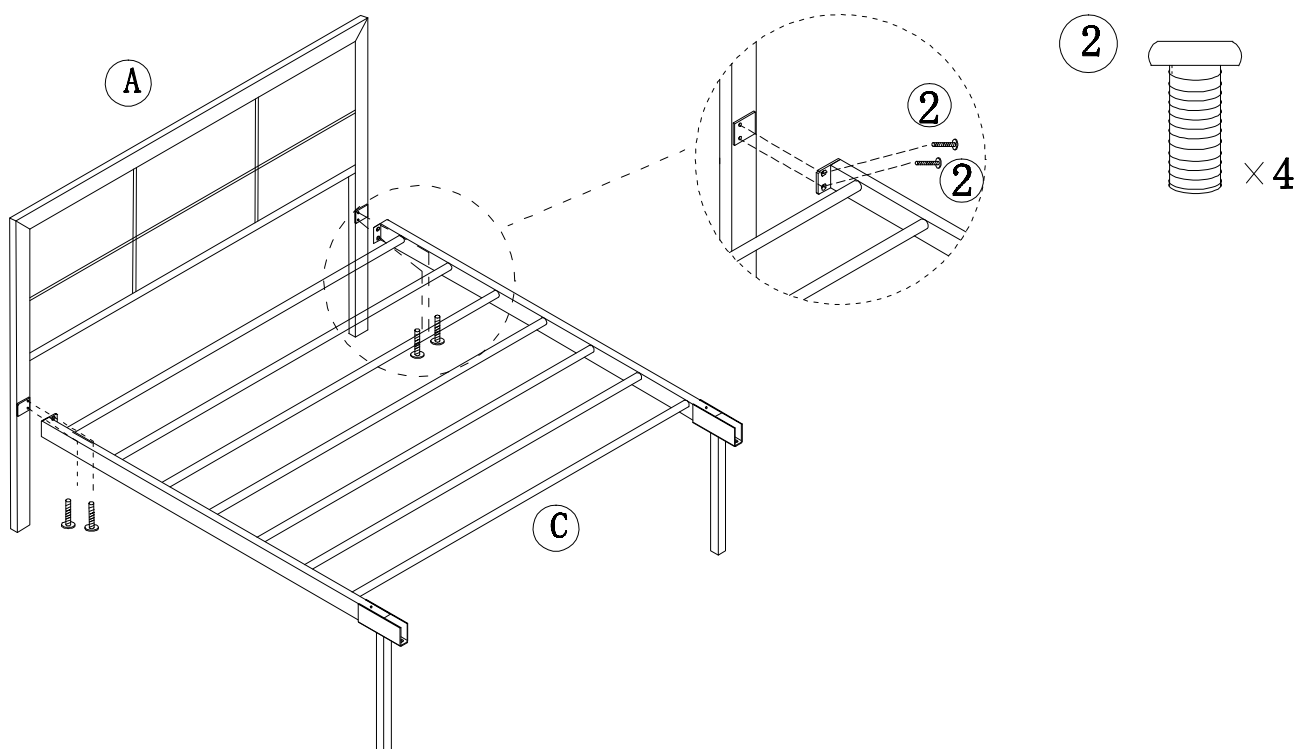


Step 2. Assemble the base frame to the headboard by aligning the holes of the end of the base frame to the holes of the headboard. Use bolts (2) to attach the base frame to the headboard. Do not tighten the bolts until the bed is complete to allow movement for pieces.

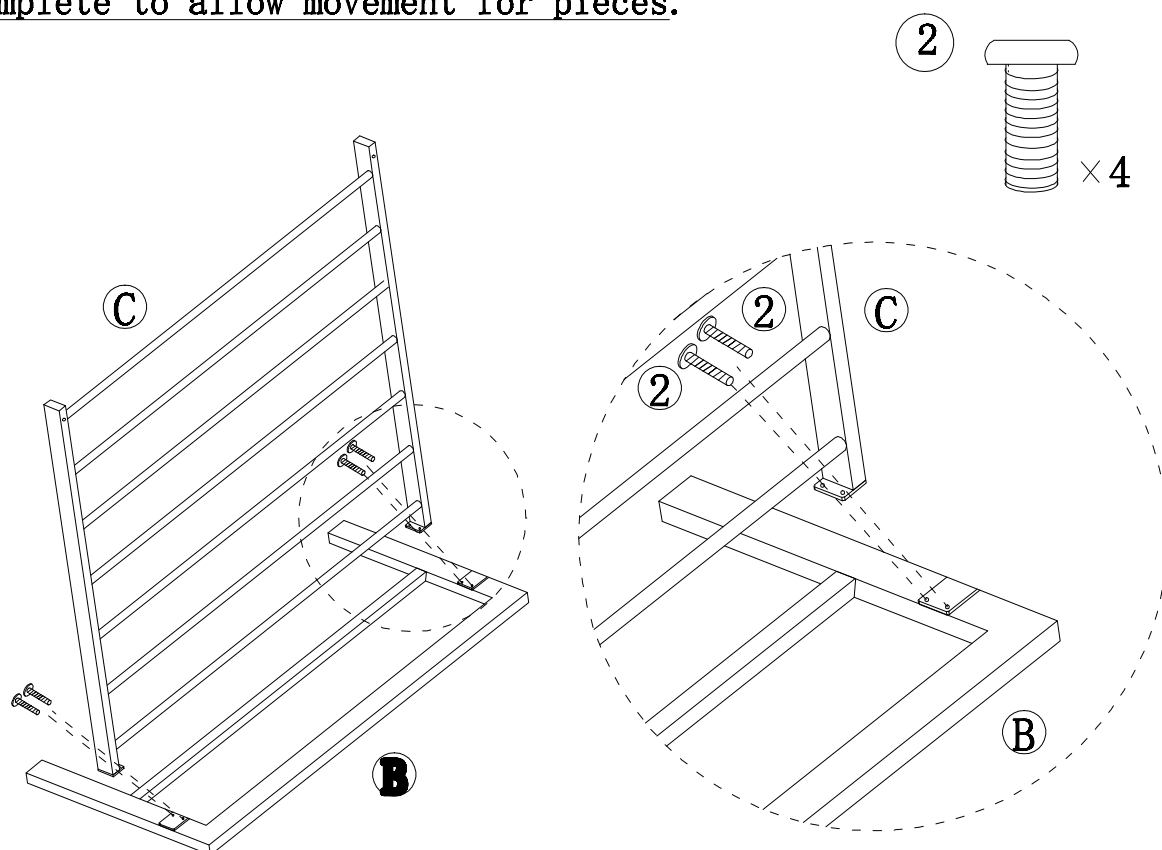

Step 3. Attach the remaining bed frame to the footboard. Have the footboard on a flat soft surface with the holes facing up like the image. Align the base frame holes to the holes of the footboard. Use bolts (2) to attach the base frame to the headboard. Do not tighten the bolts until the bed is complete to allow movement for pieces.

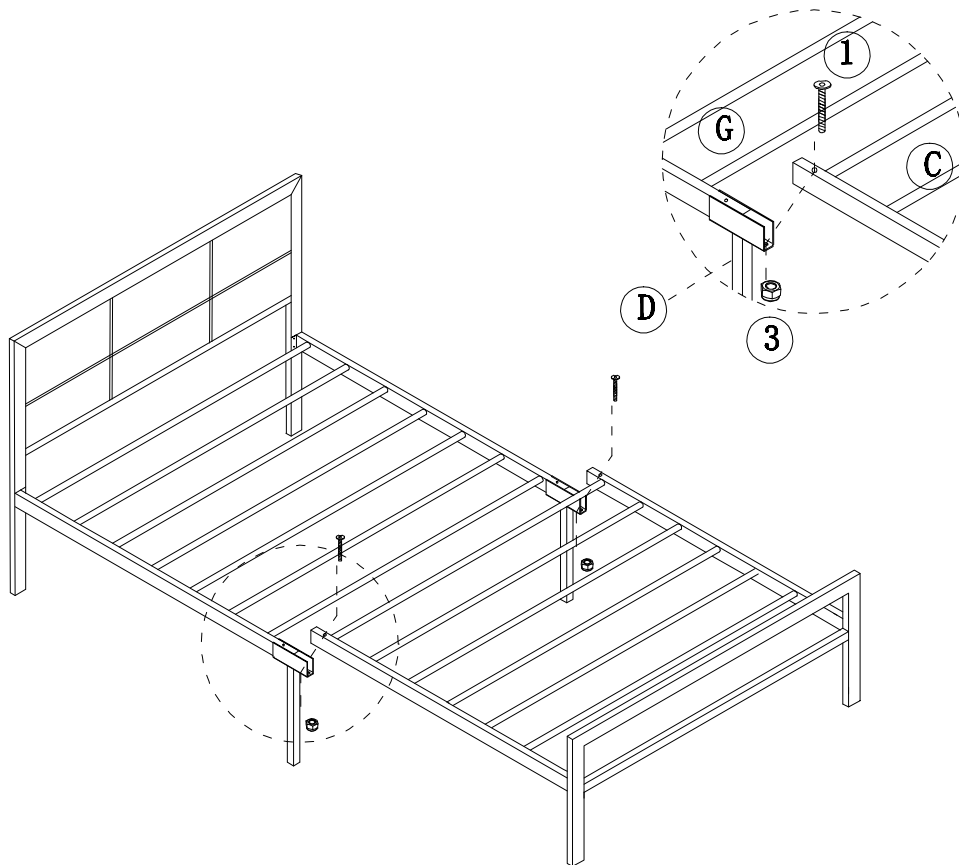

Step 4. Attach the footboard and base frame piece to the headboard like the image. Use bolts (1) from the top and use nut (3) from the bottom to secure the two pieces. Once all bolts are assembled, remember to tighten all the previous bolts.

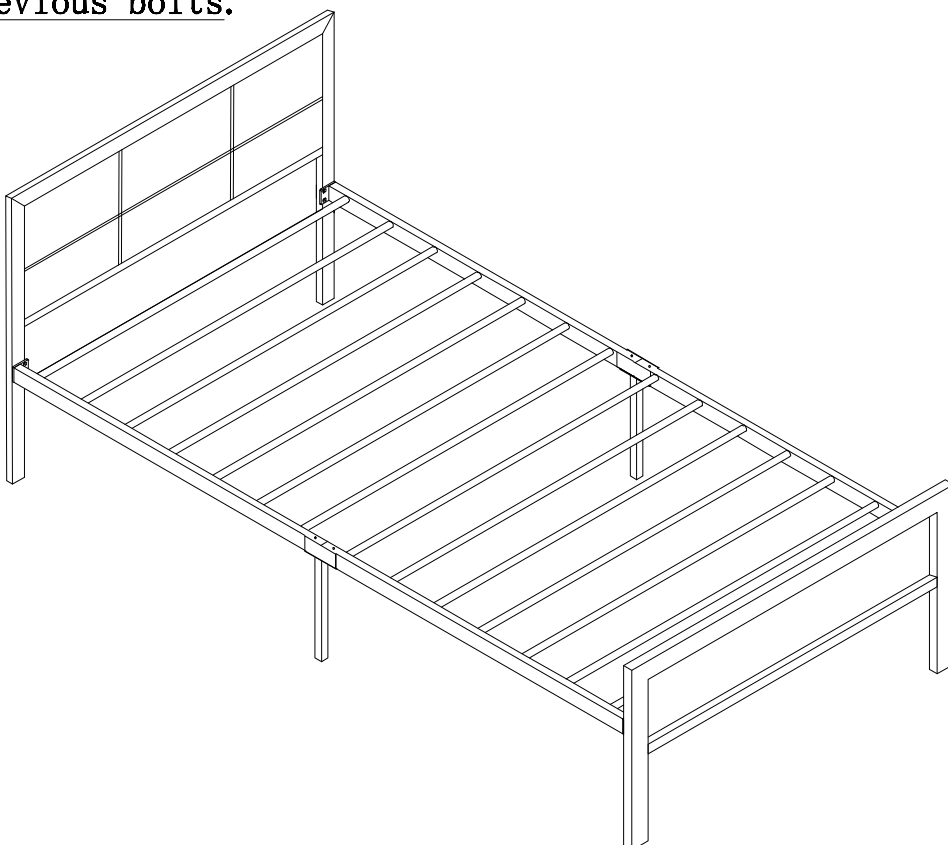

Your bed is now complete! Please keep the tools that were used just in case the bolts come loose in the future. The bed is a platform bed so a box spring is not required.