



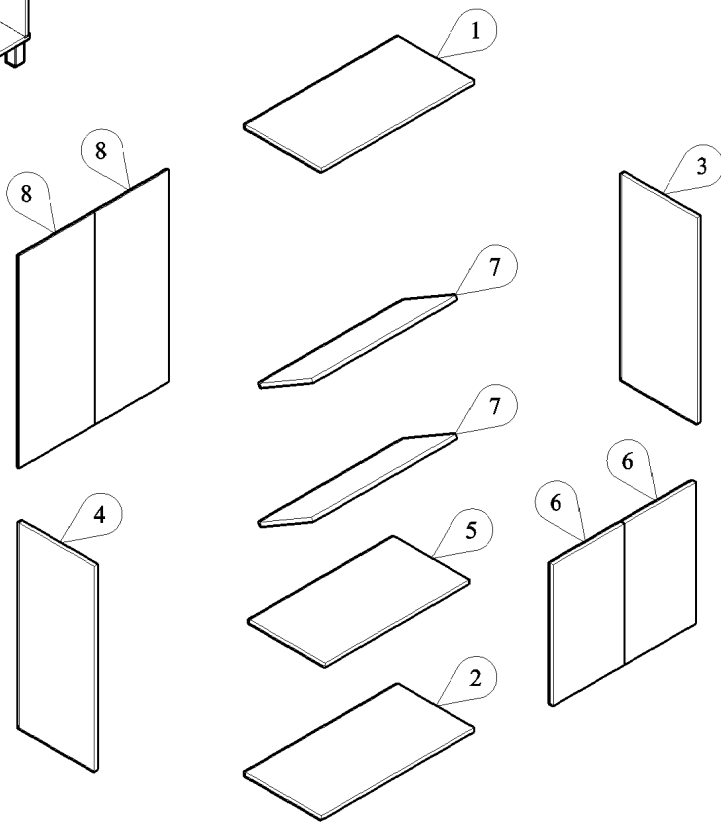

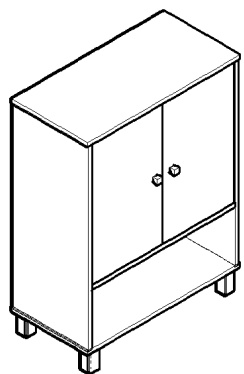













Installation & Assembly

PANEL POSITION




	ACCESSORIES	QUANTITY
A	 CPWOOD SCREW M6 x 50MM	12 PCS
B	 IRON SHELF SUPPORT	8 PCS
C	 POWER PIN	22 PCS
D	 BROWN MAGNET STEEL PLATE SCREW M3 x 12MM	1 PC 2 PCS 2 PCS
E	 DOOR HOLDER (BLACK) SCREW M3 x 12MM	4 PCS 8 PCS
F	 PVC SQUARE KNOB (BLACK) SCREW M4 x 25MM	2 PCS 2 PCS
G	 PVC LEG (BLACK) SCREW M3.5 x 16MM	4 PCS 16 PCS
H	 PVC "H" RAIL	1 PC
I	 ALLEN KEY	1 PC
J	 NYLON CABLE	1 PC
K	 WALL PLUG	1 PC
L	 SCREW M4x28MM	1 PC
M	 WOSE	2 PCS
N	 SCREW M3.5x16MM	1 PC

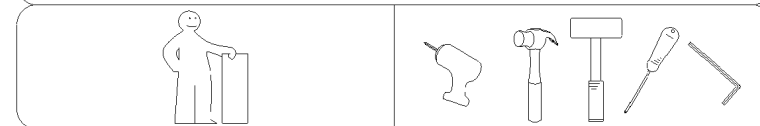




START ASSEMBLY


STEP 1

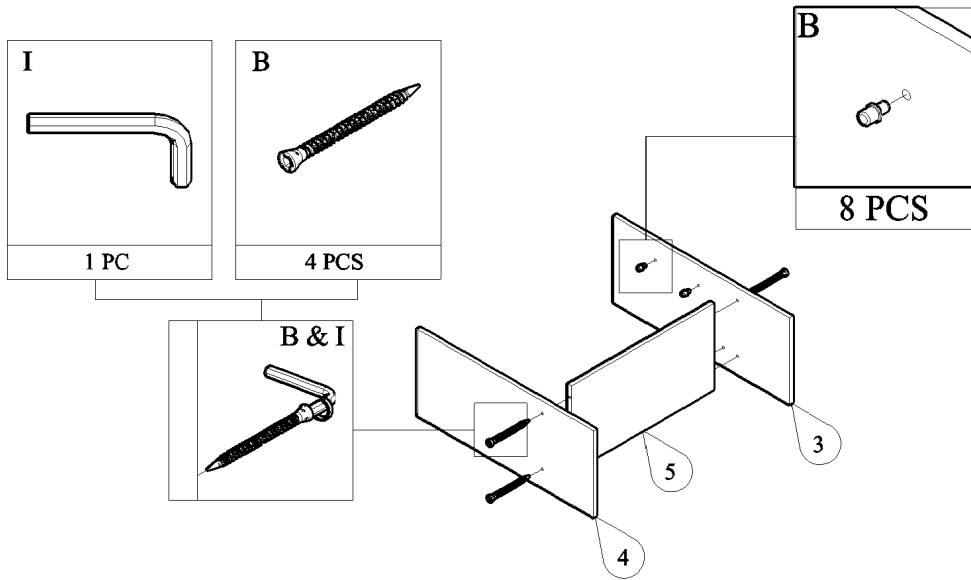


STEP 2

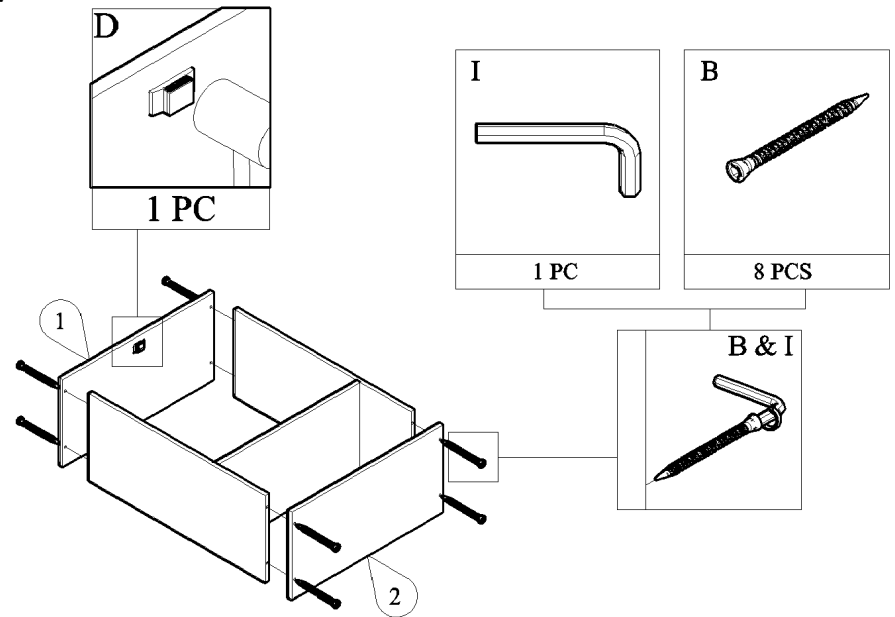


STEP 3

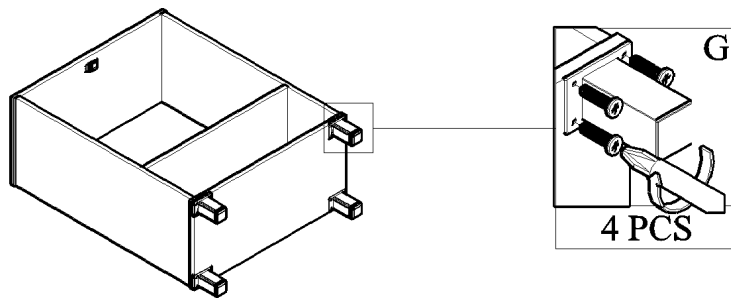


STEP 4

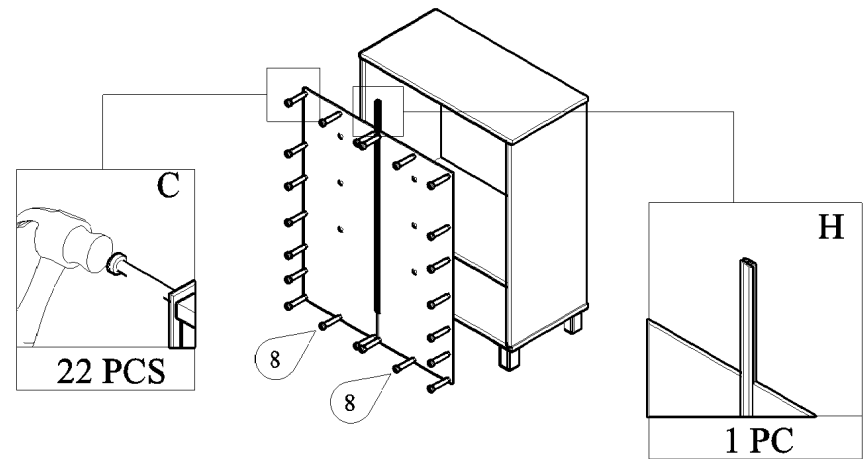


STEP 5

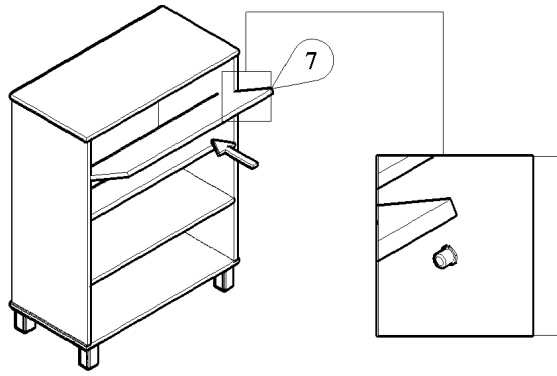


STEP 6

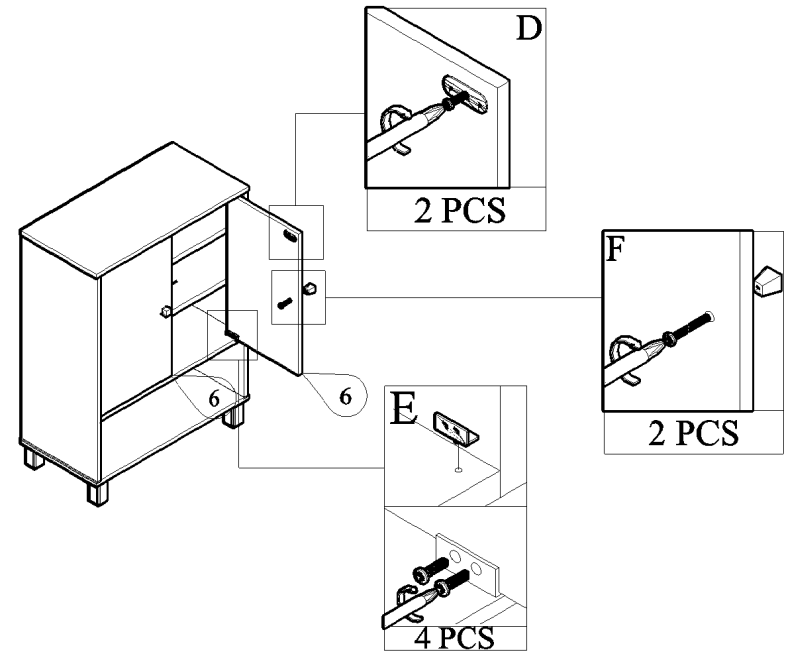






STEP 7

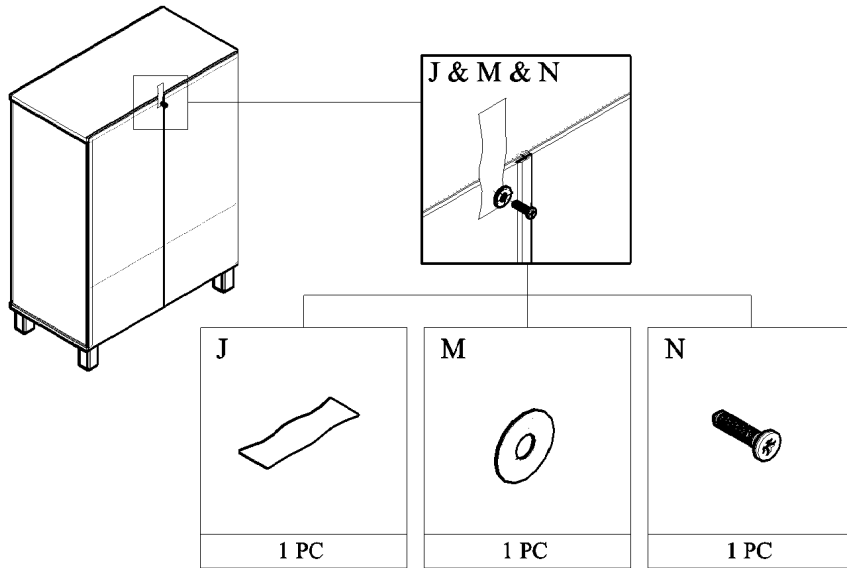

STEP 8

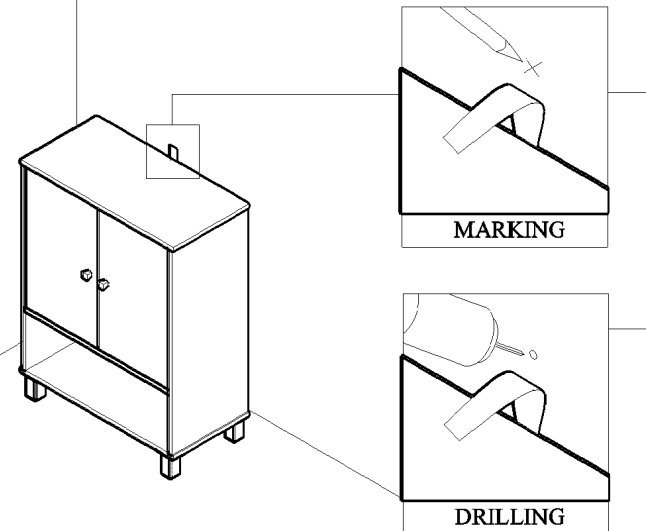

STEP 9

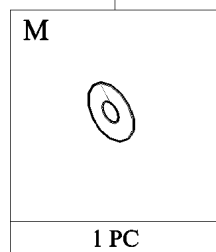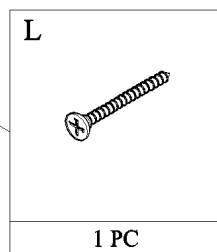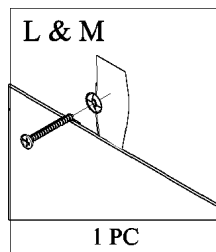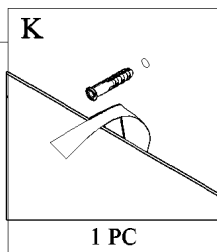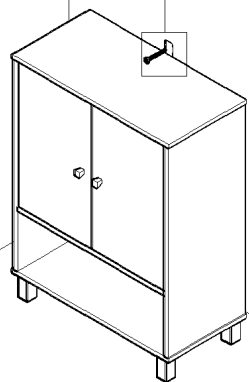

COMPLETED

