


ASSEMBLY INSTRUCTION

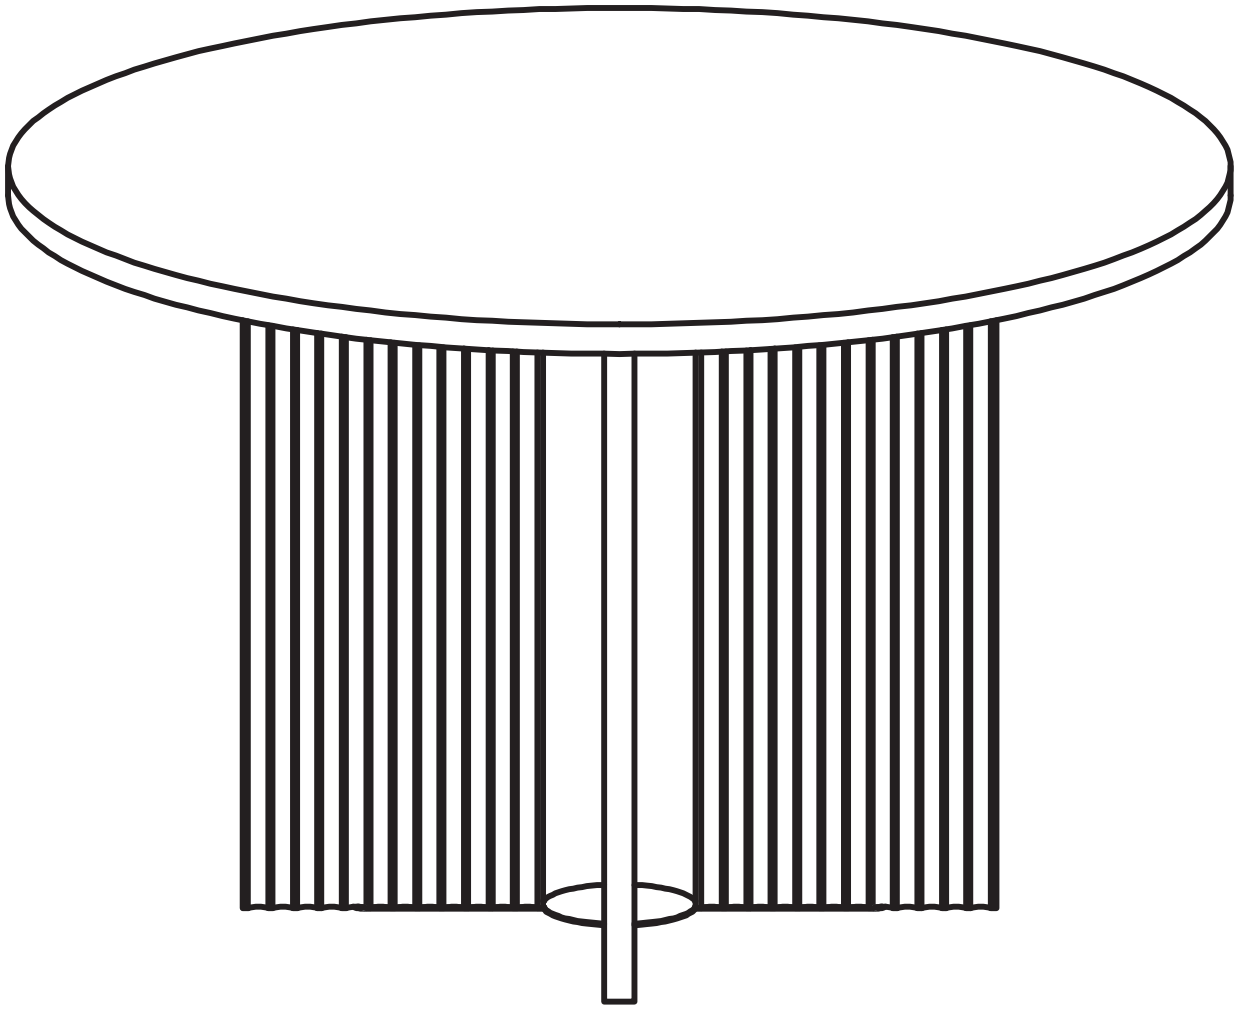


If you need any help during assembly, please contact us at **cs@wellzone.life**
Sharing a video and a brief description of where you're stuck will help us assist you better.

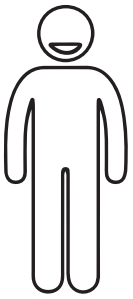

× 2

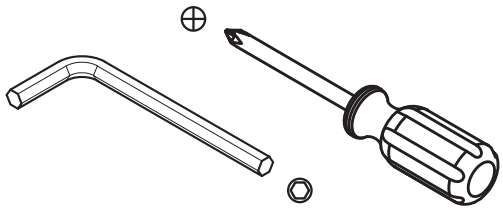

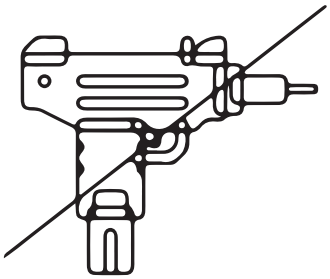


Before You Begin

Two people are recommended for the assembly.


Use the included tools.


If using a power tool, use low power and torque.


Installation of Eccentric Unit

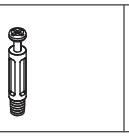	Bolt


	Connecting piece

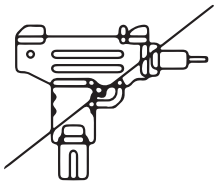

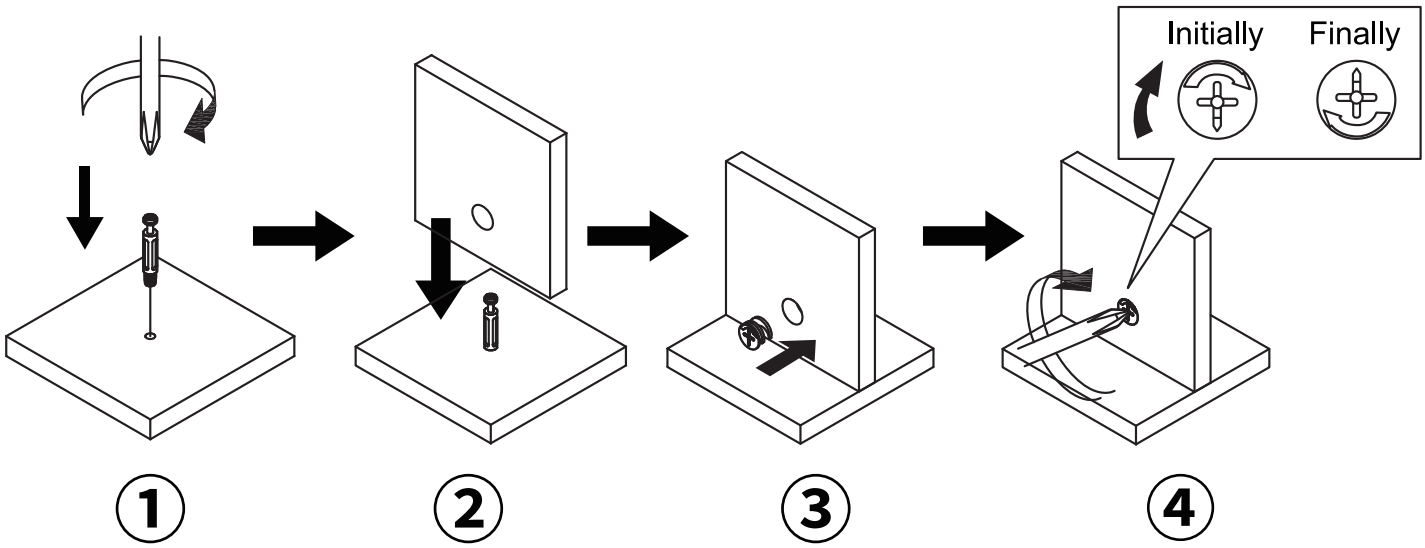

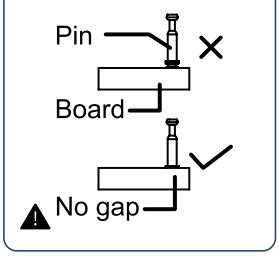


⚠ Adjust connecting piece direction as illustrated.

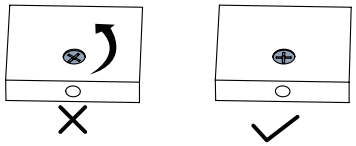


⚠

Insert bolt when the connecting piece is as shown in Figure 2.


① X 1

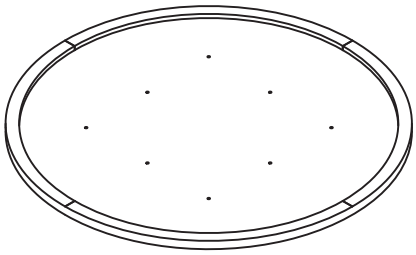


② X 1

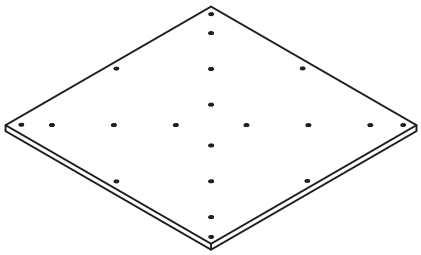


③ X 4


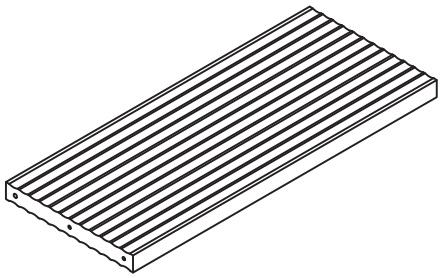



④ X 1

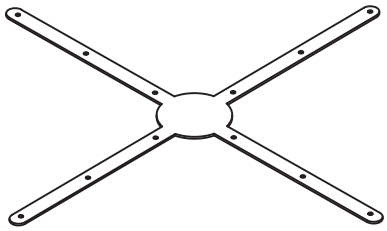

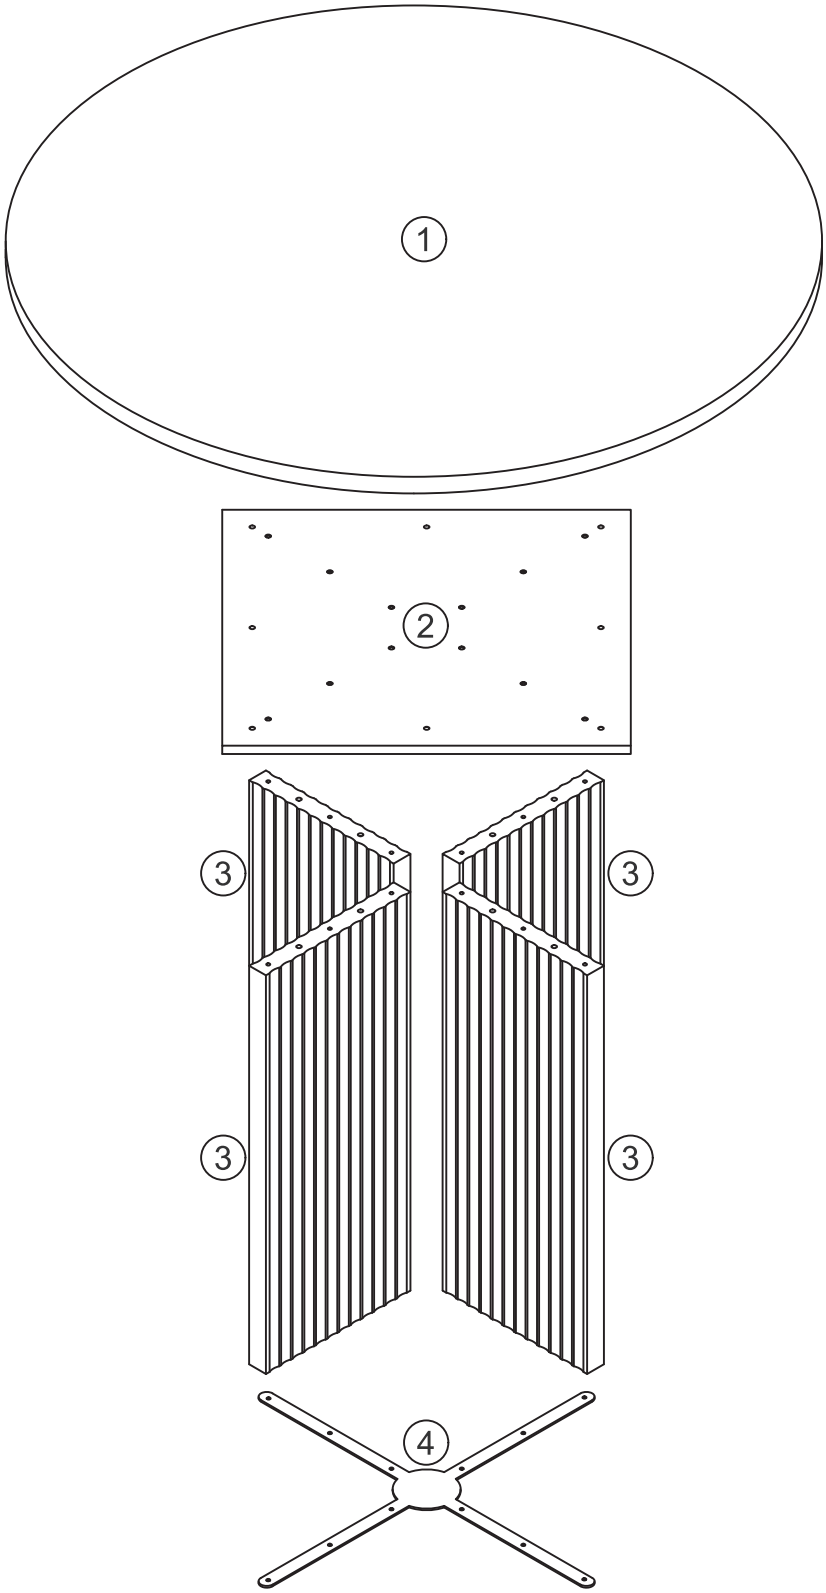


Package Contents: Hardware *Please count and verify all parts before assembly.*

A x 8+2	B x 20+2	C x 8+2	D x 4+2	E x 8+2	F x 1+1
					
M6x20mm	Ø7x38mm	Ø7.8x30mm	Ø22x6/M6*18mm	Ø20mm	4mm

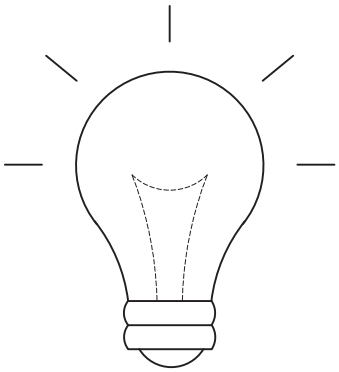



friendly reminder

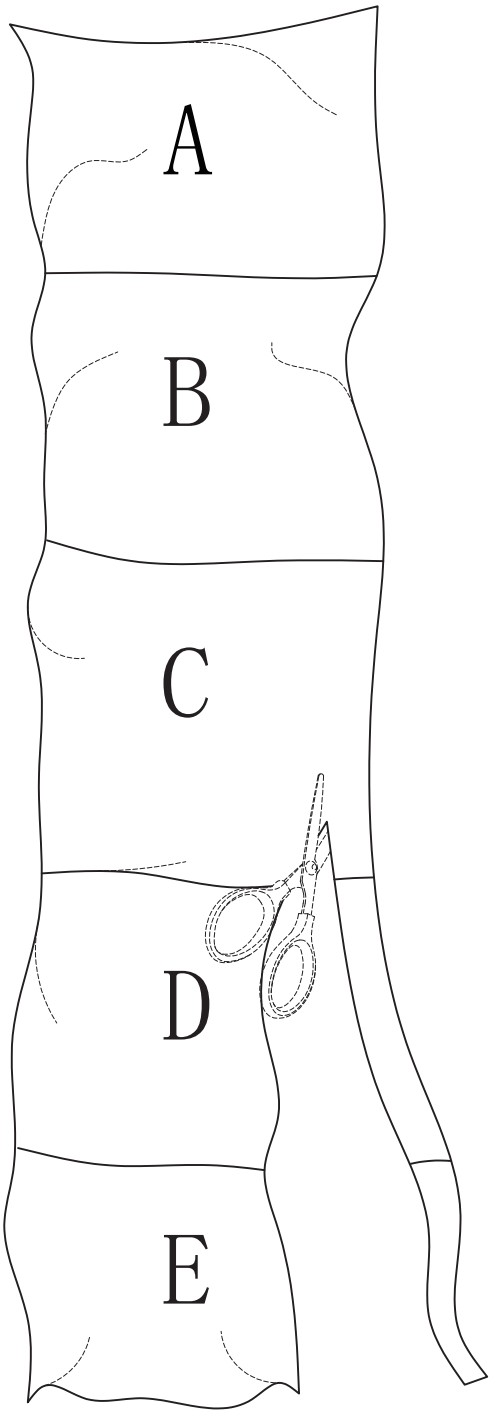

To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

01

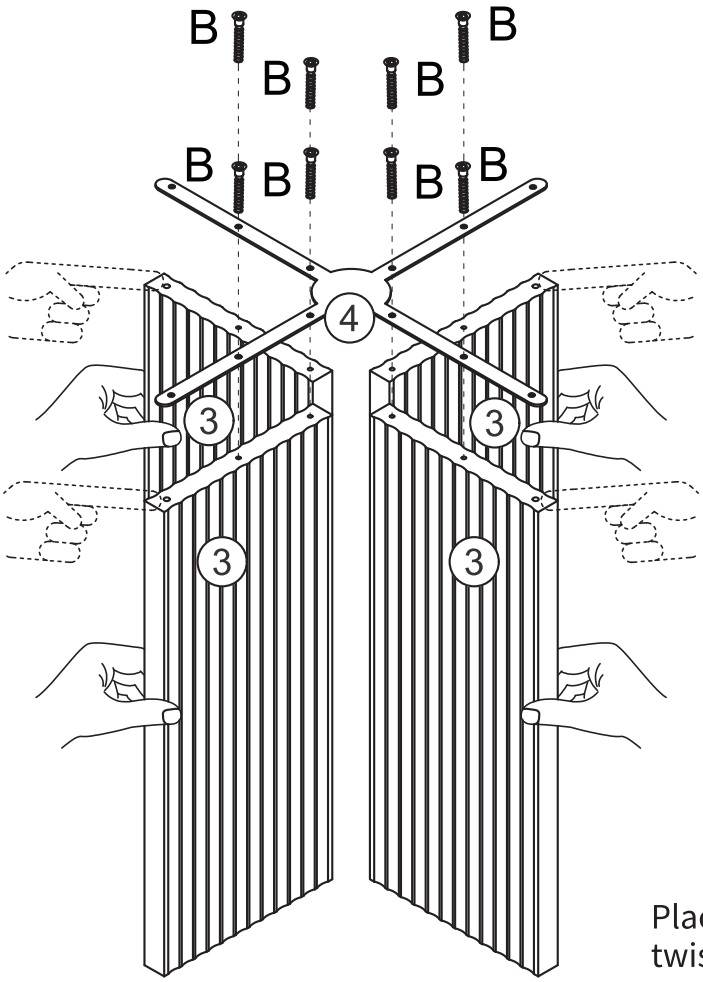

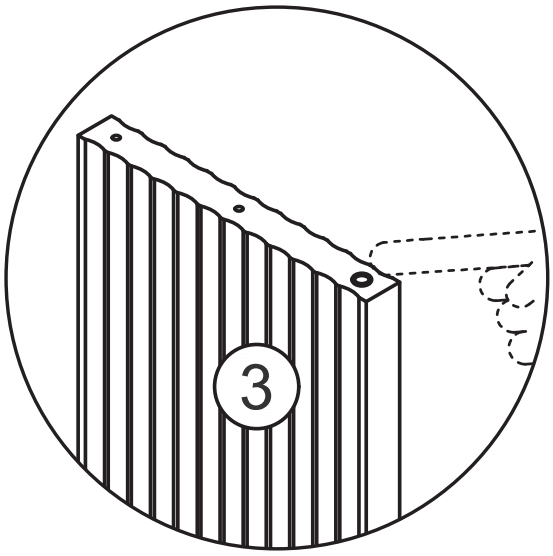

Note: Please ensure the largest hole of (3) faces outward.

F x 1





B x 8



Place (4) on (3),
twist (B) through (4) into (3) to secure.

02

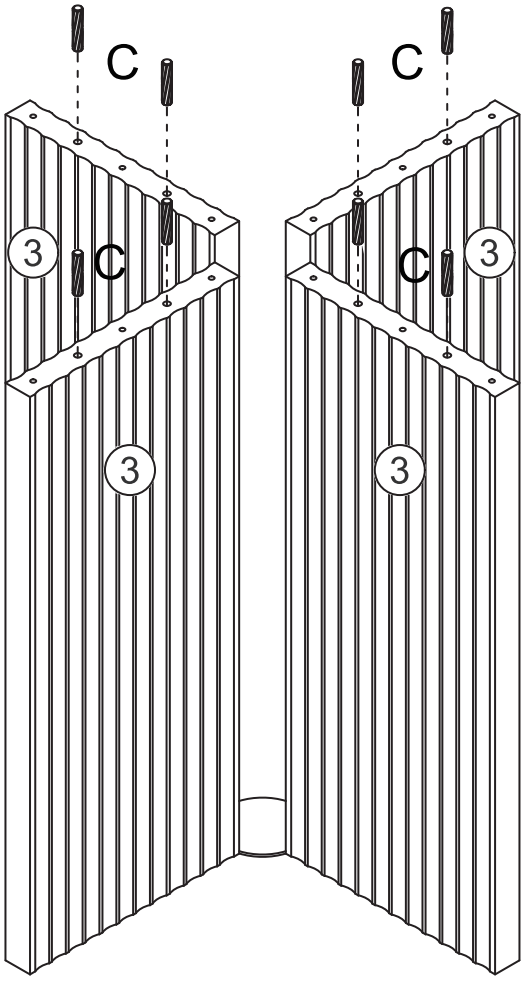

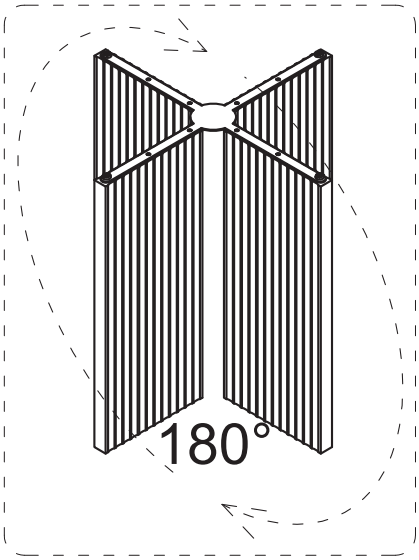


When flipping the product, handle it gently to avoid damaging any components.


C x 8





Turn the product over and
insert (C) into the holes of (3).

03

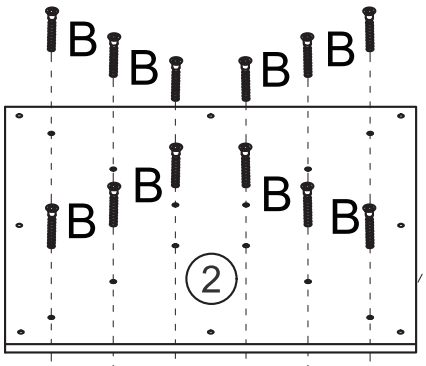

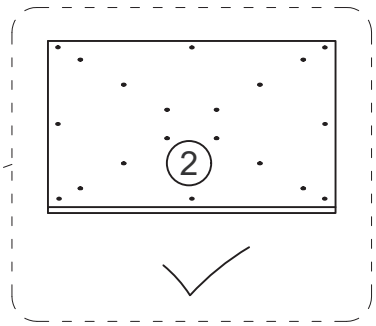

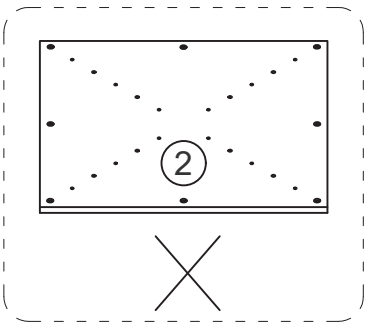

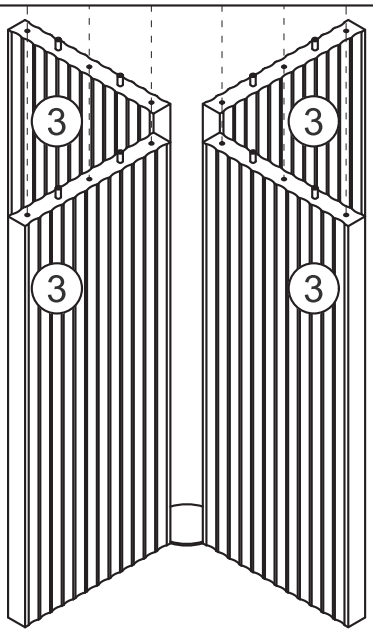

F x 1





B x 12



Connect (2) with (3).
Twist (B) through (2) into (3) to secure.

04

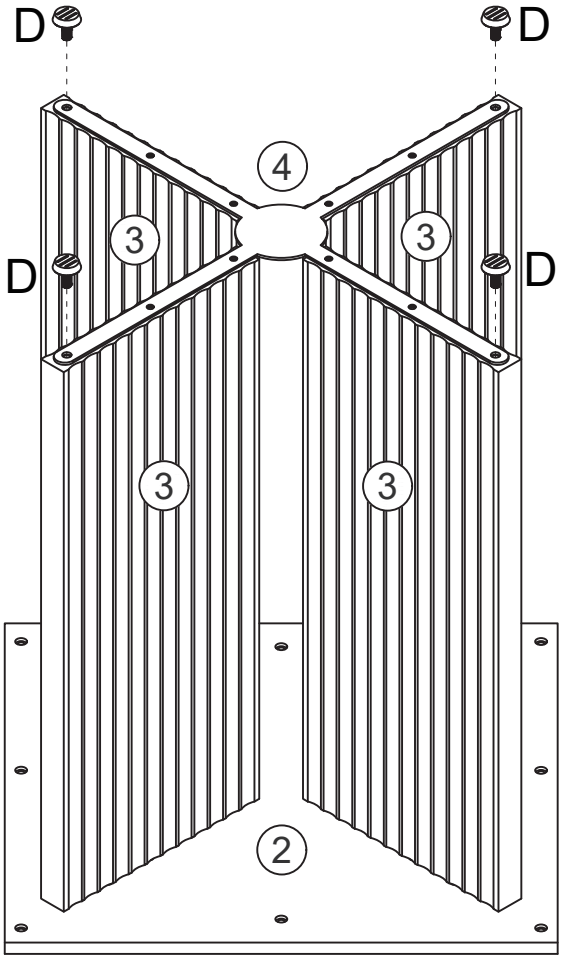

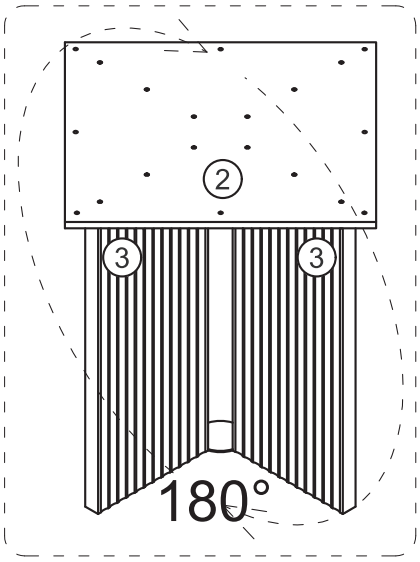


When flipping the product, handle it gently to avoid damaging any components.


D x 4



Twist (D) through (4) into (3).

05

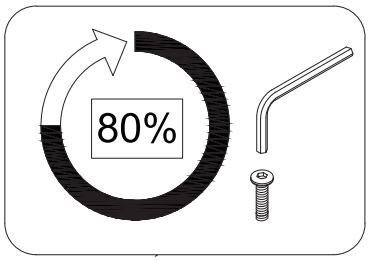

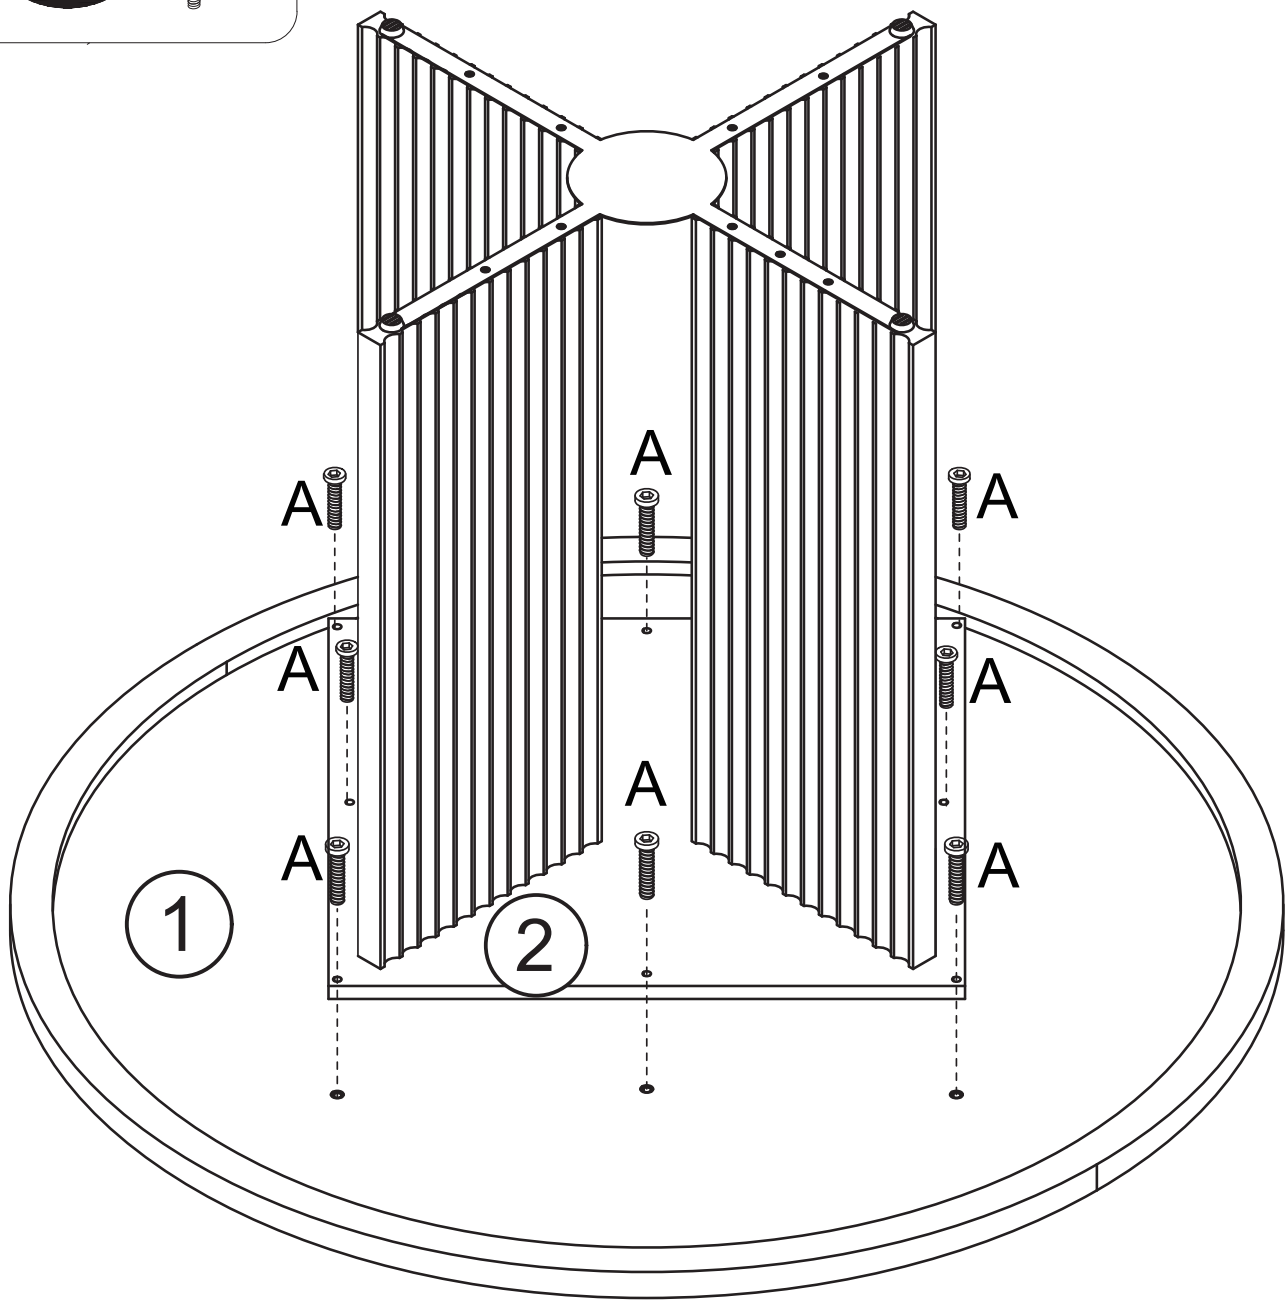

F x 1



A x 8





Turn the product over.
Twist (A) through (2) into (1).

Note:

Do not fully tighten the first seven (A); tighten each to about 80% only. After the last (A) is installed, fully tighten all of them.

06

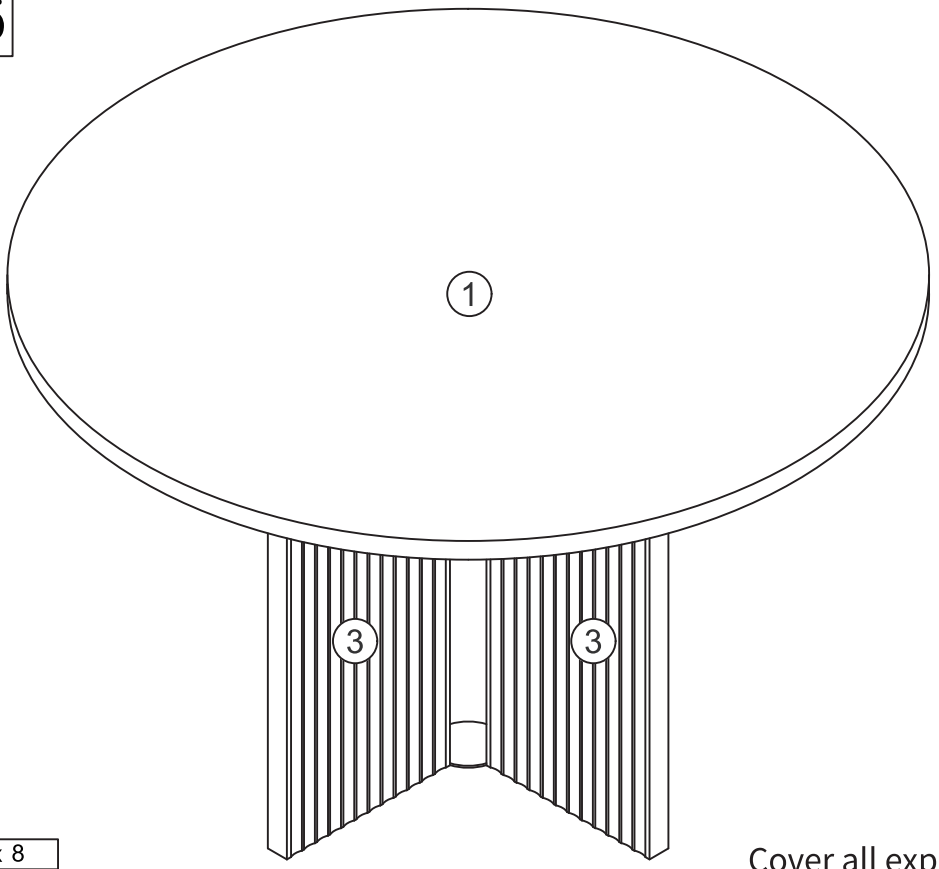

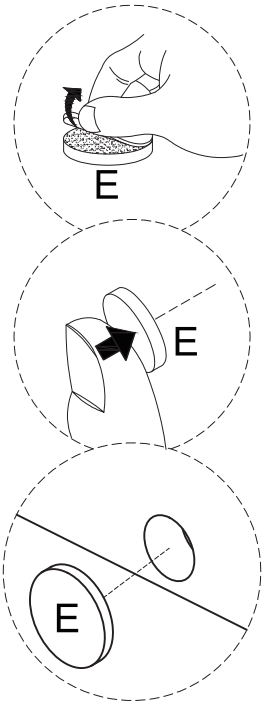


E x 8




Ø20mm

Cover all exposed holes with sticker (E) for a clean and neat look.

07

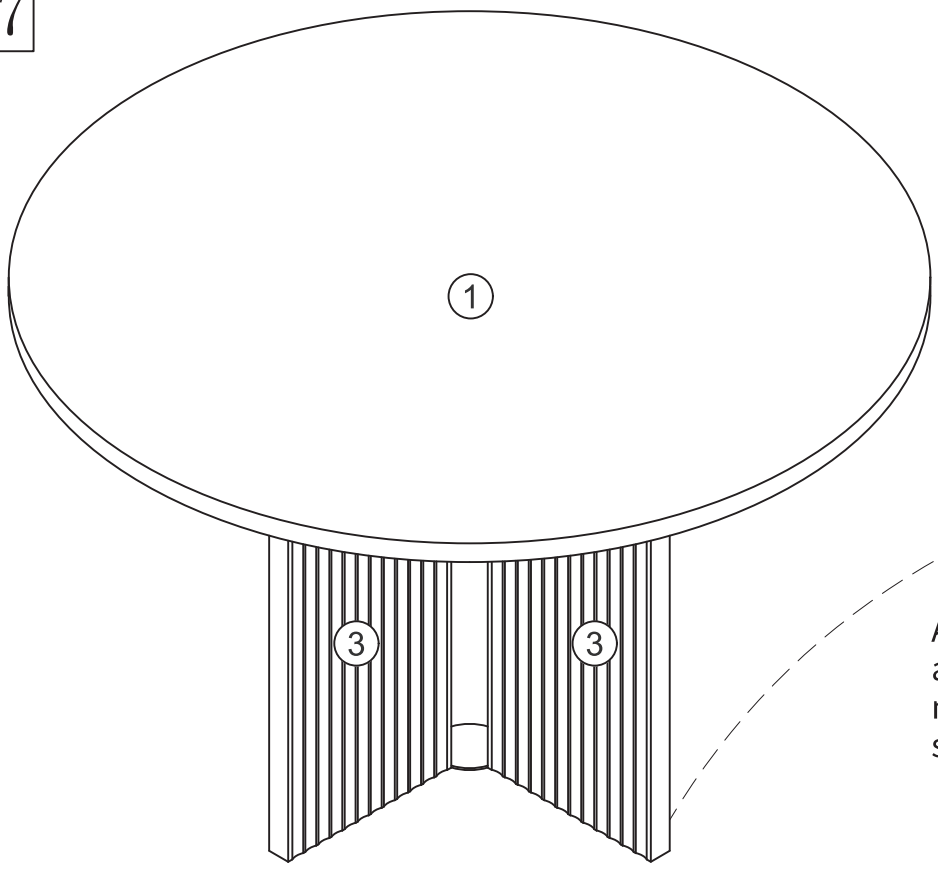

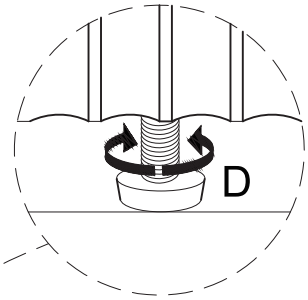

After assembly is complete, adjust leveling foot (D) as needed to keep the product stable and level.

Finish