


ASSEMBLY INSTRUCTIONS

24INCH BATH VANITY (COMBO)



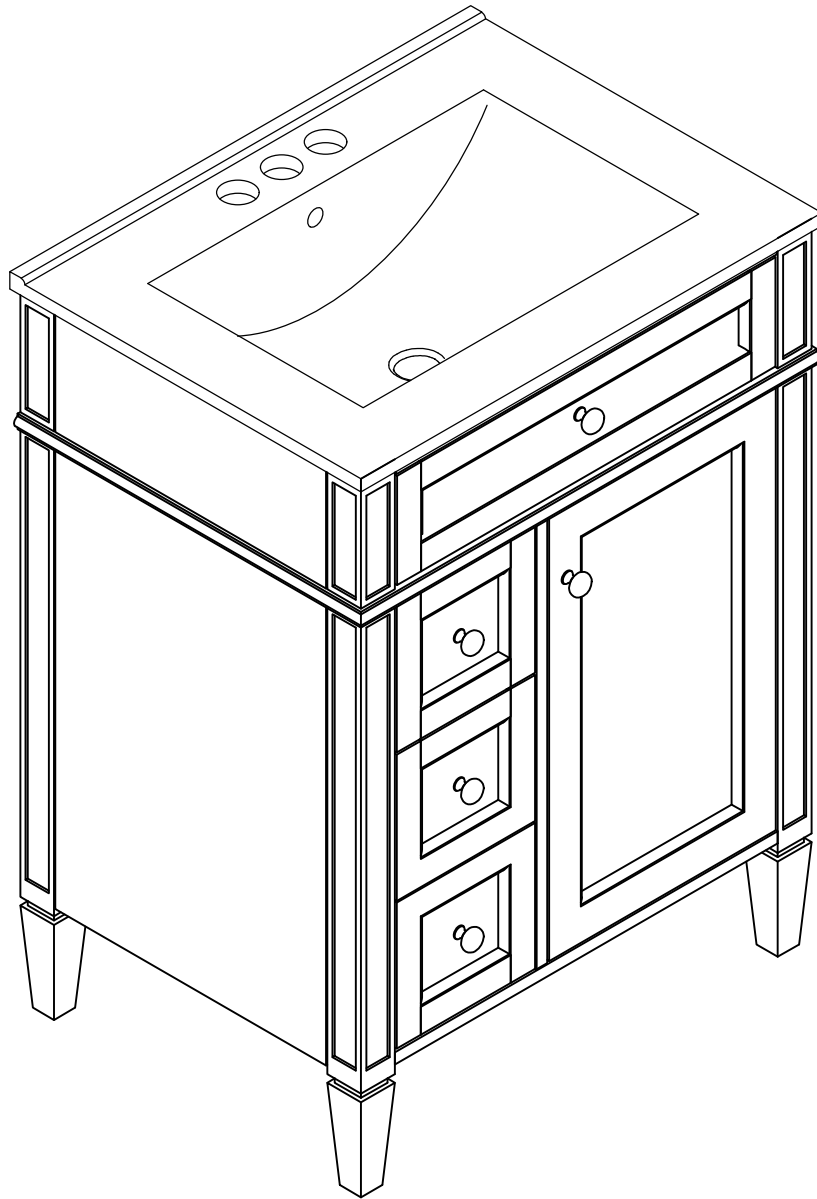


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

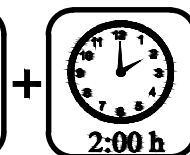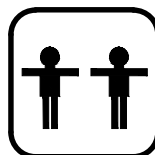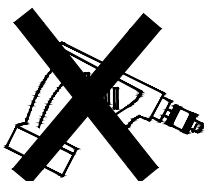

Tools Required




(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

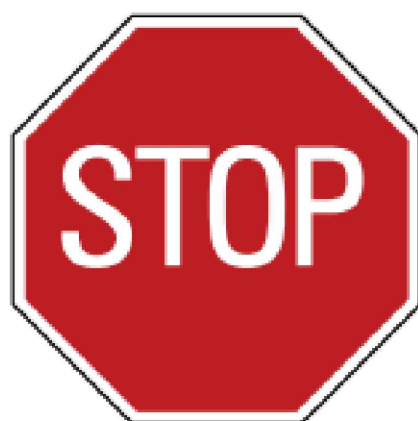

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation








Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions

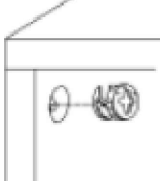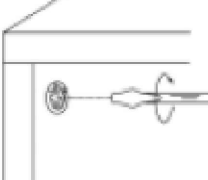		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>


Detail View - VANITY

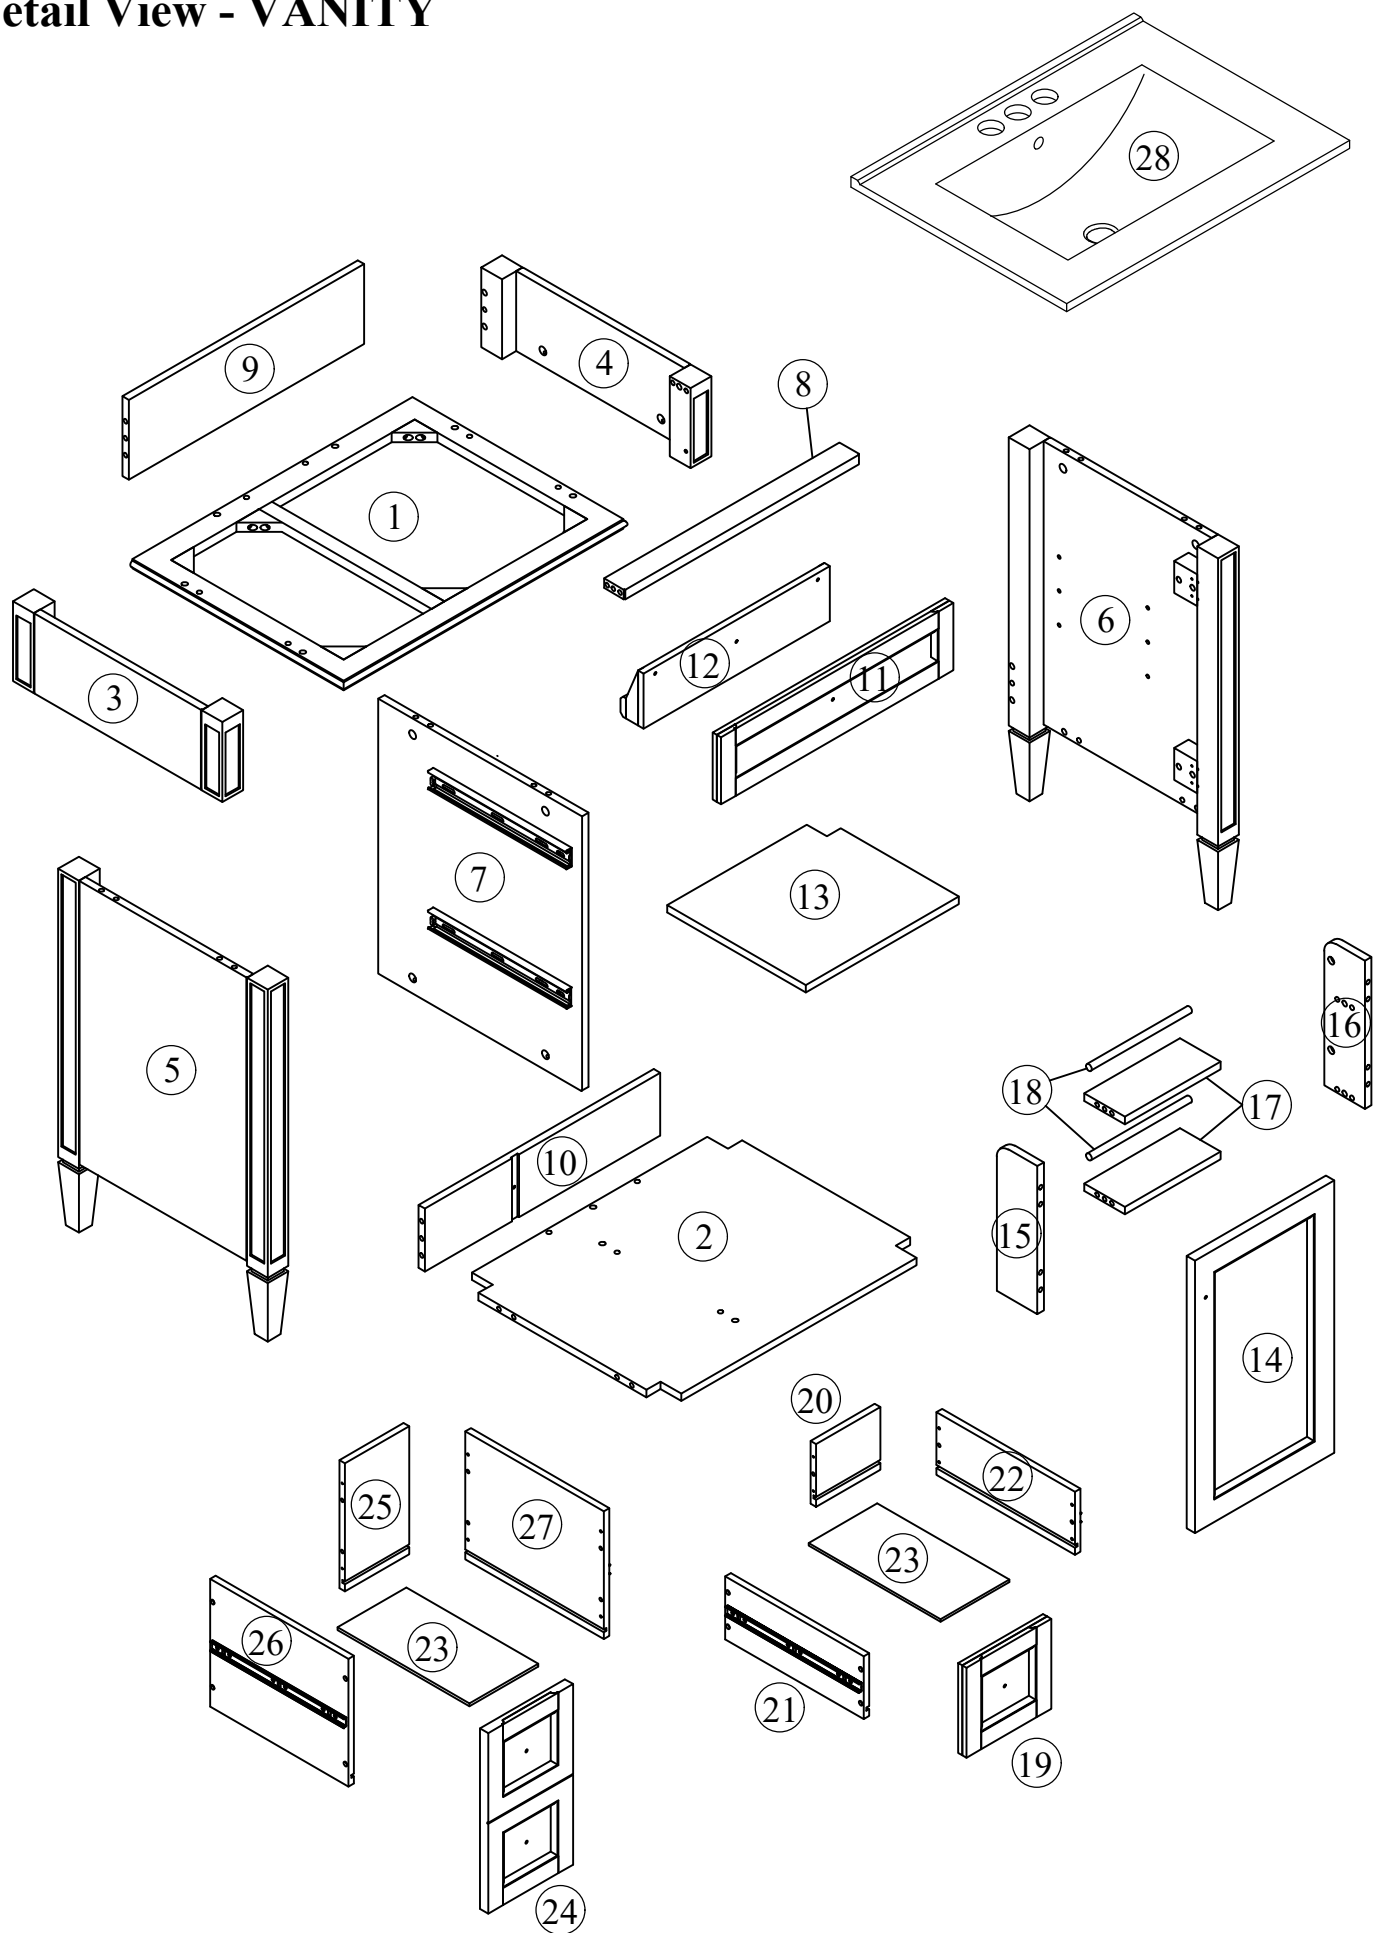

Identifying the Hardware - Identify the hardware using the illustrations below.


Part List

1

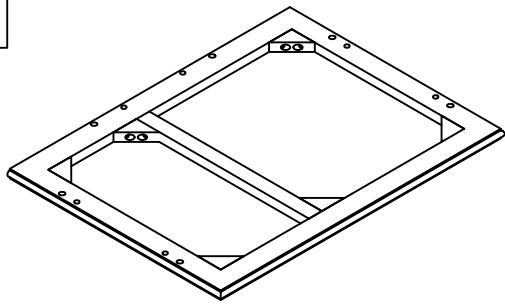


Top Frame - 1pc

2

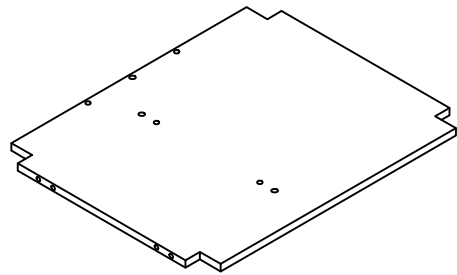


Bottom Panel - 1pc

3

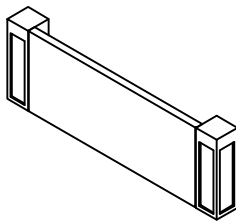


Top Side Panel (L) - 1pc

4

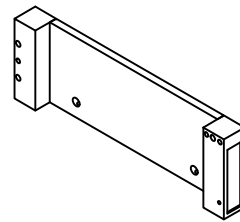


Top Side Panel (R) - 1pc

5

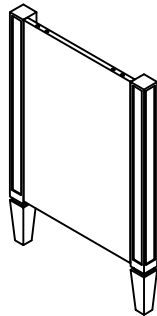


Bottom Side Panel (L) - 1pc

6

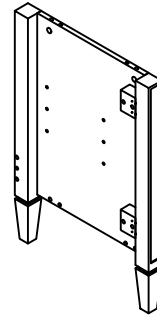


Bottom Side Panel (R) - 1pc

7

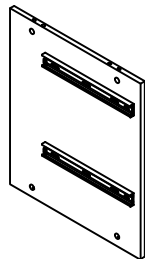


Mid Panel - 1pc

8

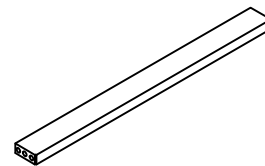


Top Bar Front - 1pc

9

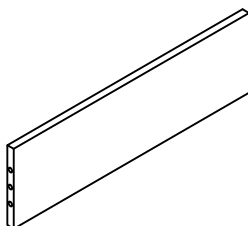

Top Rear Panel - 1pc


10

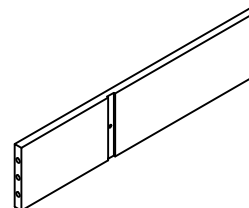

Bottom Rear Panel - 1pc


Part List

11

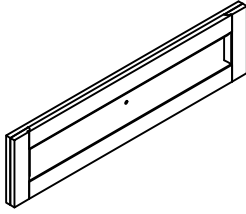


Flip Drawer Face - 1pc

12

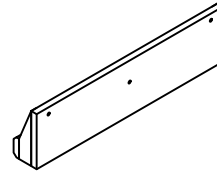


Flip Drawer - 1pc

13

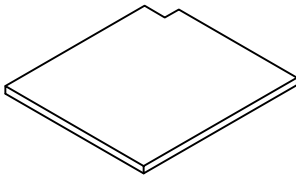

Adjustable Shelf - 1pc

14

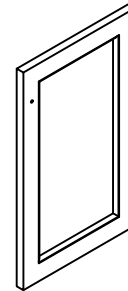


Door - 1pc

15




Door Side Panel (L) - 1pc

16




Door Side Panel (R) - 1pc

17

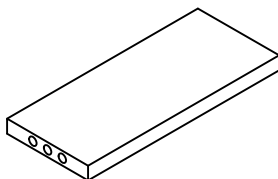


Door Mid Panel - 2pcs

18




Round Bar - 2pcs

19

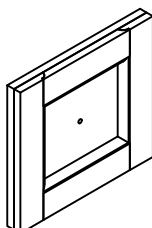









Top Drawer Face - 1pc

20








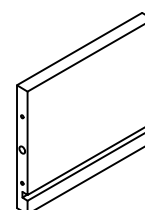


Top Back Drawer - 1pc

Part List

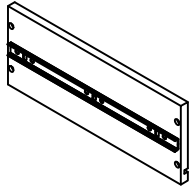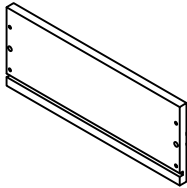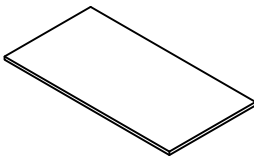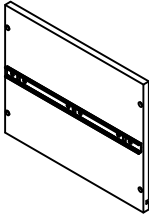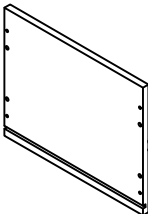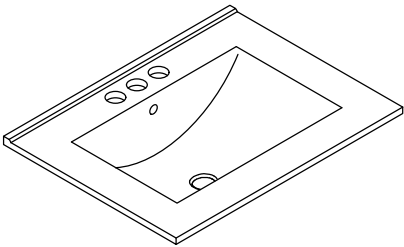
21  Top Side Drawer (L) - 1pc	22  Top Side Drawer (R) - 1pc
23  Bottom Drawer - 2pcs	24  Bottom Drawer Face - 1pc
25  Bottom Back Drawer - 1pc	26  Bottom Side Drawer (L) - 1pc
27  Bottom Side Drawer (R) - 1pc	28  Sink - 1pc

Hardware List




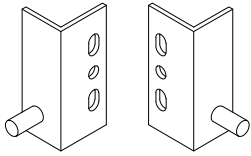



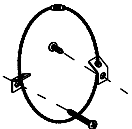
A  $\varnothing 6 \times 35 \text{mm}$	B  $\varnothing 14.5 \times 12 \text{mm}$	C  Handle - 5pcs
D  $\varnothing 5/32" \times 25 \text{mm}$ Handle screw - 5pcs	E  Duo Forte (1pc)	F  Rotary Hinge(2pcs)
G  $\varnothing 6 \times \varnothing 3 \times 12 \text{mm}$ Round head screw(8pcs)	H  Damping hinge - 2pcs	I  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw - 12pcs
J  Laminate pad (4pcs)	K  $\varnothing 8 \times \varnothing 4 \times 19 \text{mm}$ Round head screw - 2pcs	L  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw - 1pc
M  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw - 16pcs	N  $\varnothing 6 \times 30 \text{mm}$ Wood dowel - 12pcs	O  $\varnothing 8 \times 30 \text{mm}$ Wood dowel - 40pcs
P  Anti fall hardware (2sets)		

STEP: 1


A




29PCS

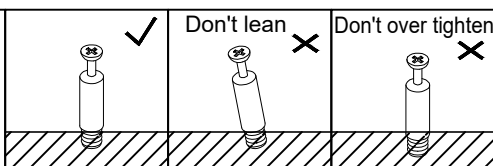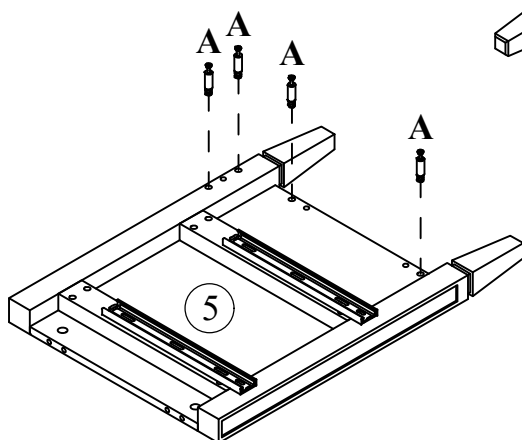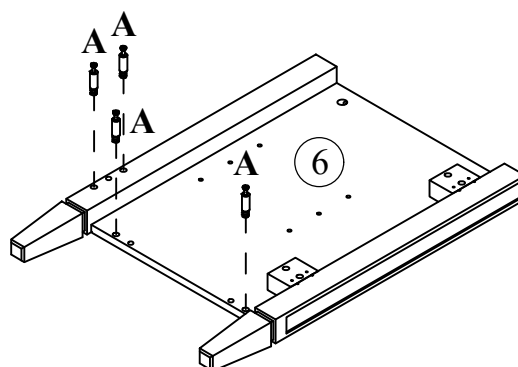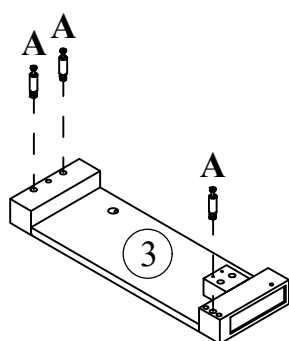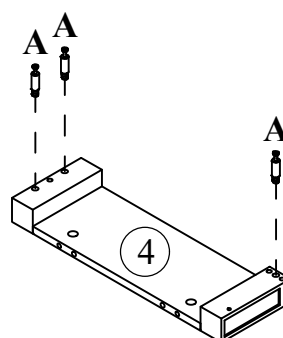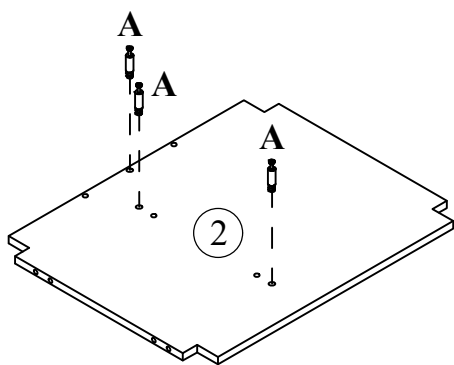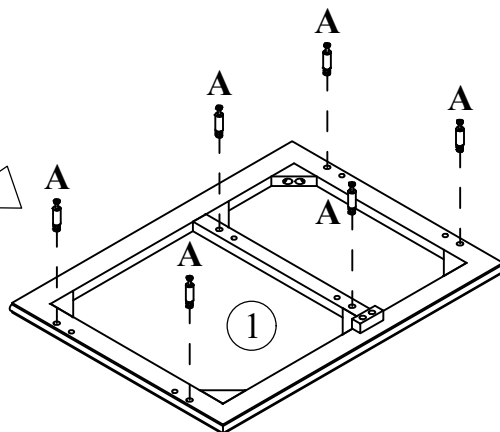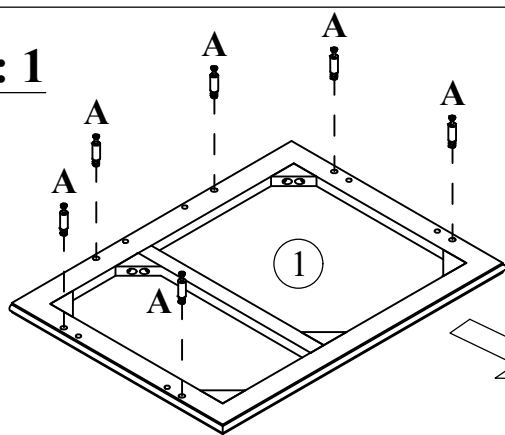

STEP: 2

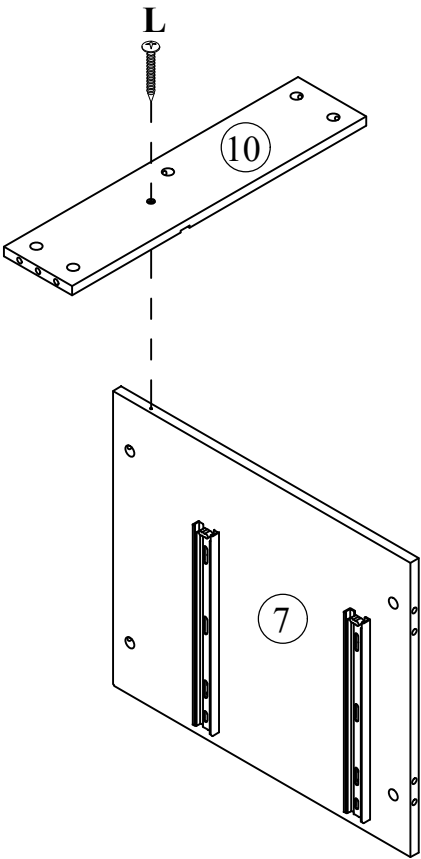


L



1PC

STEP: 3

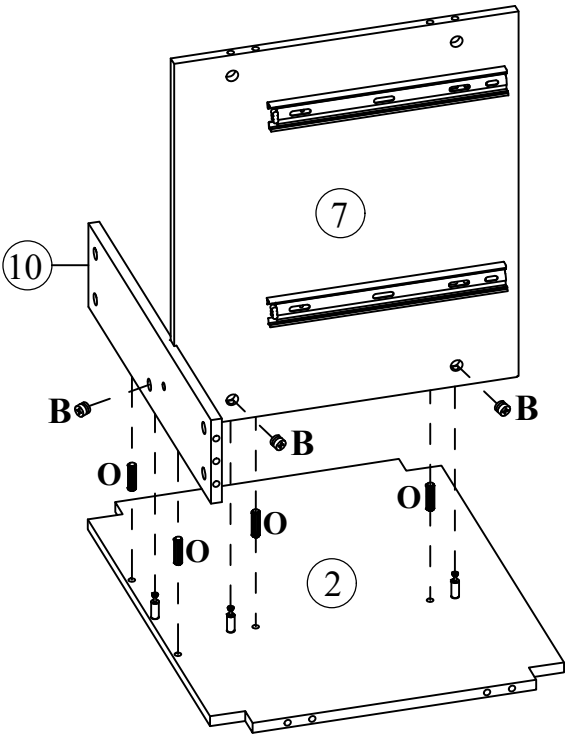


B




3PCS

O




4PCS

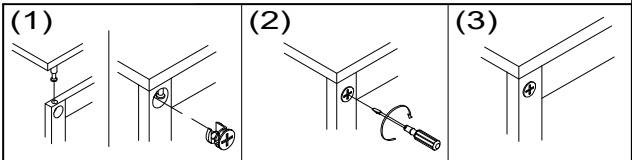


STEP: 4

B	O
	
4PCS	3PCS



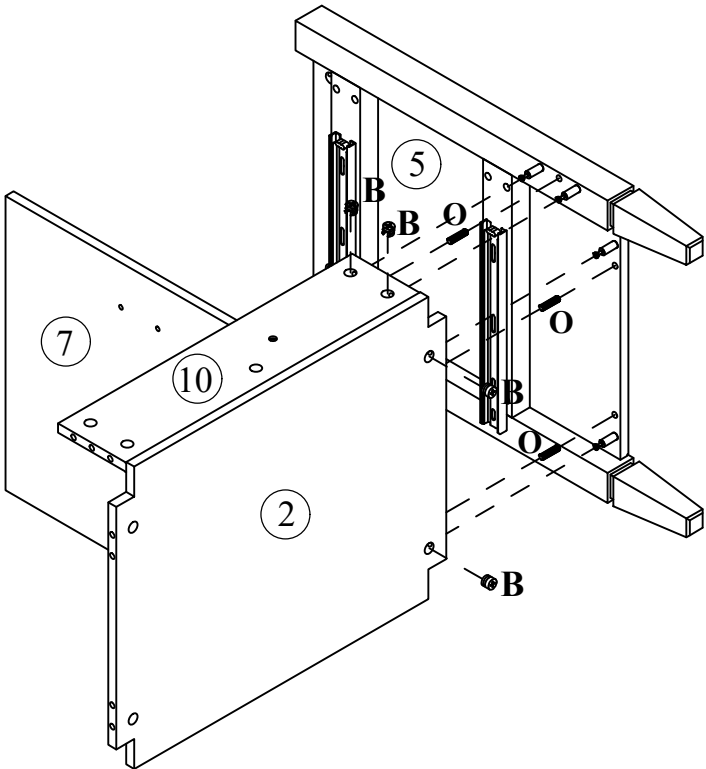


STEP: 5

B	O
	
4PCS	3PCS

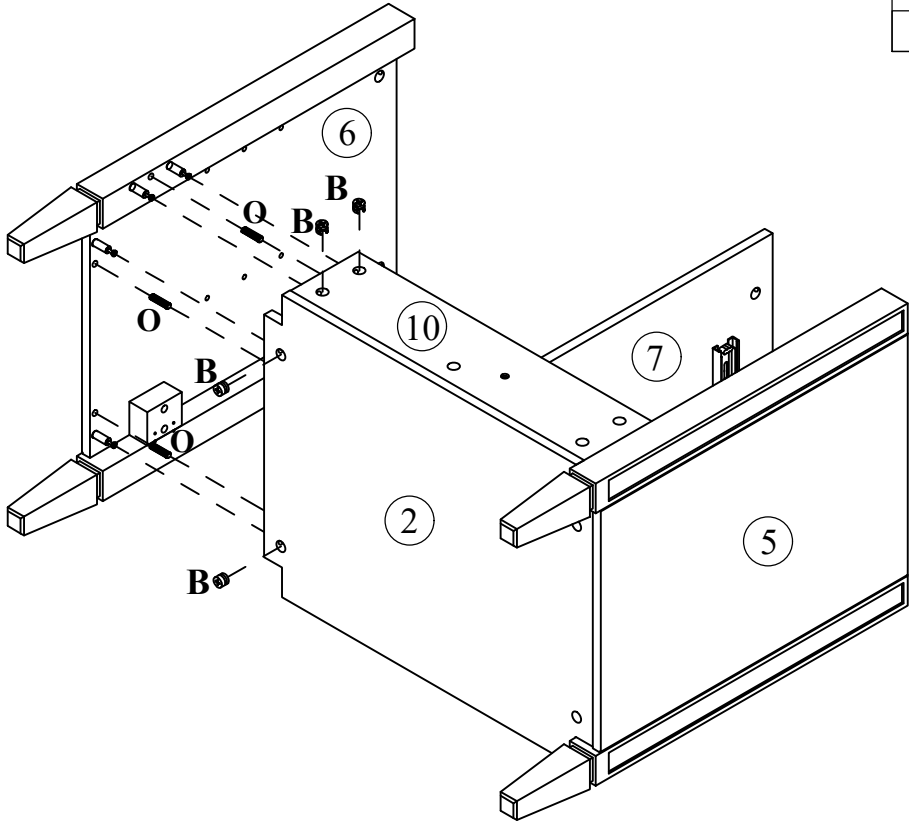


STEP: 6

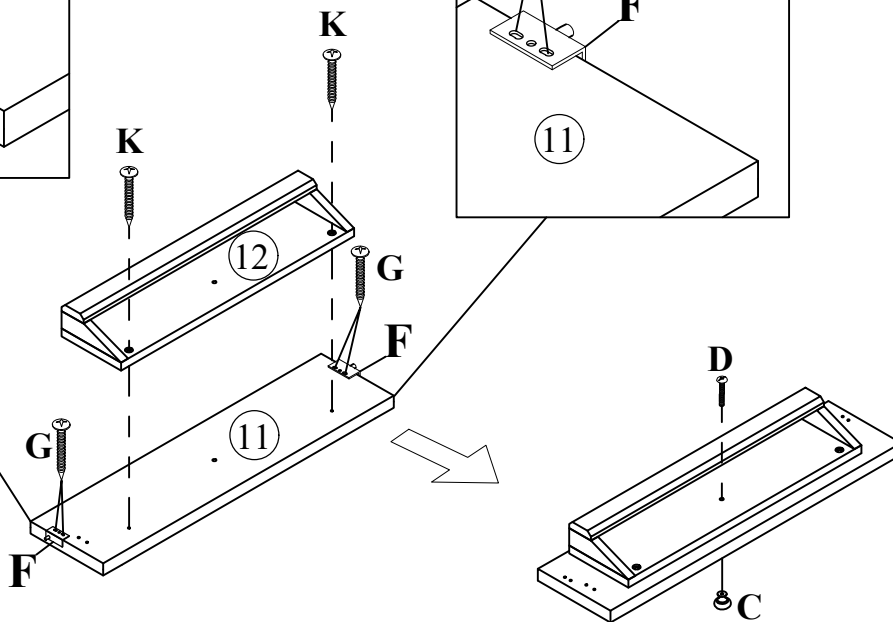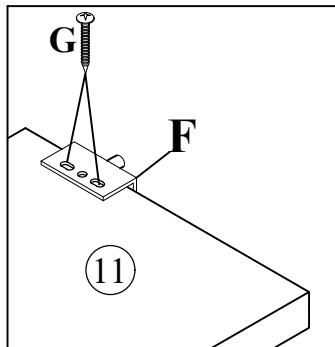
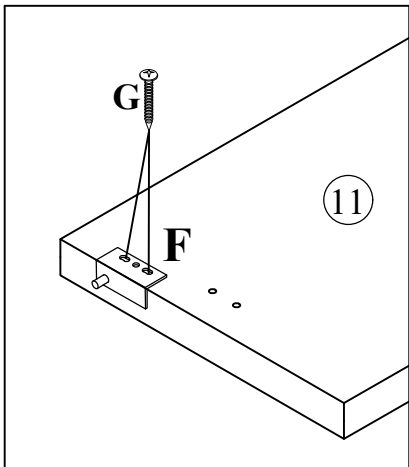


G	C	D	K
			
4PCS	1PC	1PC	2PCS

Diagram showing a screw (G) being inserted into a hole in a plate (F).


F

2PCS

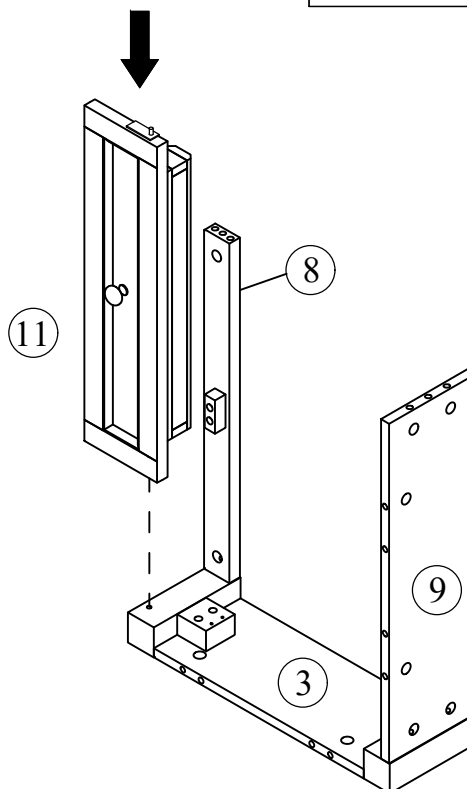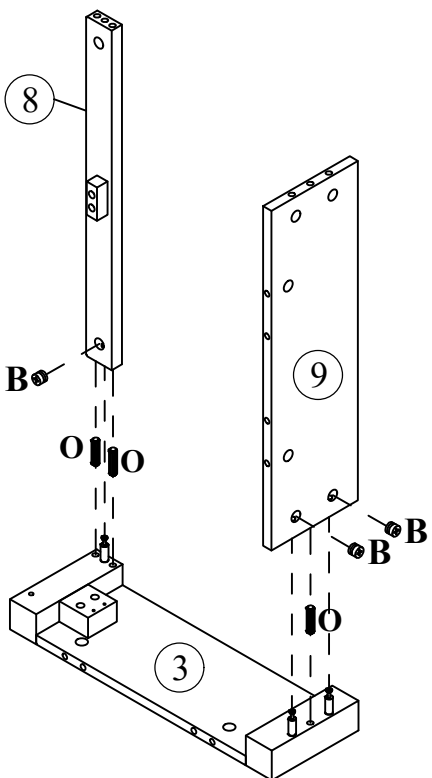STEP: 7




B	O
	
3PCS	3PCS

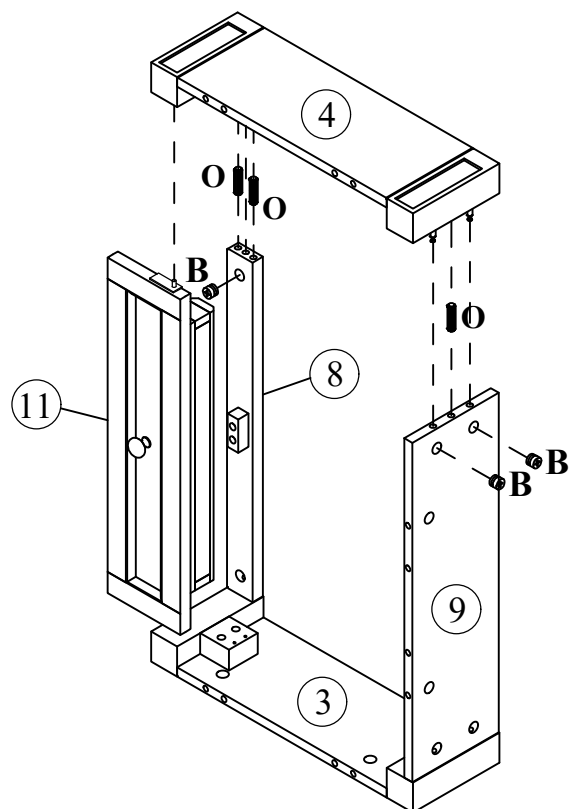
STEP: 8




B		O	
3PCS		3PCS	


STEP: 9

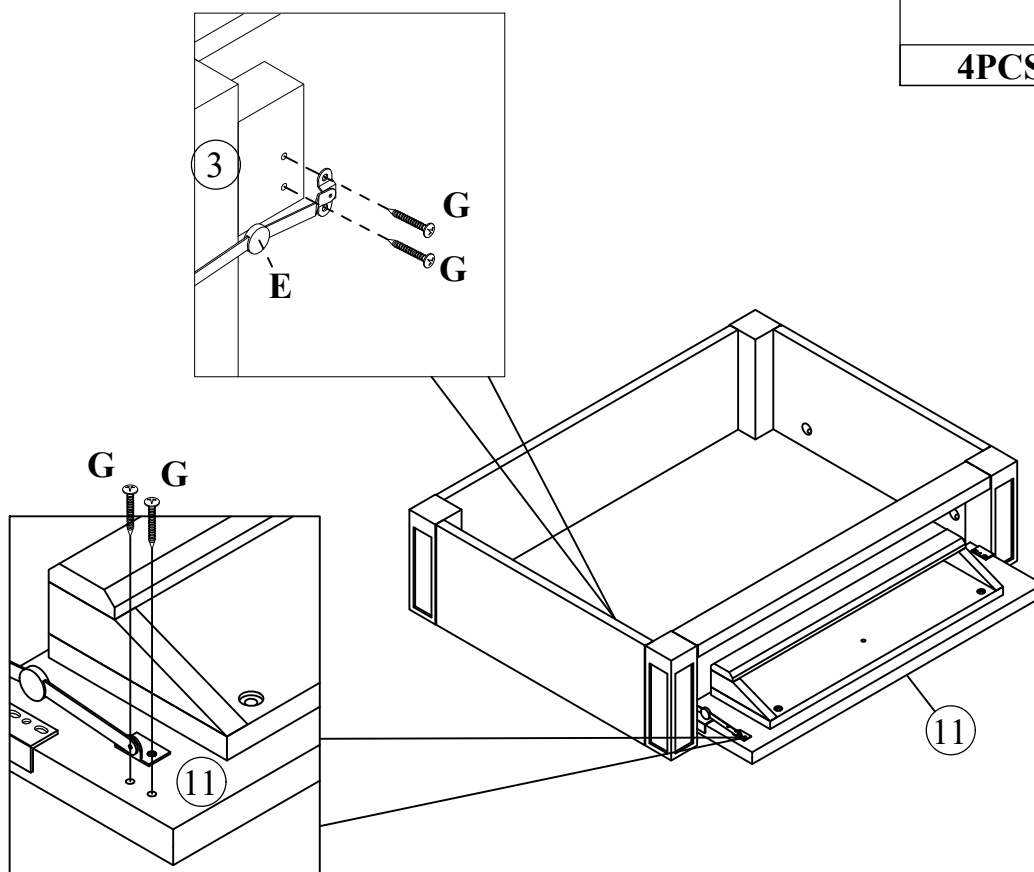


G		E	
4PCS		1PC	


STEP: 10

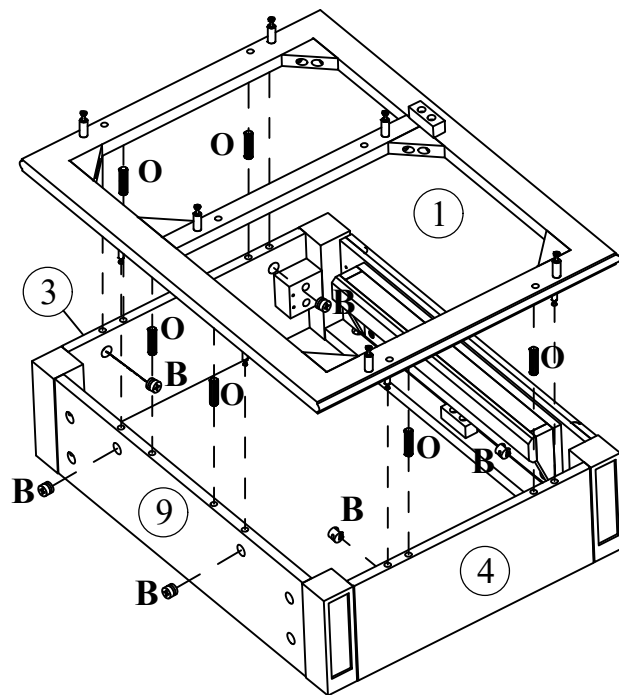



B	O
	
6PCS	6PCS

STEP: 11


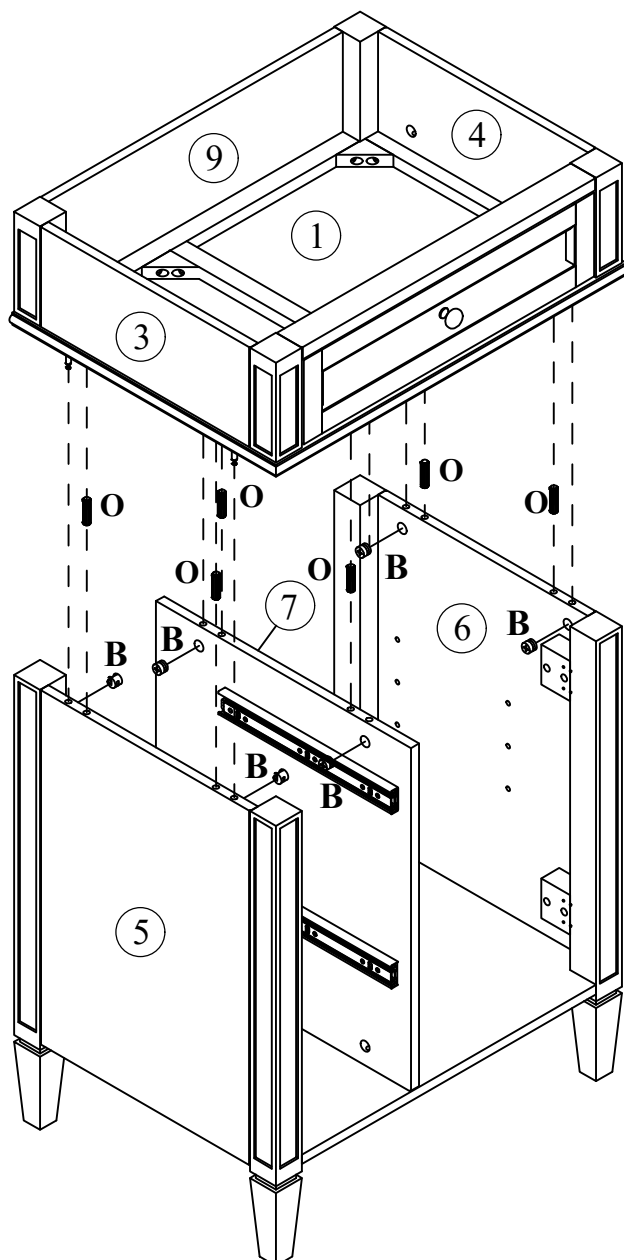


B	O
	
6PCS	6PCS


STEP: 12


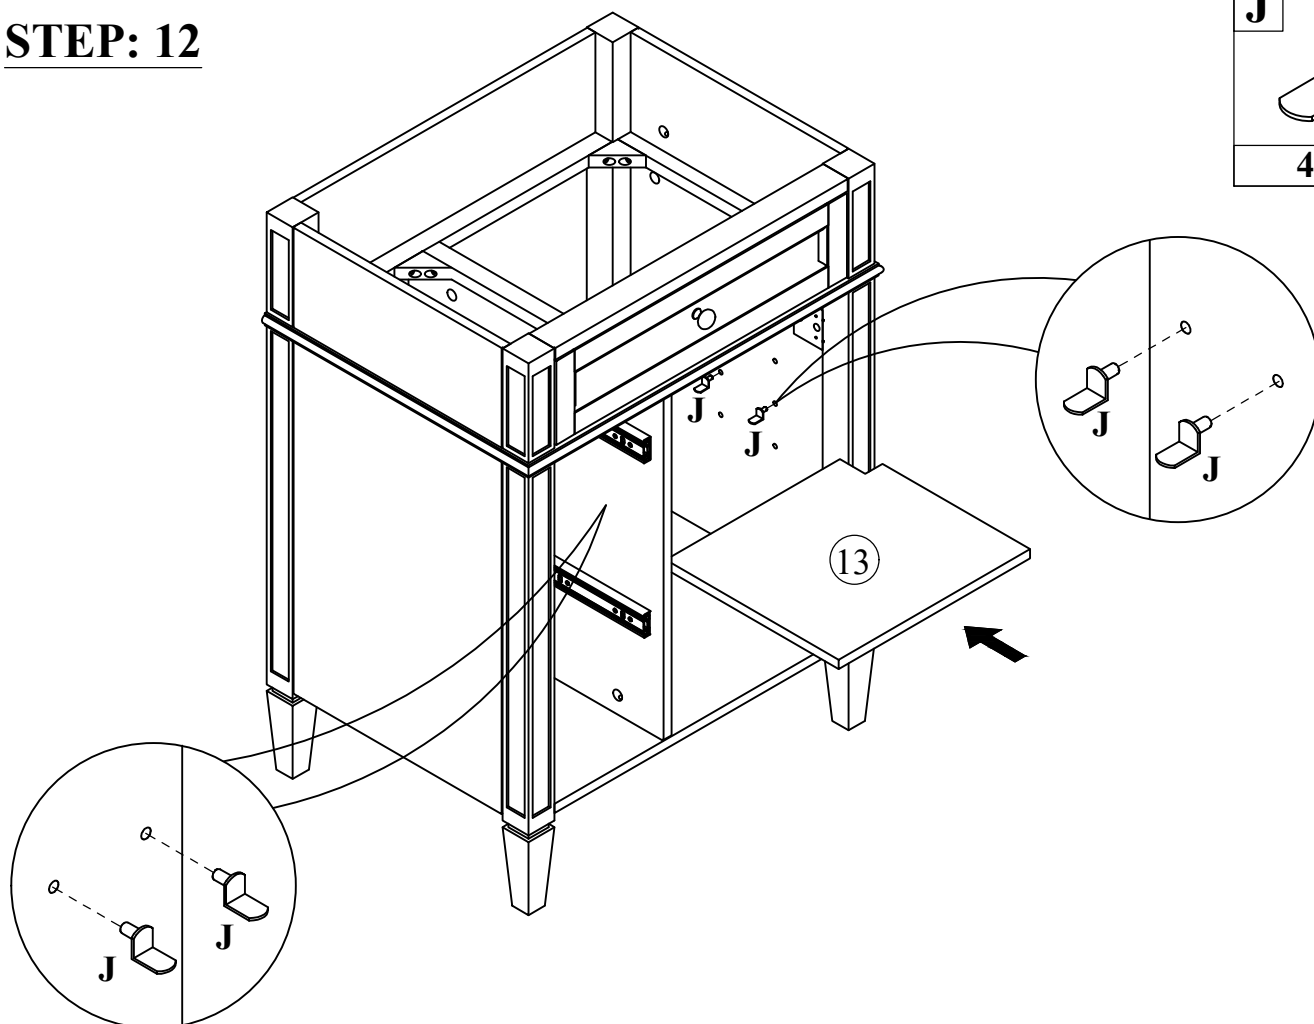
J**4PCS**

STEP: 13

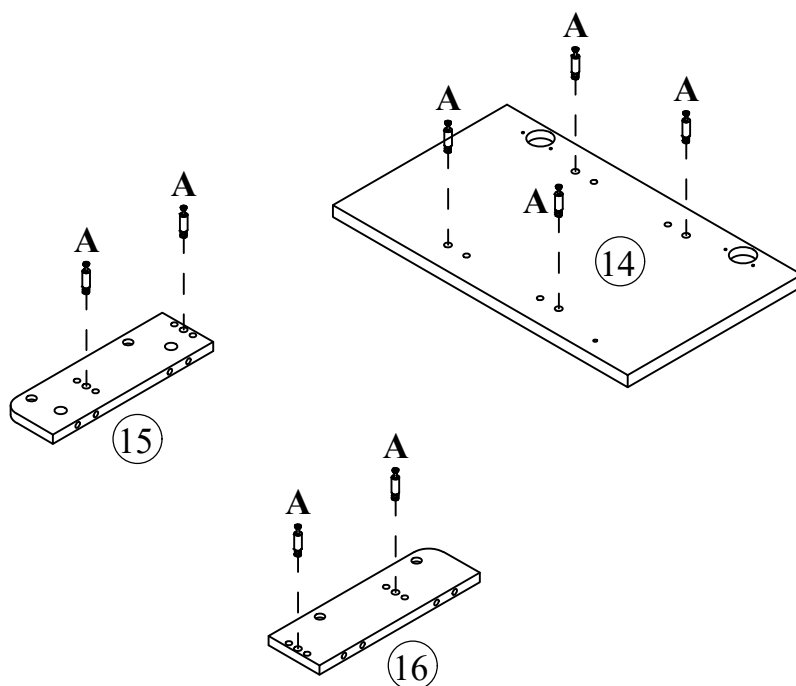
A**8PCS**

STEP: 14

B	O
	
8PCS	12PCS

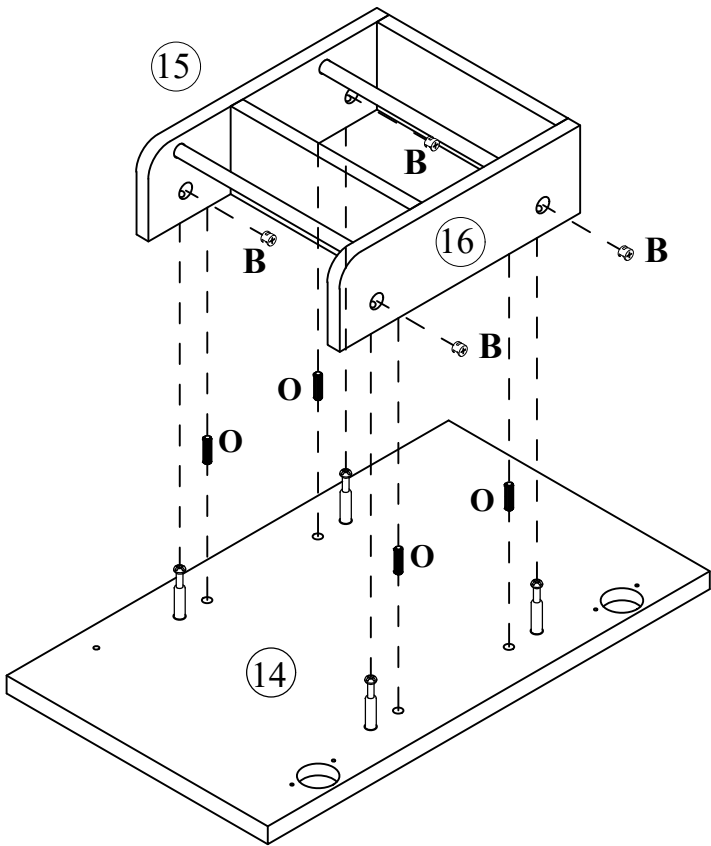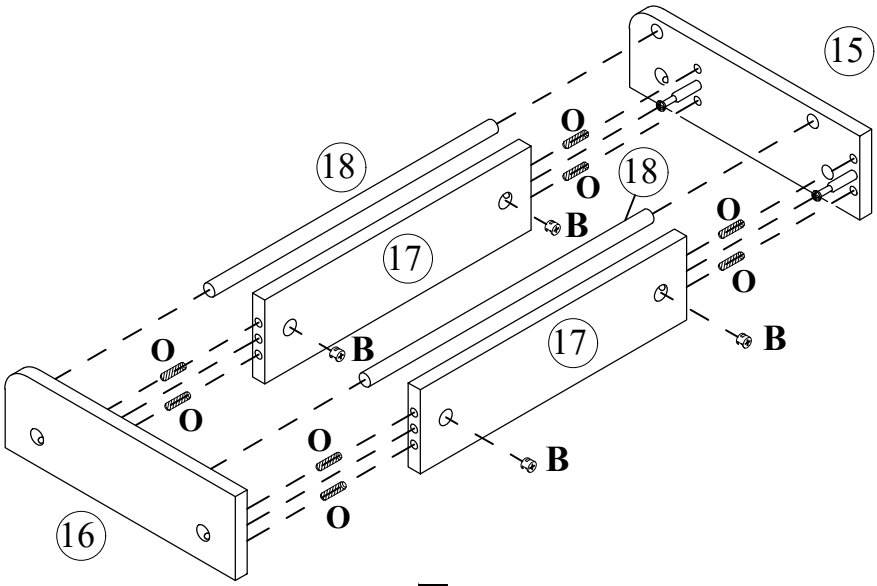




STEP: 15

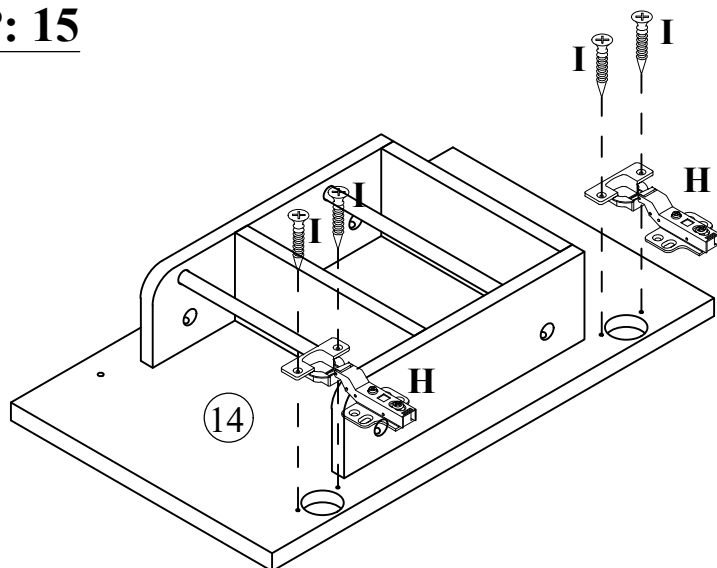


H	I
	
2PCS	4PCS



STEP: 16

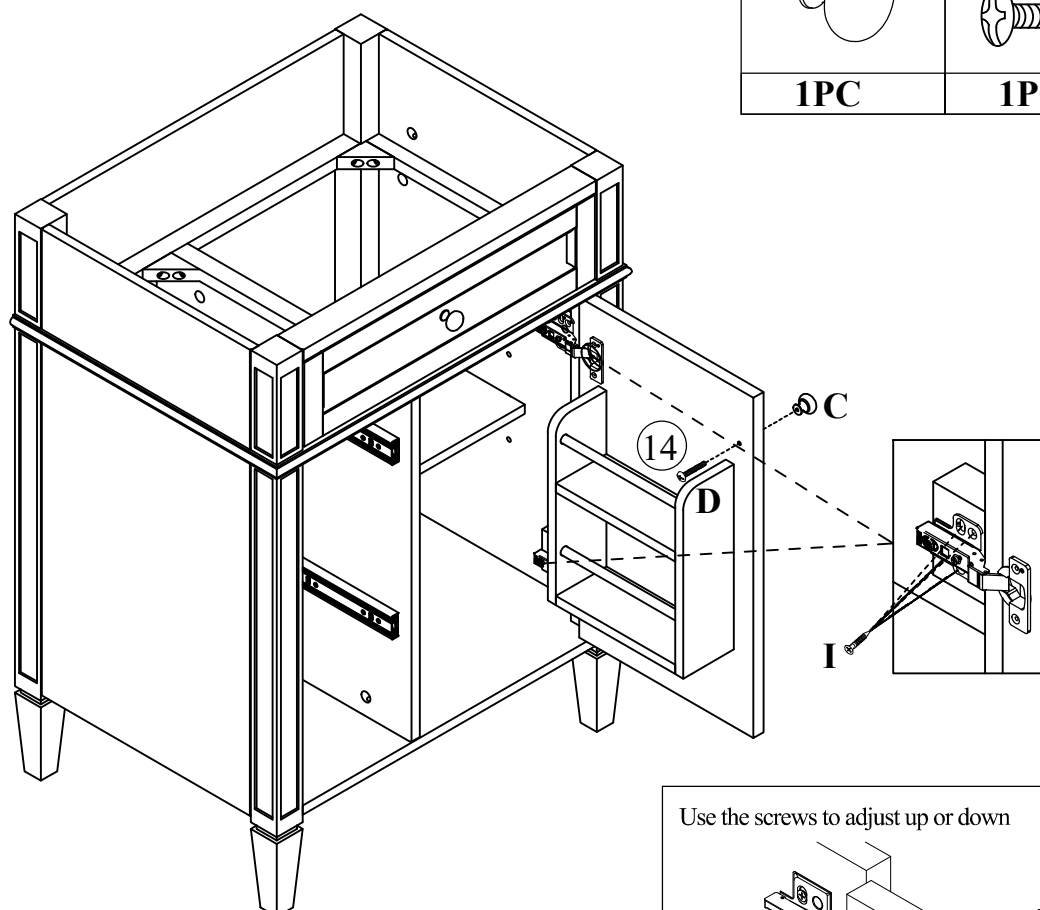


C	D	I
		
1PC	1PC	8PCS



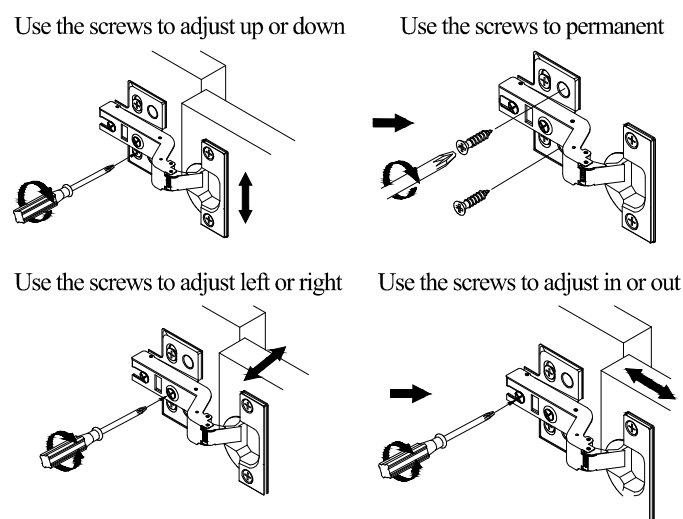



STEP: 17

M	C	D	N
			
8PCS	1PC	1PC	4PCS

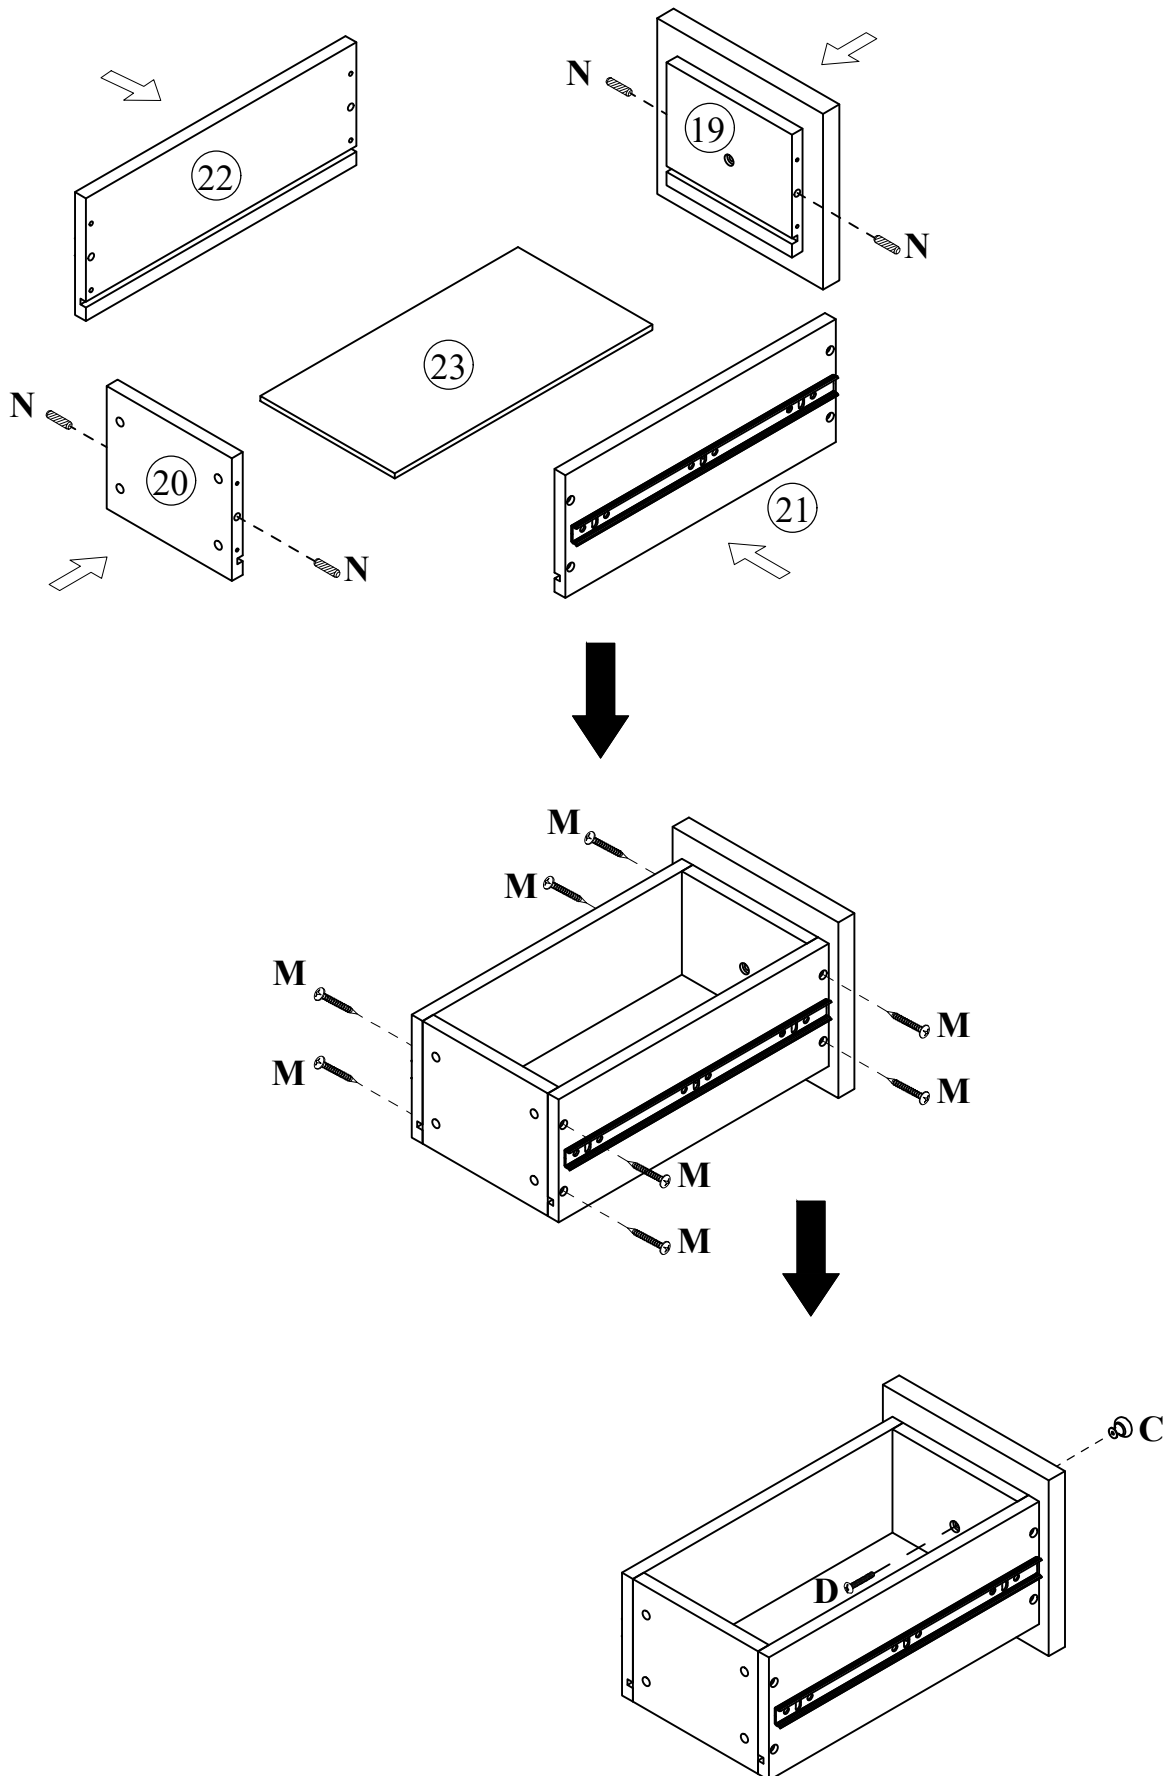


STEP: 18



M	C	D	N
			
8PCS	2PCS	2PCS	8PCS

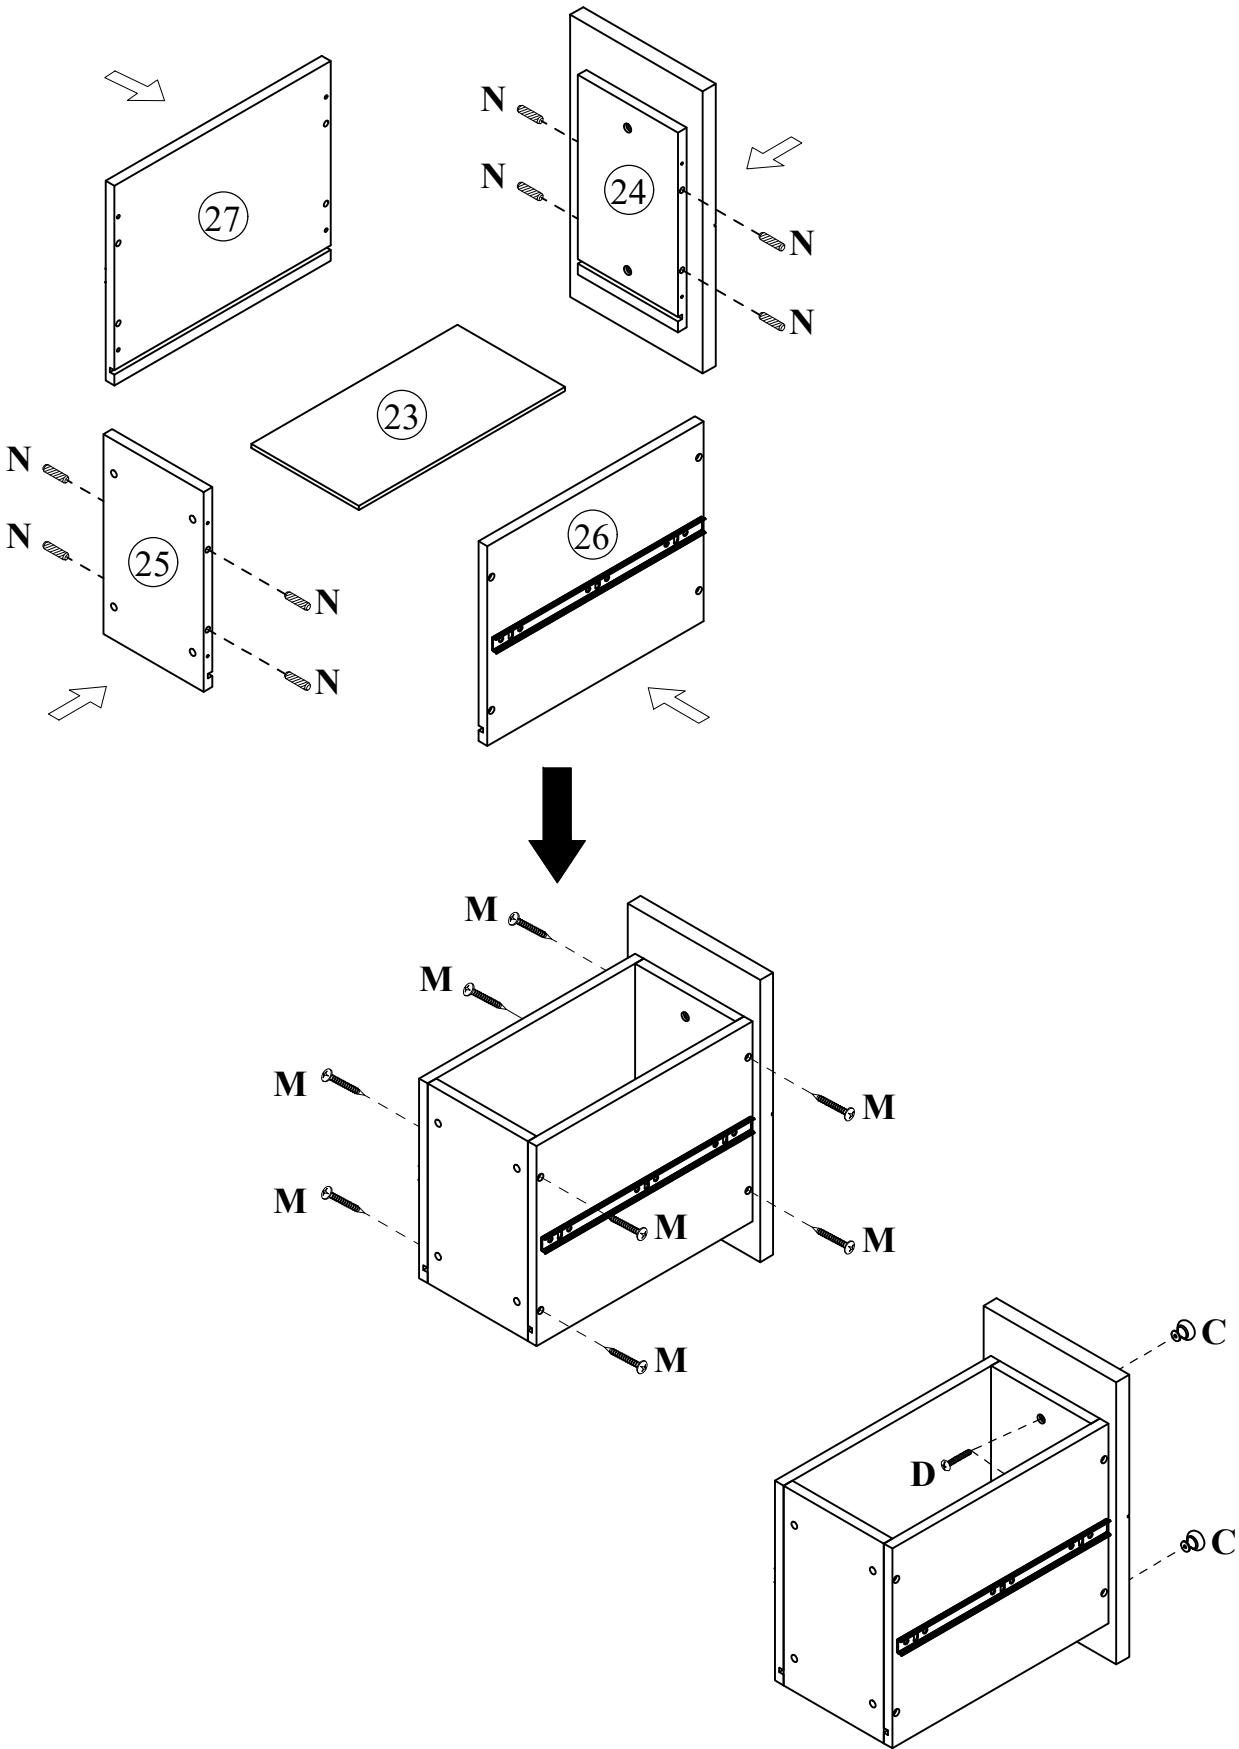

STEP: 19

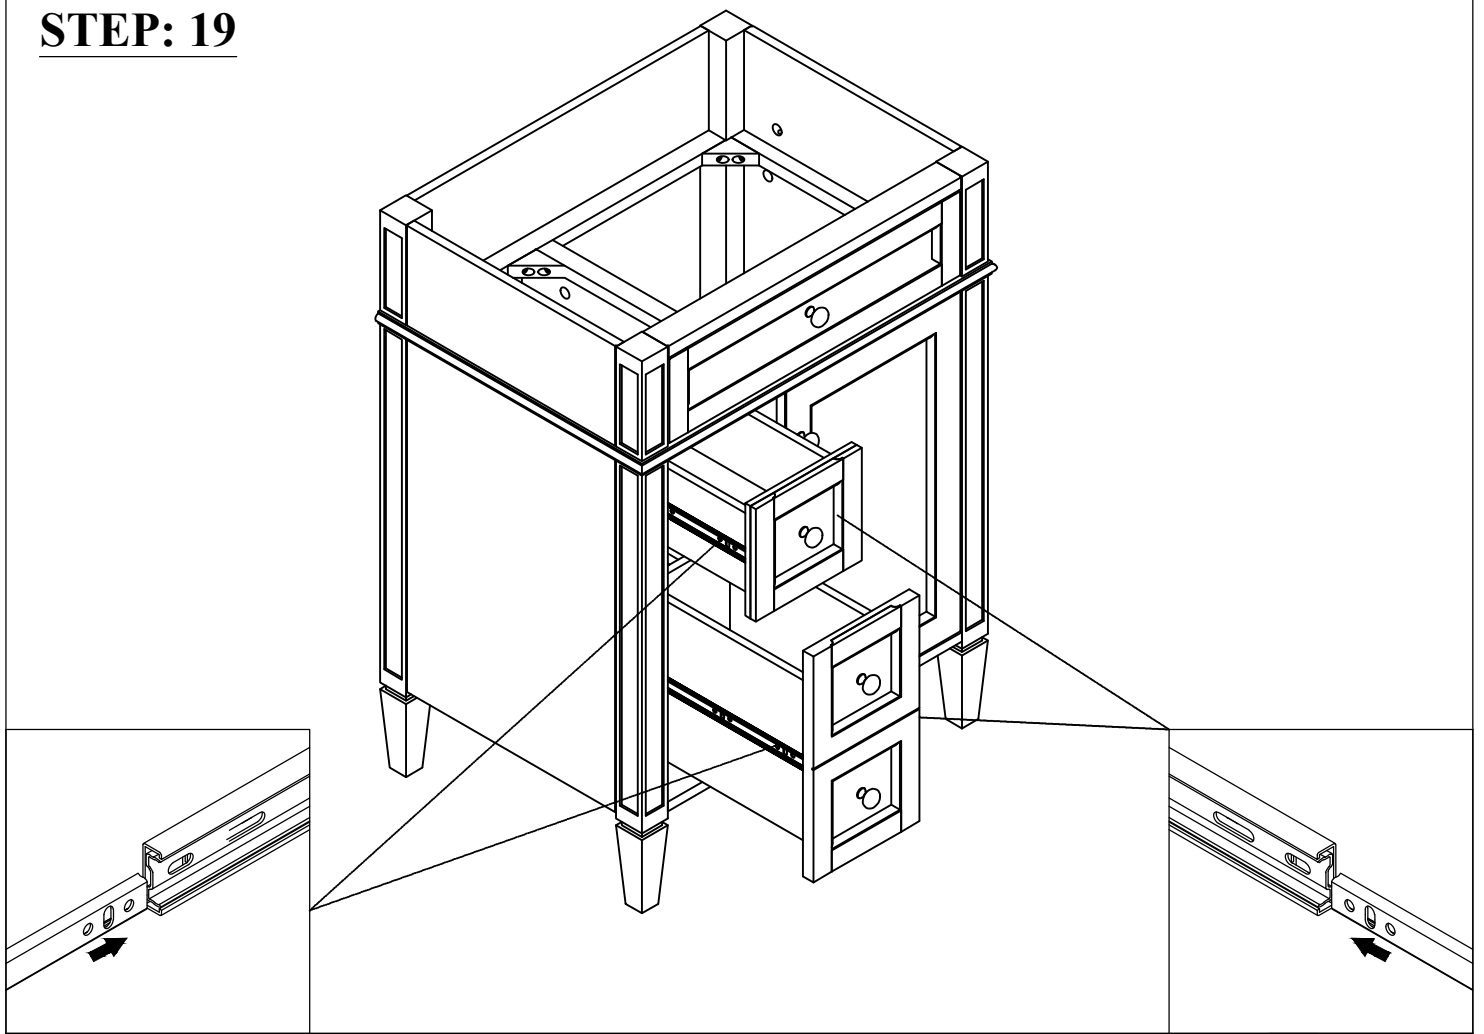


STEP: 20

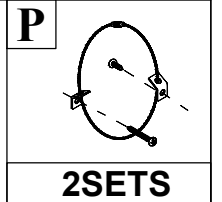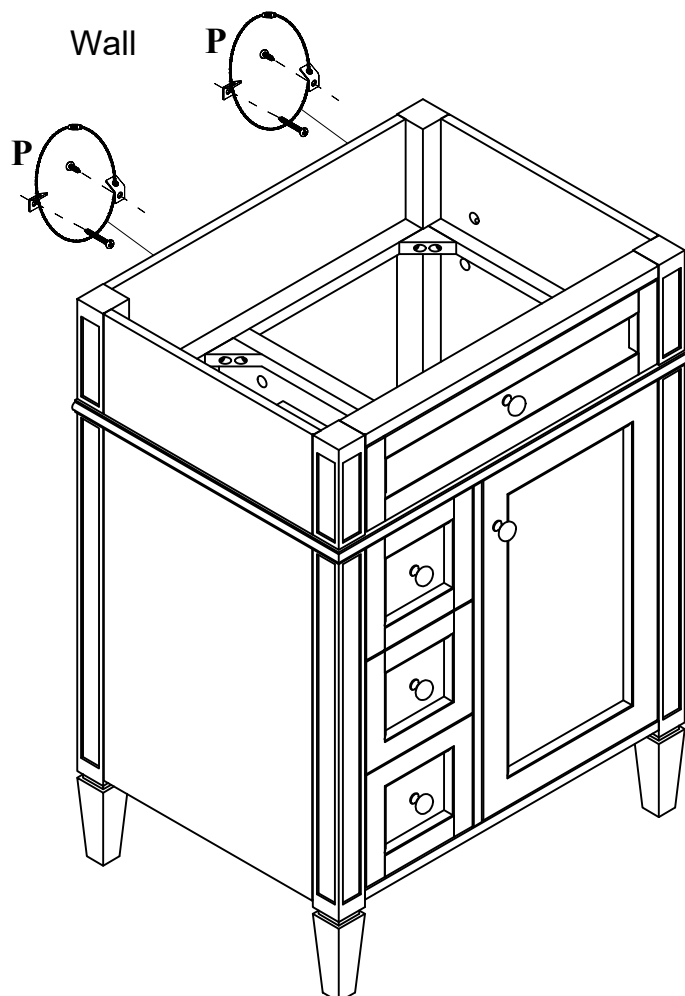

STEP: 21

Install the sink on the cabinet with glue.
Let stand for 24 hours

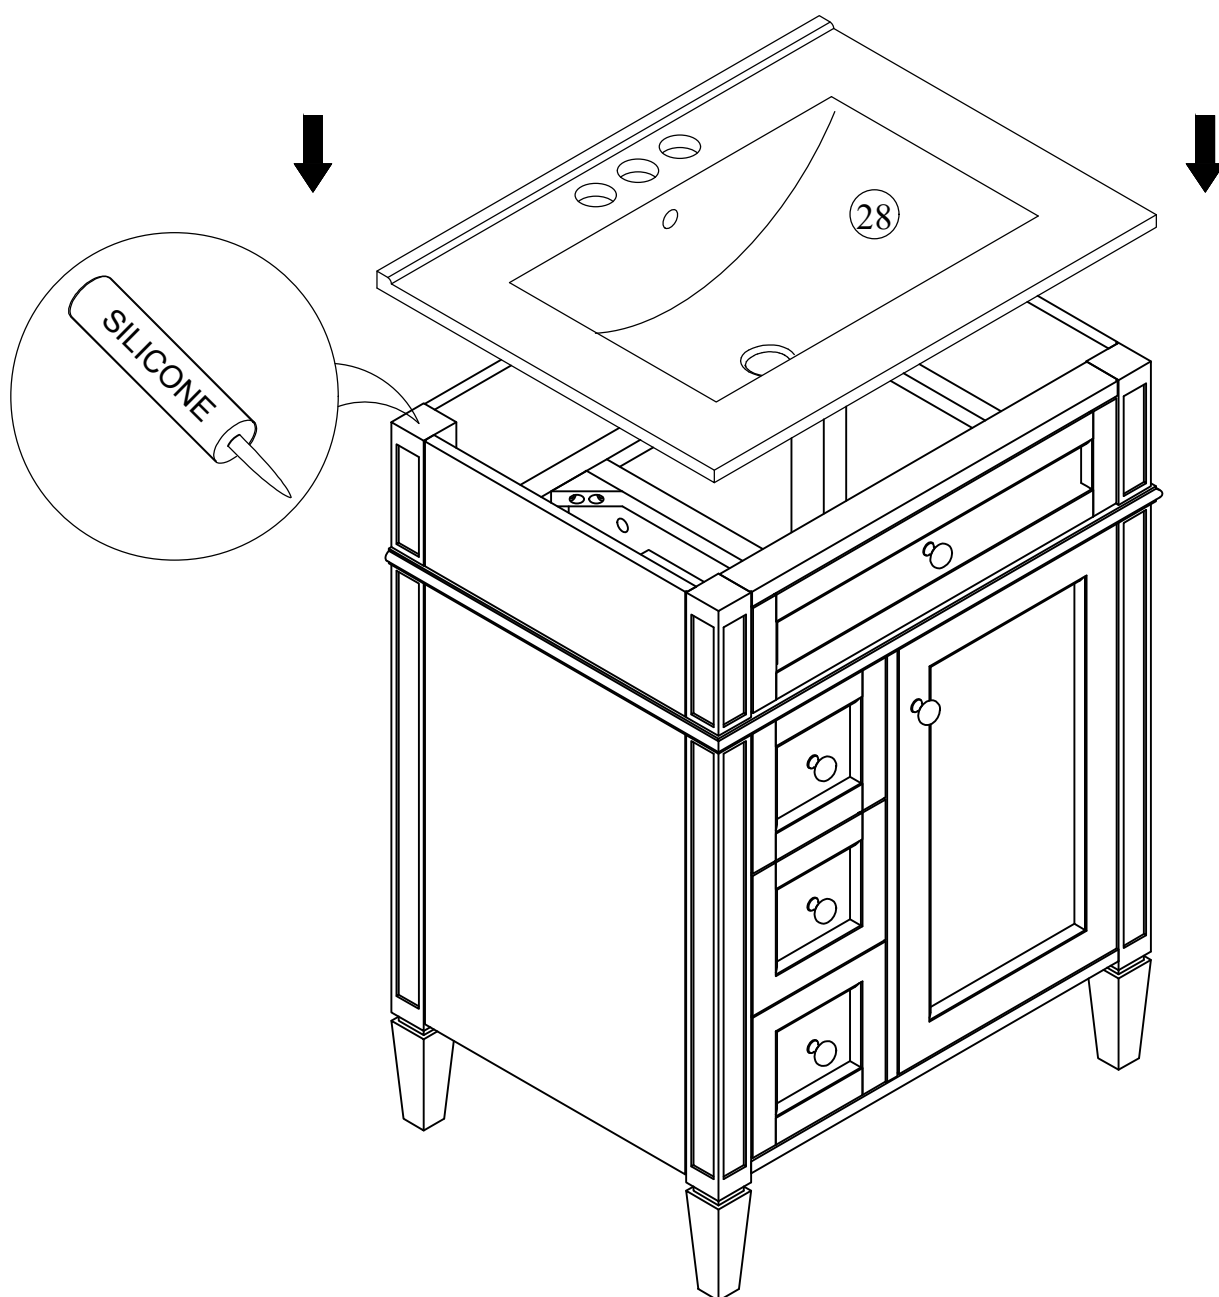

*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

STEP: 22

