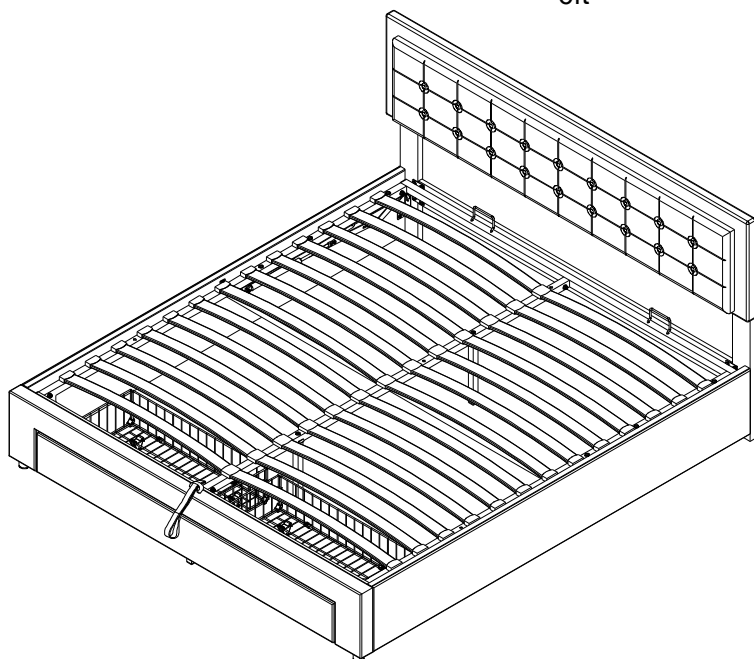



Upholstered Bed :4ft6
5ft6
6ft












1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.








3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.

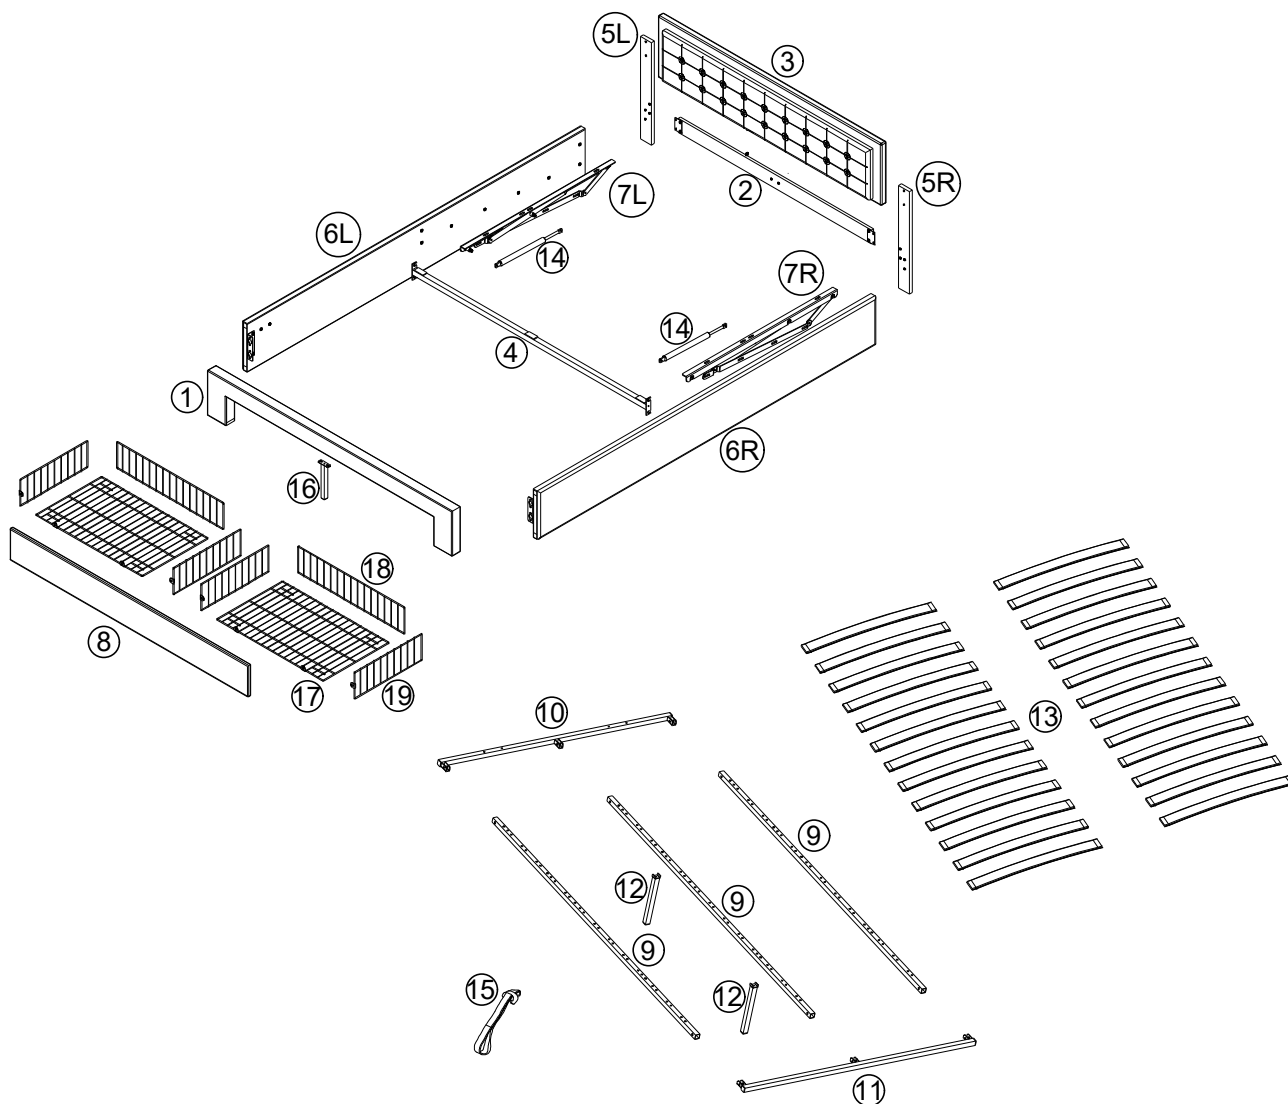4. 2 people are recommended to finish.







Part List

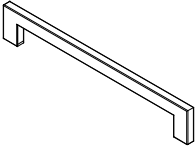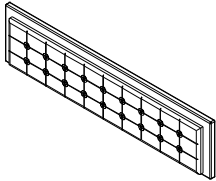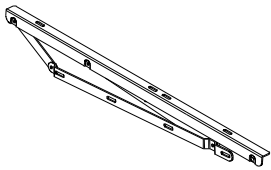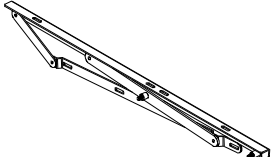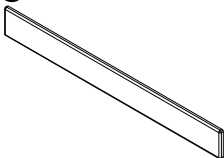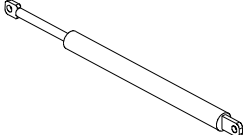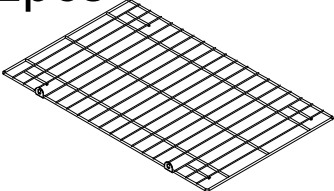
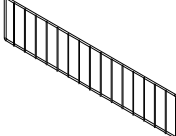
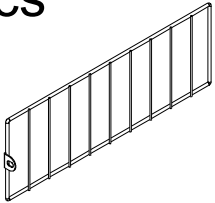
11pc 	31pc 	7L1pc 
7R1pc 	81pc 	142pcs 
172pcs 	182pcs 	194pcs 

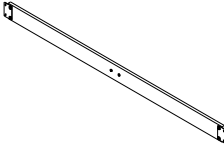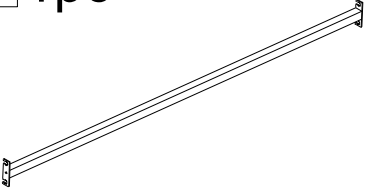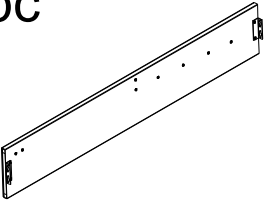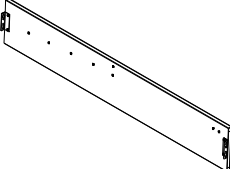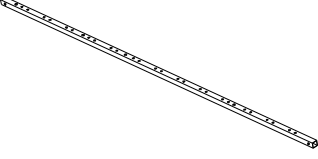21pc 	41pc 	5L1pc 
5R1pc 	6L1pc 	6R1pc 
93pcs 	101pc 	111pc 





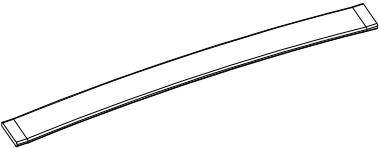
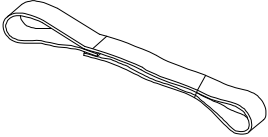

Part List

12 2pcs 	13 26pcs 	15 1pc 
16 1pc 		


Hardware List

A 4pcs  M6x40mm	B 8pcs  M8x16mm	C 26pcs  M8x20mm
D 4pcs  M8x25mm	E 8pcs  M8x35mm	F 12pcs  M8x45mm
G 4pcs  M8x50mm	H 1pc 	J 2pcs 
K 12pcs 	L 8pcs 	M 16pcs  M8

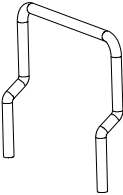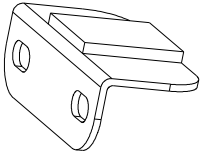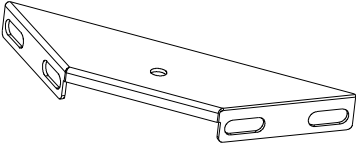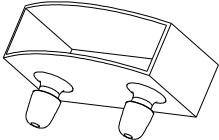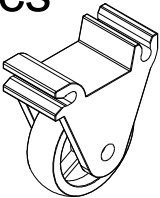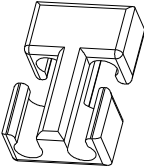Hardware List



N 1pc 	P 2pcs 	Q 2pcs 
R 2pcs 	S 26pcs 	T 13pcs 
U 8pcs 	v 16pcs 	

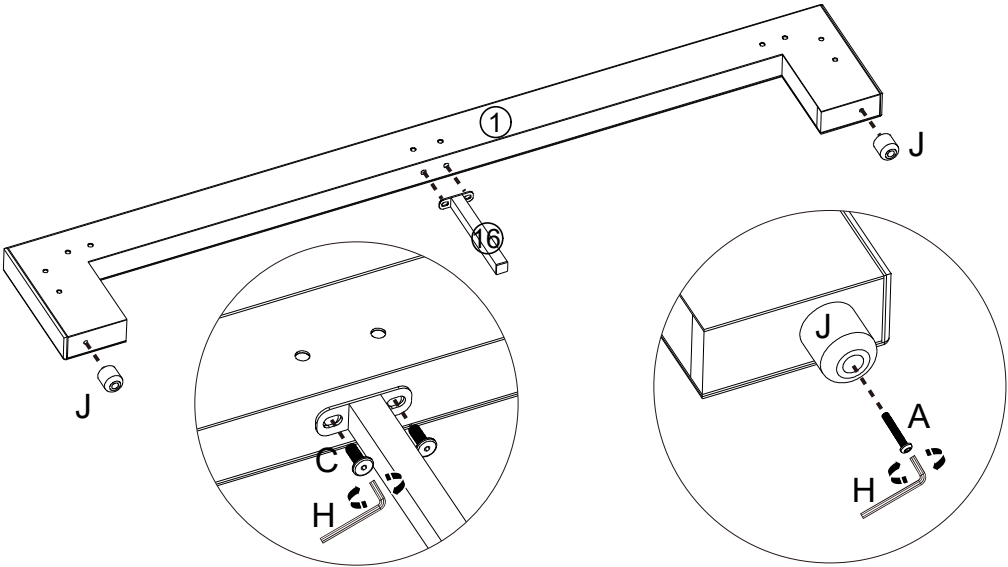Step 1




A x 2  M6 x 40mm	C x 2  M8 x 20mm	H x 1 	J x 2 
---	---	--	--

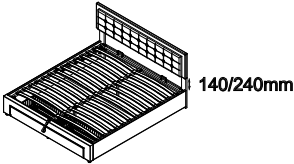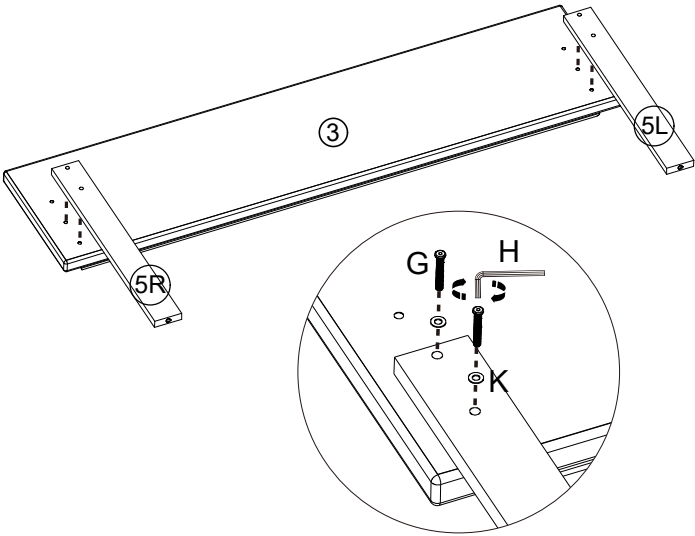Step 2




G x 4  M8 x 50mm	H x 1 	K x 4 
---	--	--

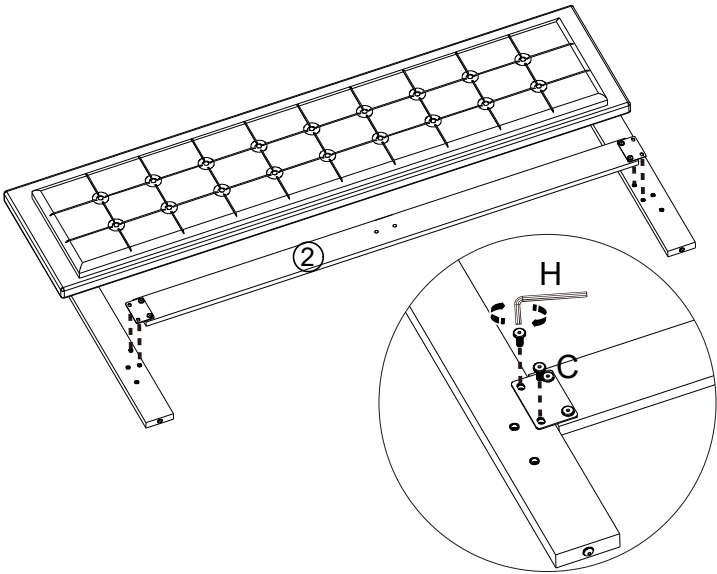Step 3




C x 4  M8 x 20mm	H x 1 
---	--

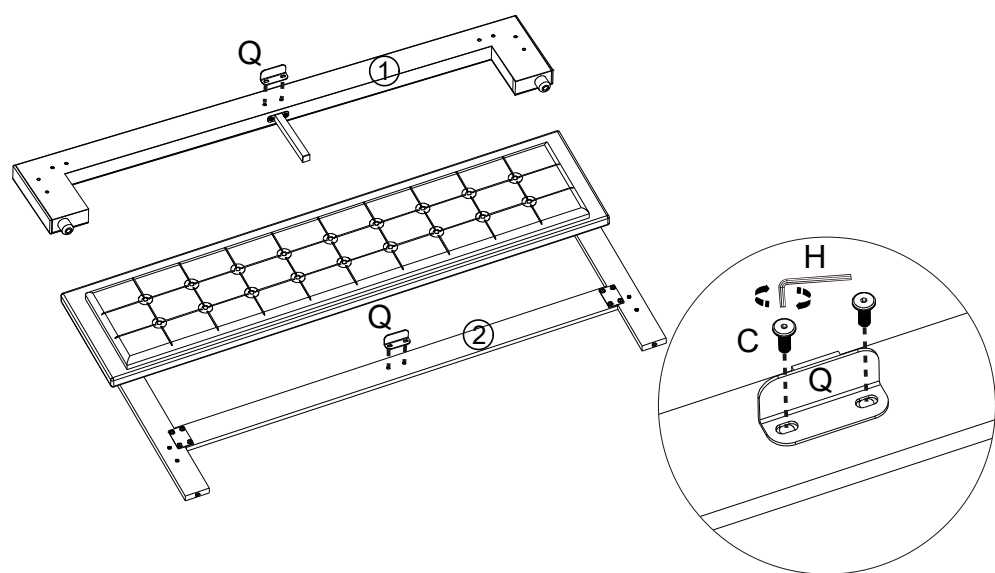Step 4




C x 4	H x 1	Q x 2
		
M8 x 20mm		

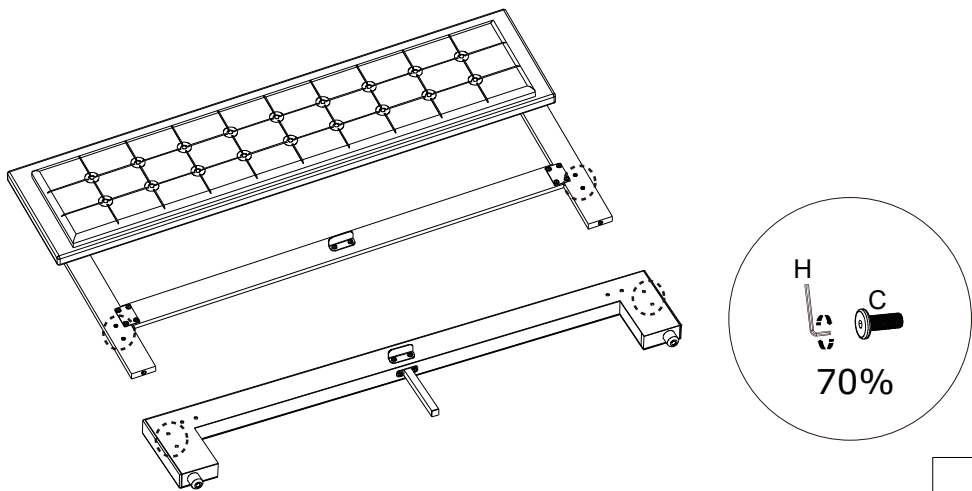Step 5




C x 8	H x 1
	
M8 x 20mm	

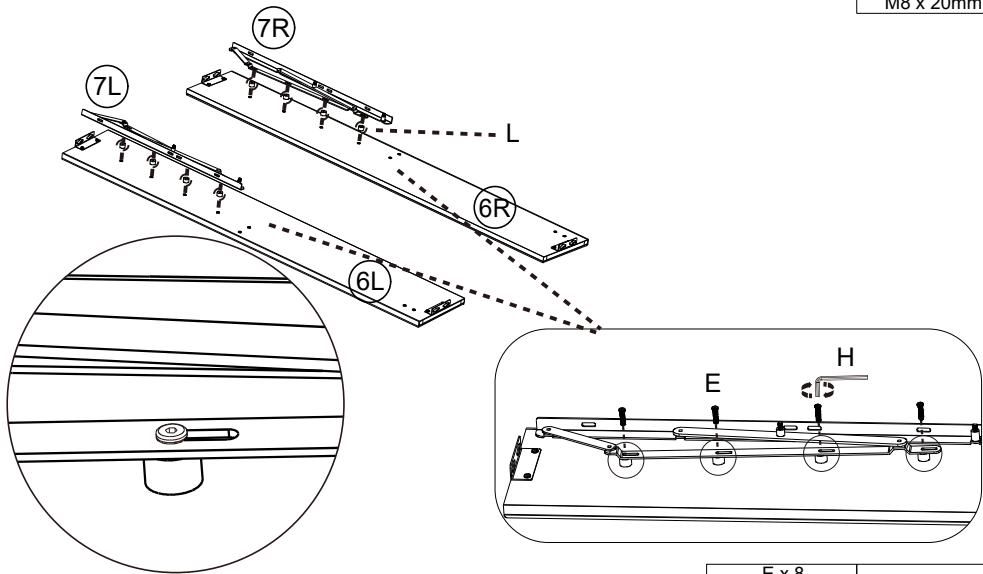Step 6




E x 8	H x 1	L x 8
		
M8 x 35mm		

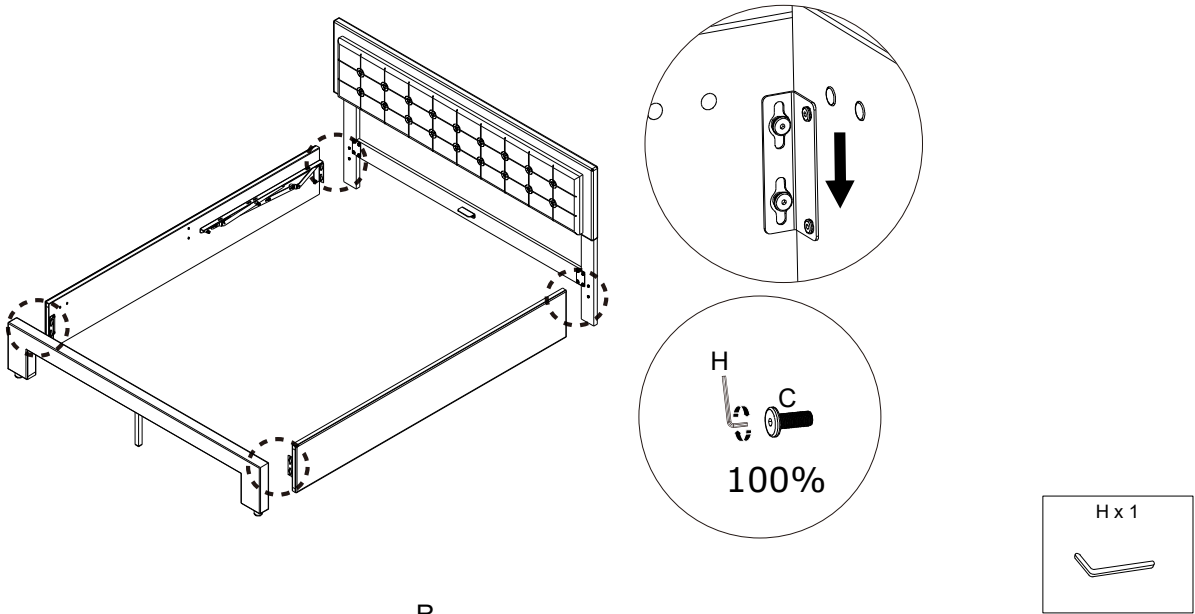
Step 7



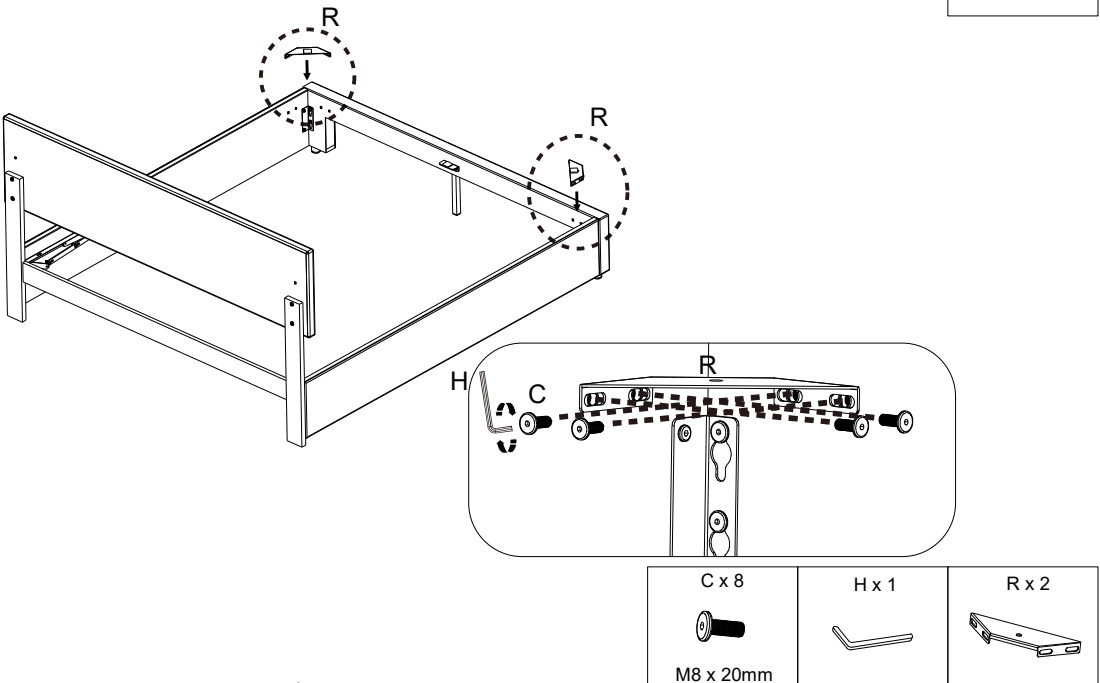
Step 8



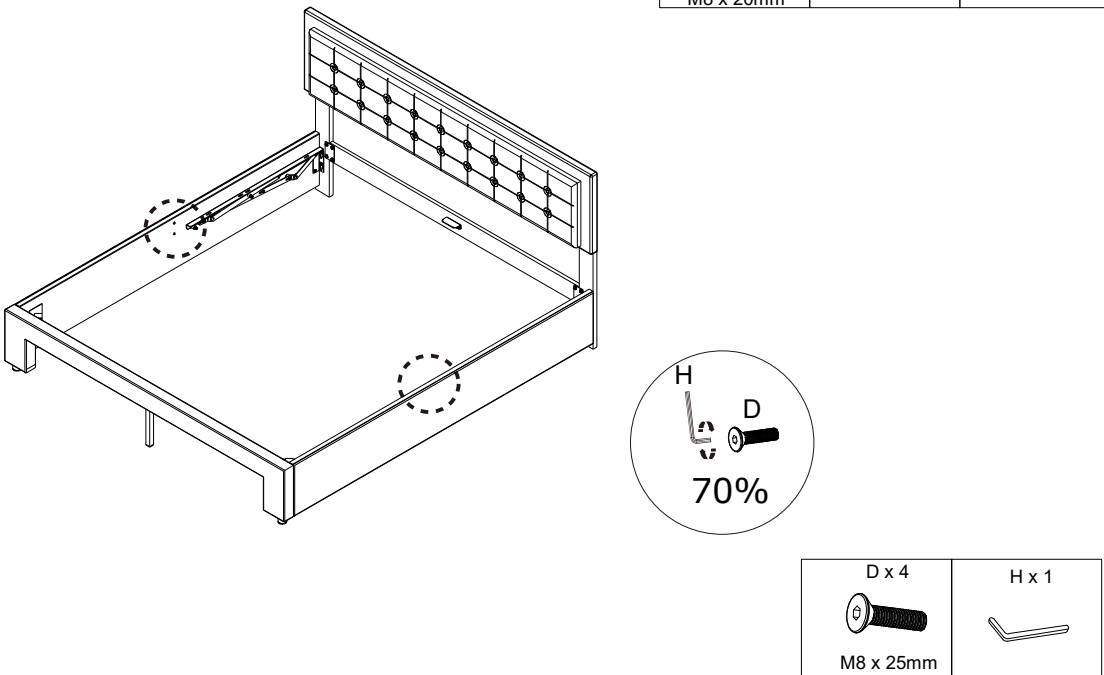
Step 9



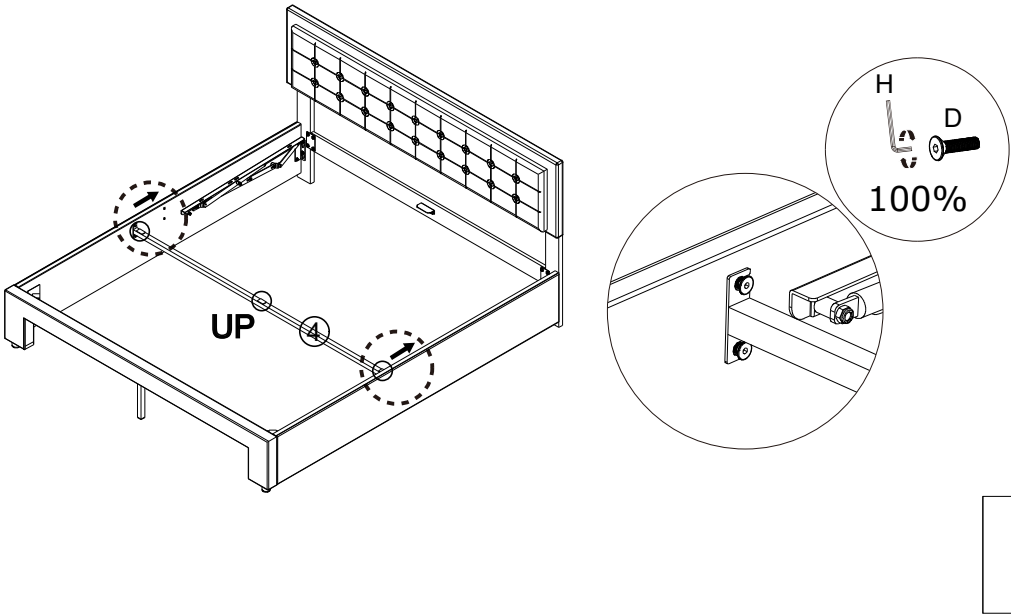
Step 10



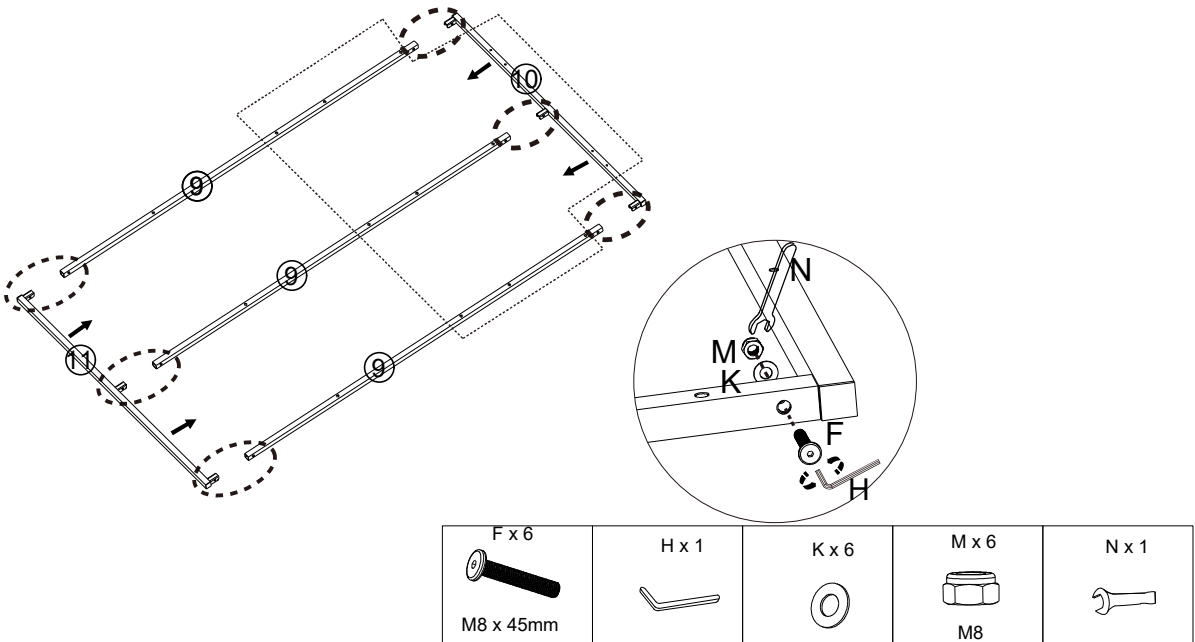
Step 11



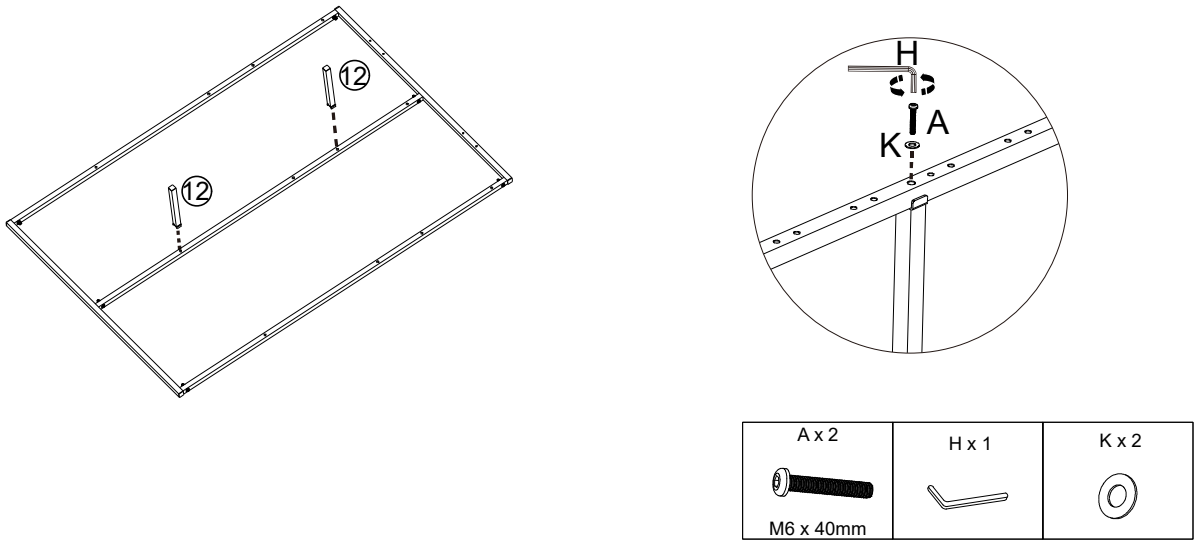
Step 12



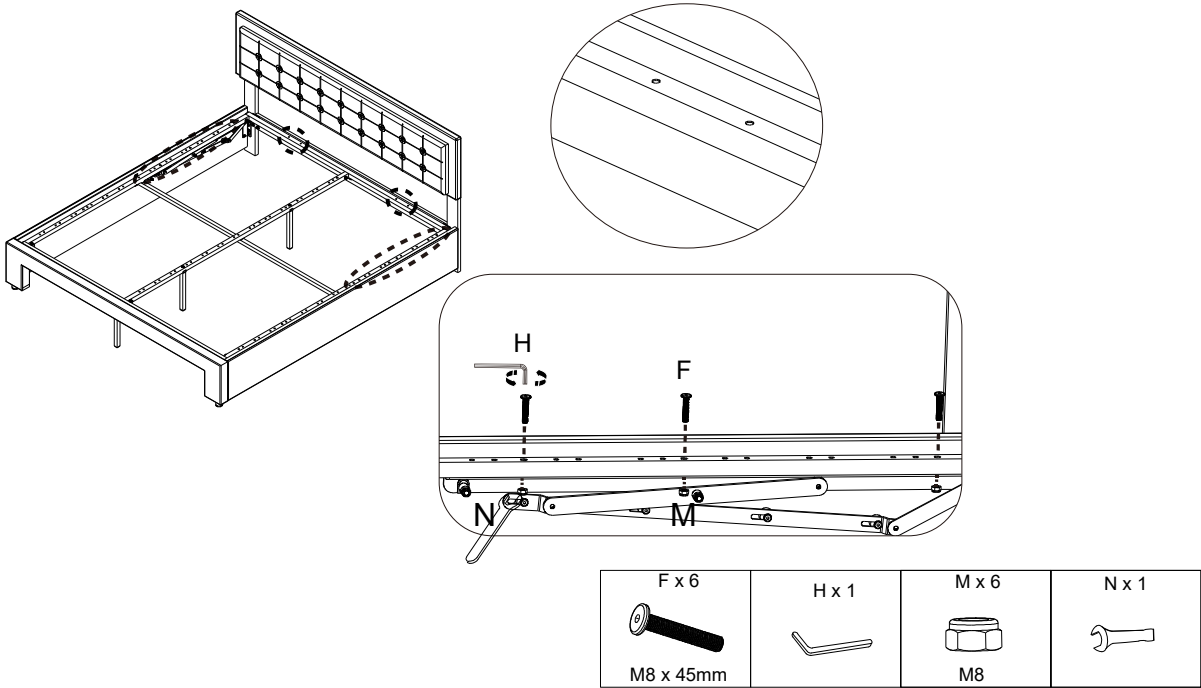
Step 13



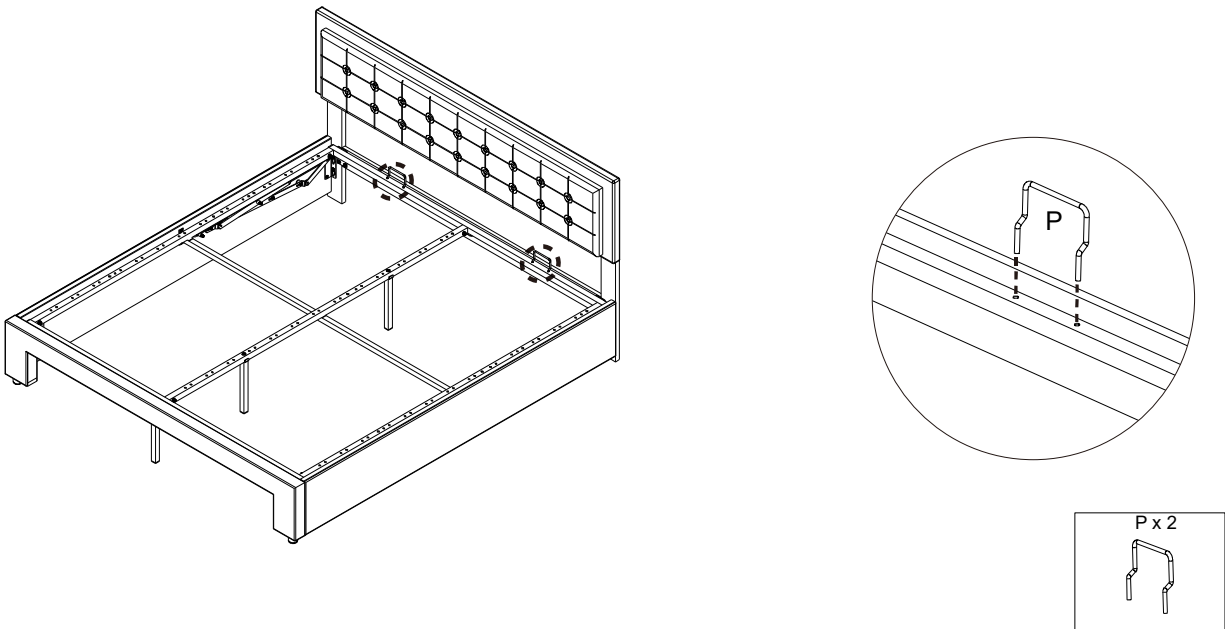
Step 14



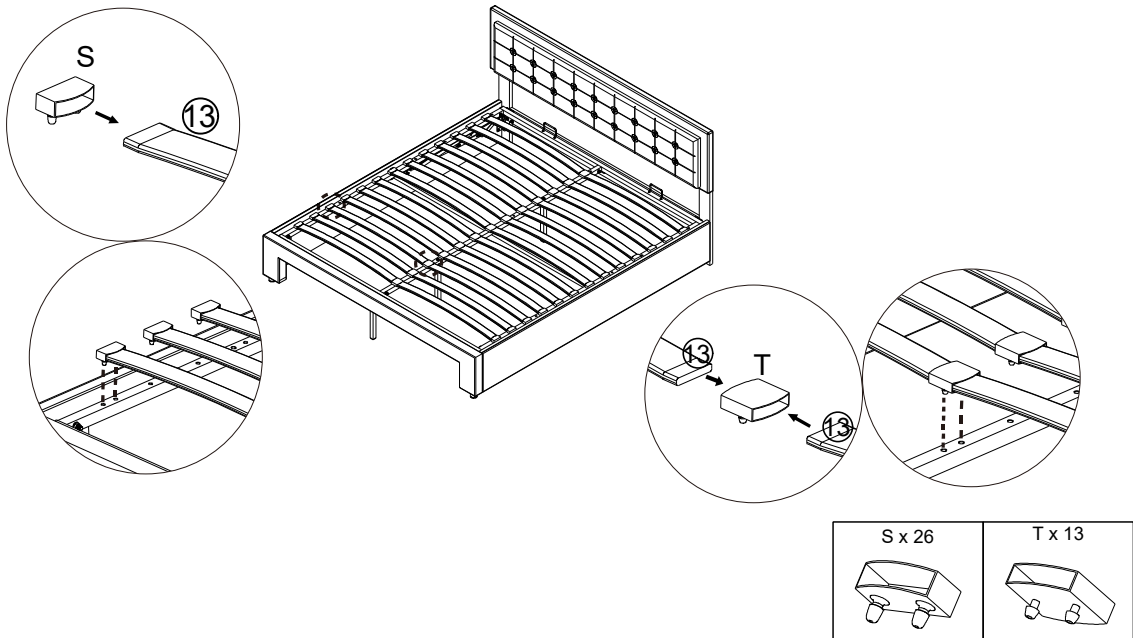Step 15




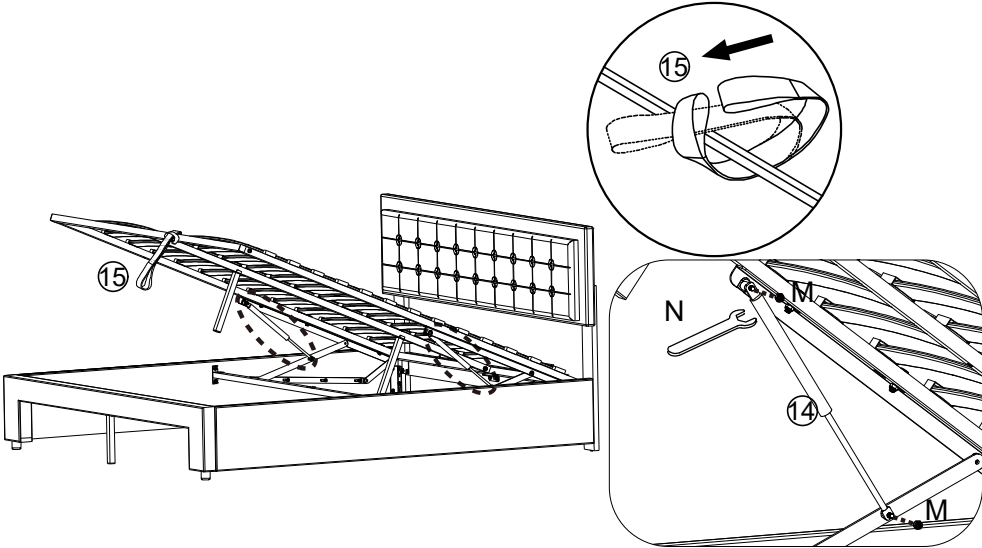Step 16



M x 4	N x 1
	
M8	

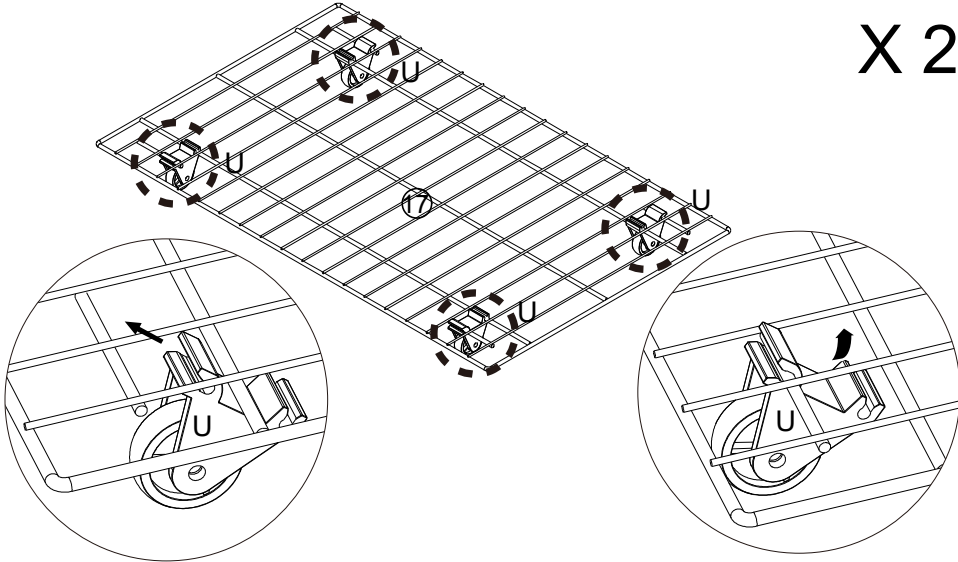
Step 17



X 2

U x 8

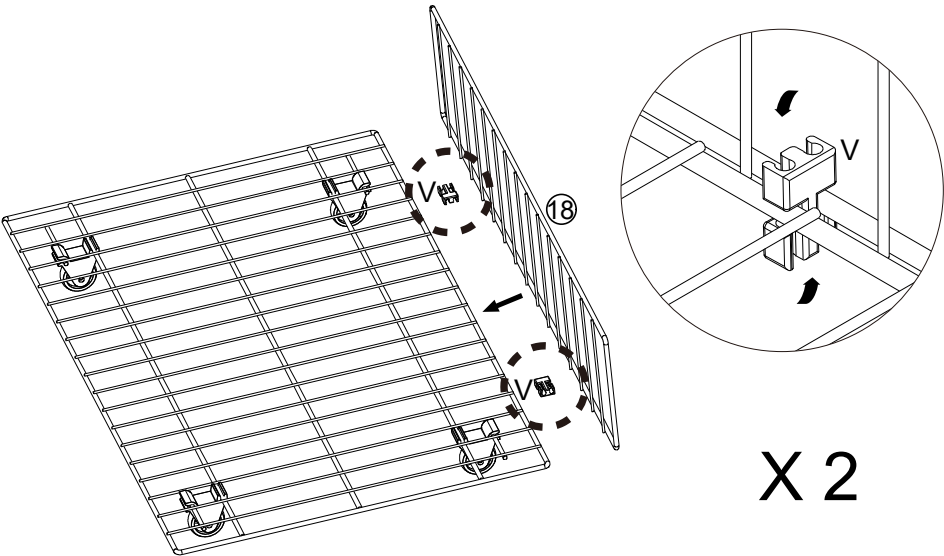

Step 18




X 2

V x 4


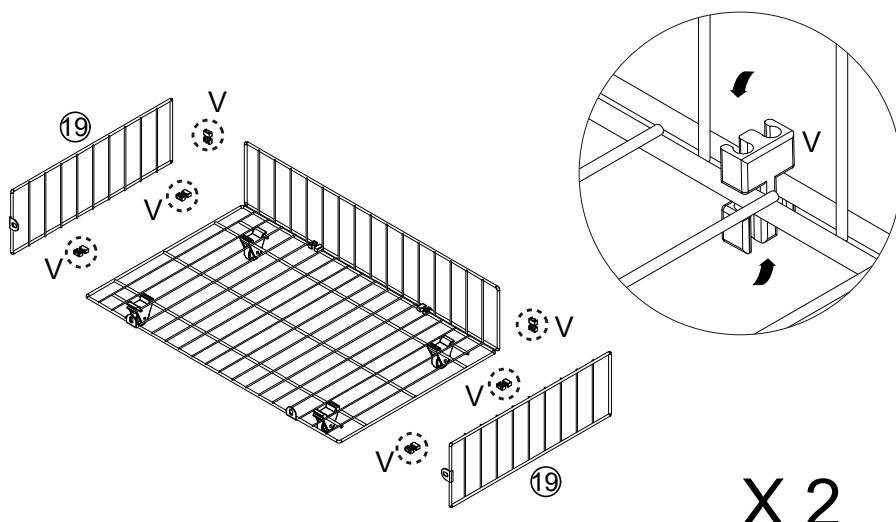

Step 19




X 2

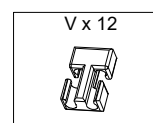

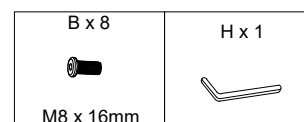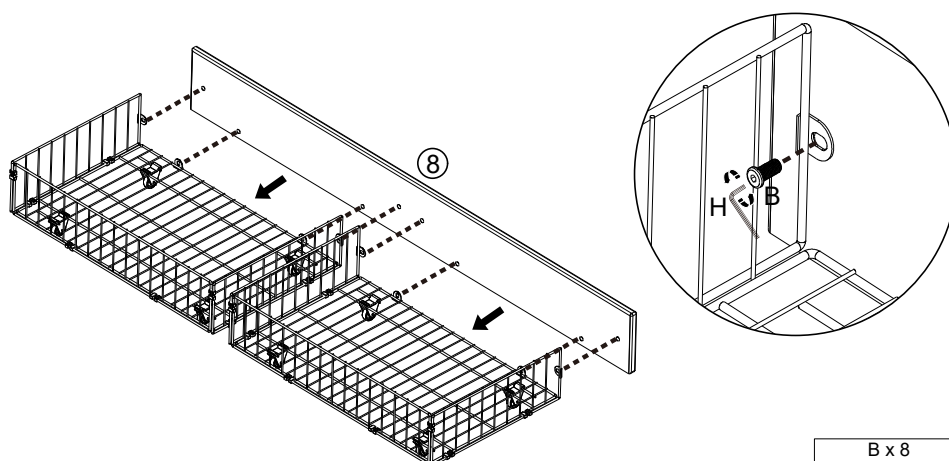Step 20



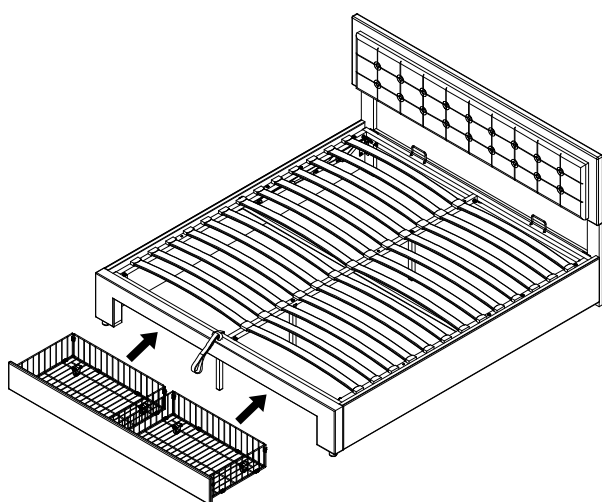Step 21



WHY WON'T MY HYDRAULIC BED STAY DOWN ?

1. In fact, nine times out ten the reason why hydraulic won't close is because you need to put your mattress on top of the bed. Yep, it really is that easy. This is because the hydraulic pistons need the weight of the mattress to provide enough pressure to close your bed.
2. However, what if you've put your mattress on your bed and you're one of the unlucky ones who finds that their hydraulic bed still won't stay down?

As previously mentioned, they require pressure in order to close. However, occasionally as well as placing the mattress on the bed you will initially have to apply some physical force yourself to close the bed. Don't worry you won't break it! ! ! !