Wood Platform Bed (Q)





Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.









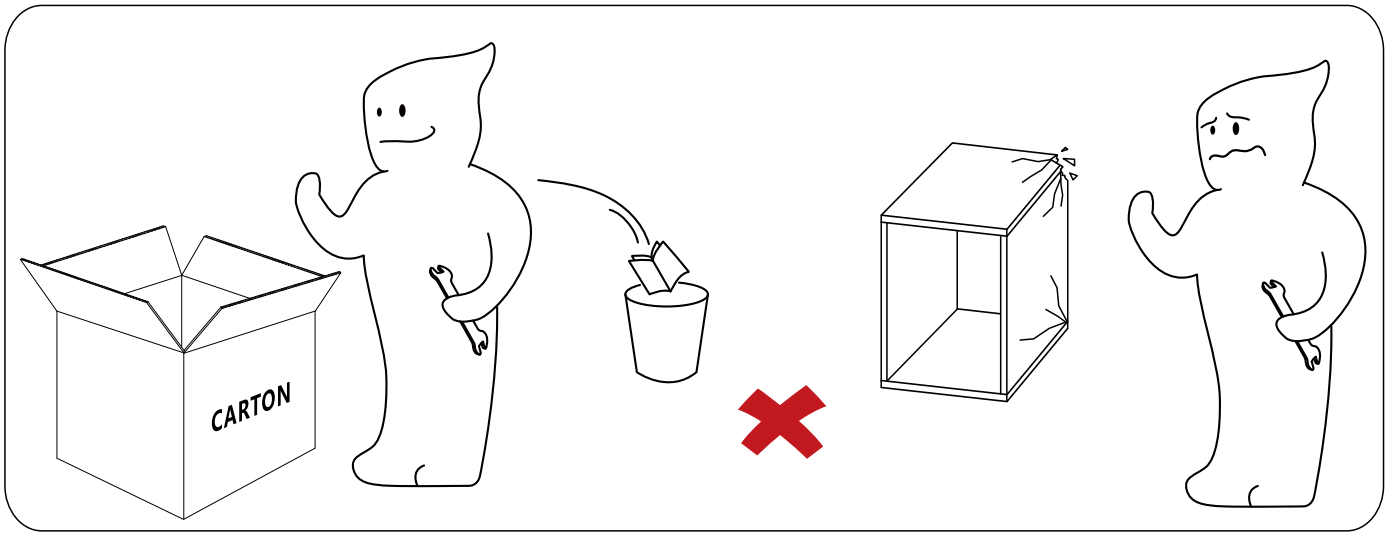


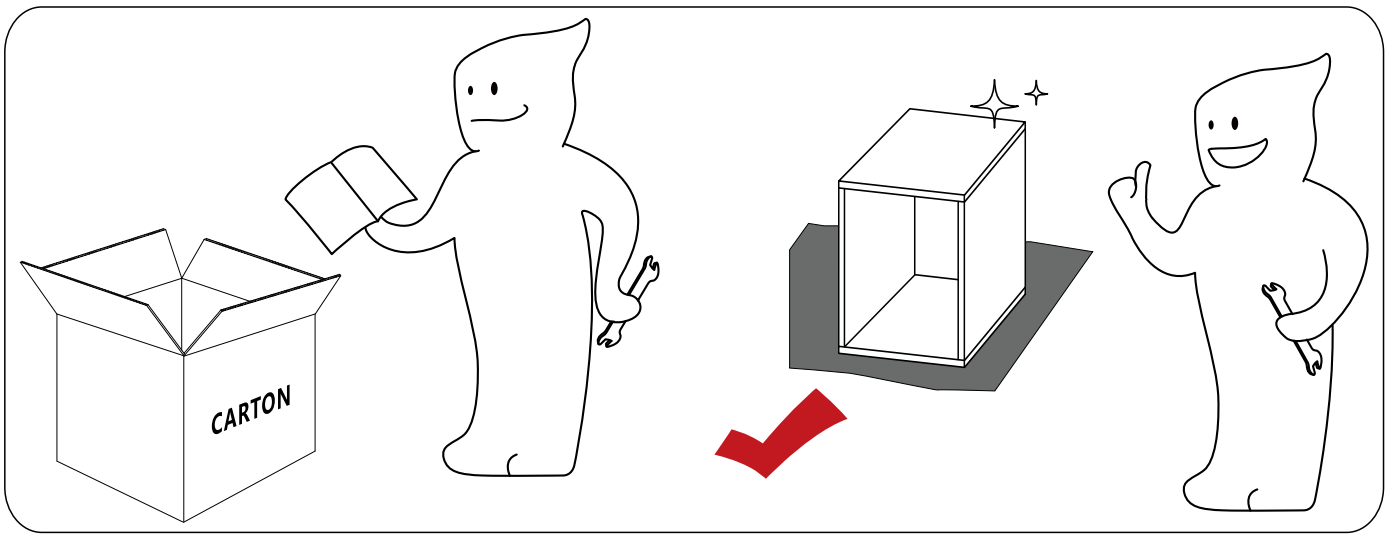


Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.
3.Finally,tighten all the screws manually.




For easier and better assembly, **2** or more adults are required.


ALPHABETICAL NUMBERING	DESCRIBE	ILLUSTRATION	NUMBER
A	Slat		1pc
B	Slat		1pc
C	Up headboard		1pc
C1	Donwn headboard		1pc
C2	Connector wood		3pcs
D	Headboard leg		1pc
D1	Headboard leg		1pc
E	Footboard		1pc
F	Side panel		2pcs
F1	Side panel		2pcs
G	Support bar		1pc
H	Support bar		1pc
I	Support bar		1pc
J	Support wood		4pcs
K	Support leg		2pcs
L	Support leg		2pcs
M	Wood leg		1pc
M1	Wood leg		1pc


Ruler-Use this ruler to help correctly identify the screws.






The length of the screw is measured from the rod part excluding the screw cap (30mm screw shown).

ALPHABETICAL NUMBERING	DESCRIBE	ILLUSTRATION	NUMBER
N	Connector plate 100x2 mm		4pcs
N2	Connector plate 35x2 mm		10pcs
O	Sponge-cushion		4pcs
P	Washer φ8x18x1.5 mm		48pcs+1pc
P1	Washer φ6x18x1.5 mm		16pcs
Q	Wrench M6		1pc
R	Screw M8x50 mm		1pc
R1	Screw M8x30 mm		12pcs
R2	Screw M8x35 mm		5pcs
R3	Screw M8x25 mm		8pcs
R4	Screw M8x16 mm		22pcs+1pc
R5	Screw M6x30 mm		6pcs
R6	Screw M6x16 mm		20pcs+1pc

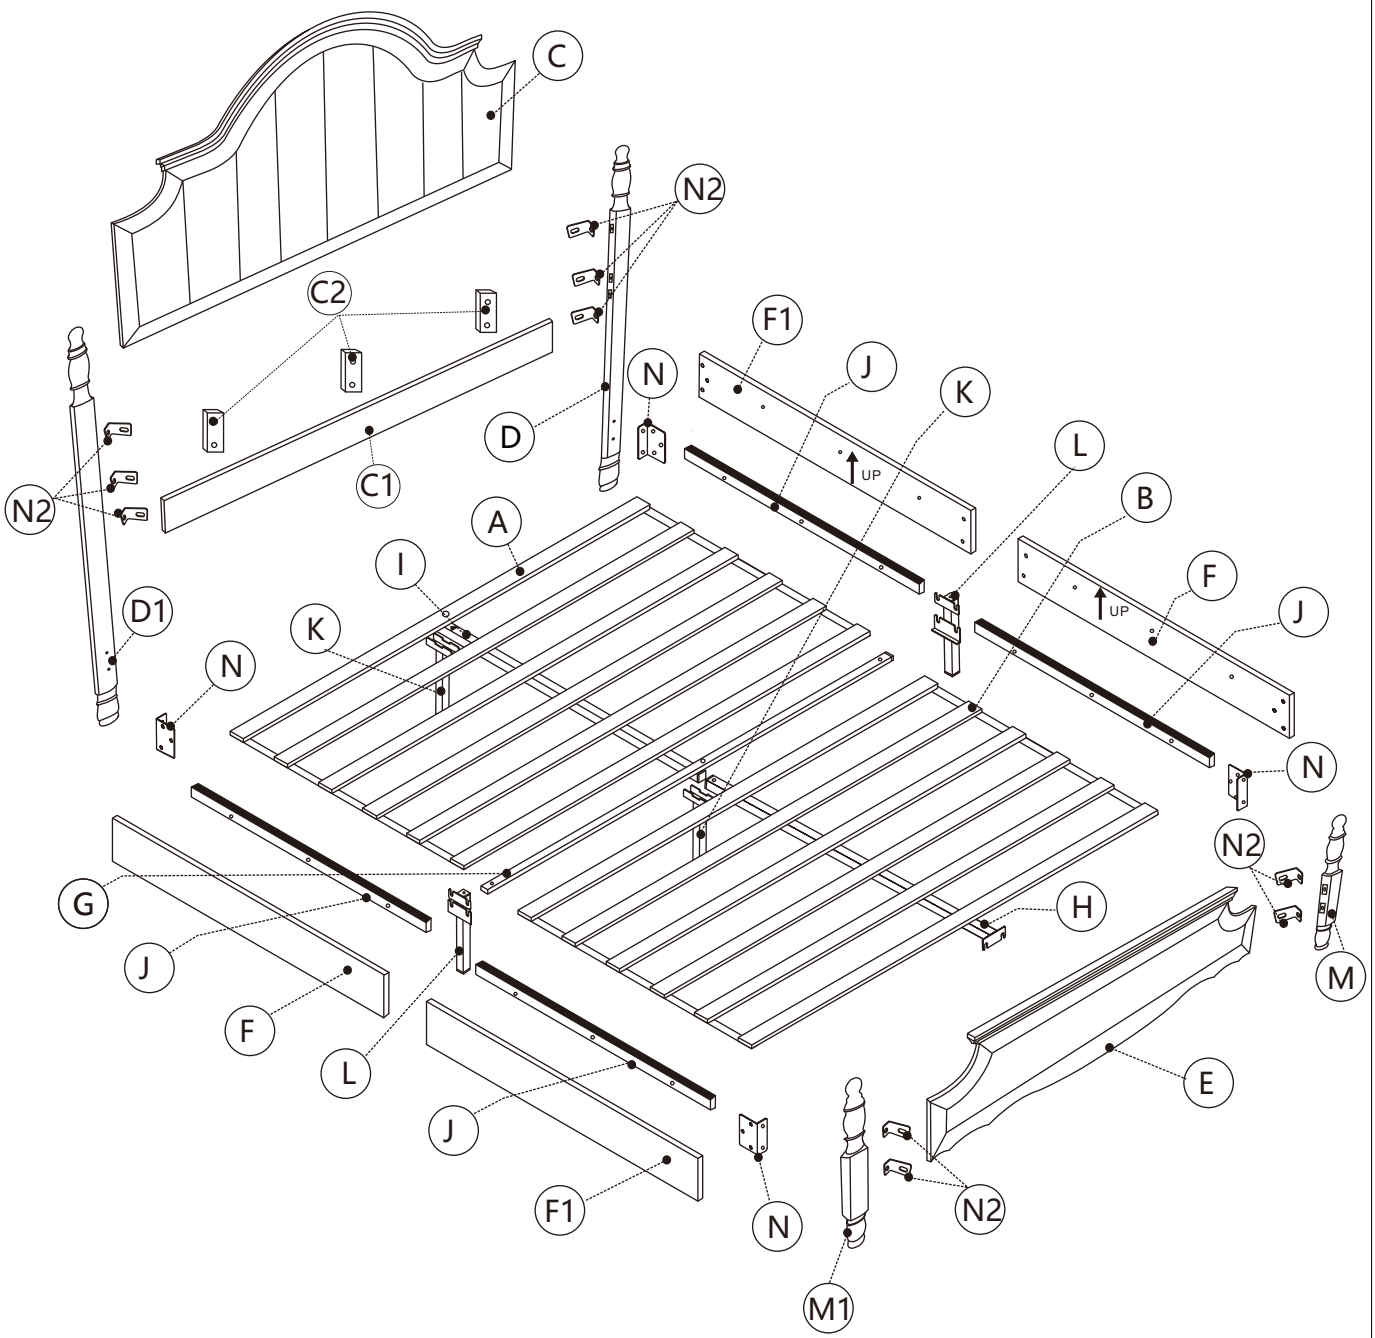

C
N2
C2
F1
J
K
N
D
L
B
C1
UP
A
I
F
J
D1
K
N
N
N2
M
G
H
J
F
L
E
J
F1
N
N2
M1

1 Tight all the innerscrew after all holes are ligned.When installing the connector N1, it is essential to ensure that the orientation relationship between connector N1 and the holes on the side of components M/M1/D/D1 is the same as shown in the image.

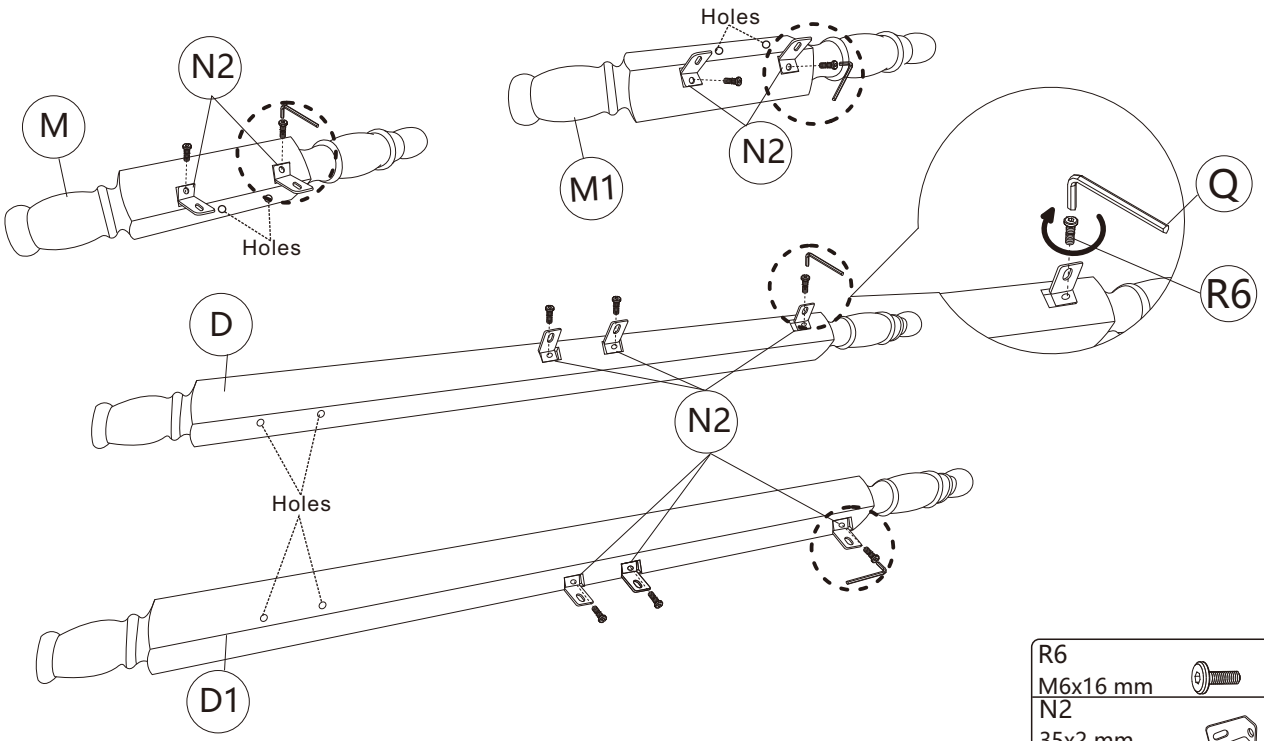


R6 M6x16 mm		10pcs
N2 35x2 mm		10pcs
Q M6		1pc

2

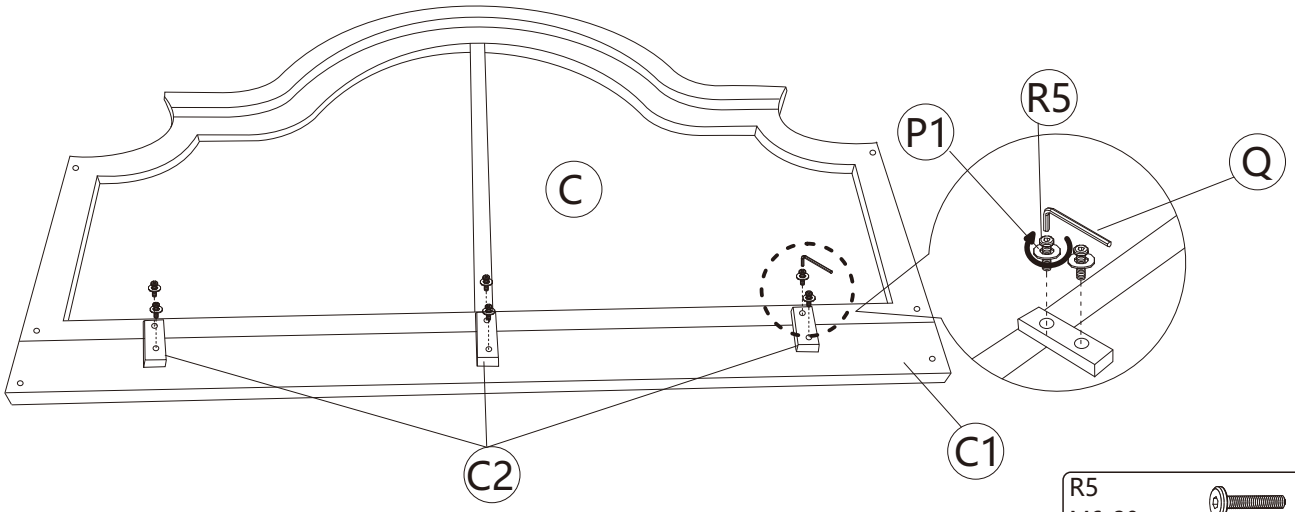


R5 M6x30 mm		6pcs
P1 φ6x18x1.5 mm		6pcs
Q M6		1pc

3

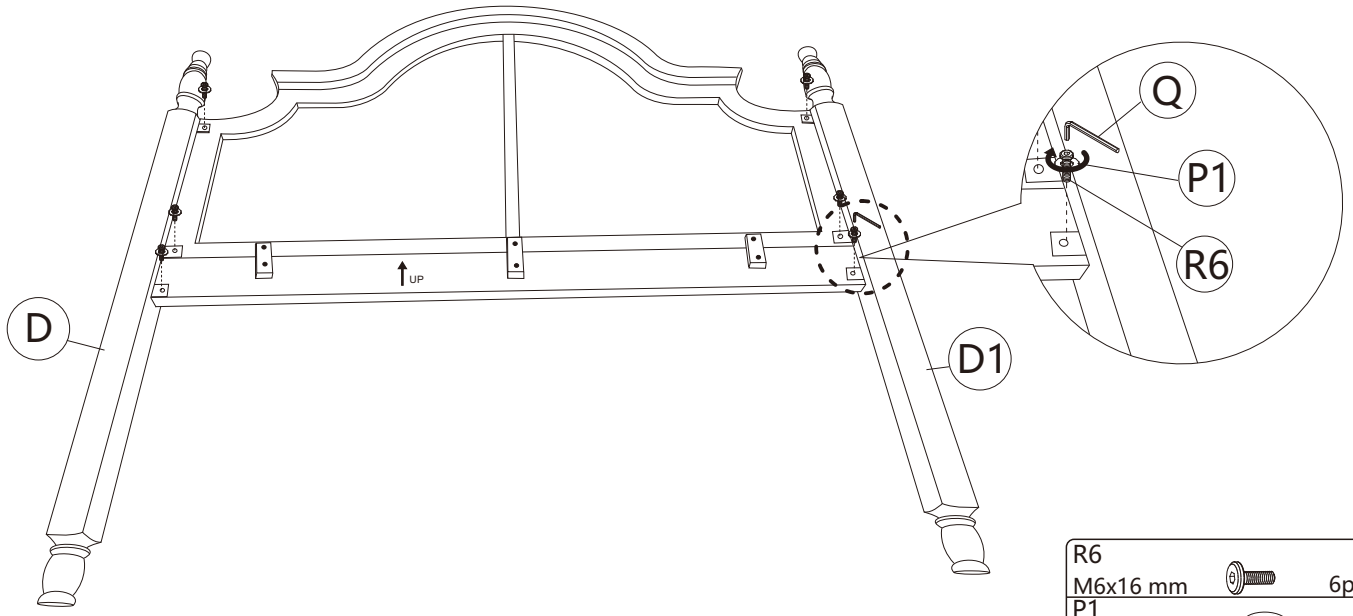


R6 M6x16 mm		6pcs
P1 φ6x18x1.5 mm		6pcs
Q M6		1pc

4

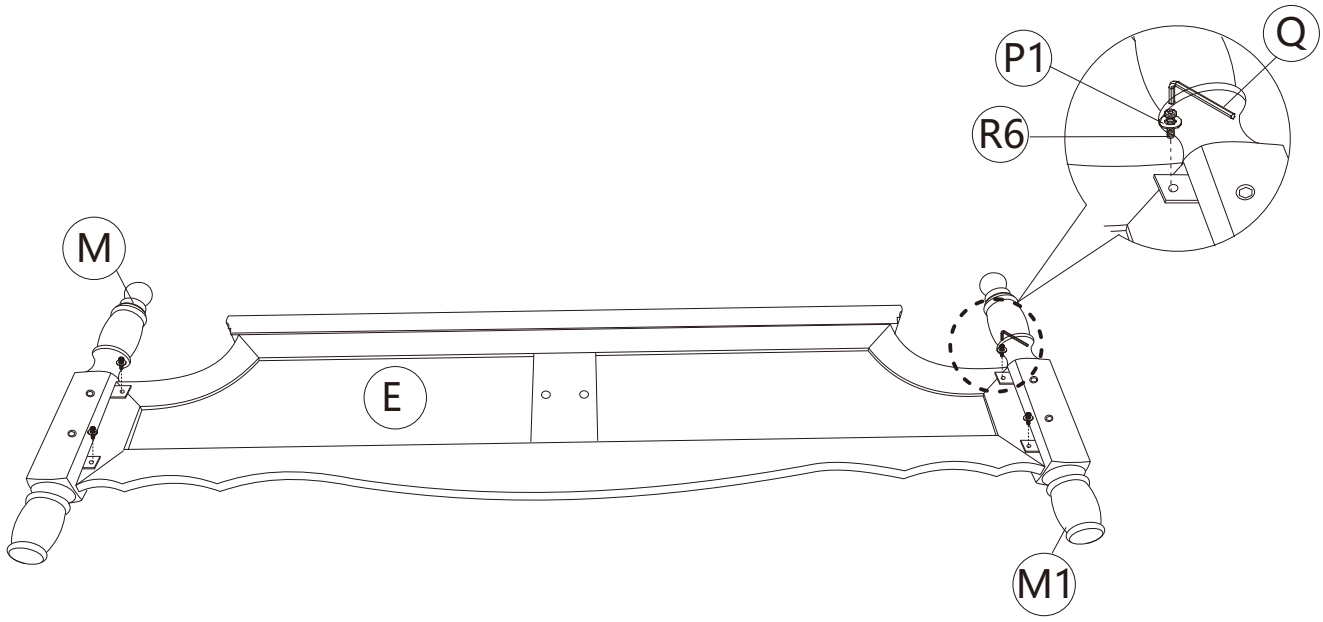


R6 M6x16 mm		4pcs
P1 φ6x18x1.5 mm		4pcs
Q M6		1pc

5 Take out parts F and F1, and lock the iron frame foot L in the middle according to the figure. Note that there are **2 holes** located on the inner side of the board. Then lock the bed hanging pieces N on the front and rear of the board, with **3 holes** on each side.

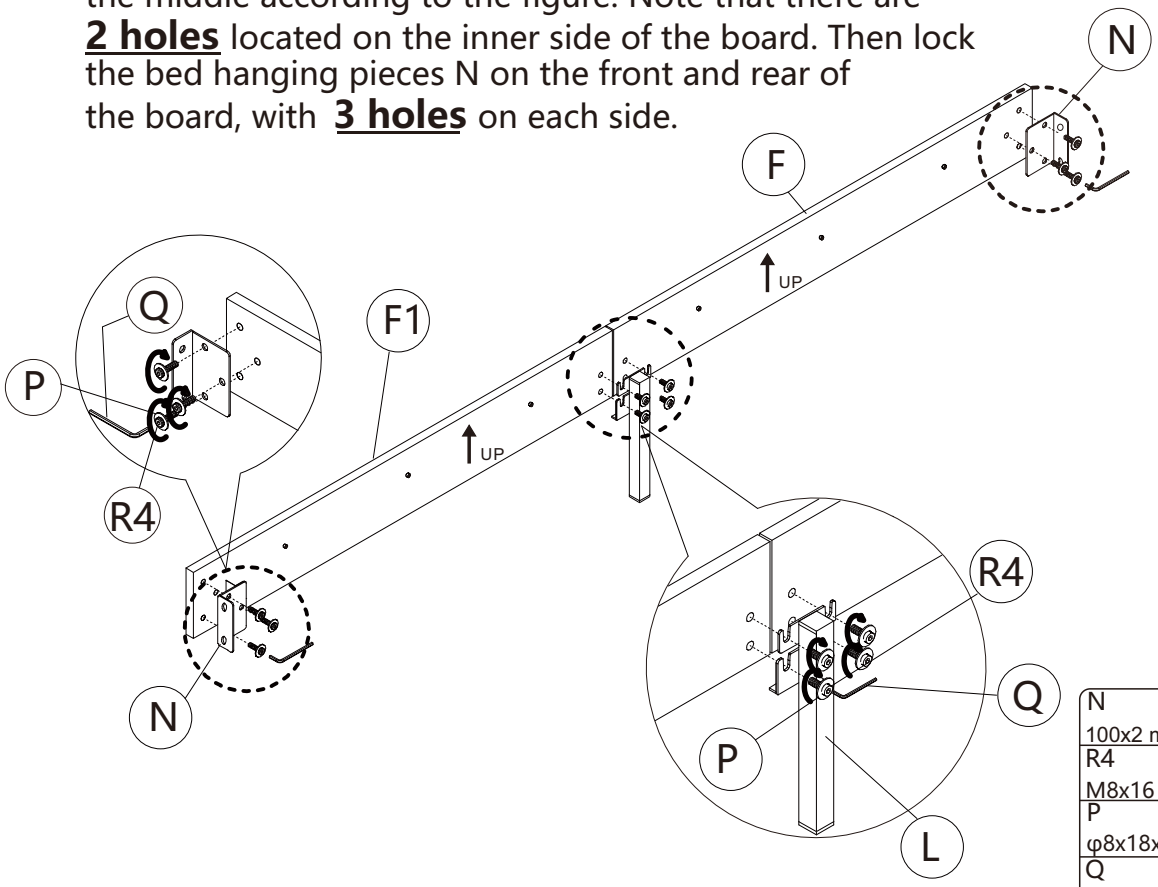


N 100x2 mm		2pcs
R4 M8x16 mm		10pcs
P φ8x18x1.5 mm		10pcs
Q M6		1pc

6 Same as Step 5

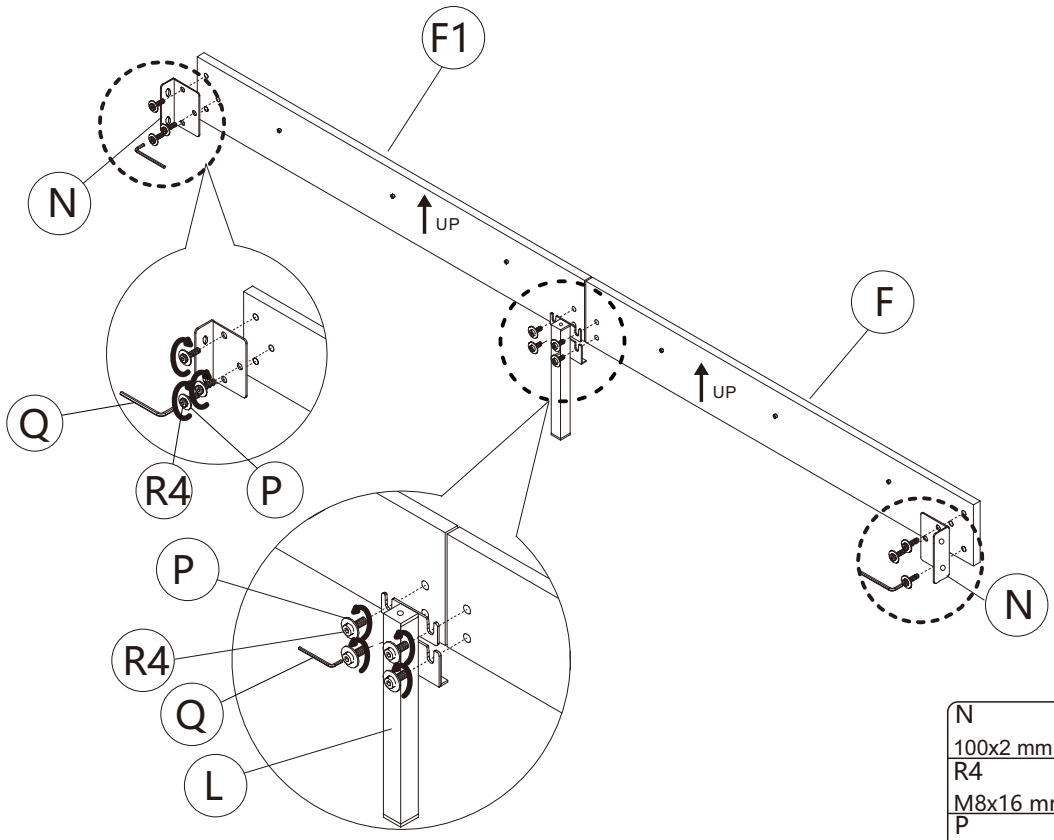


N 100x2 mm		2pcs
R4 M8x16 mm		10pcs
P φ8x18x1.5 mm		10pcs
Q M6		1pc

7

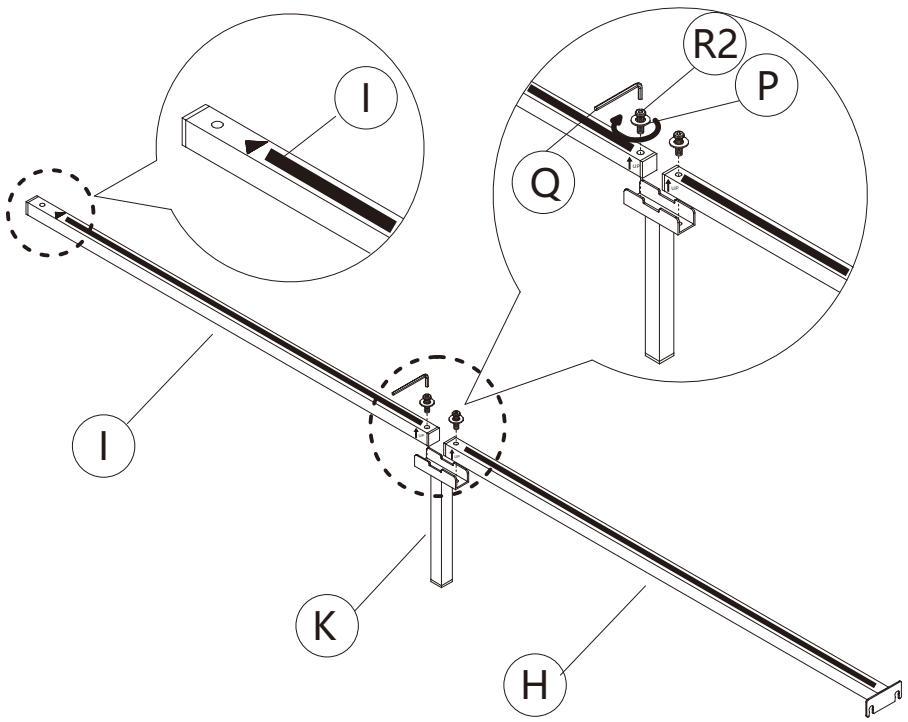


R2 M8x35 mm	2pcs
P φ8x18x1.5 mm	2pcs
Q M6	1pc

8

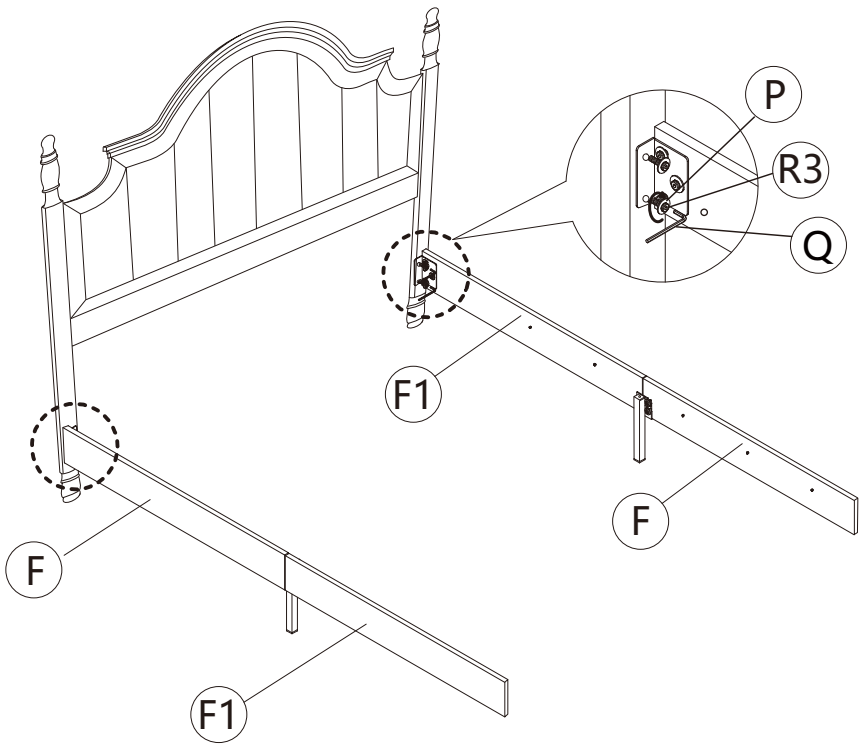


R3 M8x25 mm	4pcs
P φ8x18x1.5 mm	4pcs
Q M6	1pc

9

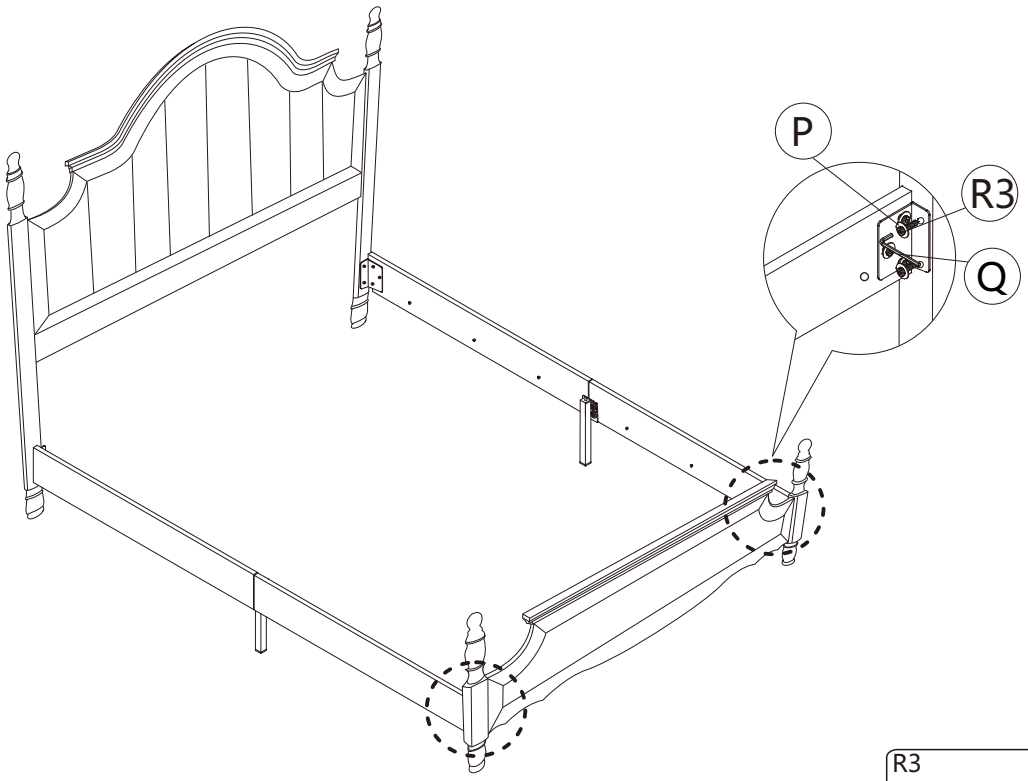


R3 M8x25 mm		4pcs
P φ8x18x1.5 mm		4pcs
Q M6		1pc

10

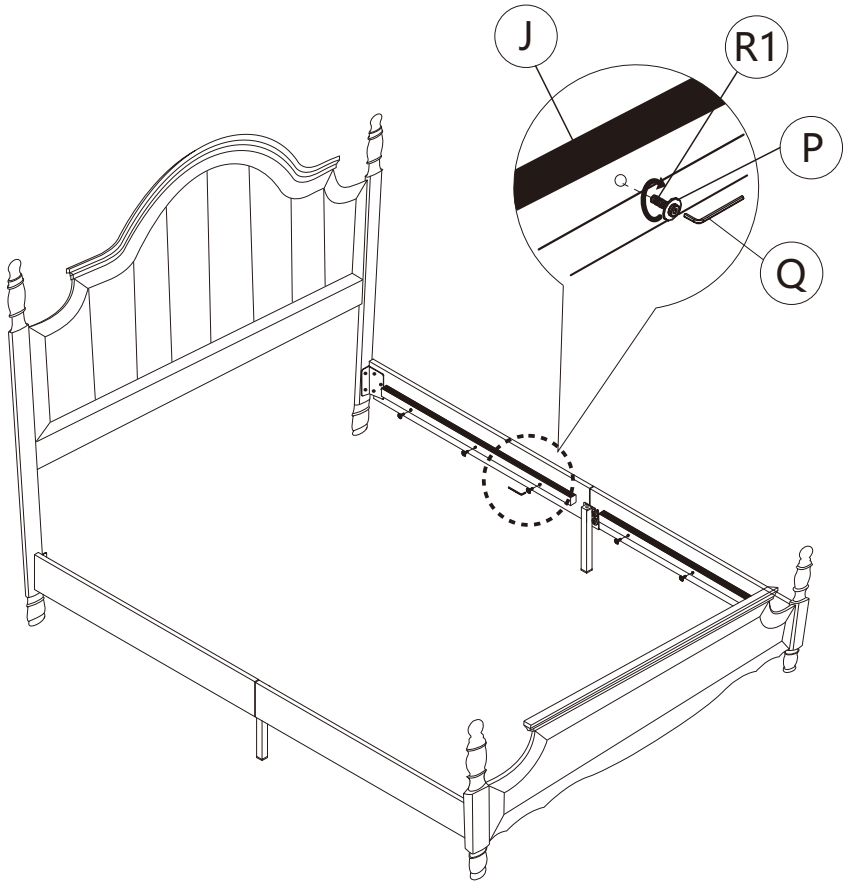


R1 M8x30 mm		12pcs
P φ8x18x1.5 mm		12pcs
Q M6		1pc

11

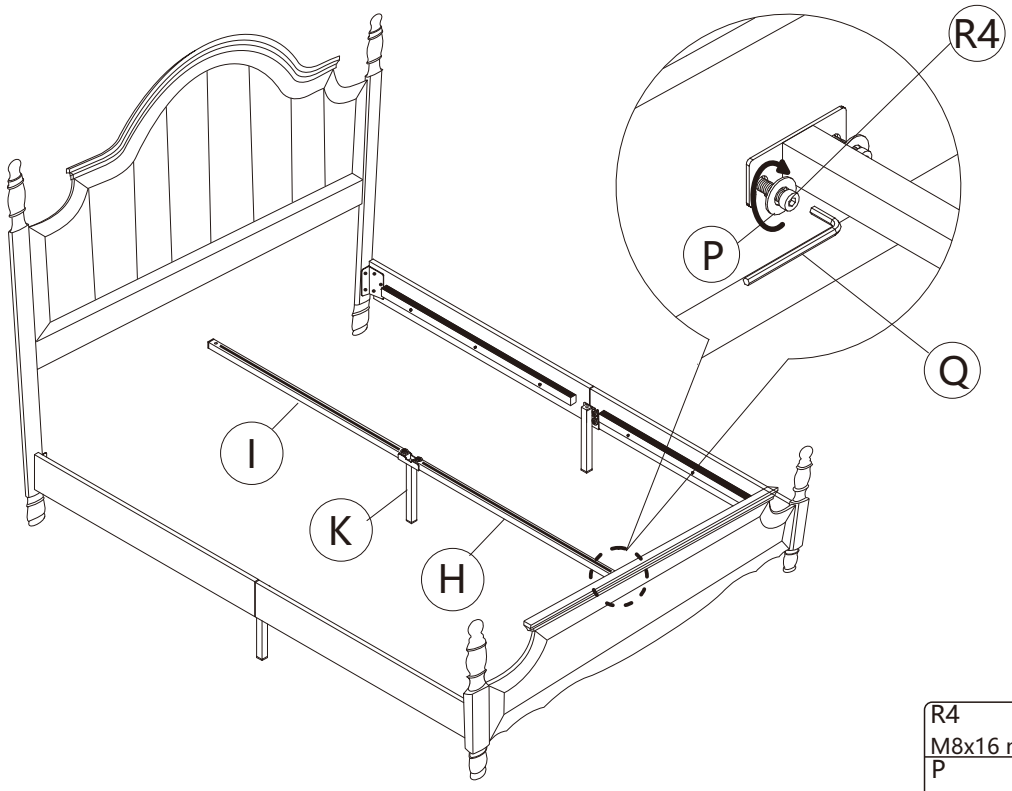


R4 M8x16 mm		2pcs
P φ8x18x1.5 mm		2pcs
Q M6		1pc

12

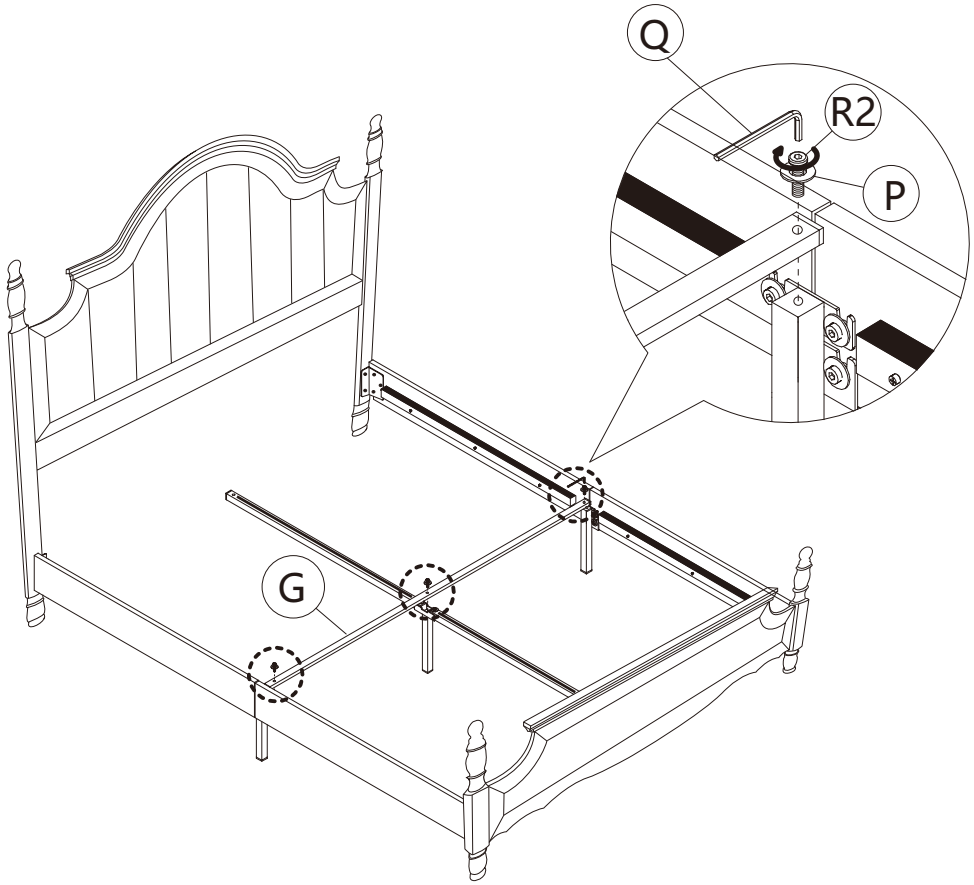

R2 M8x35 mm		3pcs
P φ8x18x1.5 mm		3pcs
Q M6		1pc


13 Note that there is a slat with a hole in part A for connecting to part K.

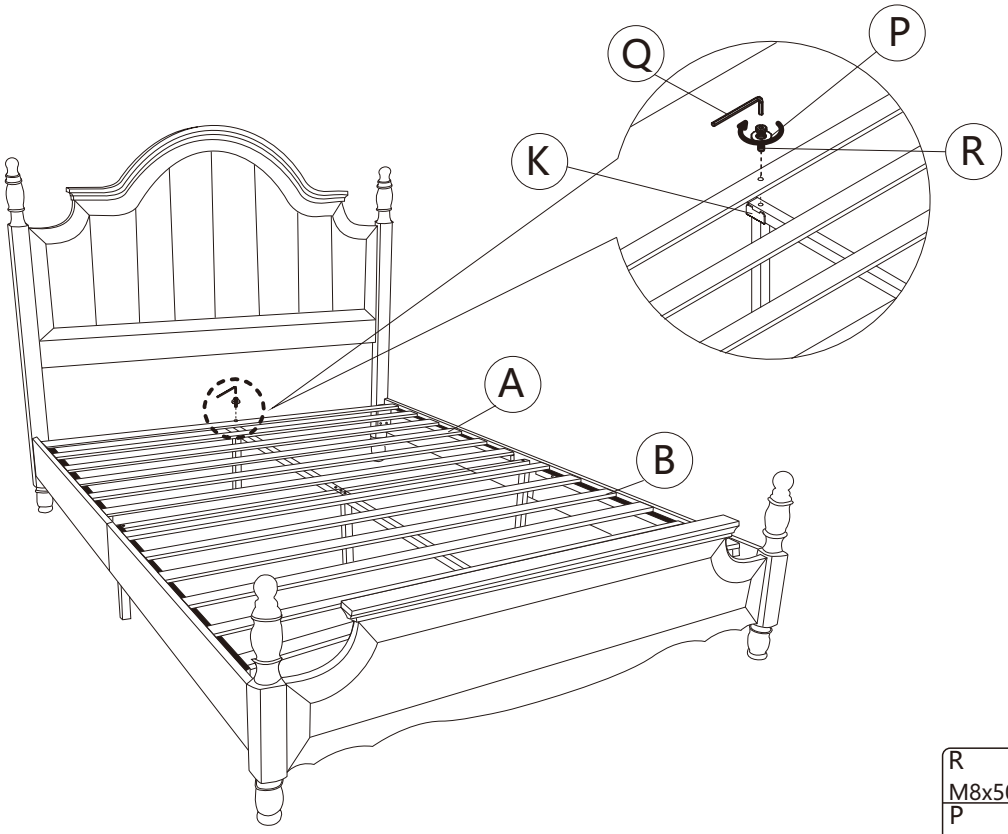

R M8x50 mm		1pc
P φ8x18x1.5 mm		1pc
Q M6		1pc

Pls make sure that all screws are 100% tight.

14 Stick **O** on the back to avoid noice.

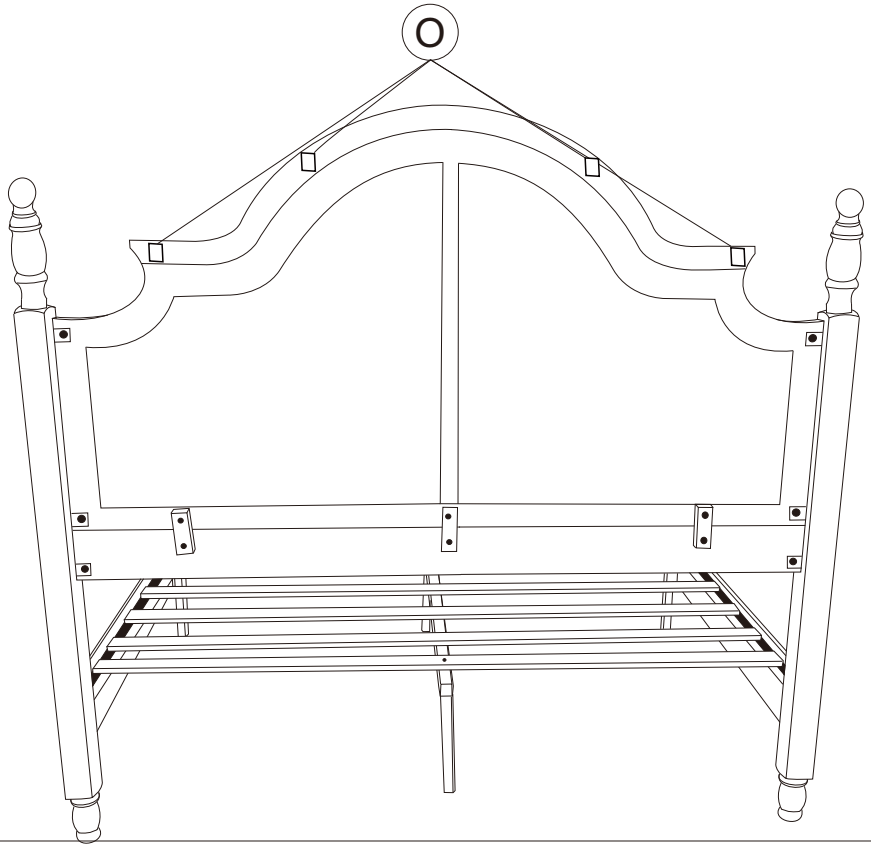

15



Installation Complete