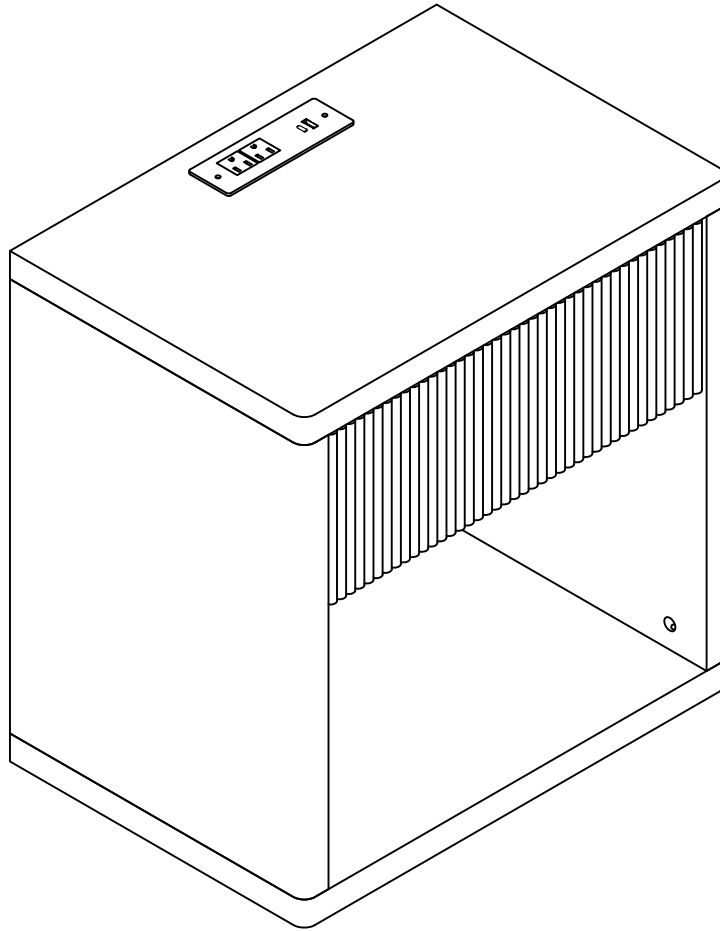


Instruction Manual



ITEM NO.HMGG0021

NOTE:

This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

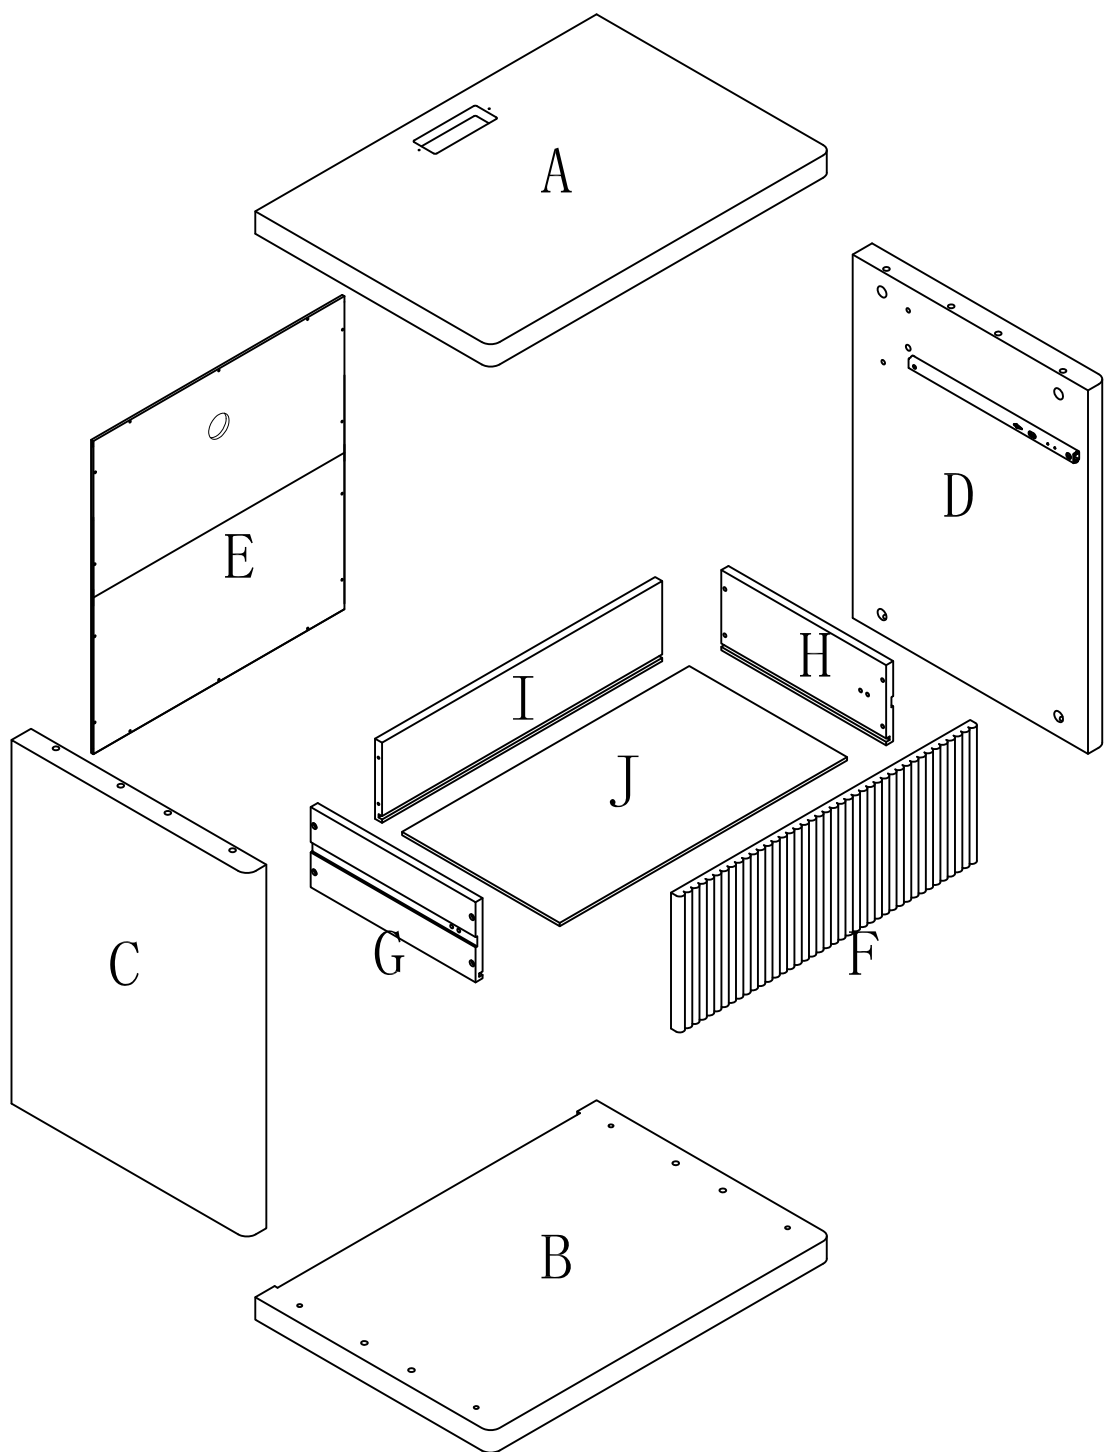
- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



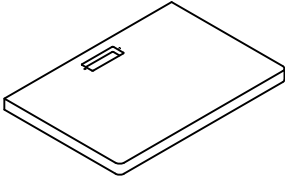
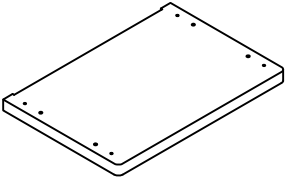
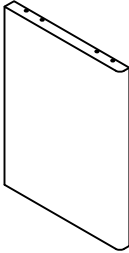
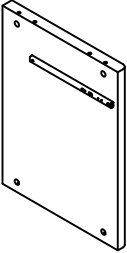
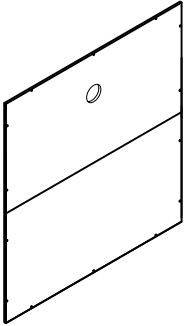
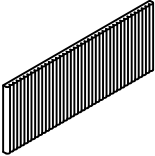
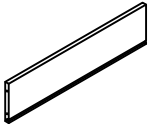
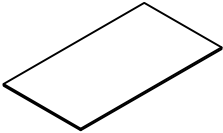
Weight Limitation

100 LBS

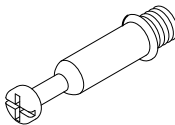



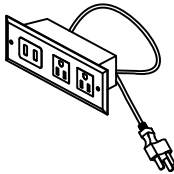
EXPLOSIVE VIEW





PARTS LIST

A x1 	B x1 	C x1 	D x1 
E x1 	F x1 	G x1 	H x1 
I x1 	J x1 		

HARDWARE LIST

1	x8		2	x8		3	x8		4	x14+1		5	x2		6	x1	
						ø8*30mm			ø3*14mm			ø3*15mm					

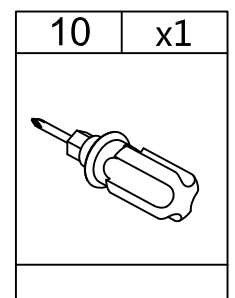
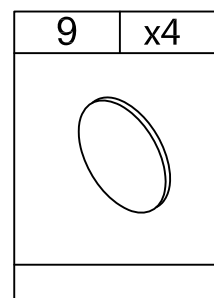
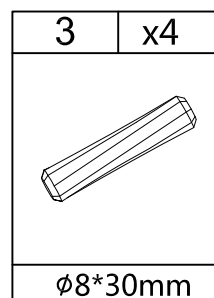
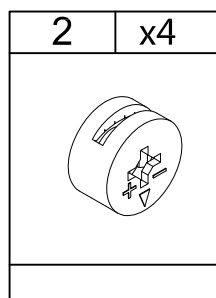
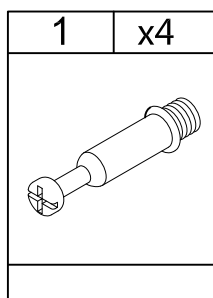
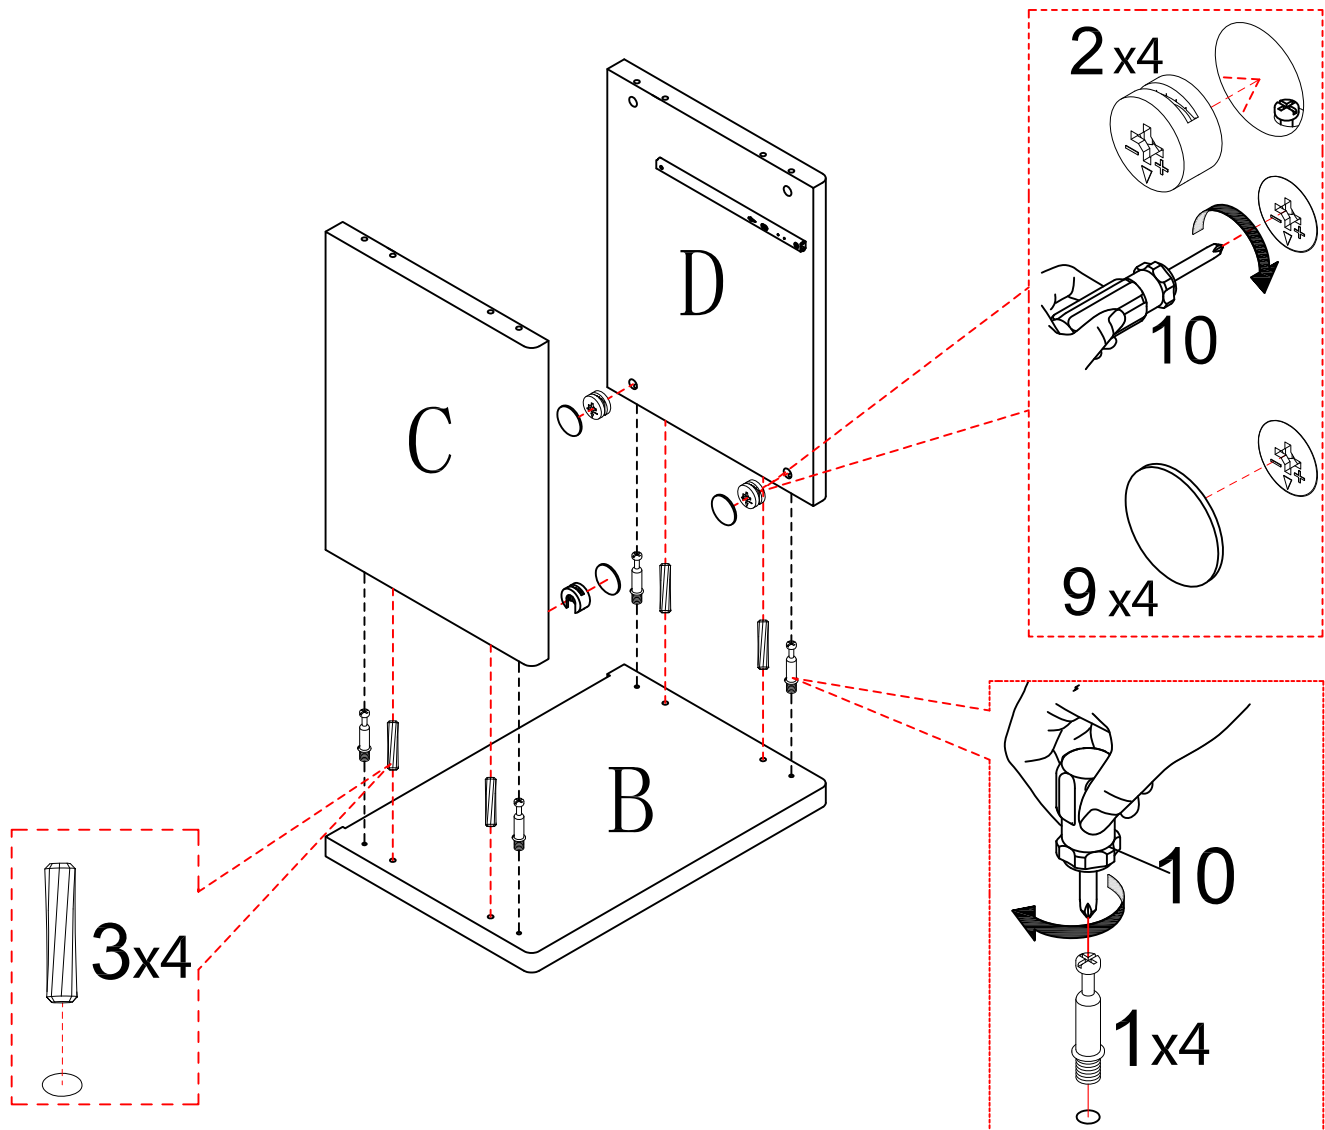
7	x8		8	x4		9	x4		10	x1							
ø8#*1"			ø4*13mm														

ASSEMBLY INSTRUCTIONS

STEP-1

1.Put the bolt #1 and wood dowel #3 into the bottom panel B

2.Attached the side panels C&D to the bottom panel B, then tighten the cam#2

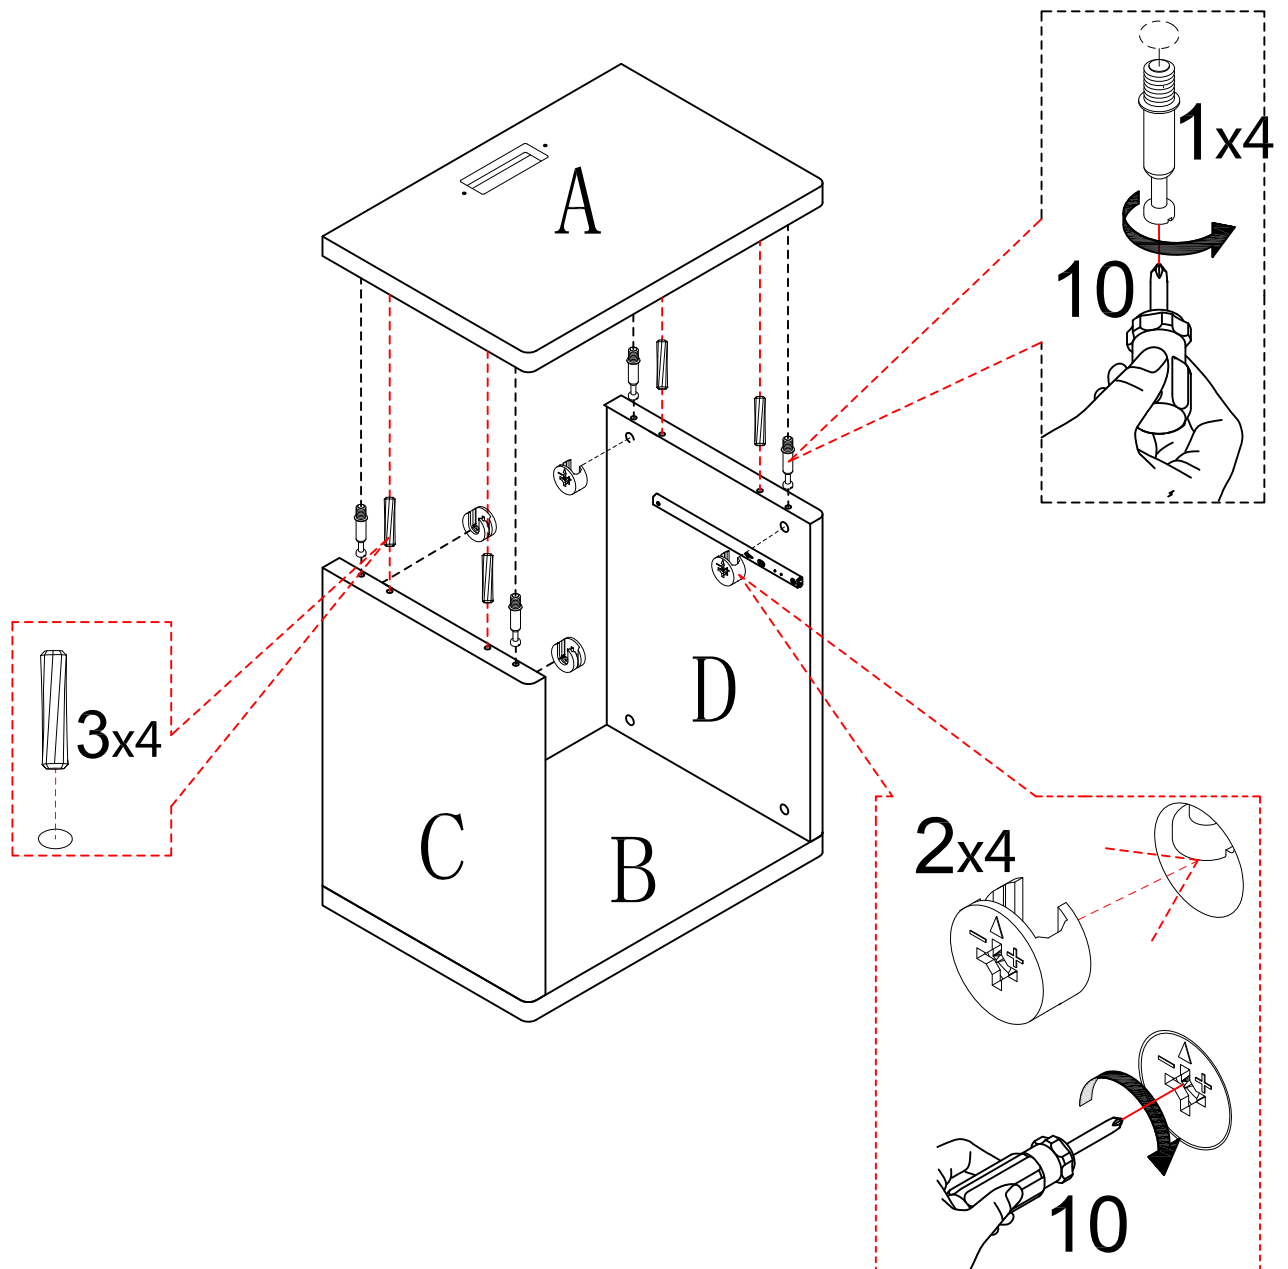


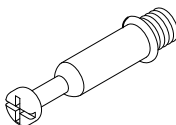
ASSEMBLY INSTRUCTIONS

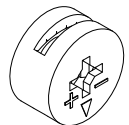
STEP-2

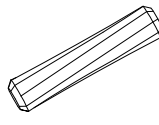
1.Put the bolt #1 and wood dowel #3 into the side panel C&D

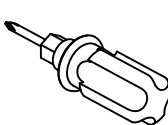
2.Attached the top panel A to the side panel C&D, then tighten the cam#2



1	x4
	

2	x4
	

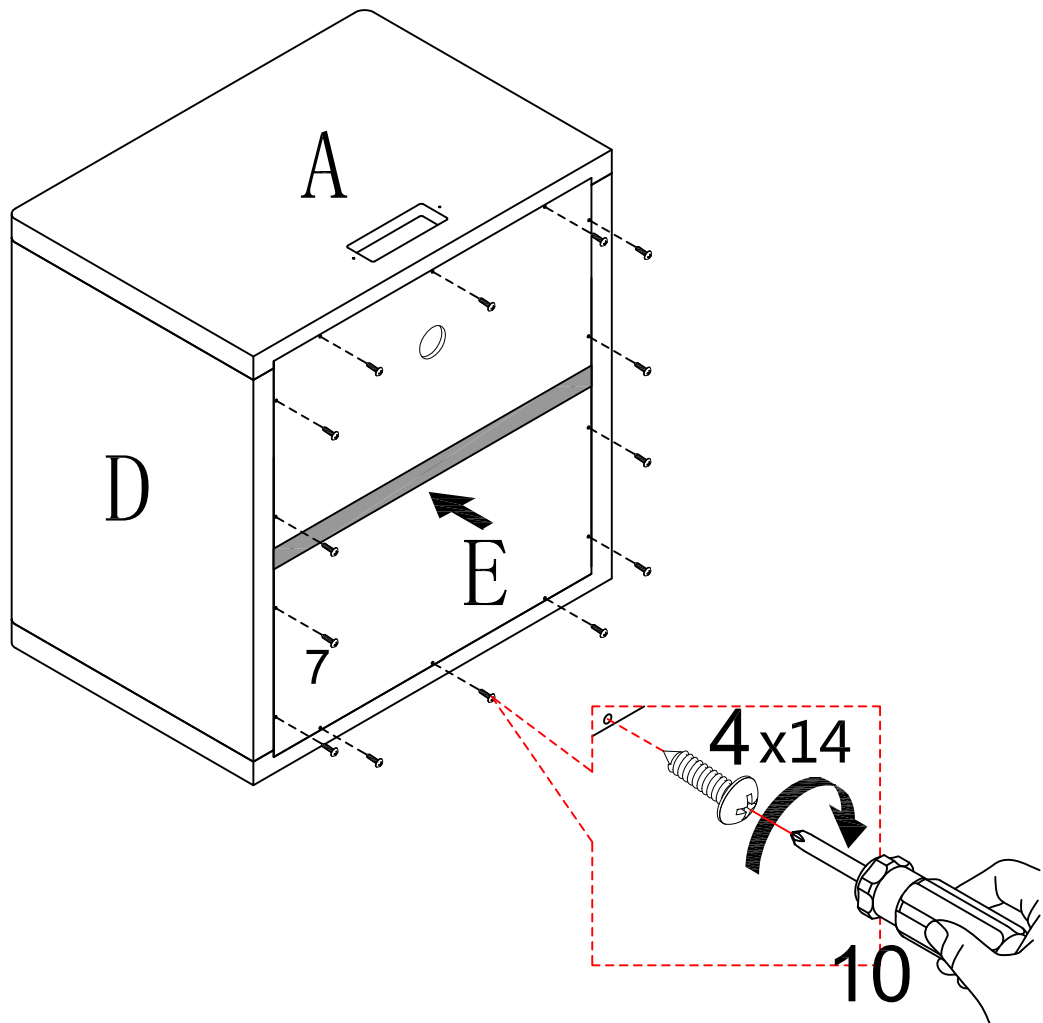
3	x4
	
ø8*30mm	


10	x1
	


ASSEMBLY INSTRUCTIONS

STEP-3

1.Attached the back panel E and tighten the screws #4



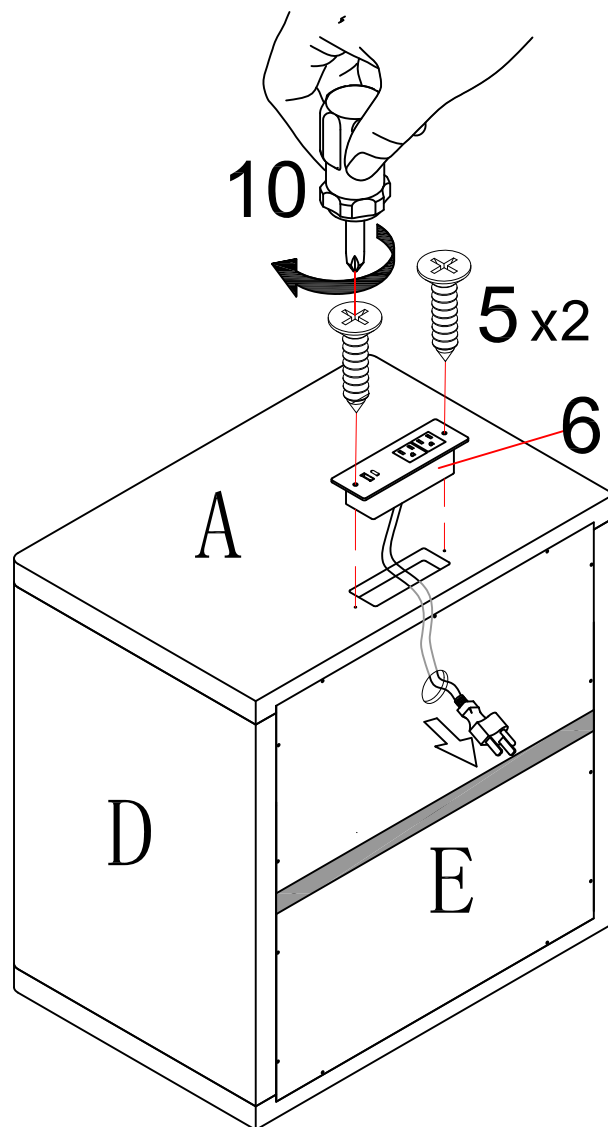
4	x14
	
ø3*14mm	

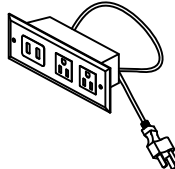

10	x1
	

ASSEMBLY INSTRUCTIONS

STEP-4

1.Put the electric board #6 to the top panel A and then tighten the screws #5



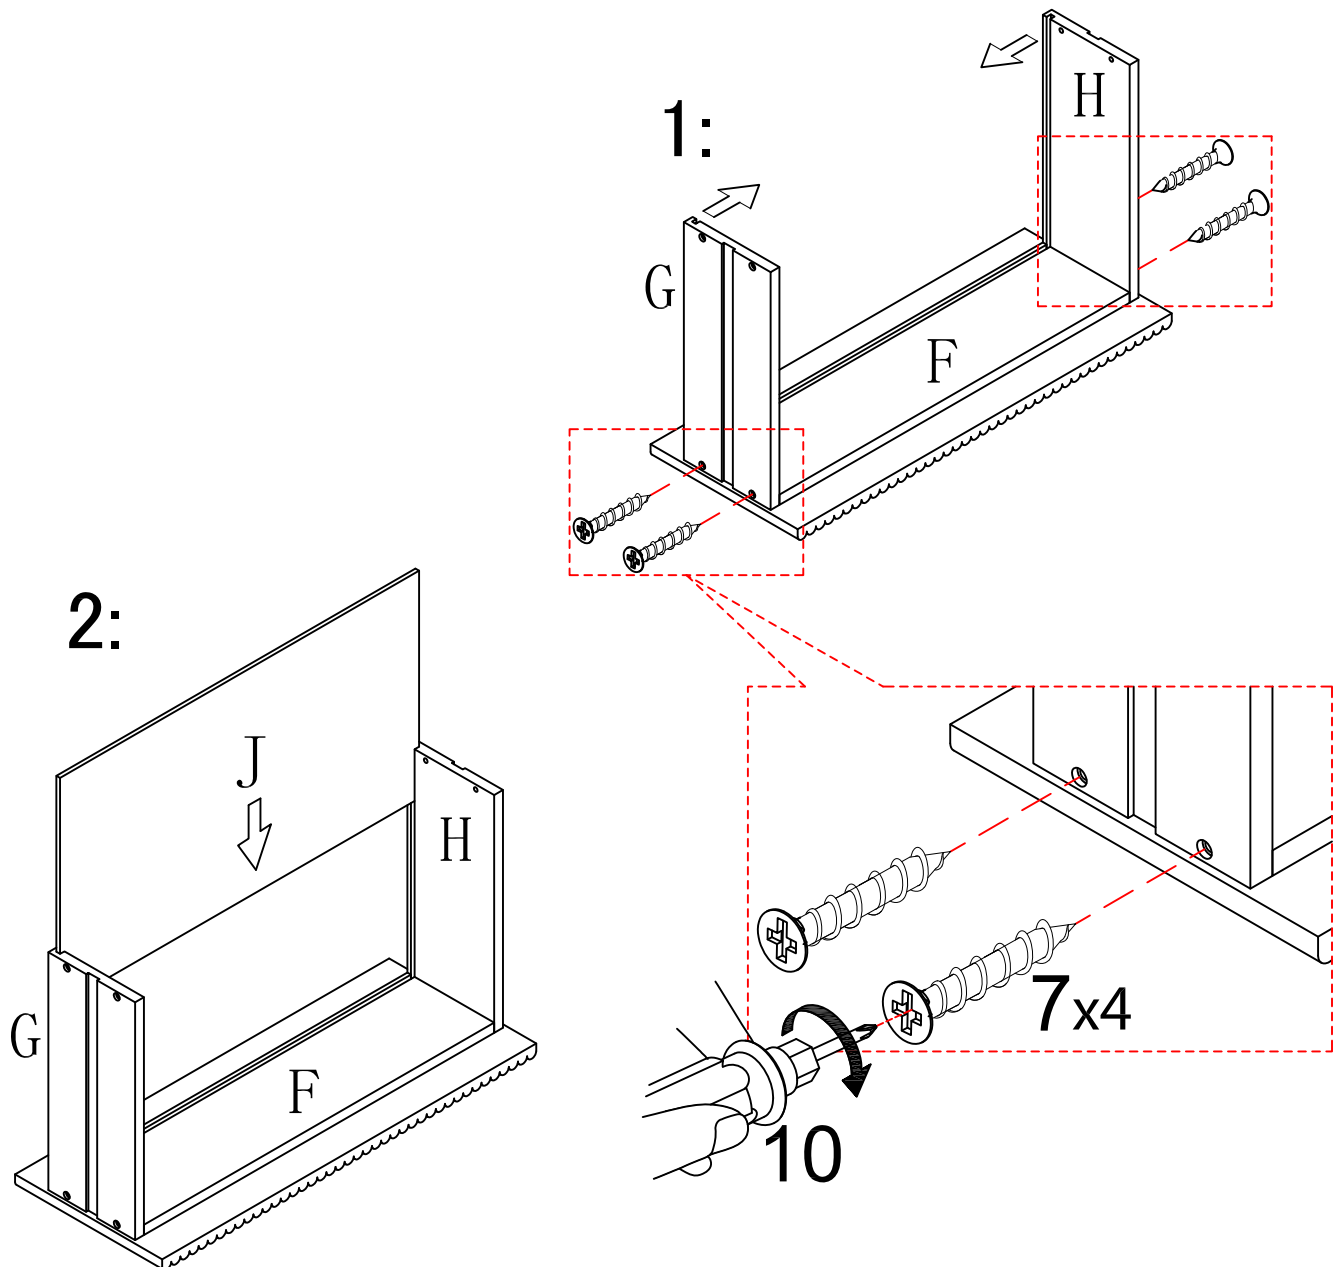
5	x2	6	x1	10	x1
					
φ3*12mm*6#					

ASSEMBLY INSTRUCTIONS

STEP-5

1.Put the drawer left G&right H panels to the drawer front panel F and tighten the screws #7.

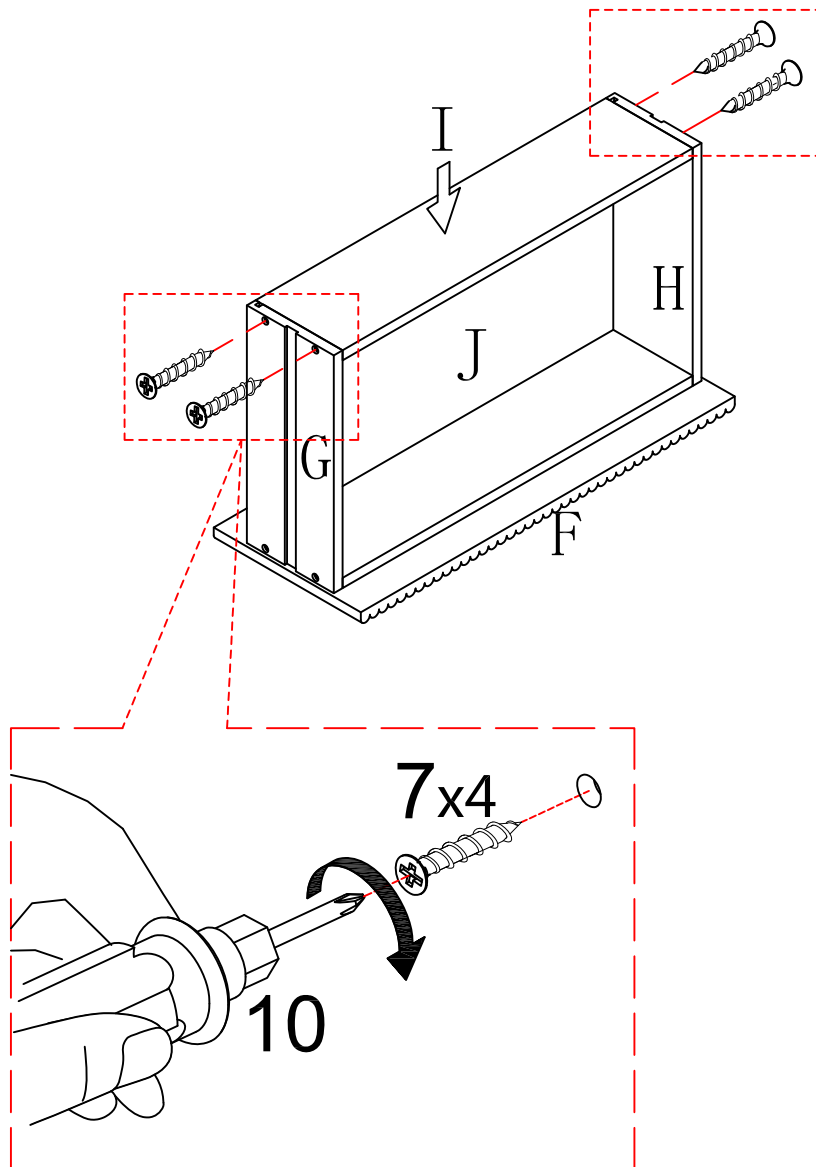
2.Attached the drawer bottom to the groove of the drawer left G and right H.





ASSEMBLY INSTRUCTIONS

STEP-6

1.Attached the drawer back panel I and tighten the screws #7



7	x4
	
ø8#*1"	

10	x1
	

ASSEMBLY INSTRUCTIONS

STEP-7

1.Attached the drawer , make sure the slider is aligned and then tighten the screws #8

