




desk



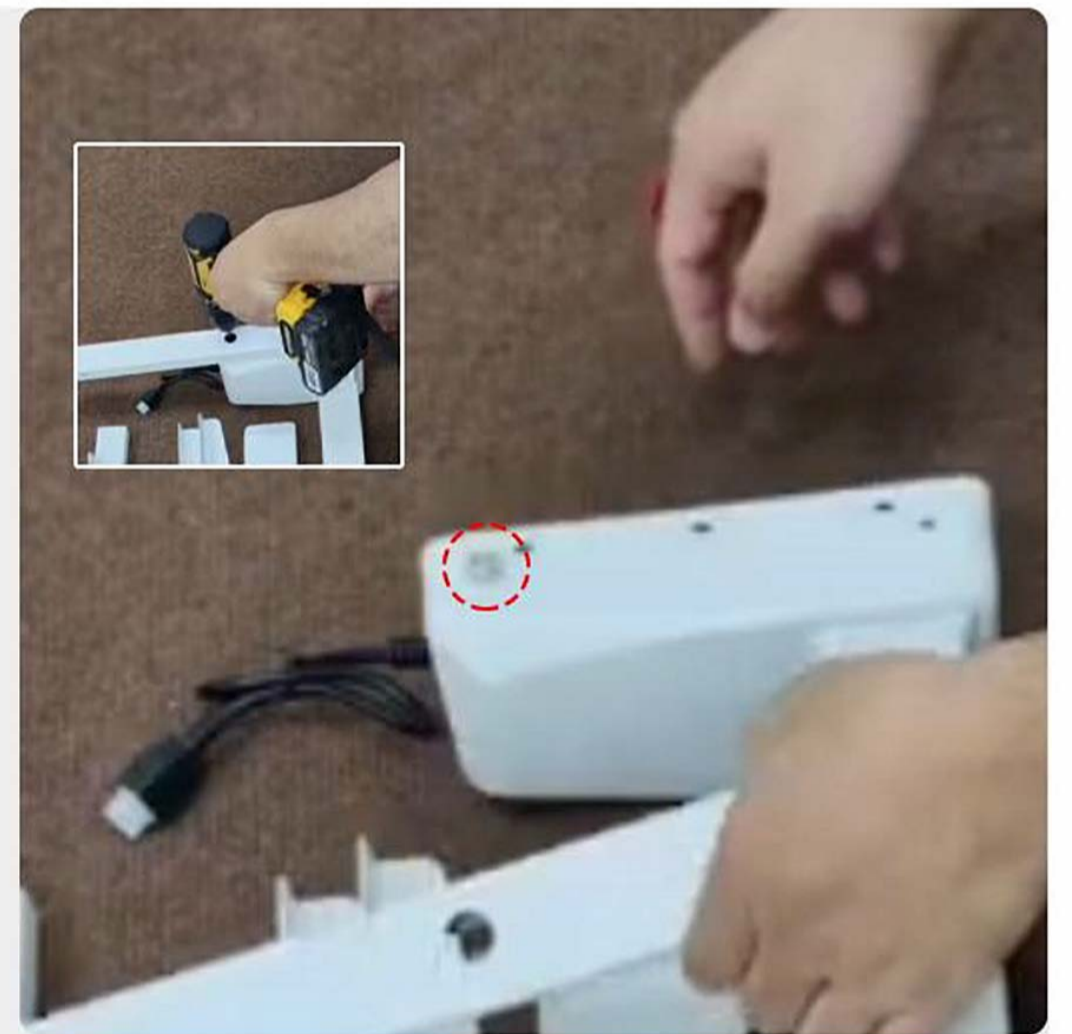


First, install the crossbeams. Place the screws in the positions shown—do not tightend yet. Align the slot on each crossbeam with the corresponding spot on the leg and snap it in. Then tightend using the screws shown. Now tightend the screws placed earlier. Repeat for all four crossbeams. Ensure all eight holes face downward and the four ears (protrusions) face the inside of the frame.

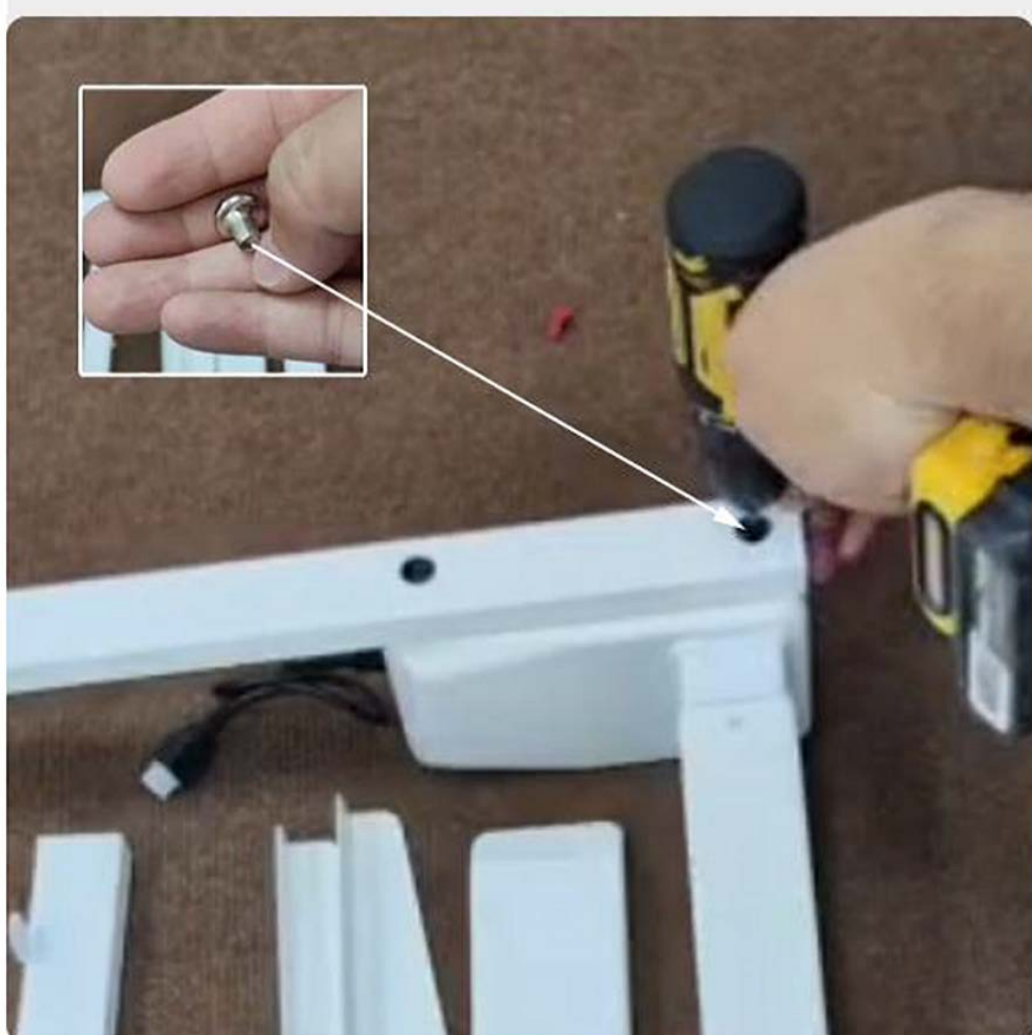

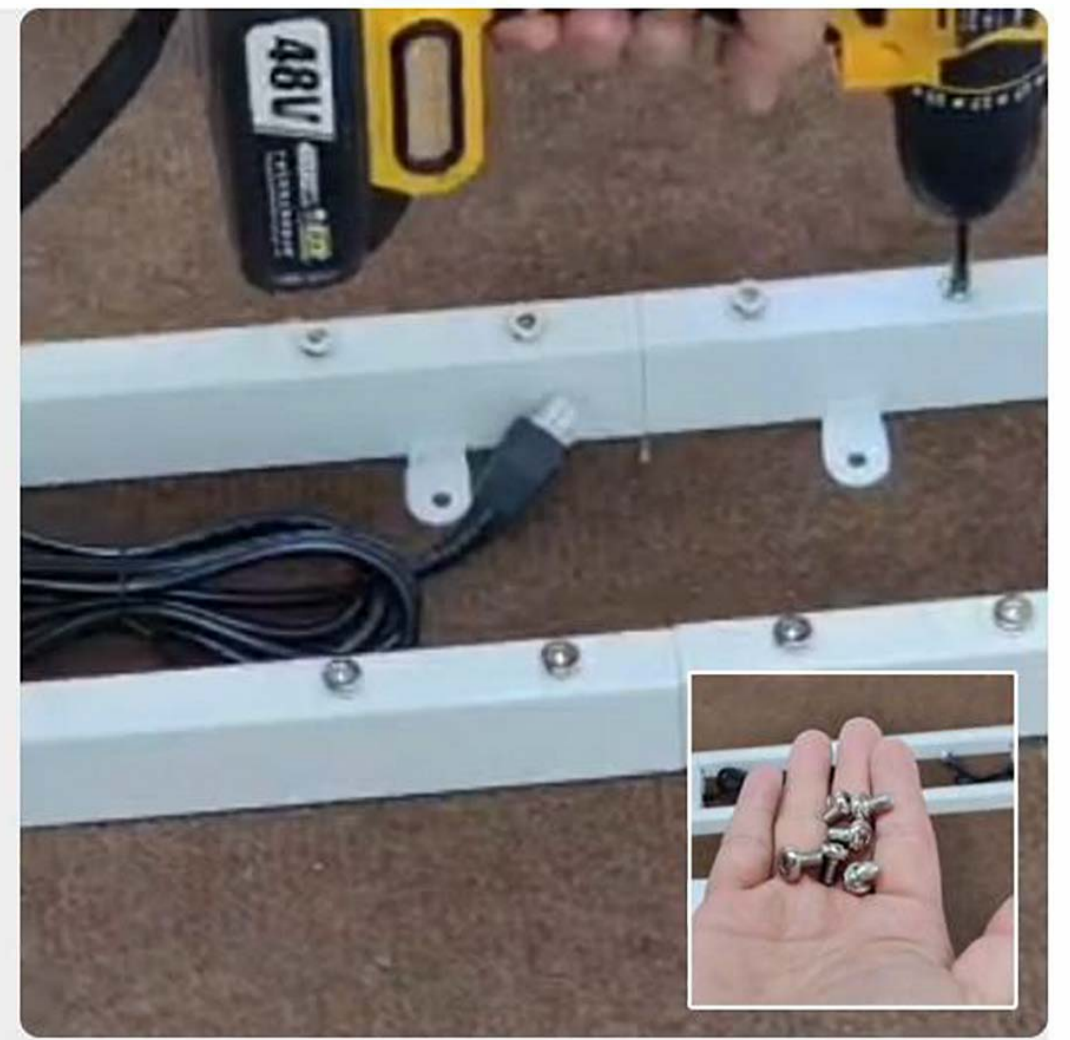

Next, insert these two connecting rods into the crossbeams (the grooved side of the connecting rods should face inward). Once both connecting rods are inserted, they can be extended left and right — simply adjust them to match the length of your tabletop. Then use this longer screw (shown in the diagram) to secure the crossbeams.

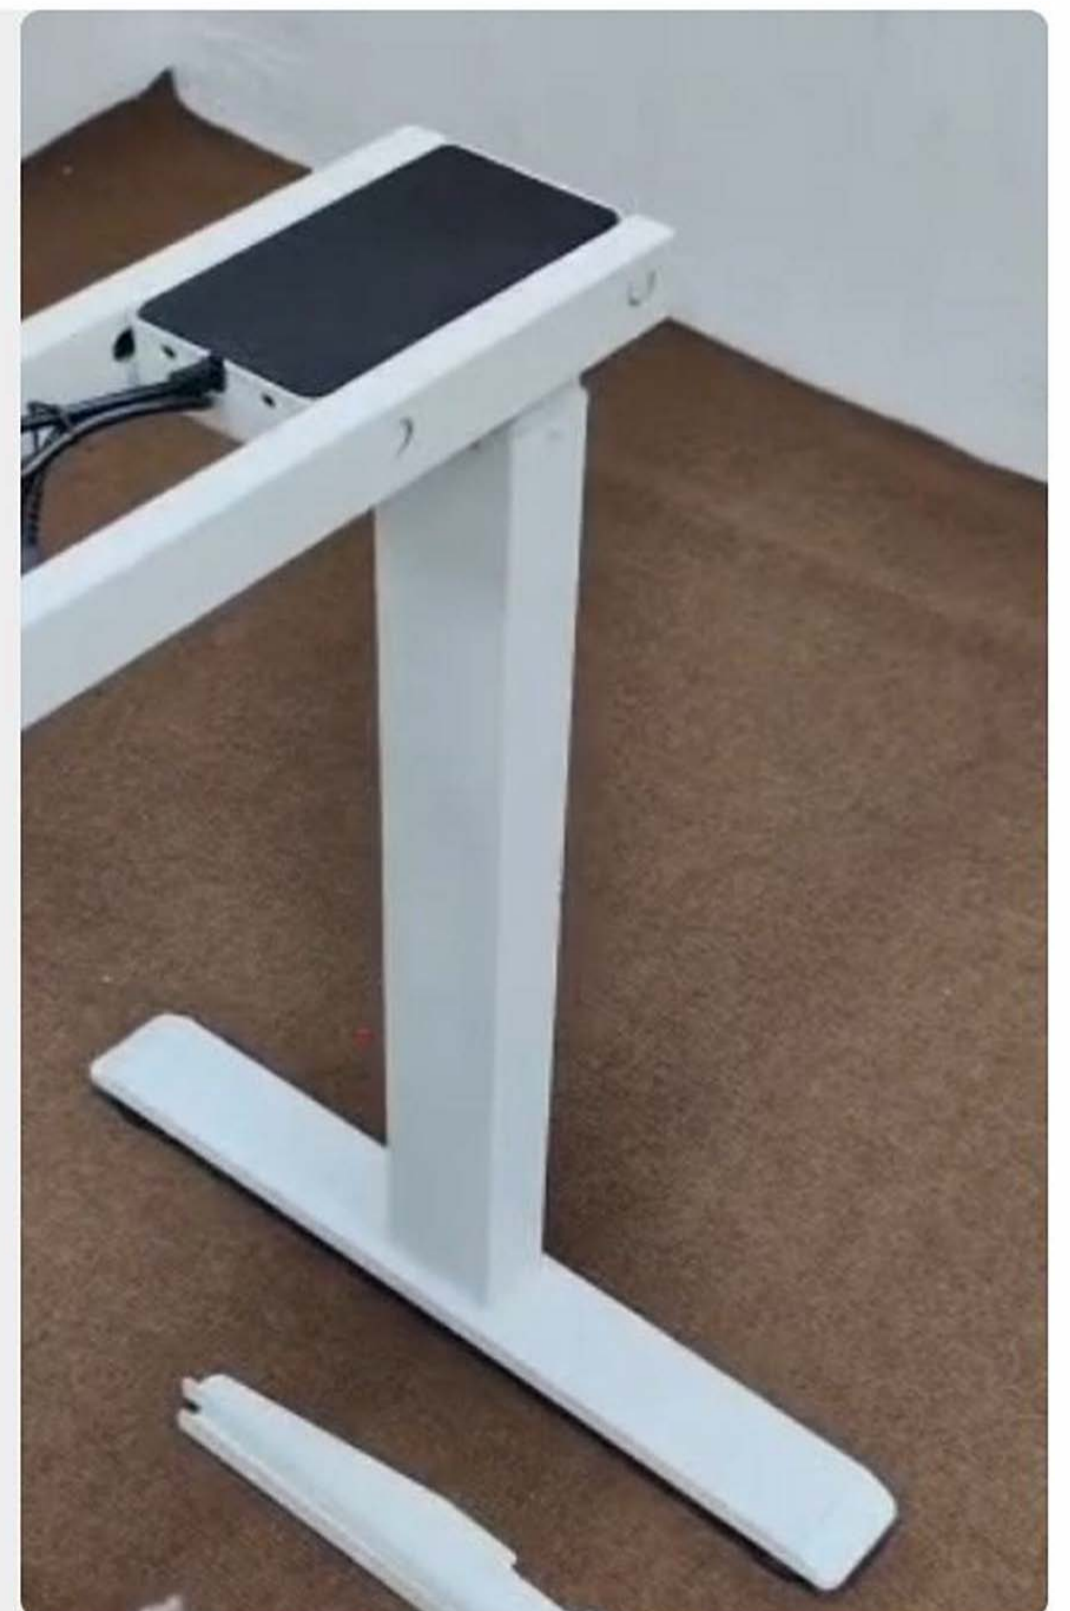

Now install the feet. Use the longest screws. Do not tightend them initially. Once all four screws are in place, then tightend them. Then screw in the foot pads. Install the other side in the same manner. After installing the feet, stand the base upright.



Install the side panels. As shown in the diagram, the narrower side should face outward. Use the shorter screws to install and tightend them.



Finally, plug in the three power cords and turn on the power. For first-time use, press and hold the down button to reset — hold for about 10 seconds. Once the numerical display reappears, you can freely adjust the height up and down.