




Refrigerator Storage Rack

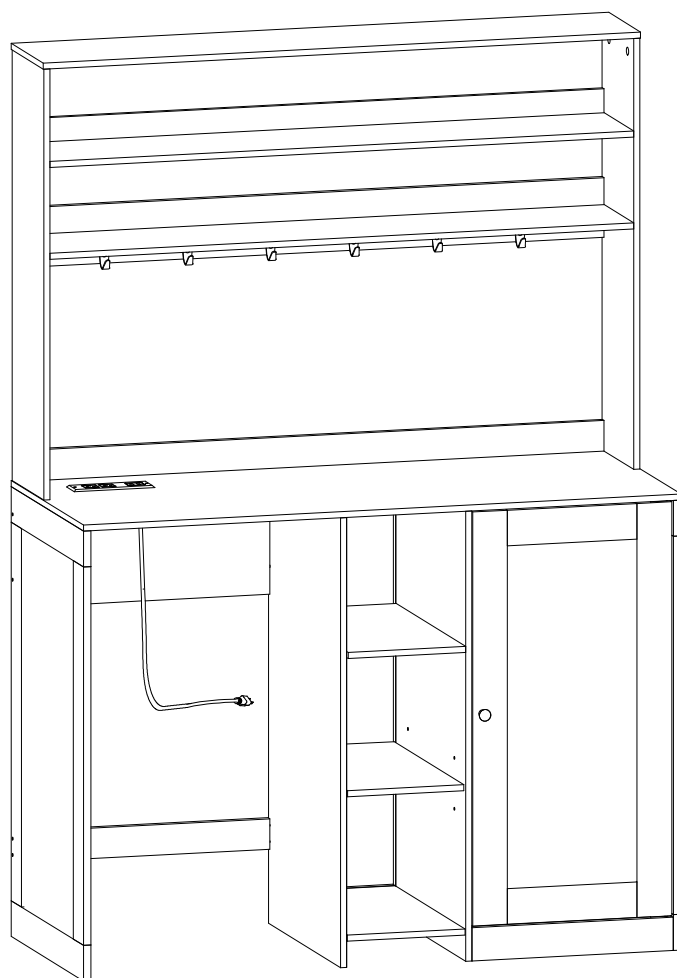


Precautions:
















1. It is recommended to wear gloves for assembly to protect hands from injury.
 2. When assembling, please strictly follow the installation direction and order in the instruction manual.
 3. Tighten the screws after two or more parts have been successfully assembled, Tightening the screws early will cause the parts to be disassembled and reassembled.
 4. Please place all parts correctly to avoid unnecessary trouble.
- Thank you for your patience in reading,. Wish you a happy life!

For specific installation instructions, please refer to the physical assembly manual.

ASSEMBLY INSTRUCTION

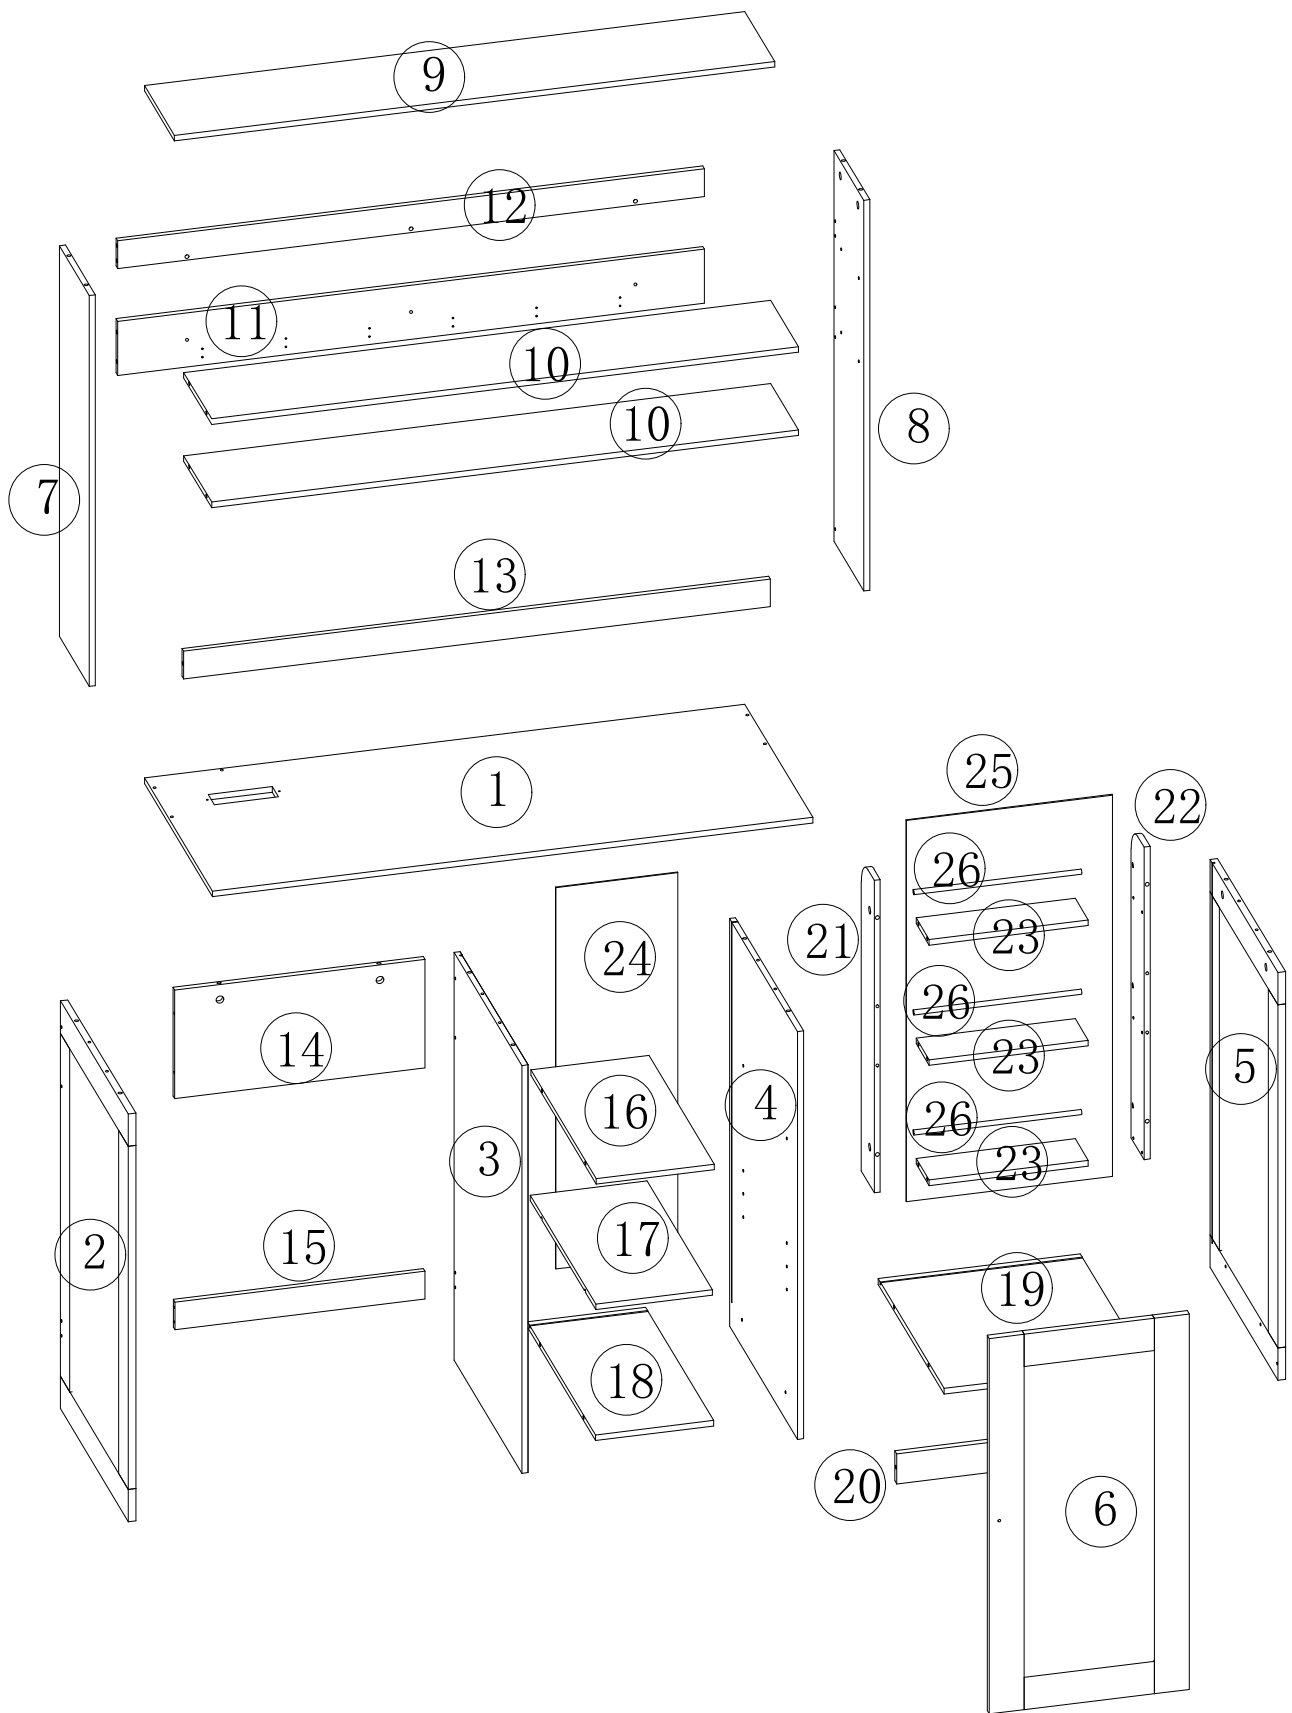


ASSEMBLY INSTRUCTION

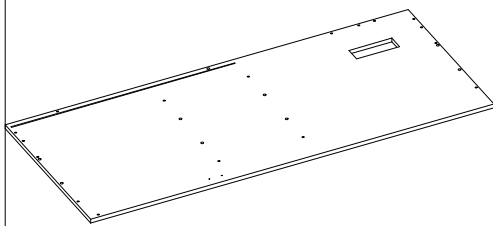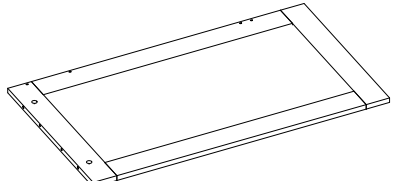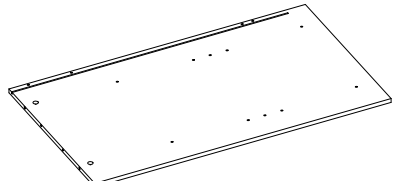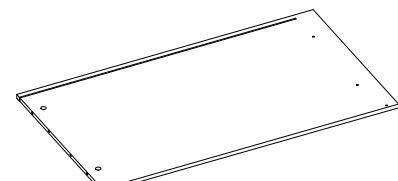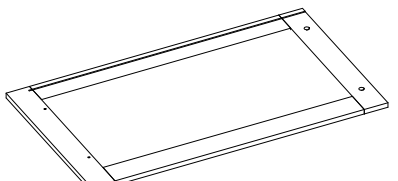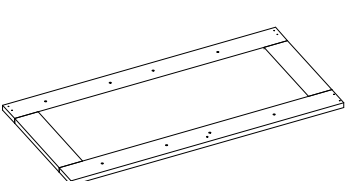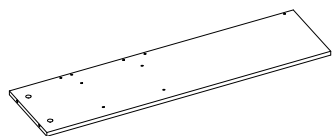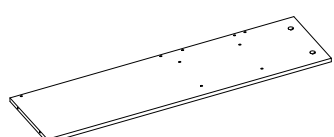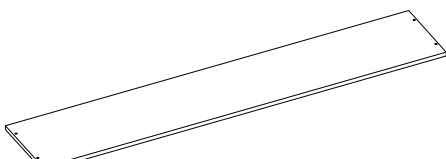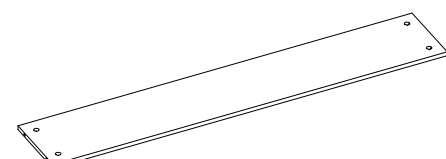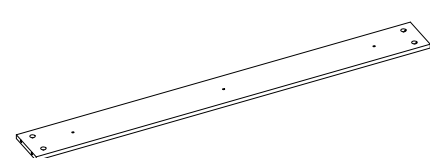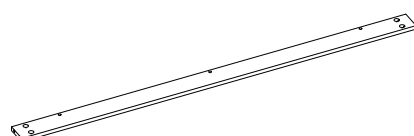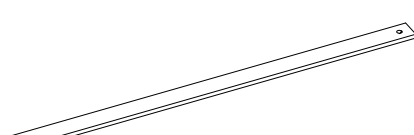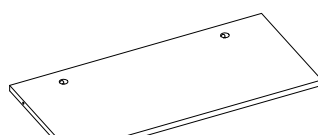①  X1	②  X1	③  X1
④  X1	⑤  X1	⑥  X1
⑦  X1	⑧  X1	⑨  X1
⑩  X2	⑪  X1	⑫  X1
⑬  X1	⑭  X1	⑮  X1


ASSEMBLY INSTRUCTION

①6

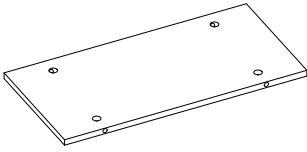


X1

①7

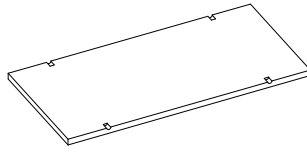


X1

①8

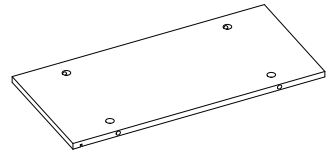


X1

①9

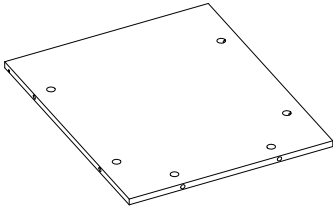


X1

②0




X1

②1

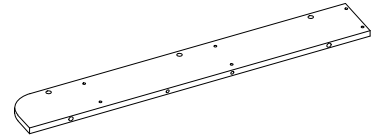


X1

②2

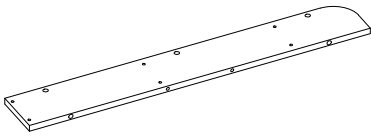


X1

②3




X3

②4

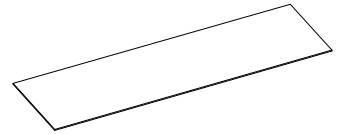


X1

②5

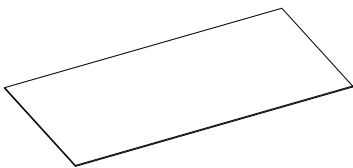

X1




②6



Ø10*336mm




X3

ASSEMBLY INSTRUCTION


A M5x40mm  X21	B  (K) X64	C 15x9mm  X64	D M3.5x12mm  X20
E  X4	F M8x50mm  X12	G  X1	H  X1
I  X1	J  X1	K  X6	L M4x20mm  X1
M  X8	N M3.5x14mm  X8	O M3.5x16mm  X2	
P M4  X1			

ASSEMBLY INSTRUCTION


STEP 1

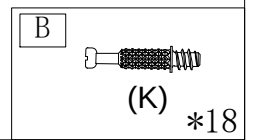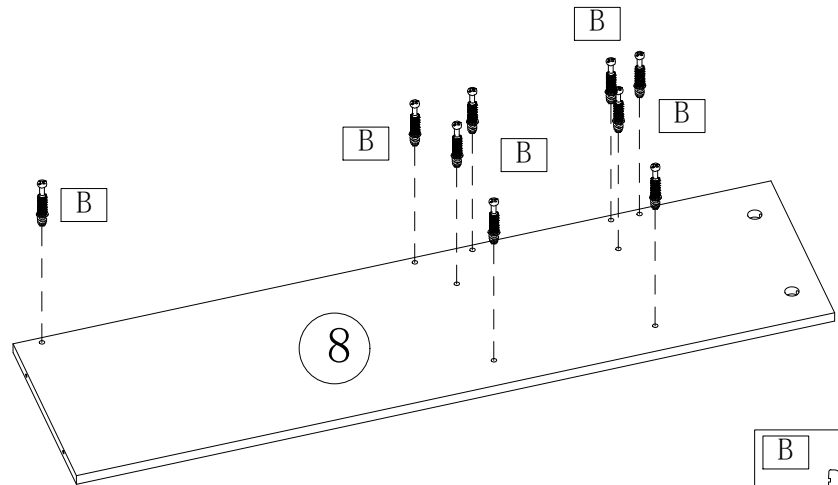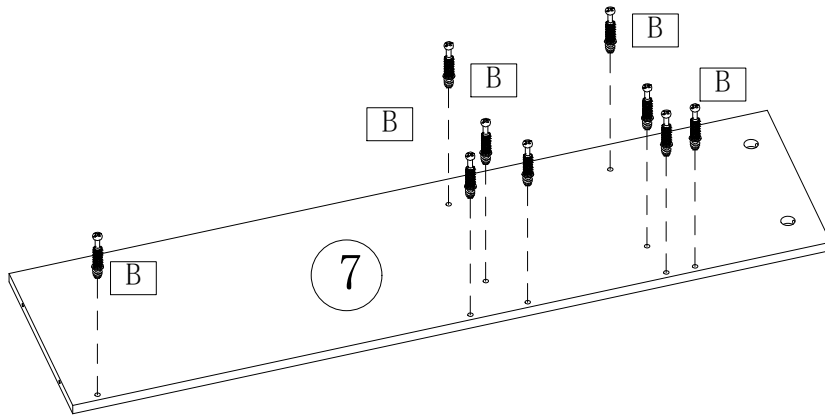

STEP 2

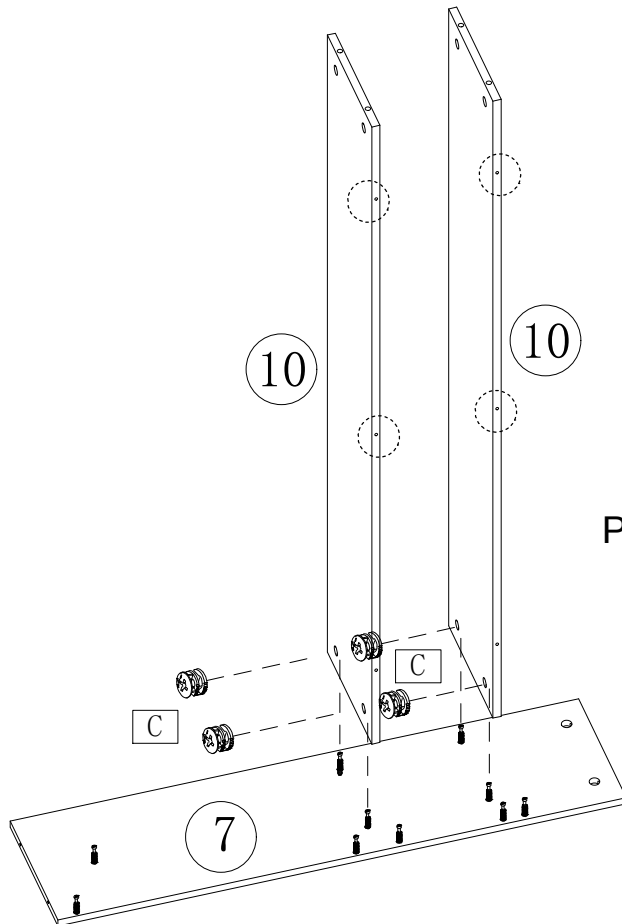


Pay attention to the direction of the hole

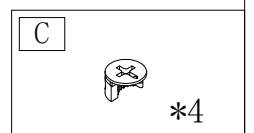


ASSEMBLY INSTRUCTION


STEP 3

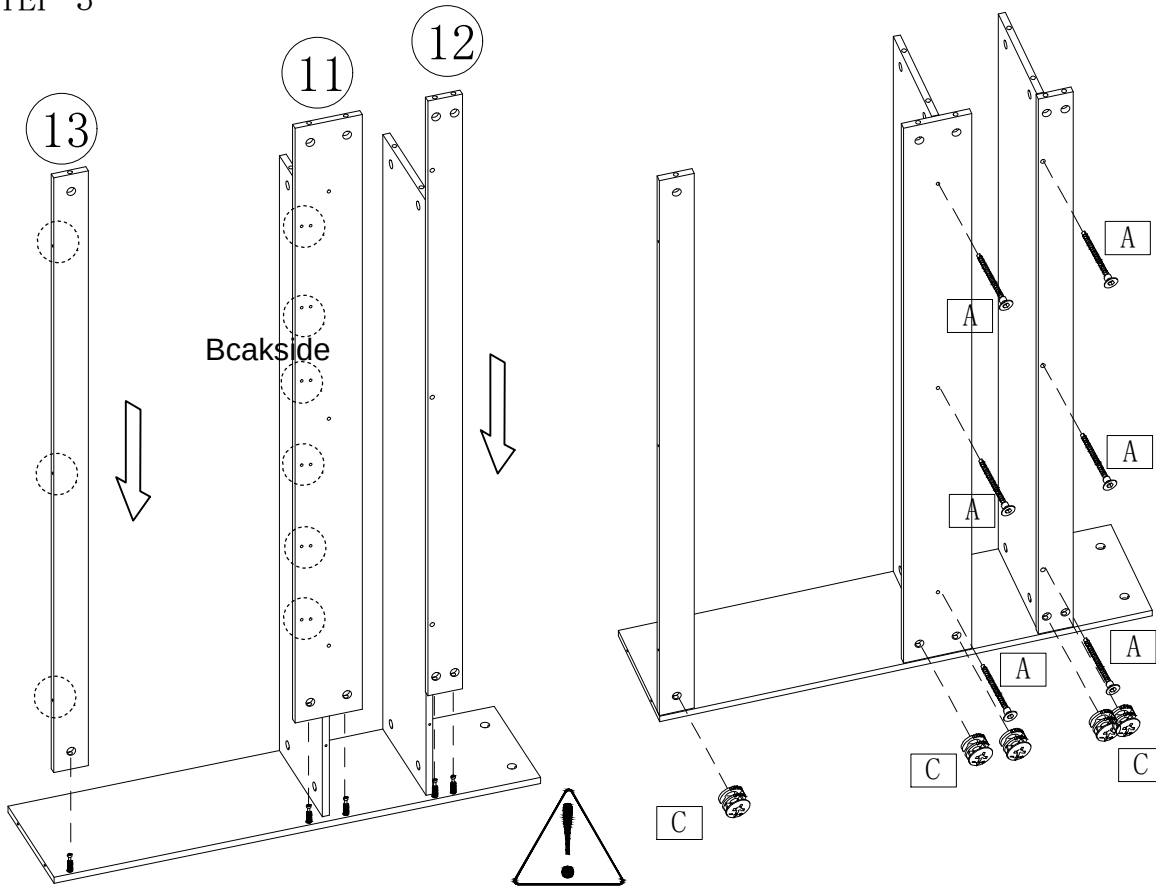

Pay attention to the direction of the hole

A	M5x40mm
	 *6
C	 *5


STEP 4

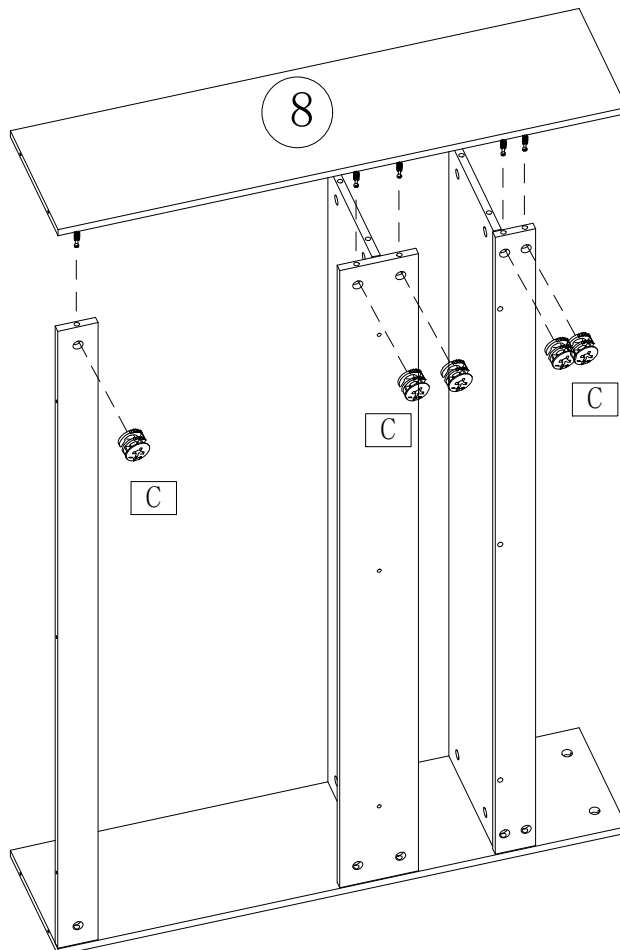


C	 *5
---	--

ASSEMBLY INSTRUCTION

STEP 5


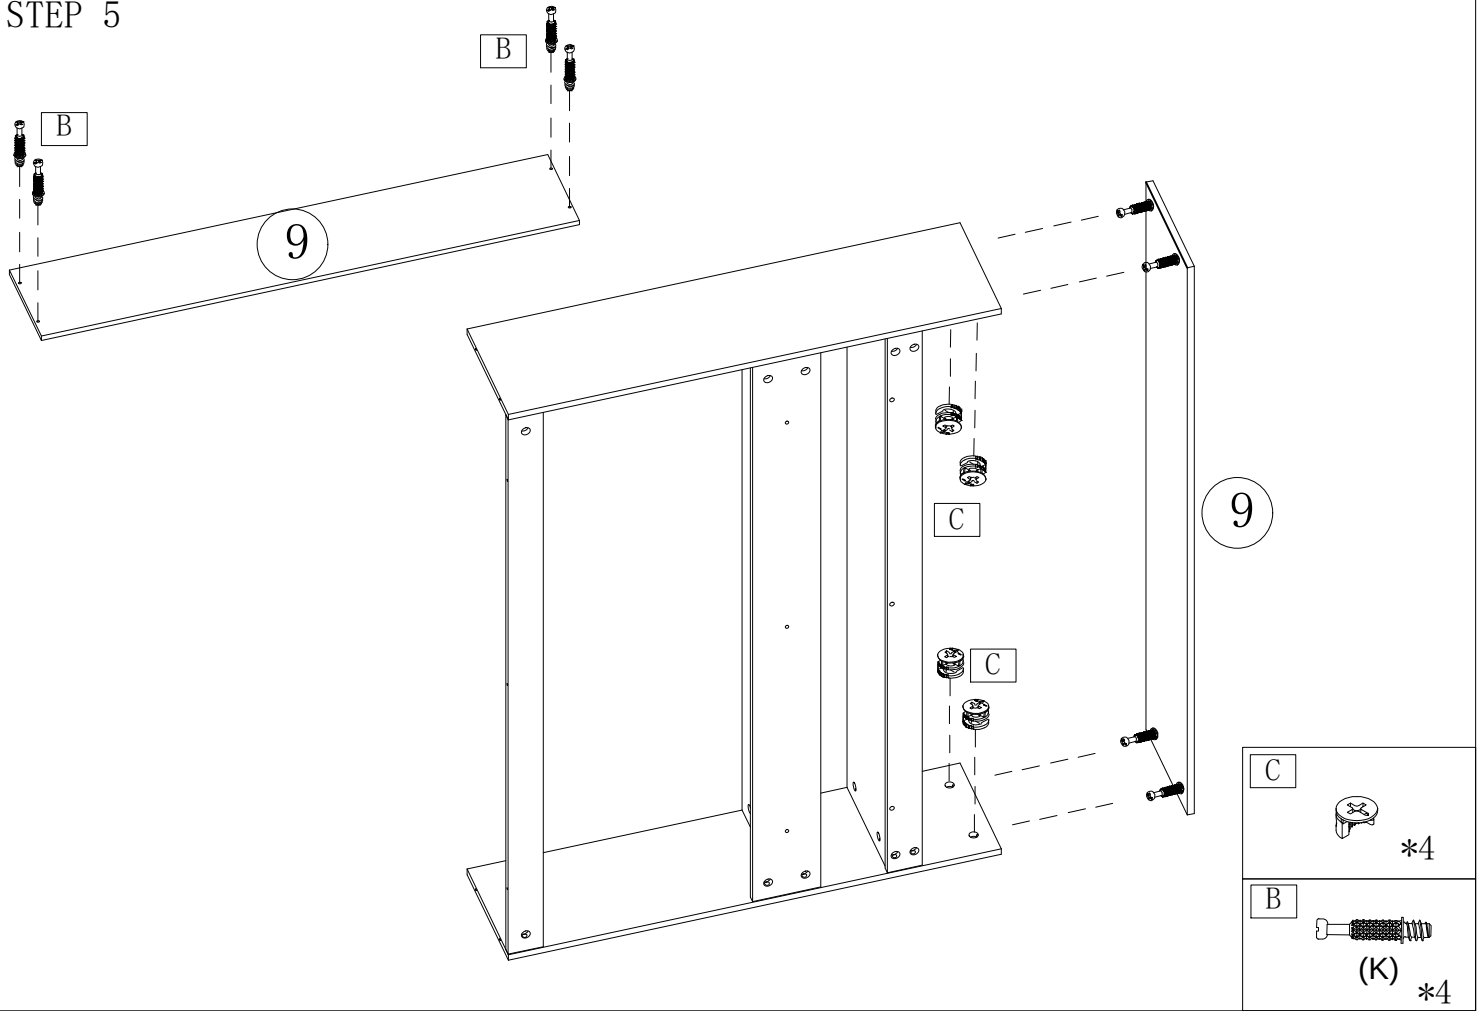


STEP 6


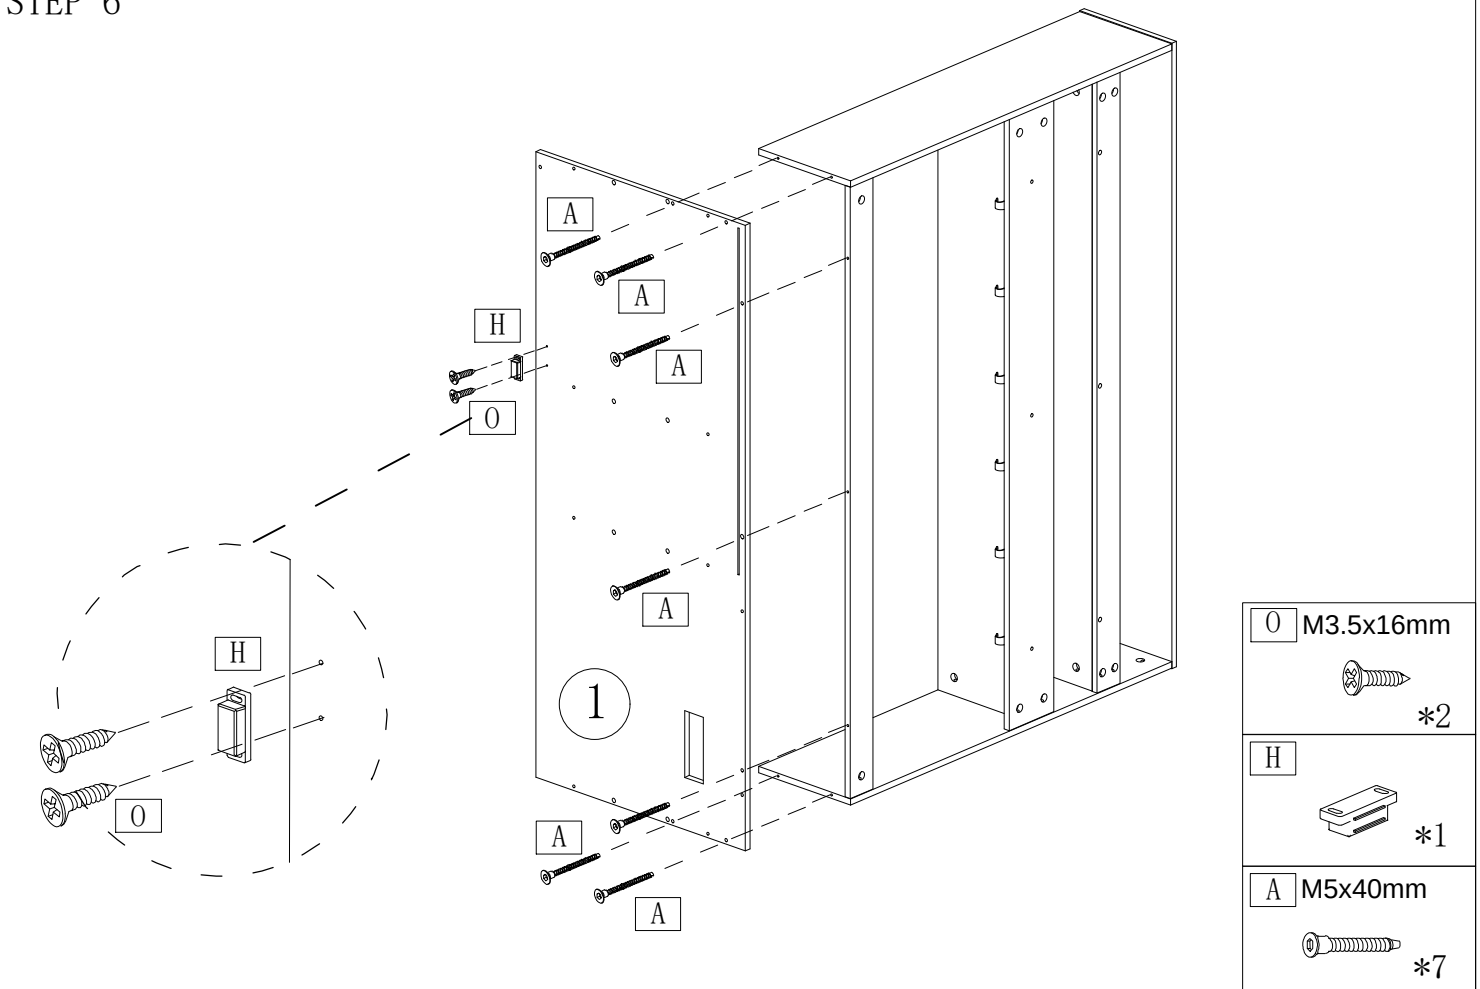


ASSEMBLY INSTRUCTION

STEP 7

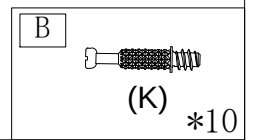
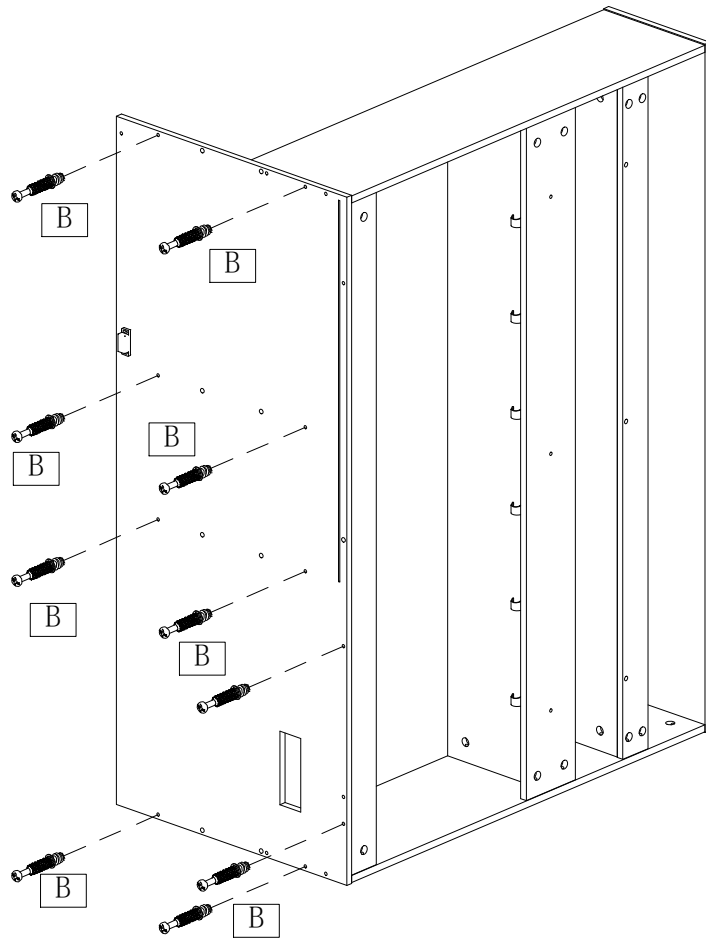


STEP 8

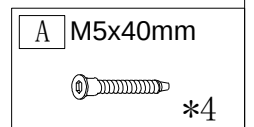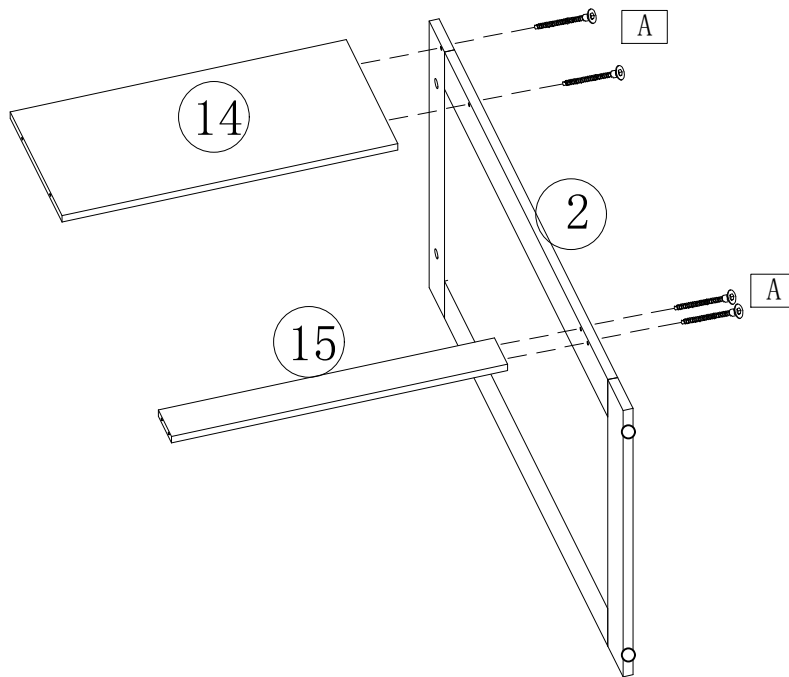


ASSEMBLY INSTRUCTION

STEP 9

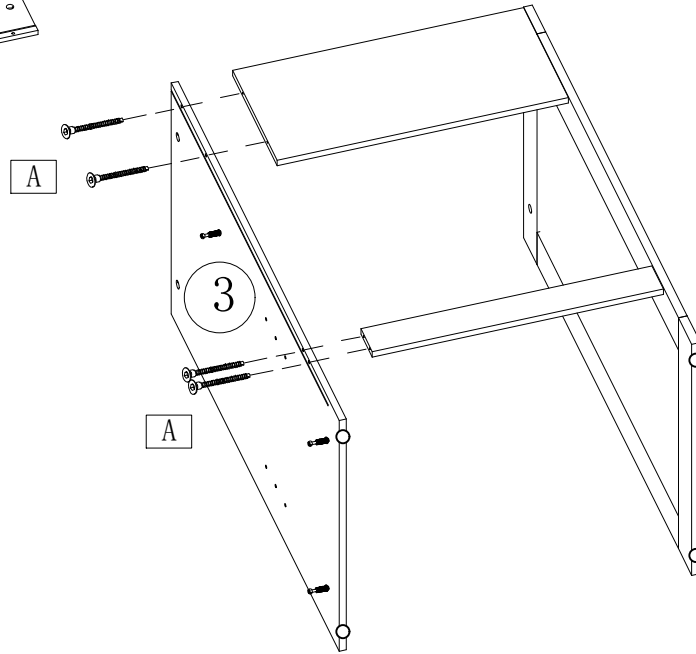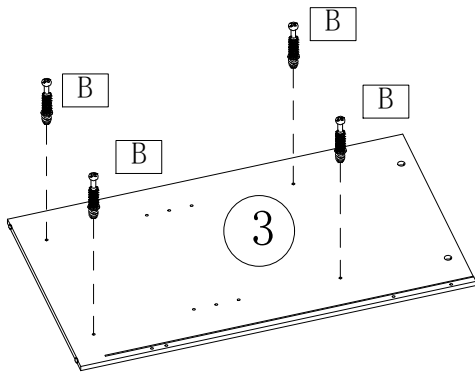

B		(K) *4
A	M5x40mm	*4

STEP 10

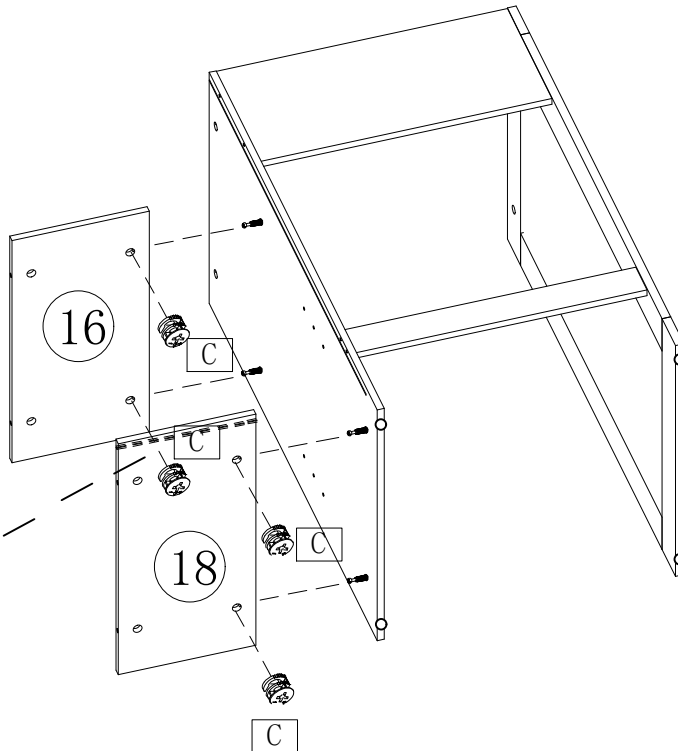



The slot is on the back




C		*4
---	--	----

ASSEMBLY INSTRUCTION



STEP 11

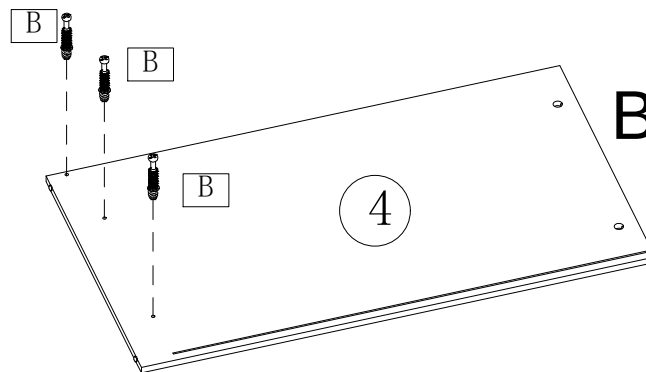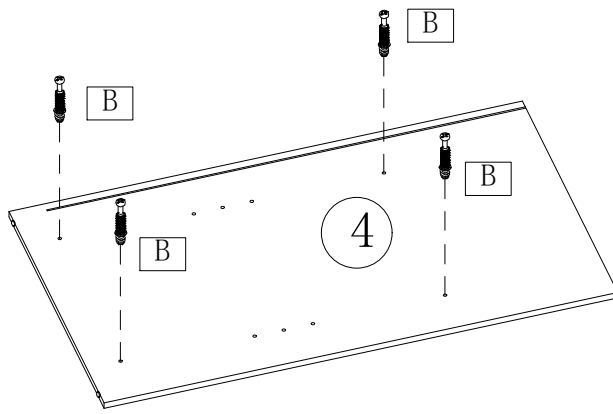

Back

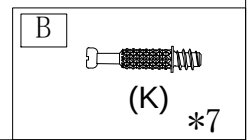


STEP 12

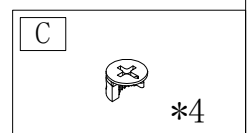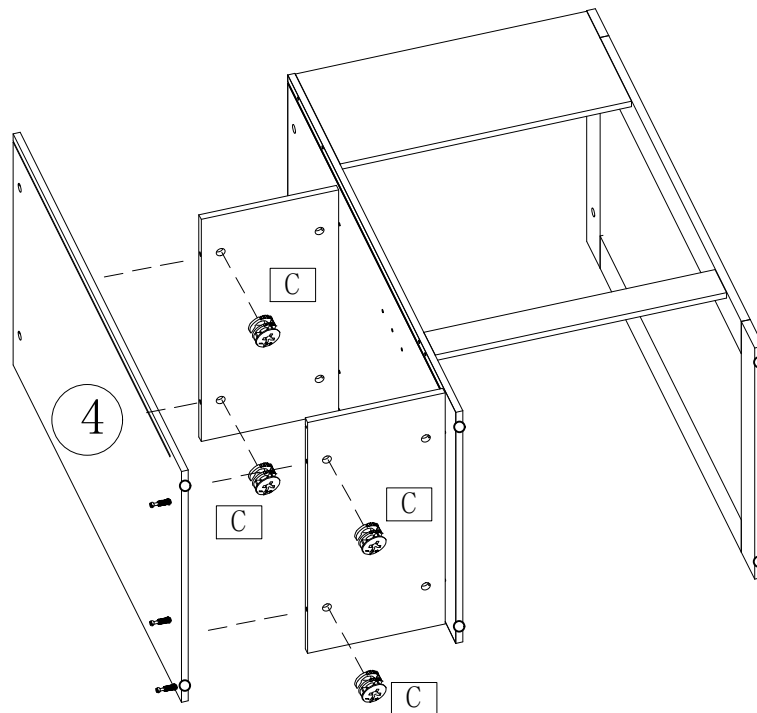


ASSEMBLY INSTRUCTION

STEP 13

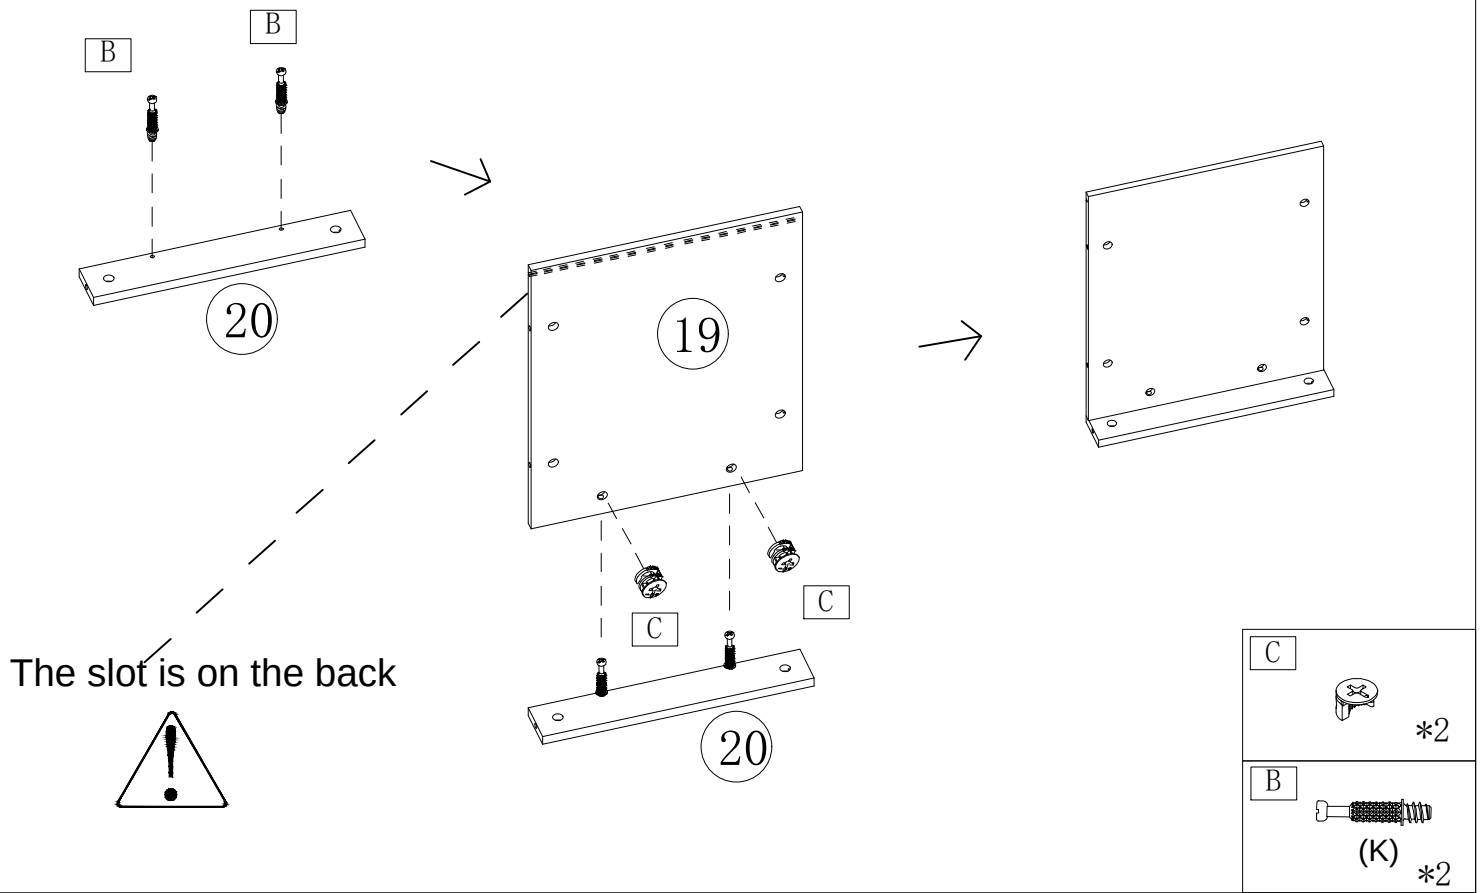


STEP 14

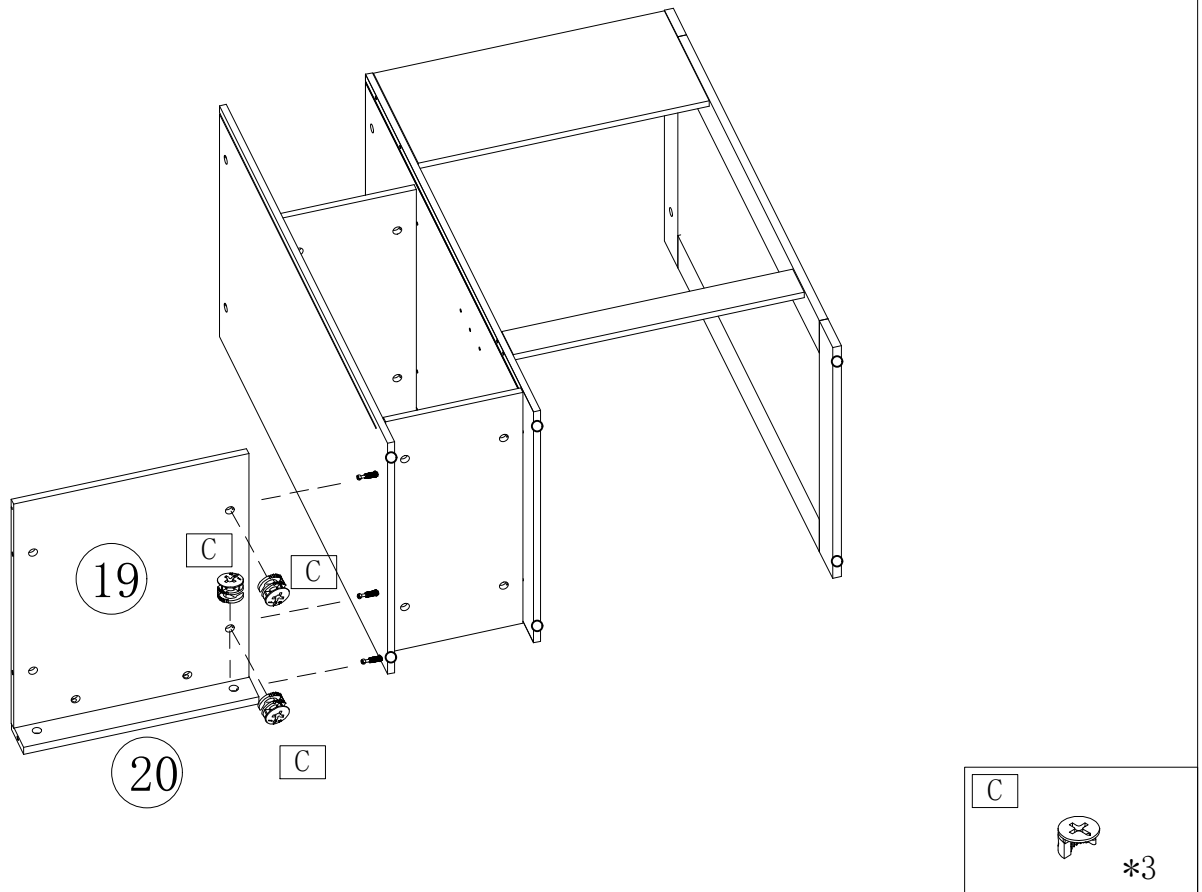


ASSEMBLY INSTRUCTION

STEP 15

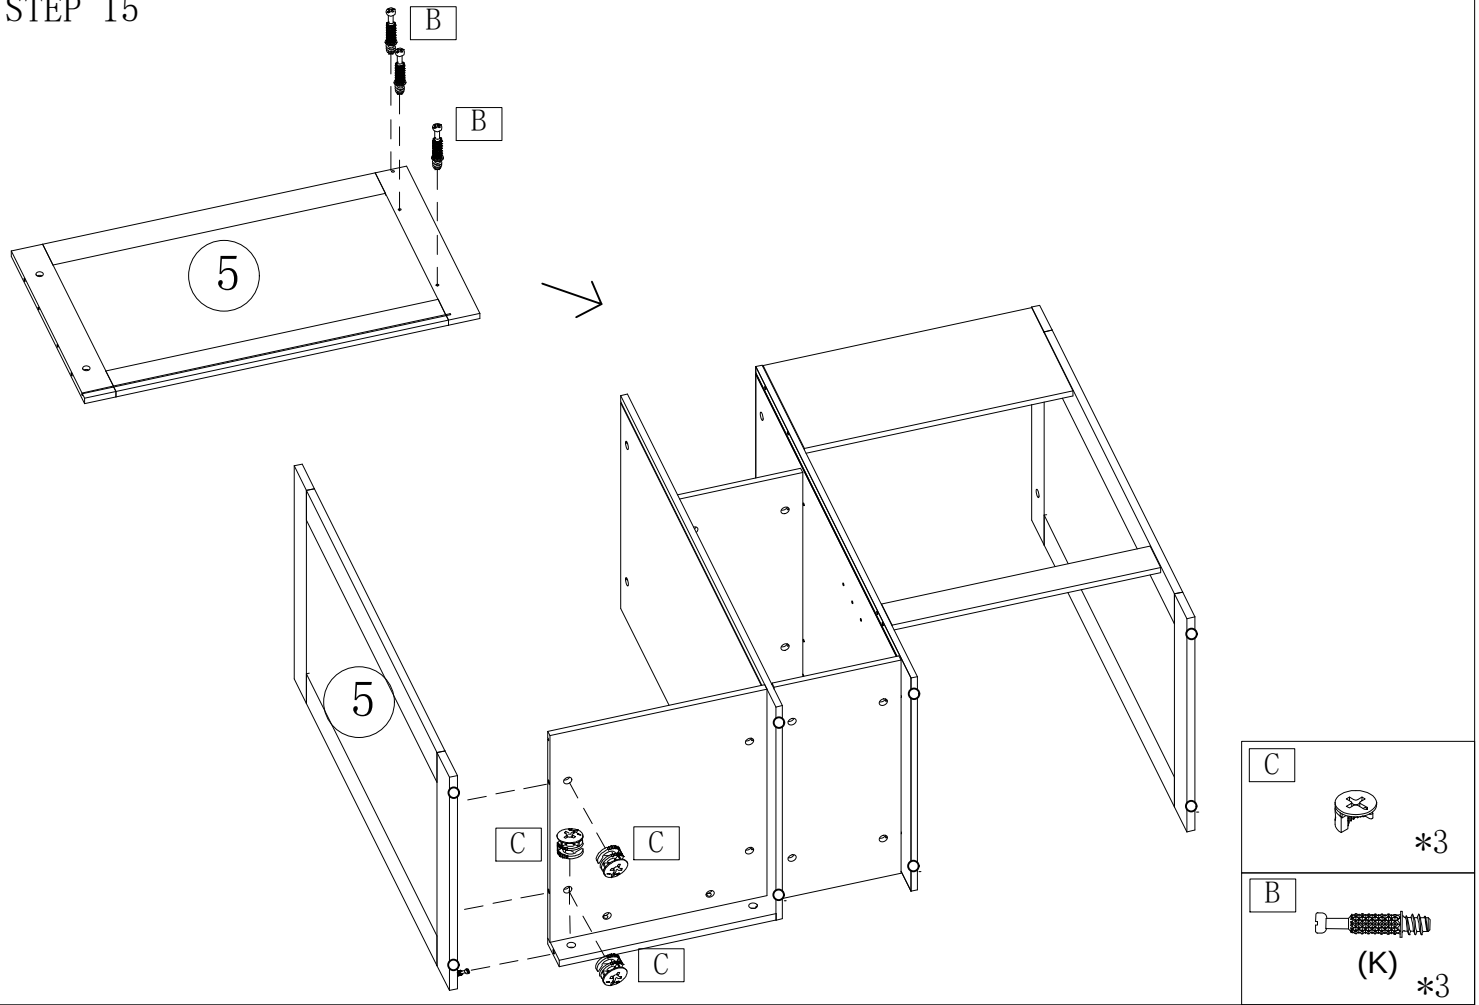


STEP 16

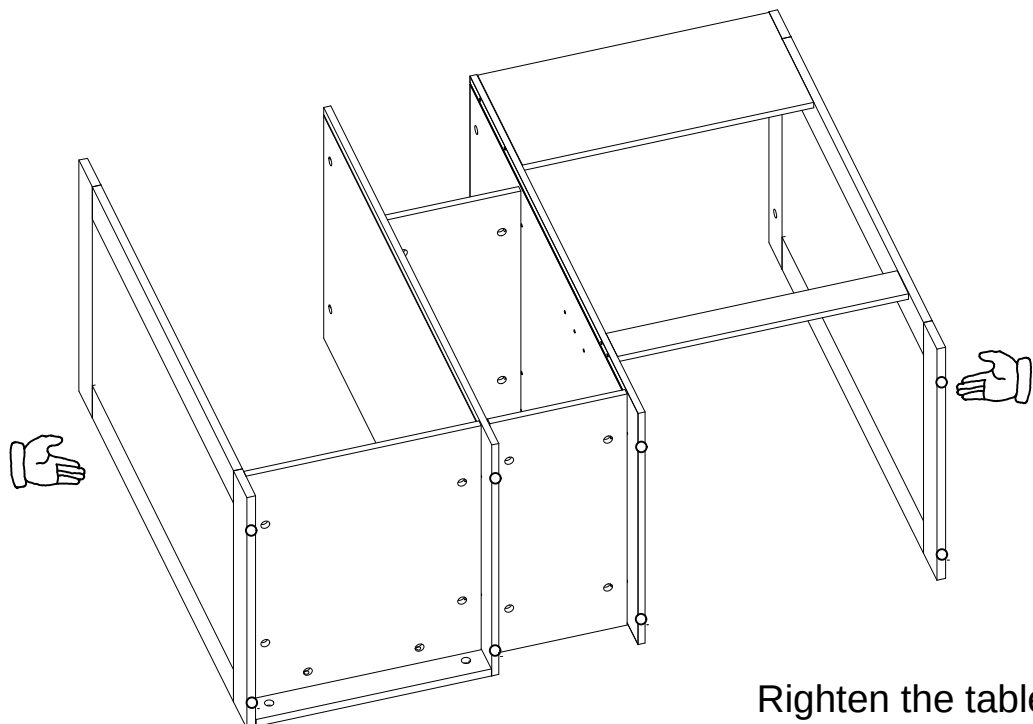


ASSEMBLY INSTRUCTION

STEP 17

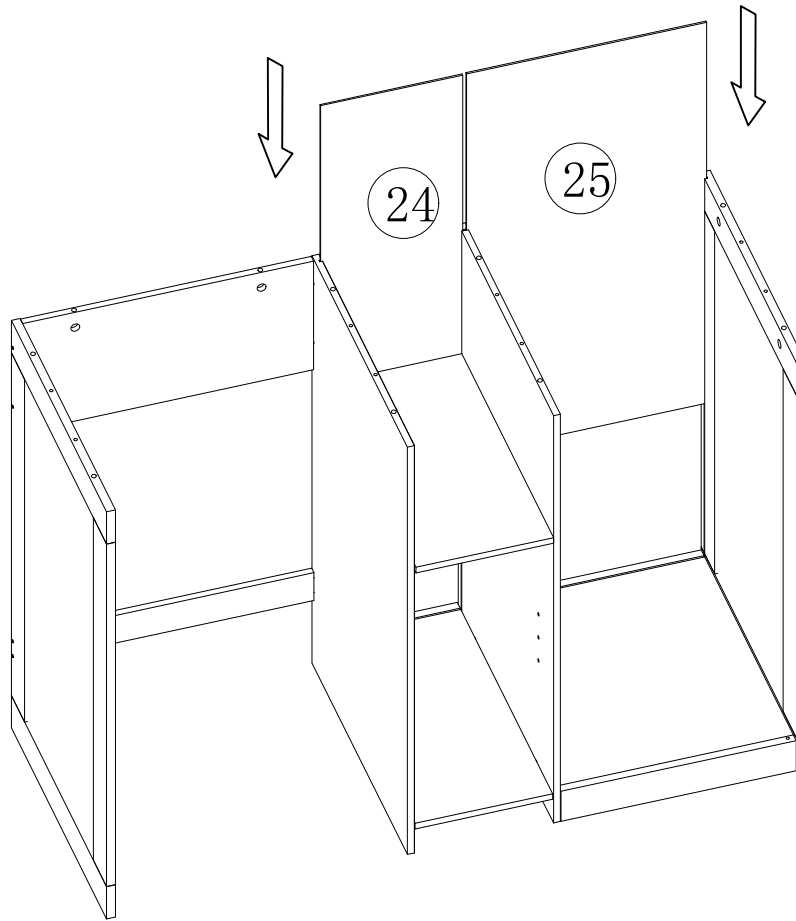


STEP 18

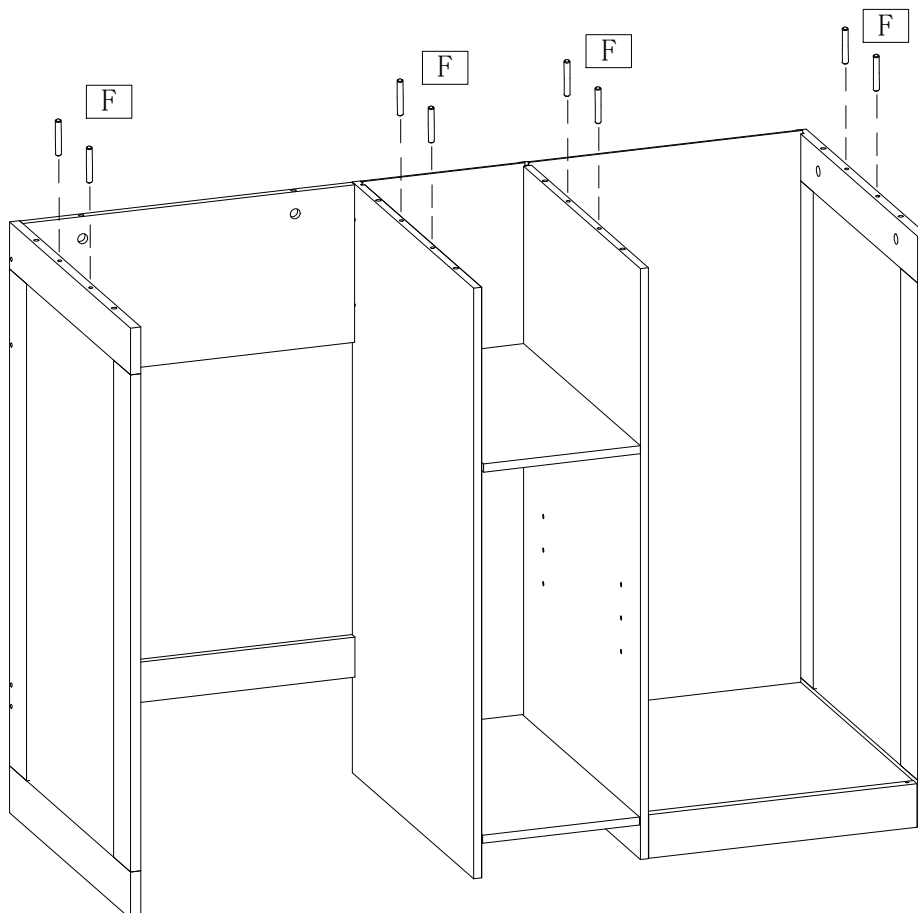

F M8x50mm
*8

ASSEMBLY INSTRUCTION

STEP 19

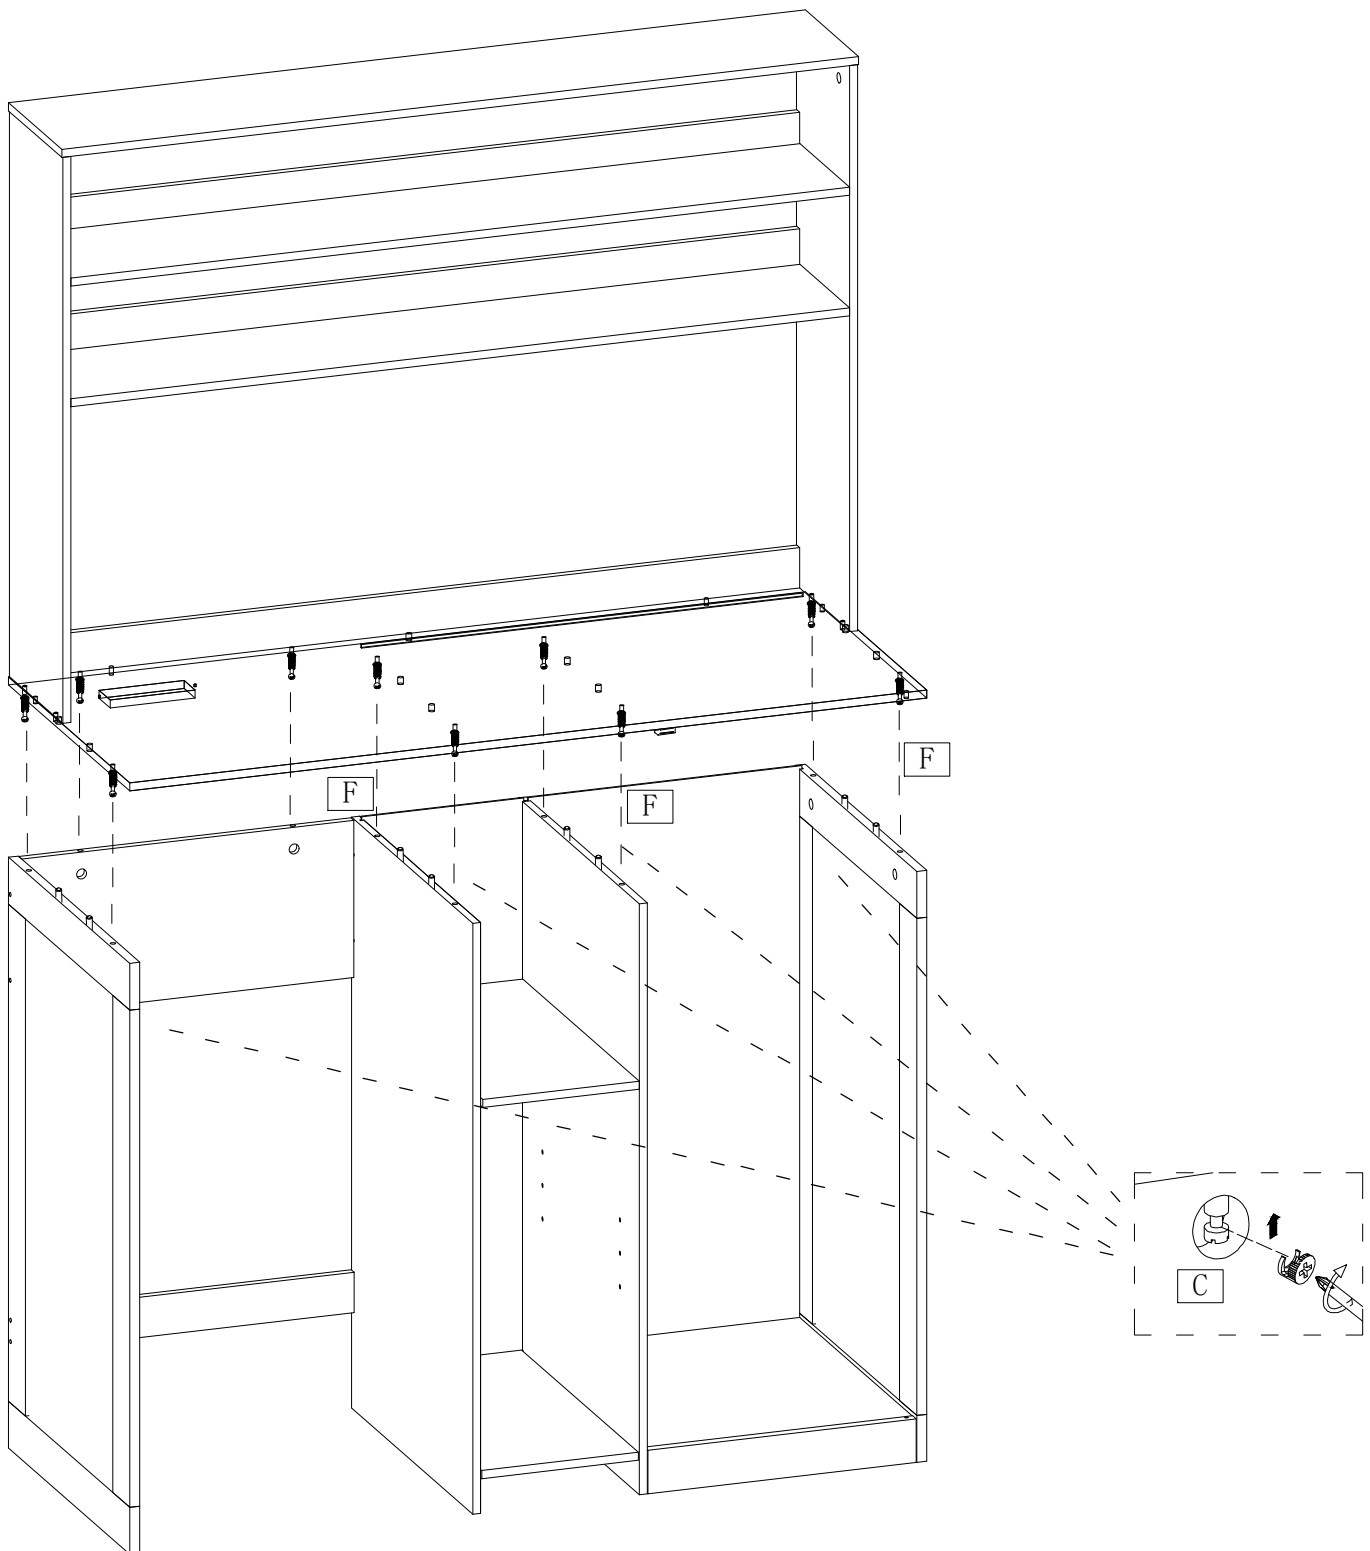



C



*10


ASSEMBLY INSTRUCTION

STEP 20

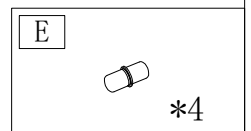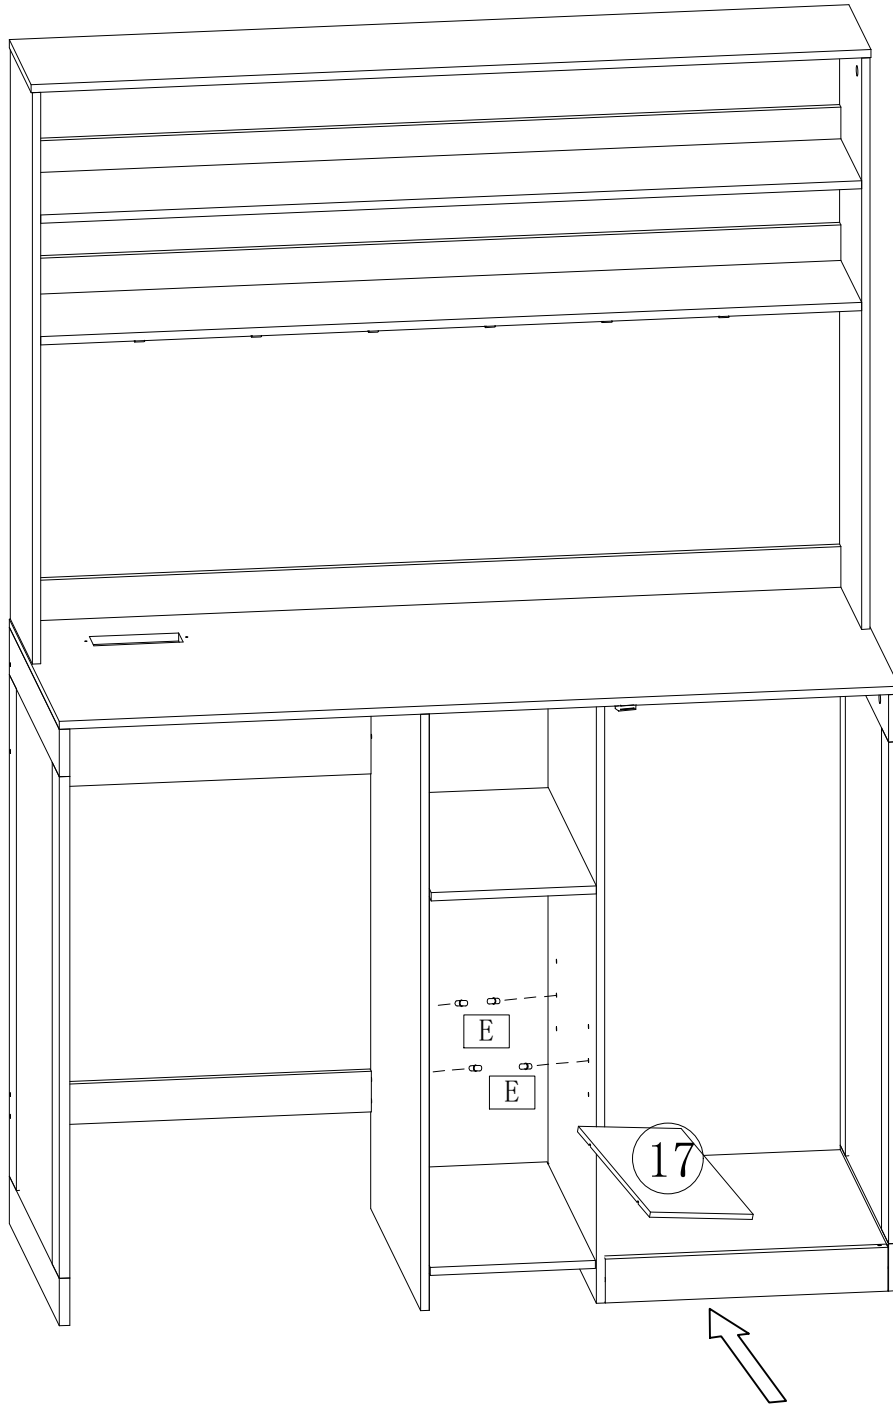

ASSEMBLY INSTRUCTION


STEP 21

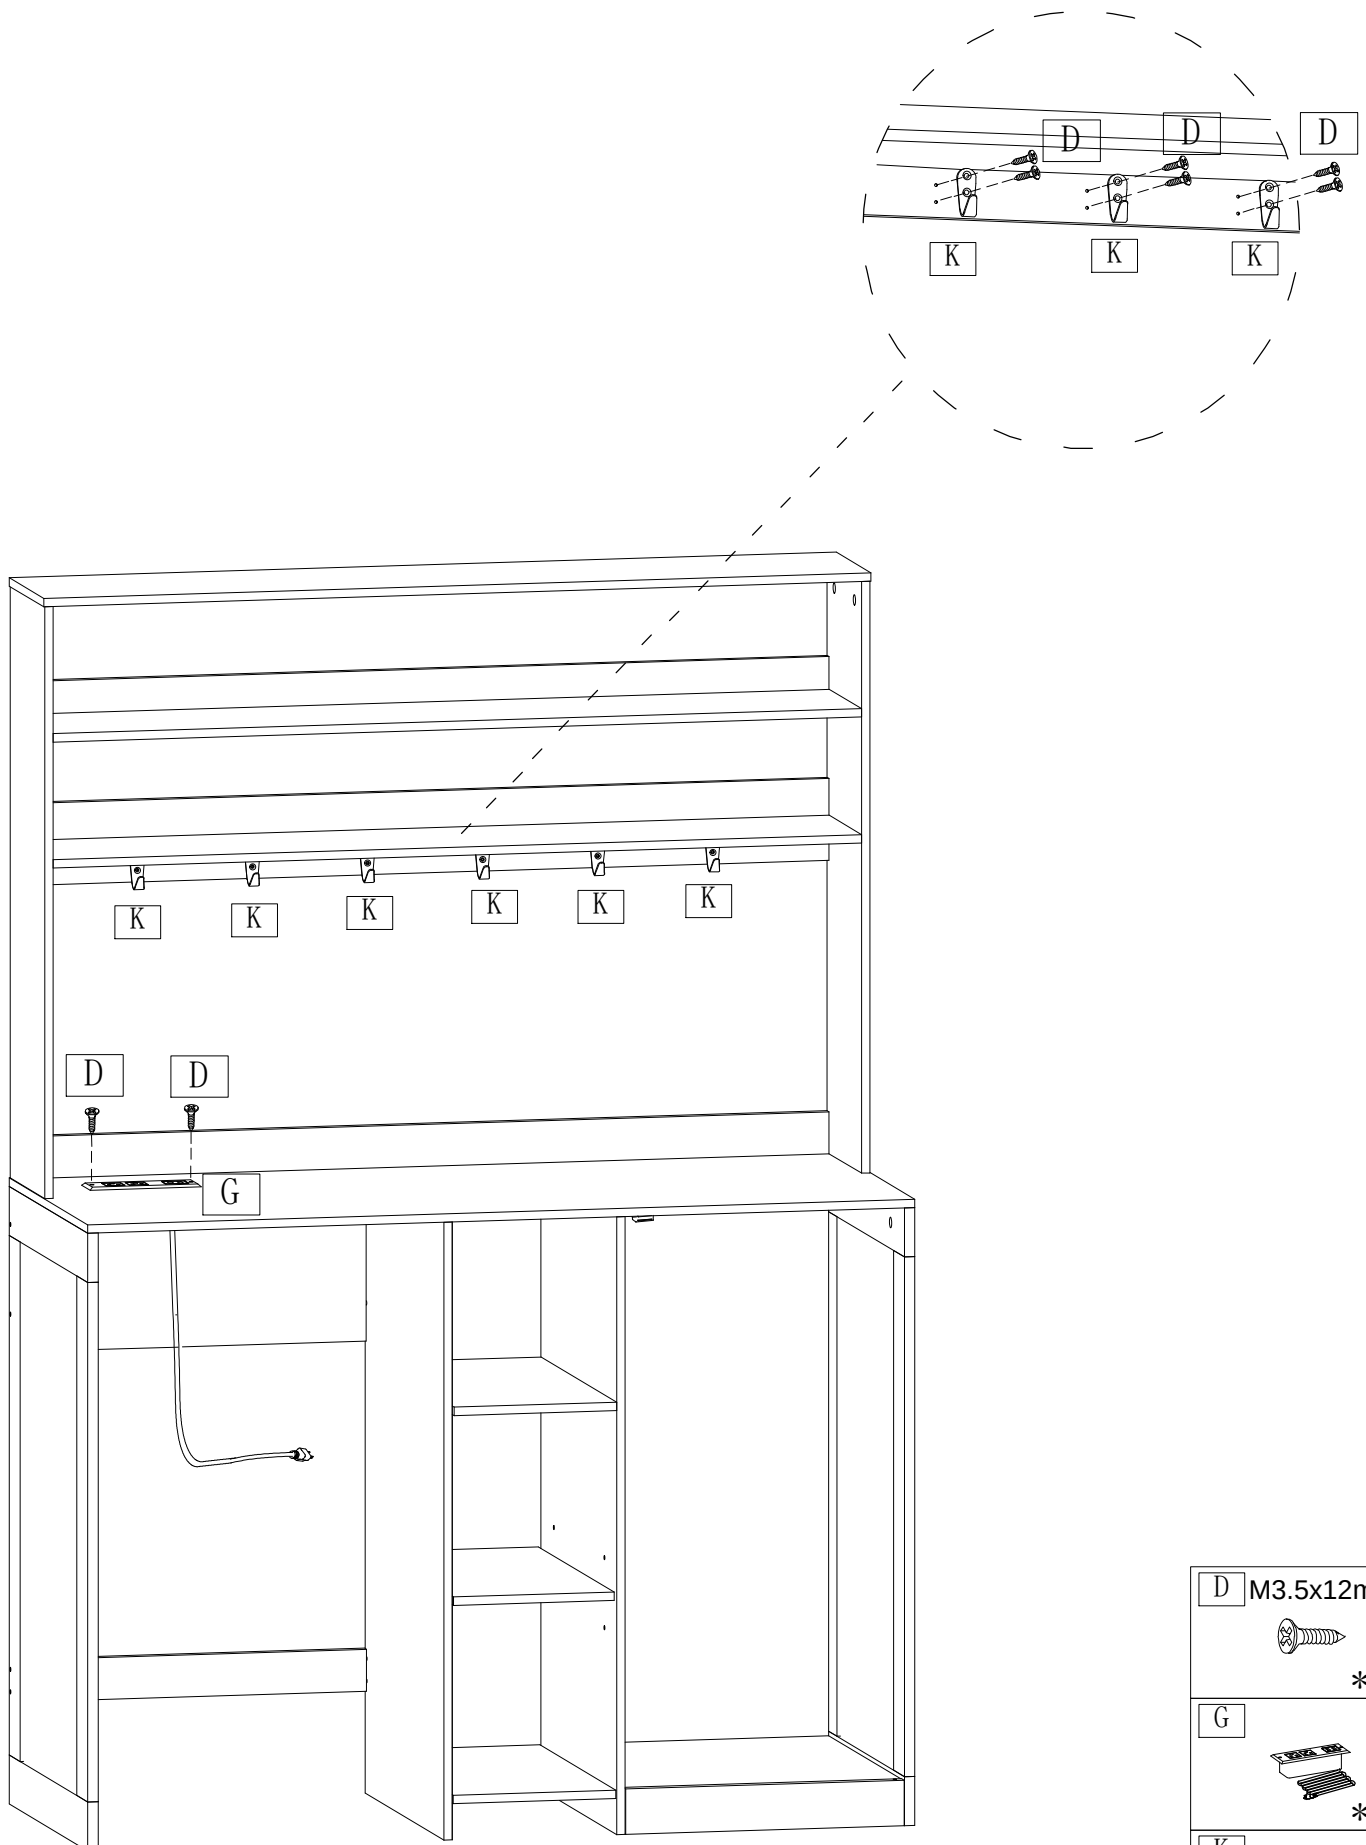

D	M3.5x12mm
	*14
G	
	*1
K	
	*6







ASSEMBLY INSTRUCTION

STEP 22

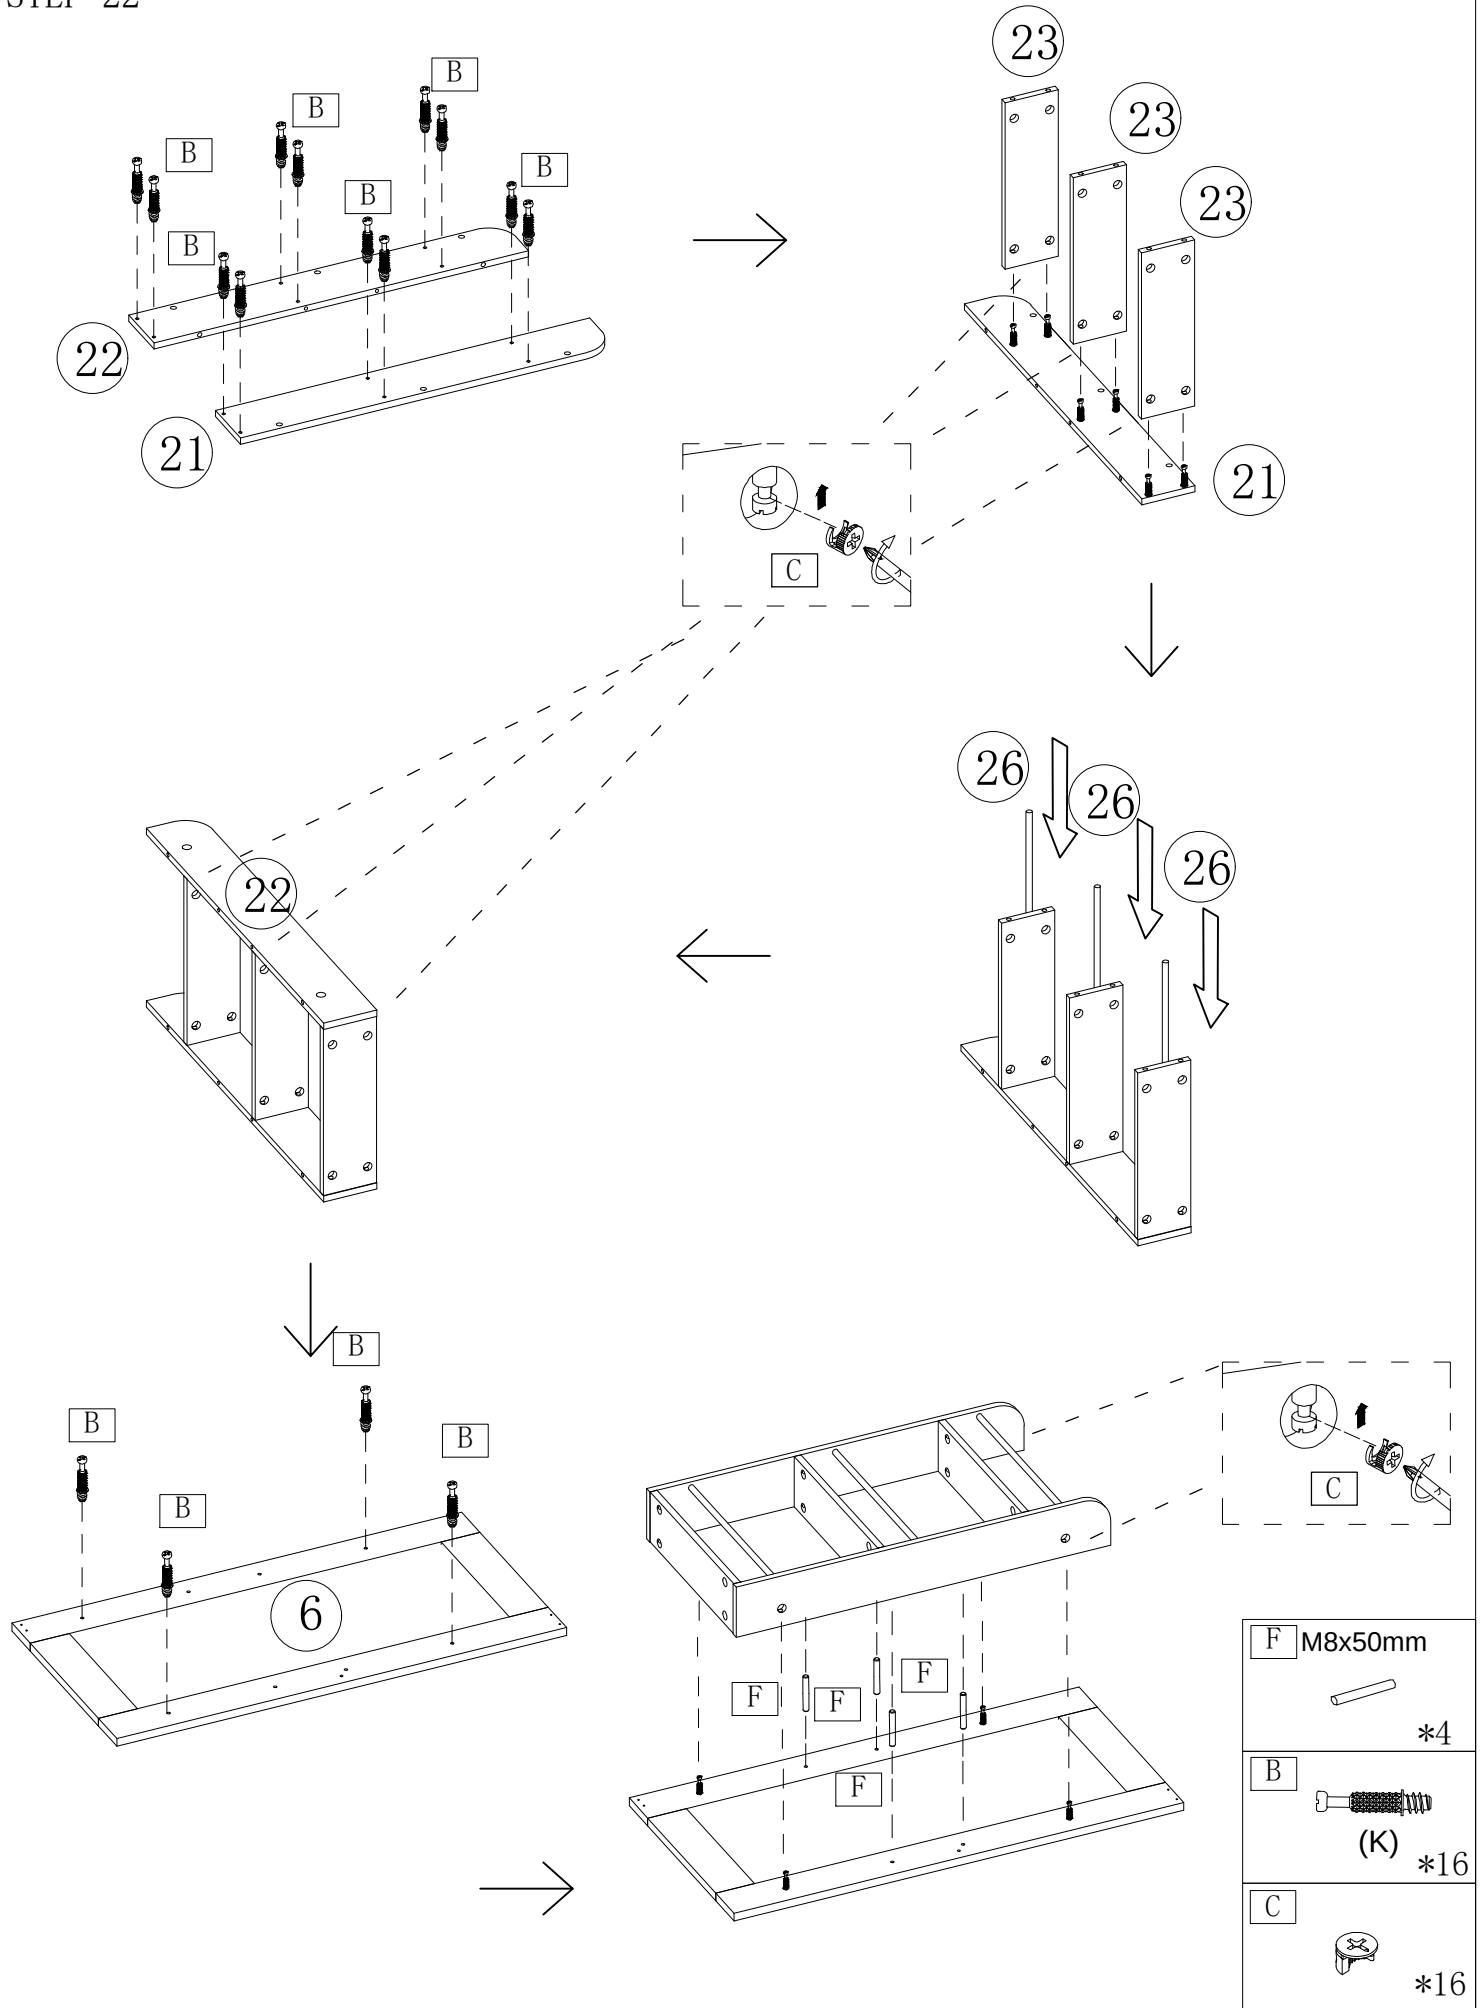

ASSEMBLY INSTRUCTION


STEP 23

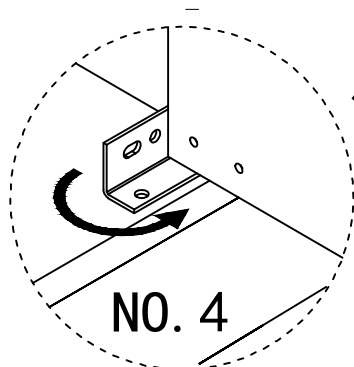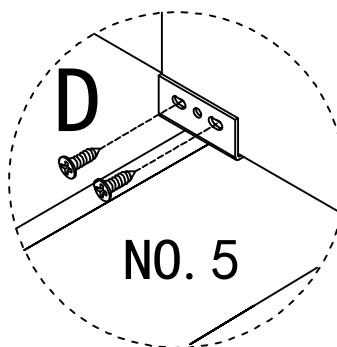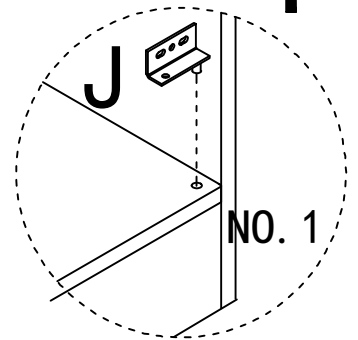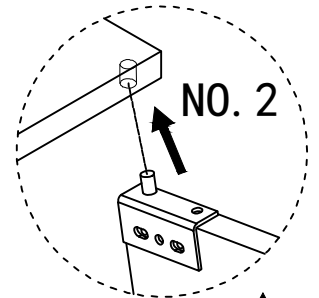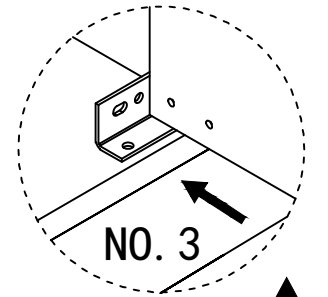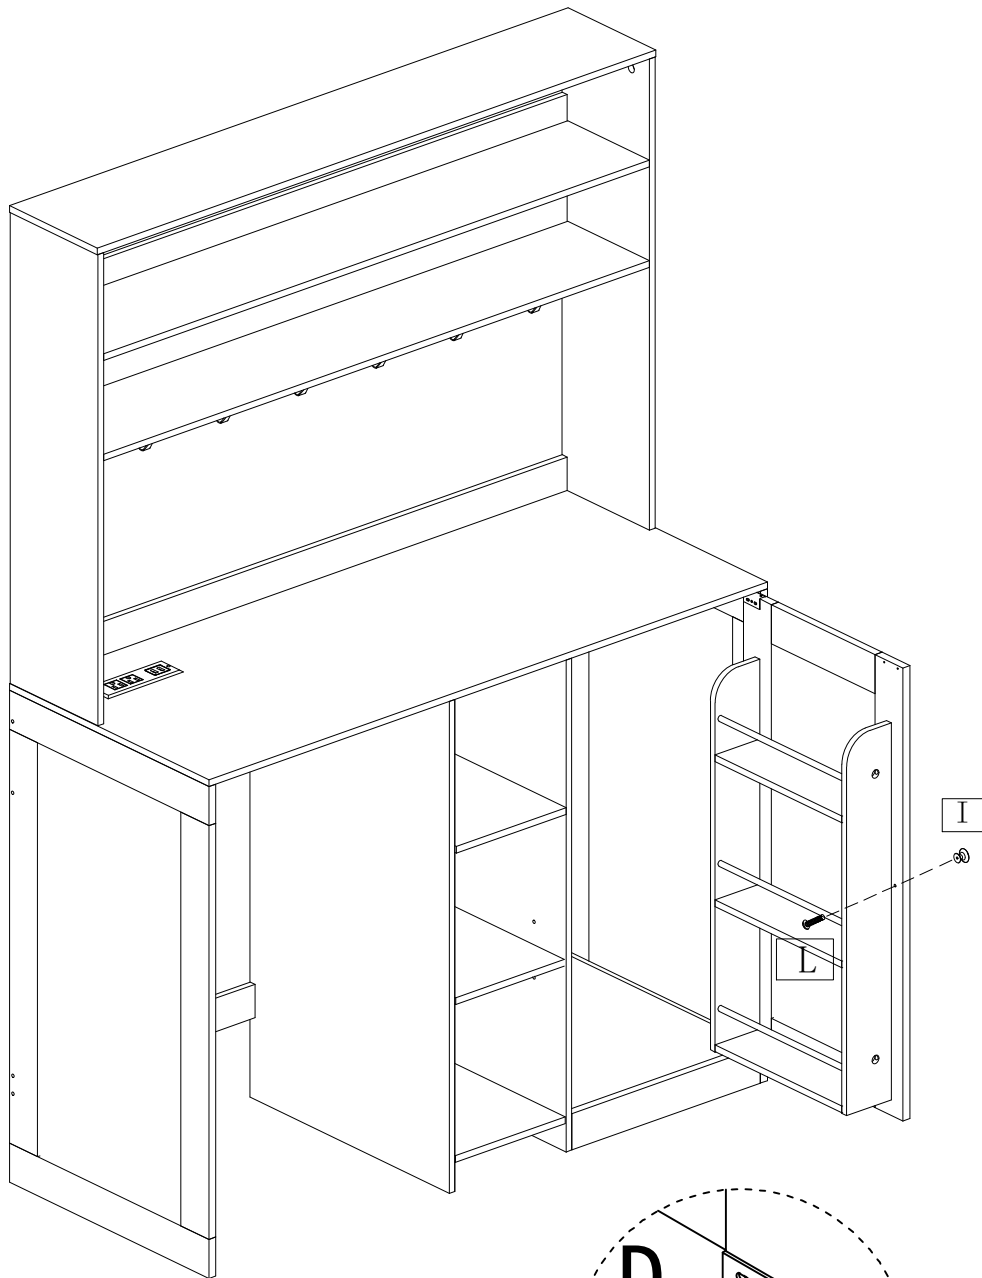

L	M4x20mm
	*1
I	
	*1
D	M3.5x12mm
	*4
J	
	*1

ASSEMBLY INSTRUCTION




STEP 24

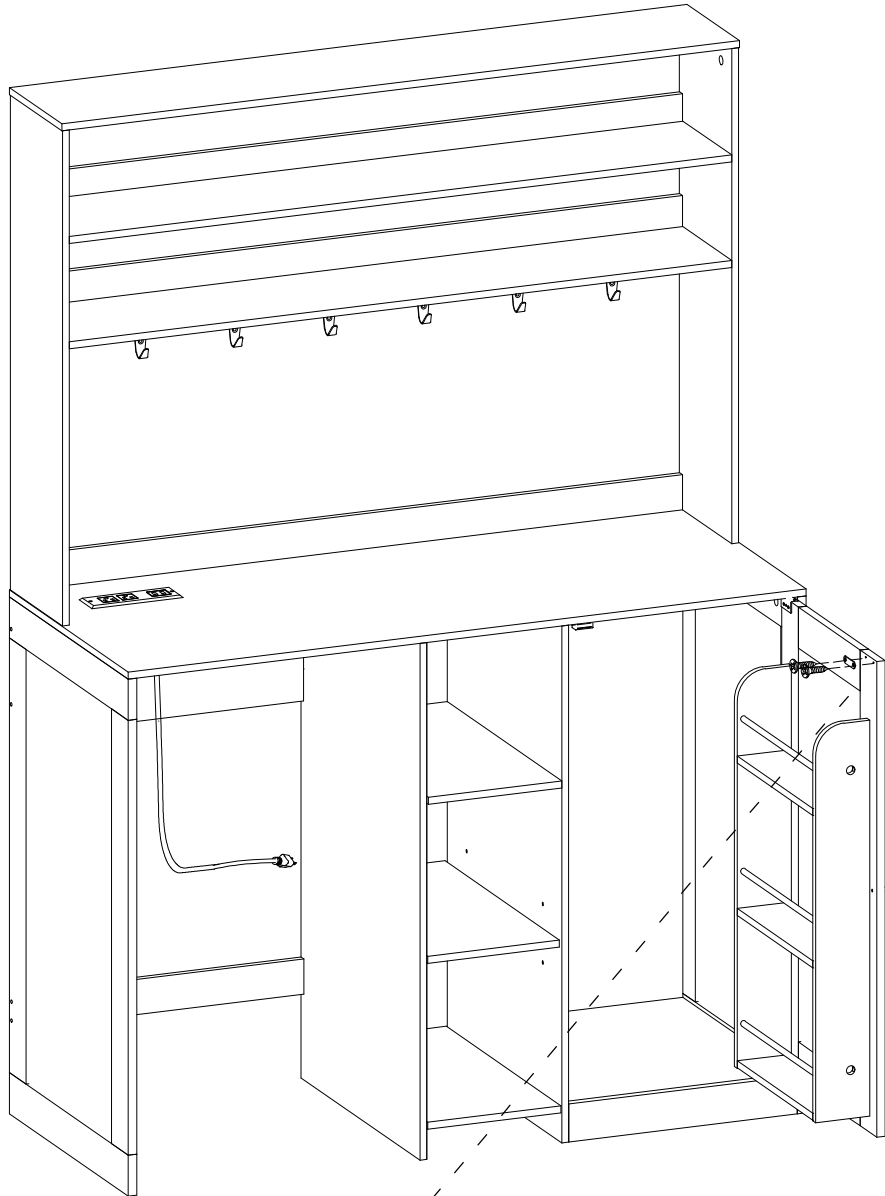

D	M3.5x12mm
	 *2
H	
	 *1

ASSEMBLY INSTRUCTION

STEP 25

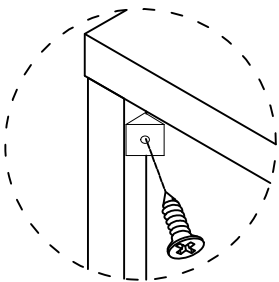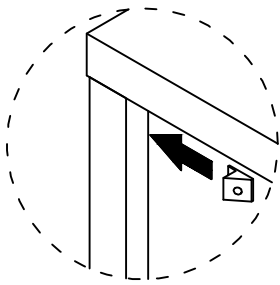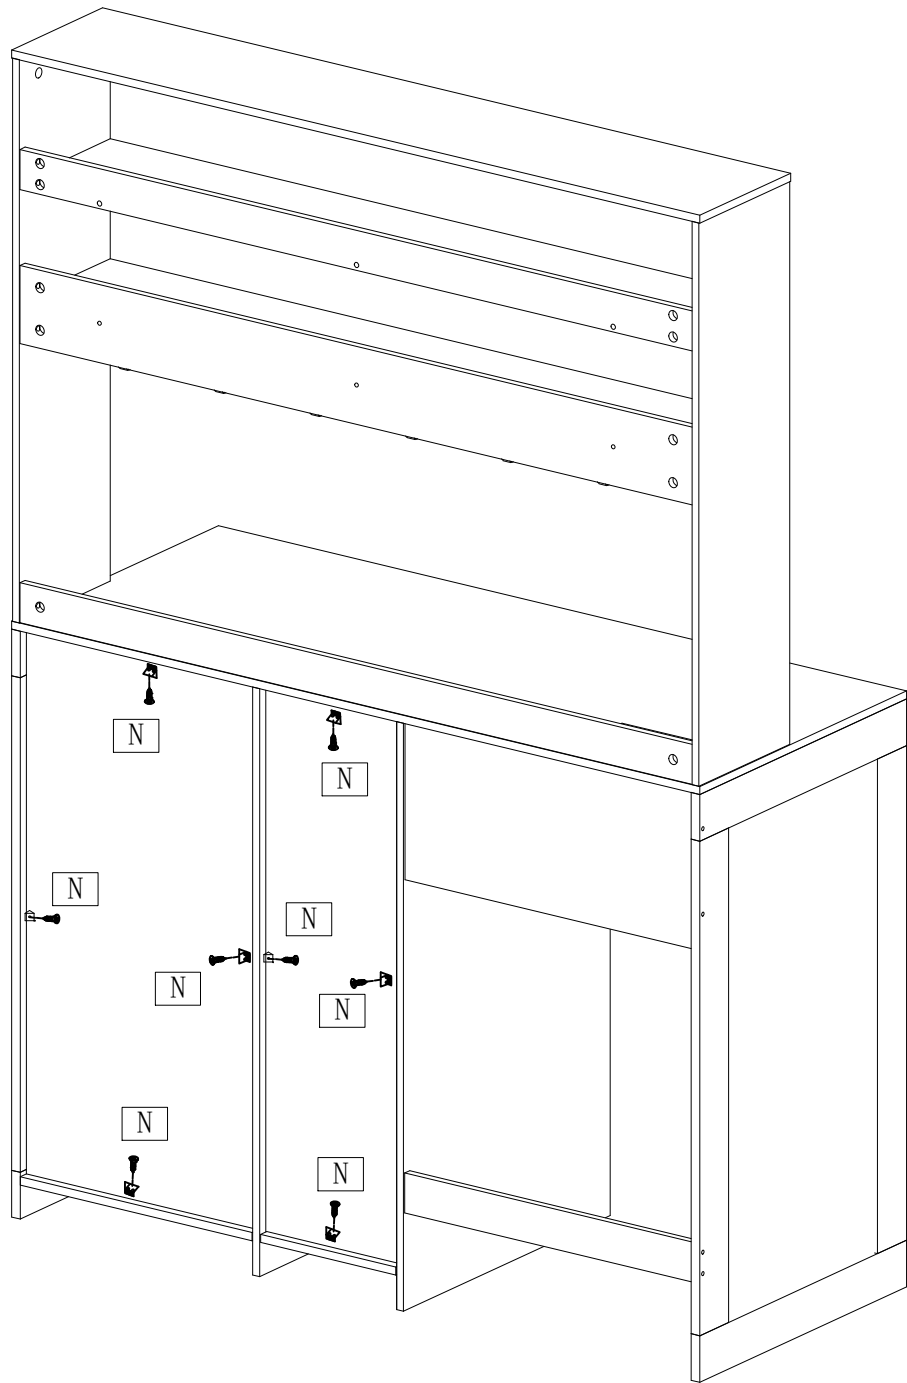

N	M3.5x14mm
	*8
H	
	*8