



No	Hardware	Fig	Q.ty
①	Bolt M6 x30 mm		8
②	Screw M6 x 70 mm		4
③	Allen Key		2

④x 2

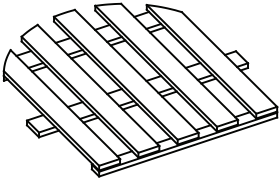


Seat cushion

⑤x 2

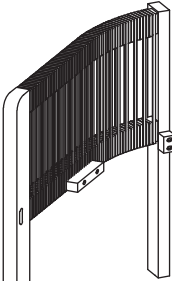


Right Armrest

⑥x 2

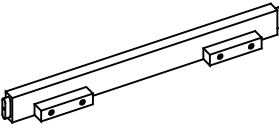


Support Pole

⑦x 2

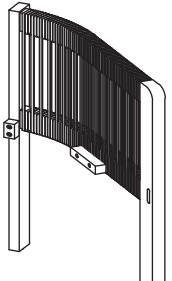


Left Armrest

⑧x 2

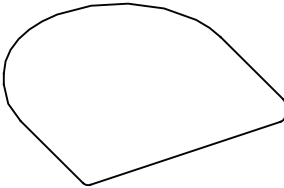


Seat Cushion

⑨x 2

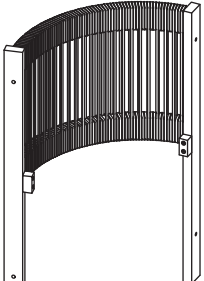


Backrest

⑩x 2

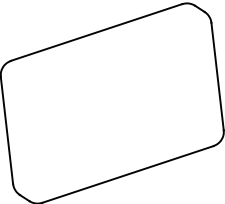


Back Cushion

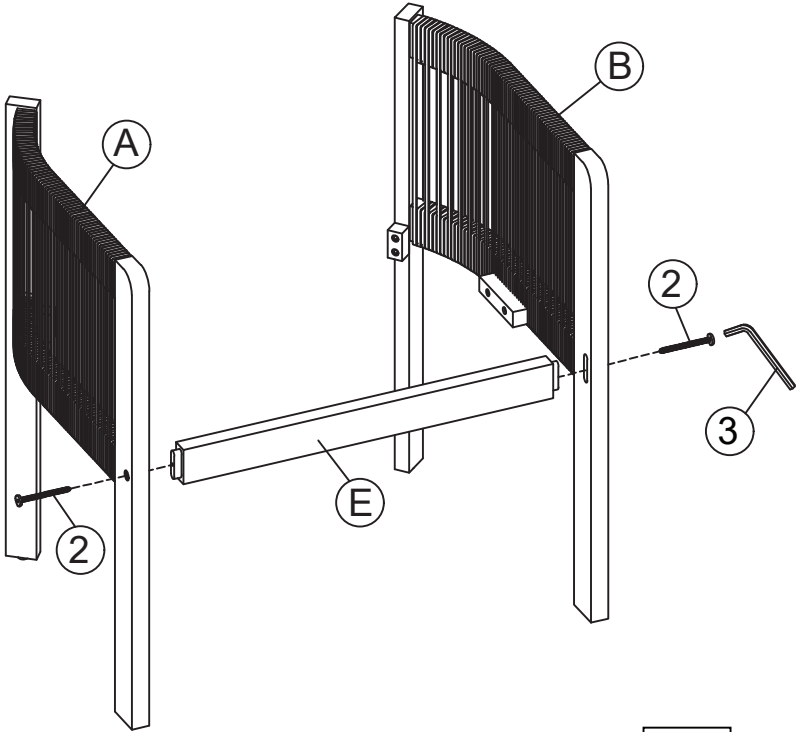


X2

STEP 1

80%




80%


100%

SKU: KS-028C



ASSEMBLY INSTRUCTION

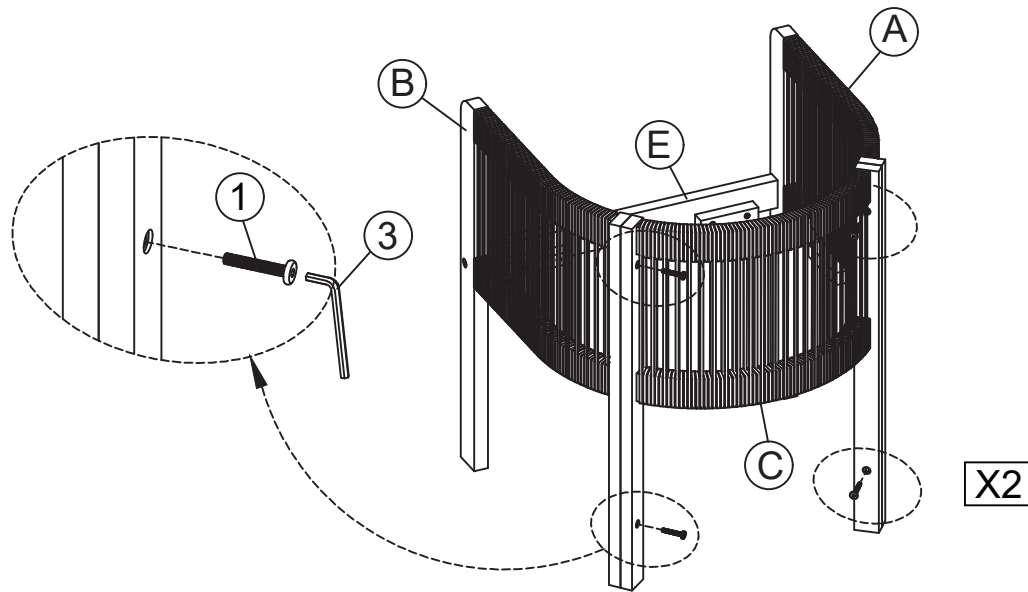


STEP 2

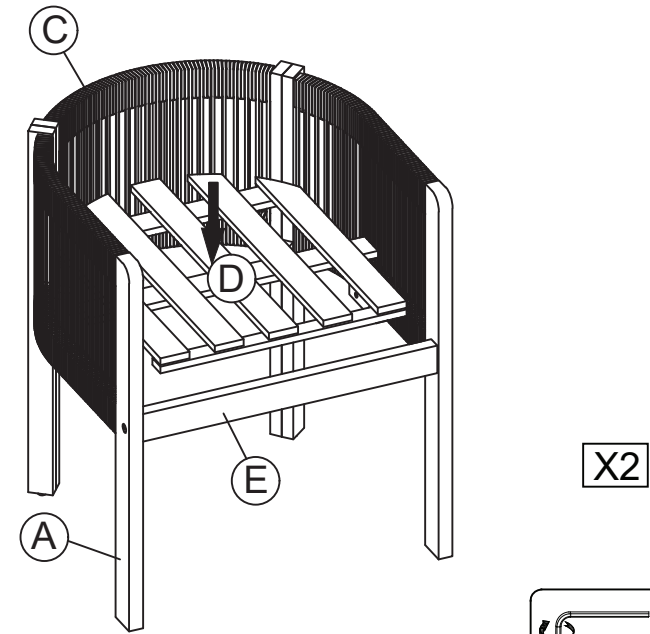

STEP 3

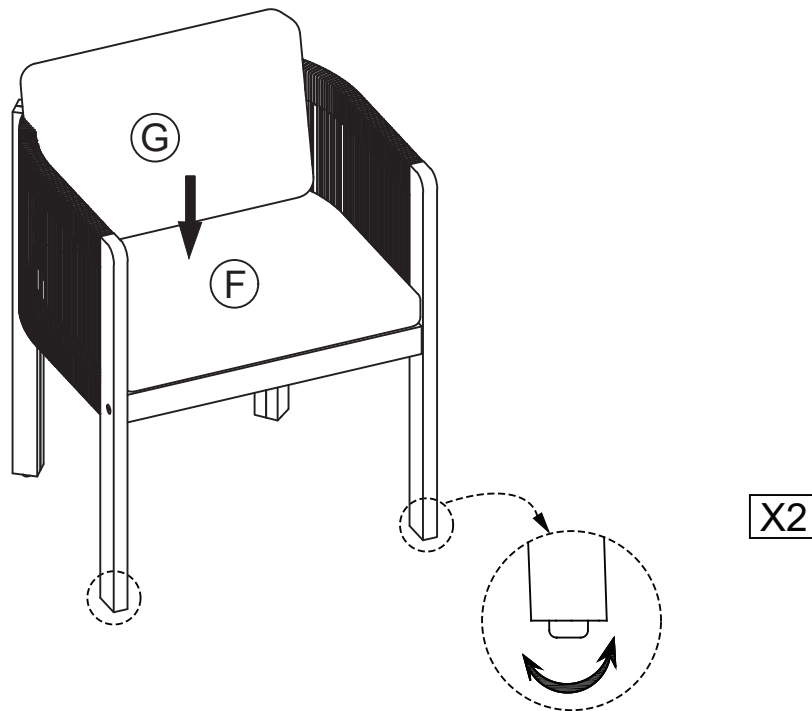

STEP 4

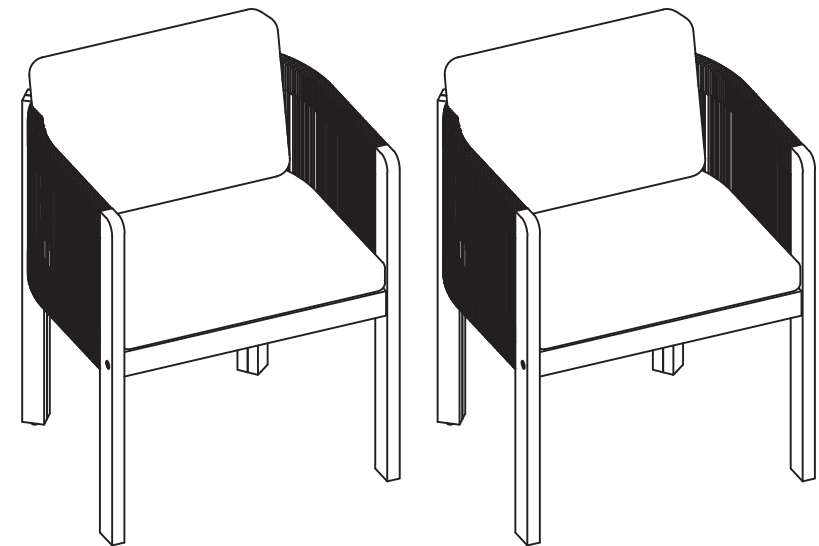

FINISH

