



ASSEMBLY INSTRUCTIONS

Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.
5. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.

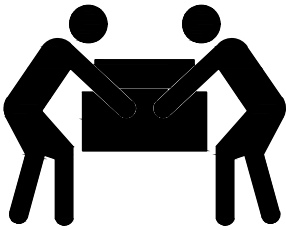


Recommended installers : 2

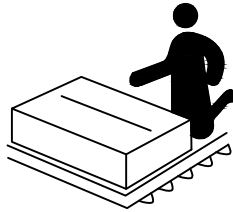


Put a carpet on the floor
before unpacking

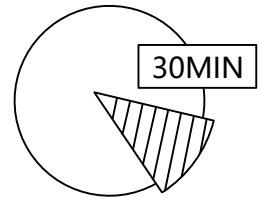

Estimate installation time:
30 minutes


Item No.	Reference Image	Qty
①		4
②		1

Item No.	Reference Image	Qty
A	 M8*55	4
B	 Φ 19	4

ASSEMBLY INSTRUCTIONS

Step 1

Open the pocket,
with accessories inside

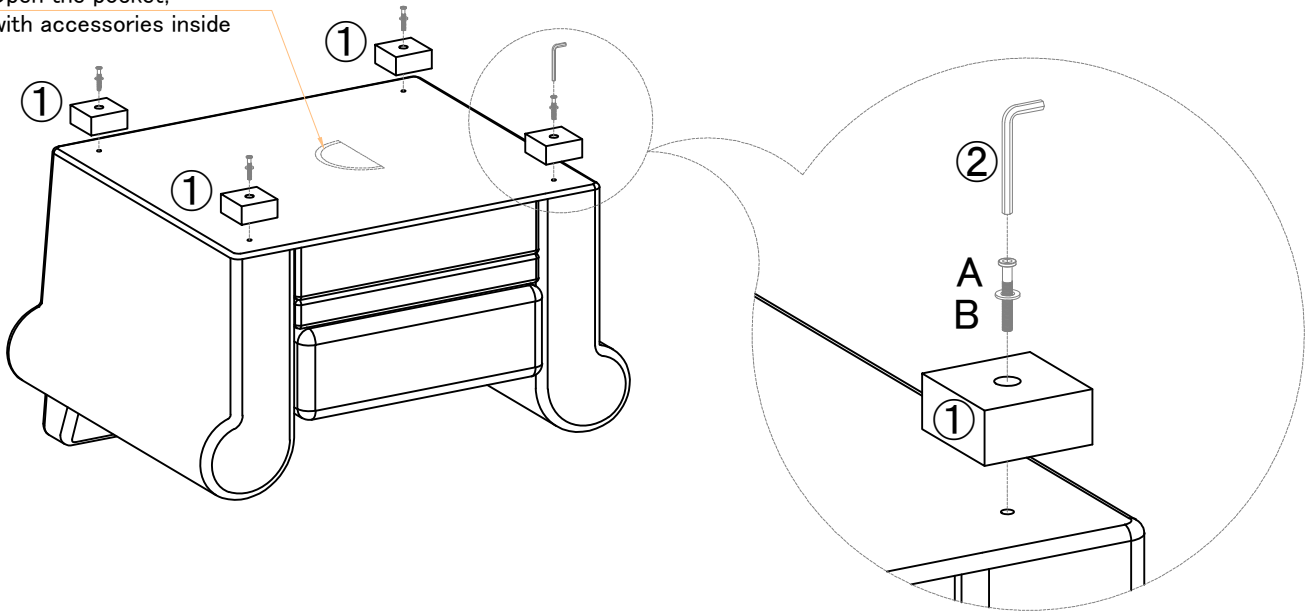

Step 2

