
Progressive®

ASSEMBLY INSTRUCTIONS MODEL NO. D865-12 COUNTER TABLE

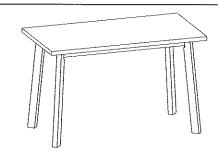


IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you starts to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware are parts out of reach of children.

| | Parts List | | | | | | |
|-----|------------|-------------|---|--|--|--|--|
| No. | Des | Description | | | | | |
| 1 | | Table Top | 1 | | | | |
| 2 | | Table Leg | 4 | | | | |

| Hardware List | | | | | | |
|---------------|-----|---------------------------|---|--|--|--|
| No. | | QTY / PCS | | | | |
| Α | (a) | JCBB M8 x 80mm | 8 | | | |
| В | 0 | Spring Washer M8 x 13mm Ø | 8 | | | |
| C | 0 | Flat Washer M8 x 22mm Ø | 8 | | | |
| D | | Allen Key M5 x 65mm | 1 | | | |

STEP 1

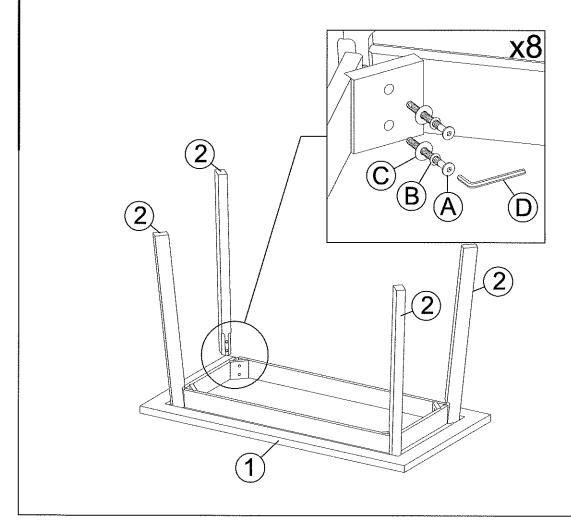

Progressive® furniture

ASSEMBLY INSTRUCTIONS MODEL NO. D865-12 COUNTER CHAIR




IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you starts to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware are parts out of reach of children.

| | Parts List | | | | | |
|-----|-------------|-----------------|-----------|--|--|--|
| No. | Description | | QTY / PCS | | | |
| 1 | | Chair Back | 1 | | | |
| 2 | | Front Stretcher | 1 | | | |
| 3 | | Left Stretcher | 1 | | | |
| 4 | | Right Stretcher | 1 | | | |
| 5 | | Left Front Leg | 1 | | | |
| 6 | 63 | Right Front Leg | 1 | | | |
| 7 | | Cushion Seat | 1 | | | |

| Hardware List | | | | | |
|---------------|---|---------------------------|-----------|--|--|
| No. | Description | | QTY / PCS | | |
| Α | 6):2011110 | JCBC M6 x 40mm | 2 | | |
| В | (a) | JCBC M6 x 60mm | 4 | | |
| С | Отторые примений примений в примени | JCBC M6 x 80mm | 4 | | |
| D | (2) | Spring Washer M6 x 13mm Ø | 10 | | |
| Е | 0 | Flat Washer M6 x 19mm Ø | 10 | | |
| F | | Allen Key M4 x 65mm | 1 | | |
| G | 41000E-(\$ | Csk Screw M4 x 32mm | 6 | | |

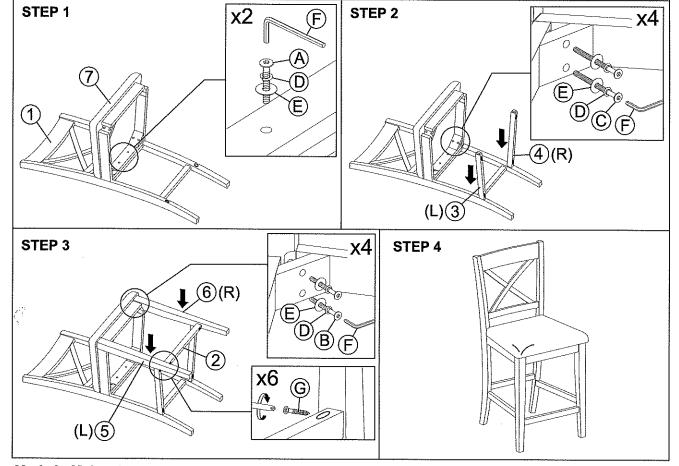

Made In Malaysia