


Planter Box

Tools: #2 Philips or Robertson driver.

Before Assembly: Please check all components with content list.

Package Contents:

- (A) Side Slat...28 (short slats)
- (B) Bottom Slat...11 (long slats)
- (C) Short Rail...4
- (D) Long Rail...4
- (E) Posts...4

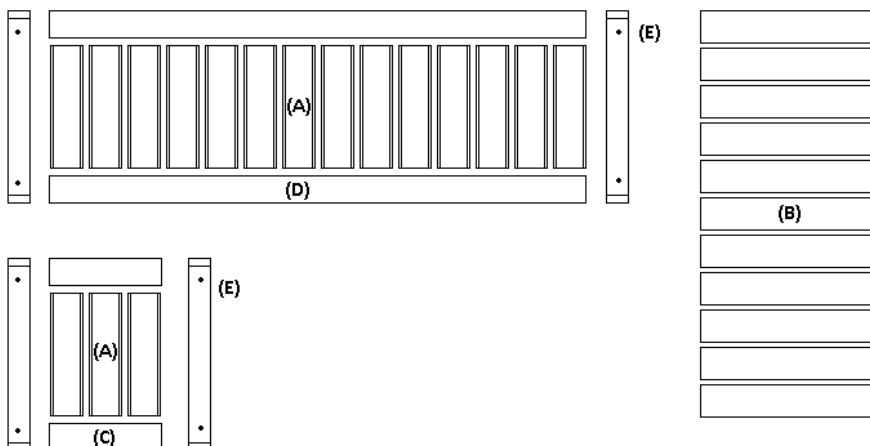


Hardware

- 4" screw...16
- ½" Wood Spacer Block...2


STEP 1. Build Short Sides

- Locate 3 pieces of side slat (a). Insert ends into slot in short rail (c).
- Slide a 2nd short rail (c) over free end of slats.
- Repeat this step to assemble other short side.
- HINT: tight fitting slats can be eased by rubbing ends with a small amount of candle wax.

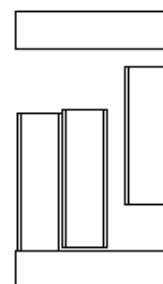


STEP 2. Build Long Sides

- Locate 11 pieces of side slat (a). Insert several of the slats into slot in long rail (d).
- Slide a 2nd long rail (d) over free end of slats.
- One by one, slip the remaining slats between the rails until all 11 pieces have been inserted.
- Repeat this step to assemble other side.

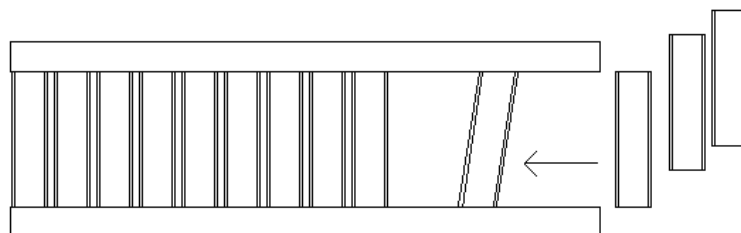


STEP 3. Attach Posts

- Stand short side assembly between 2 posts (E) (centered).
- Next, Slip 2 spacer blocks under the side assembly to create bottom spacing as illustrated.
- Attach posts to short side assembly using 4 inch screws.
- Note: posts have 2 heights of pre-drilled holes when viewed from each side. Position posts so that holes are at identical height when viewed from front.
- Repeat this step to make other short side assembly.

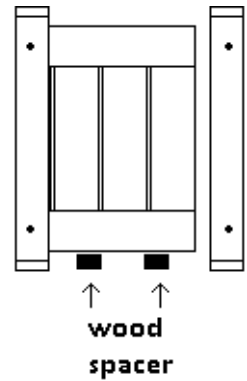

STEP 4. Assemble Walls

- Form a corner by centering a long side assembly to open face on post. Use wood spacers as above.
- Attach side assembly to post using 4 inch screws.
- Repeat for other sides.

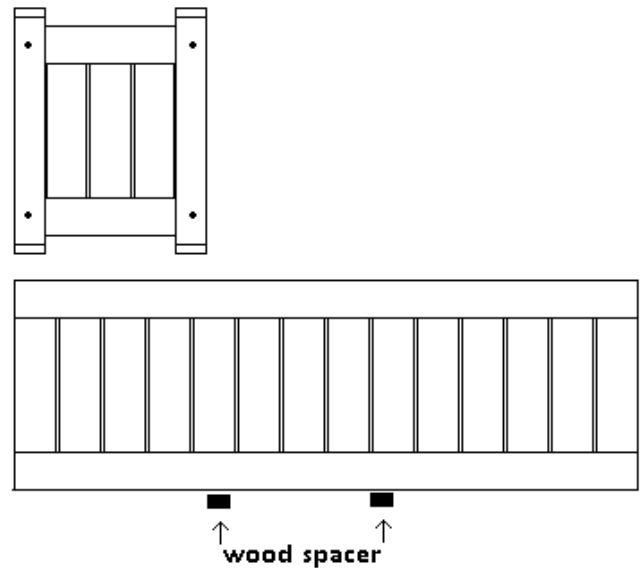

STEP 5. Insert Bottom Slats

- Set 11 bottom slats (b) into the planter so ends rest on the inside lower rail lip (no attachment is required)
- A small gap will remain along inside lip for water drainage.
- Enjoy your new planter.

