















Installation & Assembly

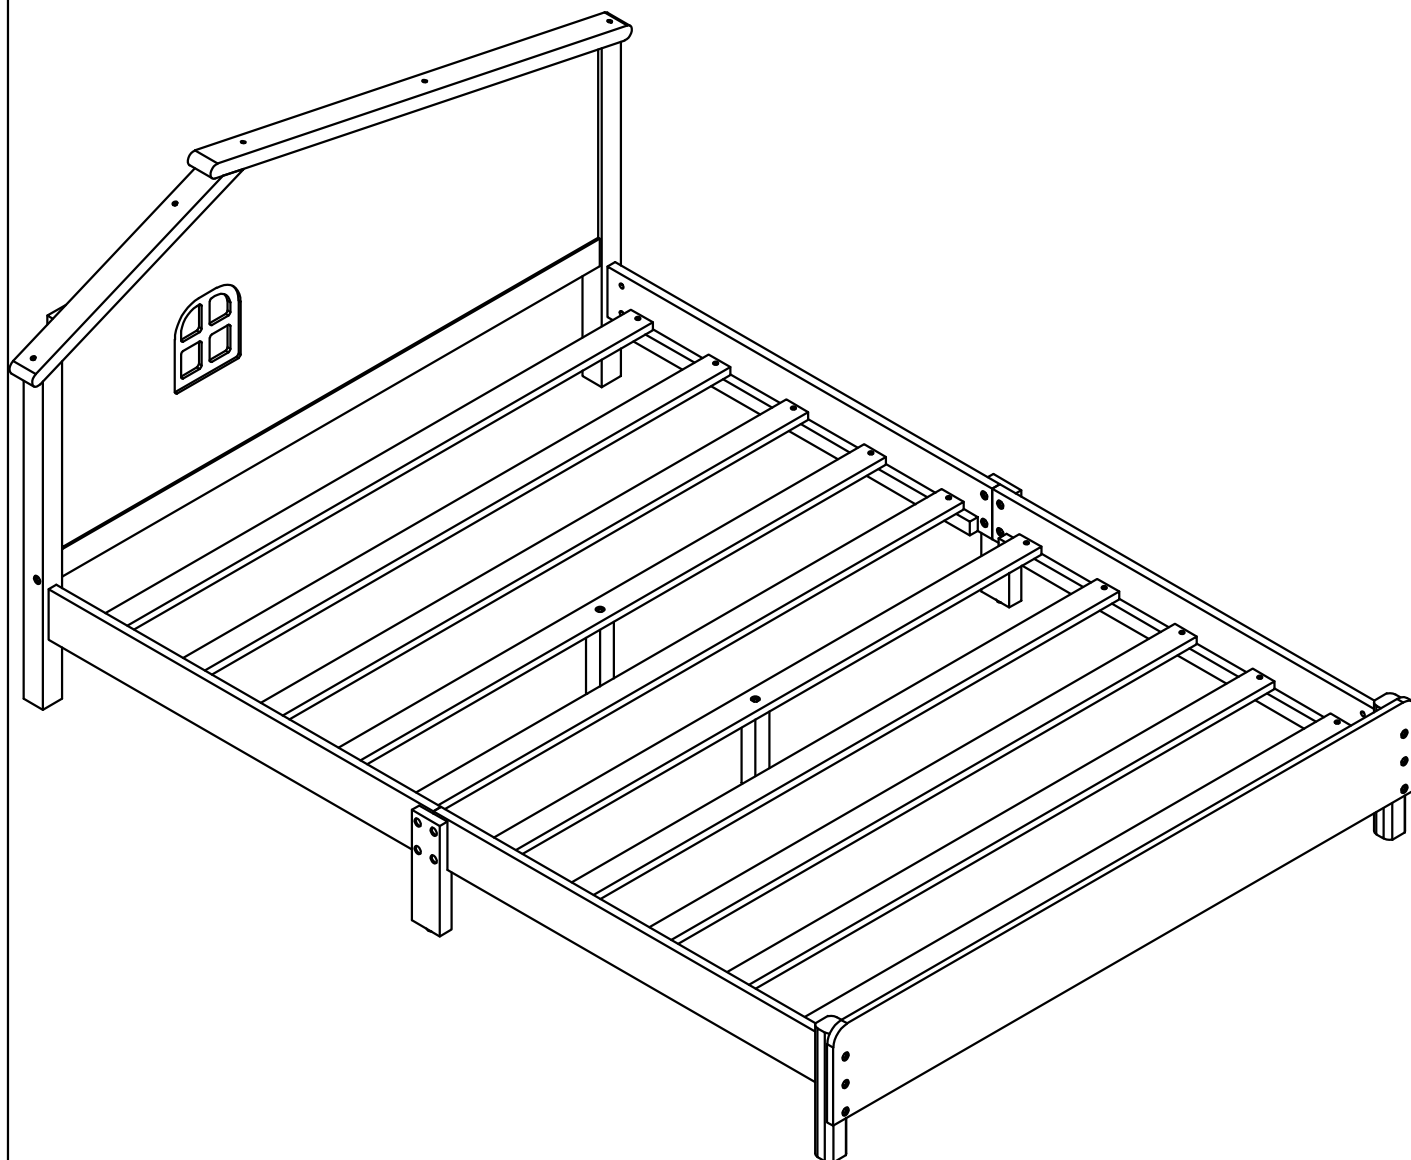



ASSEMBLY INSTRUCTION

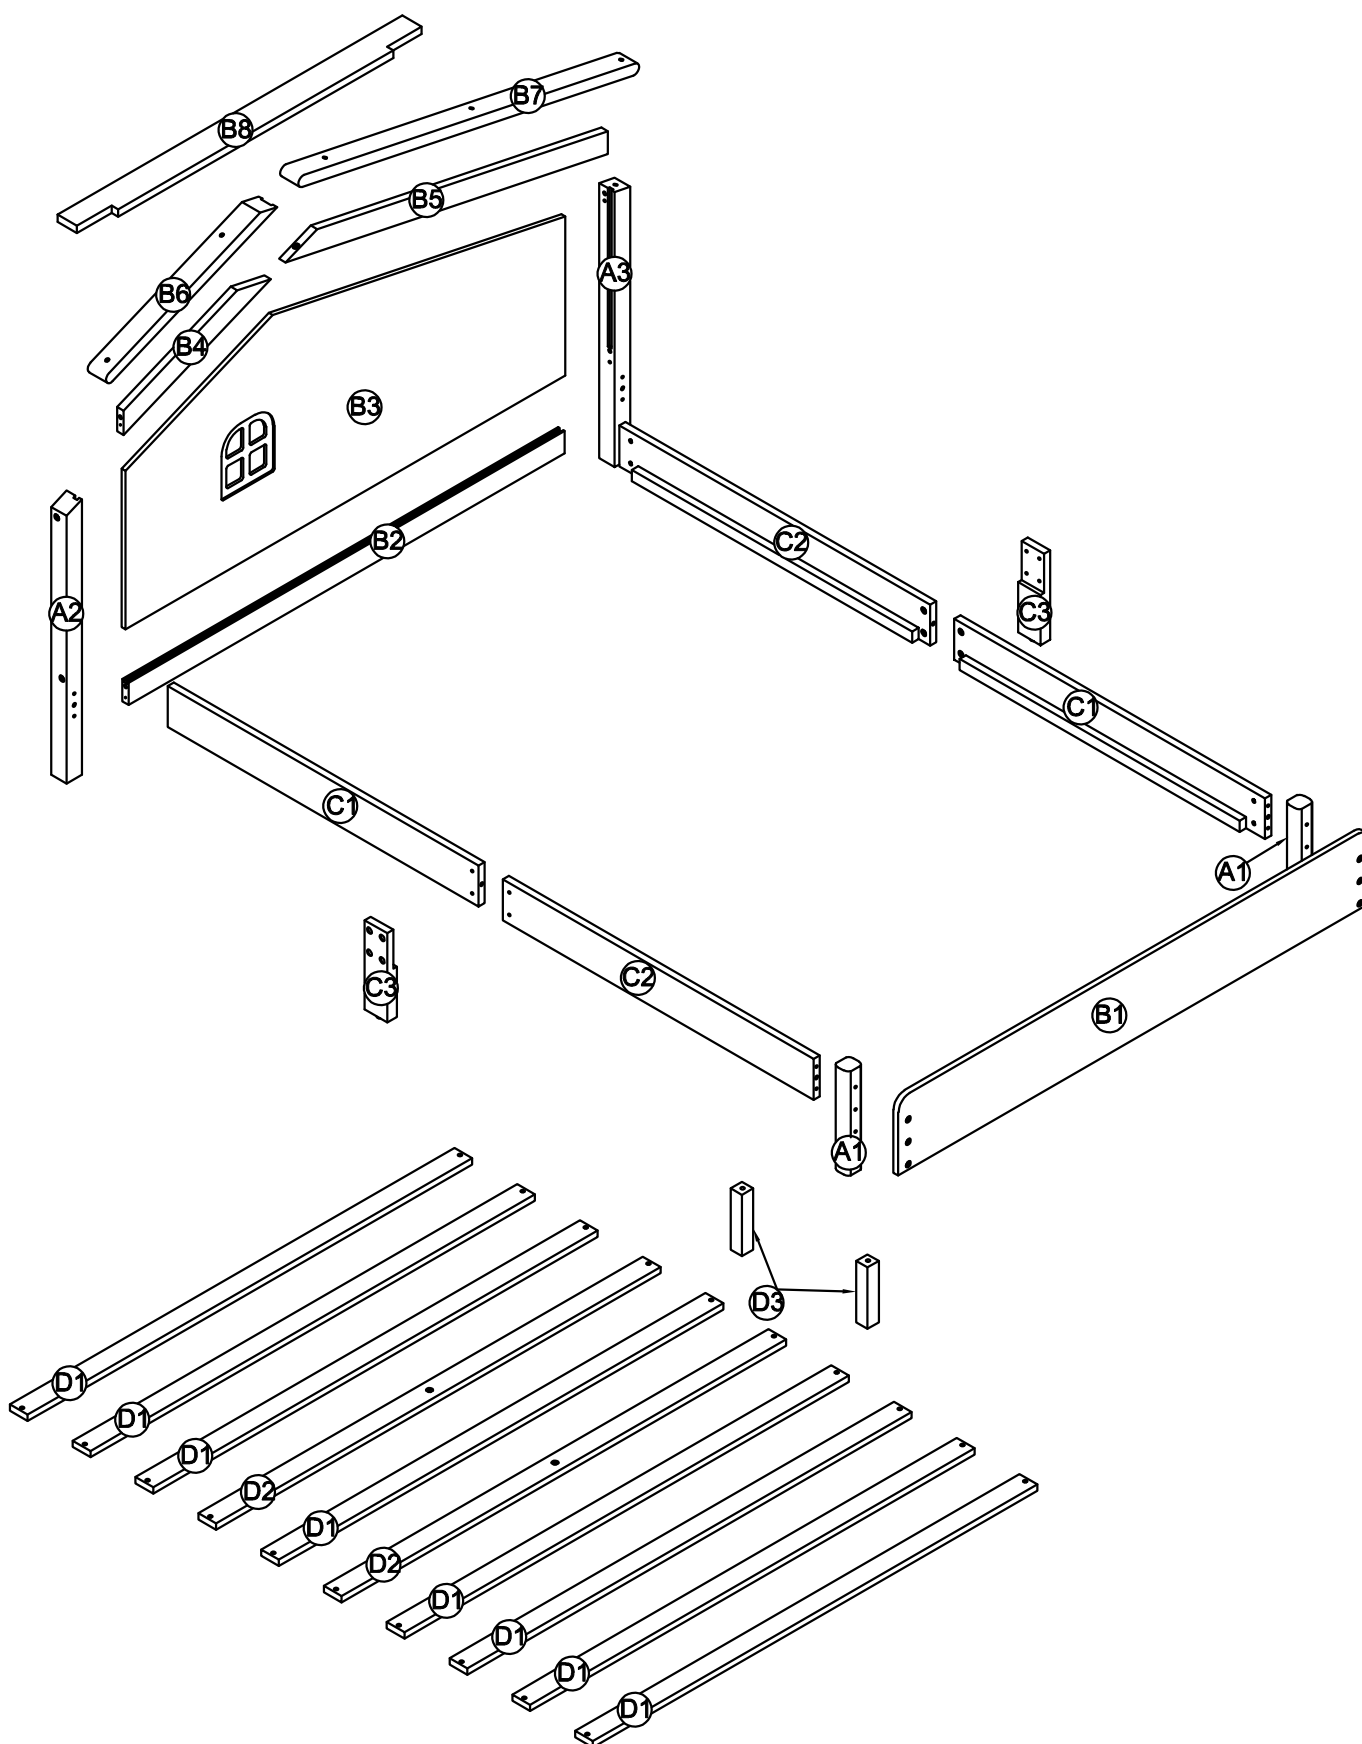

Part List

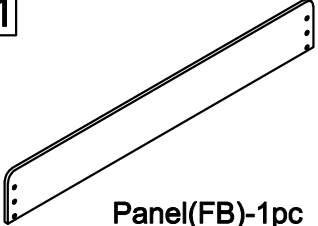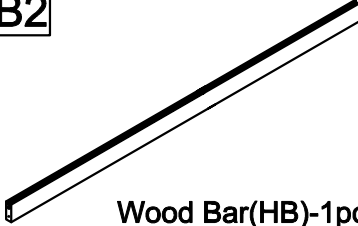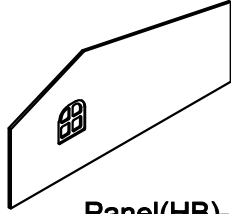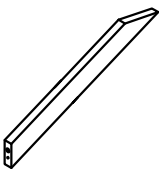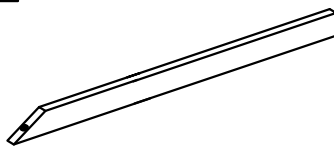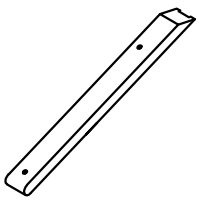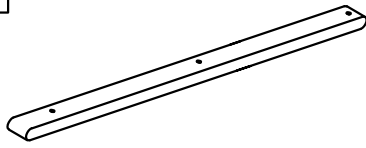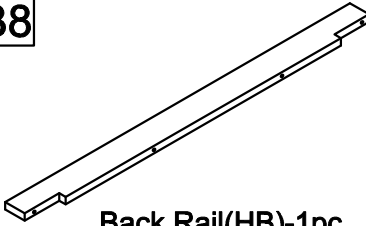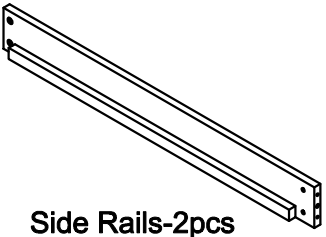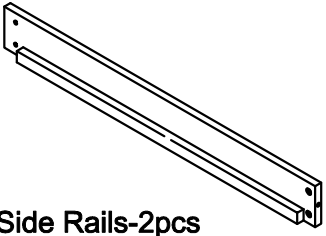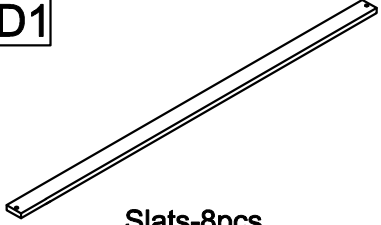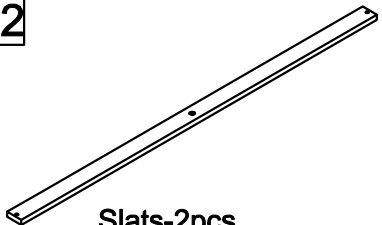
A1  Legs-2pcs	A2  Leg-1pc	A3  Leg-1pc
B1  Panel(FB)-1pc	B2  Wood Bar(HB)-1pc	B3  Panel(HB)-1pc
B4  Wood Bar(HB)-1pc	B5  Wood Bar(HB)-1pc	B6  Top Rail(HB)-1pc
B7  Top Rail(HB)-1pc	B8  Back Rail(HB)-1pc	C1  Side Rails-2pcs
C2  Side Rails-2pcs	C3  Support Side Rails-2pcs	D1  Slats-8pcs
D2  Slats-2pcs	D3  Support Slats-2pcs	

Hardware List

1	 Screws 1/4" x80 4pcs	2	 Screws 1/4" x50 1pc	3	 Ø10 x 40 mm Wood dowel 11pcs
4	 M4 x 50 mm Wood Screws 2pcs	5	 M4 x 30 mm Wood Screws 20pcs	6	 Allen Key 1pc
7	 M4 x 40 mm Wood Screws 7pcs	8	 Ø1/4" x 25 mm Hex-Head bolts 8pcs	9	 Ø1/4" x 15 mm Canopy head though -8pcs
10	 Ø1/4" x 30 mm Hex-Head bolts 4pcs	11	 Ø1/4" x 100 mm Hex-Head bolts 8pcs	12	 Ø1/4" x 13 mm Horizontal-Hole bolts 8pcs


STEP 1: Following below illustration ::

-Using hardware #1,#2 and Dowel 3 connect B2,B5,B6 Wood Bars and B3 panel with A2,A3 Legs

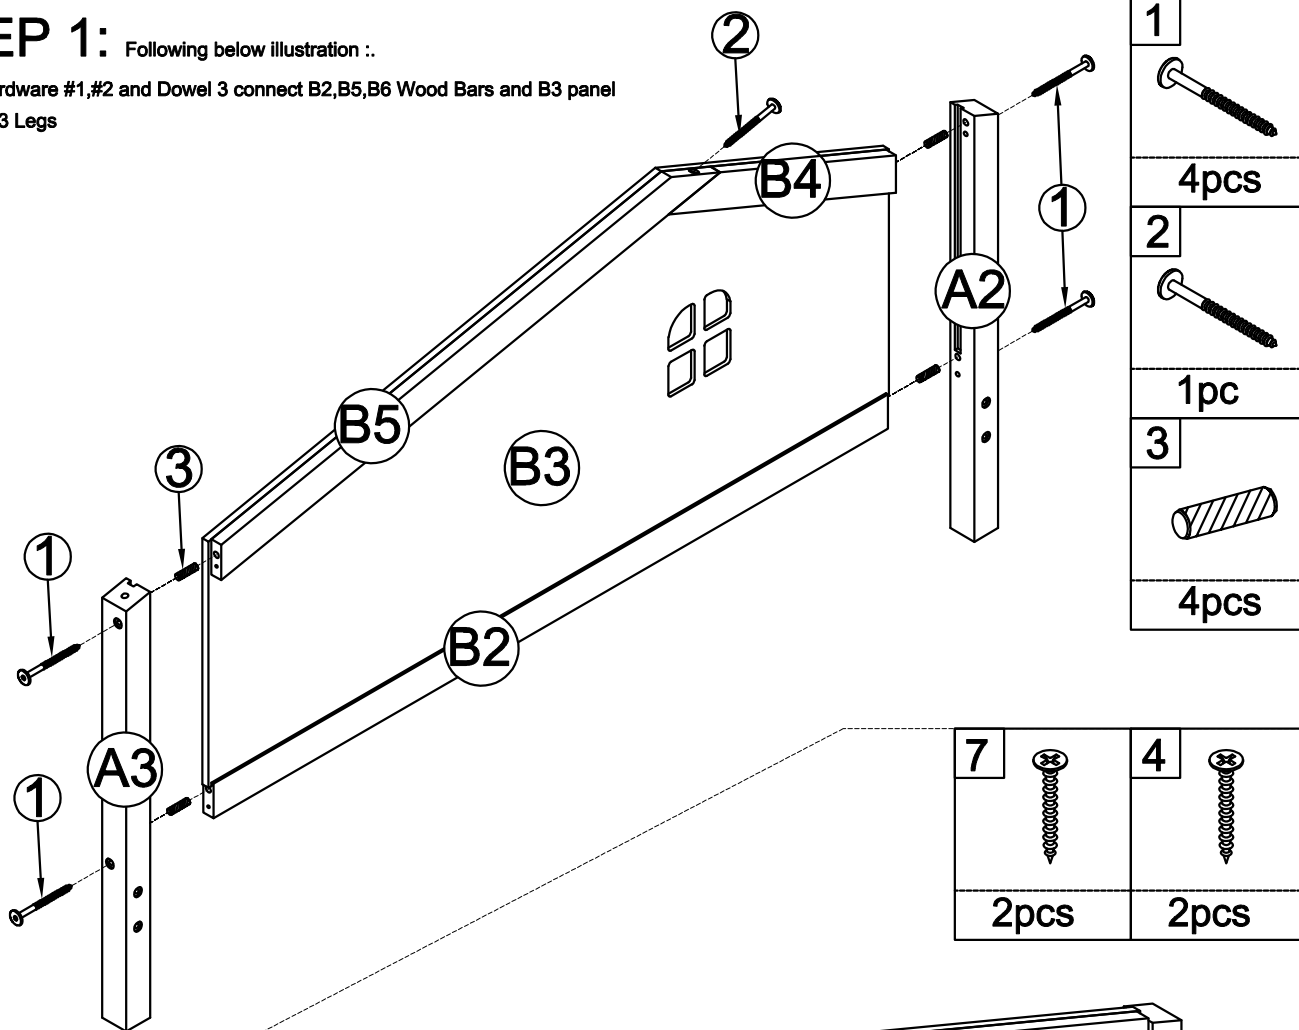


STEP 2: Following below illustration ::

-Using hardware #4,#7 connect B8 Wood Bars a with Frame (completed on step 1)

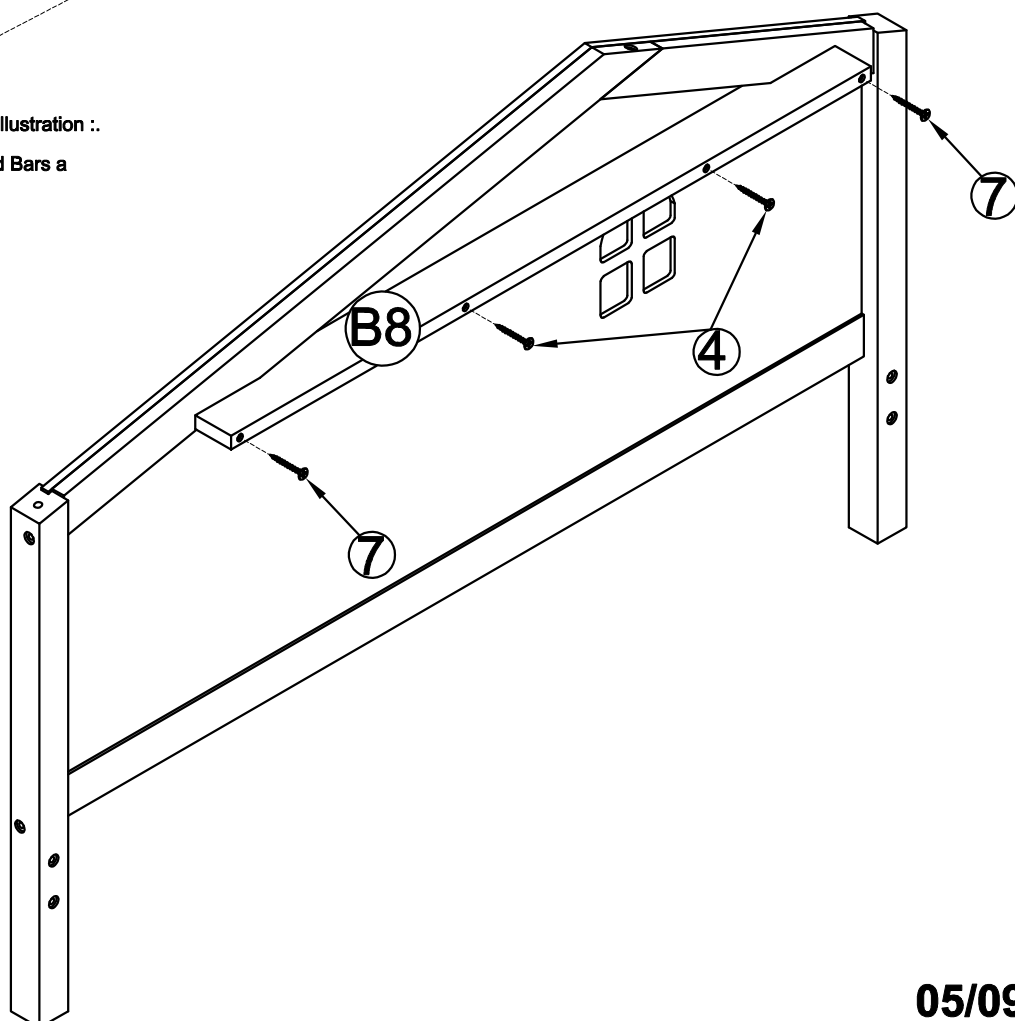


STEP 3: Following below illustration .:

-Using hardware #7 and Dowel 3 connect B7 Top Rail with Frame (completed on step 2)

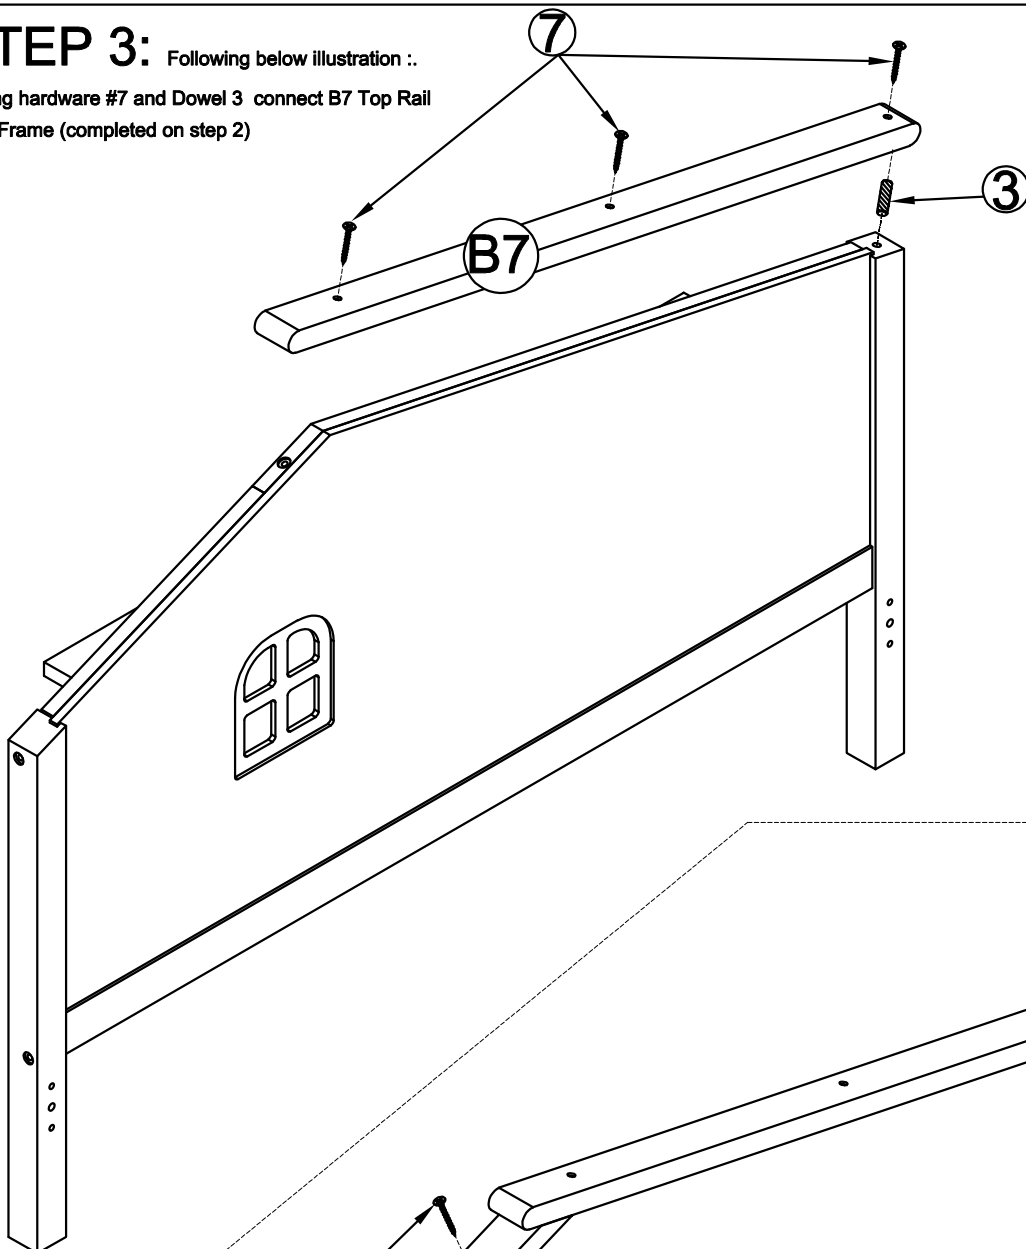


3




1pc

7




3pcs

7



2pcs

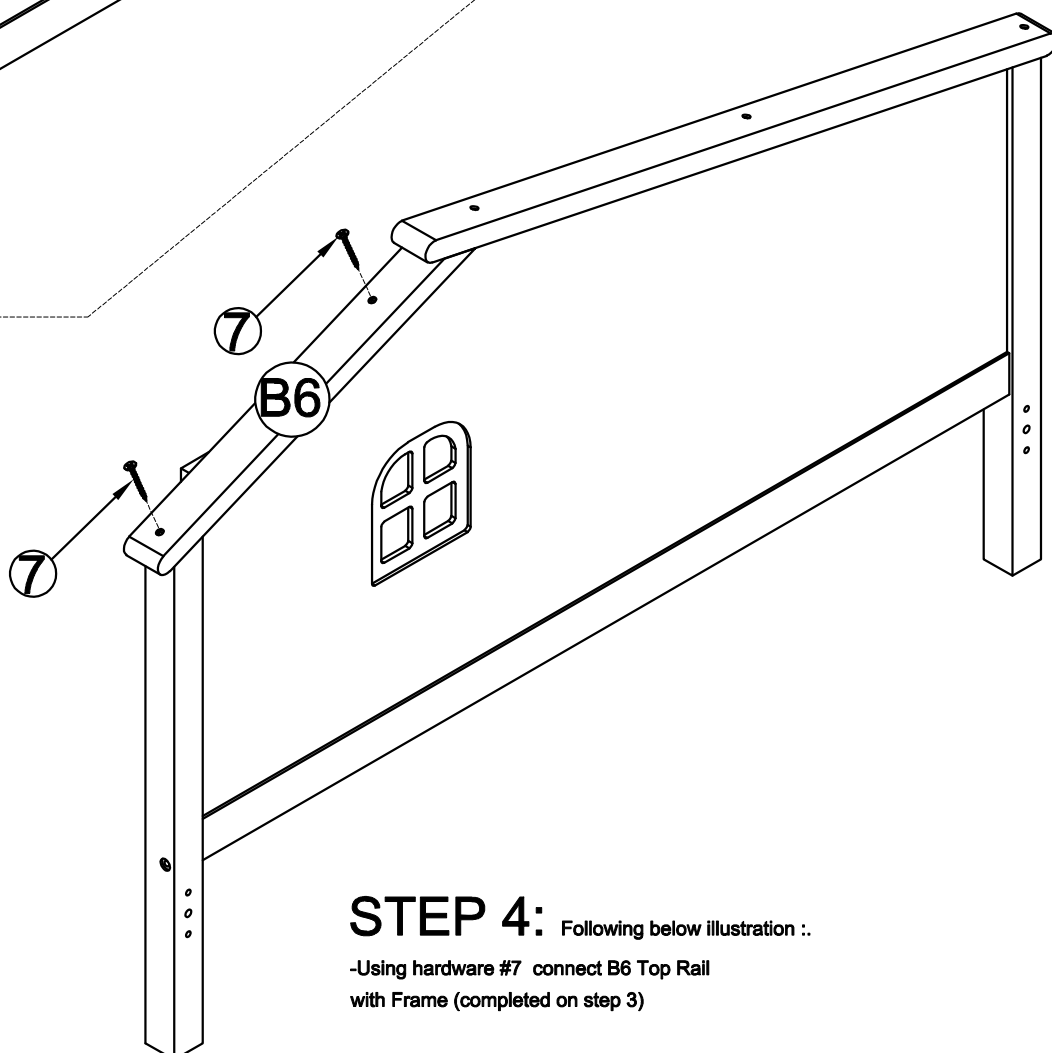


STEP 4: Following below illustration .:

-Using hardware #7 connect B6 Top Rail with Frame (completed on step 3)

STEP 5: Following below illustration .:

-Using hardware #12 connect B1 panel with A1(x2) Legs

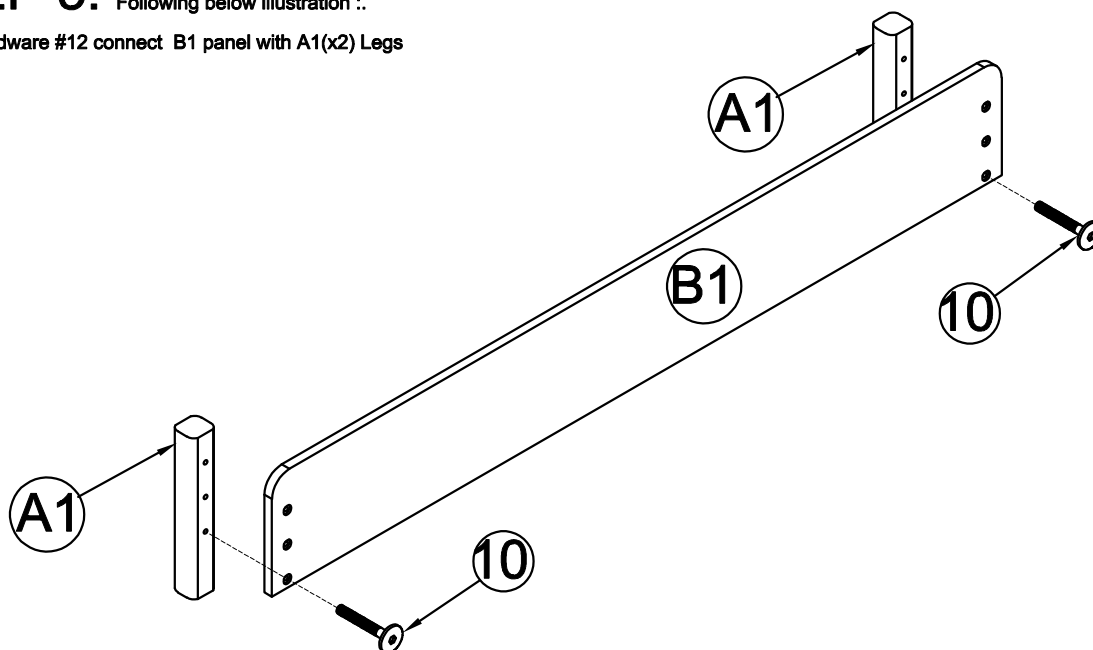


10



2pcs

STEP 6: Following below illustration:

.Using hardware #8,#9 and dowel #3 connect Siderail C1,Siderail C2 with Support Siderail C3

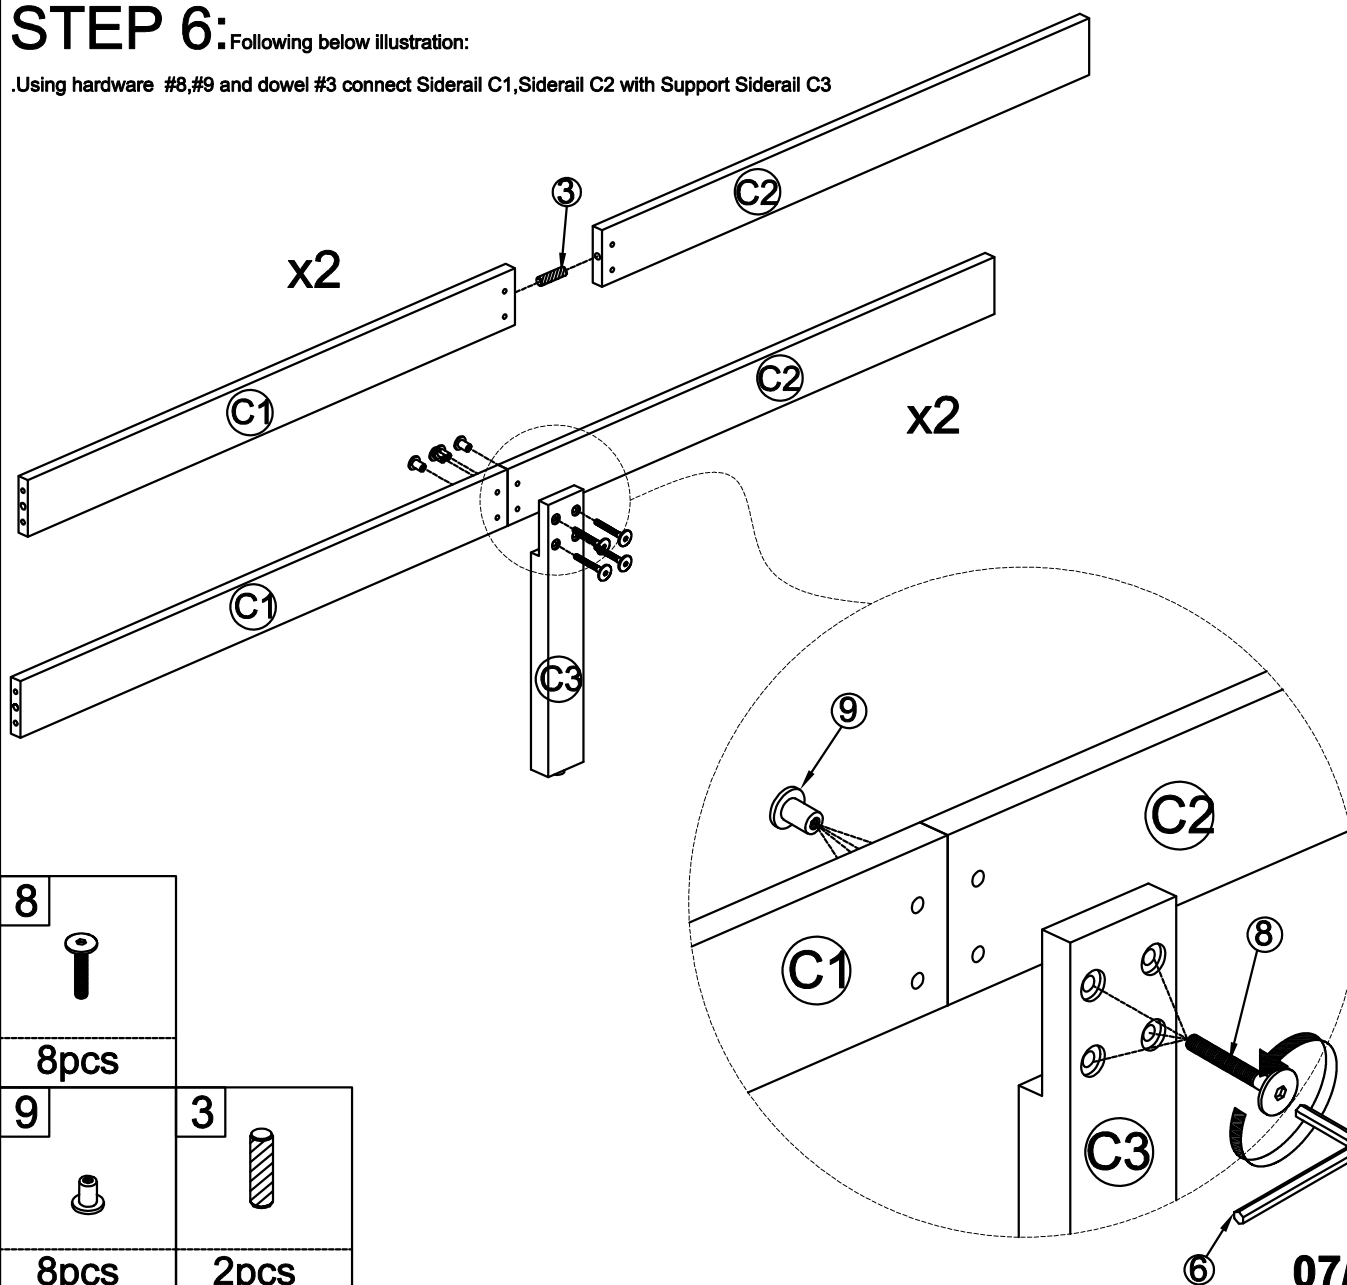

8



8pcs

9



8pcs

3




2pcs


07/09

STEP 7: Following below illustration:

Using hardware #11, #12 and dowel #3 to Assembly Frame (completed on step 4, step 5) with siderail Frame (completed on step 6).

Look at detail view for more detail

12	11	3
		
8pcs	8pcs	4pcs

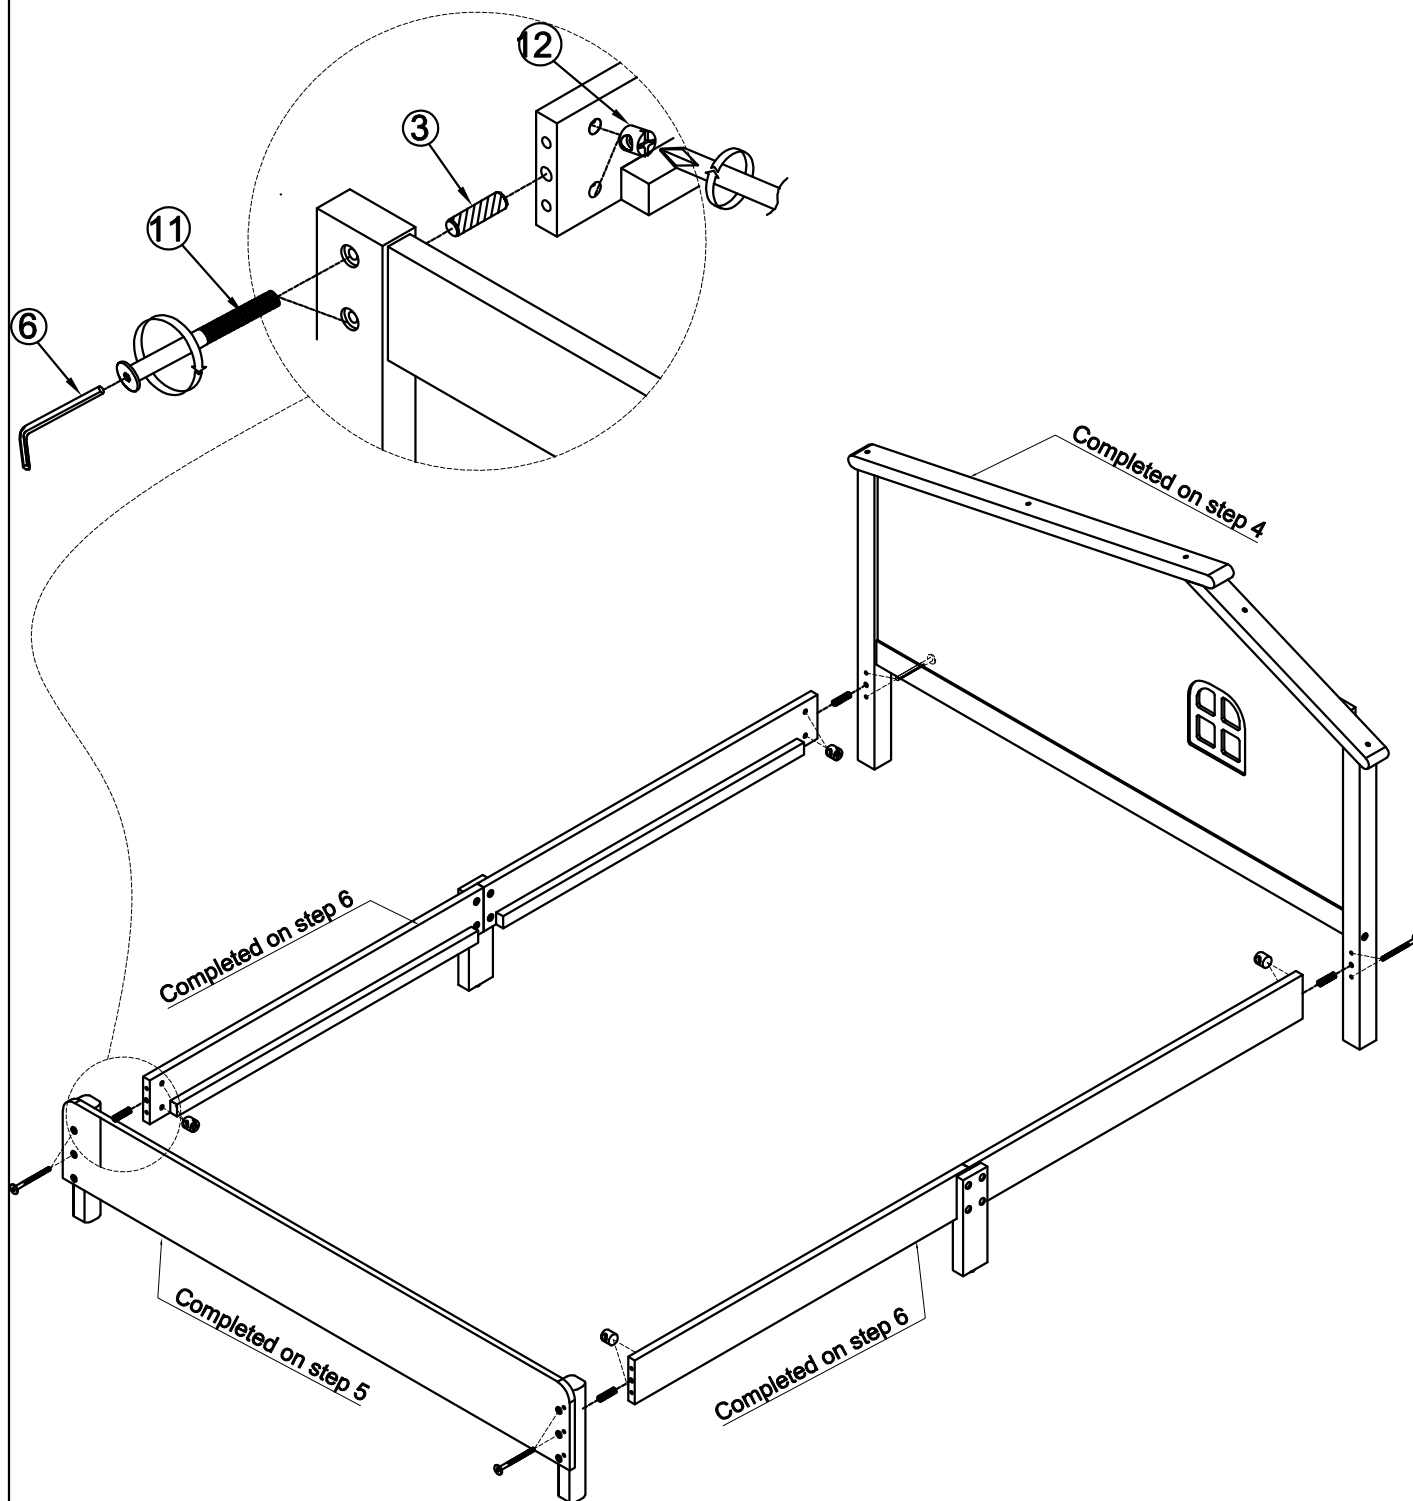


STEP 8:

Following below illustration:


-Assembly 2 slats D2 with 2 Support Slats(D3) by using hardward #10.

Look at detail view

10



2pcs

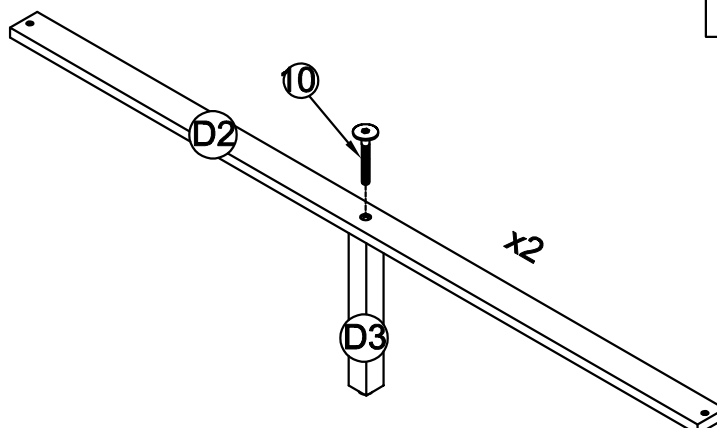

STEP 9:

Following below illustration:



-Assembly 8 slat D1 & 2 slat D2 using hardward #5.

- Look at detail view

5



20pcs

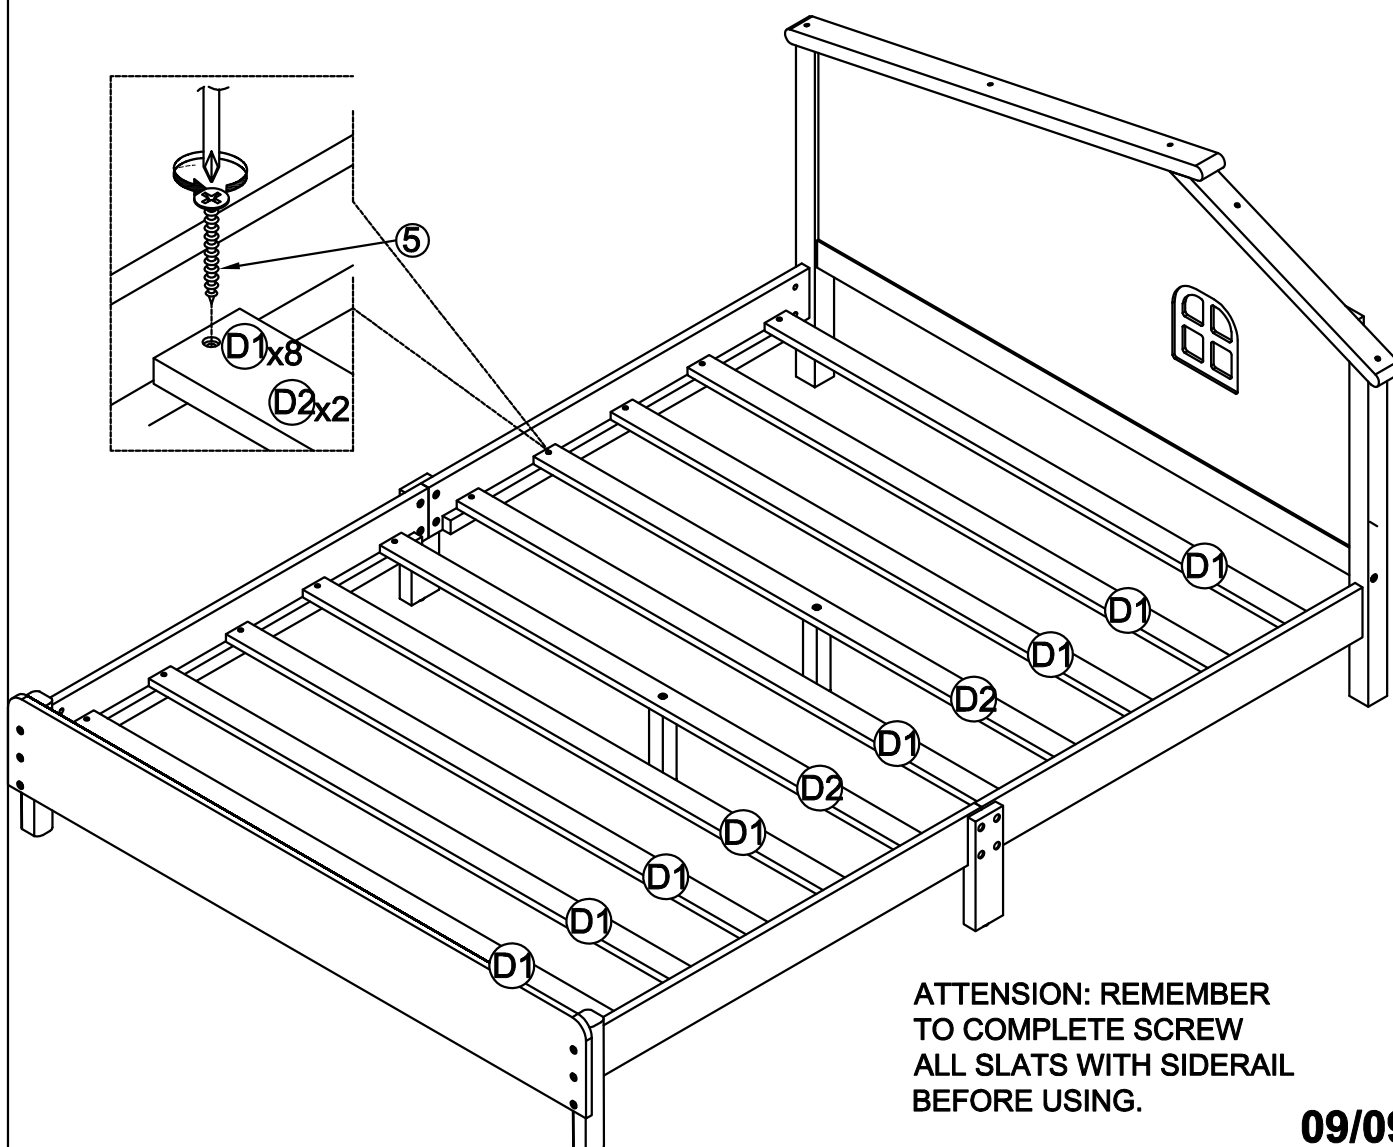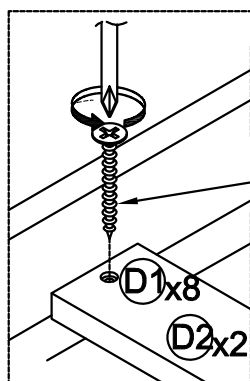

ATTENTION: REMEMBER
TO COMPLETE SCREW
ALL SLATS WITH SIDERAIL
BEFORE USING.

09/09