
INSTALLATION INSTRUCTIONS	Confidentional： A
SKU:	PROHIBIT COPY

□ Prior to installation please check received items against the Packing List .If any part is missing or damaged, please do not return the product to the store and contact us；
Call：(302)336-8180
Email：vanityinservice@gmail.com

□ Protect all surfaces from sharp objects , high heat sources,direct prolonged sunlight and chemical hazards .

□ Professional installation is recommended !

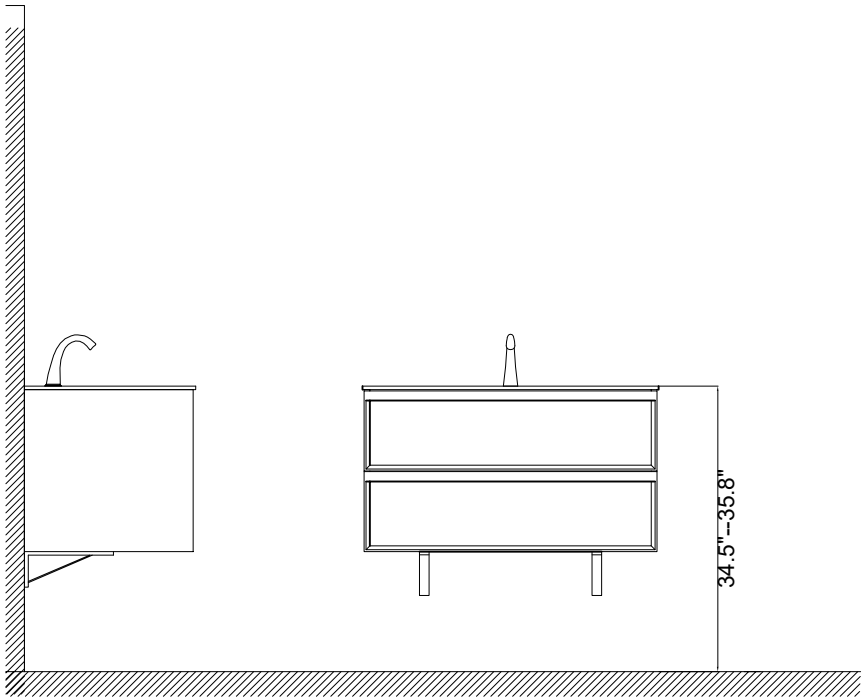

INSTALLATION INSTRUCTIONS


Confidentional ： A

SKU:


PROHIBIT COPY

PACKING LIST


A Main Vanity
1 PC

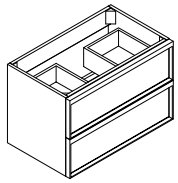


B Wood Cleat
1 PC

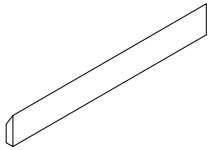


C Metal Bracket
2 PCS

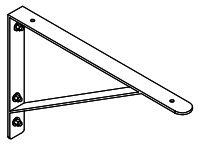

D Top & Backsplash
1 PC

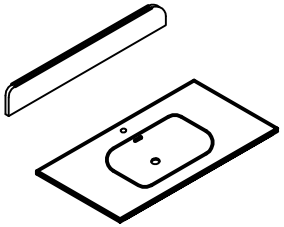

E Wood Screw
8 PCS

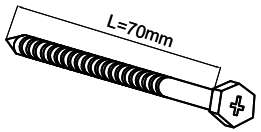


M5 x 70

F Wood Screw
12PCS




M4 x 15

G Wall Anchor
8 PCS




H Metal Washers
4 PCS




I Handle

24"/30"/36": 2pcs
48"S: 4pcs
60": 4pcs




TOOLS REQUIRED

Drill Bits

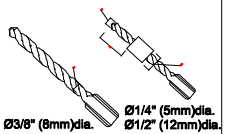

HSS


Screw Driver




Drill



Level



Knife

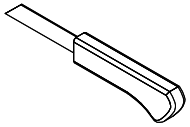

Glove




MASONRY DRILL BIT FOR TILE Ø3/8" (8mm)

Safety Glasses




Silicone



Measuring Tape



Soft Head Hammer



Pencil



INSTALLATION INSTRUCTIONS

Confidentional： A

SKU:

PROHIBIT COPY

STEP 1：□ Use a wood stud finder to locate the wood studs behind the walls , and then mark by pencil.

□ Use a pencil to mark the installation location on the **Wood Cleat (B)** , according to the Wood stud's location.


□ Use a level to ensure the **Wood Cleat (B)** will be level before installing to the wall.

NOTE


Make sure the screw holes must be on the wood studs otherwise the vanity will fall out because the dry wall cannot hold the cabinet.

vanity	hole	a	b	c
24"&30"	3	8"	8"	-
36"	3	12"	12"	-
48"	4	12"	12"	12"
60"	4	12"	24"	12"

NOTE:The a/b/c value is for reference only , please according to the Wood stud's location.

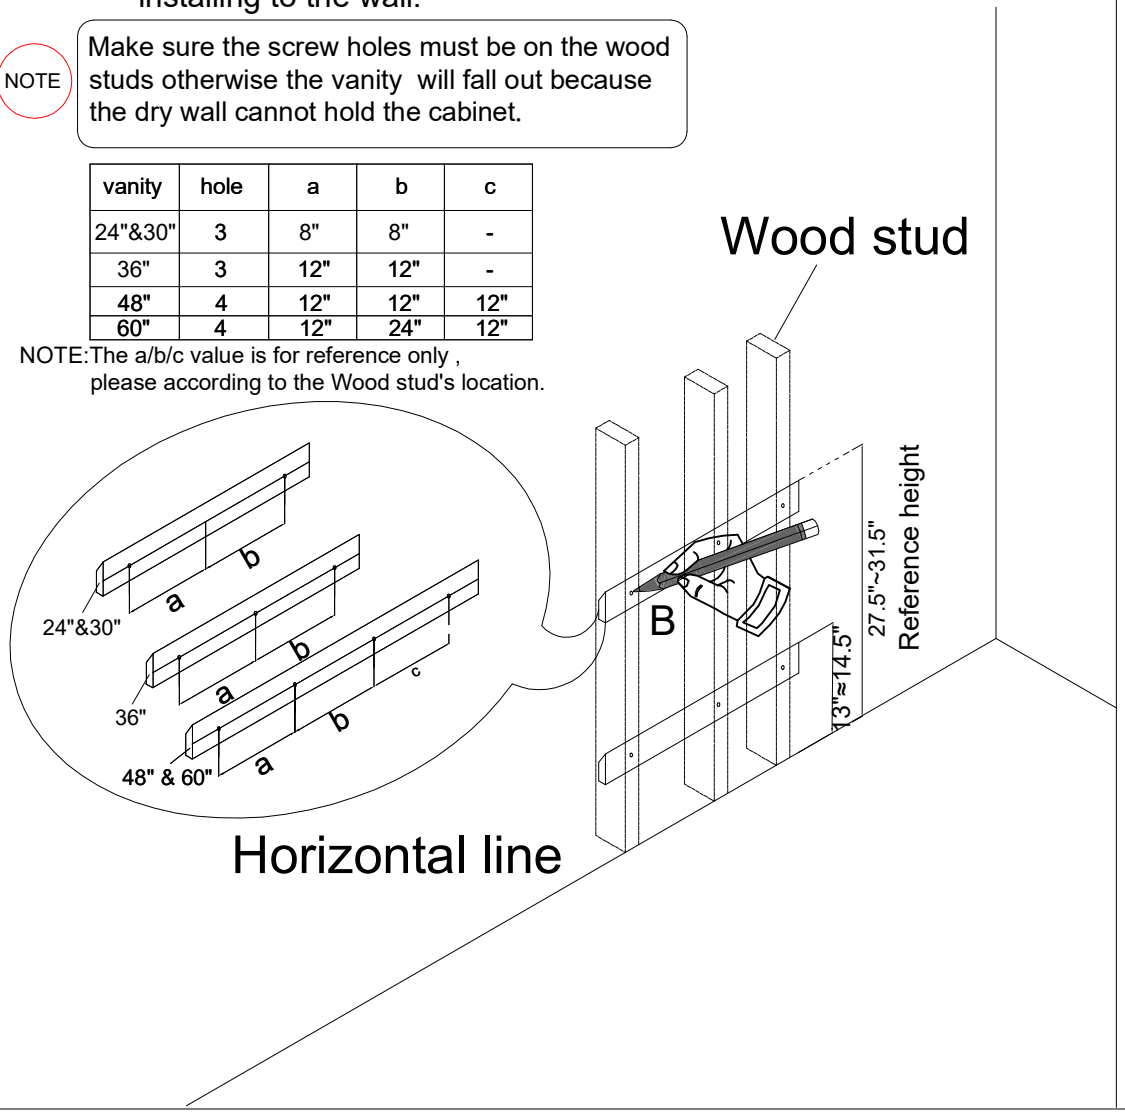

STEP 2： Drill the holes according to the marks using a drill.

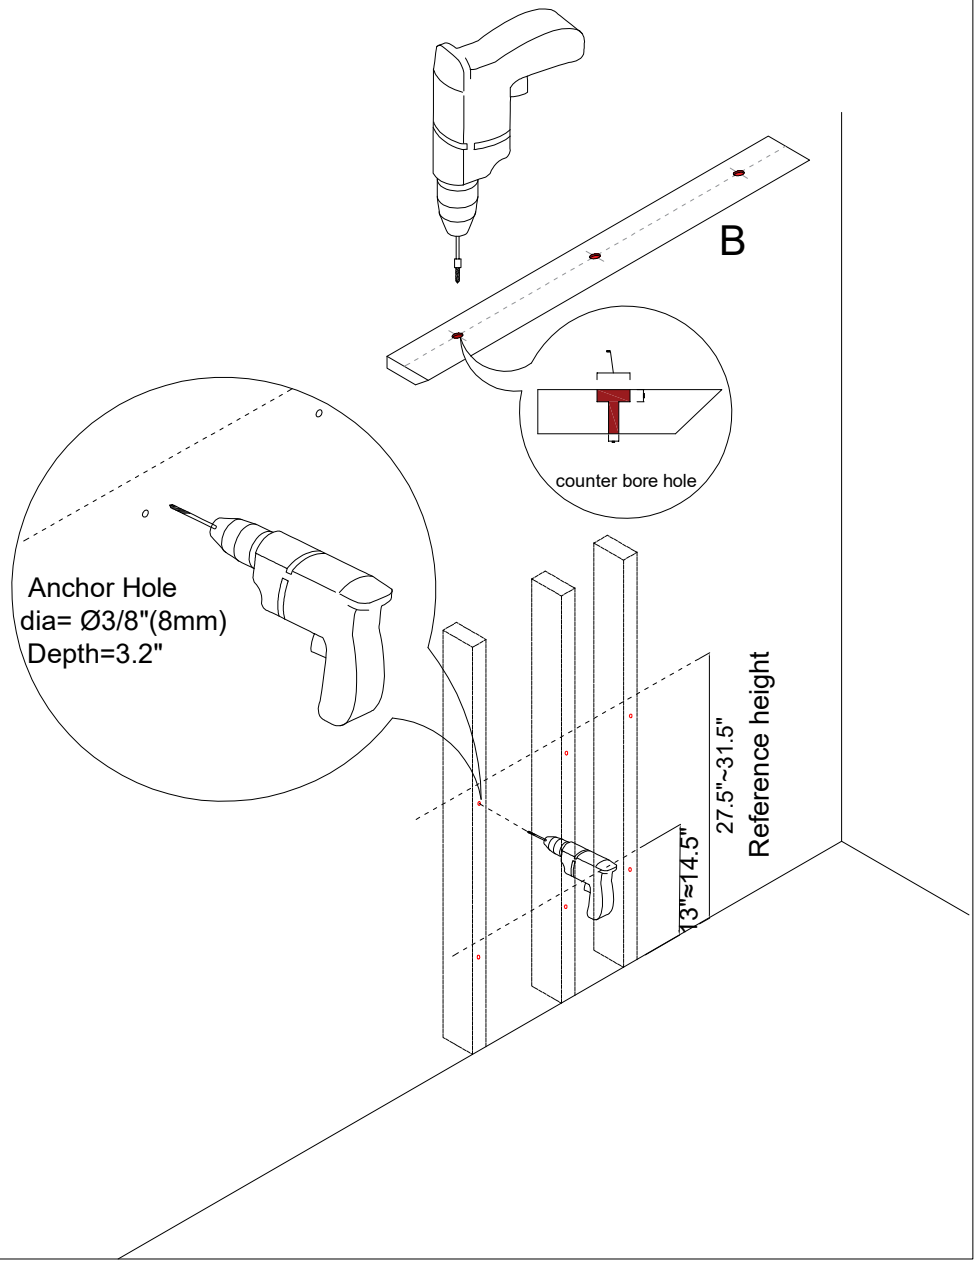


INSTALLATION INSTRUCTIONS

Confidentional ： A


SKU:

PROHIBIT COPY

STEP 3：Install the **Wall Anchors (G)** provided into the wall with hammer.

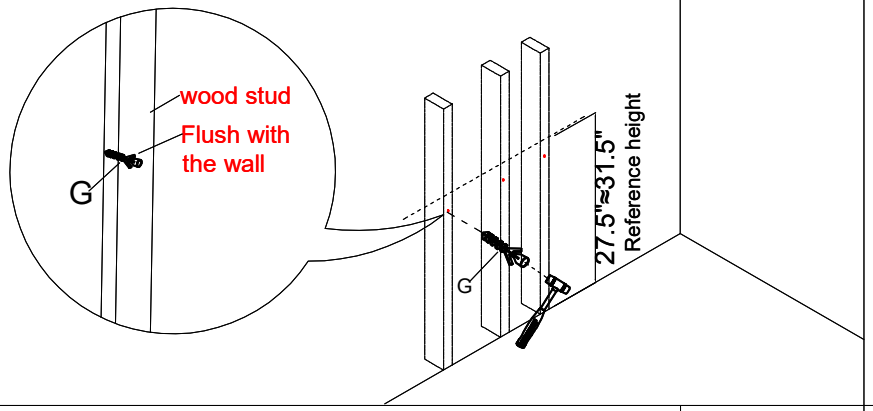


STEP 4：Install the **Wood cleat (B)** to the wood studs by screw driver.

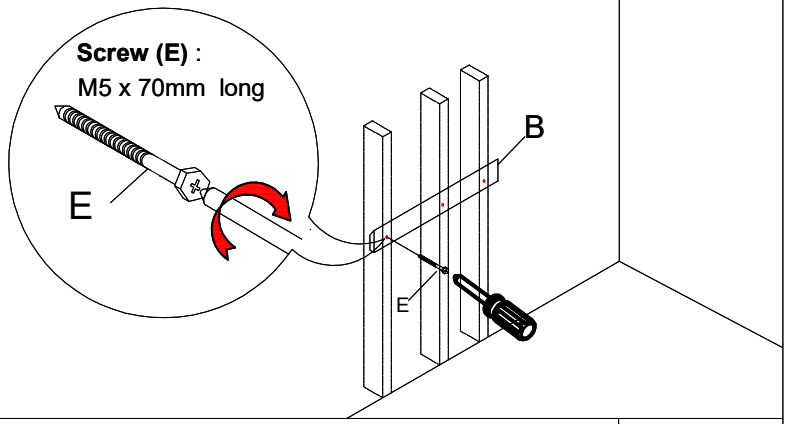


STEP 5：With help from another person, carefully hang the **Vanity (A)** onto the **Wood Cleat (B)**.

NOTE When installing the **Wood Cleat (B)** make sure the angle cut is facing the wall.

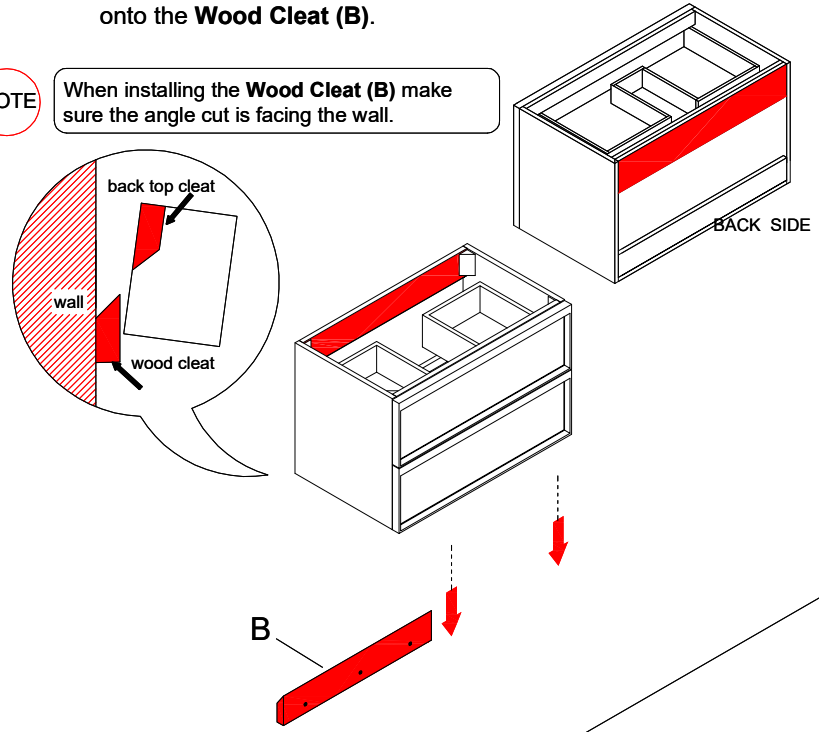

STEP 6：Using a pencil to mark the installation location for the **Metal Brackets (C)**.

NOTE Make sure the **Metal Brackets (C)** are installed on the wood studs.

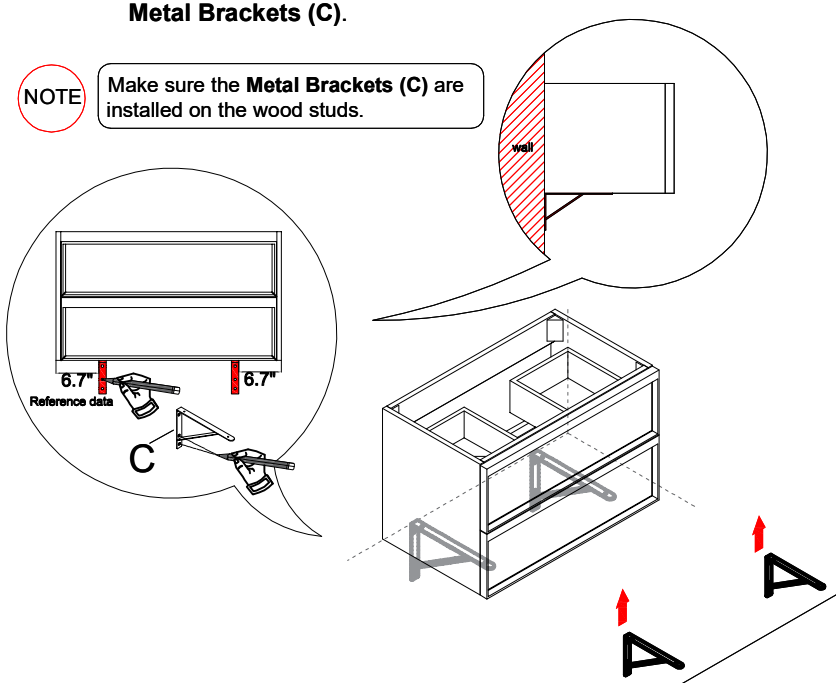


INSTALLATION INSTRUCTIONS

Confidentional： A

SKU:


PROHIBIT COPY

STEP 7：Carefully remove the **Vanity (A)** with the help from another person, and then drill the anchor holes according to the marks using a drill.

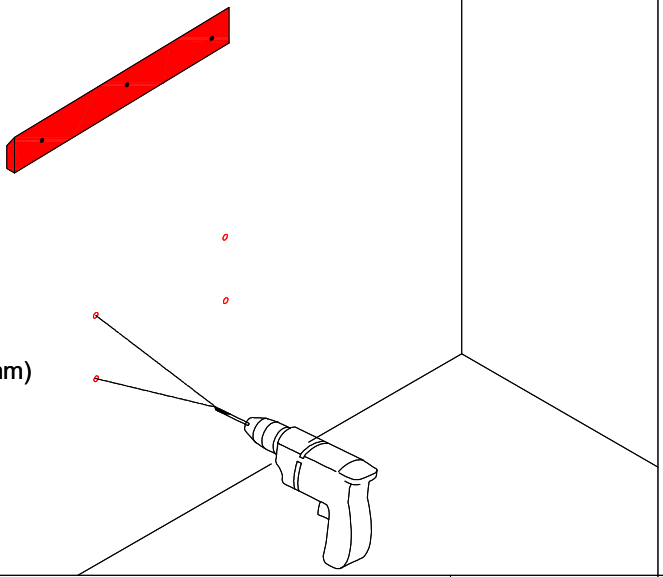


Anchor Hole
dia= Ø3/8"(8mm)
Depth=3.2"

STEP 8：Install the **Wall Anchors (G)** provided into the wall with hammer.

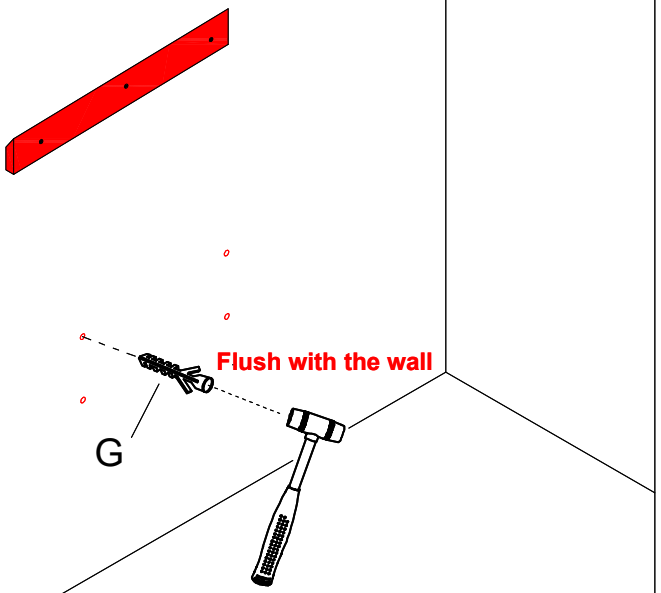


STEP 9：Install the **Metal Bracket (C)** to the wood studs by screw driver.

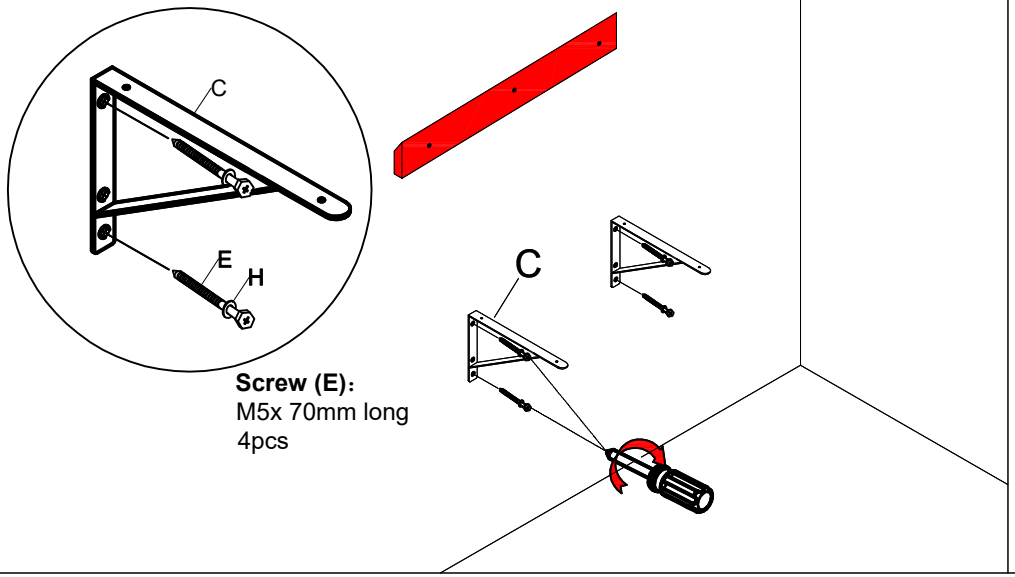

Screw (E):
M5x 70mm long
4pcs

STEP 10：Hang the **Vanity (A)** to the wall and then connect the **Vanity (A)** to the **Wood Cleat (B).**

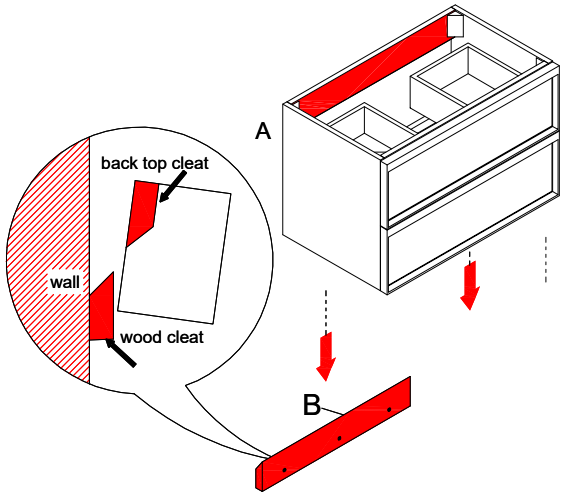


INSTALLATION INSTRUCTIONS

Confidentional： A


SKU:

PROHIBIT COPY


STEP 11： Connect the **Metal Bracket (C)** to the **Vanity (A)** with **Screws (F)**.

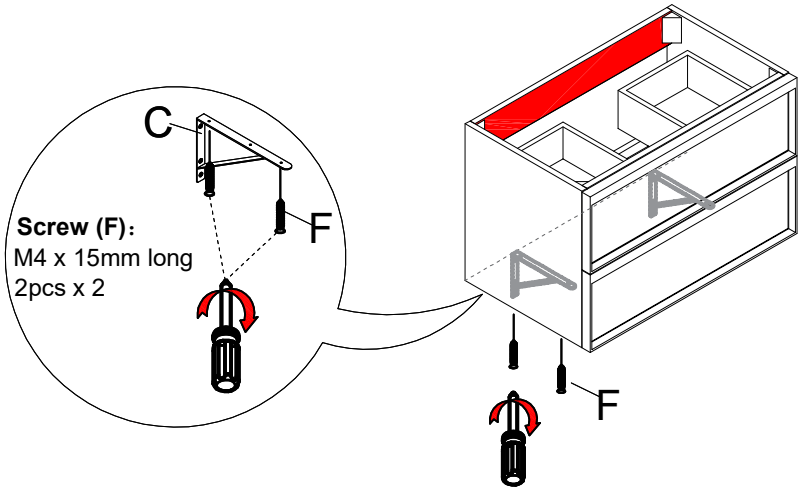

STEP 12： Install the handles (optional)

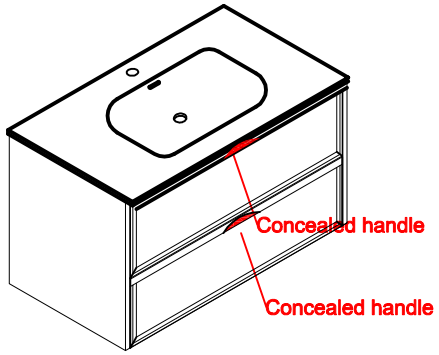


If you don't like handles, you don't have to install them.Keep them as they are

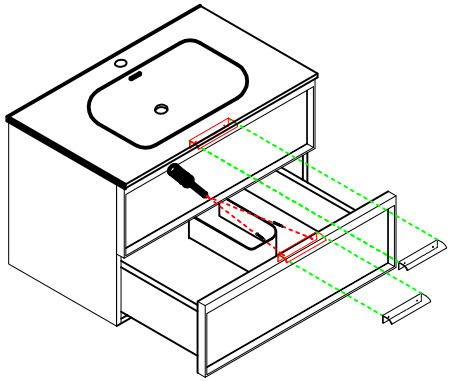

If you decide to install new handles, you can simply install them in the same way shown here.

STEP 13： Apply the silicon to the top of the **Vanity (A)** and then install the **Top (D)** onto the **Vanity (A)** with the help from another person.

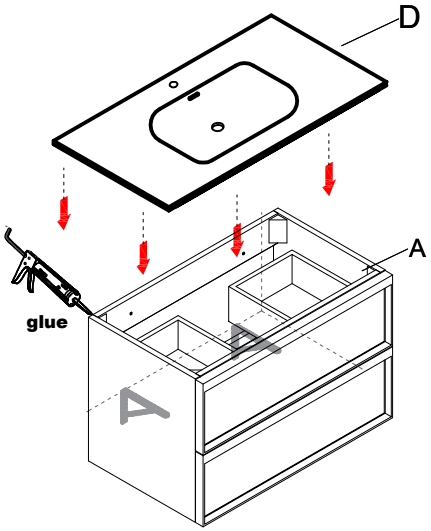

STEP 14： Install the Backsplash and Let the vanity sit for 24 hours before use.

