









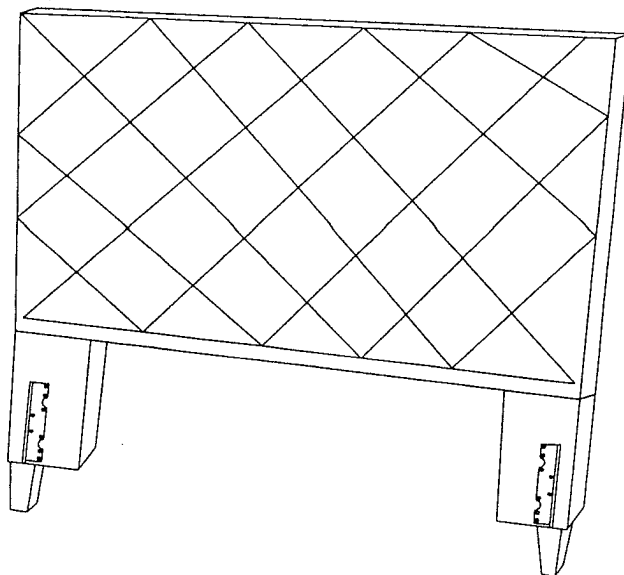
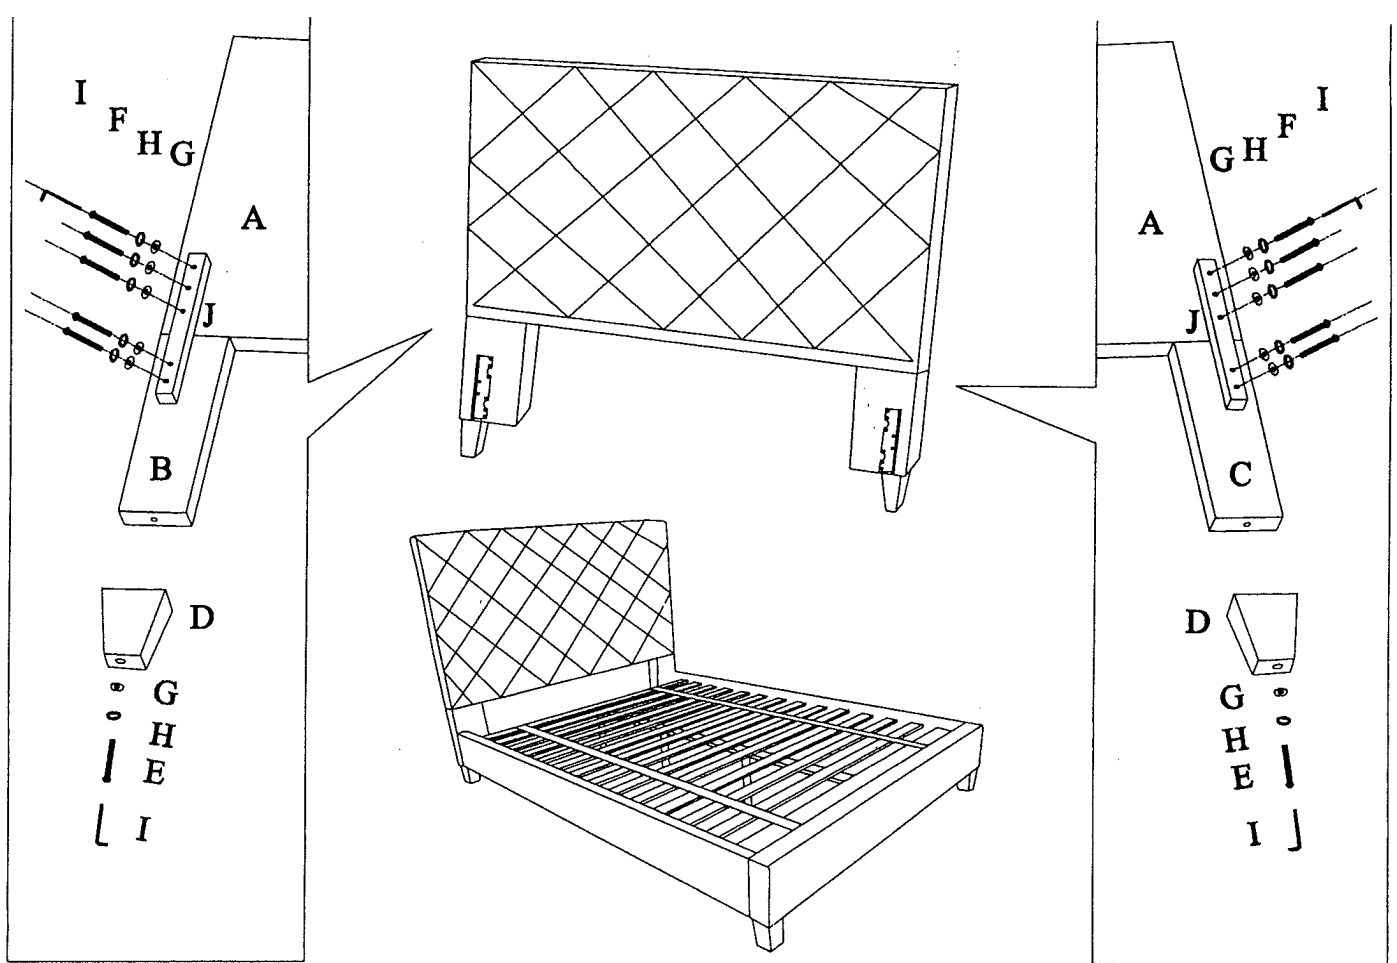


ASSEMBLY INSTRUCTION

- (3A)-HB (1/2) FULL TUFTED HEADBOARD, TAUPE VELVET
- (3A)-HB (1/2) QUEEN TUFTED HEADBOARD, TAUPE VELVET
- (3A)-HB (1/2) E. KING TUFTED HEADBOARD, TAUPE VELVET
- (3A)-HB (1/2) FULL TUFTED HEADBOARD, WHITE PU
- (3A)-HB (1/2) QUEEN TUFTED HEADBOARD, WHITE PU
- (3A)-HB (1/2) E. KING TUFTED HEADBOARD, WHITE PU
- (3A)-HB (1/2) FULL TUFTED HEADBOARD, DARK BROWN PU
- (3A)-HB (1/2) QUEEN TUFTED HEADBOARD, DARK BROWN PU
- (3A)-HB (1/2) E. KING TUFTED HEADBOARD, DARK DARK BROWN PU
- (3A)-HB (1/2) FULL TUFTED HEADBOARD, BEIGE LINEN
- (3A)-HB (1/2) QUEEN TUFTED HEADBOARD, BEIGE LINEN
- (3A)-HB (1/2) E. KING TUFTED HEADBOARD, BEIGE LINEN

A 	B 	C 	D 	E  1/4"*75MM	F  1/4"*65MM
1PC	1PC	1PC	2PCS	2PCS	10PCS
G 	H 	I 	J 		
12PCS	12PCS	1PC	2PCS		





Step 1: Attached left Wooden Frame(B) and right Wooden Frame(C) to the Headboard(A) use Bolt(F), Lock Washer(H) and Flat Washer(G) on holes of Slates(J). Turn the Allen Wrench(I) in Bolt(F).

Attached Wooden Leg(D) to the Wooden Frame(B) (C) use Bolt(E), Lock Washer(H) and Flat Washer(G) on both of holes. Turn the Allen Wrench(I) in Bolt(E).

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

c l e a n i n g & c a r e Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.