Installation & Assembly



IMPORTANT INFORMATION
READ CAREFULLY.
KEEP THIS INFORMATION FOR FURTHER REFERENCE.

GENERAL GUIDELINES

Please read the following instruction carefully and use the product accordingly.
Please keep this manual and hand it over when you transfer the product.
This summary may not include every detail of all variations and considered steps.
Please contact us when further information and help are needed.



NOTES

Please follow the assembly instructions precisely and only use the product as intended.

If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.Please follow the assembly instructions precisely and only use the product as intended.

Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur;
Please contact us for assistance and replacement.

It is suggested you regularly check the products bolts and connections to ensure safe use.

Assemble the item on a soft flat and clean surface to avoid scratches and damage.


It is recommended that two people assemble this product.During assembly, please only slightly tighten all screws in their correct position first, then fully tighten them. A Philips screwdriver is recommended but not included.

WARNINGS

During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.


Avoid sharp objects or corrosive chemicals to prevent damage to the product.

Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.

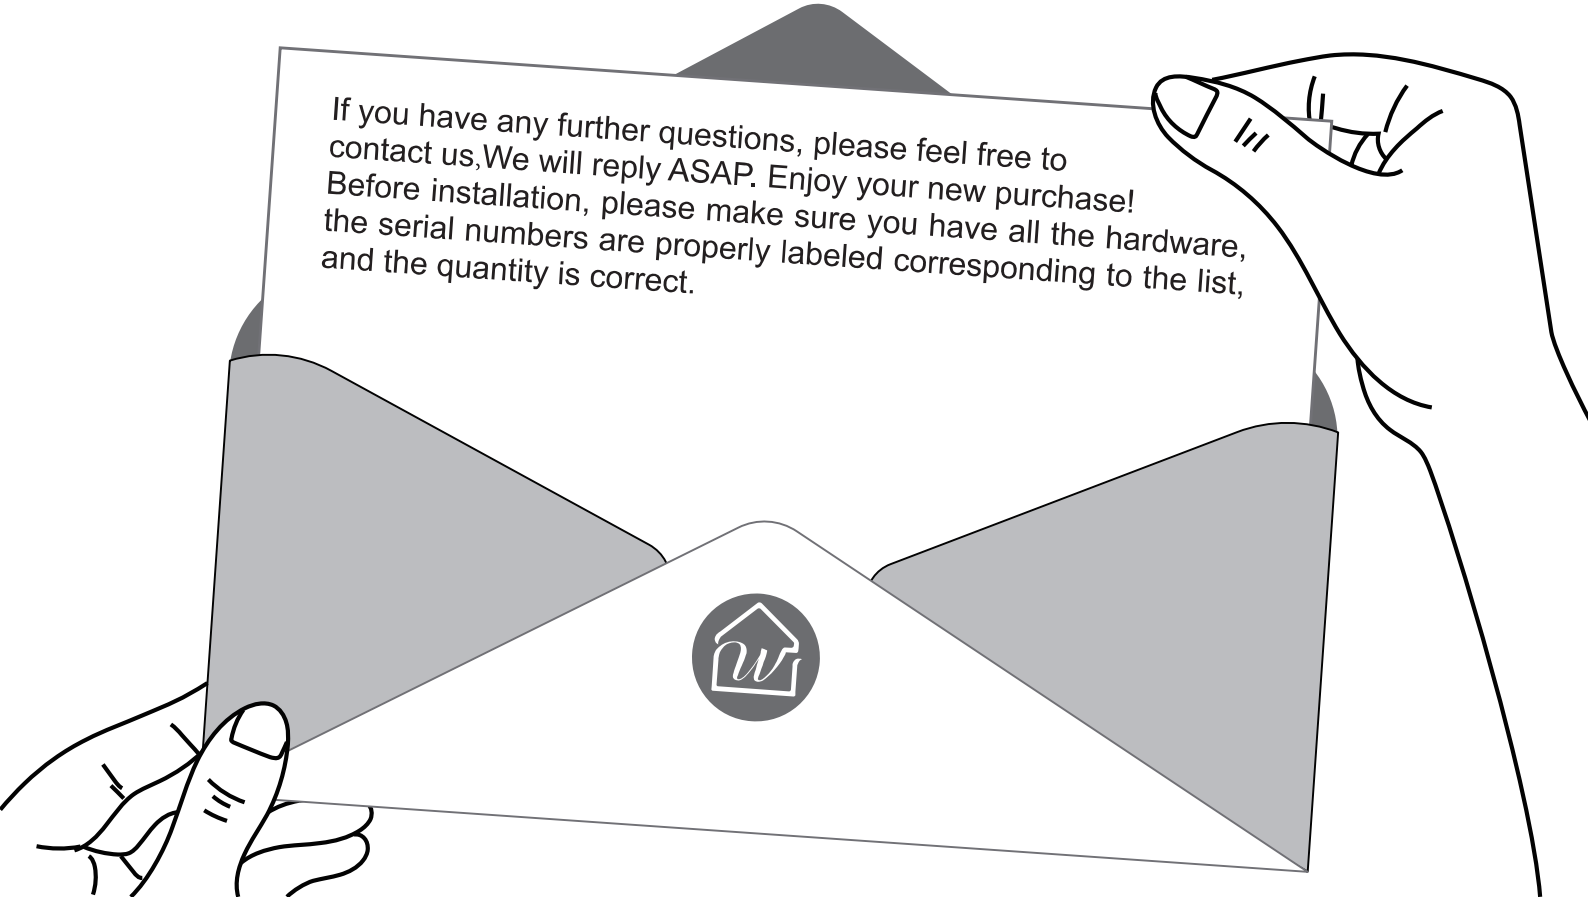


INSTRUCTIONS


❶

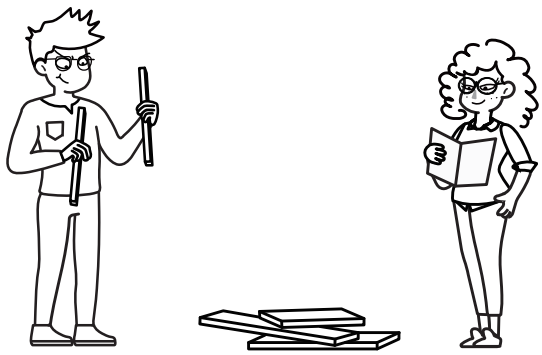

❷

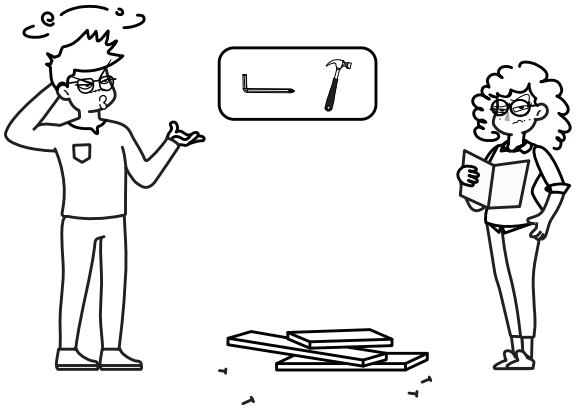


❸

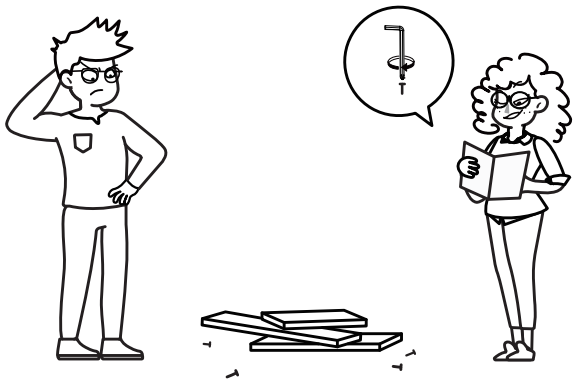

❹




❺

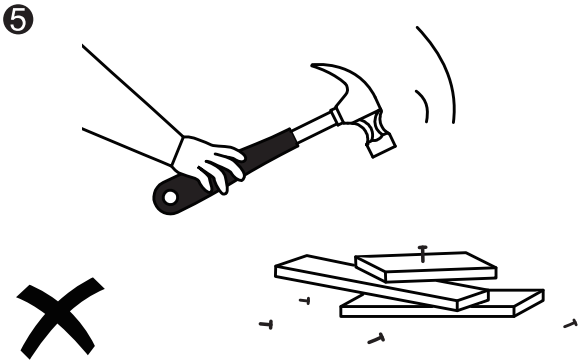





❻

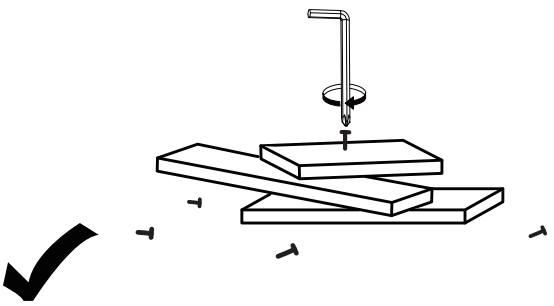



EXPLODED DRAWING

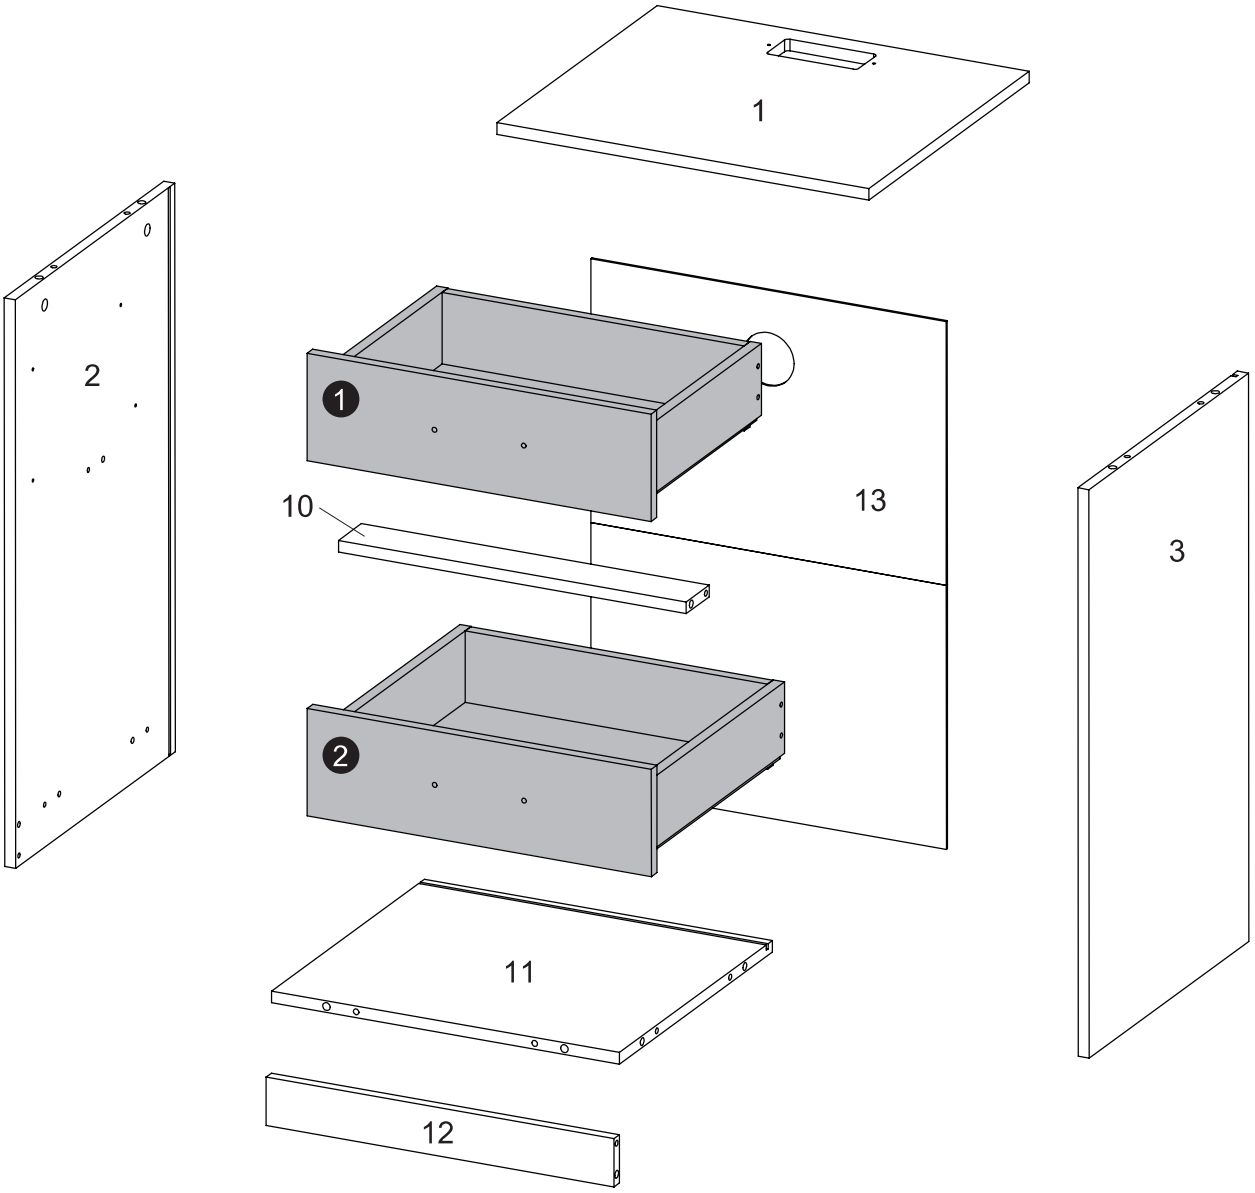

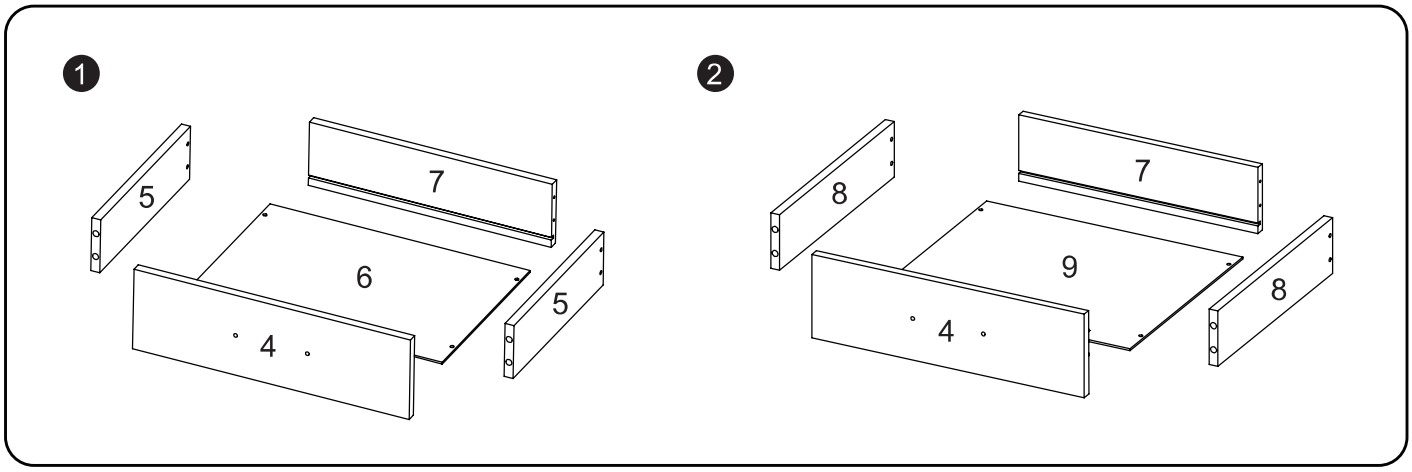

×2

PARTS

A X44




B X28




C X44



D X2
250

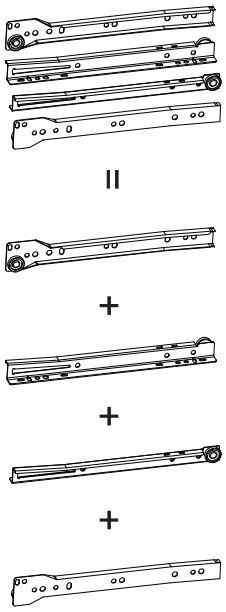


D X2
300

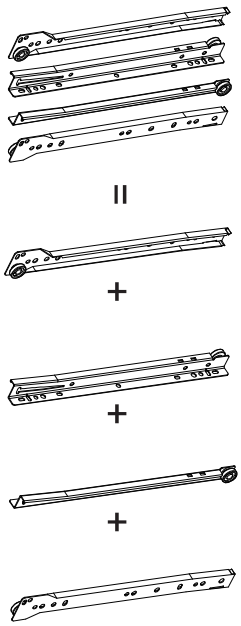


E X16
M4x30



F X36
M4x11




G X8
M4x14




H X8
M4x16



I X1



J X2

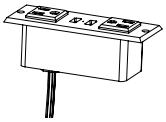


K X16




L X4




M X8



REMARK

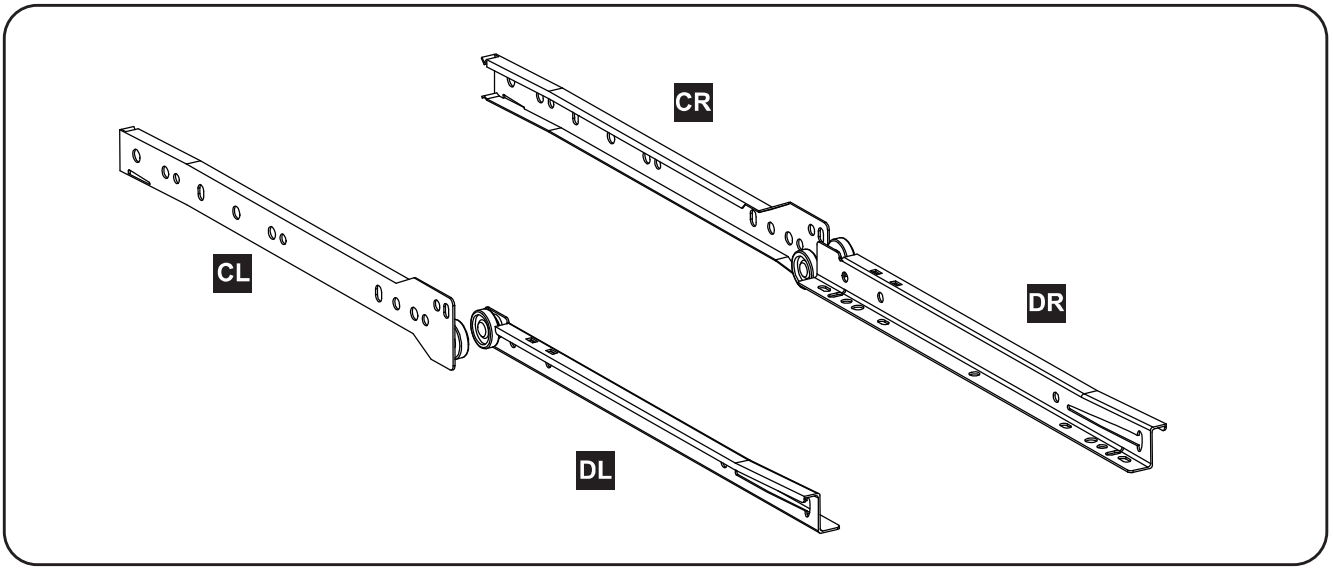


MINIFIX POSITION

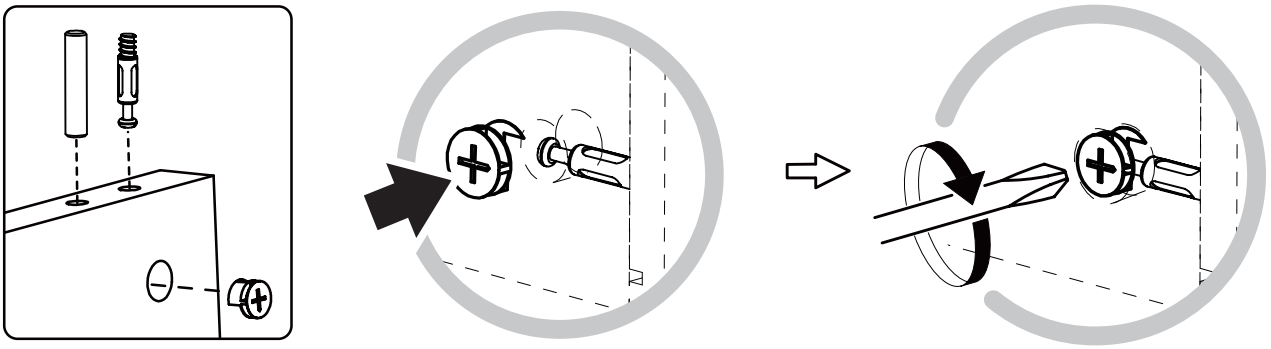



THESE SET OF 2 PRODUCTS ARE EXACTLY THE SAME, THE FOLLOWING INSTRUCTION SHOWS ONLY THE INSTALLATION METHOD OF SINGLE-PIECE PRODUCT.


Step 1

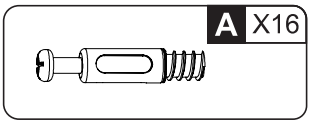

1. Put a blanket under the product to avoid scratch or damage.
2. Please do not screw **A** too deep or too shallow.

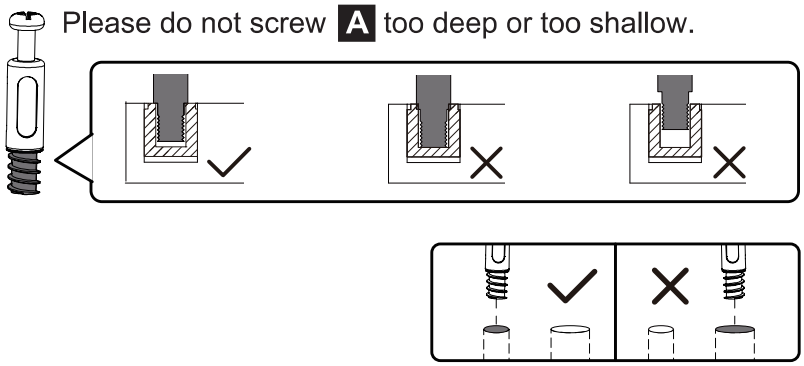


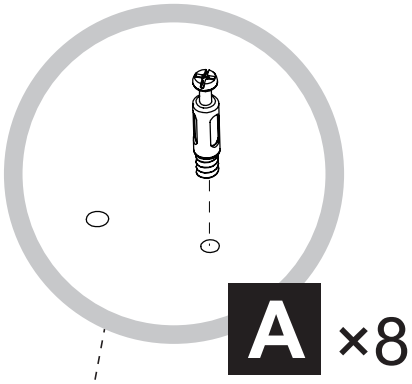


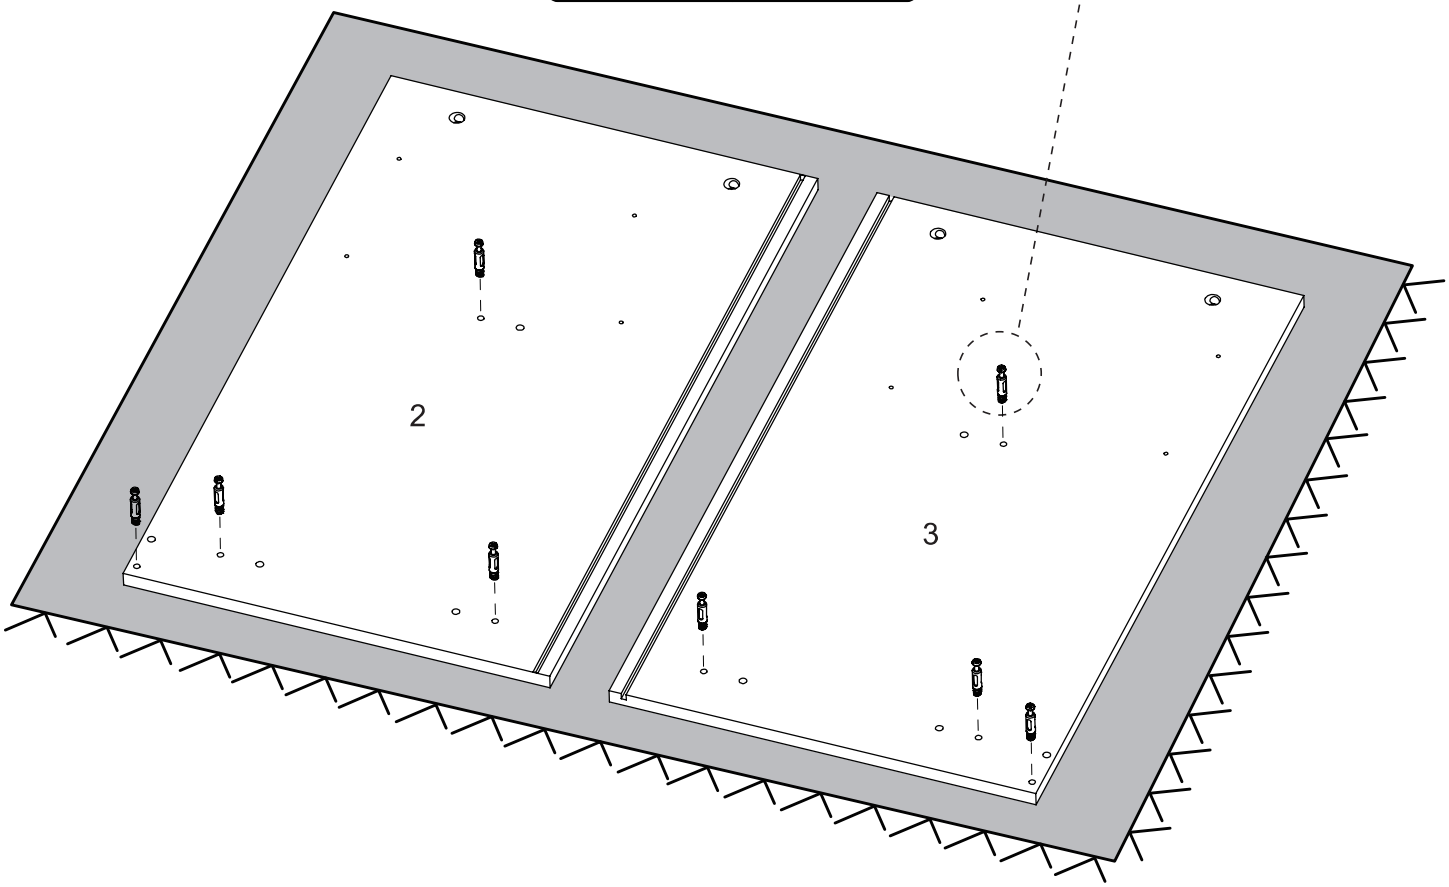

×2


Step 2

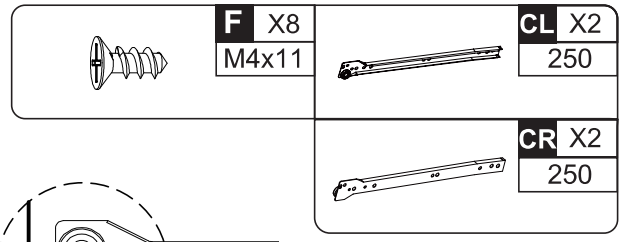


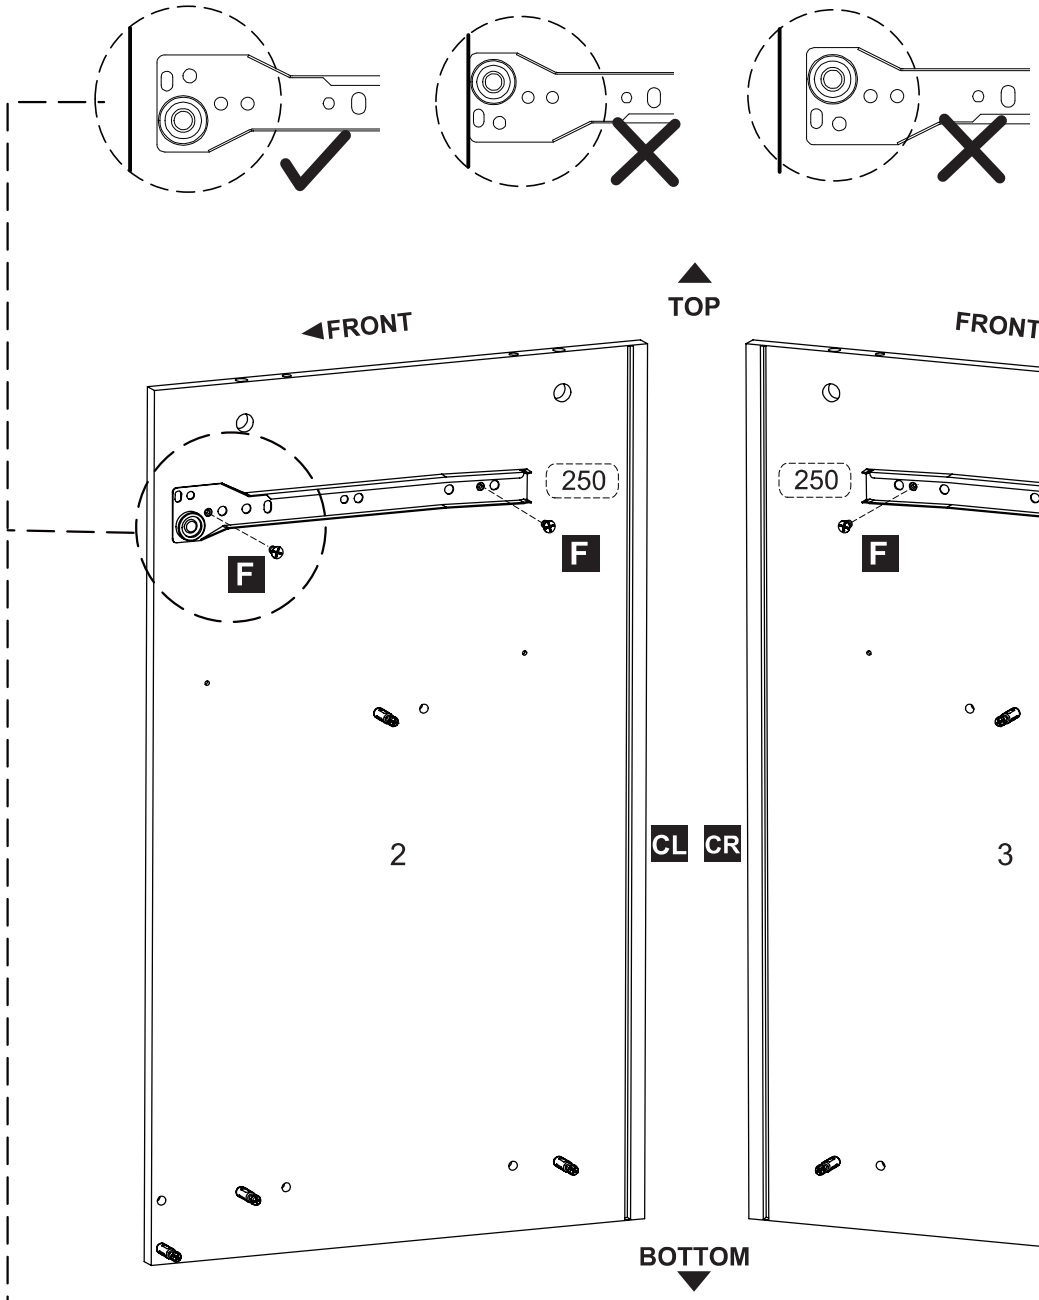


×2


When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.

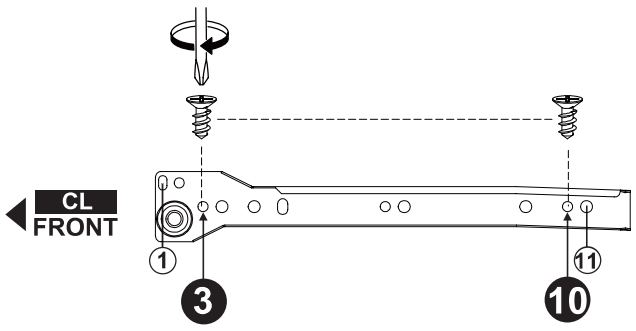


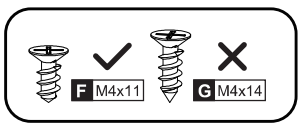


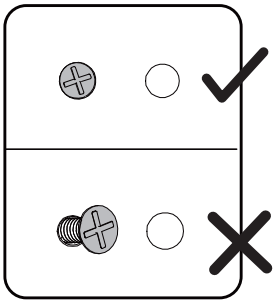

Step 3

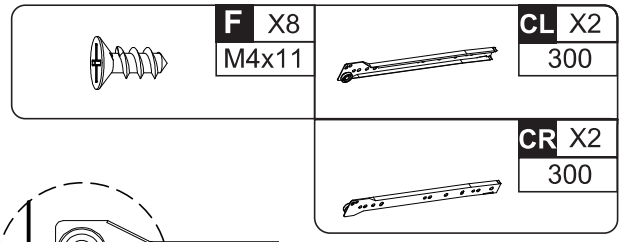


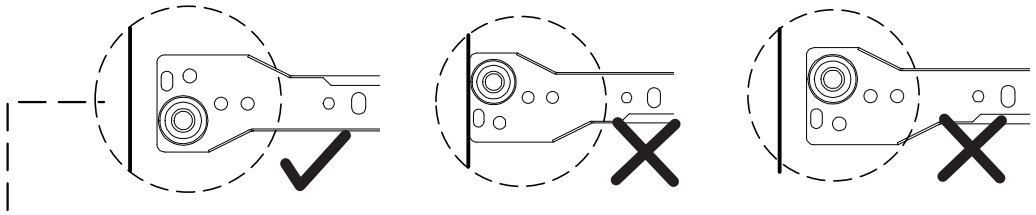

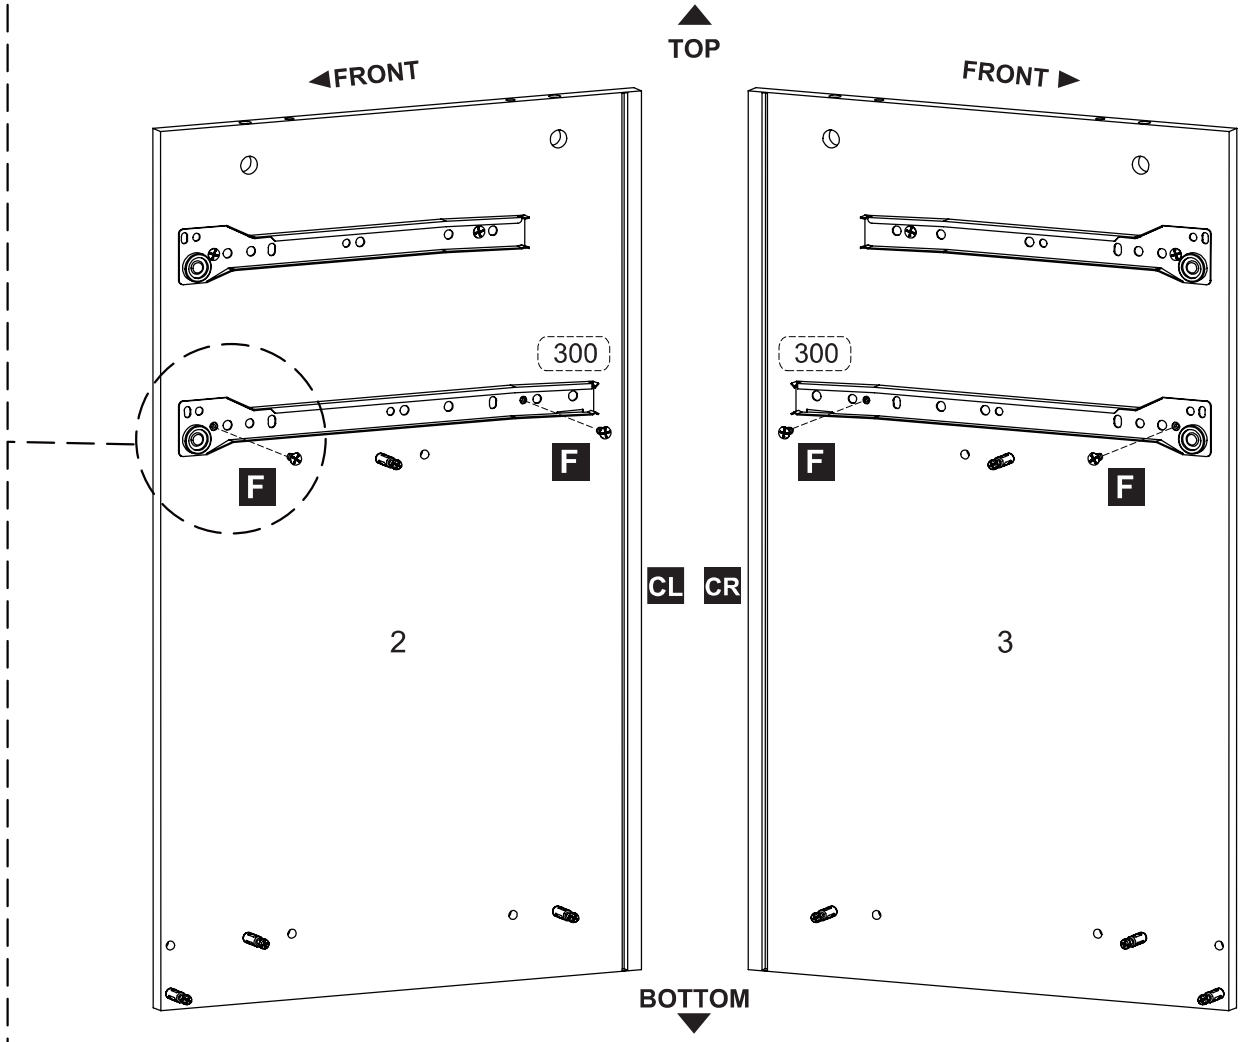



×2

When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.

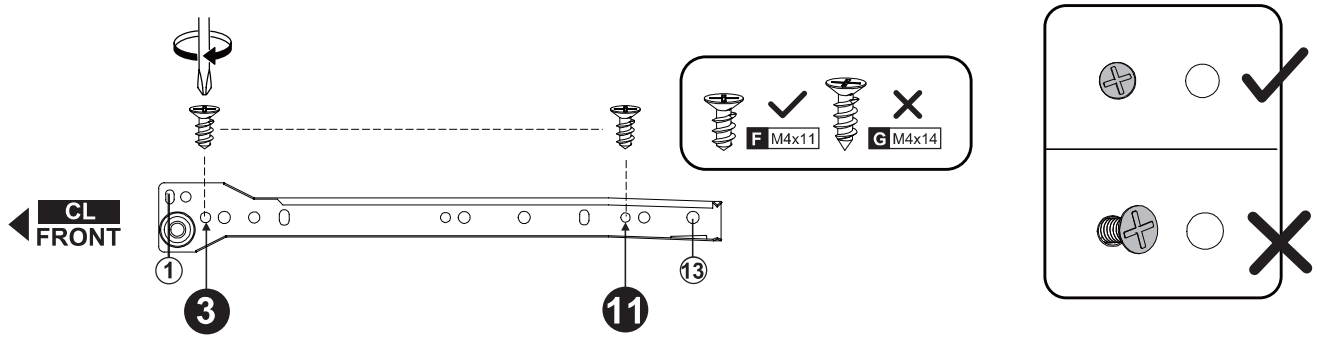


Step 4

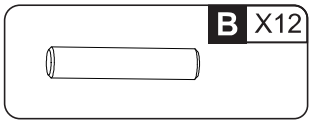


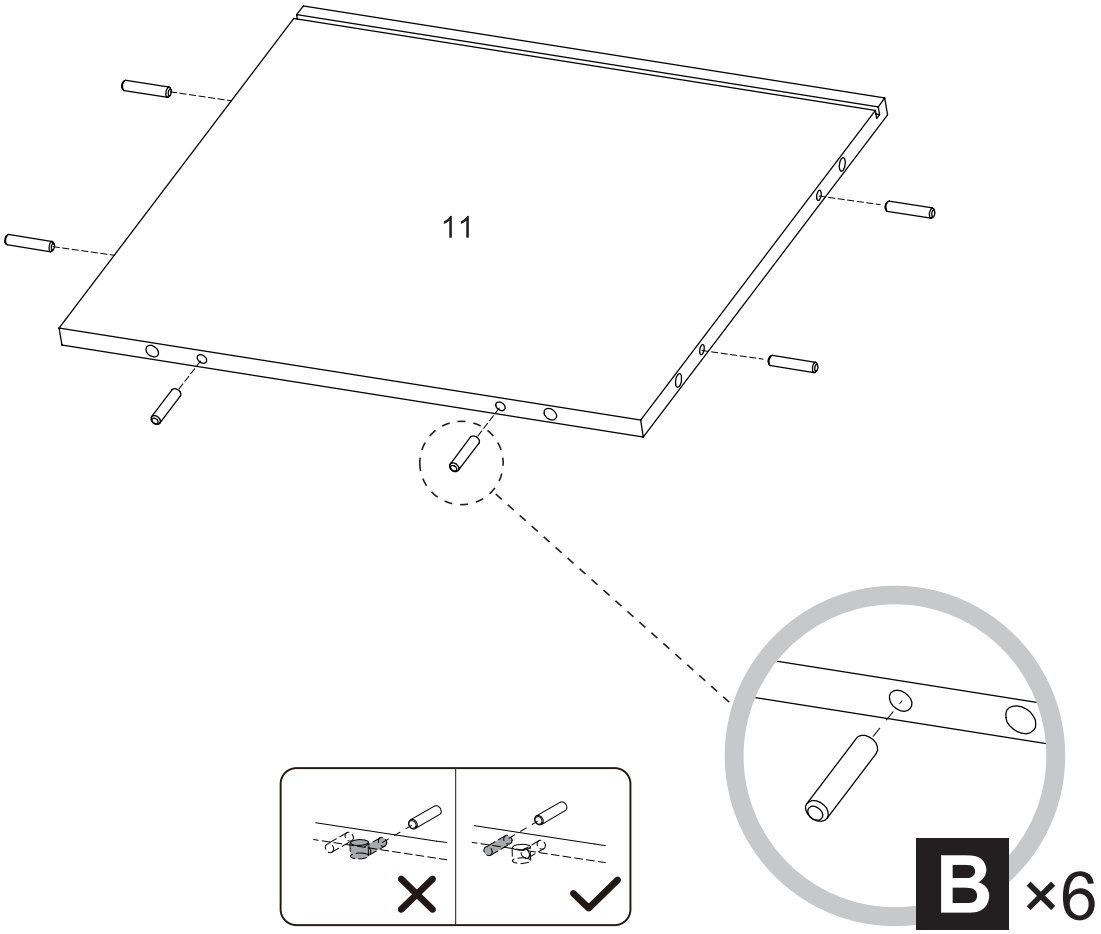


×2

Step 5

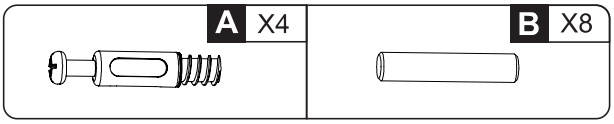


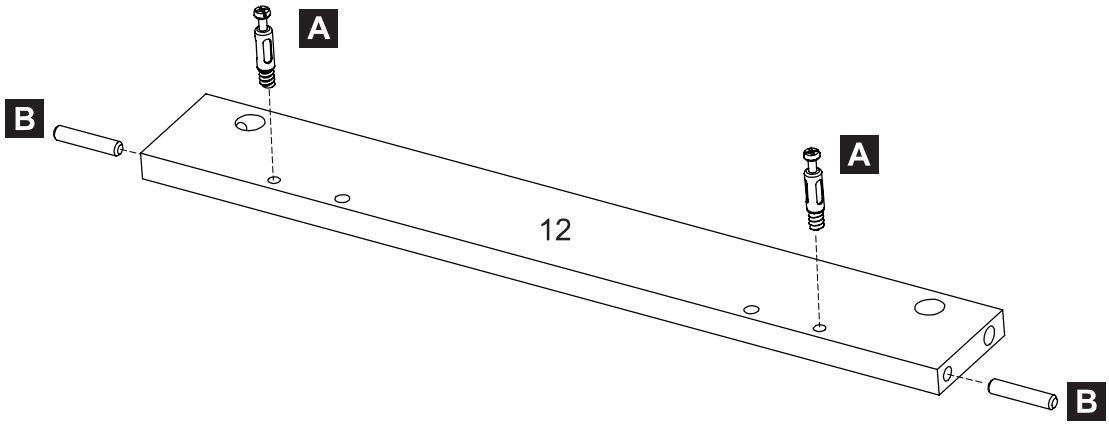


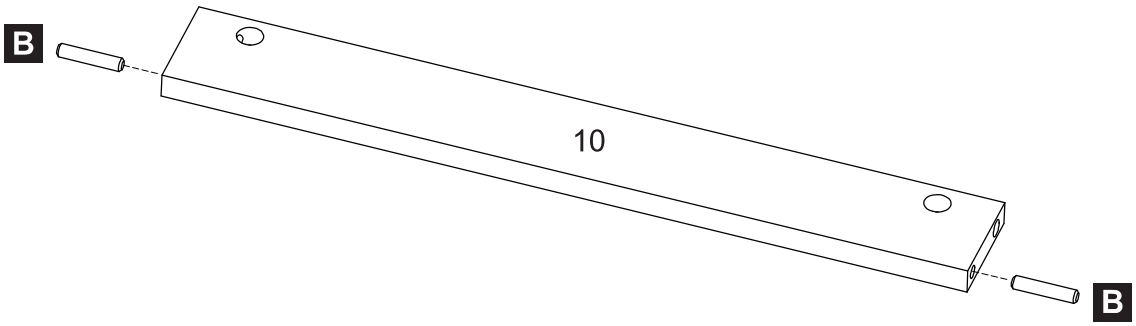



×2


Step 6

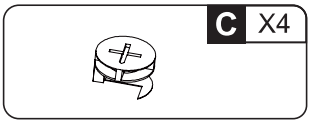

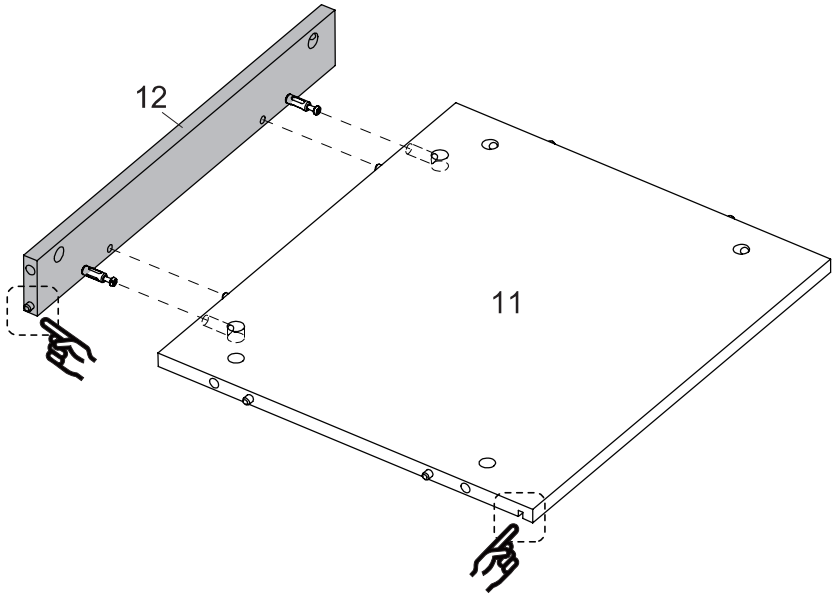

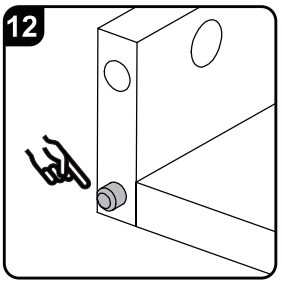

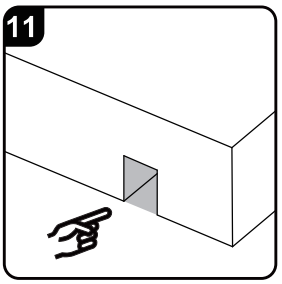


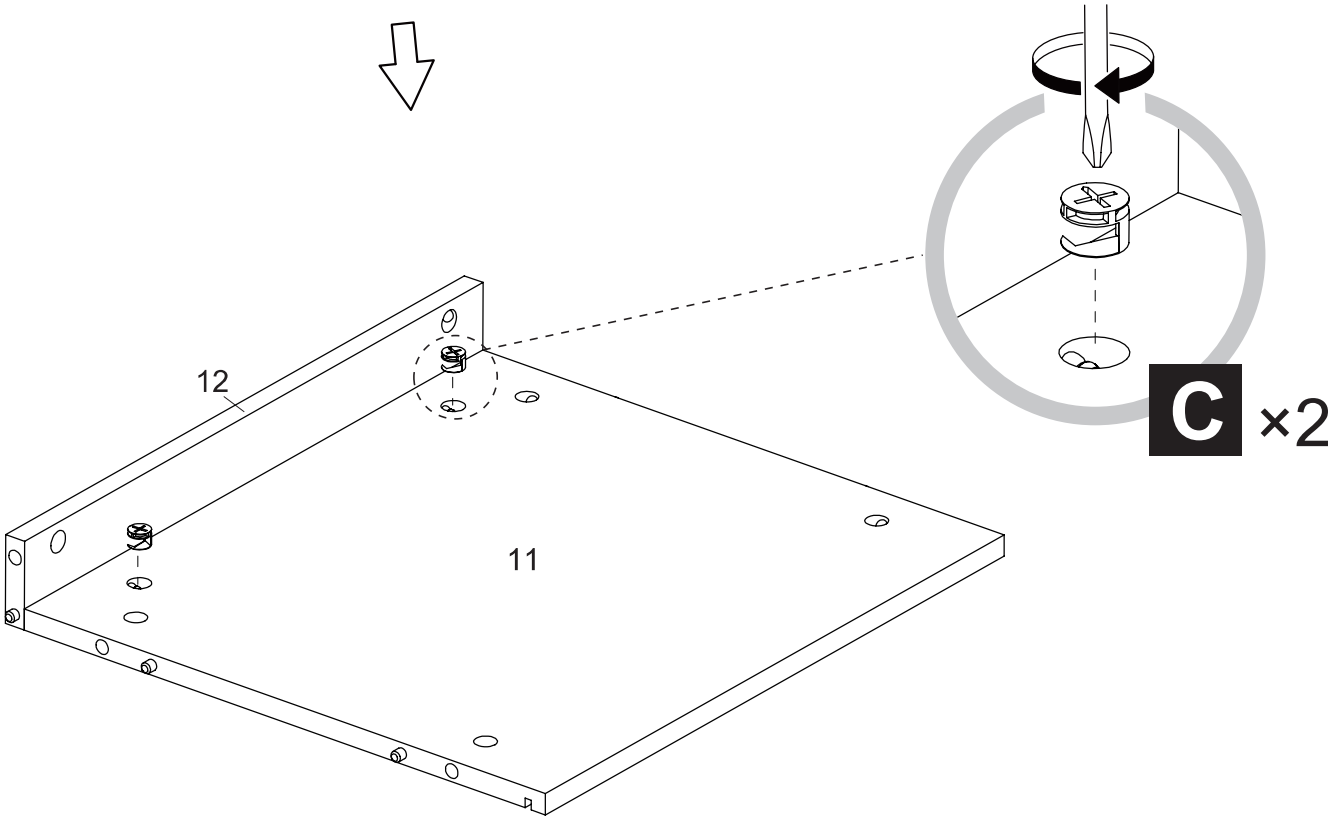


×2

Step 7

C X8

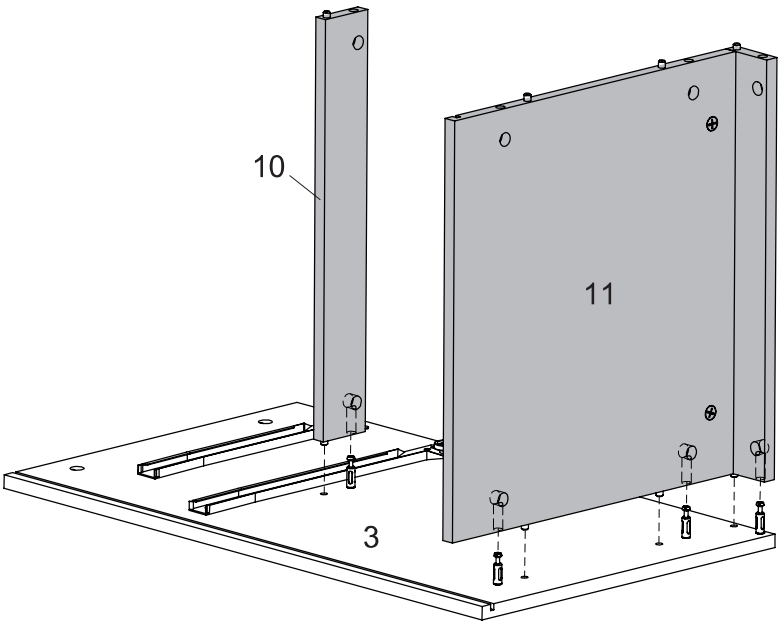


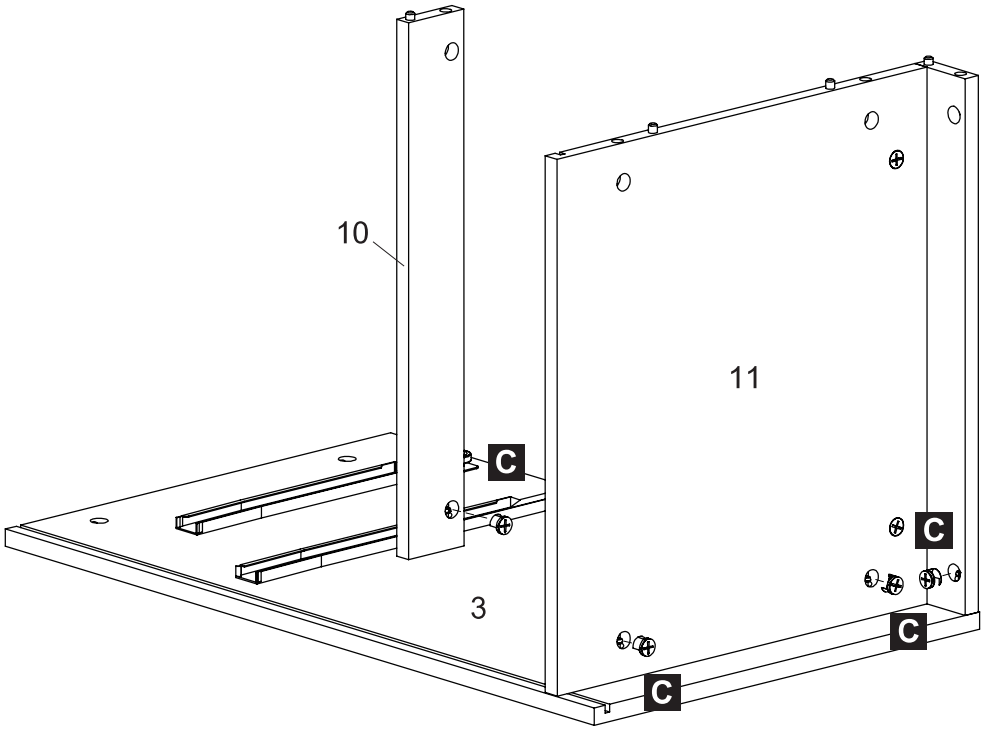


×2

Step 8


C X8

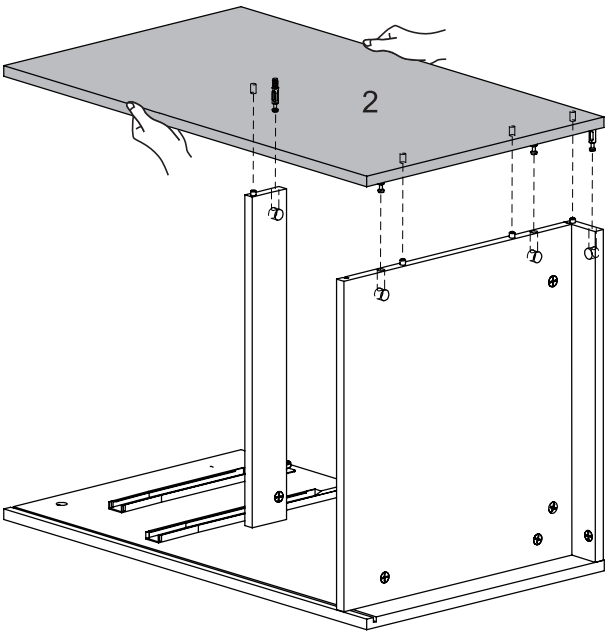


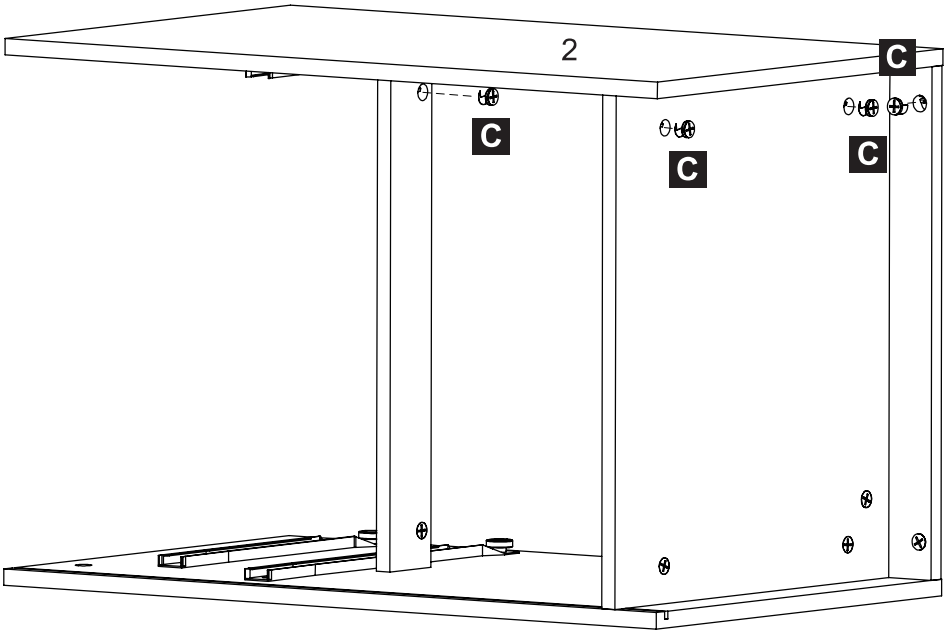

×2


Step 9

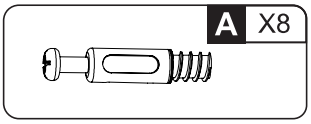


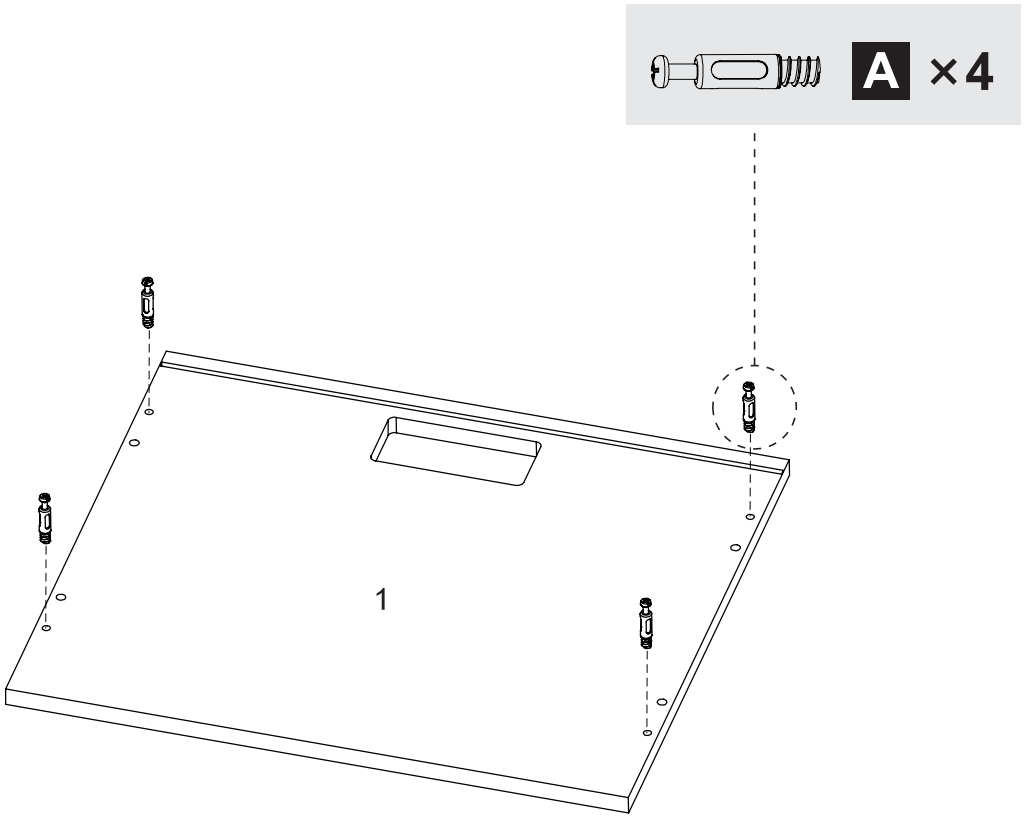

×2


Step 10

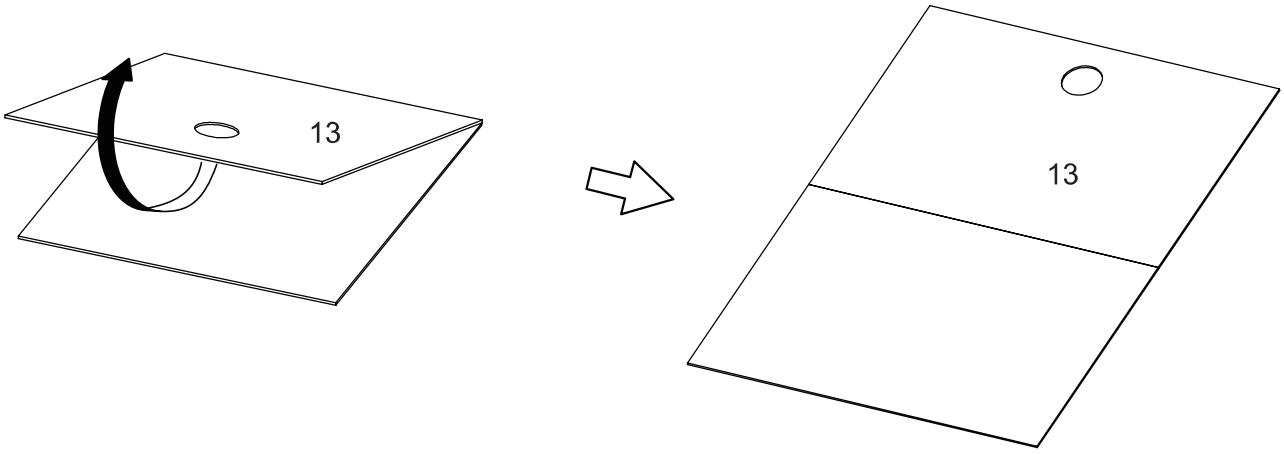


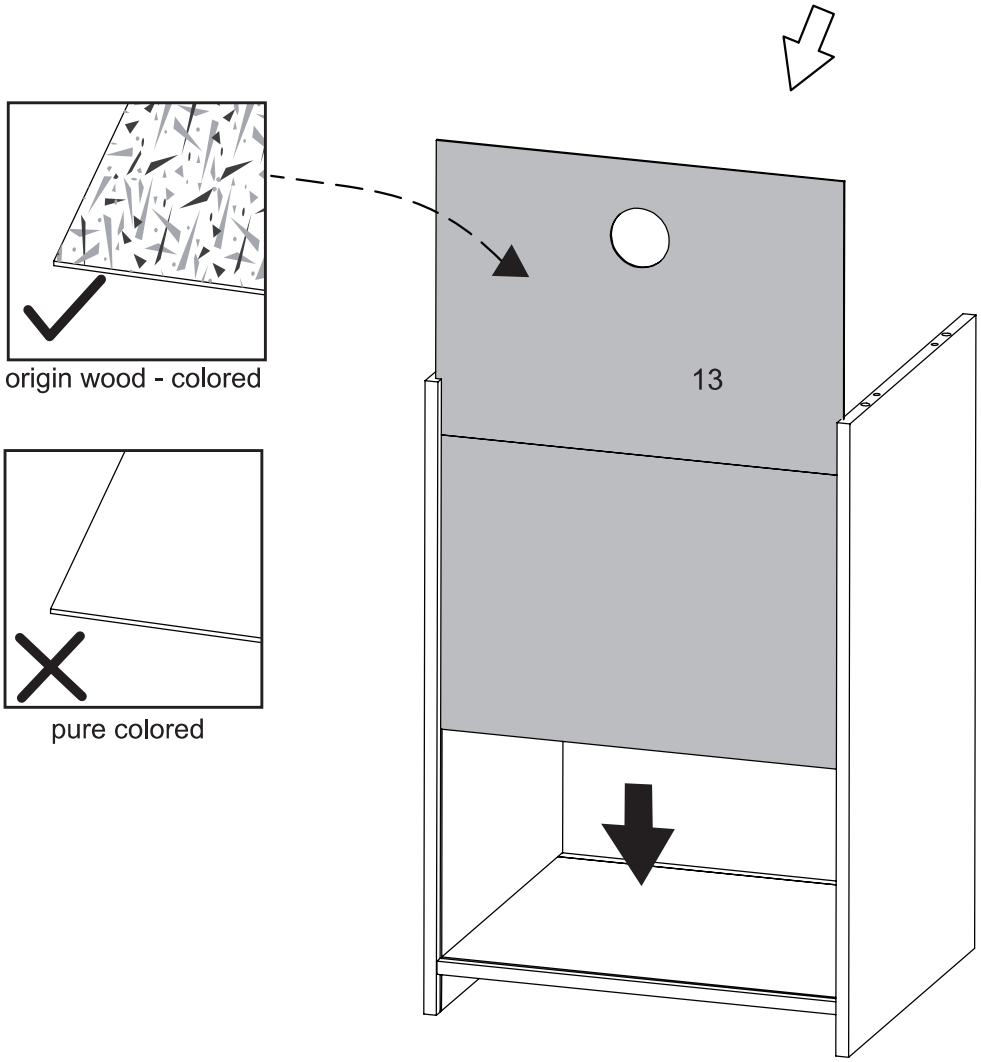

×2

Step 11

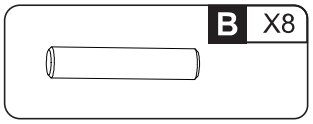


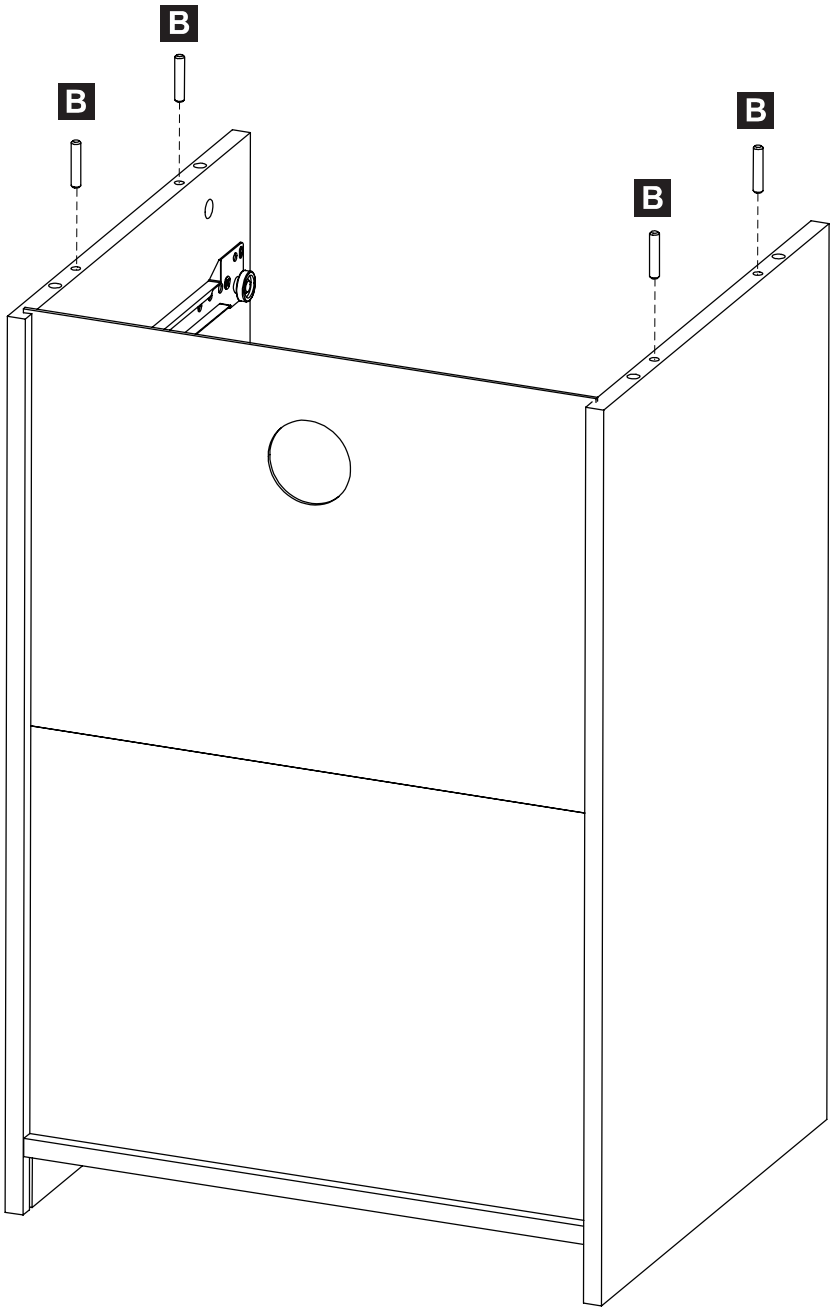


×2

Step 12


C X8

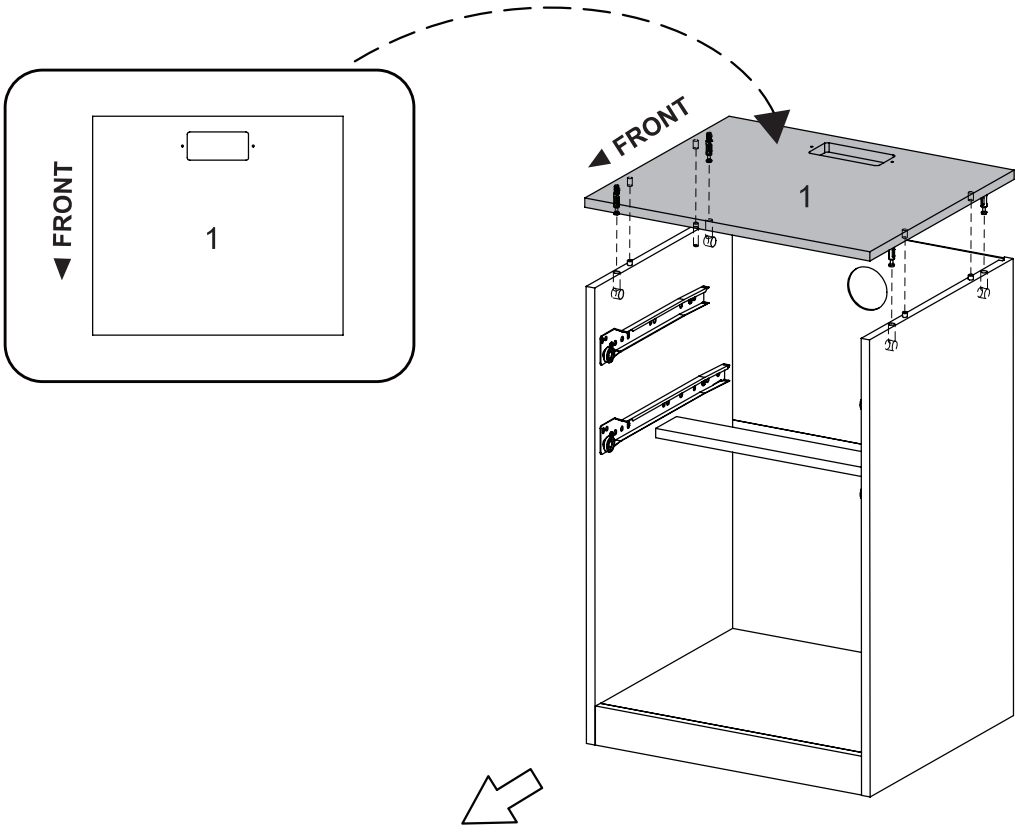


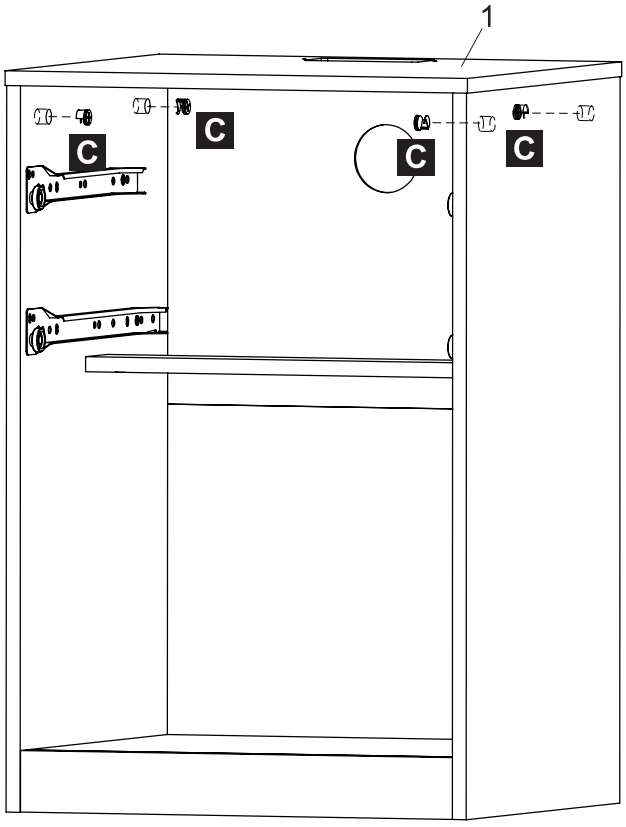



×2


Step 13

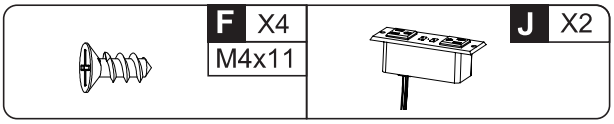

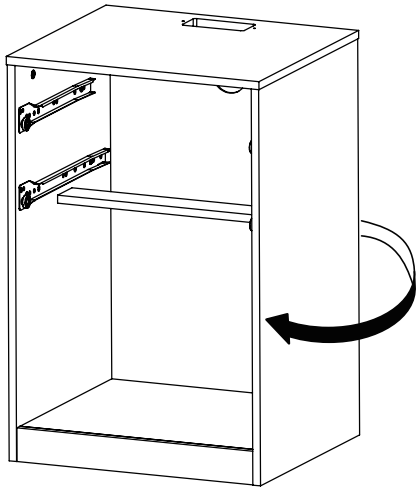

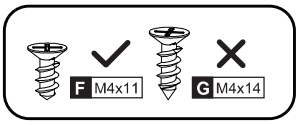


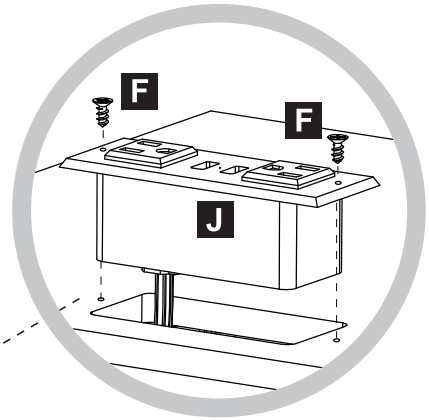


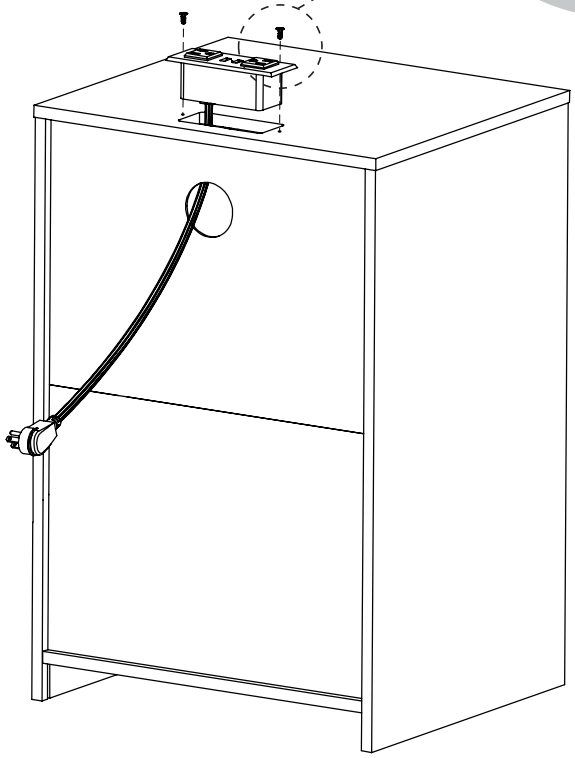



×2


Step 14

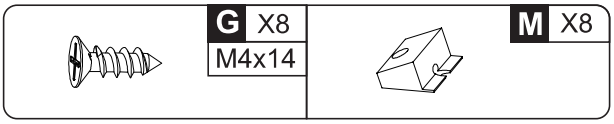

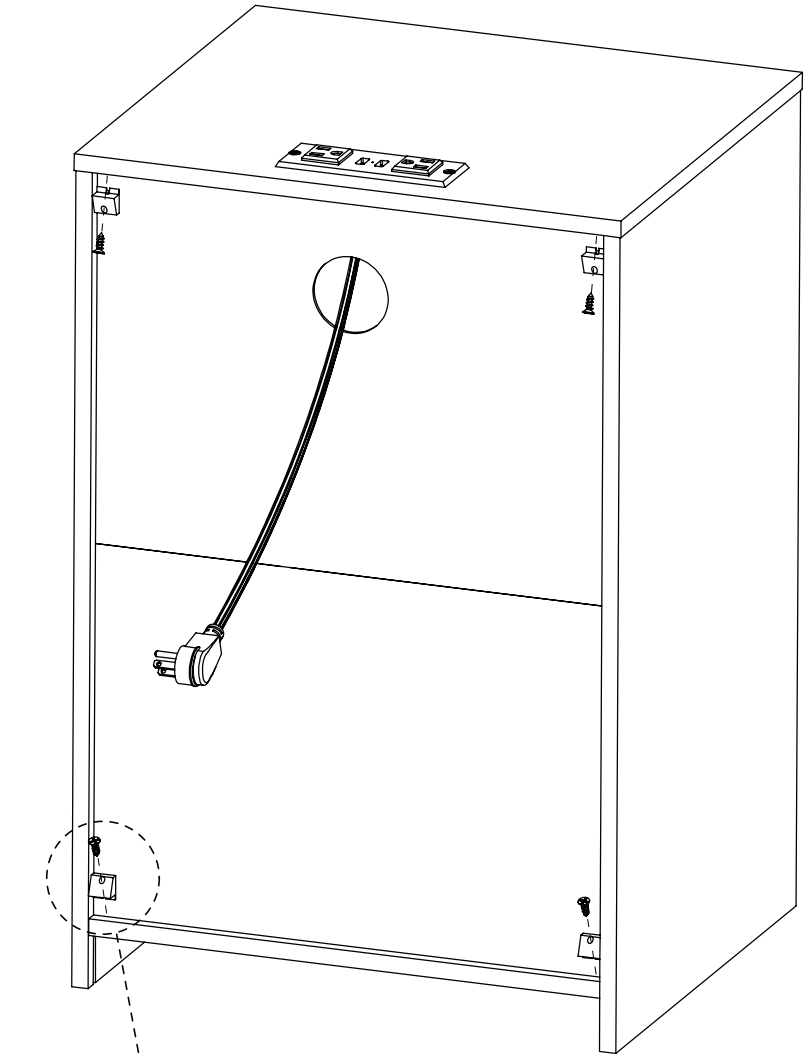

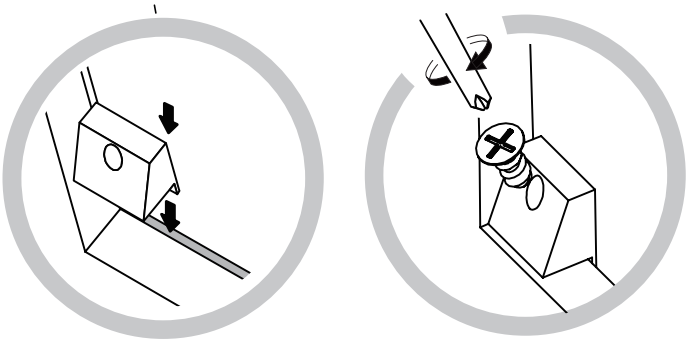


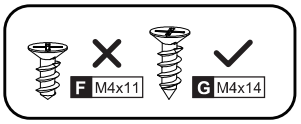


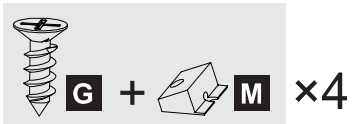

×2


Step 15

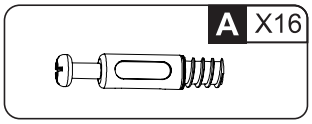


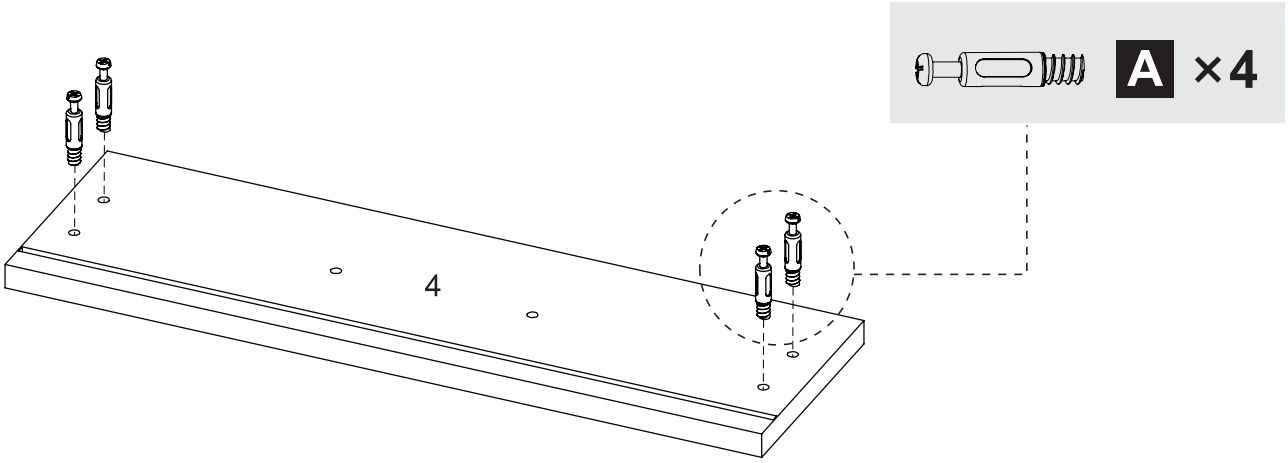



×4

Step 16

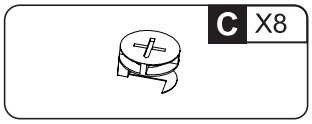


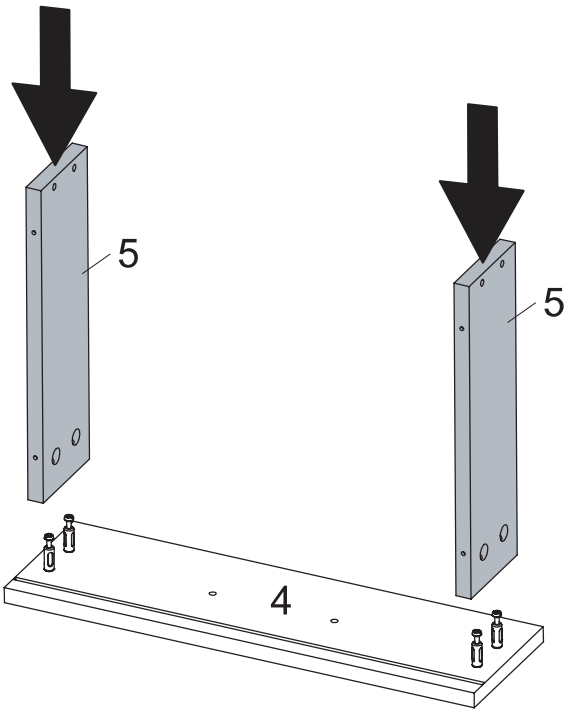


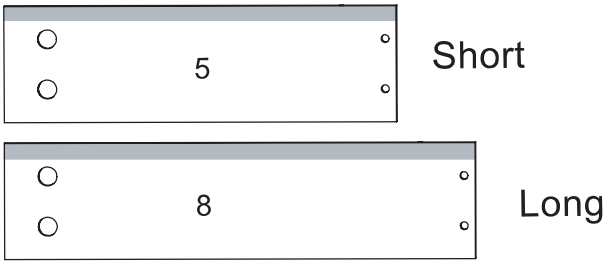

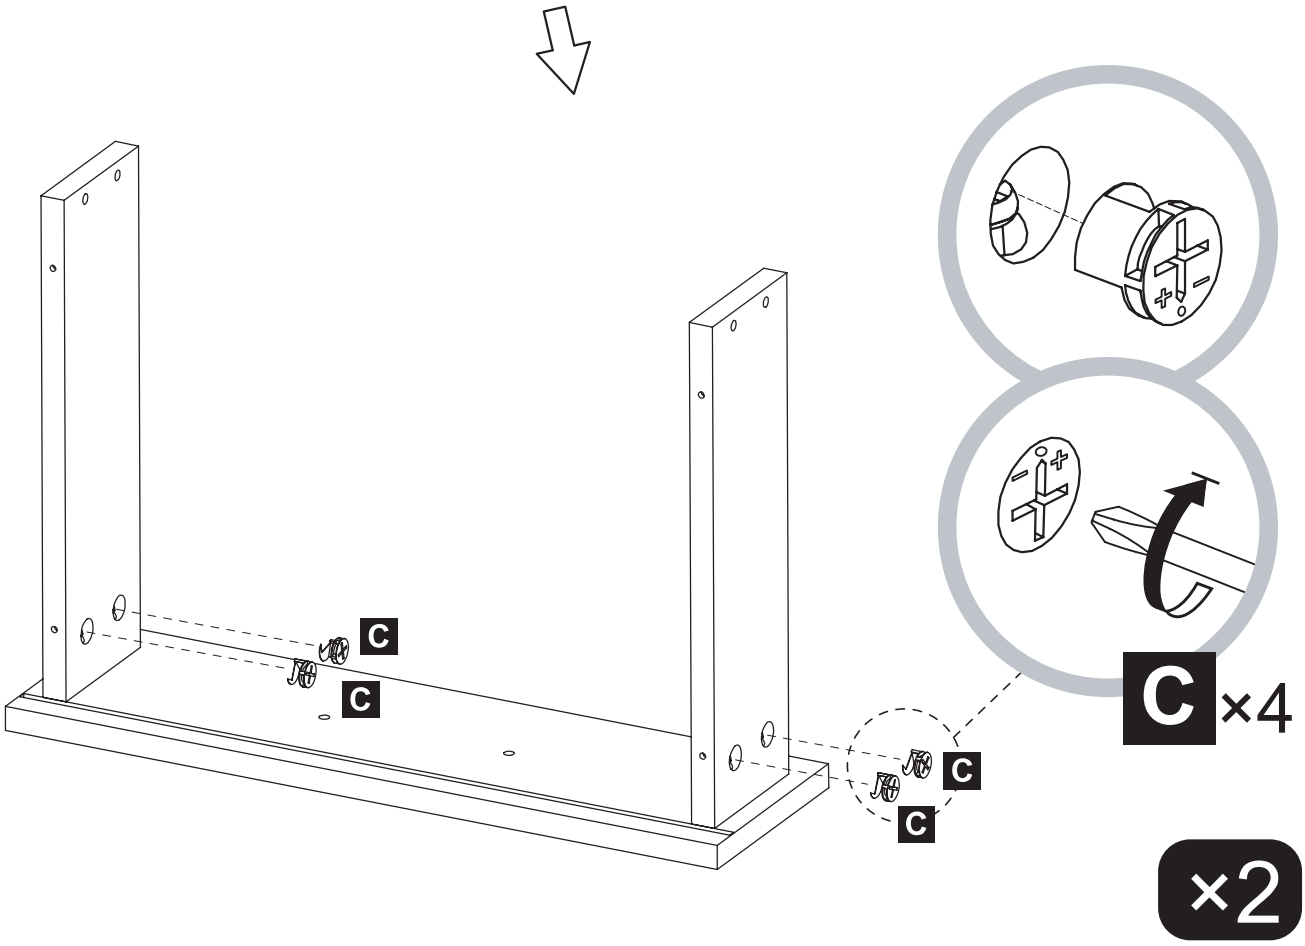


Step 17

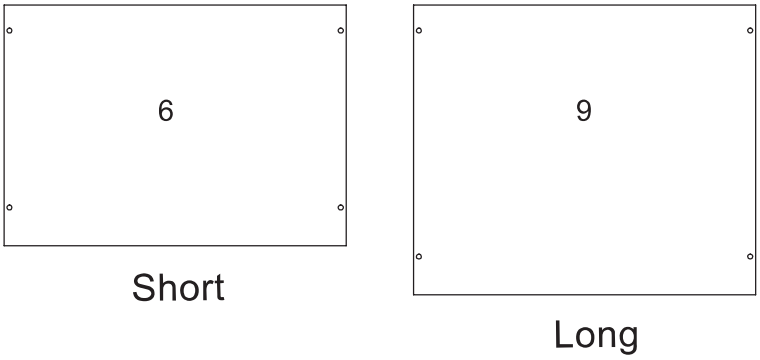

6
9
Short
Long

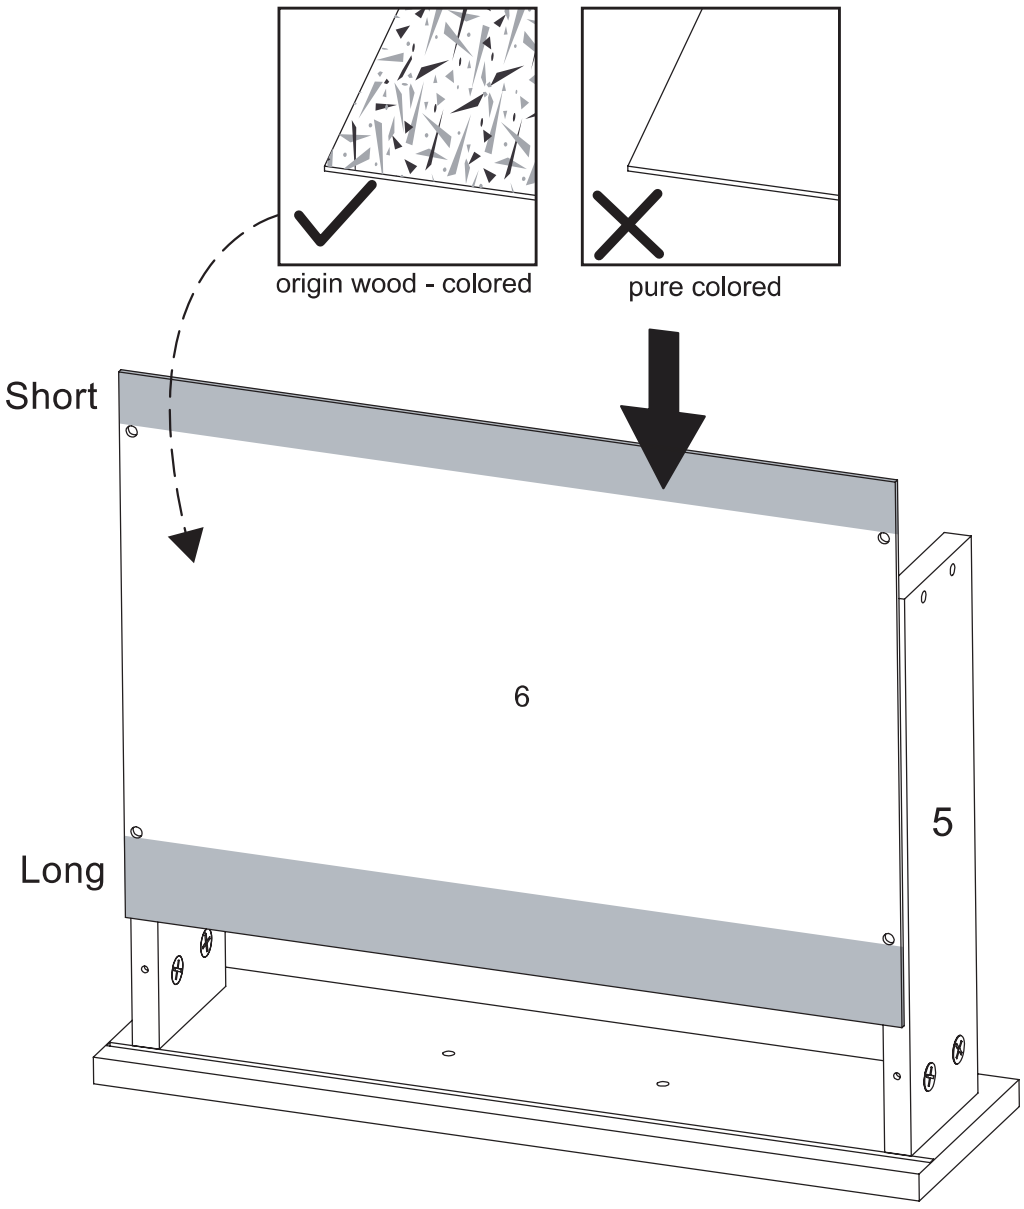
origin wood - colored
pure colored
Short
6
5
Long


×2

Step 18

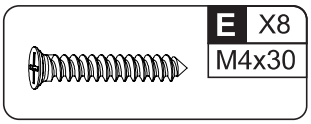

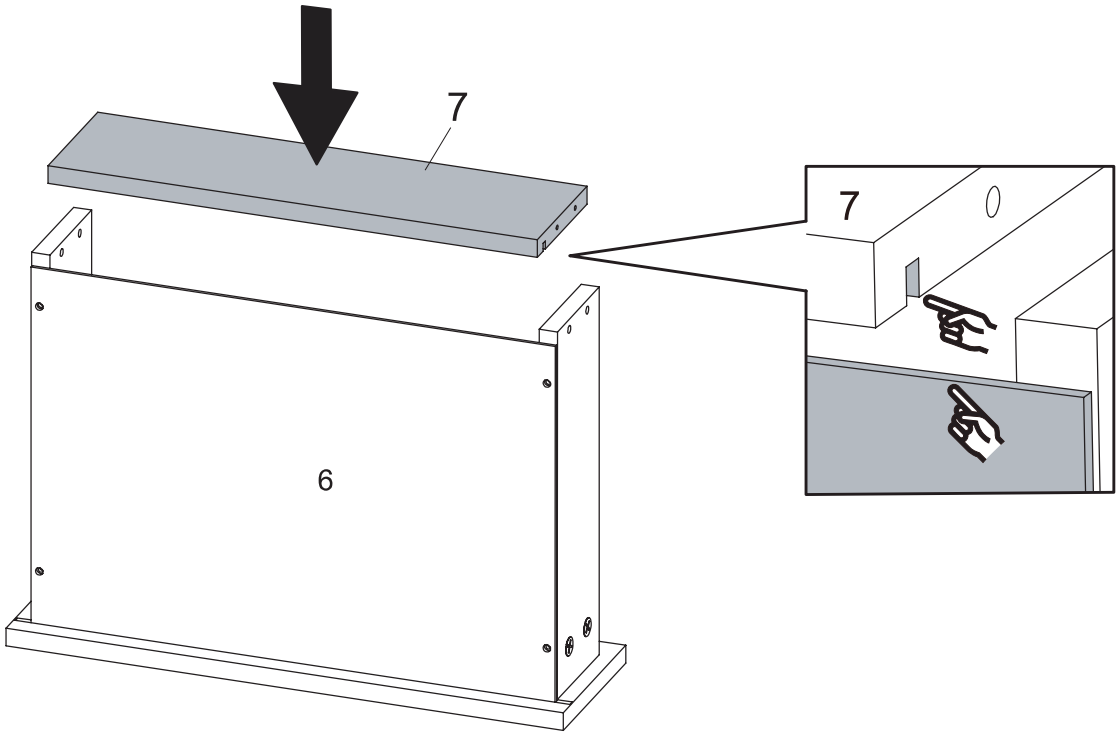



Please fully tighten all the screws after they are in right place.

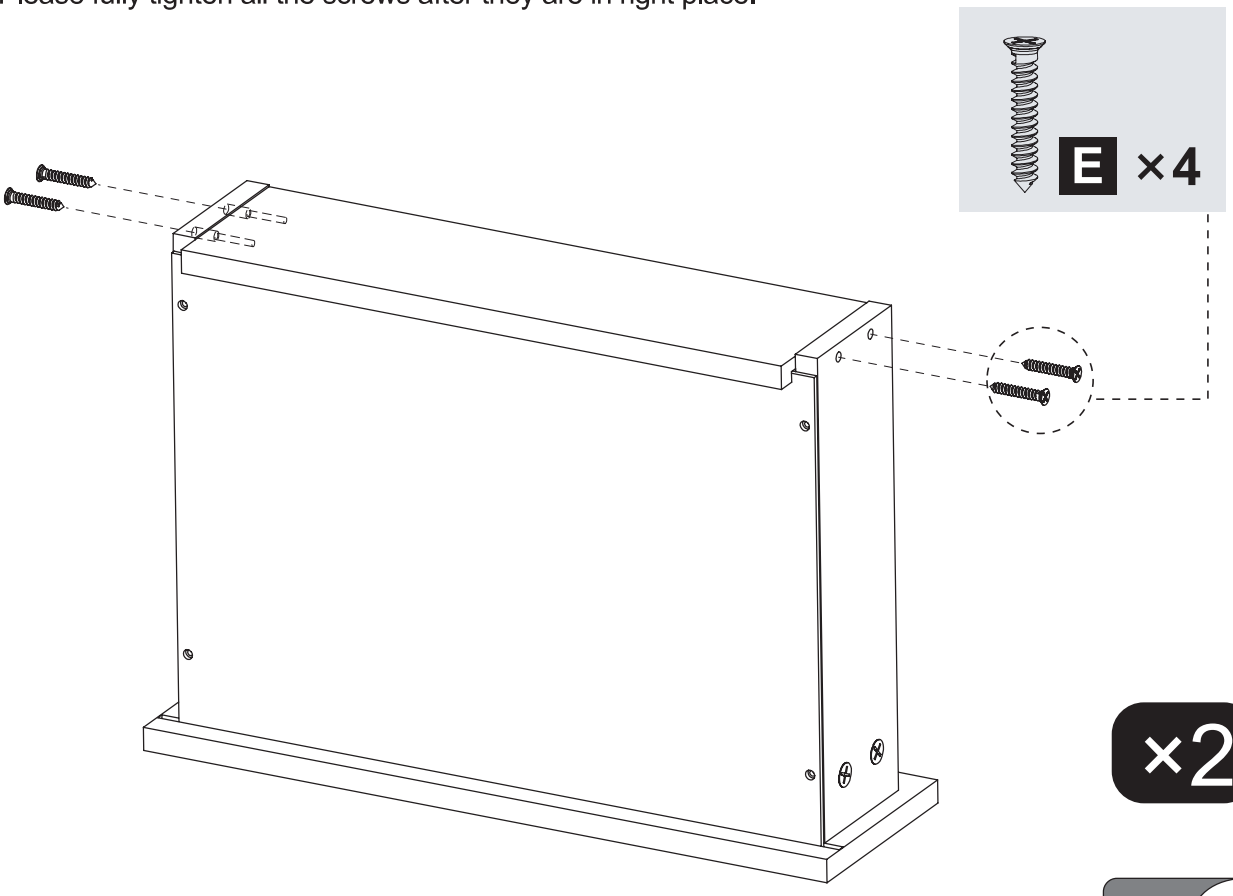

×2


Step 19

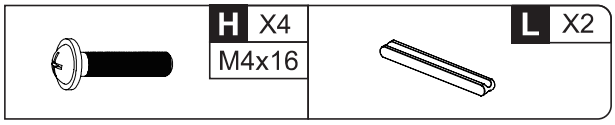


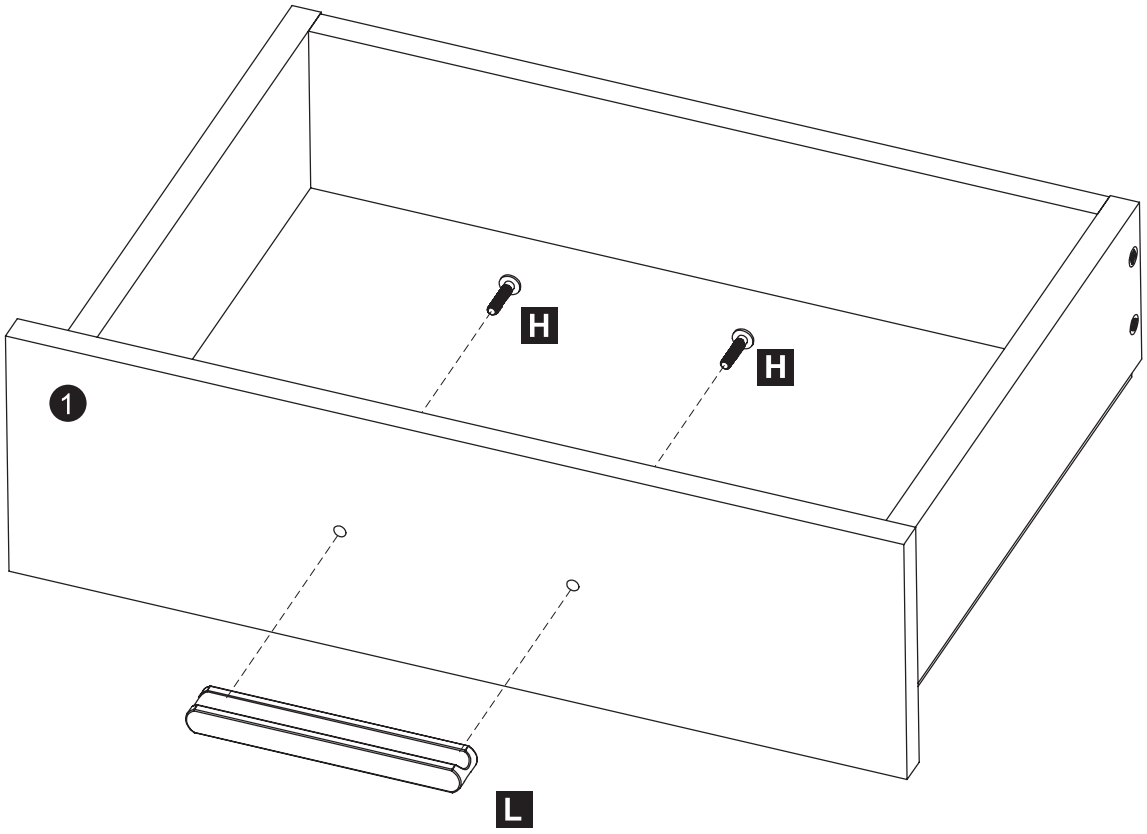



×2

Step 20

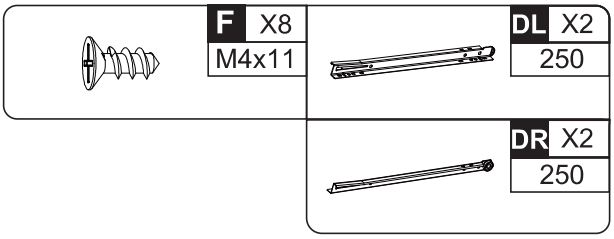
F X8
M4x11
DL X2
250
DR X2
250

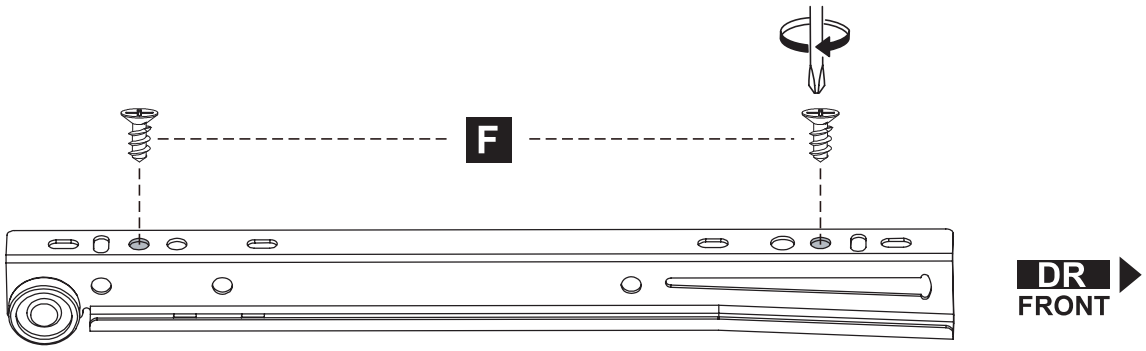

F
DR
FRONT

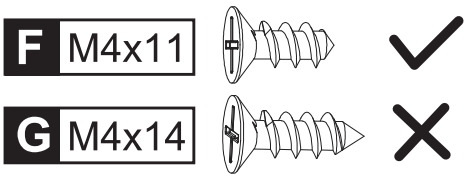

F M4x11
G M4x14

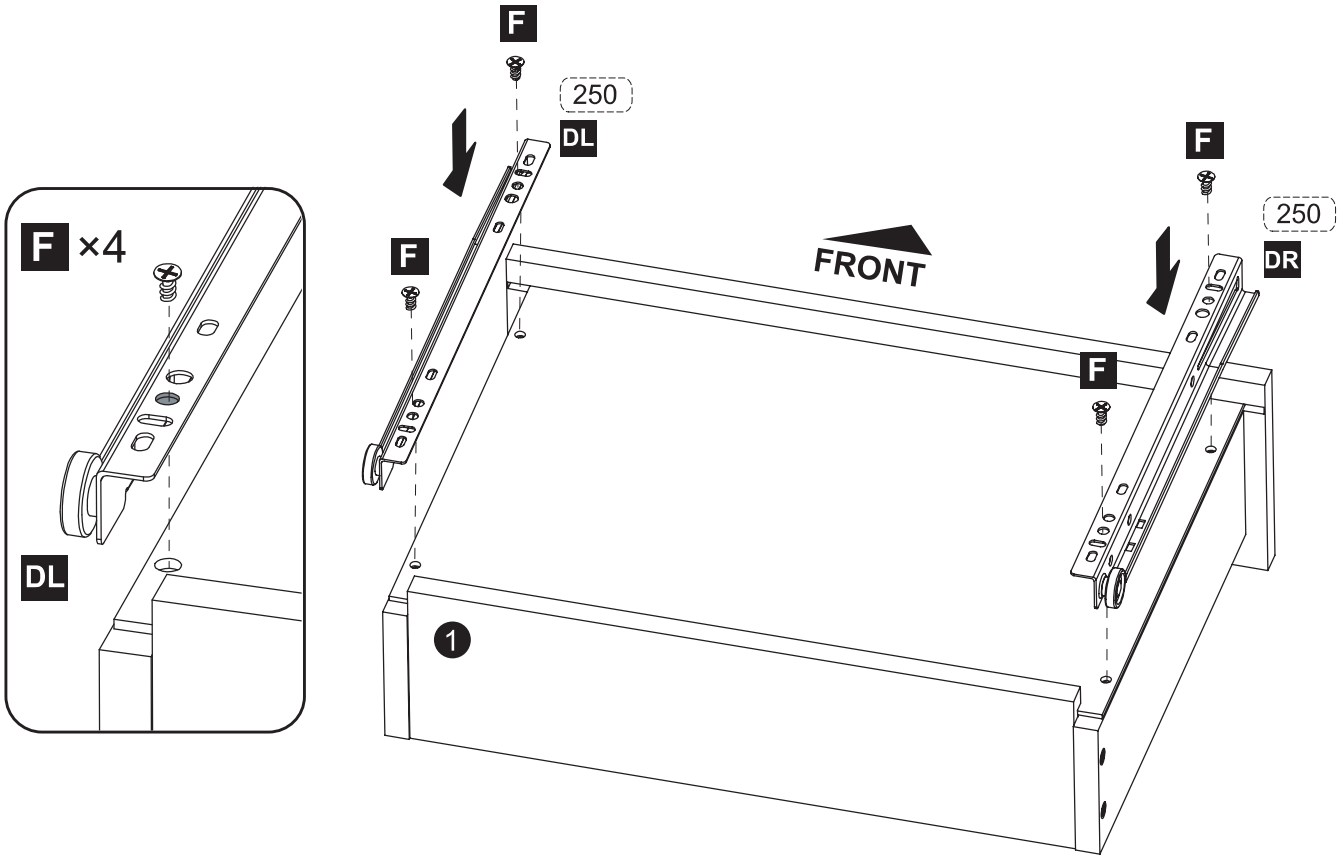

F ×4
DL
F
250
DL
F
FRONT
F
250
DR
F
1


×2

Step 21

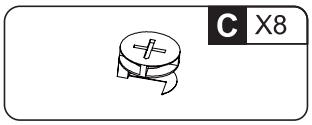


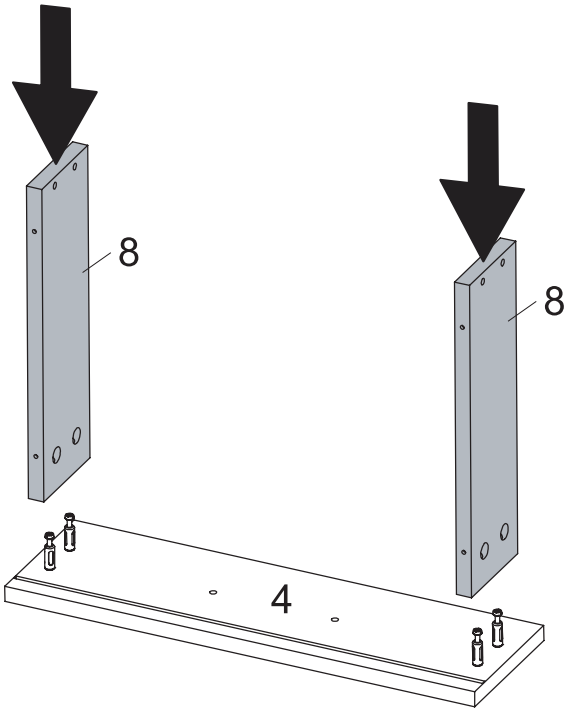


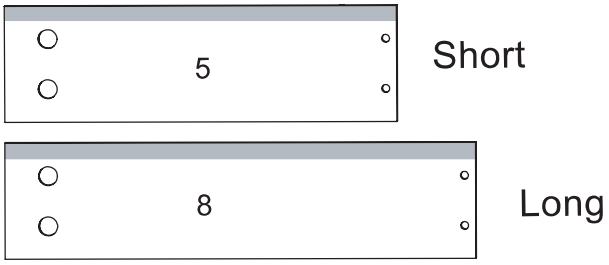

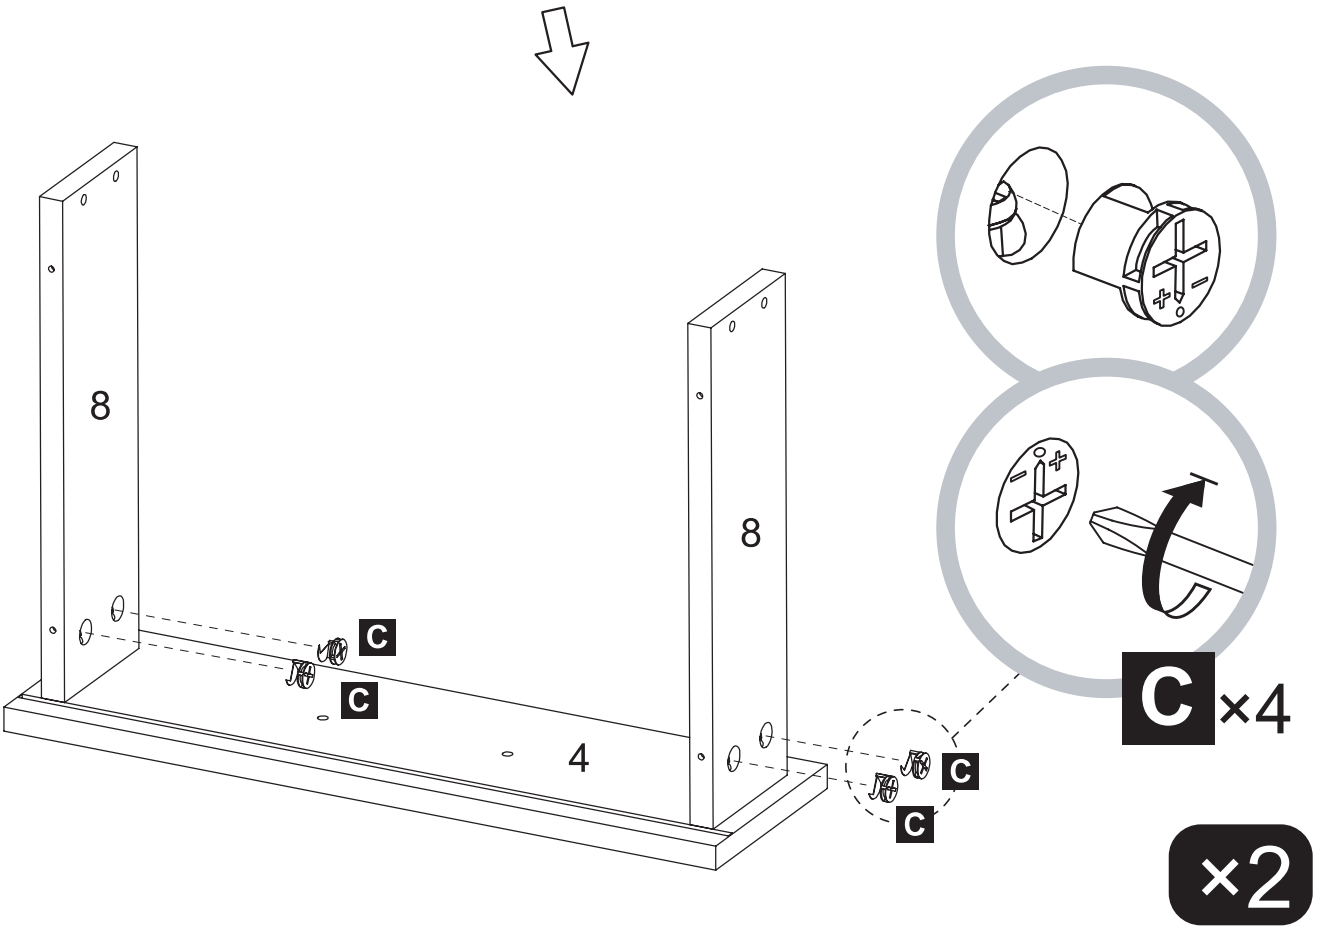


Step 22

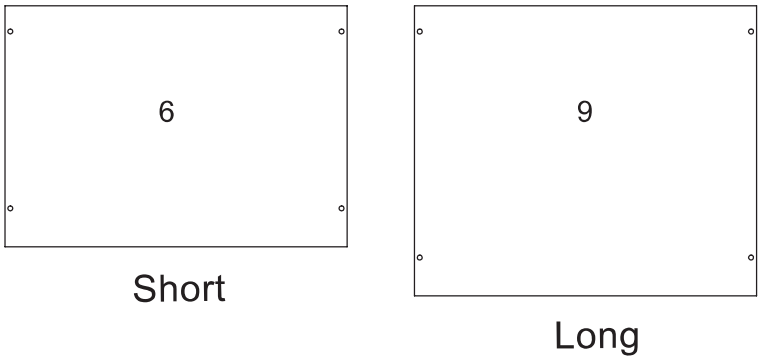

6
Short
9
Long

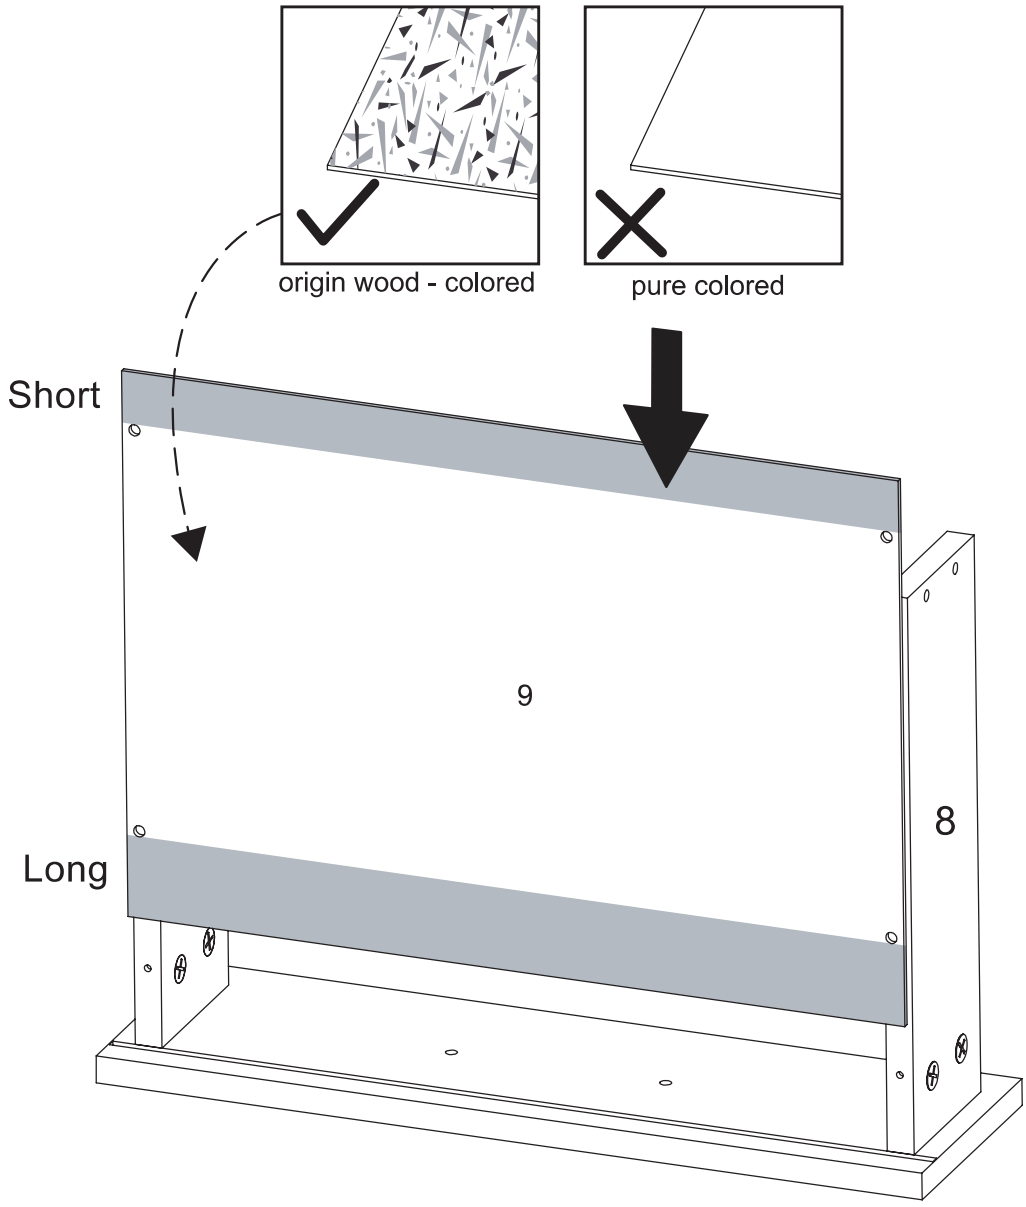
origin wood - colored
pure colored
Short
9
8
Long


×2


Step 23

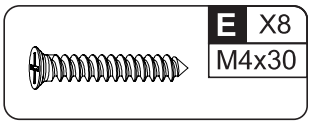

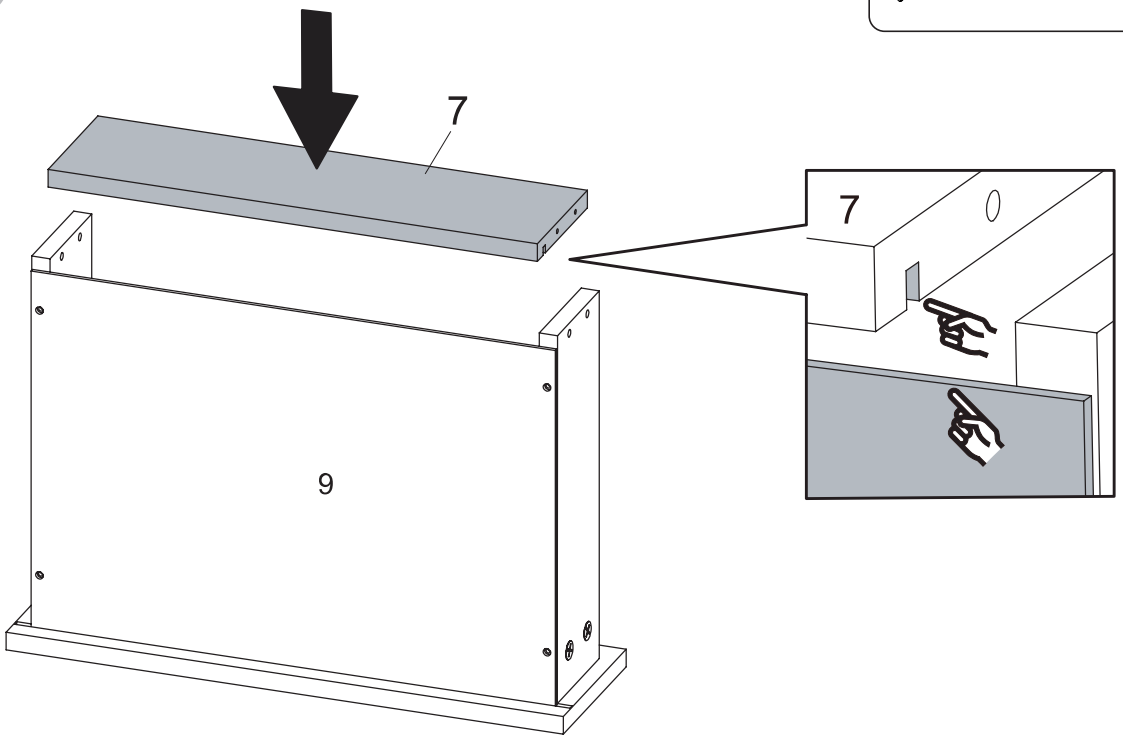


Please fully tighten all the screws after they are in right place.

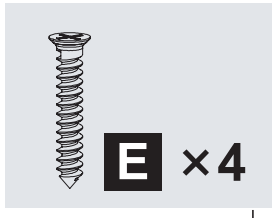


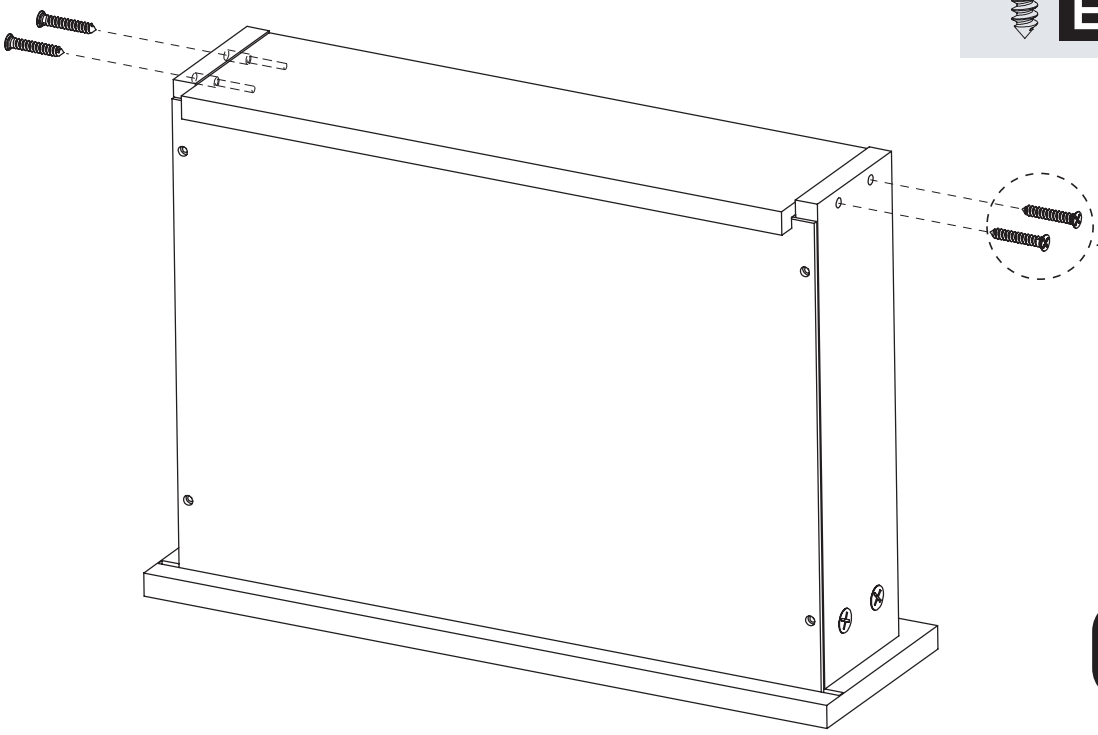

×2


Step 24

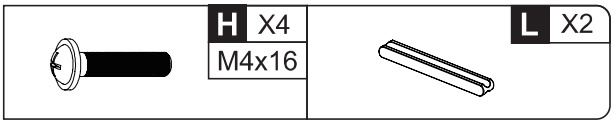


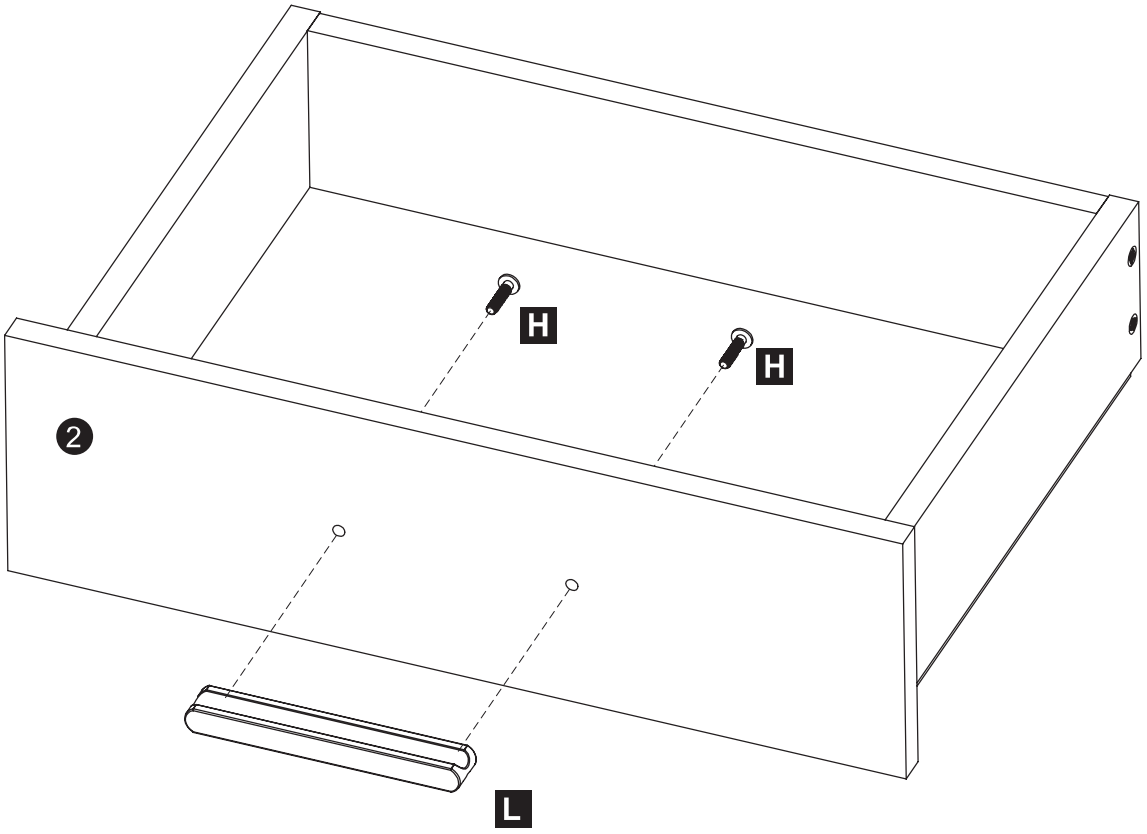



×2


Step 25

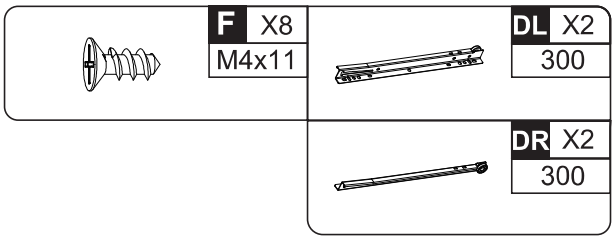
F X8
M4x11
DL X2
300
DR X2
300

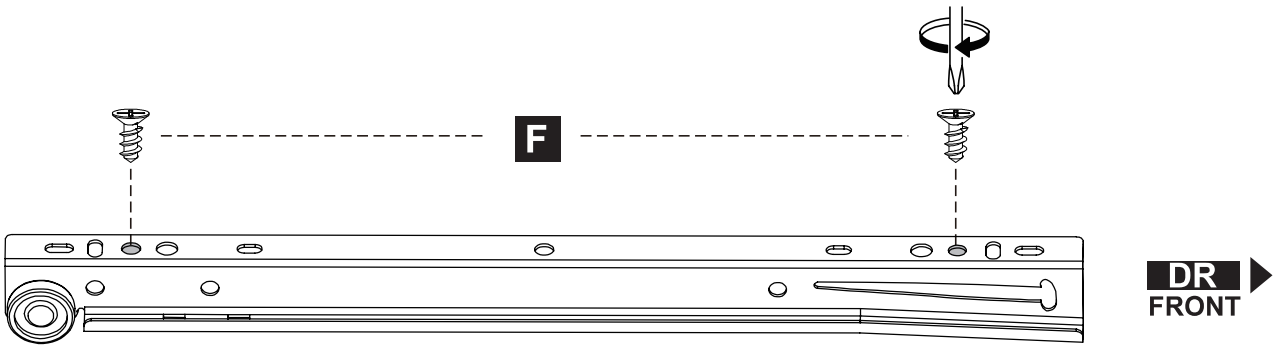
F
DR
FRONT

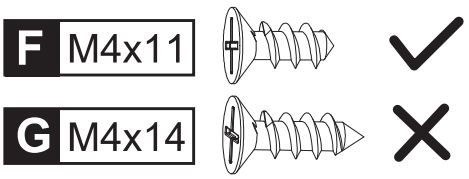

F M4x11
G M4x14

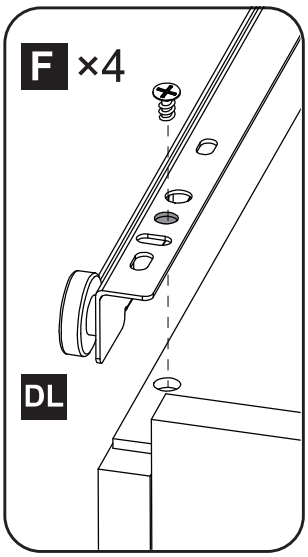

F ×4
DL

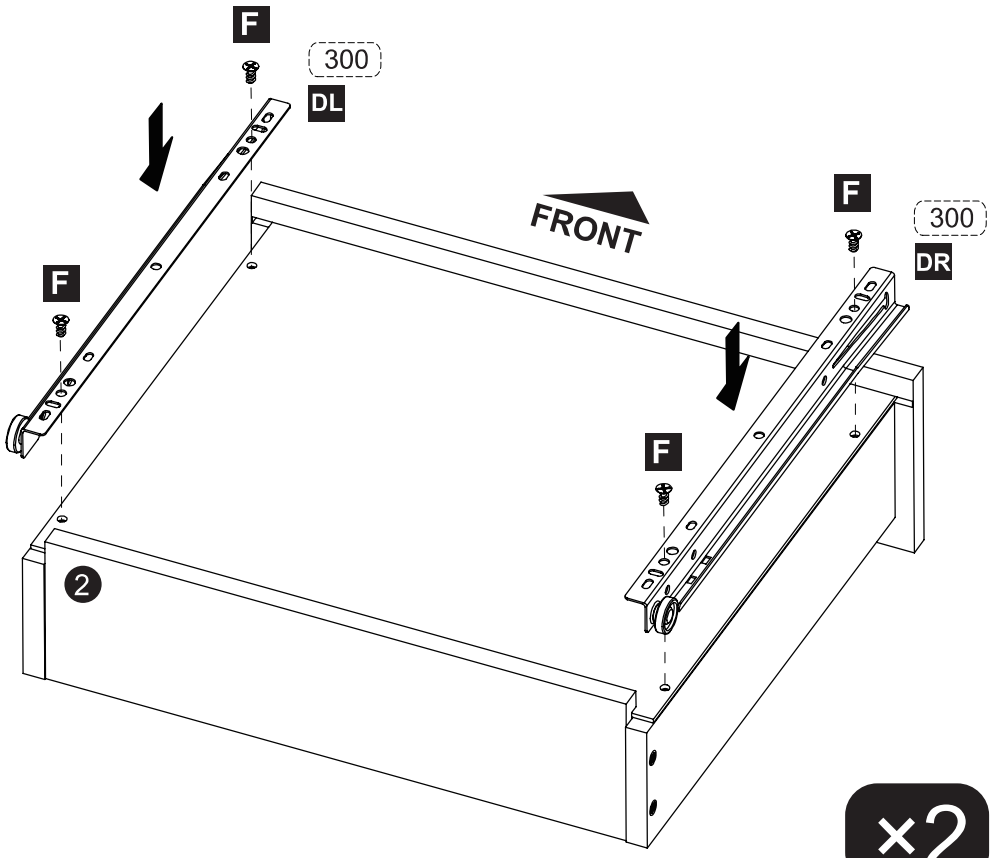

F
300
DL
FRONT
F
300
DR
F
F
2

×2

Step 26

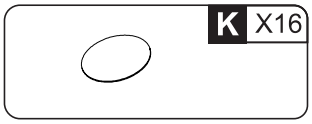

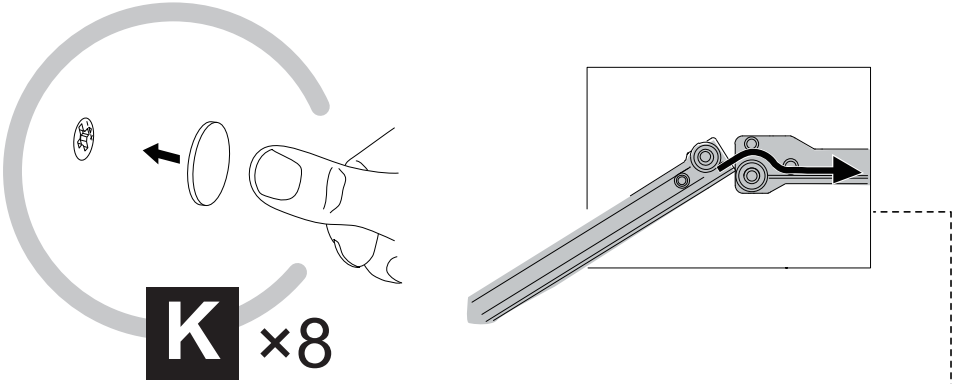

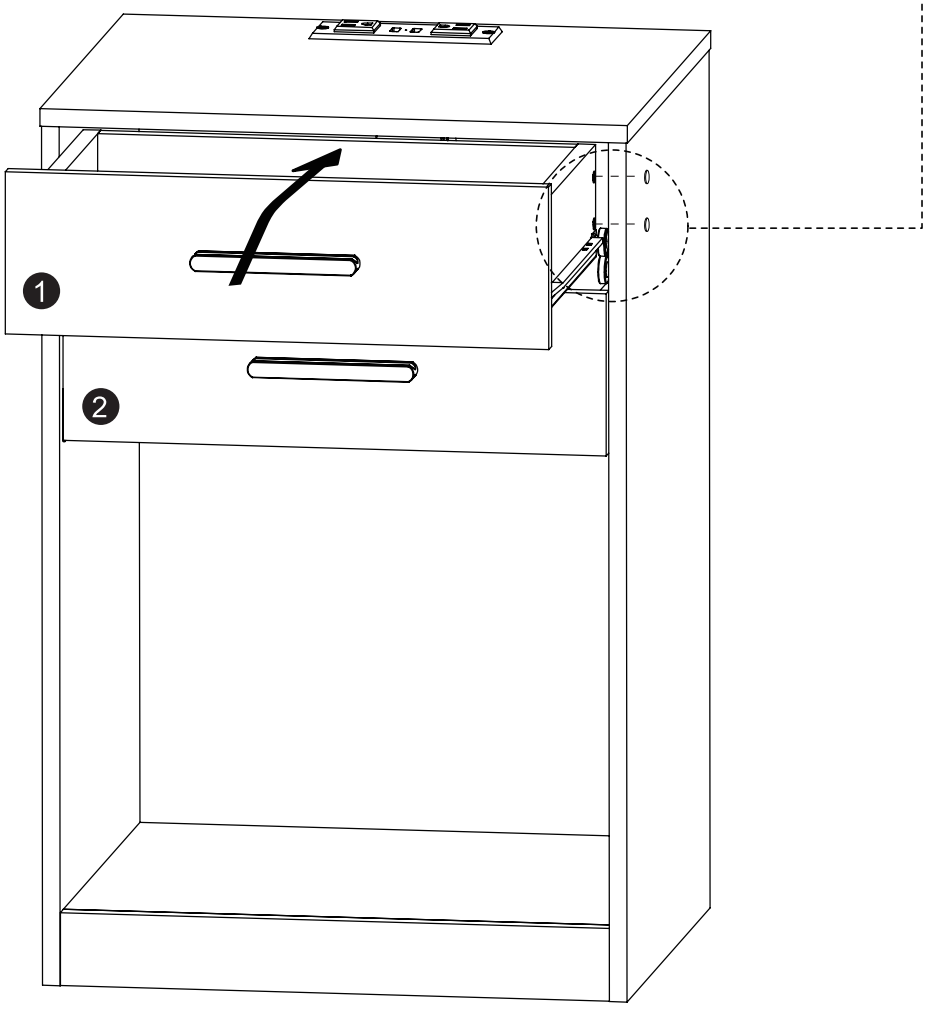

×2

DESIGN IS IN THE DETAILS

Find **5** differences between the **2** images.



