
# Bathroom cabinet

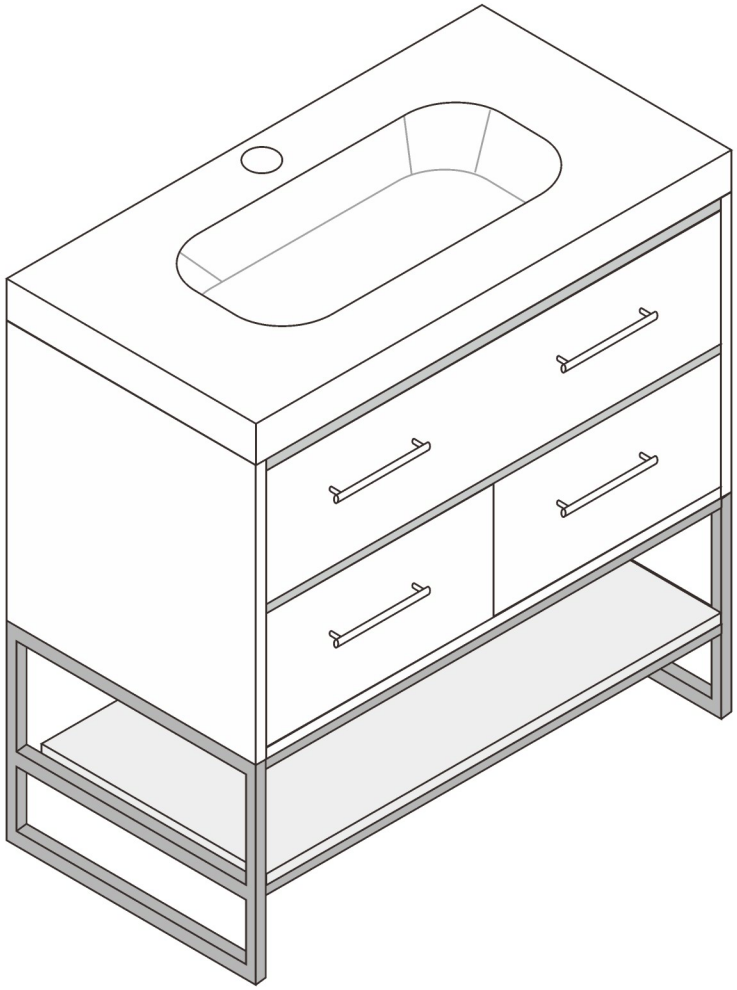


2 Persons


L876*W455*H398MM

## Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

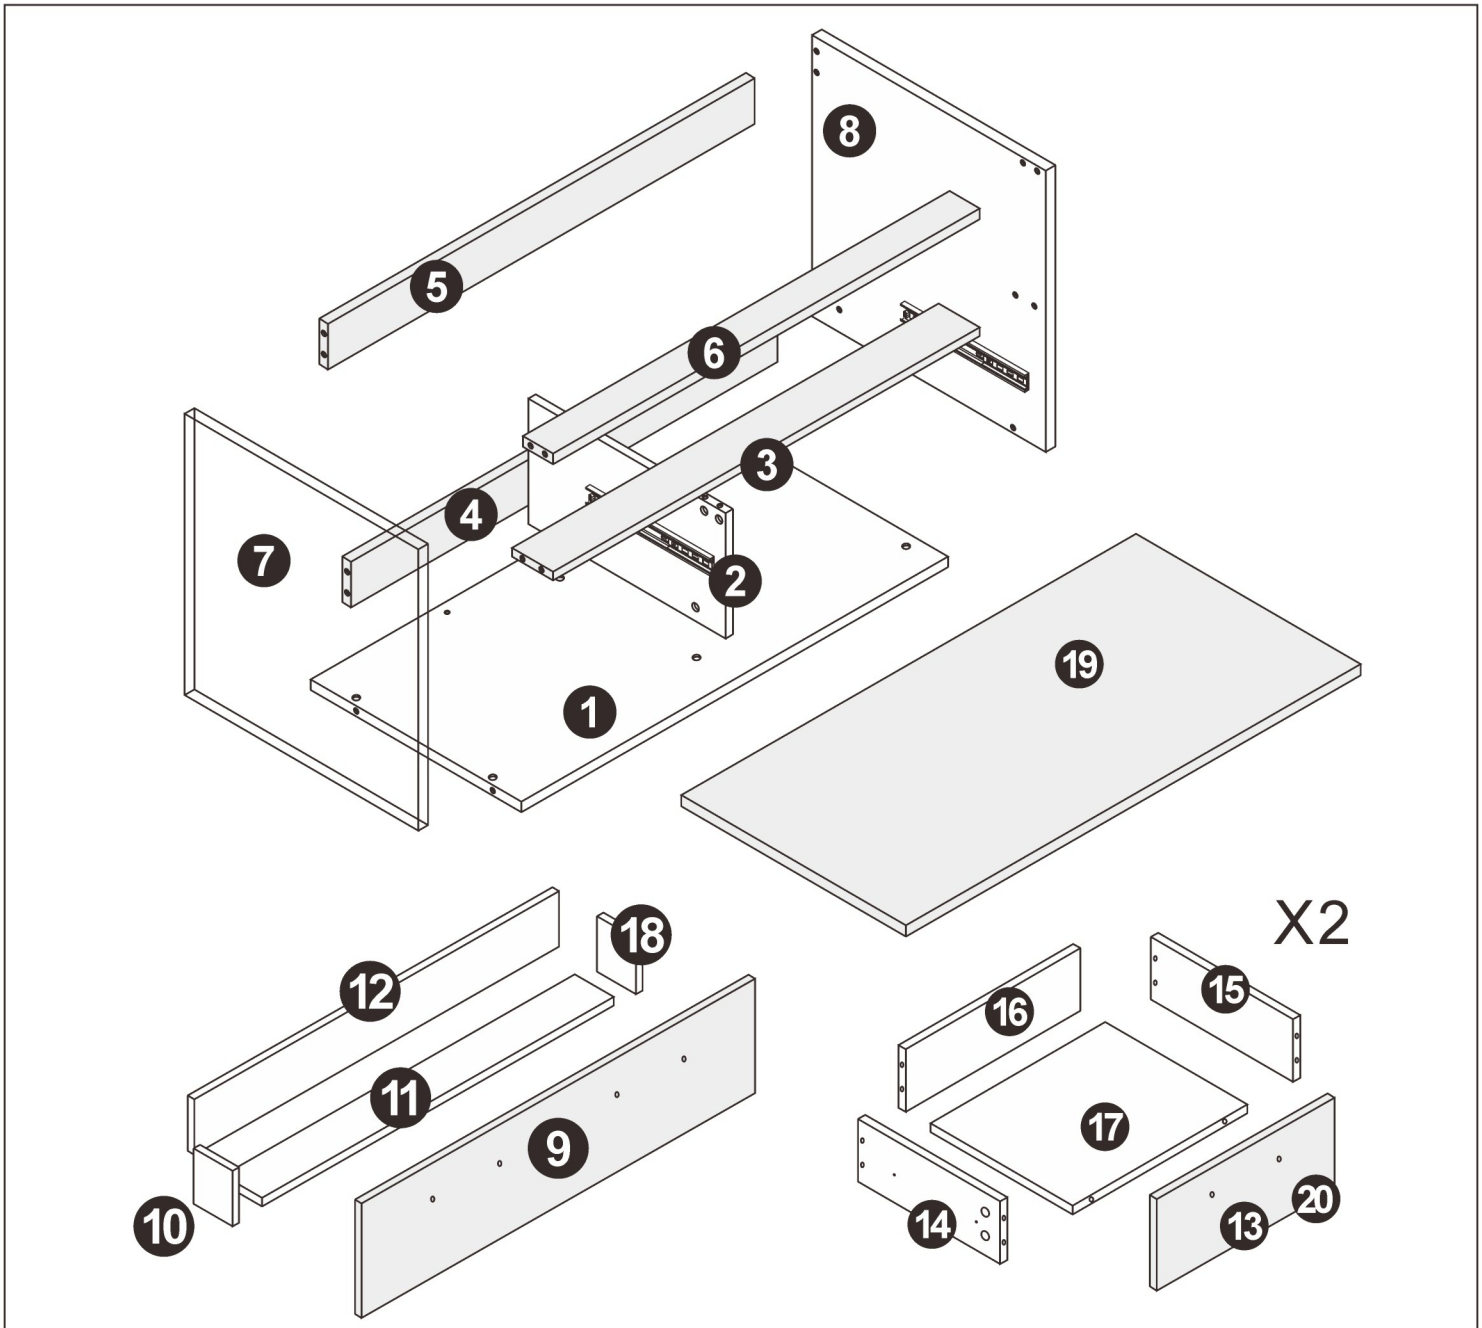



Disassembly and installation of accessories

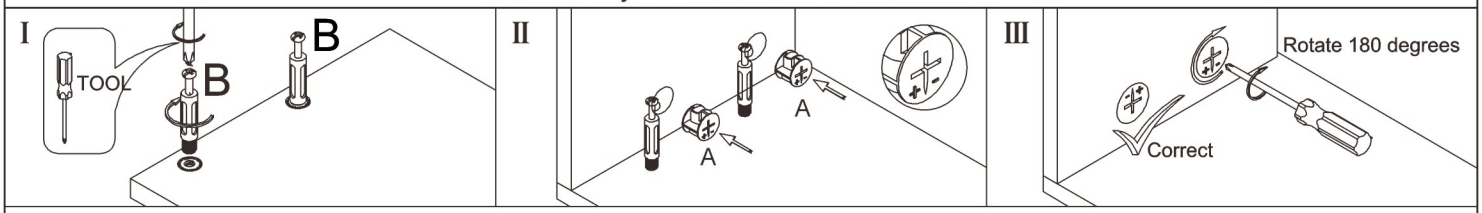


| | | | | | | | |
|---|---|---|---|---|---|---|---|
| A 44PCS | B 44PCS | C 52PCS | D 24PCS | E 8PCS | F 4PCS | G 4PCS | H 2PCS |
| 15*10mm | 6*28mm | 3.5*14mm | 3.5*35mm | 4*20 | 128 Handles | Sponge Mat | 8mm |


| | | | | |
|---|---|---|---|---|
| I 16PCS | J 3PCS | K 2PCS | L 4PCS | M 1PCS |
| 6*15mm | Mid bend | Three-section Rail | 6mm | Support Rod |

1

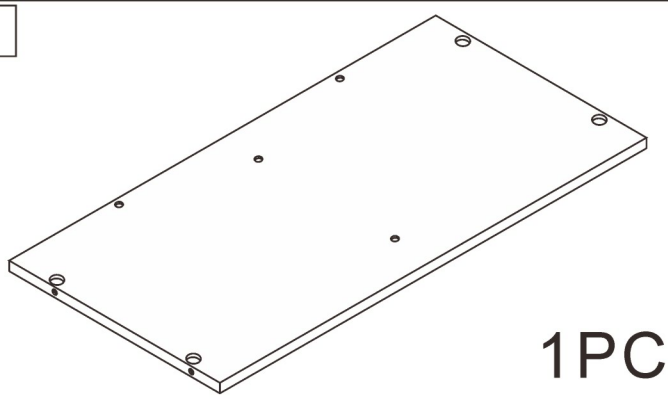


1PC

2

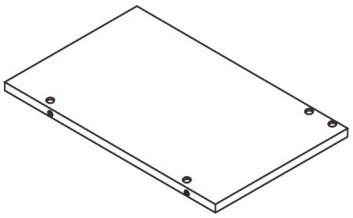


1PC

3

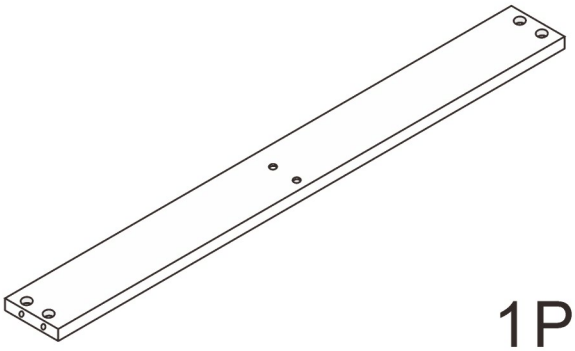


1PC

4

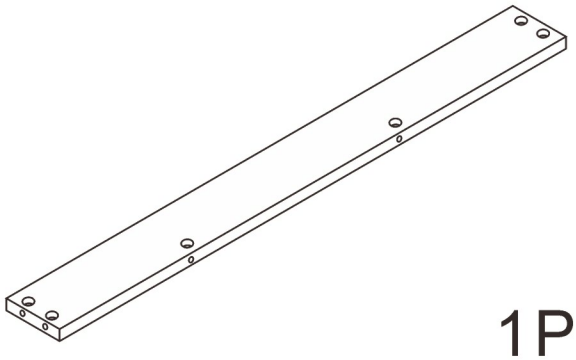


1PC

5

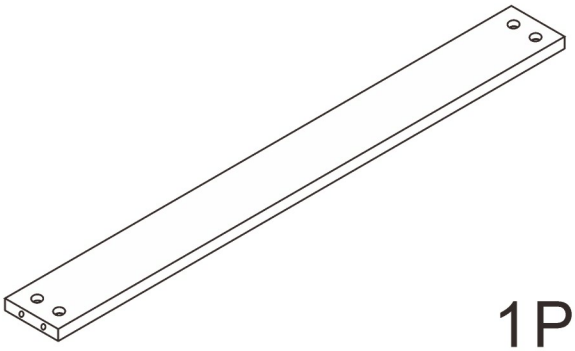


1PC

6

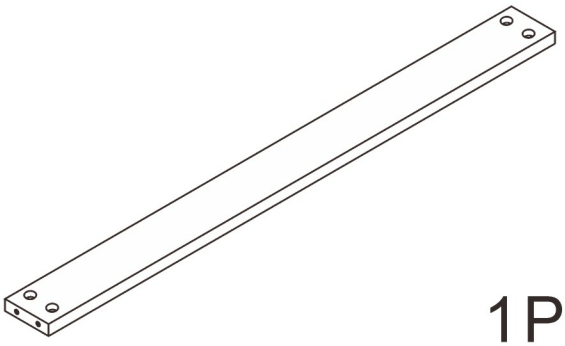


1PC

7

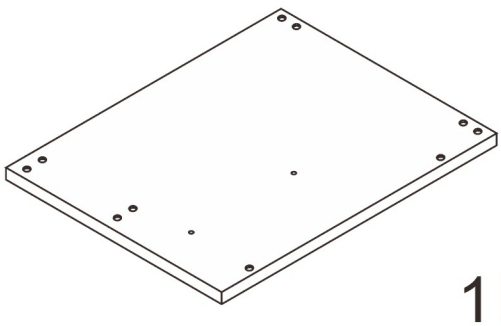


1PC

8

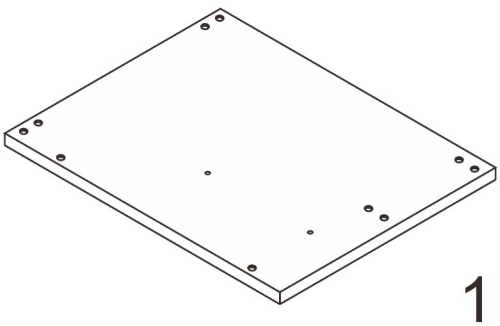

1PC


9

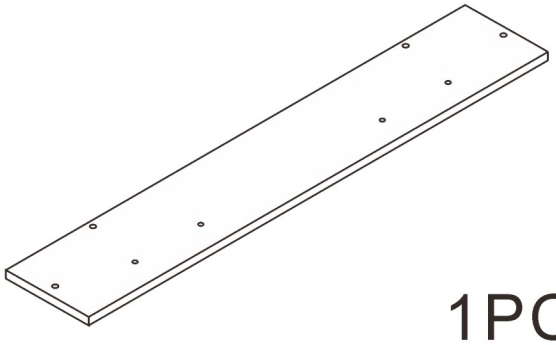

1PCS


10

right




1PCS

11

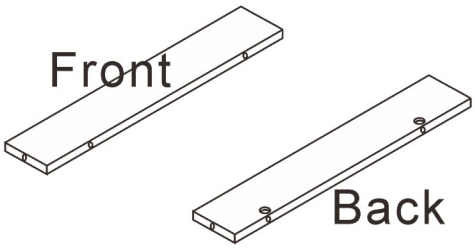



1PC

12

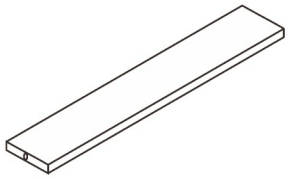


1PC

13

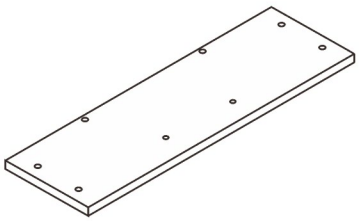


1PC

14

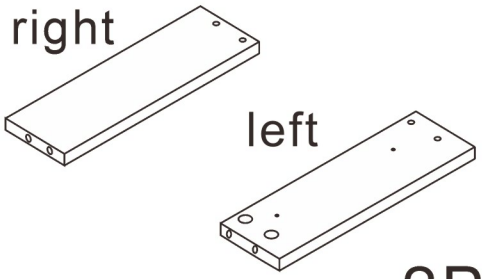



2PCS

15

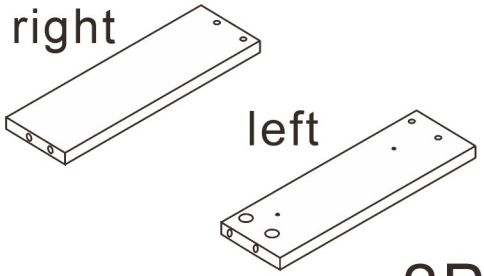



2PCS

16

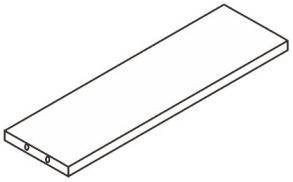

2PCS

17

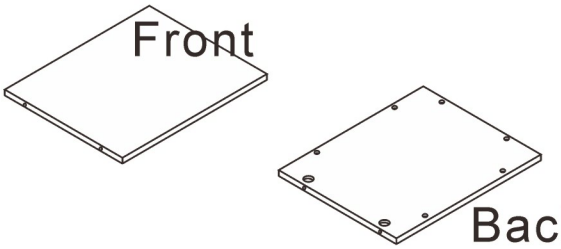



2PCS

18





19

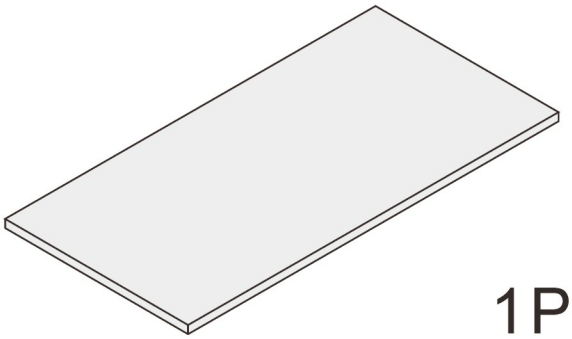


1PC

20

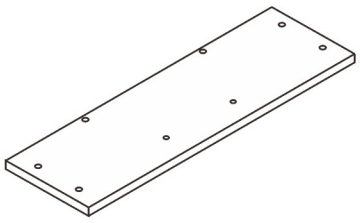


1PC


1

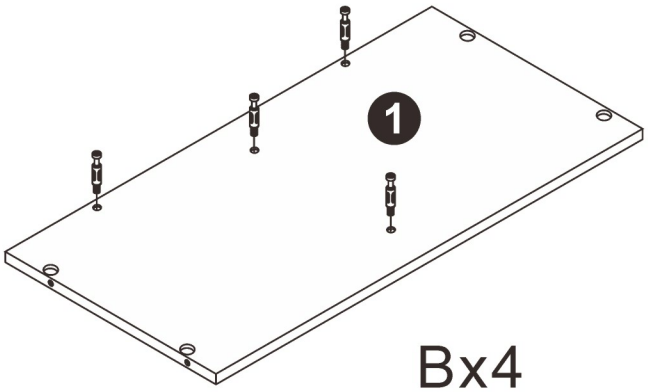



Bx4

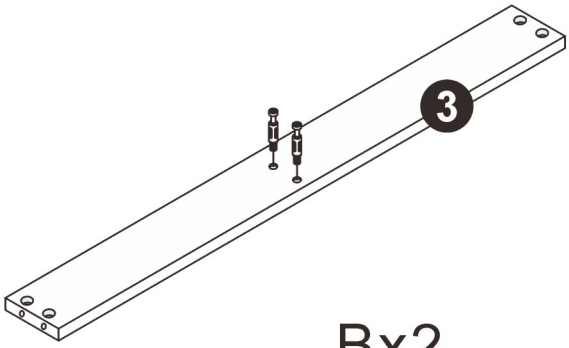



Bx2

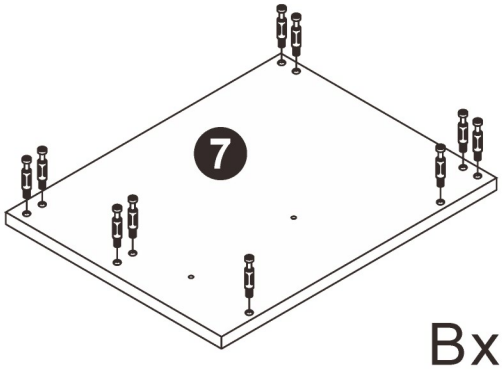



Bx10

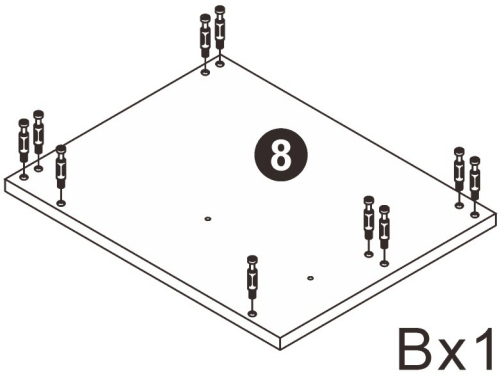



Bx10

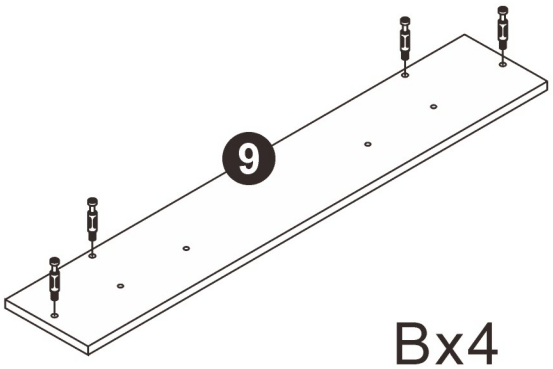



Bx4

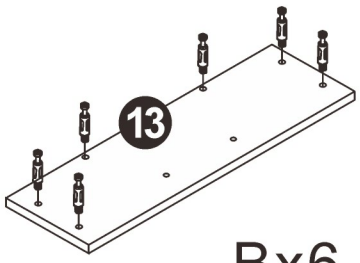


Bx6

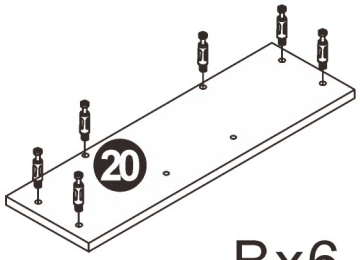



Bx6

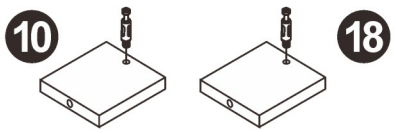


Bx2


| B | 44PCS |
|---|---|
|  | |
| 6*28mm | |


2

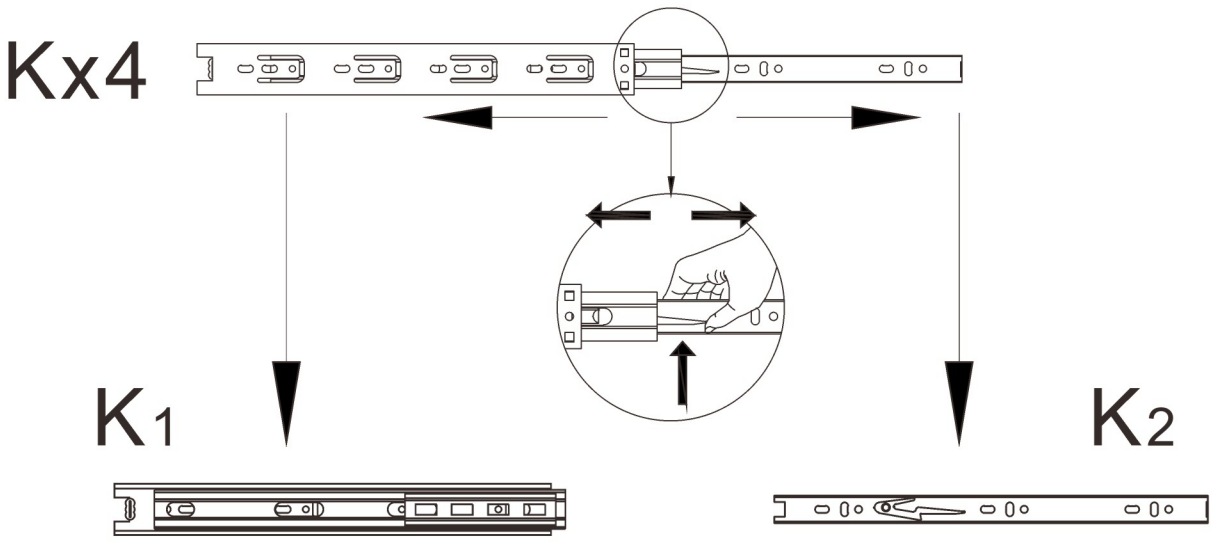



| K1 | 2PCS |
|---|---|
|  | |
| Three-section Rail | |

3

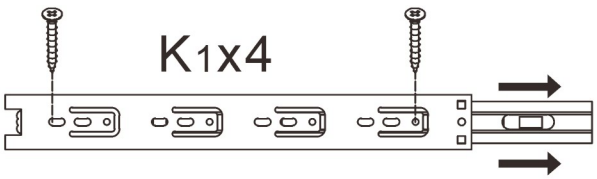

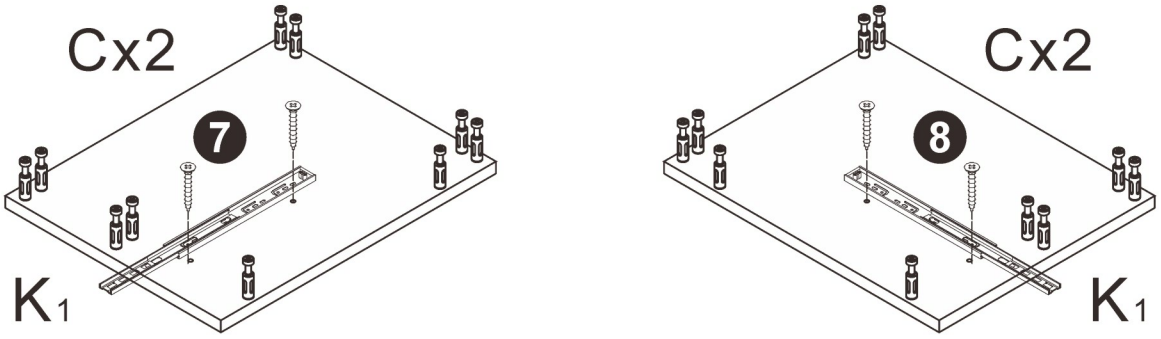


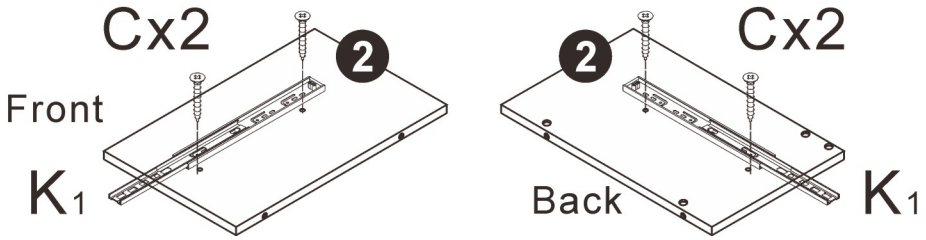

| C | 8PCS |
|---|---|
|  | |
| 3.5*14mm | |


| K1 | 2PCS |
|---|---|
|  | |
| 12 inch Three-section Rail | |

4

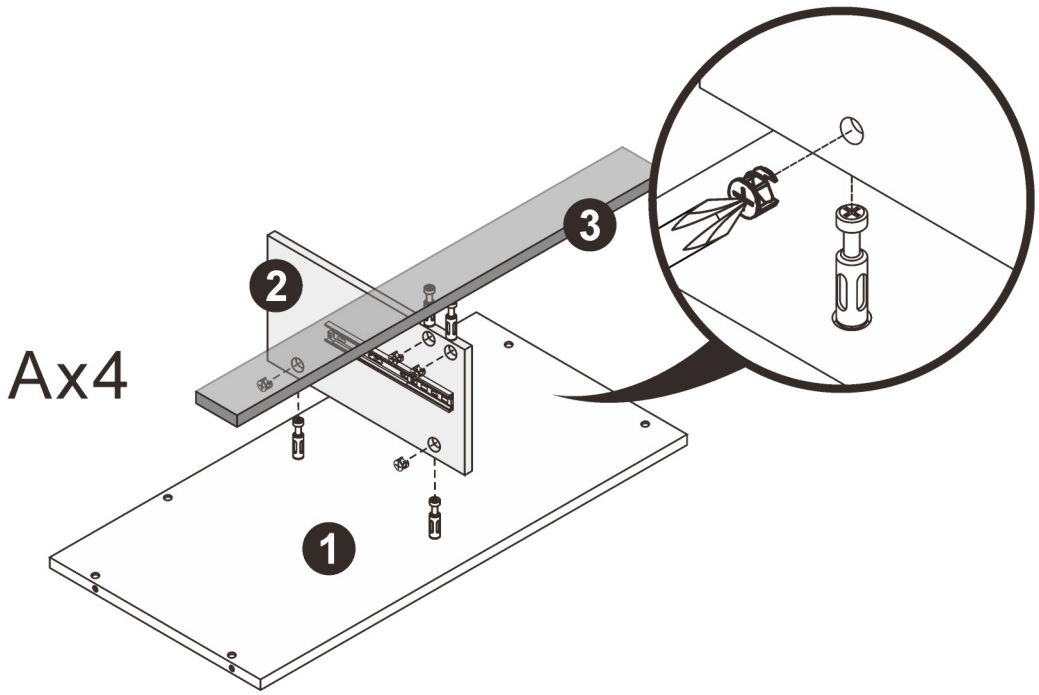



| A | 4PCS |
|---|---|
|  | |
| 15*10mm | |

5

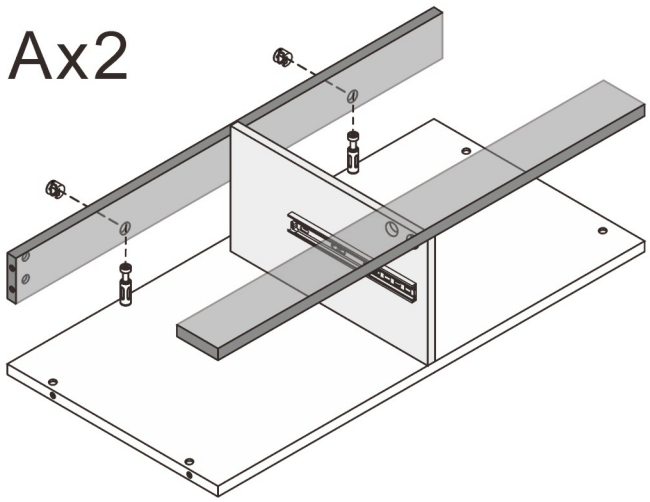



| A | 2PCS |
|---|---|
|  | |
| 15*10mm | |

6

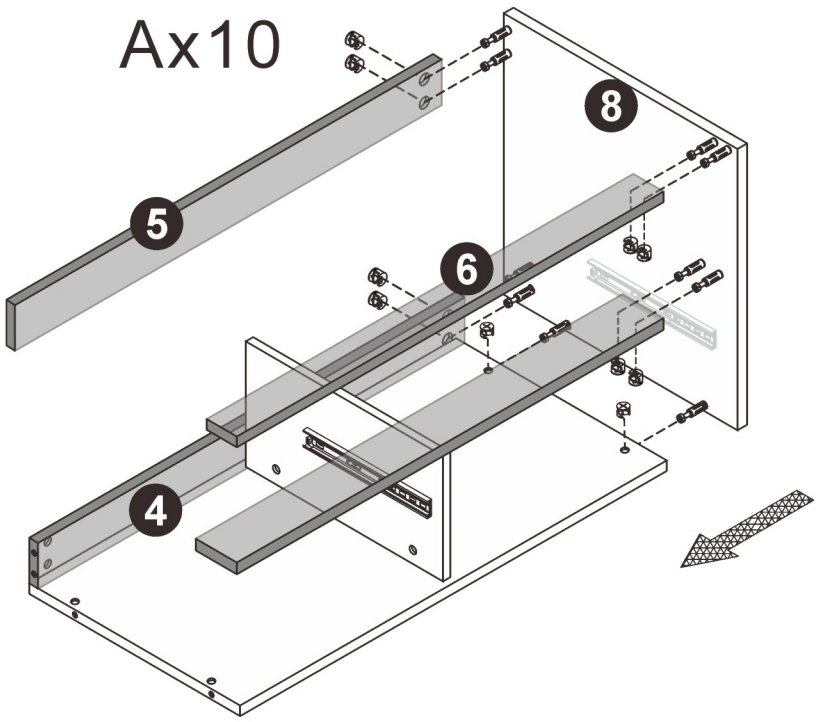



| A | 10PCS |
|---|---|
|  | |
| 15*10mm | |

7

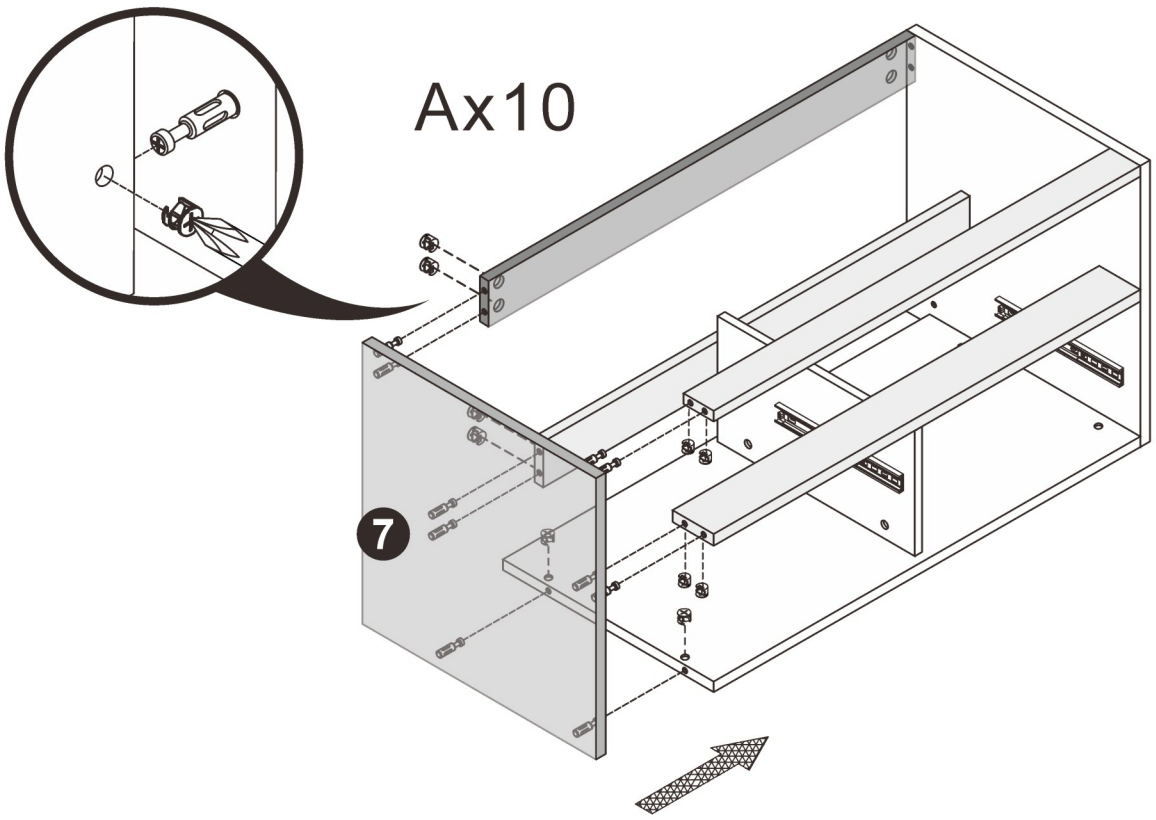



| A | 10PCS |
|---|---|
|  | |
| 15*10mm | |


8

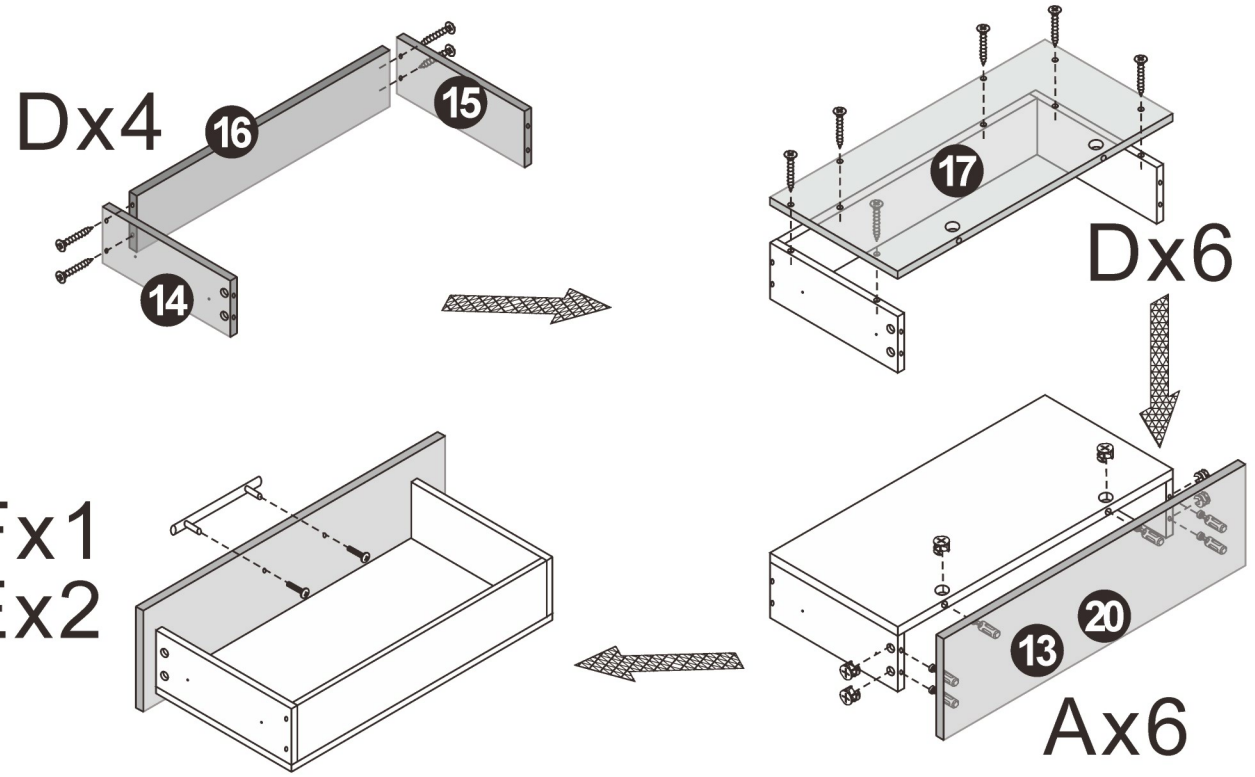



X2

| A | 12PCS | D | 20PCS | E | 4PCS | F | 2PCS |
|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |
| 15*10mm | | 3.5*35mm | | 4*20 | | Handles | |

9

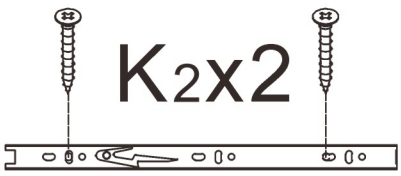


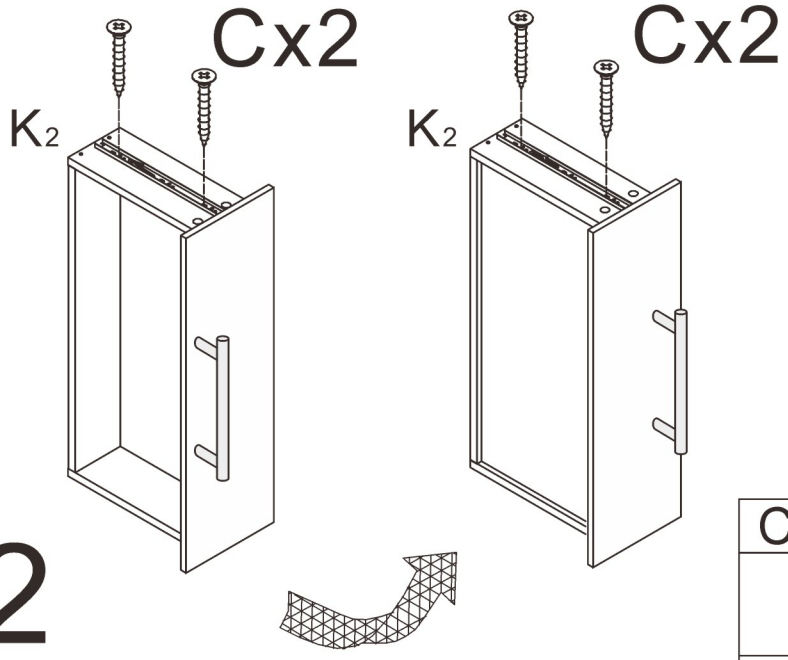



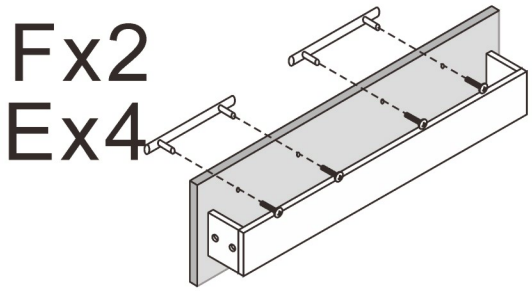

X2


| C | 8PCS | K2 | 2PCS |
|---|---|---|---|
|  | |  | |
| 3.5*14mm | | Three-section Rail | |


10

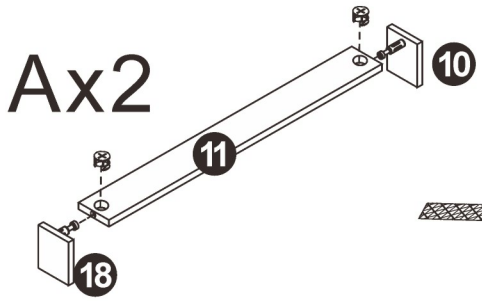

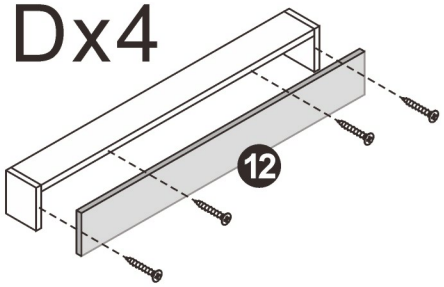






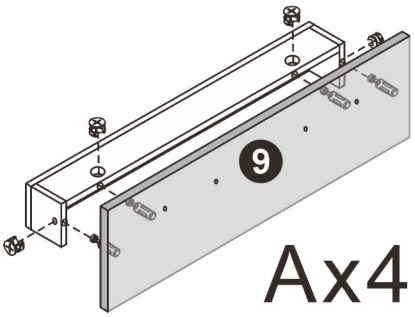
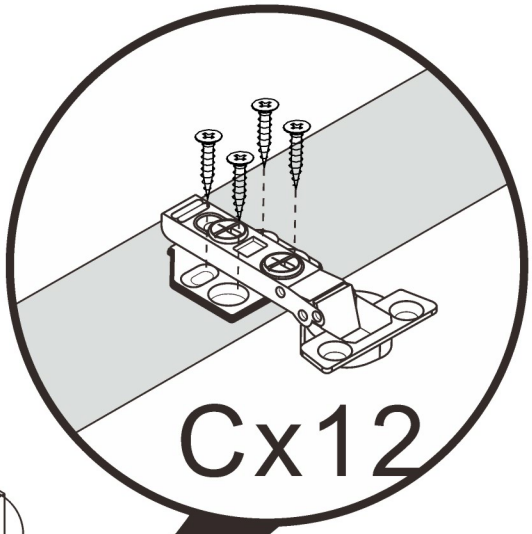

| A | 6PCS | D | 4PCS | E | 4PCS | F | 2PCS |
|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |
| 15*10mm | | 3.5*35mm | | 4*20 | | Handles | |


11

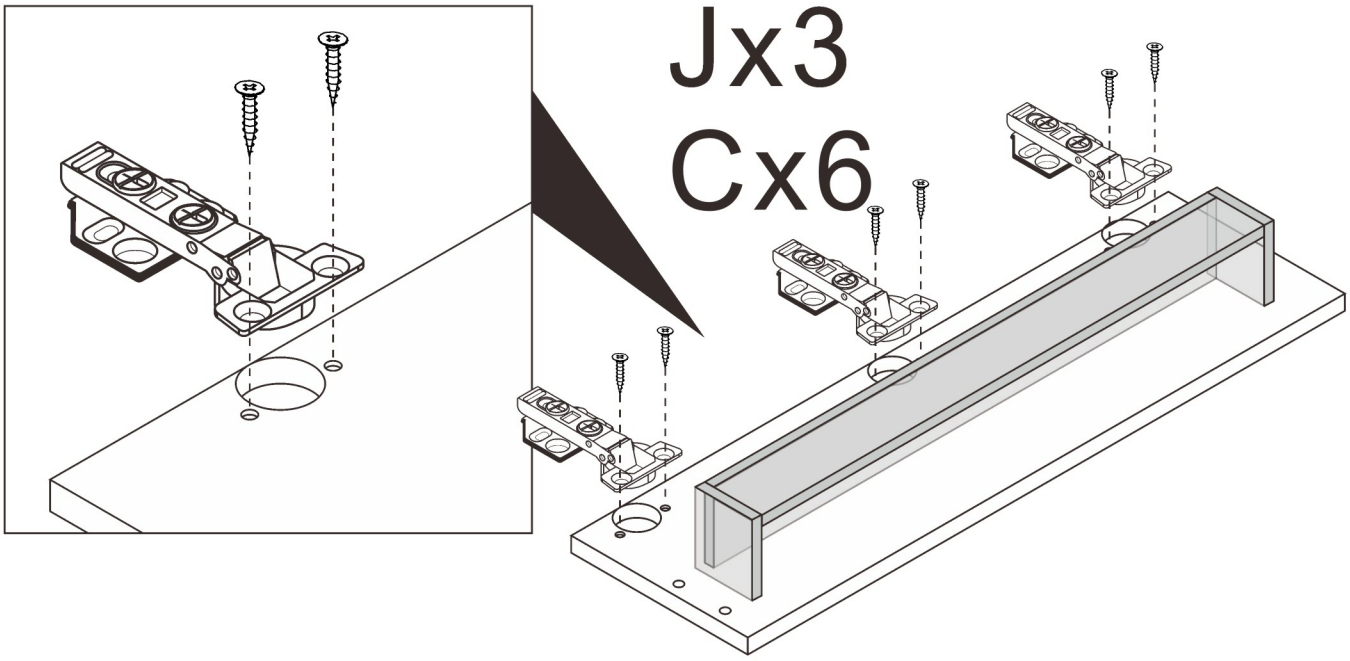



| C | 6PCS | J | 3PCS |
|---|---|---|---|
|  | |  | |
| 3.5*14mm | | Mid bend | |


11



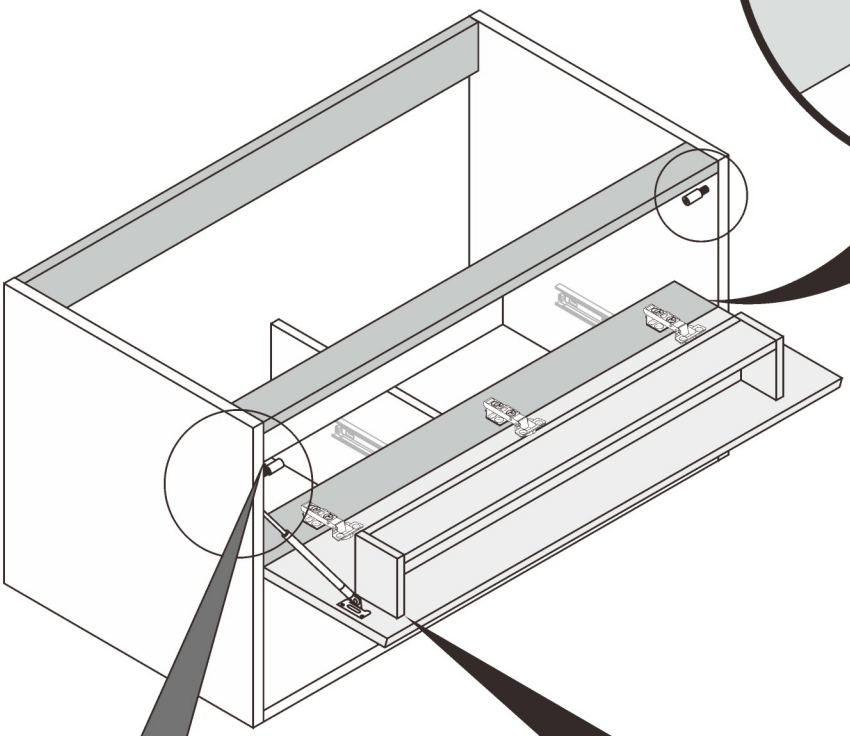



Cx8
Mx2

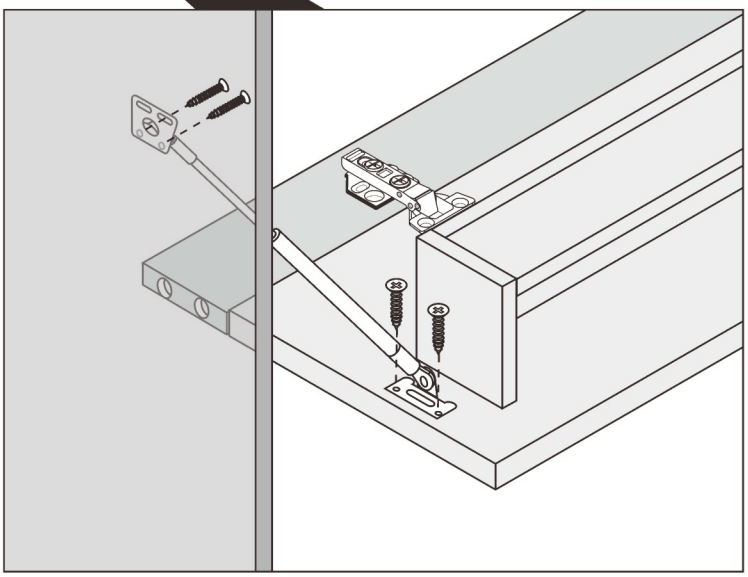


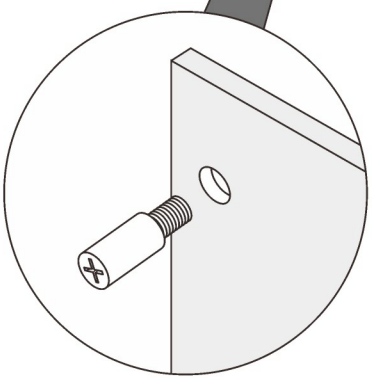


Hx2

| C | 16PCS | M | 1PCS | H | 2PCS |
|---|---|---|---|---|---|
|  | |  | |  | |
| 3.5*14mm | | Support Rod | | 8mm | |


12

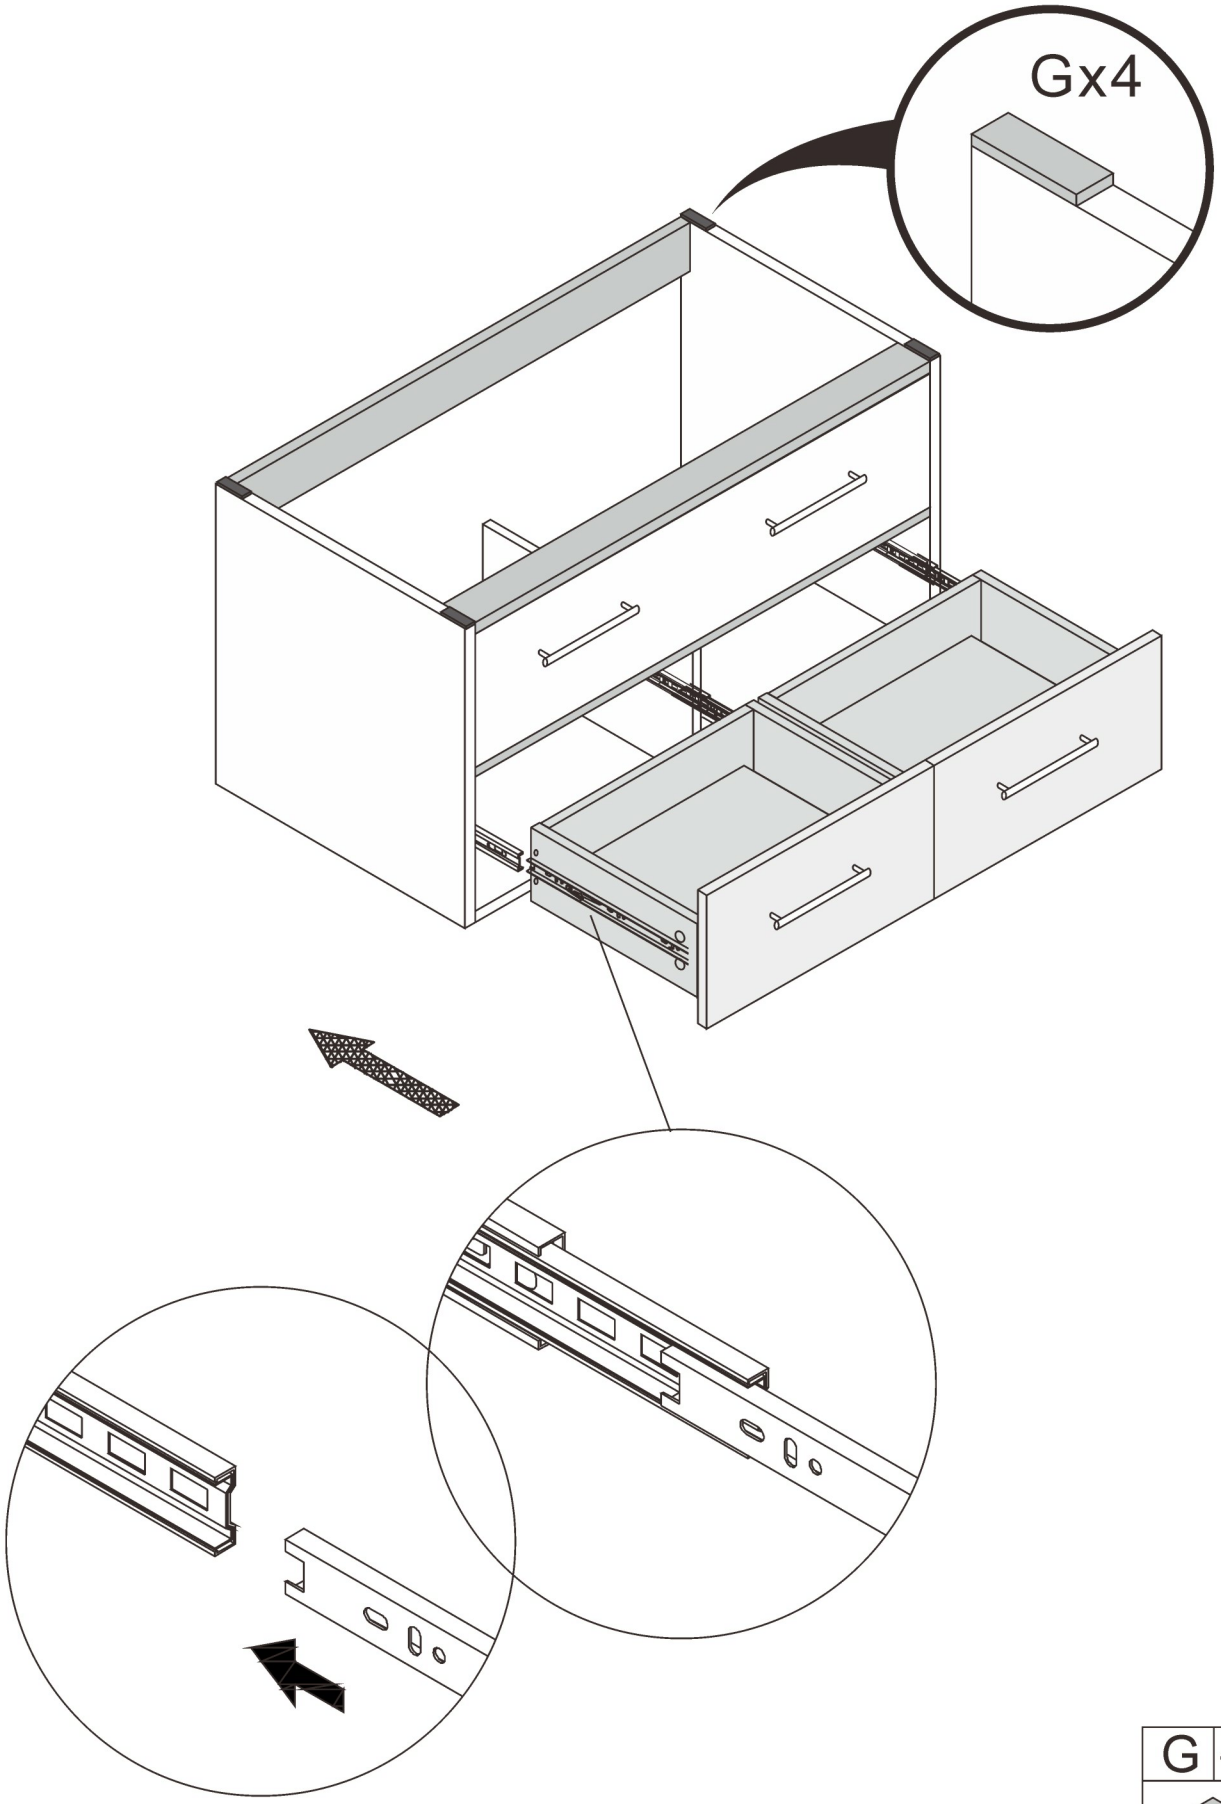



| G | 4PCS |
|---|---|
|  | |
| Sponge Mat | |

# SPECIAL TIPS FOR DOOR ALIGNMENT
# CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS
# CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


A. Lateral adjustment (Moving door left-right) by screw adjusting
Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
Réglage latéral (porte mobile gauche-droite) par réglage à vis

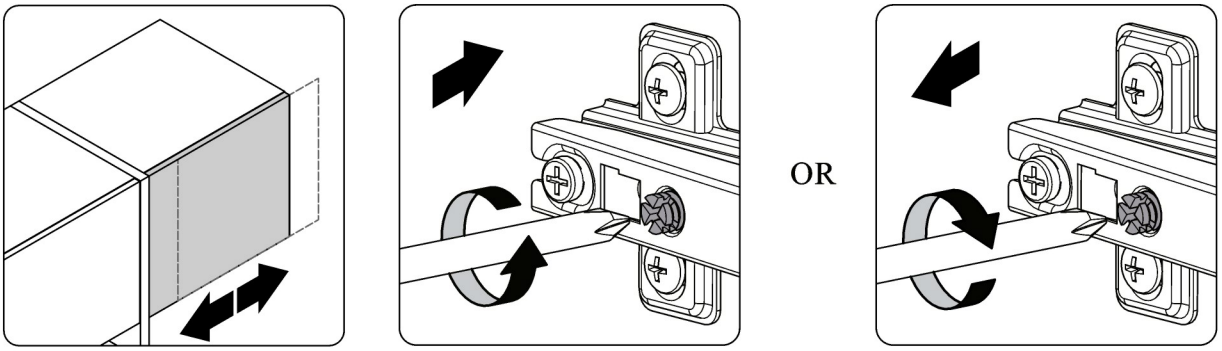



B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

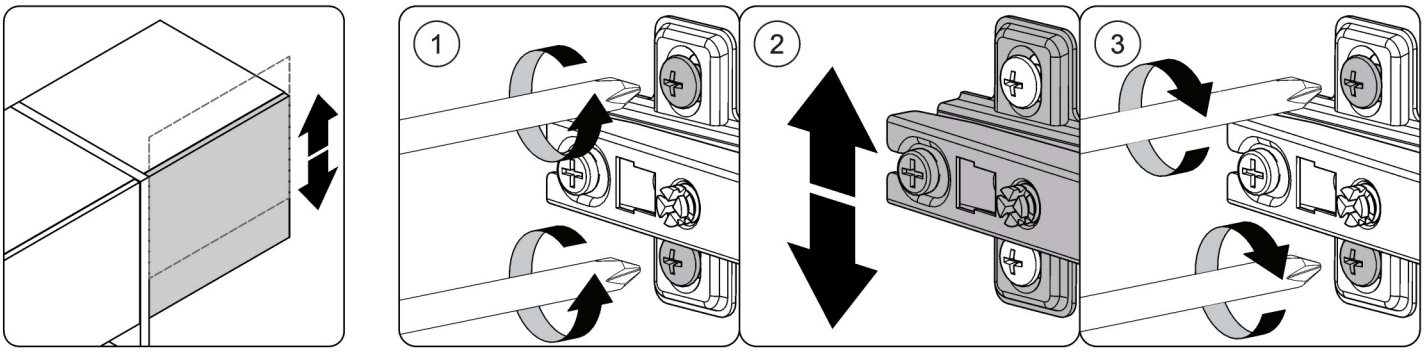



C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

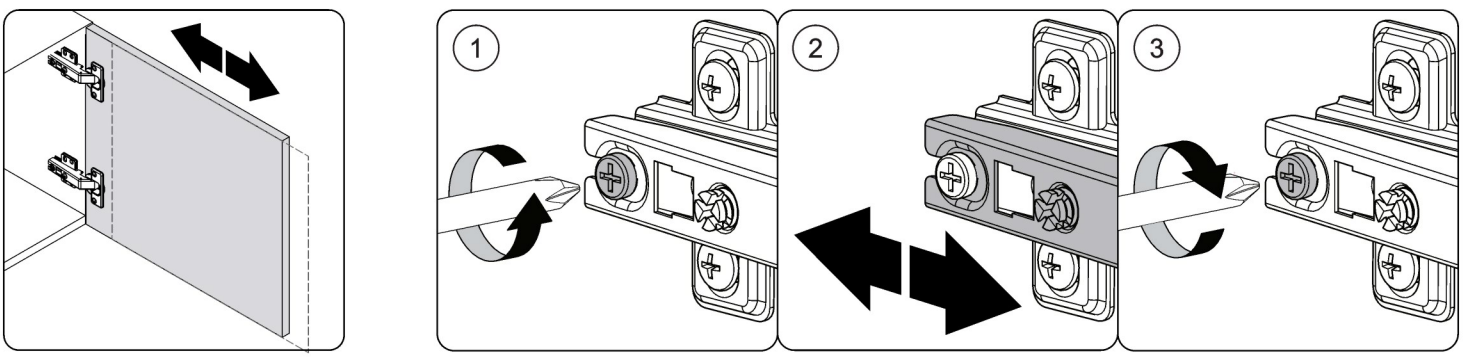

13

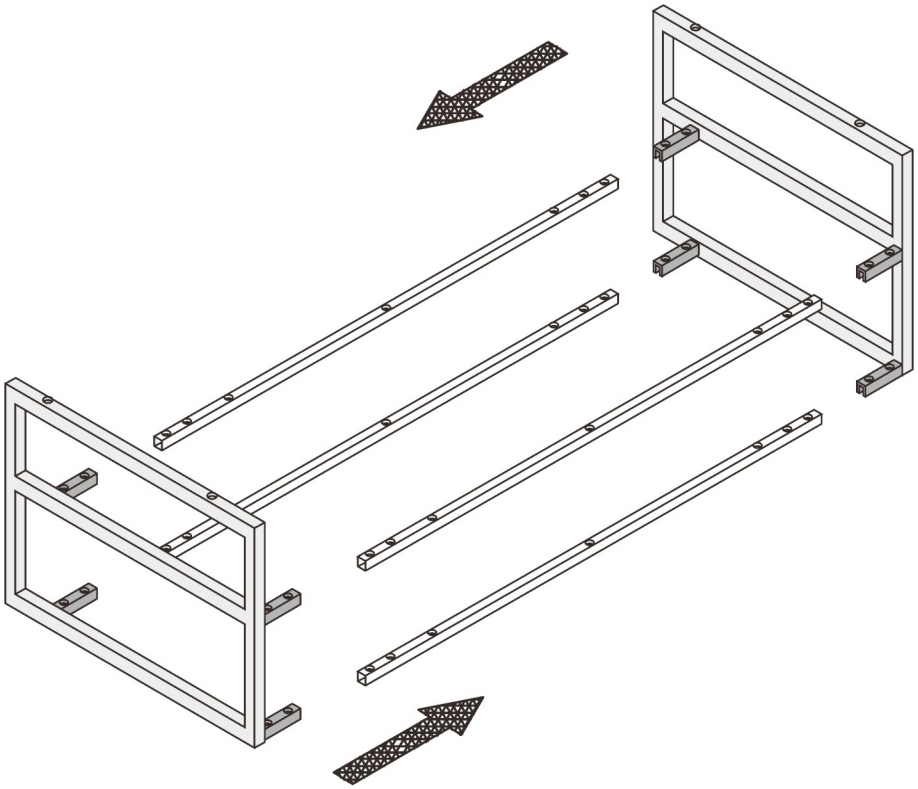


14

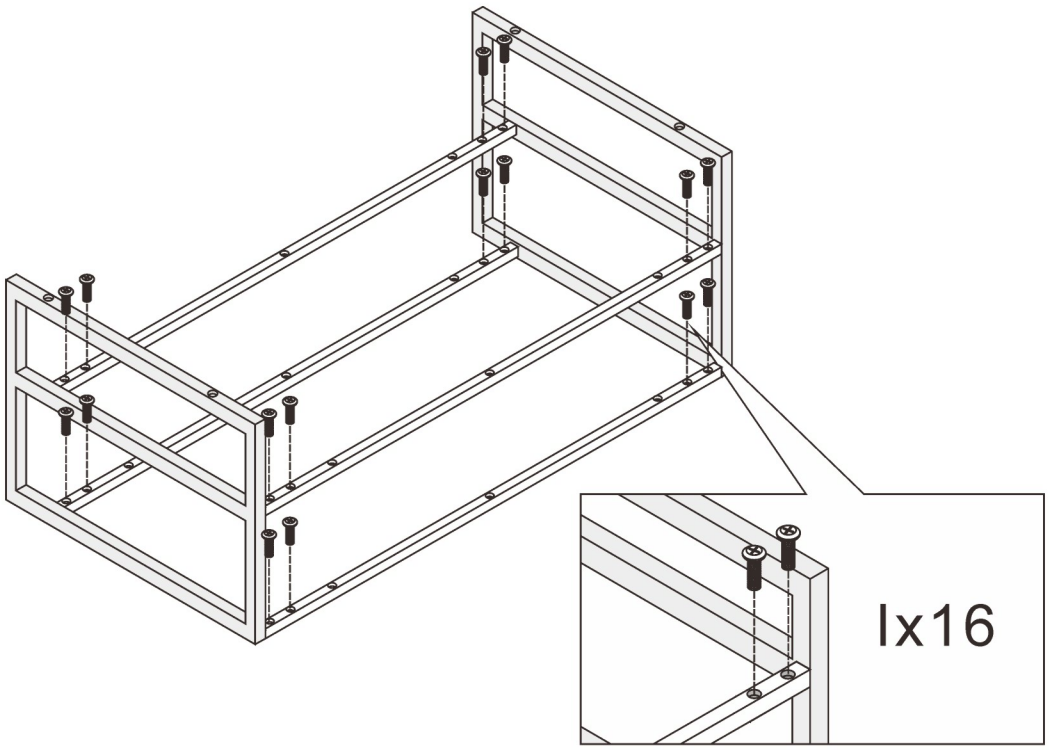



| | |
|---|---|
| I | 16PCS |
|  | |
| 6*15mm | |

19

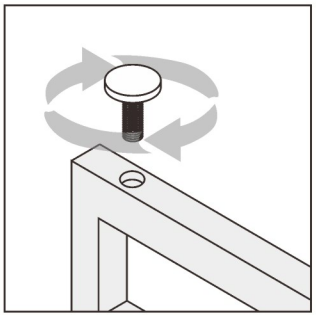


Lx4

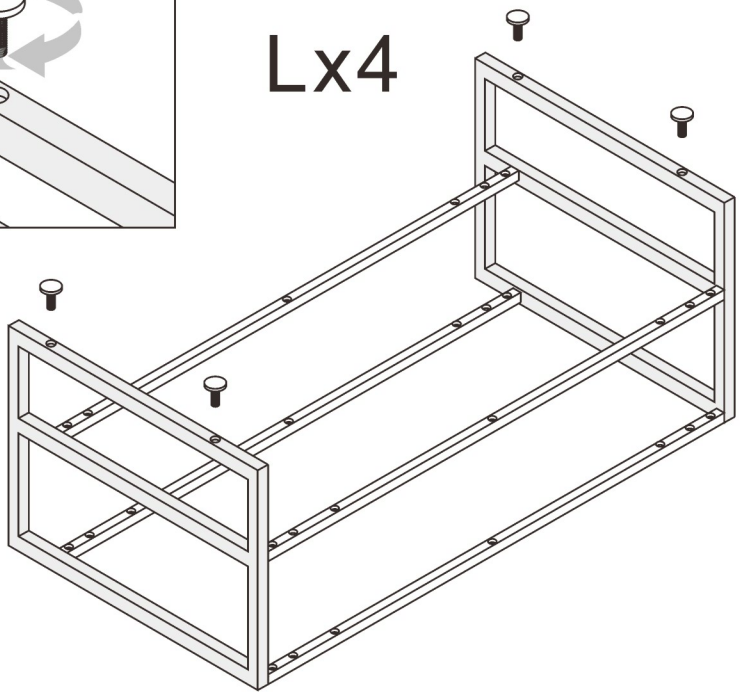

| L | 4PCS |
|---|---|
|  | |
| 6mm | |


20

Cx6

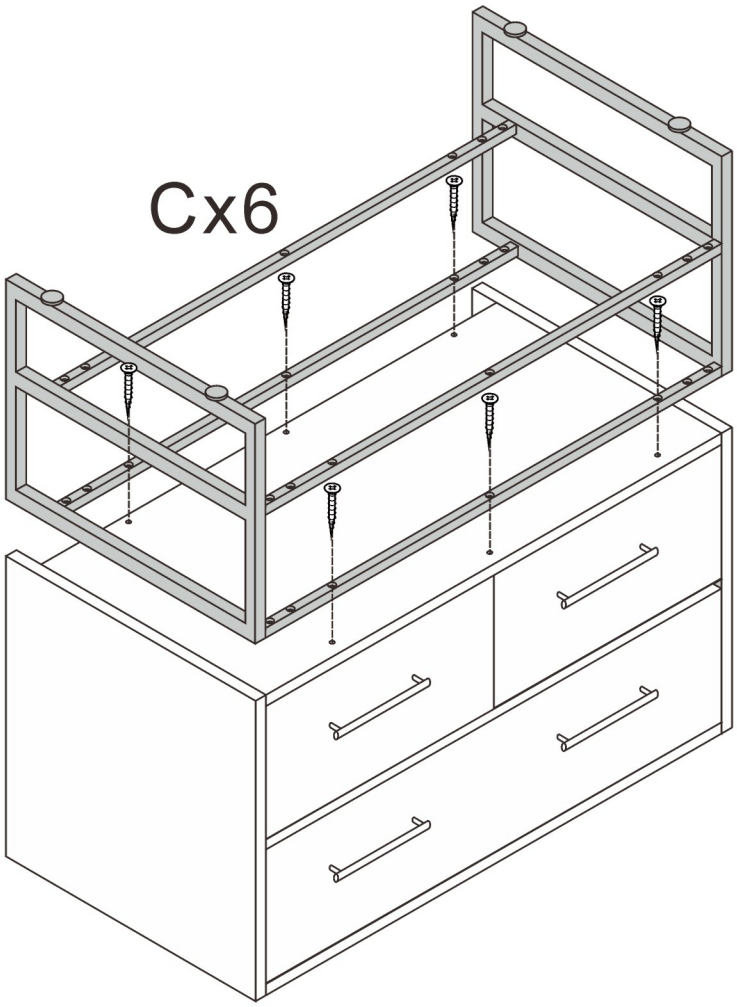


| C | 6PCS |
|---|---|
|  | |
| 3.5*14mm | |

21

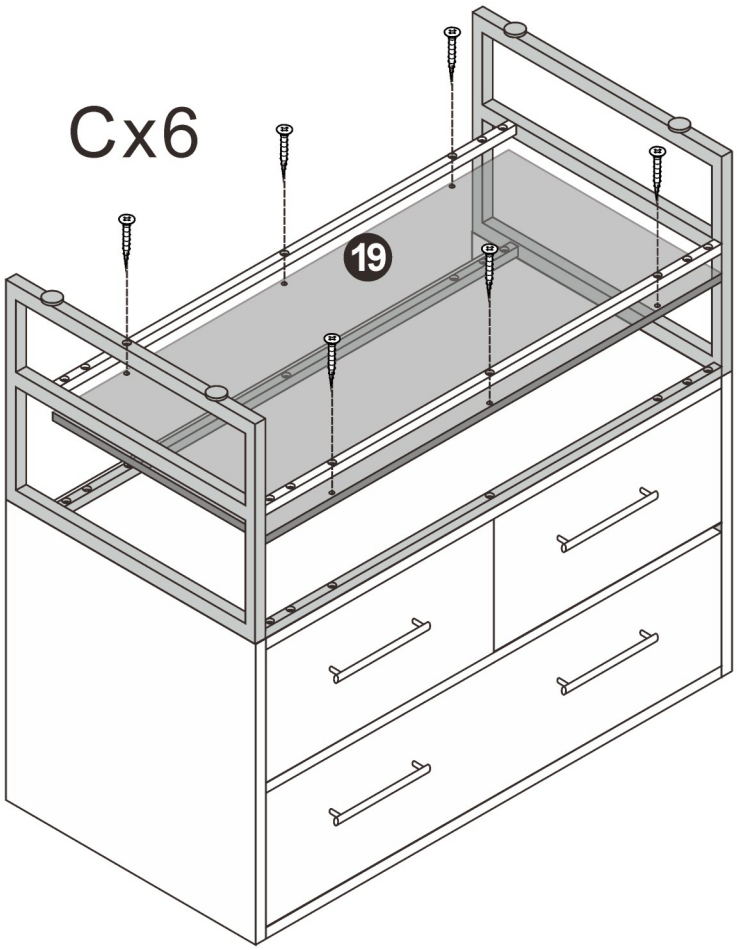


| C | 6PCS |
|---|---|
|  | |
| 3.5*14mm | |

22

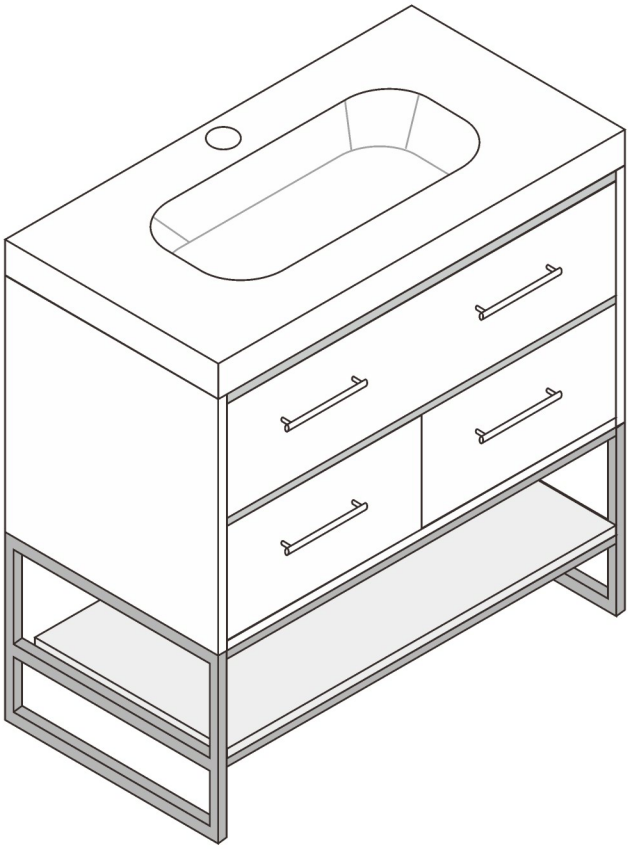

OK