


CAST ALUM. RECT COFFEE TABLE


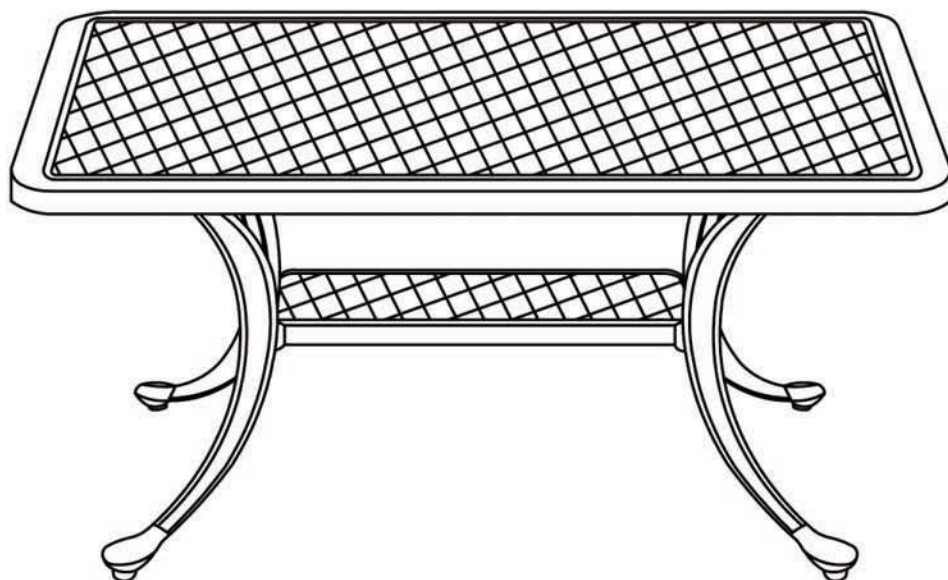


Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.


Should you experience any missing or damaged parts, **do not return to the store.**


Care: Use a soft, clean cloth that will not scratch the surface when cleaning. The use of solvents is not necessary. Should you choose to use solvents, test in an inconspicuous area first to avoid damaging the finish. To clean, simply use a soft, clean cloth lightly dampened with water.

PARTS LIST

A 	B 	C 
Leg 4 PCS	Top 1 PC	Stretcher 1 PC

HARDWARE LIST

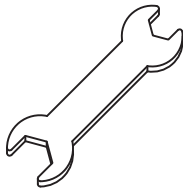1 	2 	3 	4 	5 
Cylinder Bolt (M8*35) 4PCS	Spring Washers (M8) 8 pcs.	Flat Washers (M8) 8 pcs.	Nuts (M8) 8 pcs.	Nut Caps (M8) 8 pcs.
6 				
Wrench (M6 &M8) 1 PC				

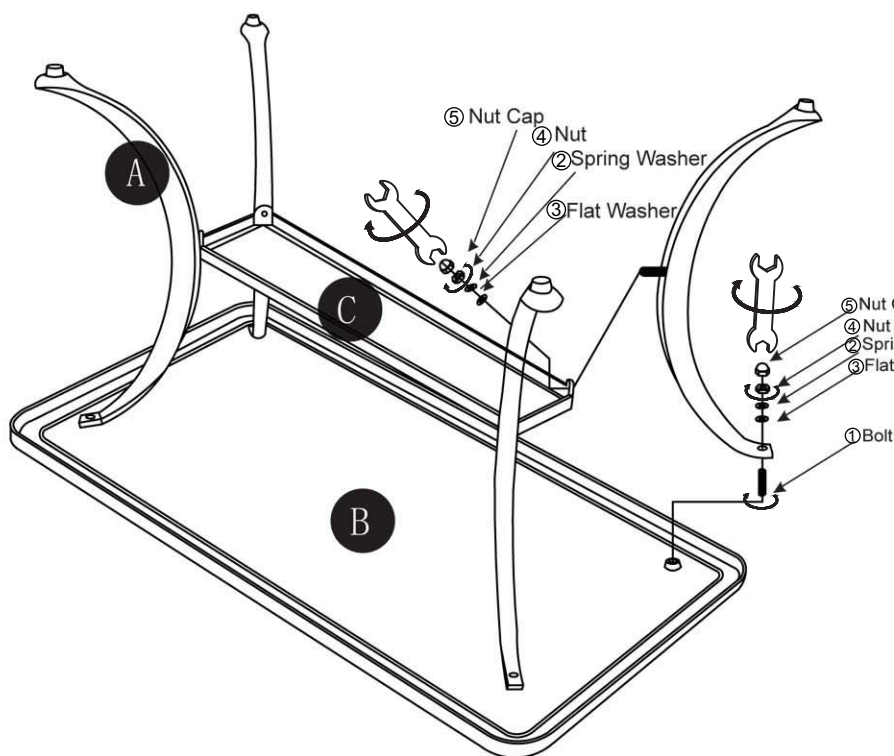

Step 1: Place Top (B)
upside down on a soft cloth.

Insert all Cylinder Bolts(Part #1) into
the pre-drilled holes of Top (B).

Step 2: Attach two adjacent Legs (B)
by inserting the Cylinder Bolts (Part #1)
through the holes in Legs (A) by fitting
the leg on top of the attached cylinder
bolt. Secure the Legs (B) using Flat
Washers (Part #3), Spring Washers
(Part #2), and Nuts (Part #4).
Note - -Tighten the Nuts (Part #4) only
half way at this time using
wrench (Part #6).

① Bolt		x 4
② Spring Washer		x 8
③ Flat Washer		x 8
④ Nut		x 8
⑤ Nut Cap		x 8

Step 3: Attach Stretcher (C) to the two
attached Legs (A) with Flat Washers
(Part #3), Spring Washers (Part #2),
and Nuts (Part #4).
Note - -Tighten the Nuts (Part #4) only
half way at this time.

Attach the other two legs (B) to the
Top (B) & Stretcher (C) using the
same method as the first two legs.
Tighten all Nuts (Part #4) completely.

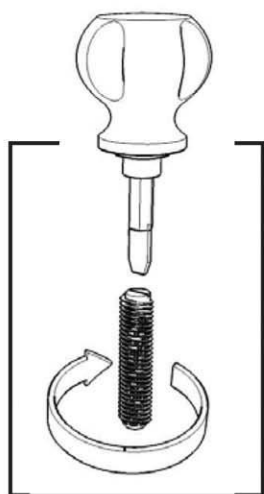


Figure 1

Flathead screw
driver(not included)

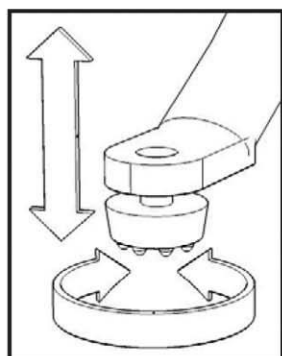


Figure 2

Step 4: Cover all Nuts (Part #4) with
Nut Caps (Part #5). Turn the table
over to the upright position. Adjust
the levelers on the bottom of the legs
to level the table.