




INSTRUCTION

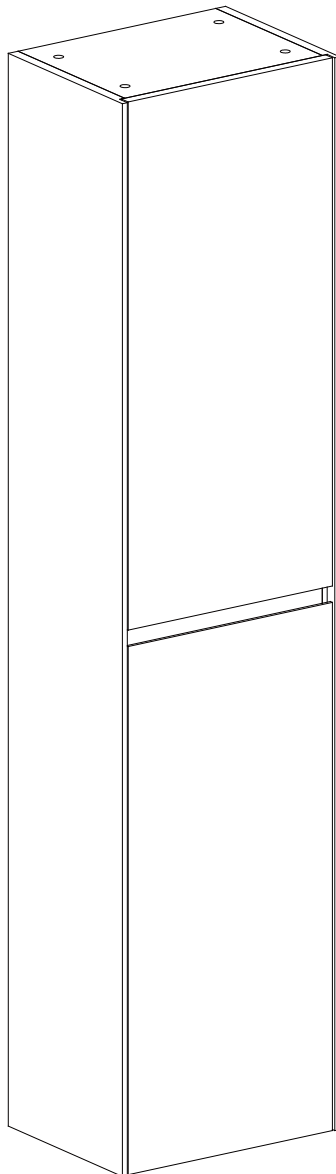


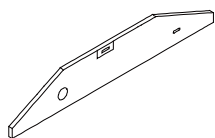


Spirit level




Tape measure
(3m~5m)

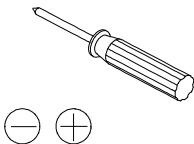

Screwdriver

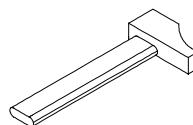

Hammer

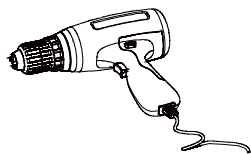


Electric drill





Drill bit
(Ø8)




Pencil

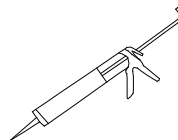


Silicone

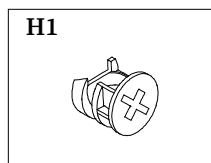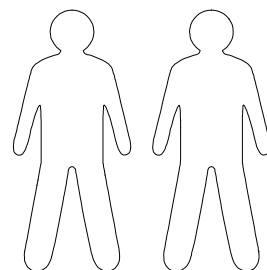


16*

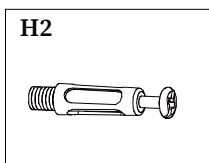


16*

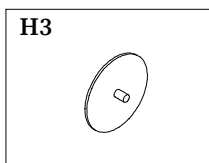


16*

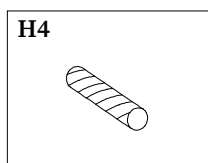


36*φ8*30

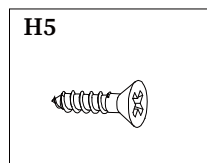


24*φ4*16

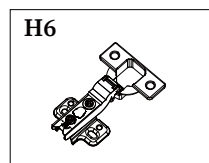


4*

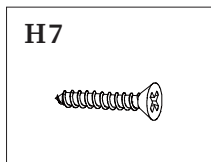


8*Ø4x28

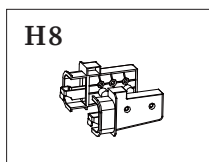


2*

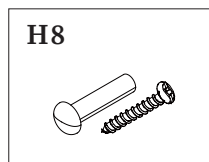


2*

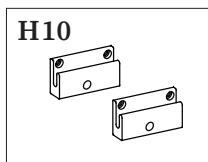



1*

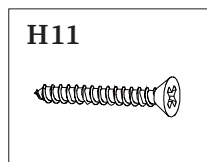



6*Ø4x50


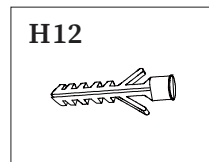


6*Ø8x40

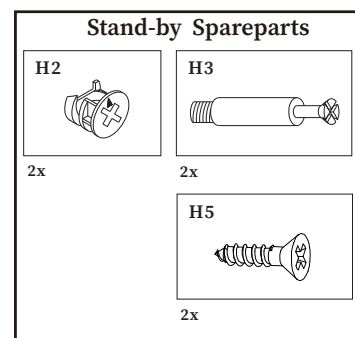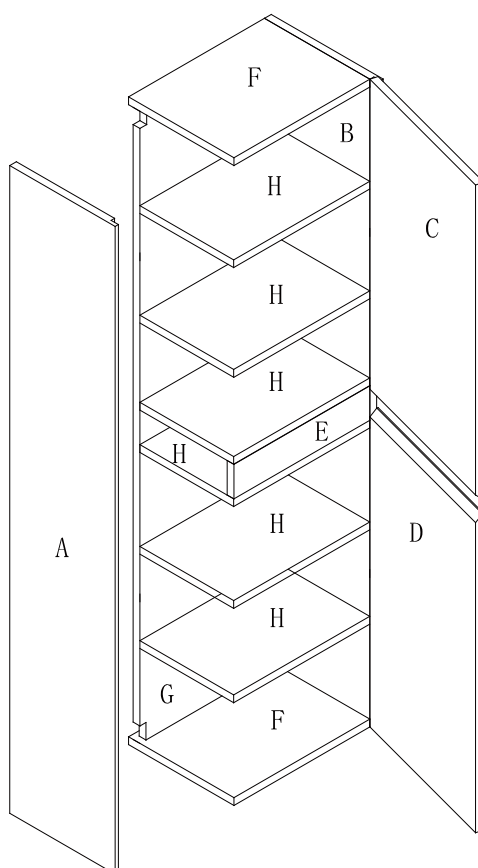

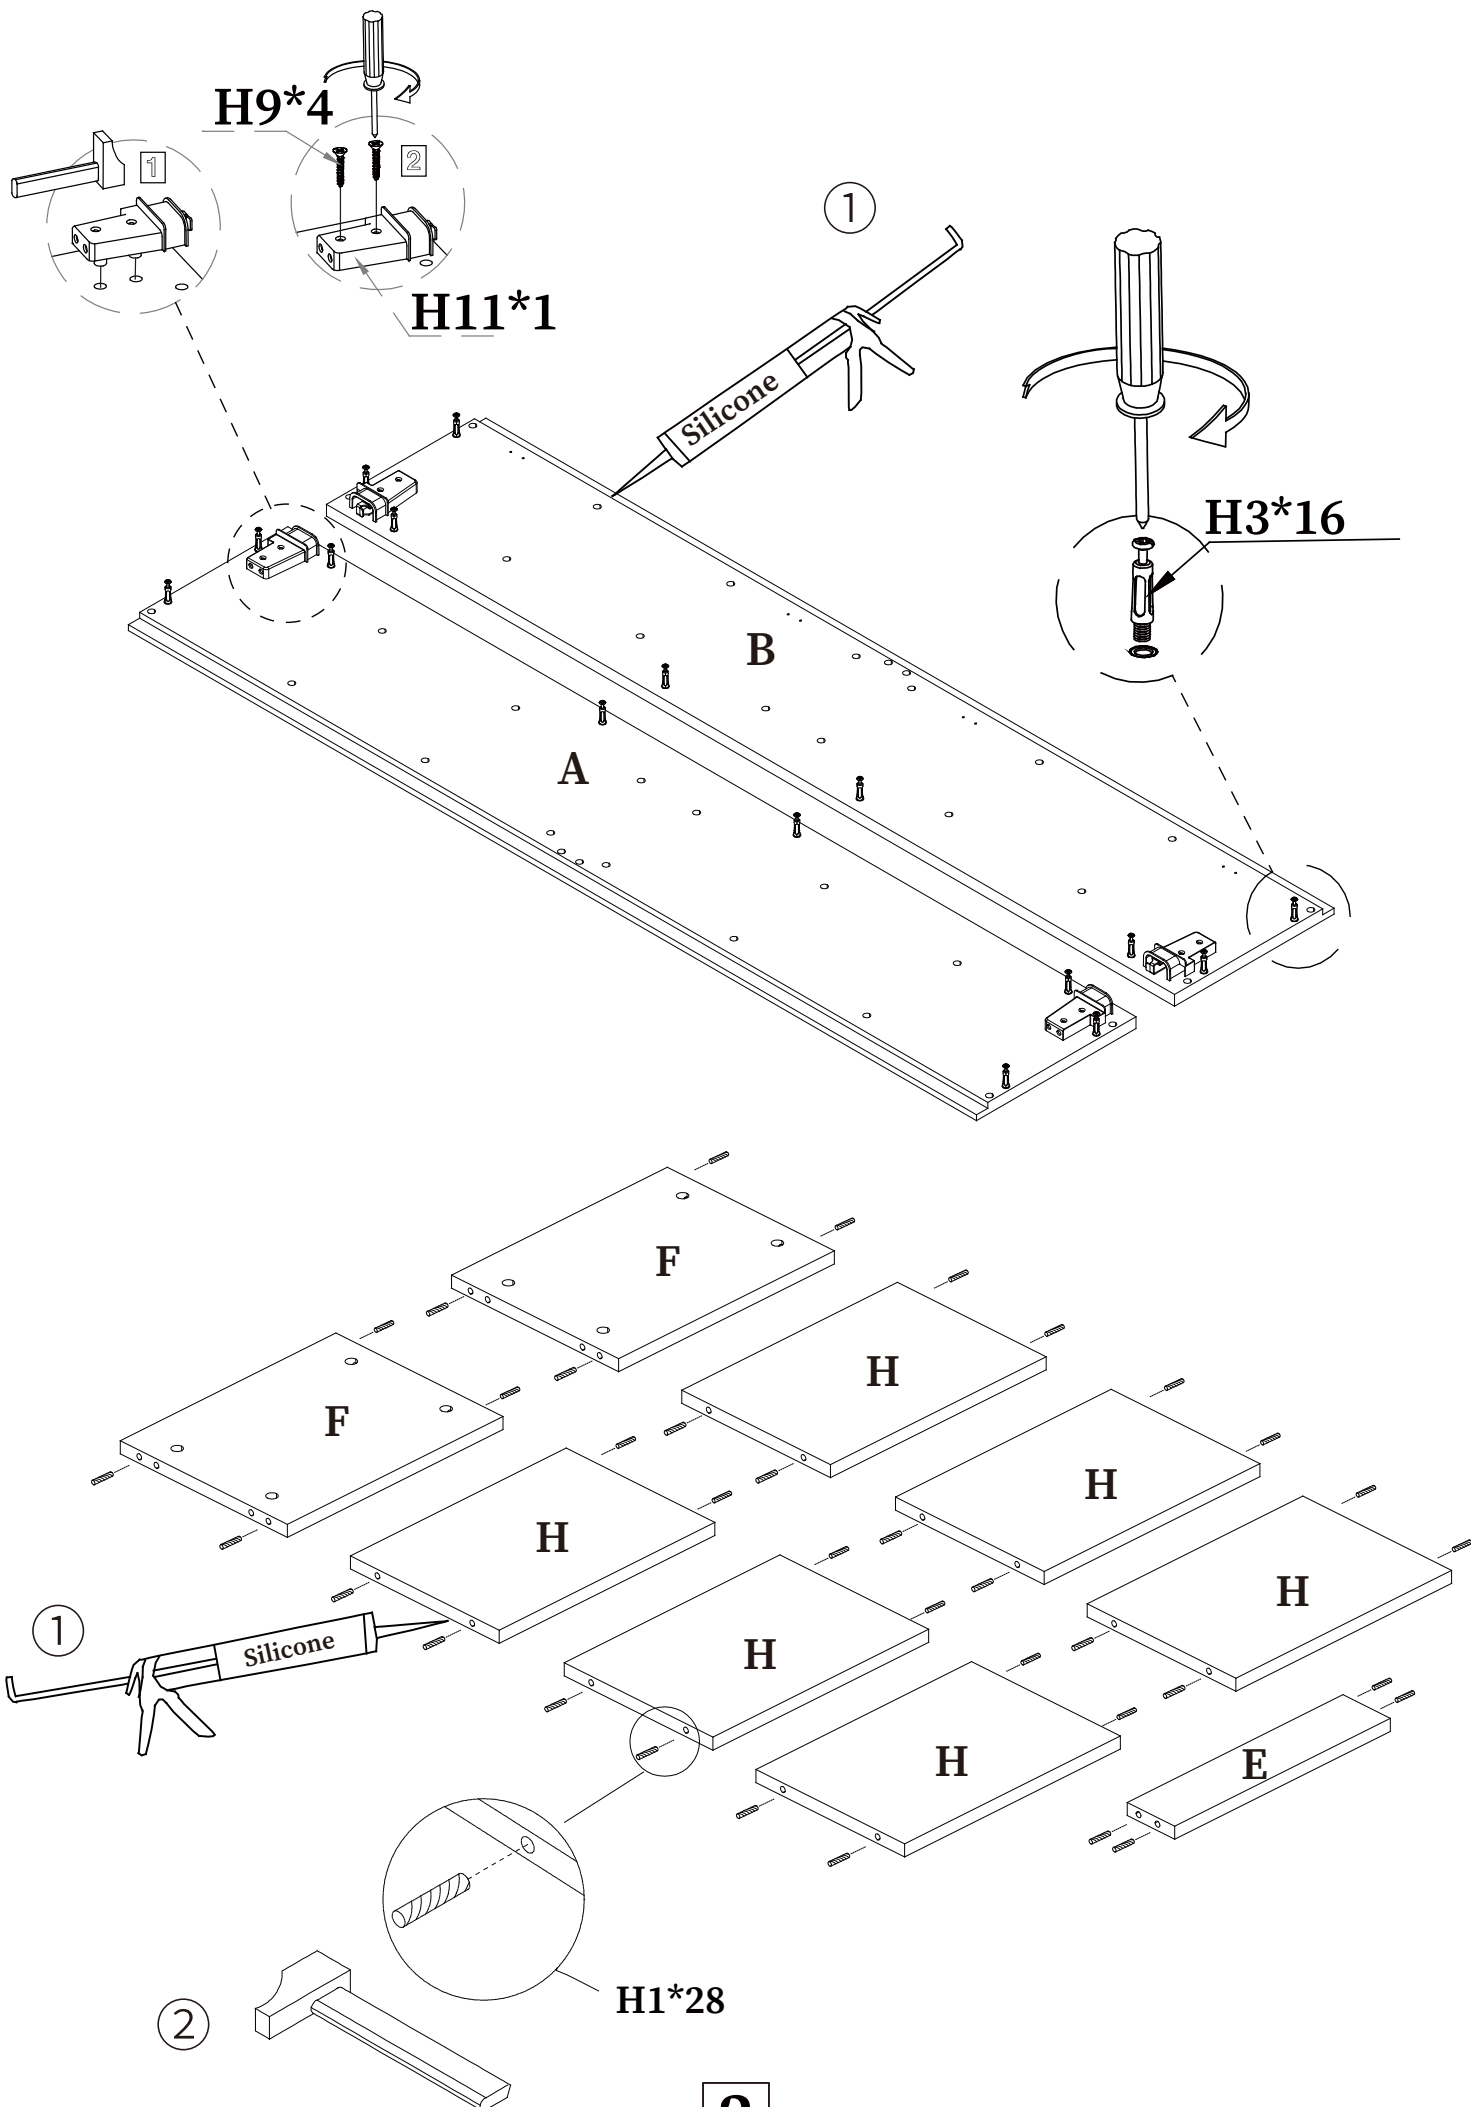

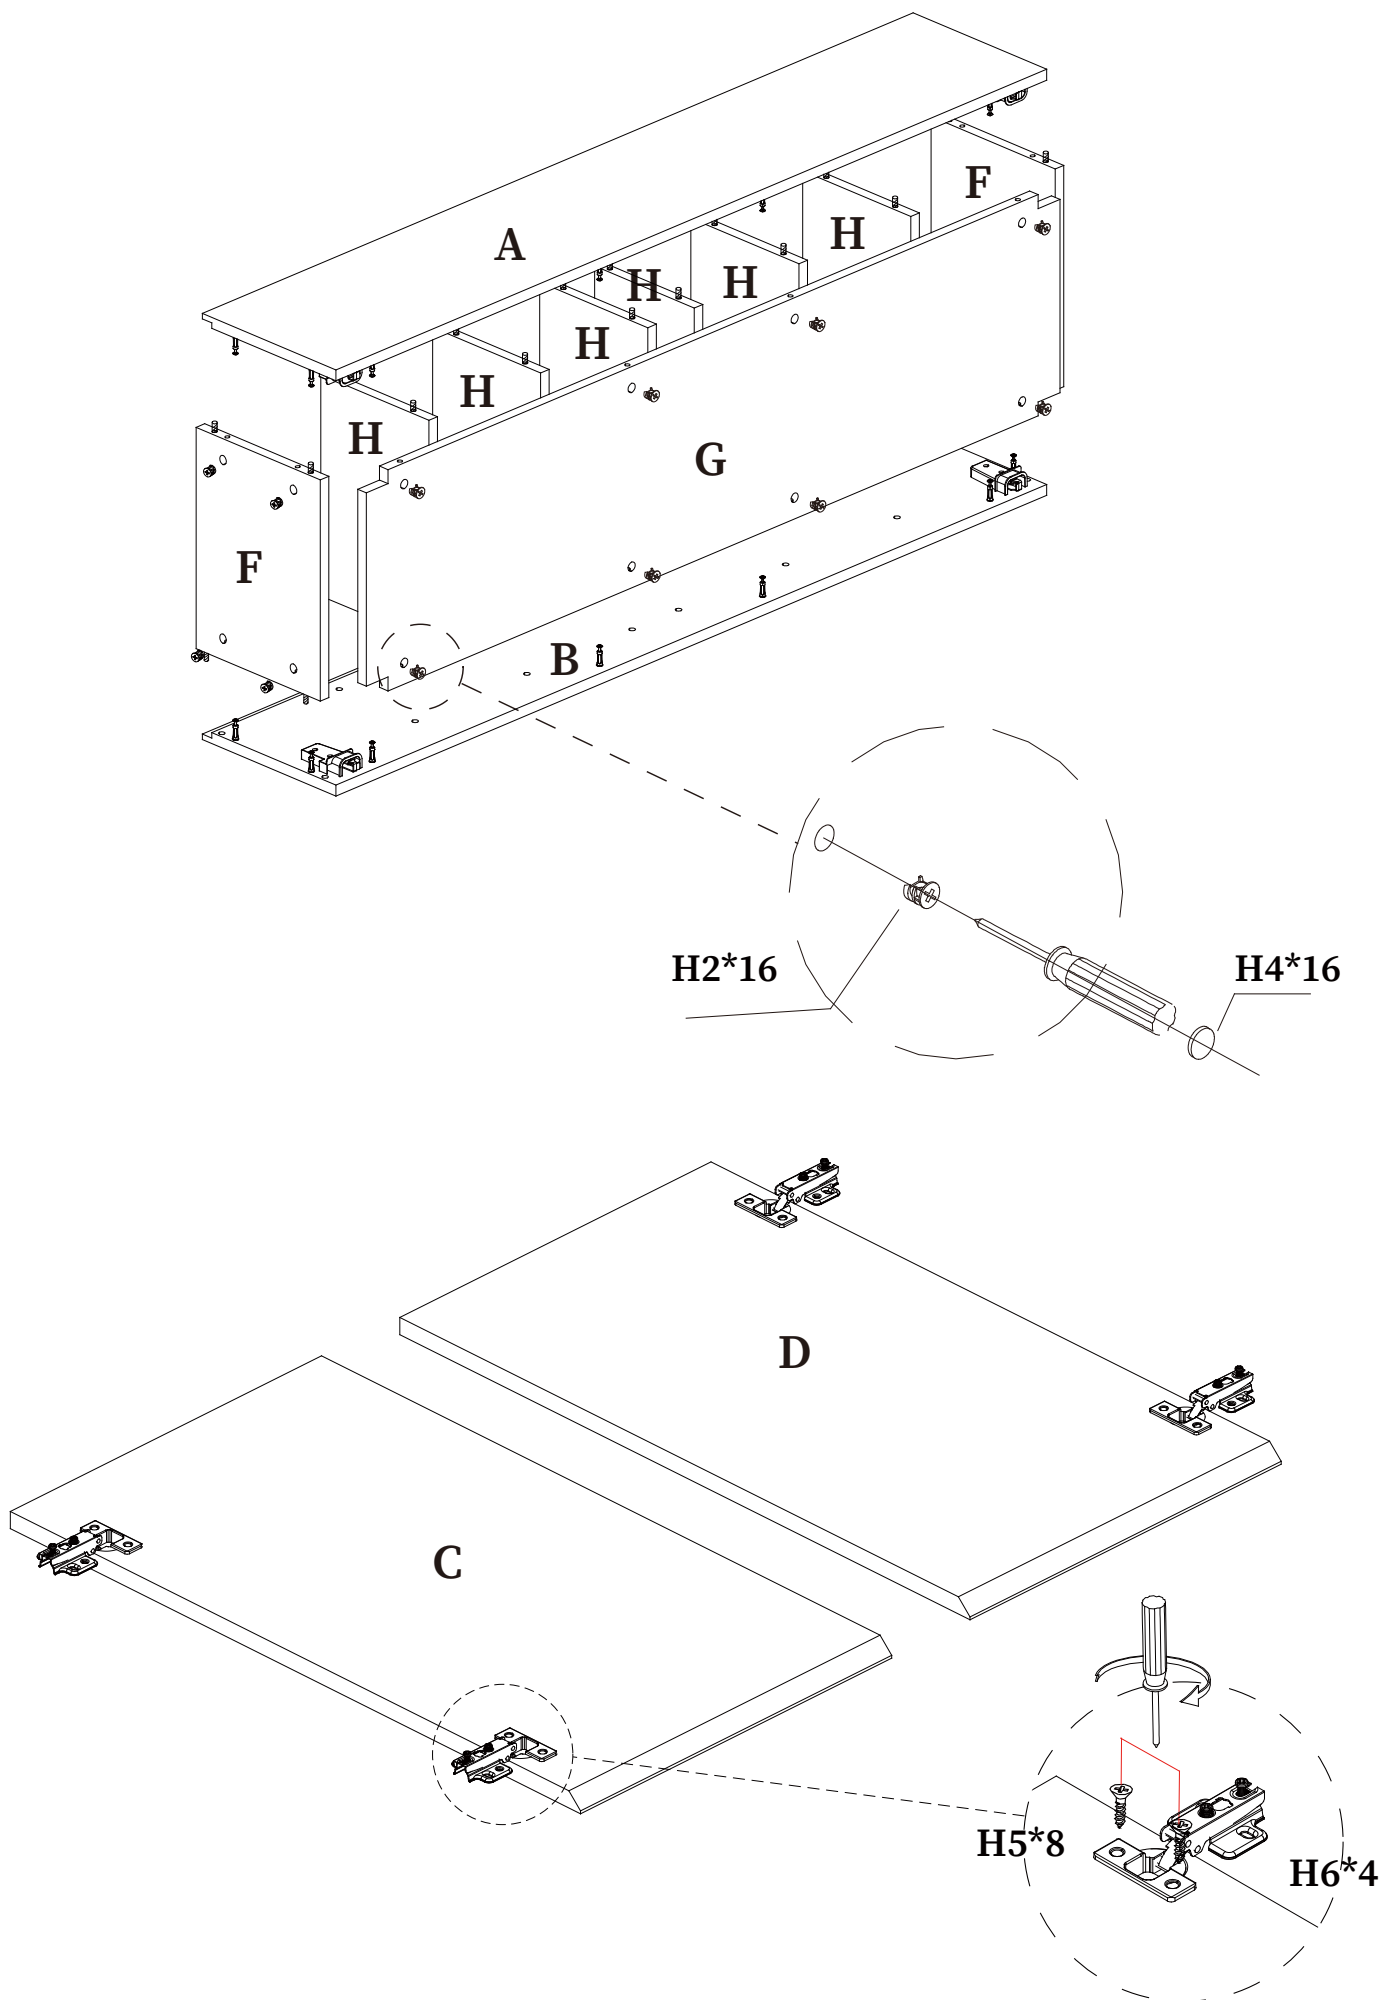

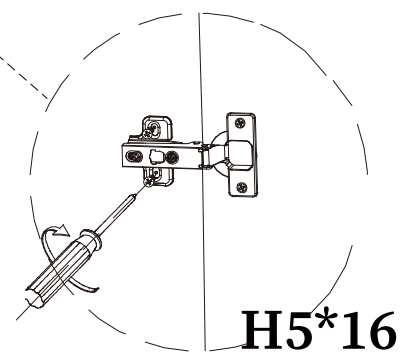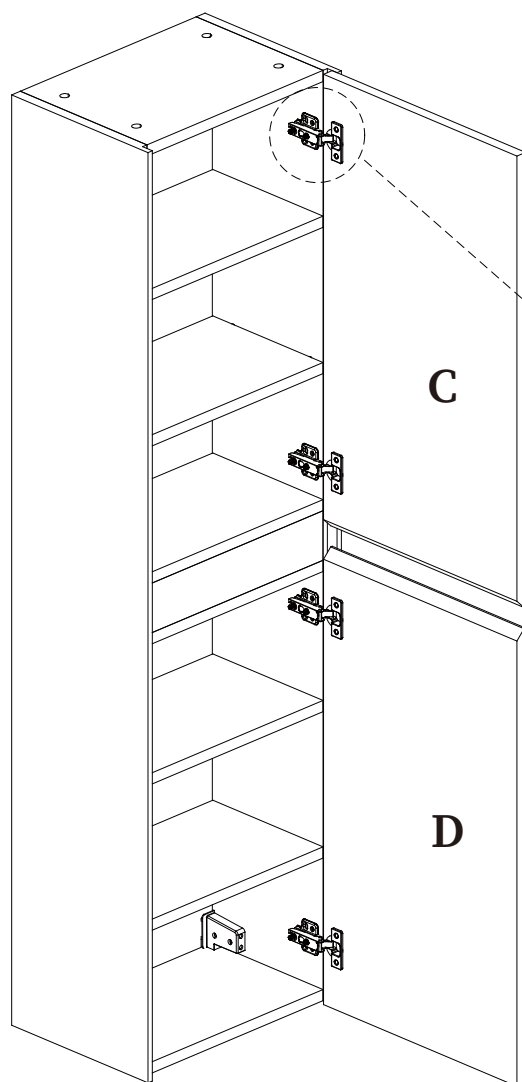

REGLAGES DES PORTES

