


# Installation Instruction

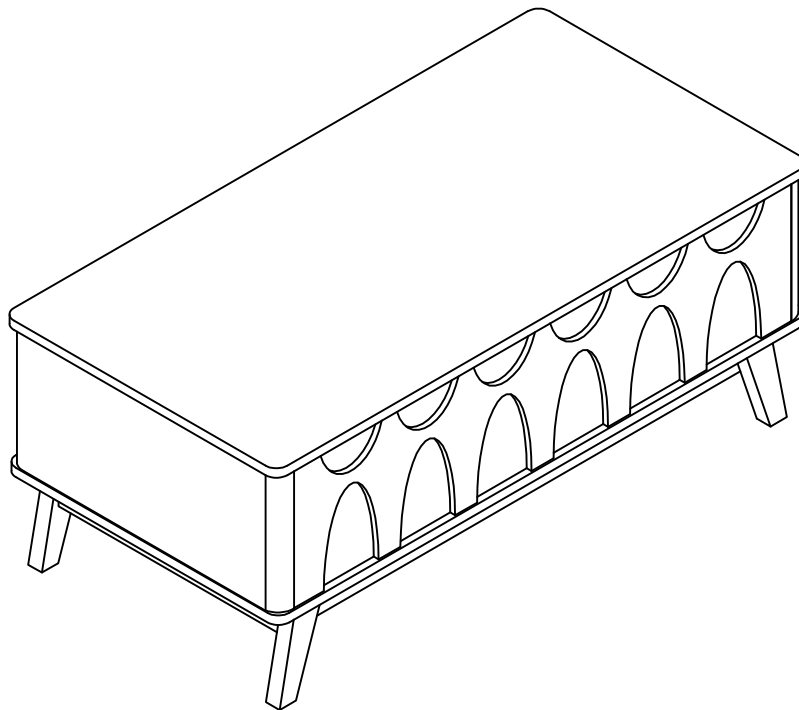


# Assembling

---


## What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver

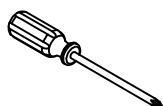

## Weight Limitation


**100** | **35**  
 lbs table top    lbs per

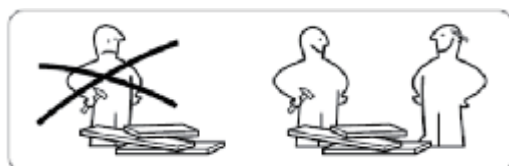


# What' included

---

Code	Description	Qty
A	Cam Bolt M6X35MM	26
B	Cam Lock 15X9MM	26
C	Wooden Dowel M8X30MM	12
D	Screw M4X50MM	10
E	Screw M3.5X14MM	20
F	Left regulator	1
G	Right regulator	1
H	Foot nail	4
I	Wrench M4X55MM	1
J	Screw M6X25MM	10
K	Phillips screwdriver	1
L	Hole position sticker	18
M	Hole position sticker	8

# The Hardwares

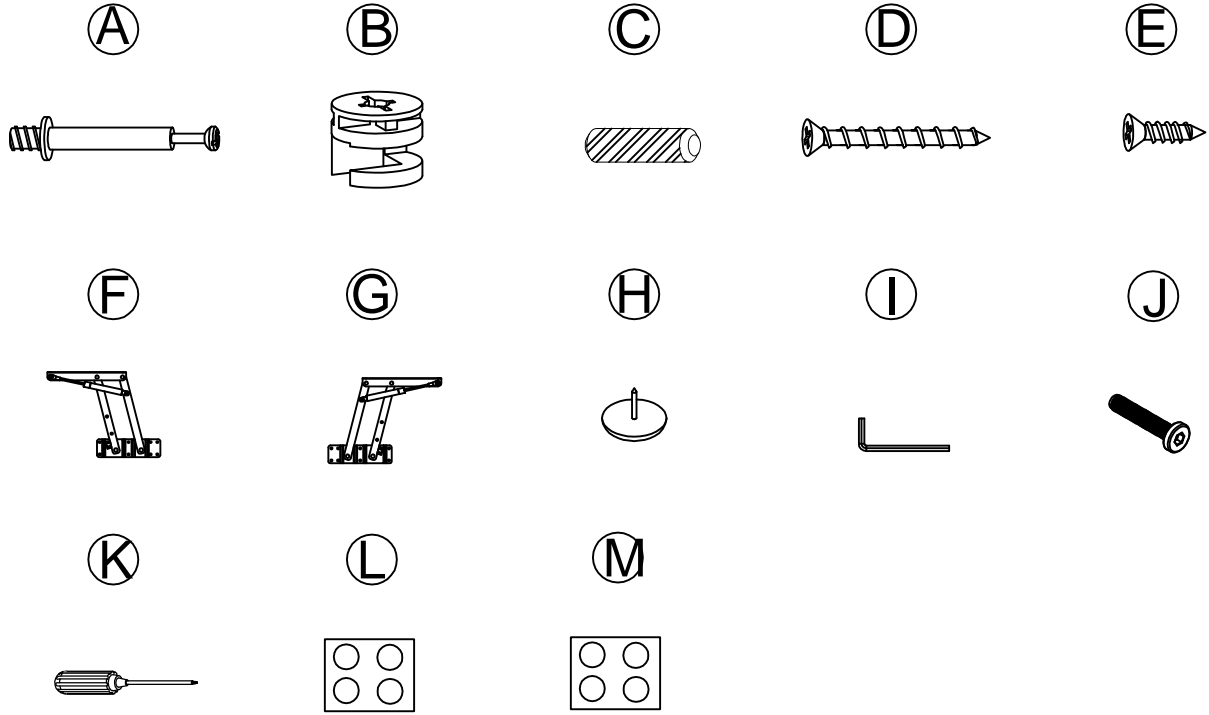


**IMPORTANT:**

- 1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2. Do not over tighten screws and bolts to avoid stripping
- 3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)



# Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Front apron	1
6	Backboard	1
7	Foot left and right connecting plate	2
8	Foot front and rear connecting plates	2
9	Connecting pipe	1
10	Solid wood foot	2
11	Solid wood foot	2









# The Accessoriess

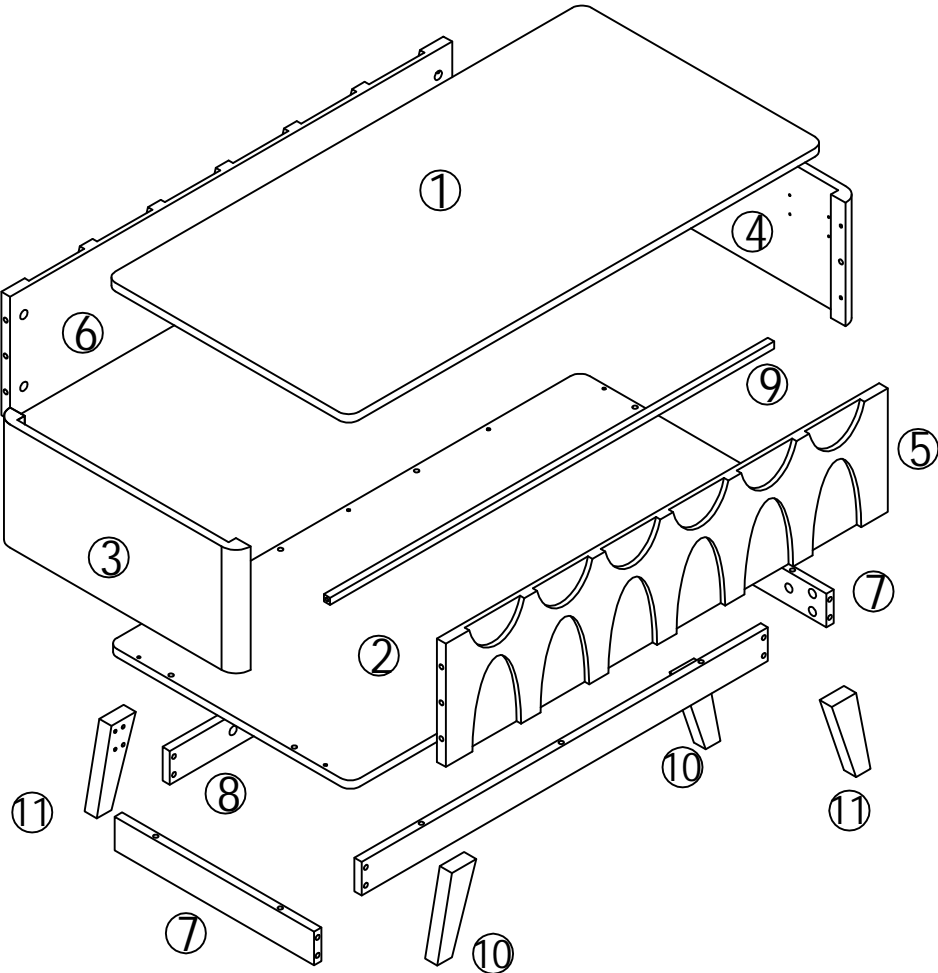



# Step 1

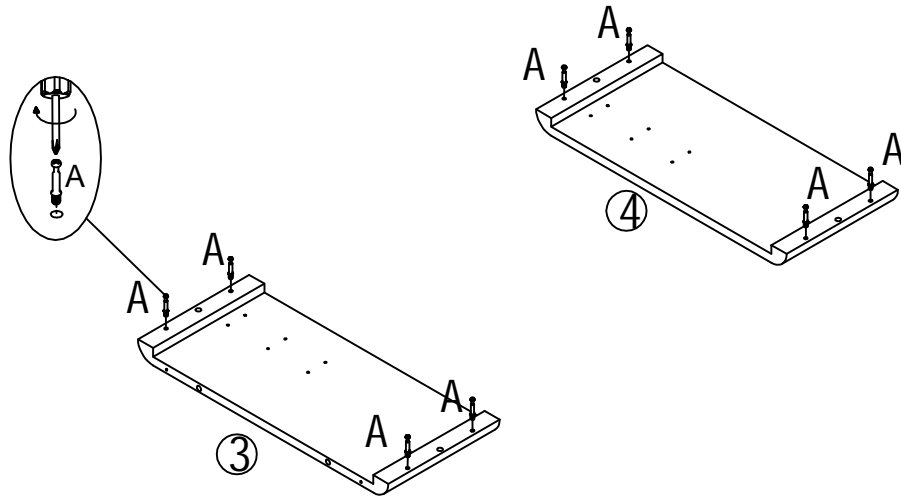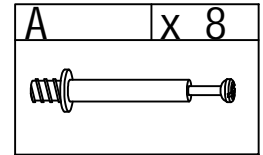



# Step 2

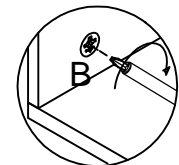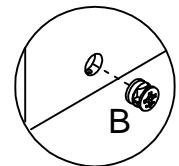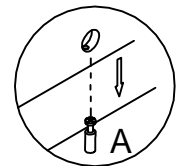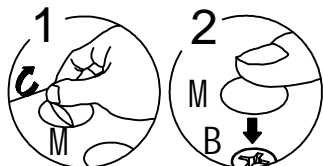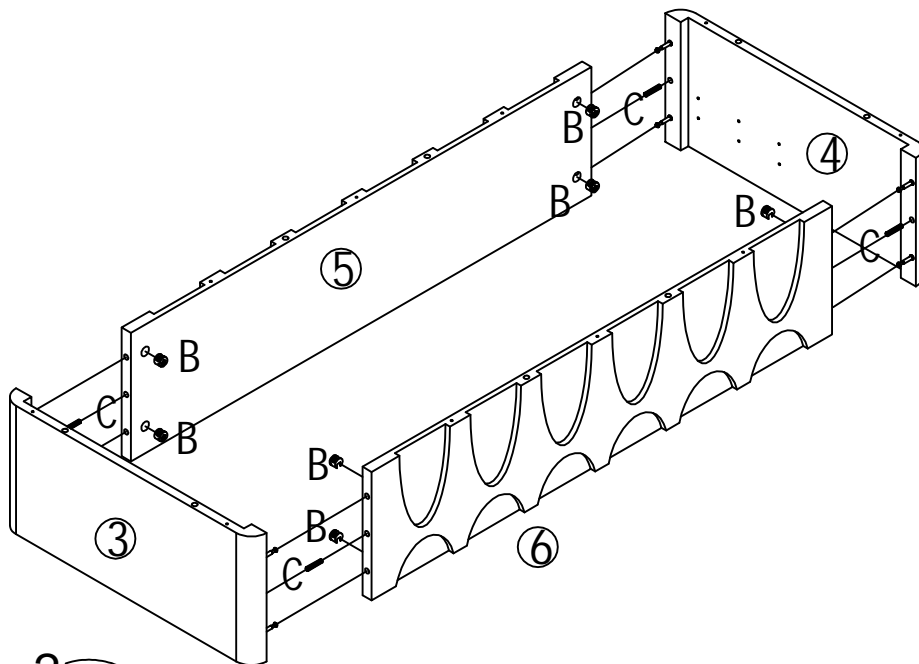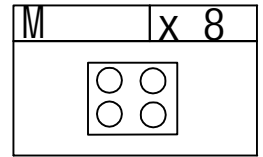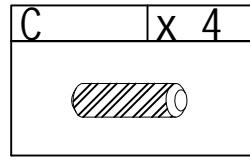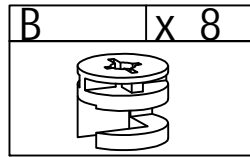



# Step 3

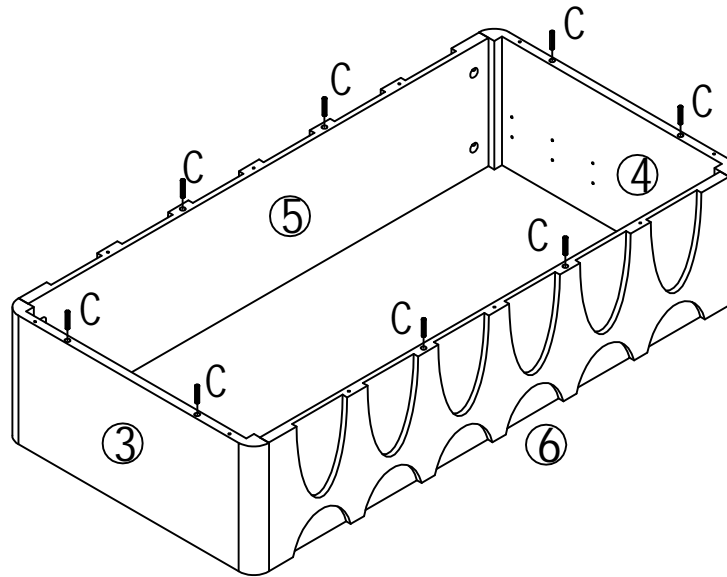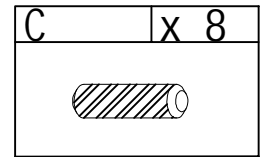



# Step 4

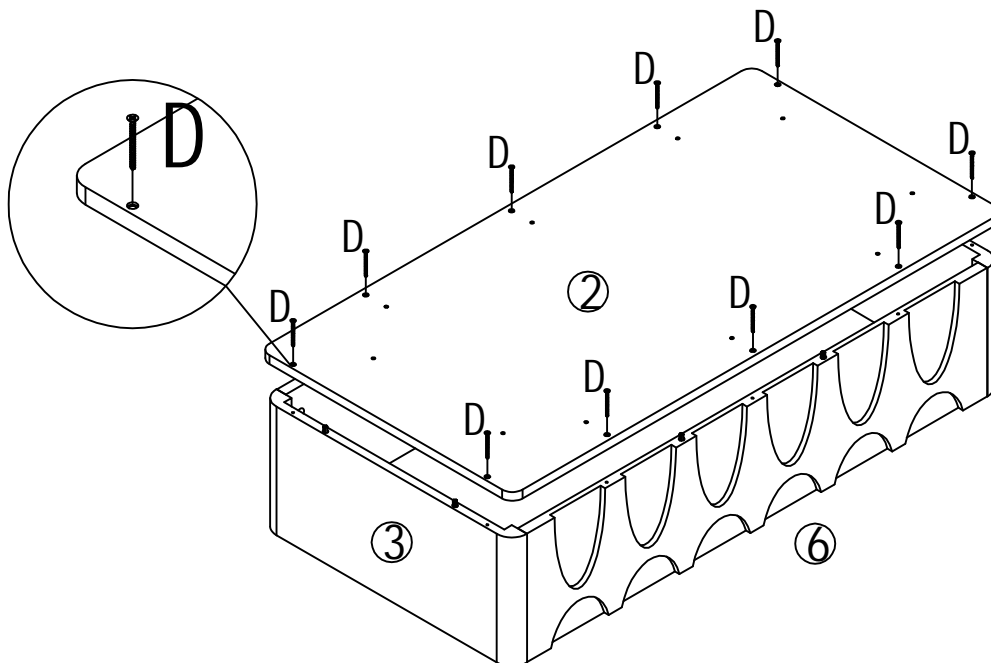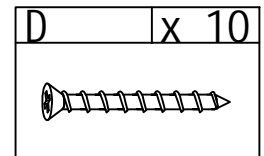

# Step 5


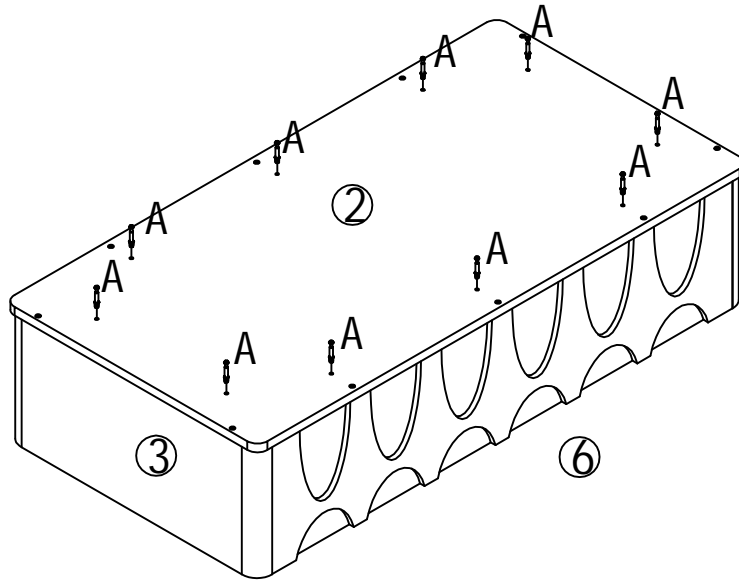
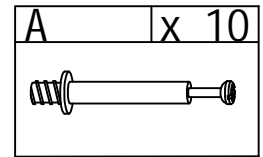


# Step 6

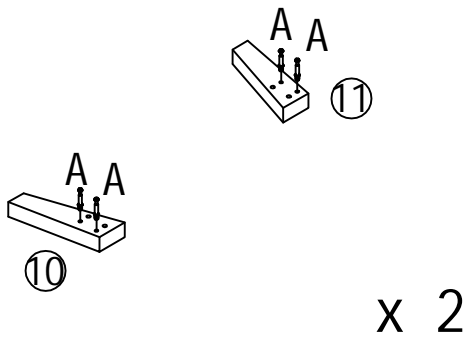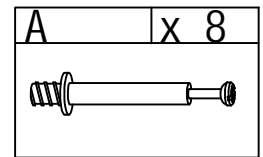









# Step 7

Pay attention to screw J do not lock lock to 90 percent.

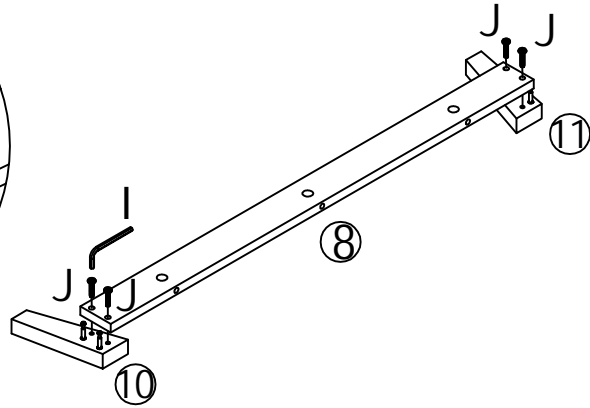
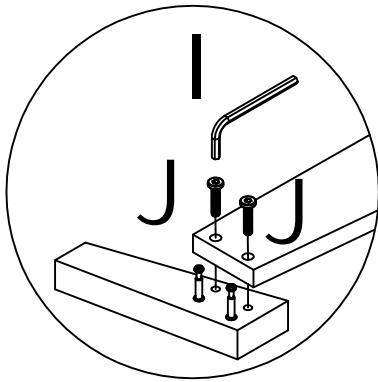
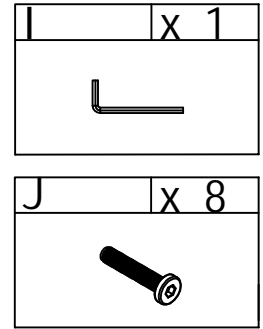


x 2

# Step 8

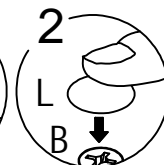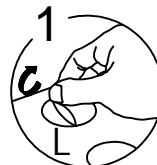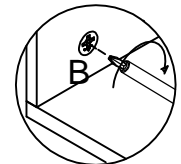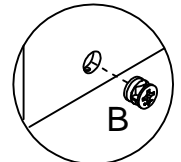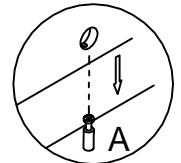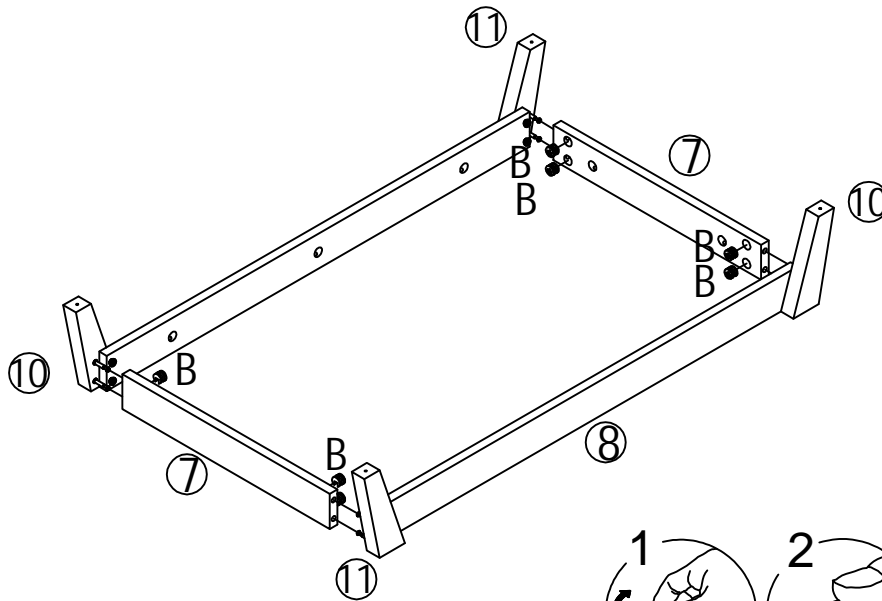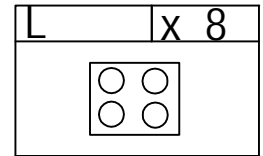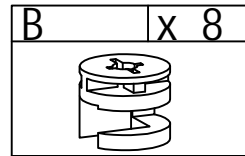





# Step 9

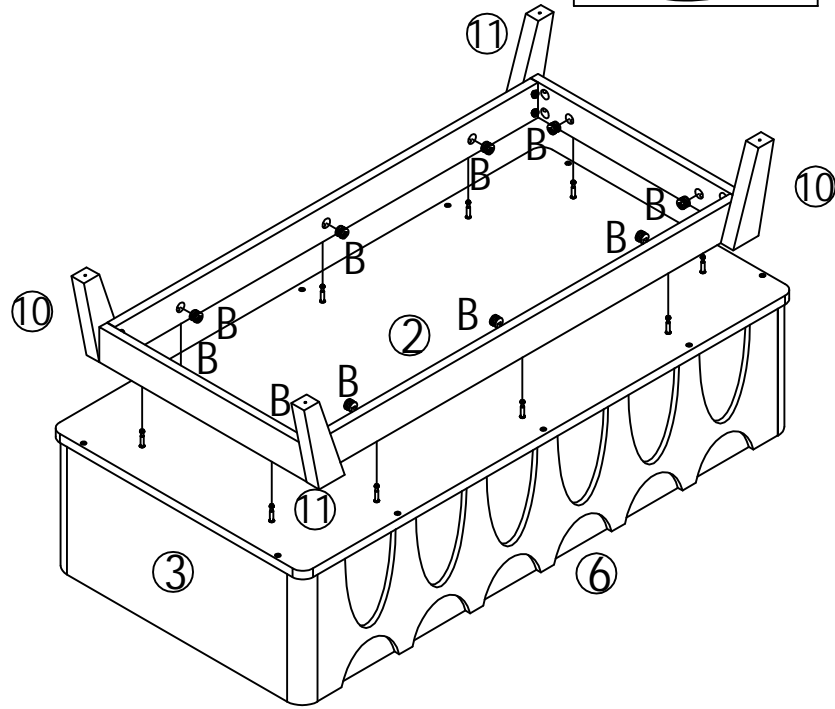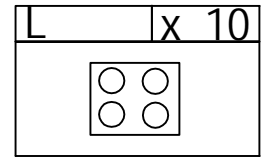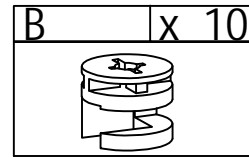






# Step 10






Lock the screw  
J 100%

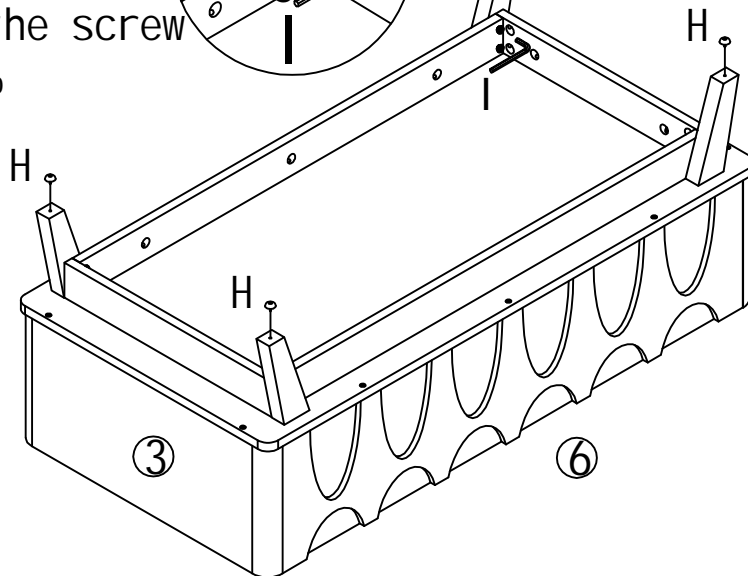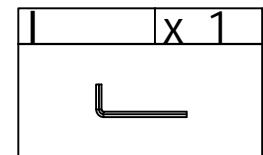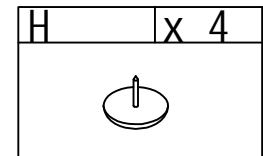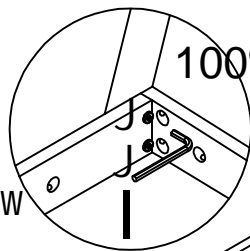



# Step 11

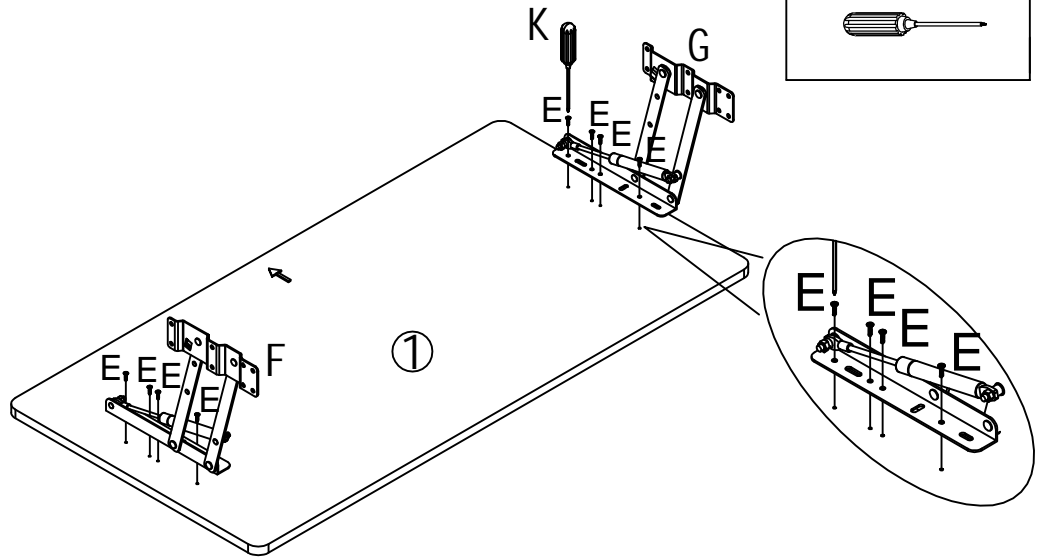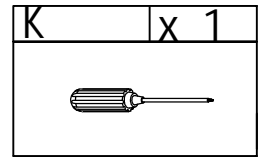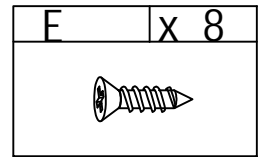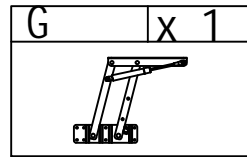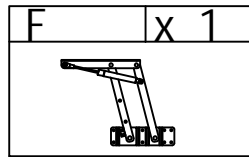

# Step 12

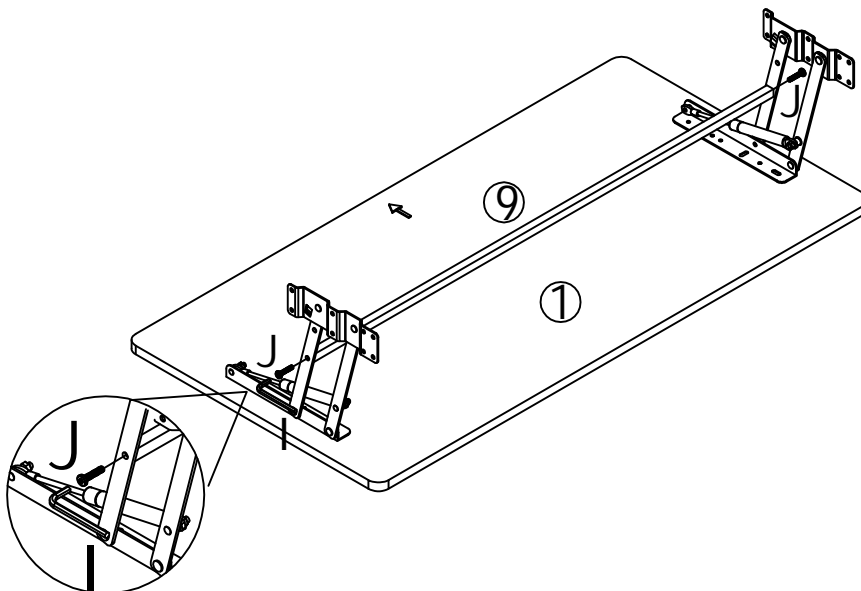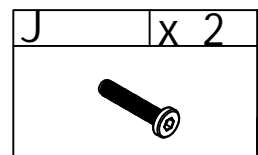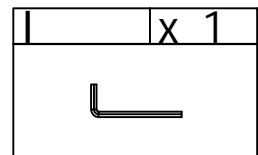

# Step 13

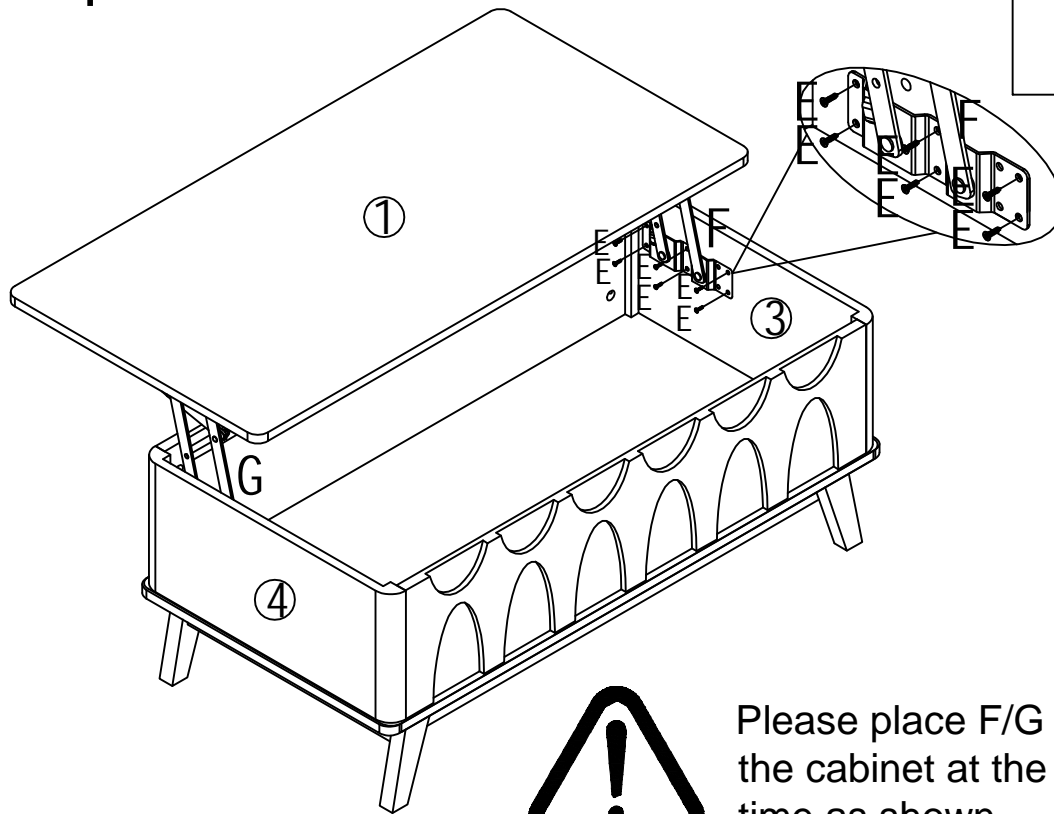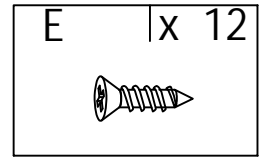

Please place F/G inside the cabinet at the same time as shown

# Step 14

