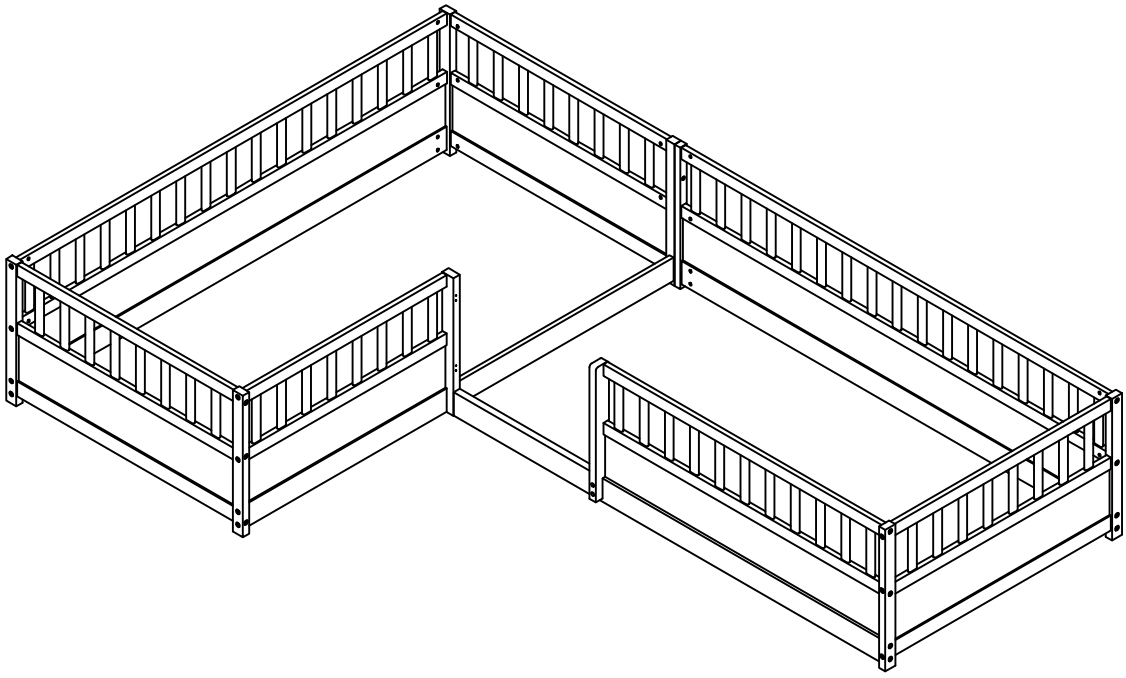
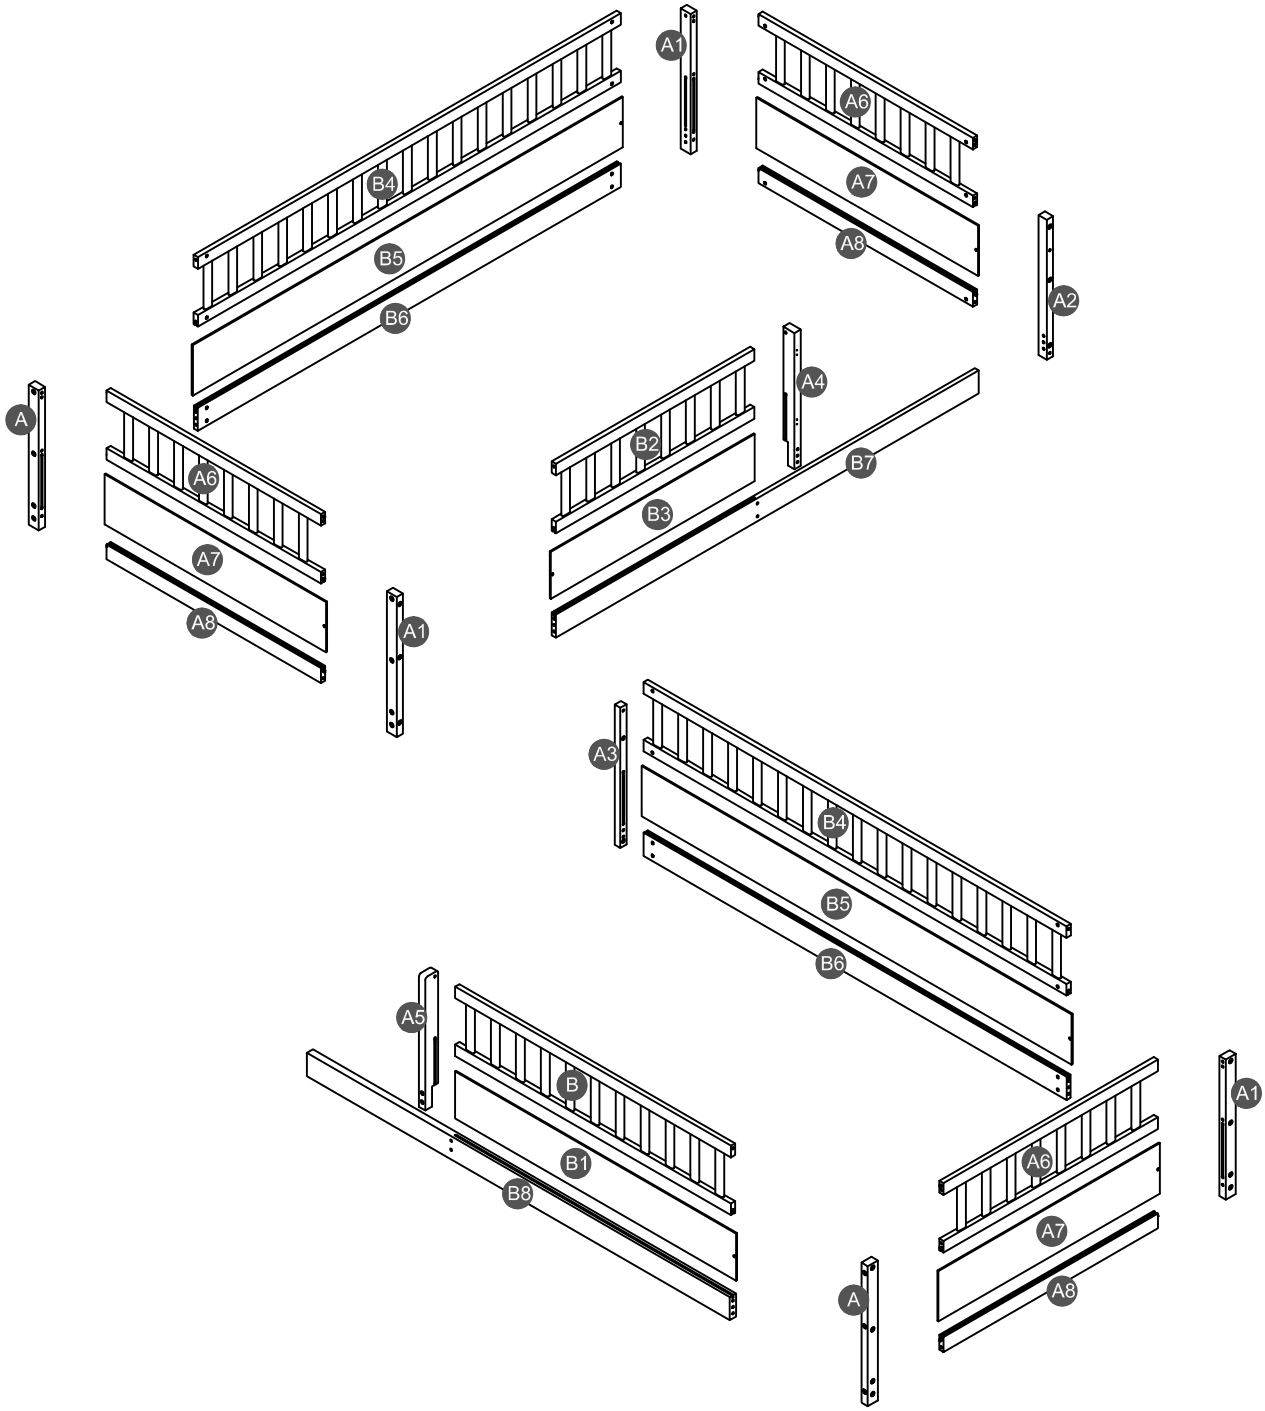
ASSEMBLY INSTRUCTIONS

L-SHAPED TWIN/TWIN FLOOR BED















SA33857




Detail View


A1
A6
A7
A8
B4
B5
B6
A2
A4
B2
B3
B7
A
A6
A7
A8
A1
A3
B4
B5
B6
A5
B
B1
B8
A1
A6
A7
A8
A


Part List


A  Leg (Left back) - 2pcs	**A1**  Leg (Left front/right back) - 3pcs	**A2**  Leg (Right front) - 1pc
A3  Support bar - 1pc	**A4**  Vertical guard rail (Left front) - 1pc	**A5**  Vertical guard rail (Right front)-1pc
A6  Guard rail HB/FB - 3pcs	**A7**  Side panel HB/FB - 3pcs	**A8**  Lower horizontal bar HB/FB - 3pcs
B  Guard rail (Right front) - 1pc	**B1**  Side panel (Right front) - 1pc	**B2**  Guard rail (Left front) - 1pc
B3  Side panel (Left front) - 1pc	**B4**  Guard rail (Back) - 2pcs	**B5**  Side panel (Back) - 2pcs
B6  Side rail (Back) - 2pcs	**B7**  Side rail (Left front) - 1pc	**B8**  Side rail (Right front) - 1pc


Hardware List

1  Ø8*30mm	**2**  (Ø15)1/4"*100mm	**3**  (Ø15)1/4"*80mm
Wood dowel (8pcs)	Hex-Head bolts (2pcs)	Hex-Head bolts (48pcs)
4  (Ø12)1/4"*60mm	**5**  (Ø12)1/4"*40mm	**6**  1/4"*15 (9.5mm)
Hex-Head bolts (2pcs)	Hex-Head bolts (2pcs)	Horizontal-Hole bolts(50pcs)
7  (1/4")4.5*58mm		
Allen key (1pc)		

OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)









Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS ！

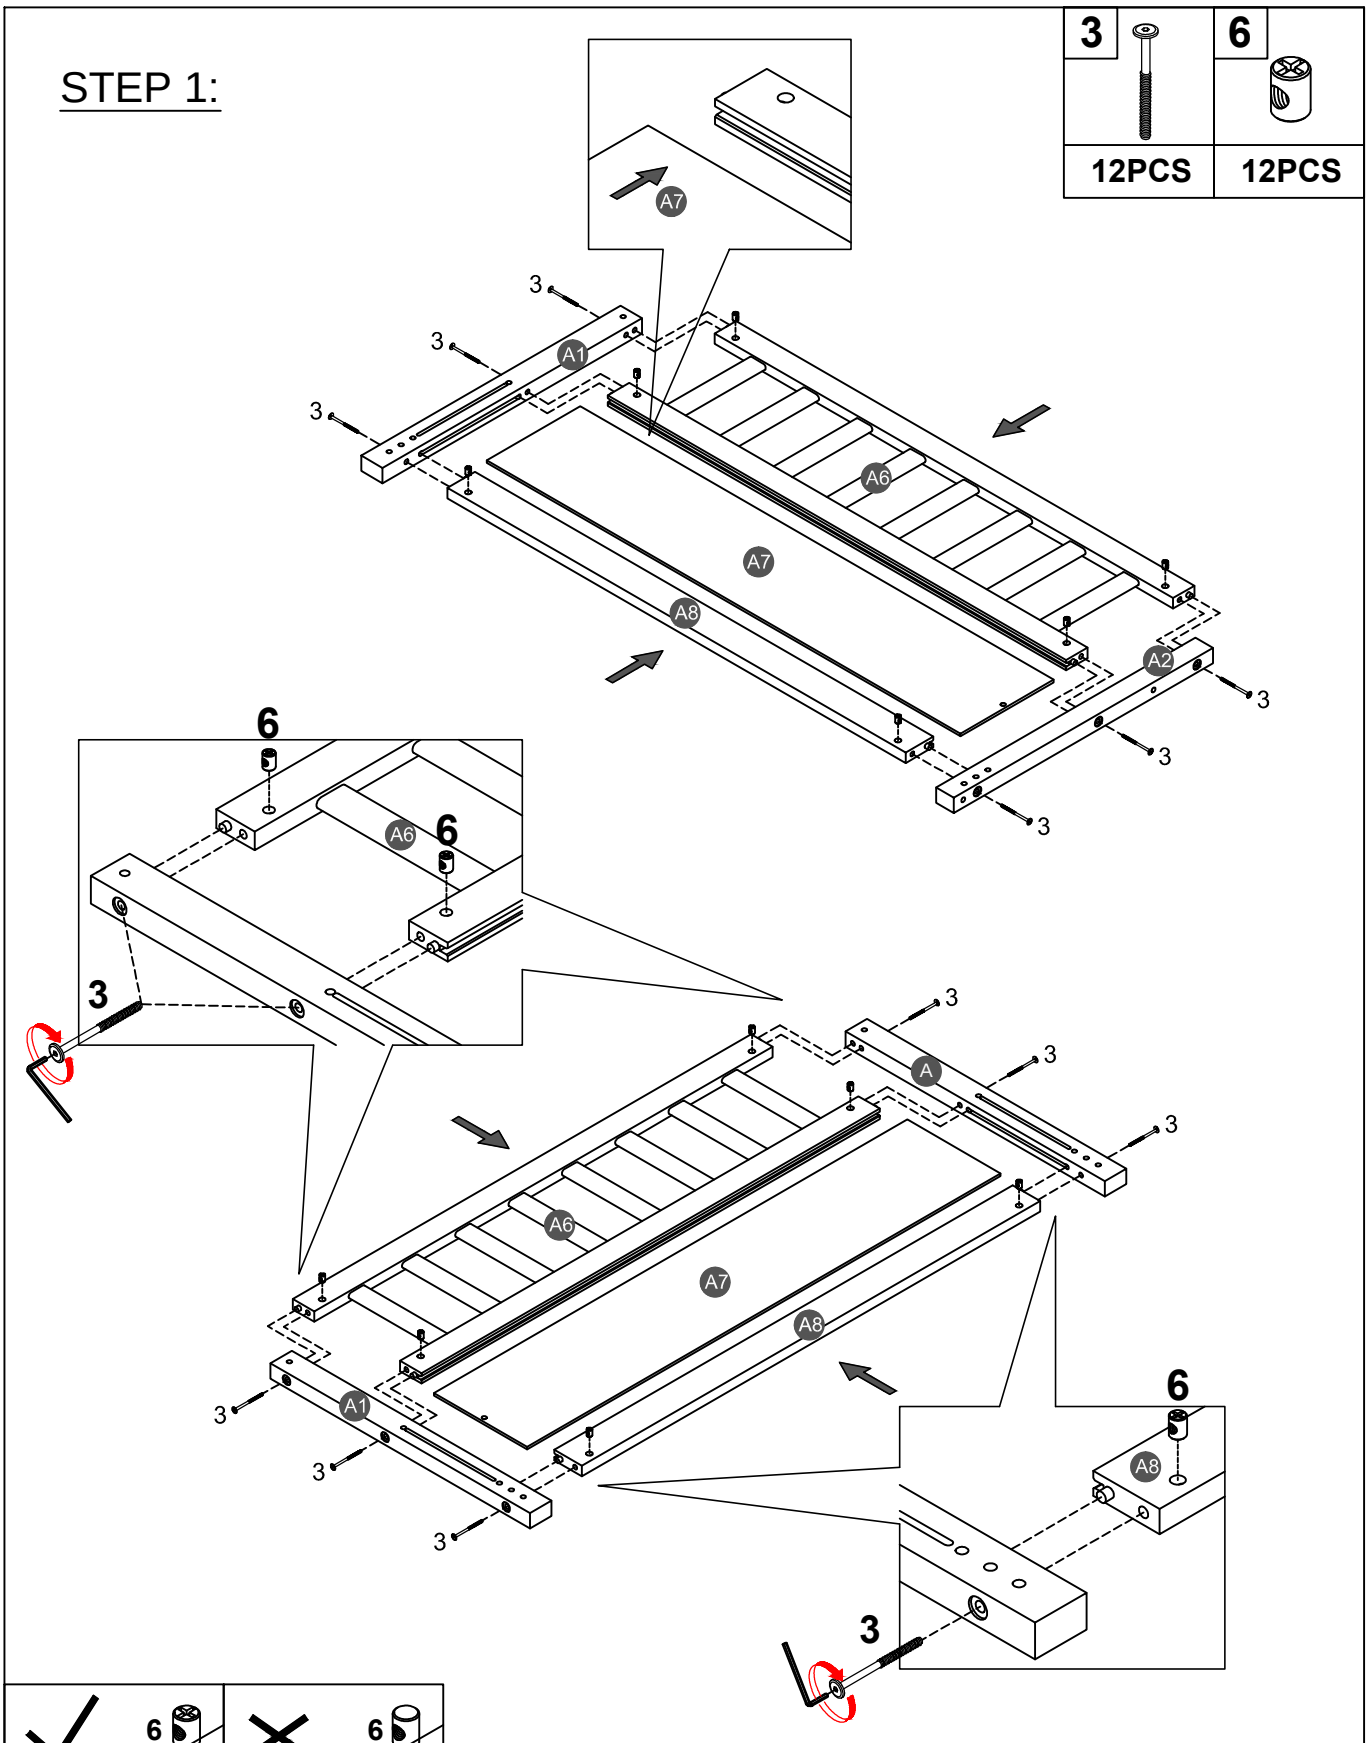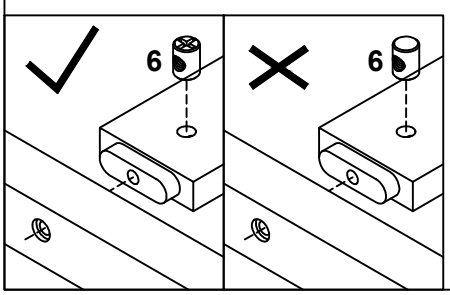STEP 1:






Note:Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened.


STEP 2:

1	3	6
2PCS	6PCS	6PCS

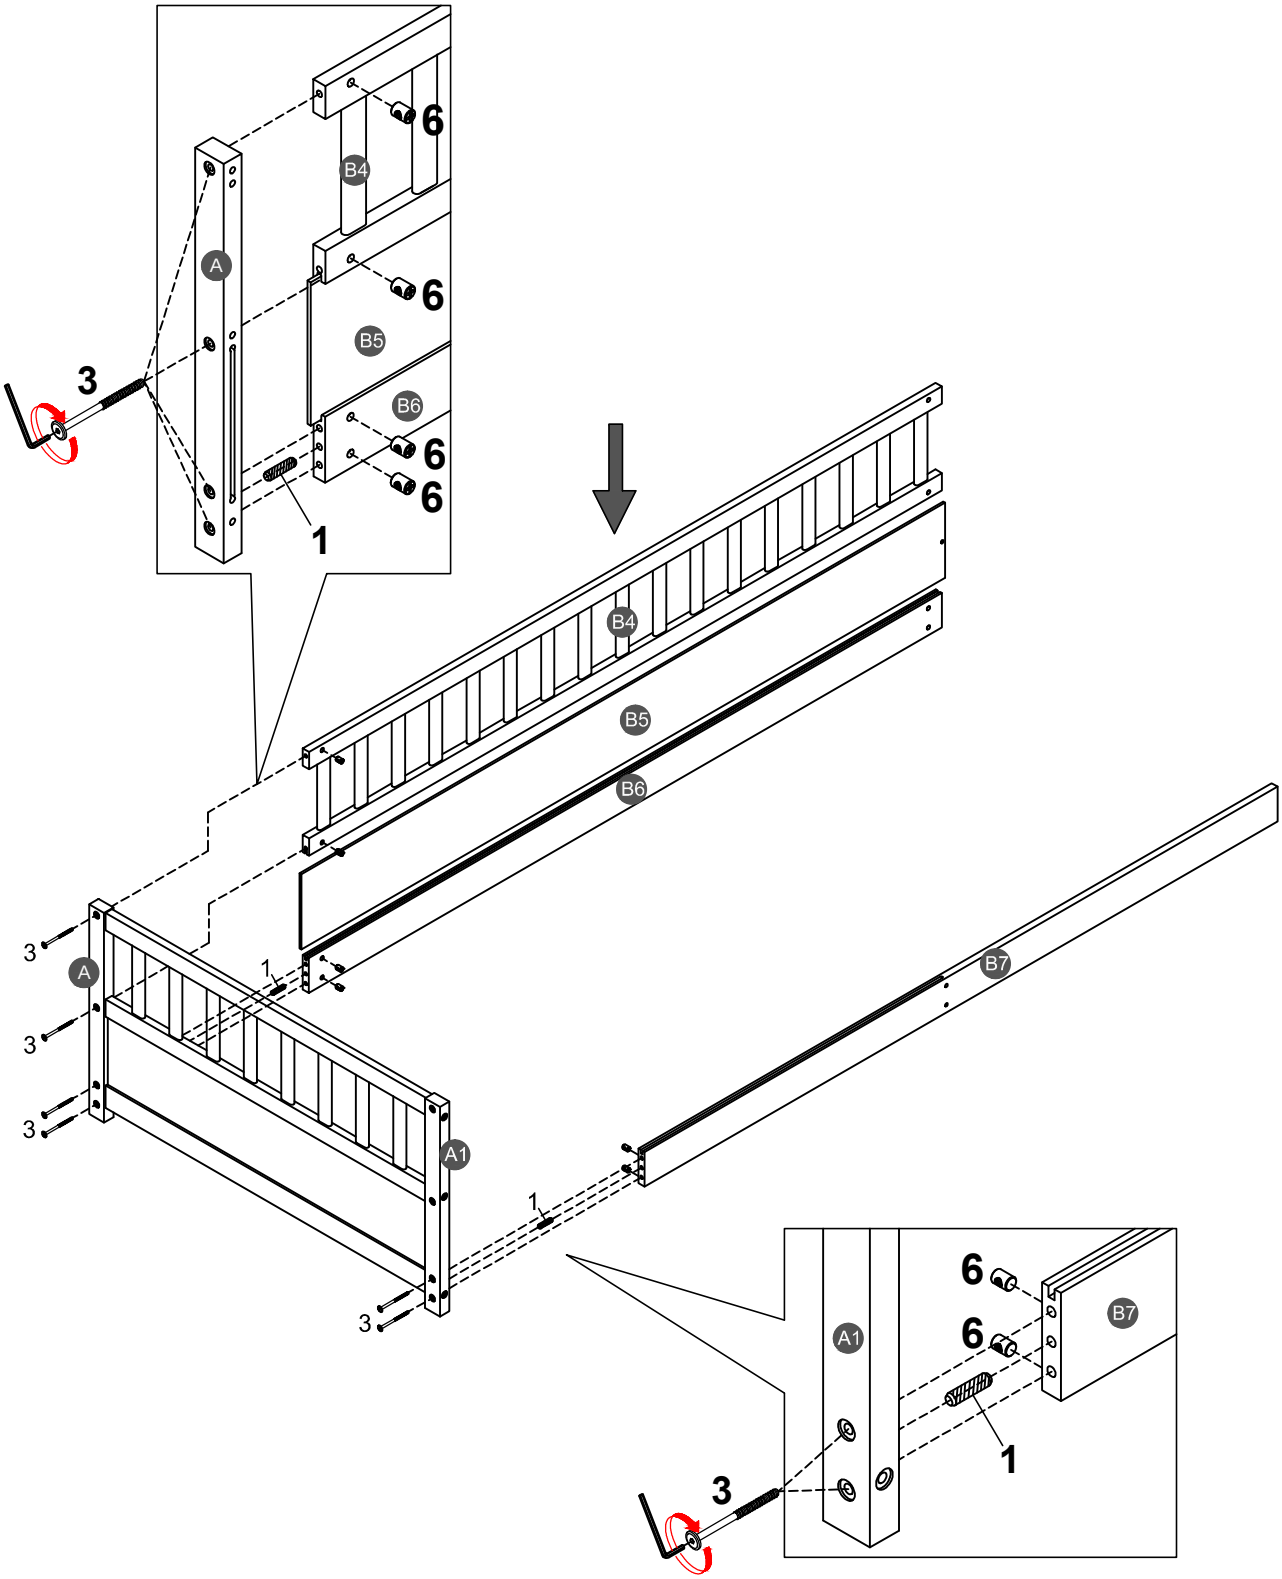


STEP 3:

1	3	6
2PCS	6PCS	6PCS

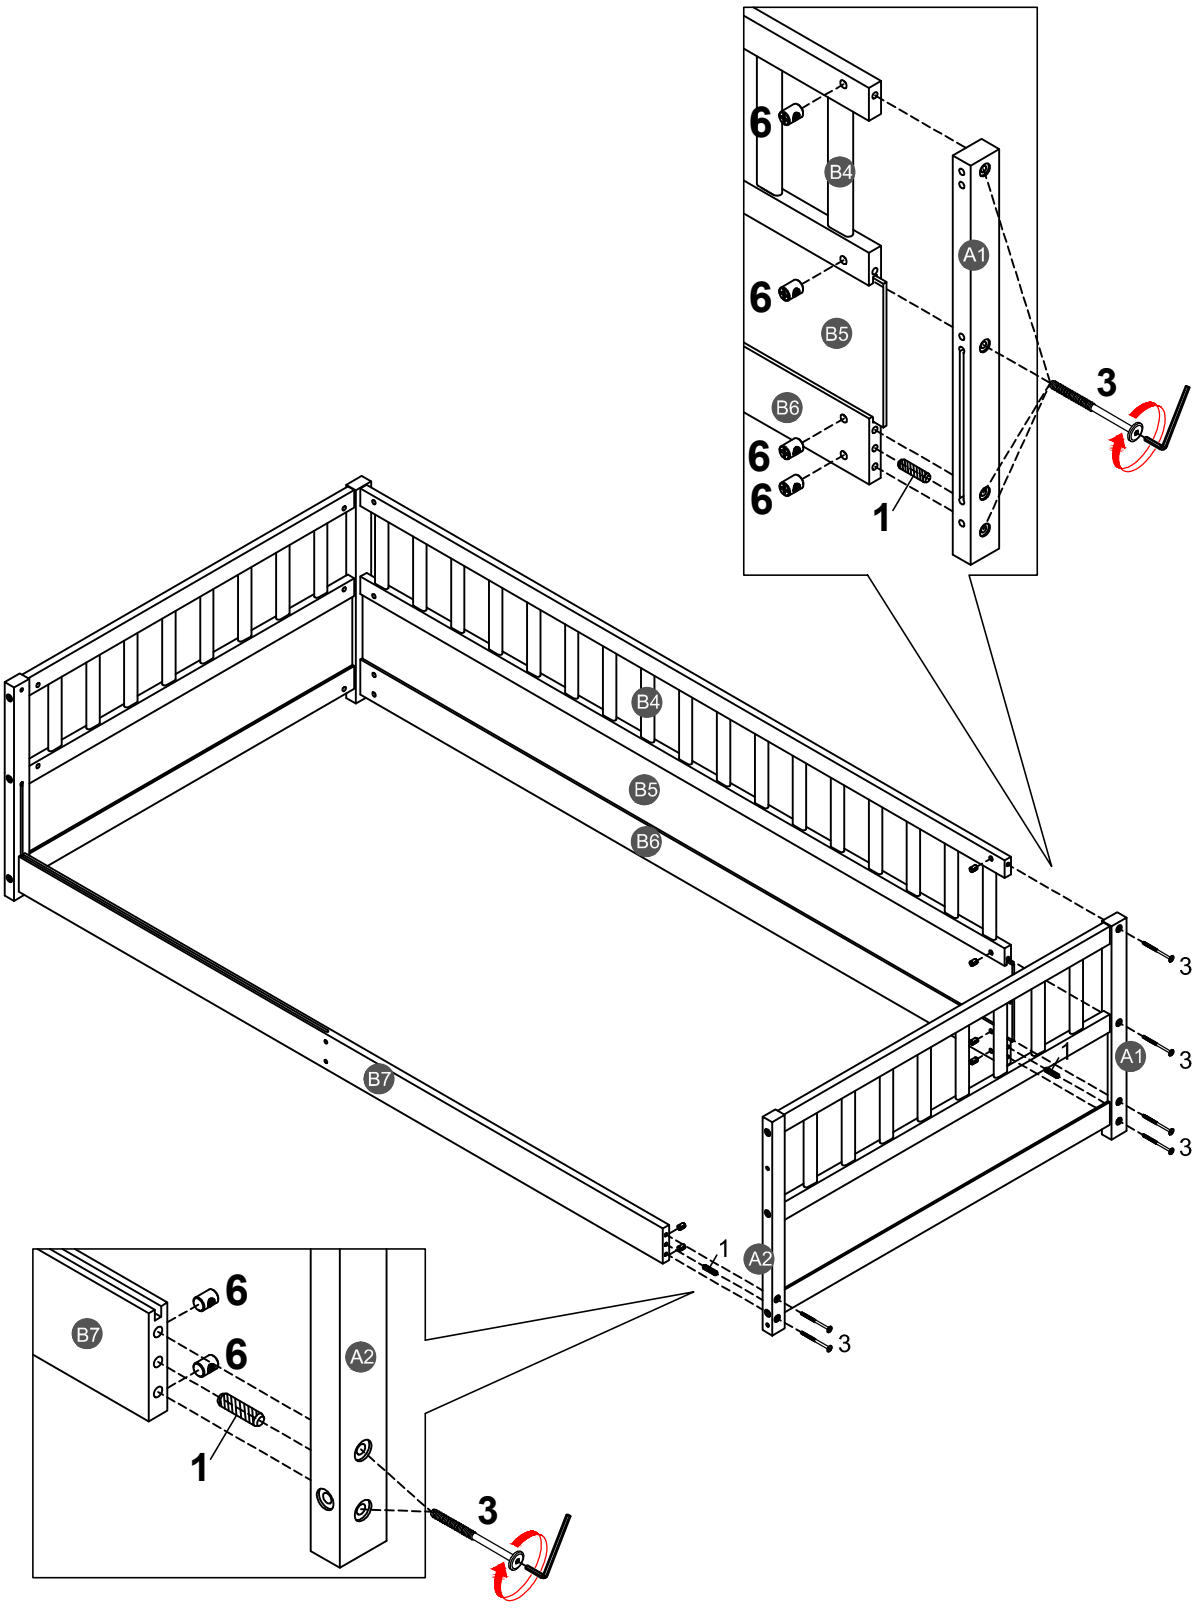


STEP 4:


3	6
2PCS	2PCS

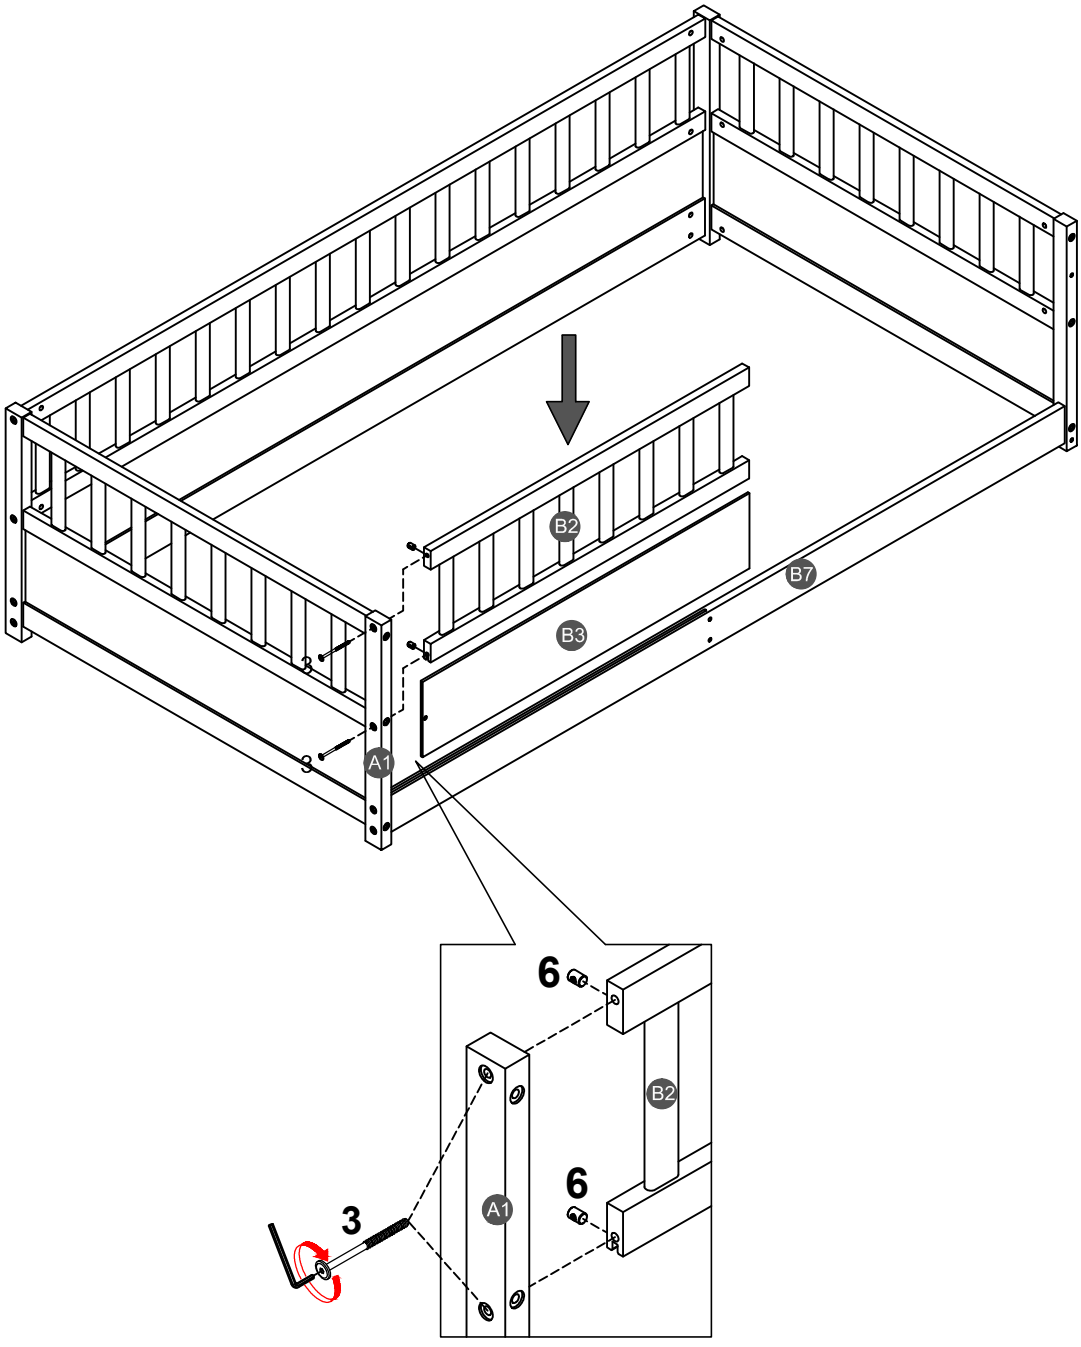

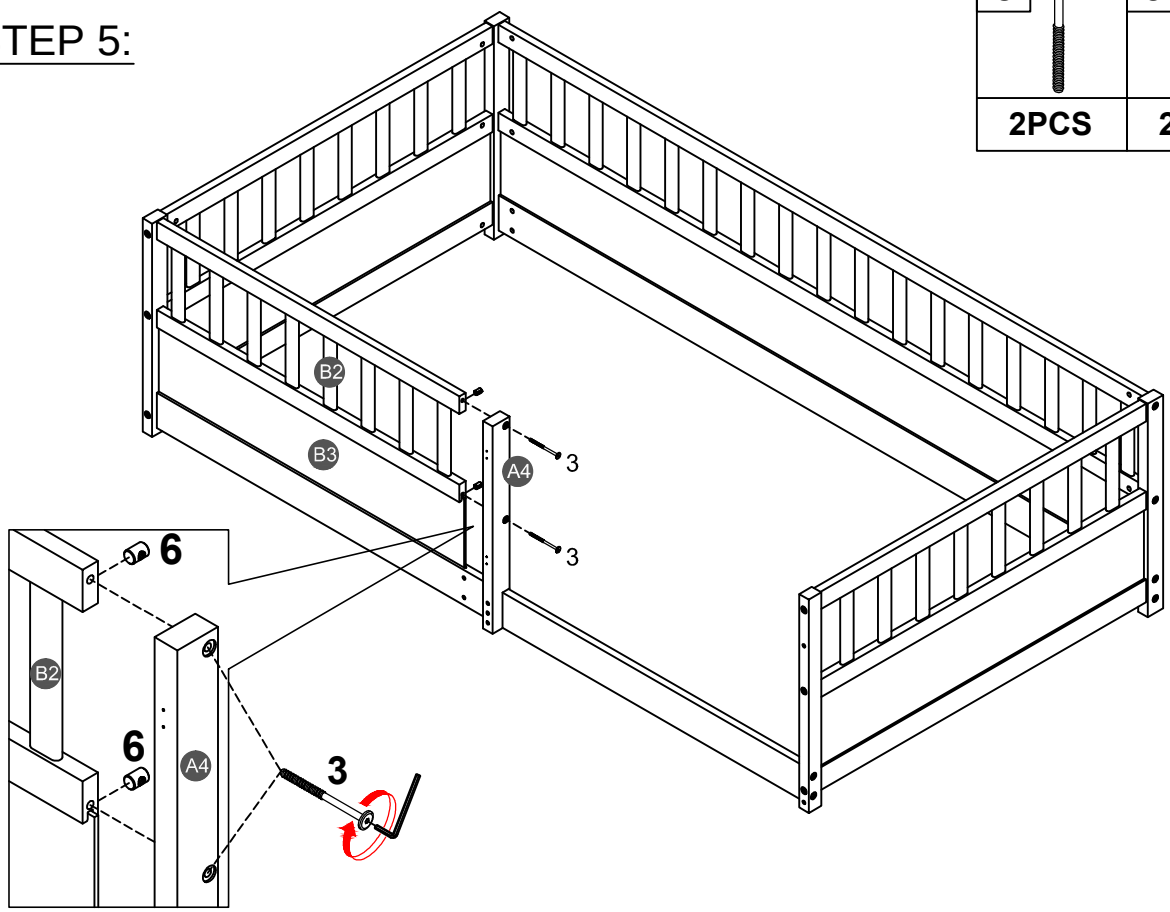
STEP 5:


3
2PCS
6
2PCS
B2
B3
A4
3
3
6
B2
6
A4
3

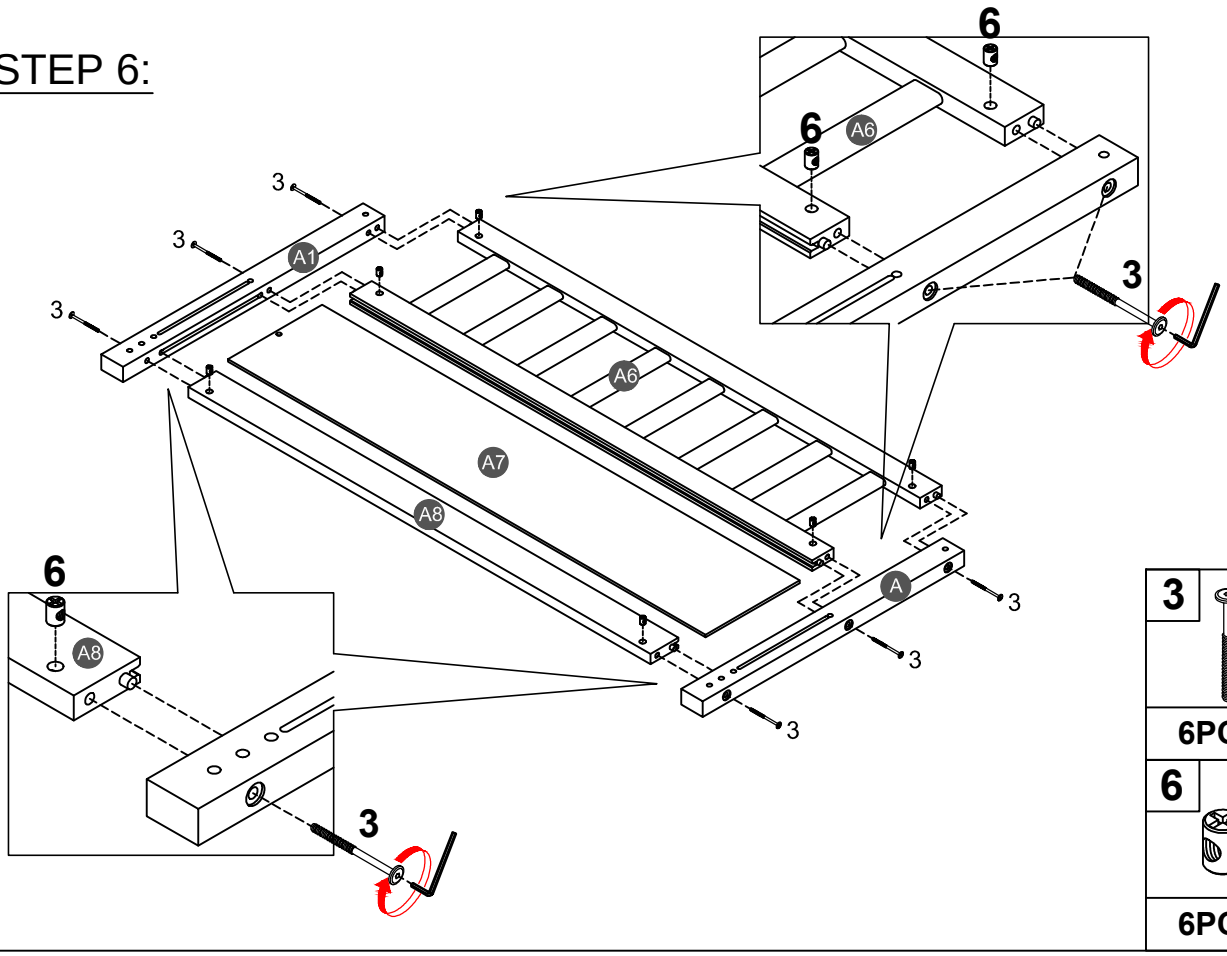STEP 6:



6
6
A6
3
3
3
3
A1
A6
A7
A8
A
3
3
3
6
A8
3
3
6PCS
6
6PCS

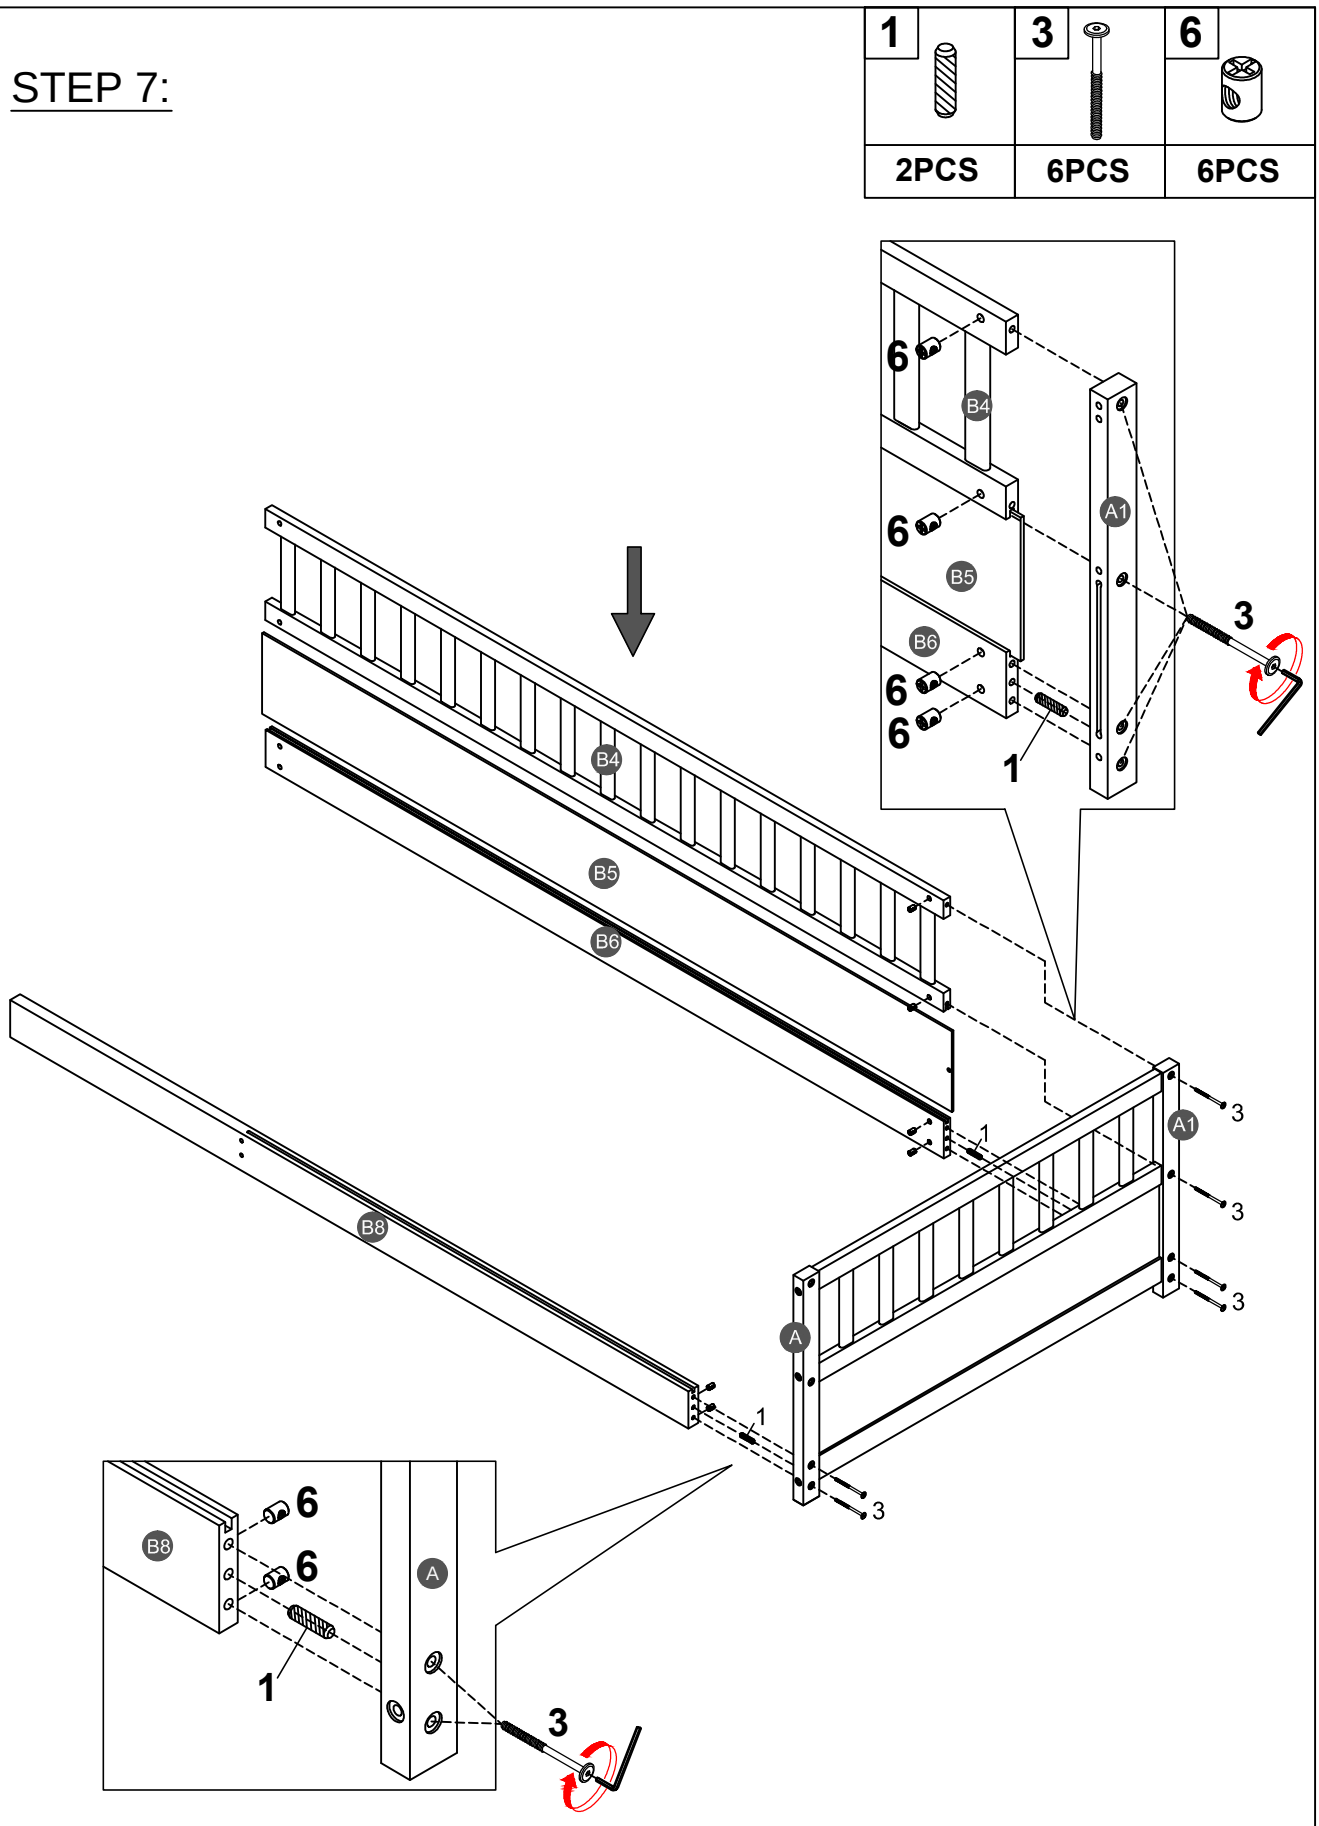STEP 7:


1
2PCS
3
6PCS
6
6PCS
6
B4
6
A1
B5
3
B6
6
6
1
B4
B5
B6
B8
A1
3
3
3
A
1
3
B8
6
6
A
1
3


STEP 8:

3	6
2PCS	2PCS

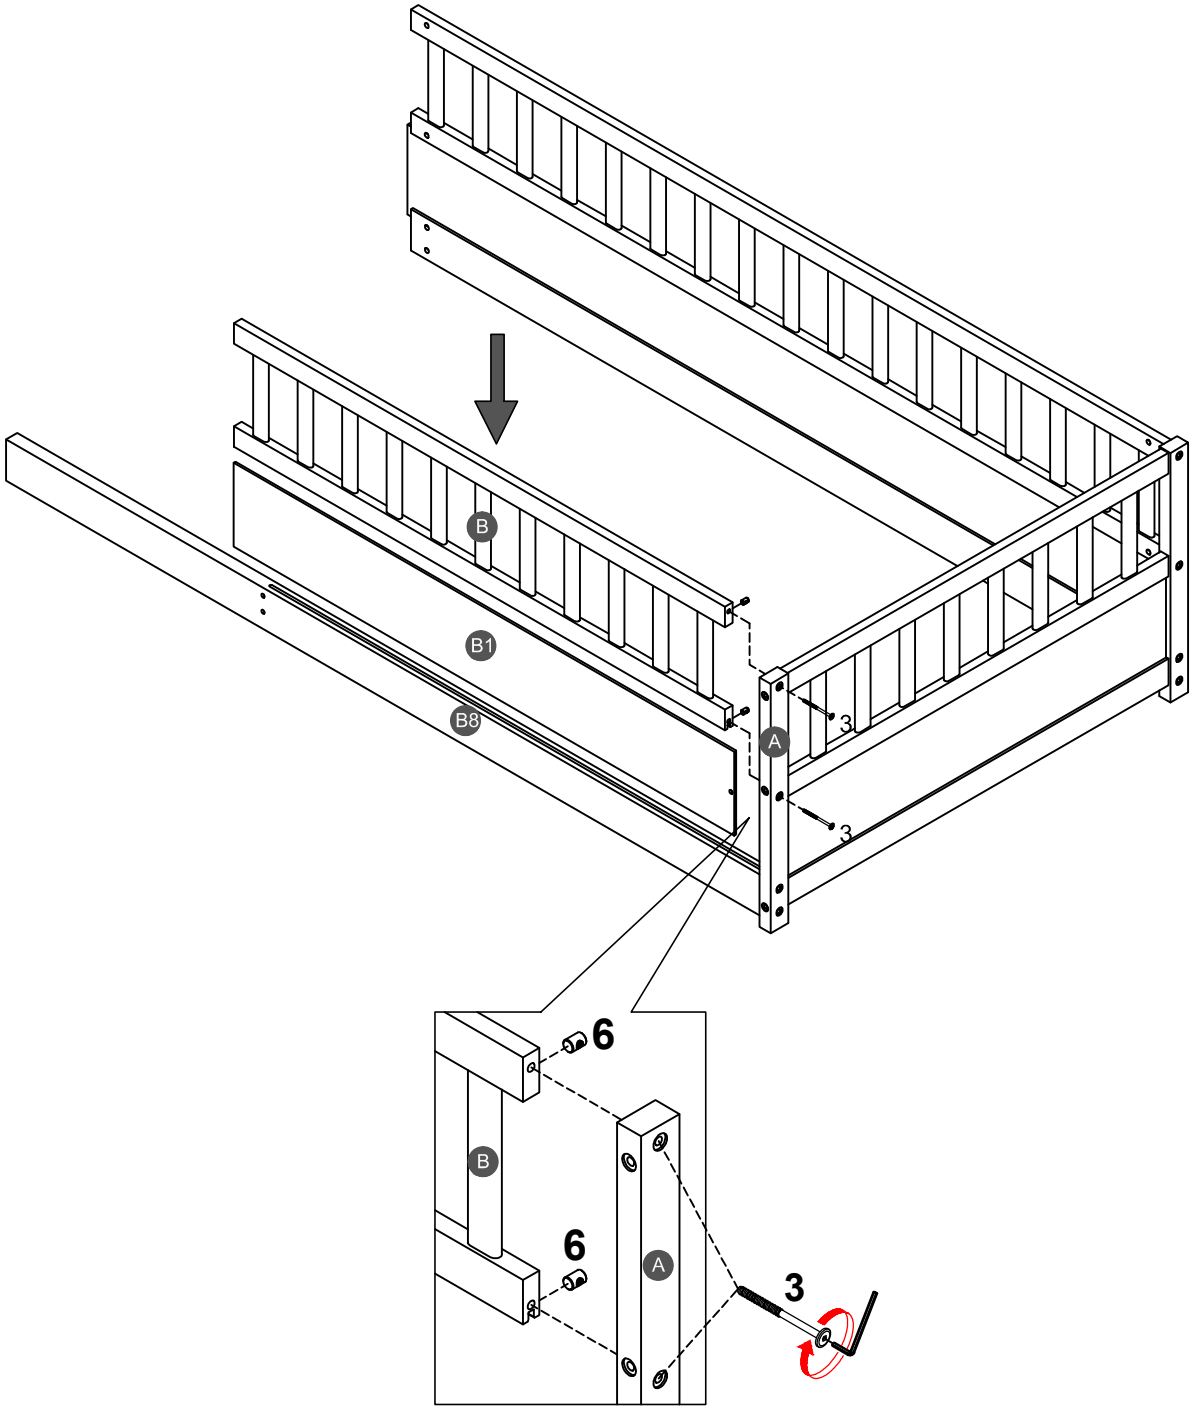


STEP 9:

1	3	5	6
1PC	6PCS	2PCS	6PCS

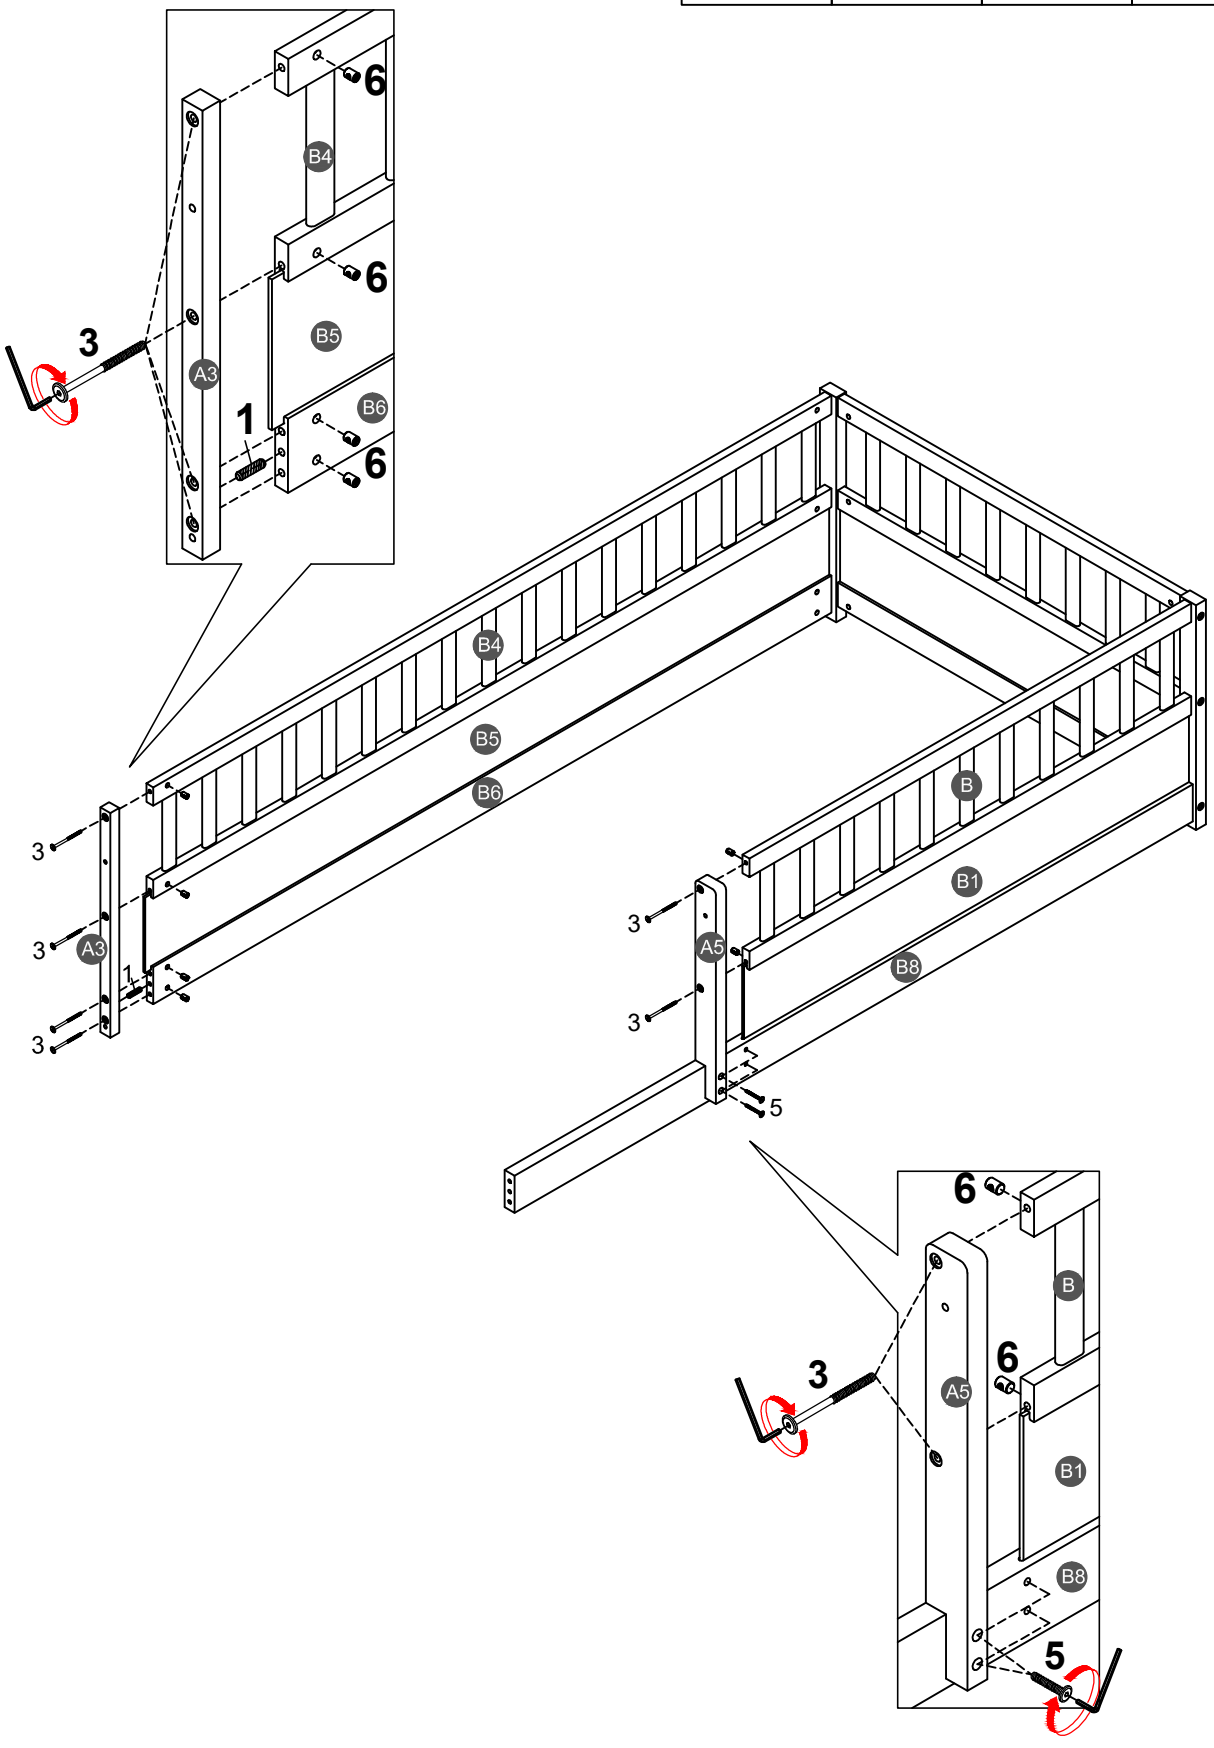

STEP 10:

1	2	4	6
1PC	2PCS	2PCS	2PCS

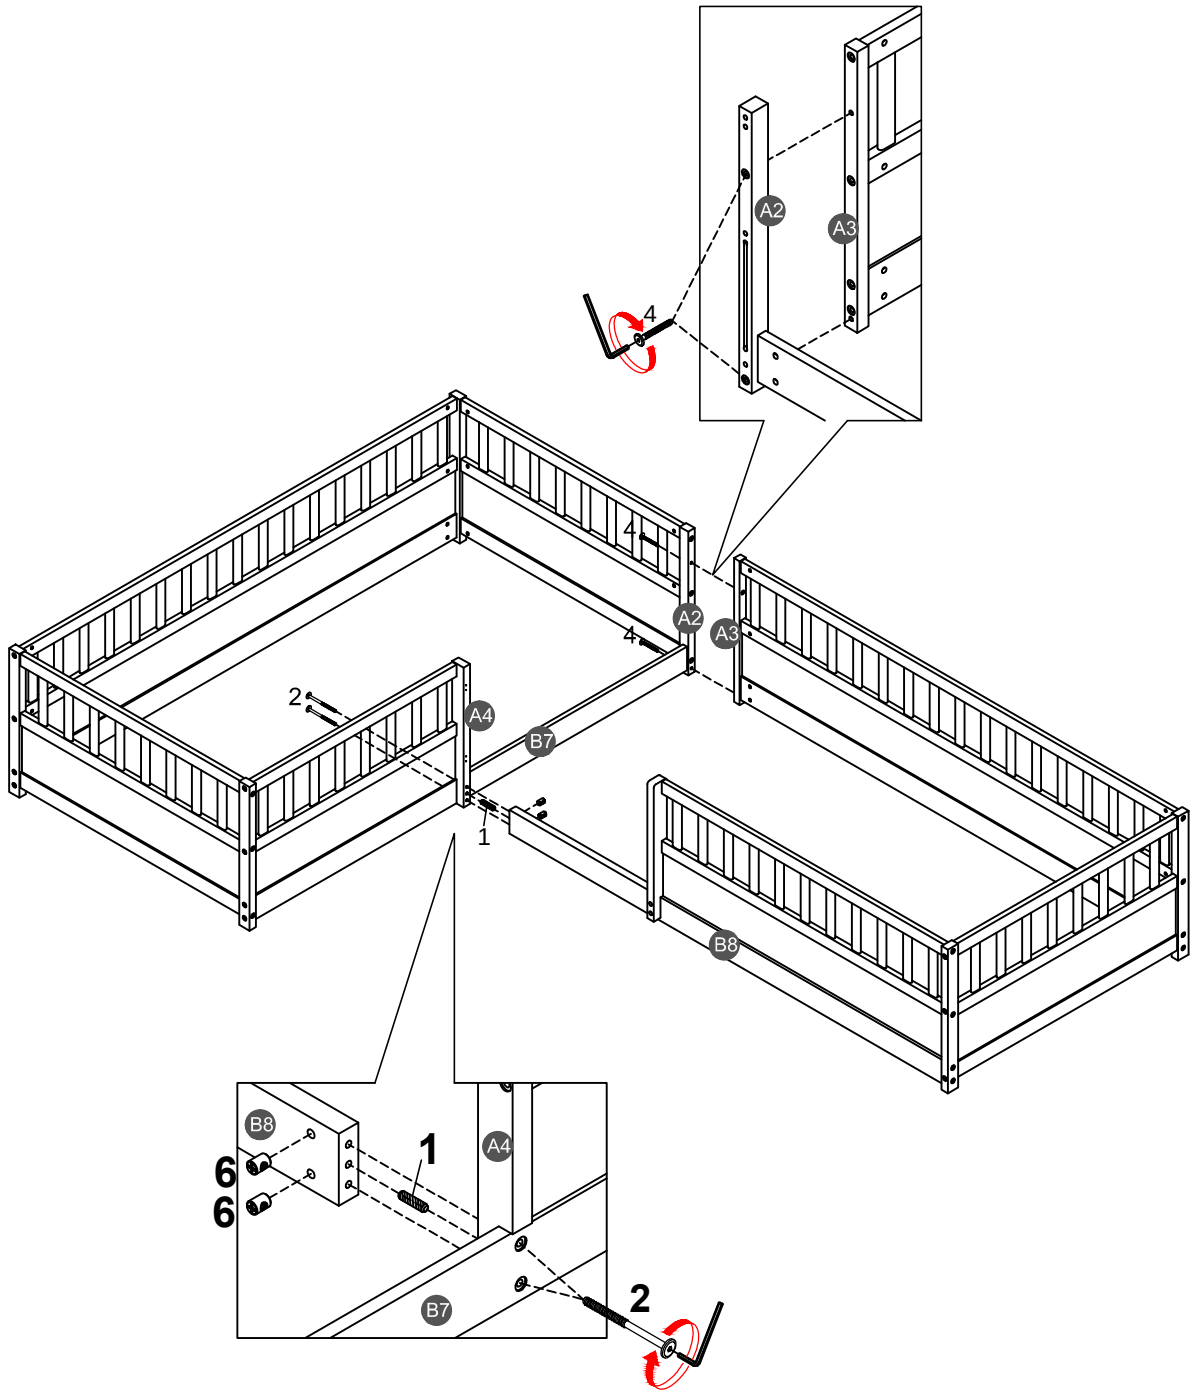

Complete Assembly

