


Assembly Instructions

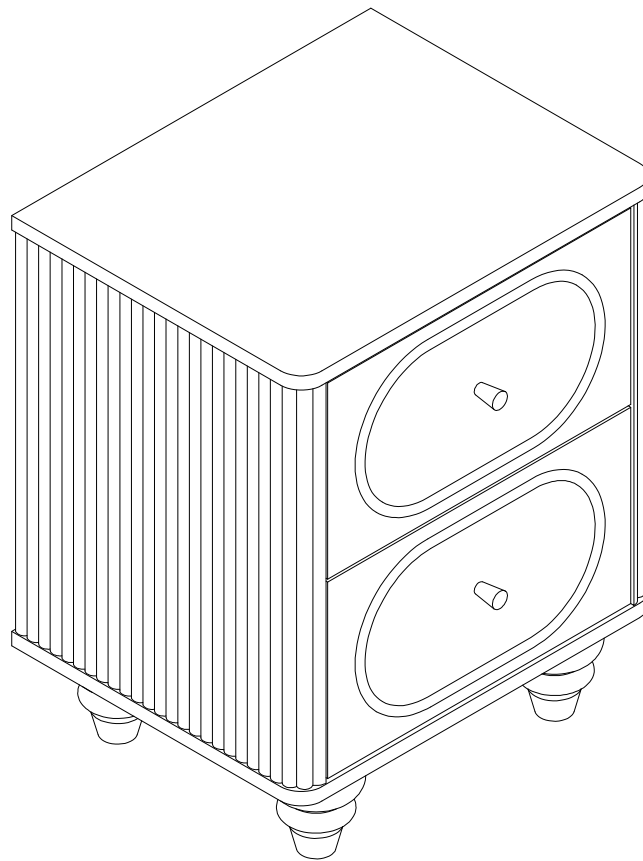


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

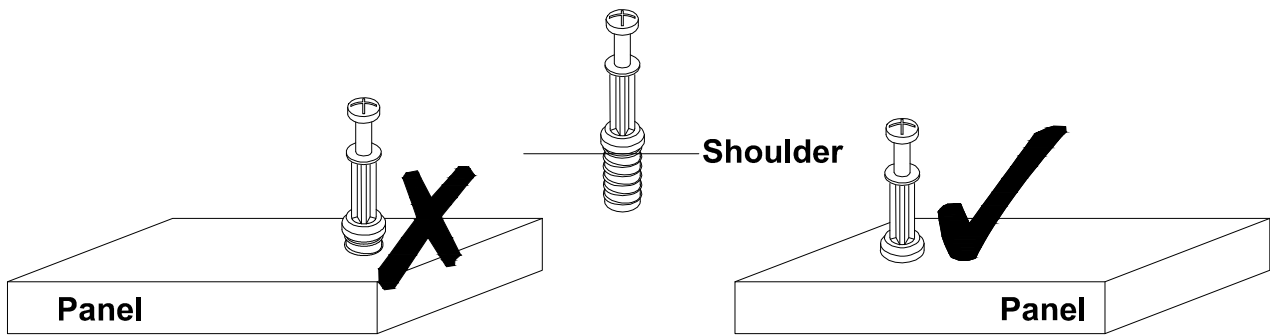

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

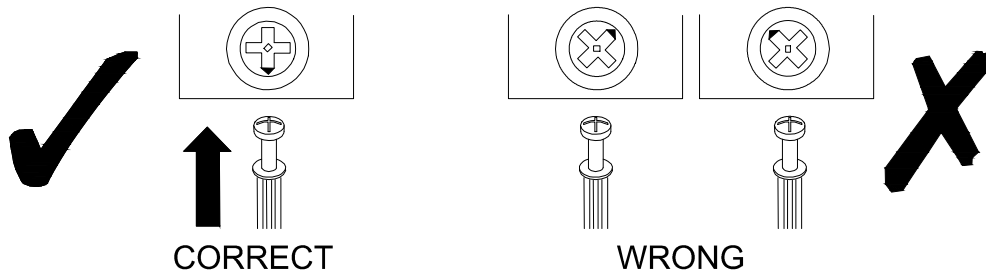

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.


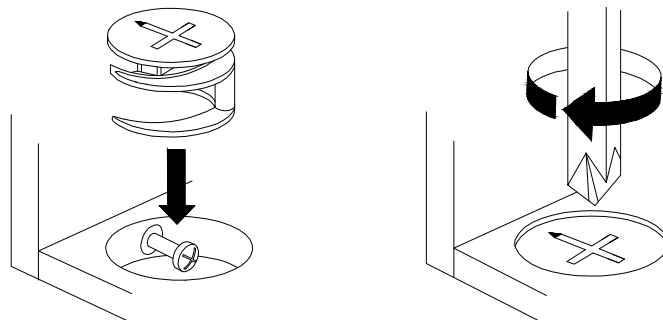


Turn cam lock clockwise to tighten.


Before Assembly

Tips Before Your Start


How to separate the drawer slider:

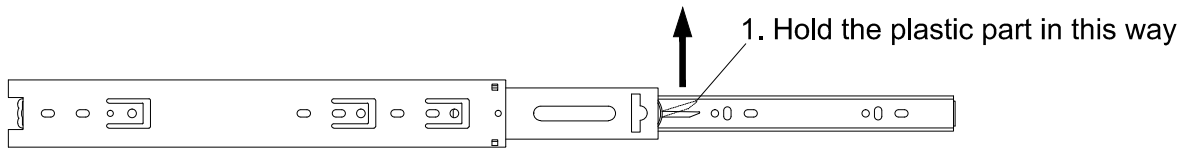

Drawer Front Alignment

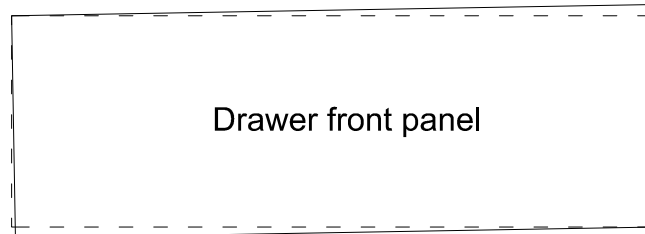
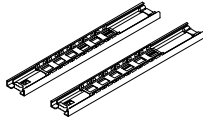
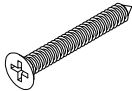




If the drawer front panel is NOT level after being assembled, then...

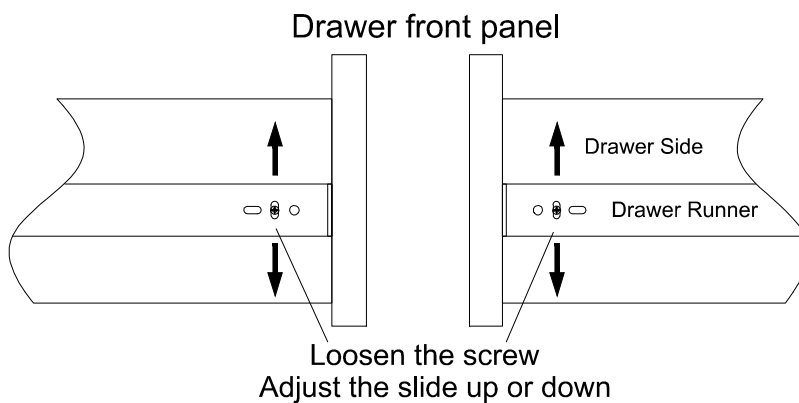


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.


Part List

<p>No. A Quantity: 22 Pcs Cam Lock Dowel 8*28mm</p> 	<p>No. B Quantity: 22 Pcs Cam φ15</p> 	<p>No. C Quantity: 22 Pcs Sticker Ø20</p> 	<p>No. D Quantity: 5 Pcs Dowel 8*30mm</p> 
<p>No. E Quantity: 2 Sets Drawer Slider 10"</p> 	<p>No. F Quantity: 8 Pcs Screw M4*30mm</p> 	<p>No. G Quantity: 16 Pcs Screw M3.5*12mm</p> 	<p>No. H Quantity: 2 Pcs Handle Ø20*23mm</p> 
<p>No. I Quantity: 4 Pcs Slip Mat Ø20</p> 	<p>No. J Quantity: 2 Pcs Screw M4*20mm</p> 	<p>No. K Quantity: 4 Pcs Plastic Wedge</p> 	

Product structure

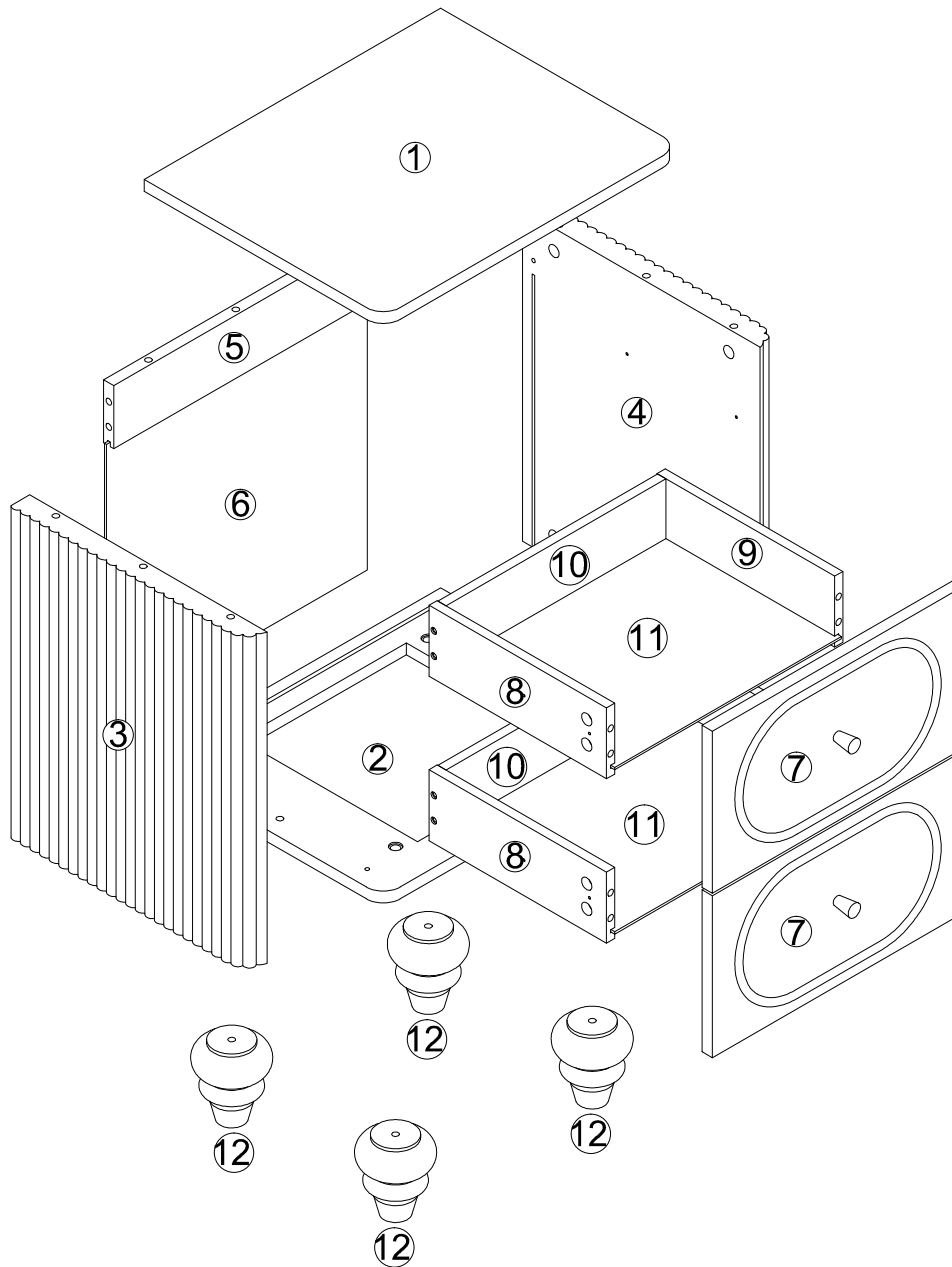

STEP 1

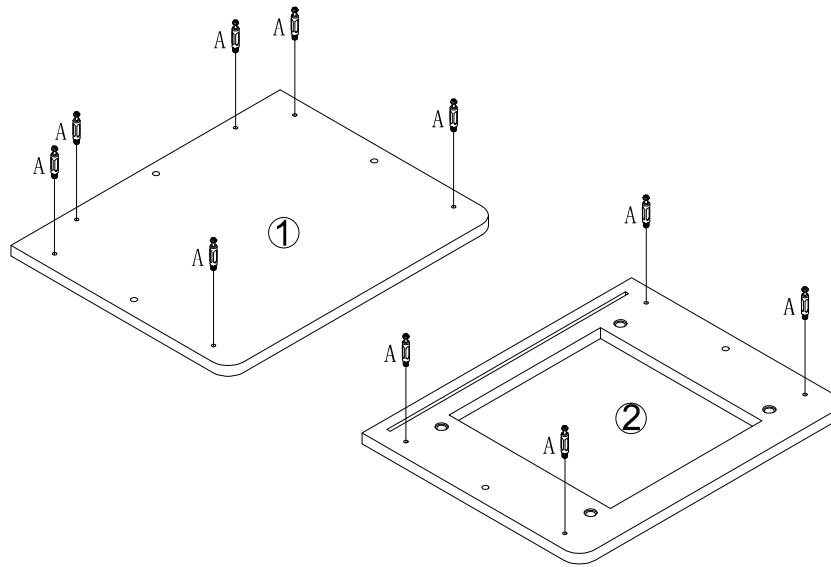


No. A
Quantity: 10 Pcs
8*28 mm



STEP 2




The first screw hole should corresponded with the board location hole

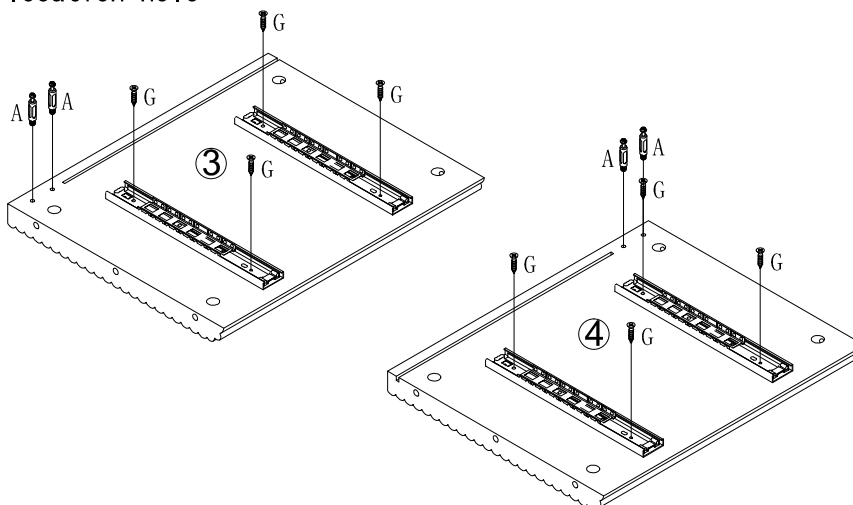

No. A
Quantity: 4 Pcs
8*28 mm




No. E
Quantity: 2 Sets
10"



No. G
Quantity: 8 Pcs
M3.5*12mm




STEP 3

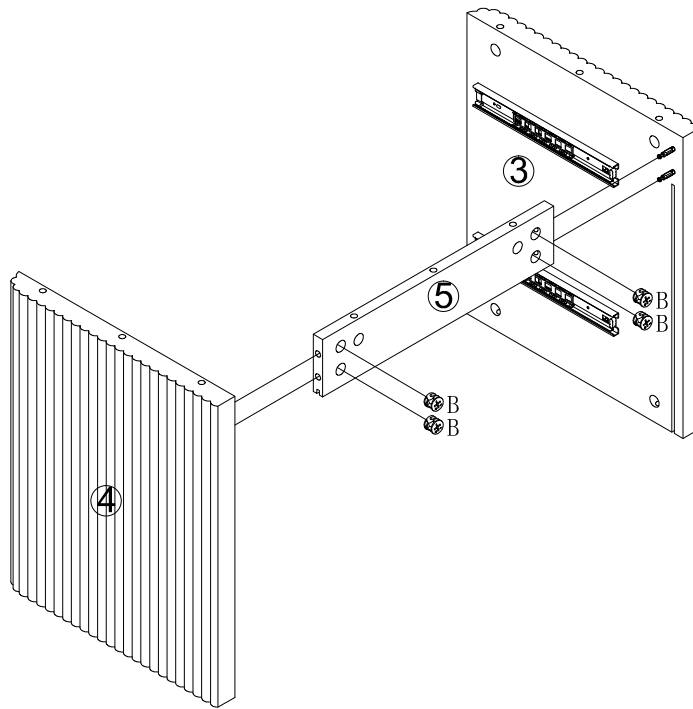

No. B
Quantity: 4 Pcs
Ø15




STEP 4

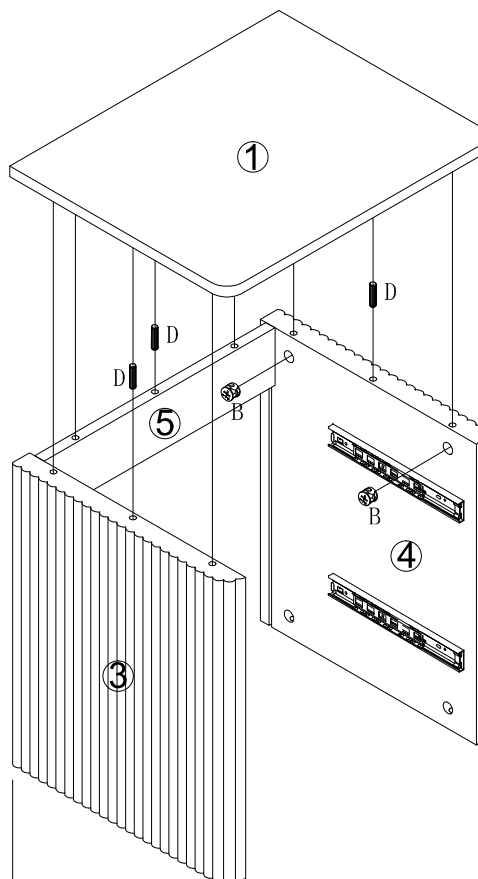


No. B
Quantity: 6 Pcs
Ø15




No. D
Quantity: 3 Pcs
8*30mm



STEP 5

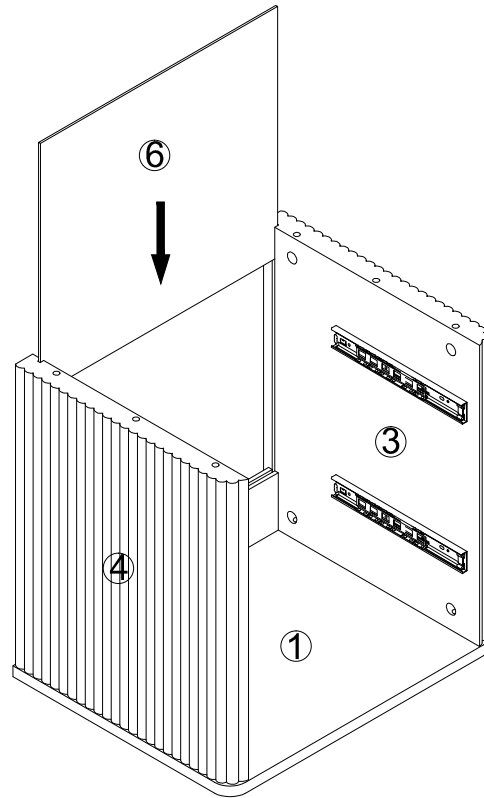


STEP 6

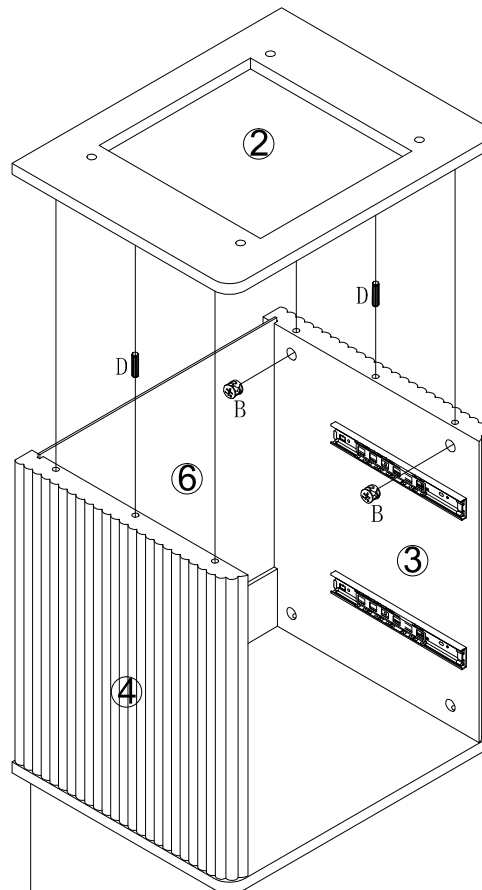


No. B
Quantity: 4 Pcs
Ø15




No. D
Quantity: 2 Pcs
8*30mm



STEP 7

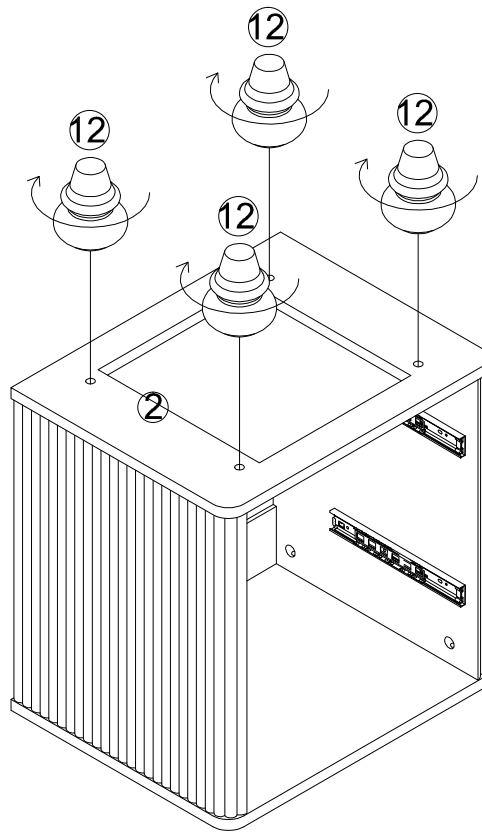


STEP 8

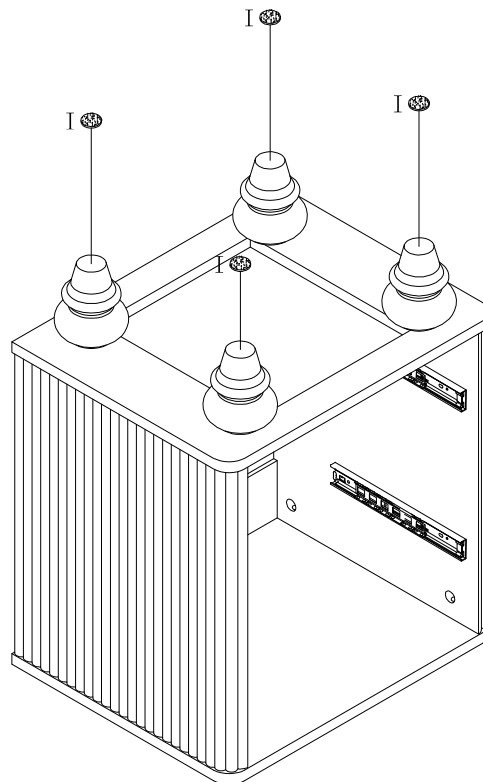

No. I
Quantity: 4 Pcs
Ø20



STEP 9

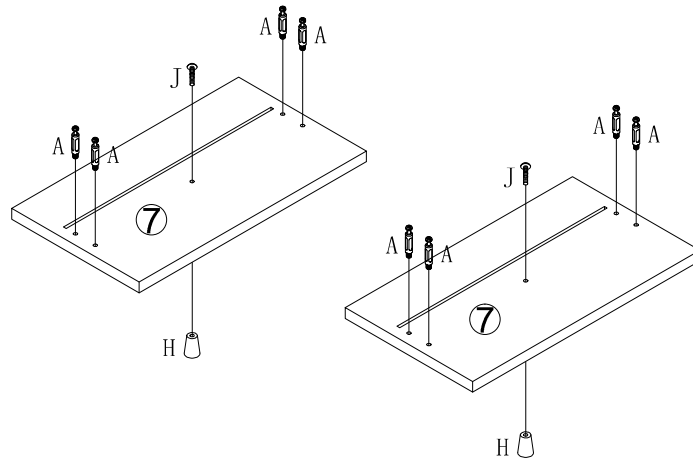

No. A
Quantity: 8 Pcs
8*28 mm




No. H
Quantity: 2 Pcs
Ø20*23mm




No. J
Quantity: 2 Pcs
M4*20mm



STEP 10

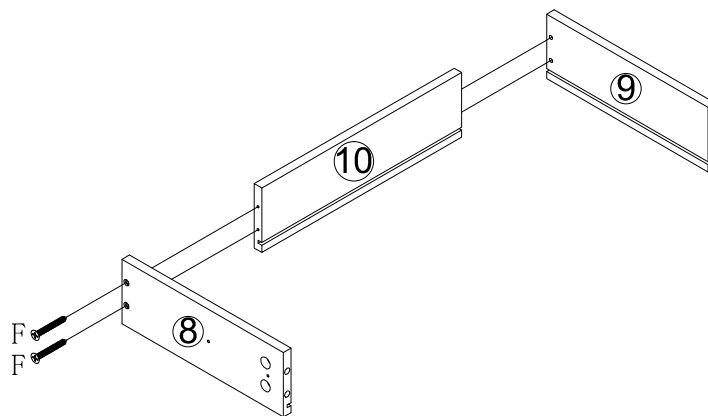


No. F
Quantity: 8 Pcs
M4*30mm



x2

STEP 11

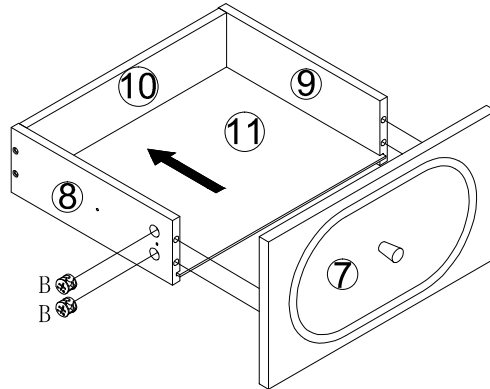


No. B
Quantity: 8 Pcs
Ø15




STEP 12



The first screw hole should corresponded with the board location hole

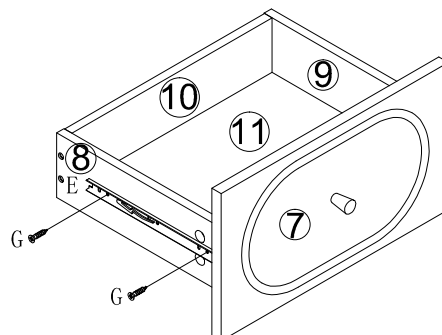


No. E
Quantity: 2 Sets
10"




No. G
Quantity: 8 Pcs
M3.5*12mm



STEP 13

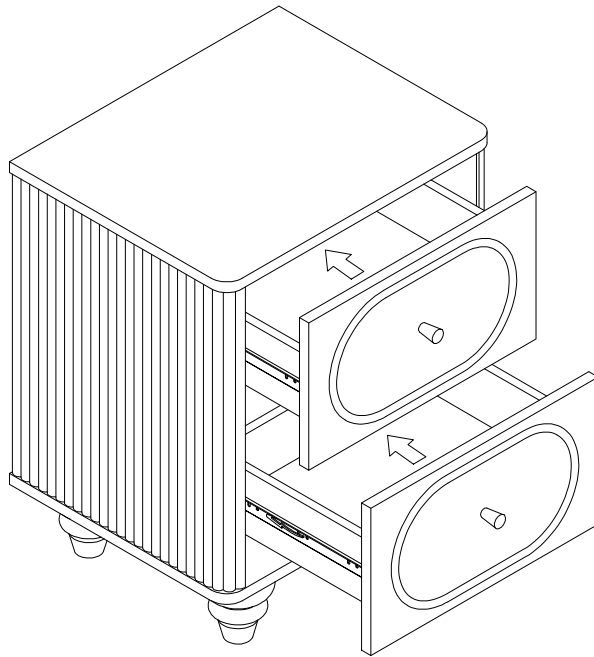

STEP 14

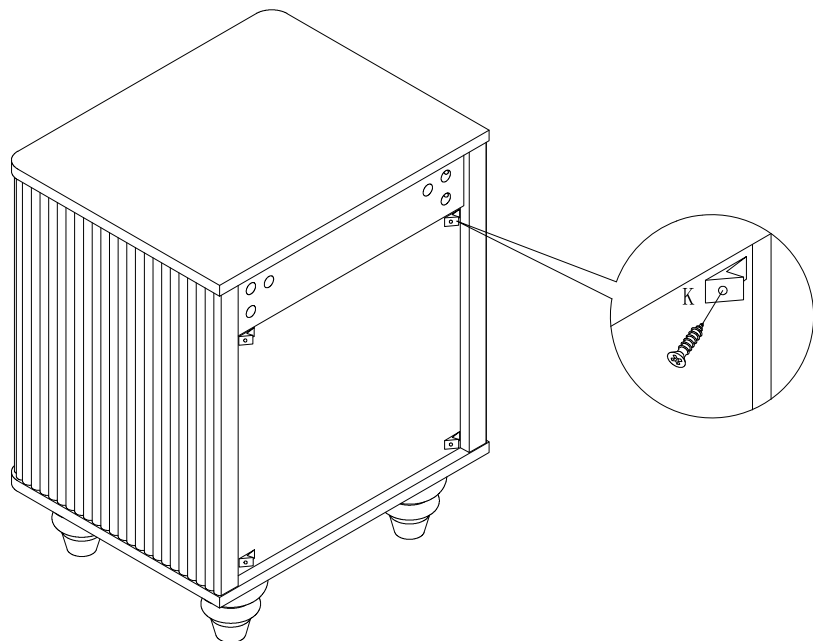

No. K
Quantity: 8 Pcs

