

Assembly Instruction



Instructions for Use

Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instruction properly. Make sure all the parts are included (15 kinds in total).

Accessories List

(1) Backrest	(2) Seat Cushion	(3) Foot Stool	(4) Decorative cover	(5) 5 Castors
(6) Air Rod	(7) 2 Armrests	(8) Base Plate	(9) Hexagon Wrench	(10) 4 Screws (M6X25mm)
(11) 6 Decoration Caps	(12) 6 Screws (M6X30mm)	(13) 4 Screws (M6X18mm)	(14) 4 Gaskets	(15) Headrest

Notice

- This is a single chair, so please do not seat two or more people; seat only one person.
- Do not stand on the chair.
- Do not sit backward or outside the seat cushion.
- Check the screws every six months to ensure they are tight. Do not use the chair if the screws are loose.
- Please assemble according to the instructions


Assembly Instruction

Please assemble in a wide and flat place.

Step 1


Insert Castors (5) into Foot Stool (3). There are 5 Castors (5) need to be inserted. Insert Air Rod (6) into the hole of Foot Stool (3). Put it aside and we'll use it in Step 6.

* Caution: Confirm the Castors (5) must be inserted into the innermost. Otherwise the castors could easily fall out and the chair could fall down. Please insert Air Rod (6) straightly, and then press Air Rod (6) firmly into Foot Stool (3).

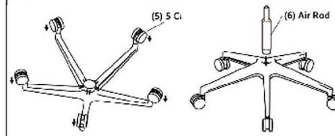


Step 2

Tighten the Screws M6X25mm (10) with Hexagon Wrench (11) to fix 2 Armrests (7) to the back of Backrest (1). Tighten the 4 screws firmly and then cover the screws with Decoration Caps (11).

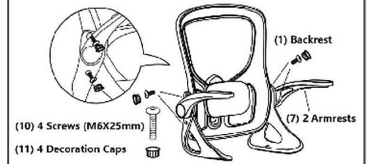


Step 3

After Step 3, fix the bottom of Armrests (7) to back of Seat Cushion (2). Tighten the Screws M6X30mm (12) and Gaskets (14) with Hexagon Wrench (9) firmly.

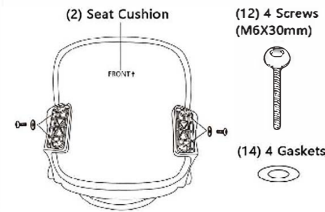


Step 4

Fix Base Plate (8) to the bottom of Seat Cushion (2). Tighten the Screws M6X18mm (13) with Hexagon Wrench (9) firmly.

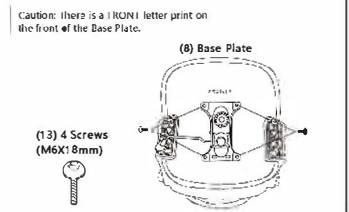

Step 5

Pick up the Step 2's Air Rod (6) and Foot Stool (3). Insert the Air Rod (6) into Step 5's Base Plate (8). There's a hole in the middle of Base Plate (8). Press the Seat Cushion (2) from top to bottom, use your whole body's strength to insert it firmly.

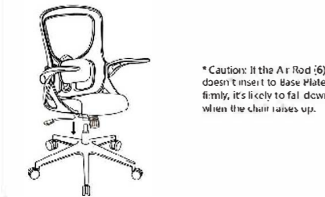

Step 6

Tighten the Screws M6*30mm (12) with Hexagon Wrench (9) to fix Headrest (15) to Backrest (1) and then cover the screws with Decoration Caps (11), the assembly is complete now.

