
ALTAIR

www.altairdesignusa.com


# SHOWER BASE INSTALLATION INSTRUCTION

⚠ **Before starting installation, please take a few minutes to READ THIS MANUAL CAREFULLY.**
⚠ **Please check the product CAREFULLY for any visible damage.**

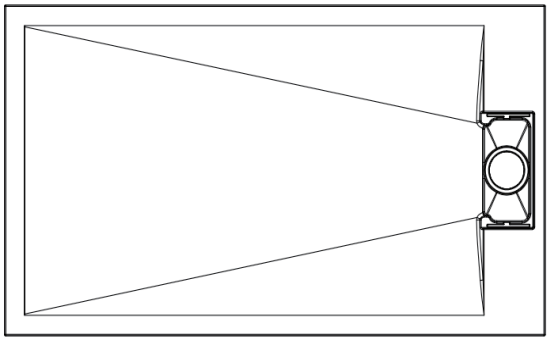




SMC Cover

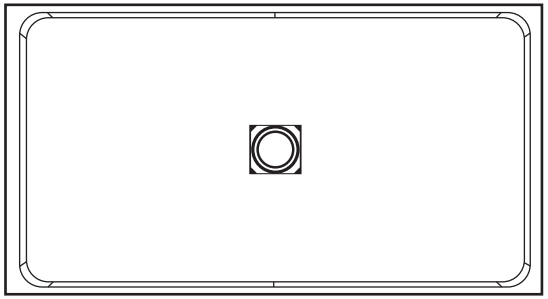



SMC Cover

## Suggested Tools and Materials



Safety goggles



Tape Measure



Dril



Galvanized or Plated Truss Head Screws



Level



Shims



Drain Fitting



Silicone



Adjustable Wrench



5 Gallon Empty Bucket



Thin Set Mortar &Water



Grooved Trowel


- **Installation tools are not provided, please prepare by yourself.**

## Main Body Parts


| PART | DESCRIPTION | QUANTITY |
|---|---|---|
| 1 | SMC Cover | 1 |
| 2 | Aluminum Flanges | 3 |
| 3 | Solid Surface Shower Base | 1 |




ALTAIR

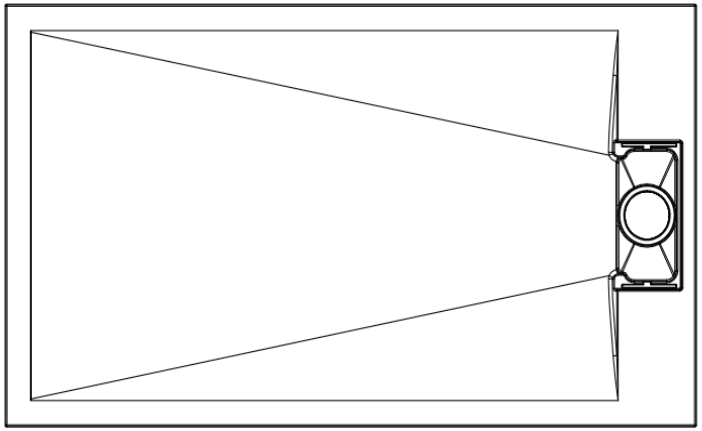


A

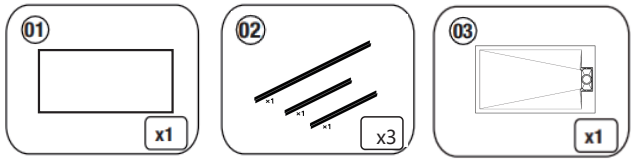


SMC Cover | Aluminum Flanges | Solid Surface Shower Base

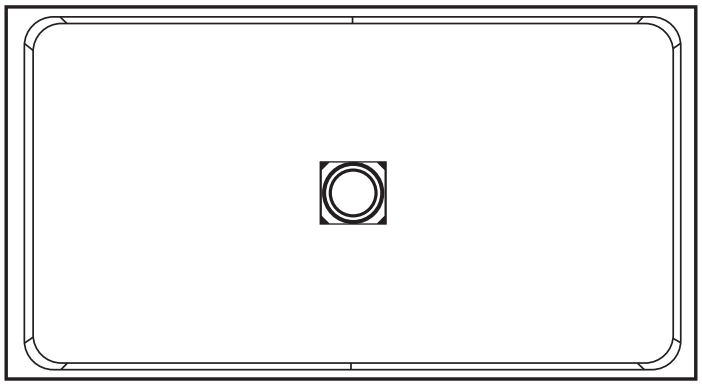

B

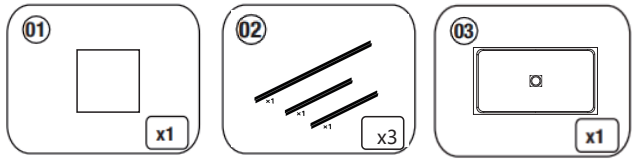



SMC Cover | Aluminum Flanges | Solid Surface Shower Base

# Tips before your installtion


- The stud preparation is critical for the installation of the shower base. It is essential the stud pocket be constructed square and plumb according to the roughing in information provided.
- Please inspect the shower base for breakage and report any damage to the store of purchase.Allow the shower base to acclimate to room temperature before installing.
- Clean and scrape the floor of the shower base alcove. This space must be free of any debris in order to get a proper adhesion with the thinset mortar.
- Measure the size of the alcove to insure that the base and panels fit properly.
- Perform a trial fitting of the base within the alcove, ensuring precise alignment of the drain location with the shower base. Place a level on the base to verify that it sits perfectly level on the floor. If adjustments are required, employ shims to achieve the desired level within the alcove. Take note of the shim placements before removing the base. Tilt the base back or carefully remove it from the alcove.

# Shower Base Installation


## A-1 Installing into Wooden Floors

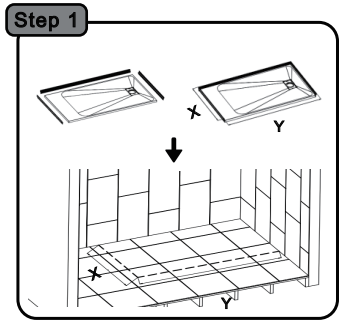



1.According to the size of the shower base, cut the aluminum alloy flange.Install the flange, join the surface with silicone sealant, and fasten it with screws. Measure the size of the shower base after installing the flange.

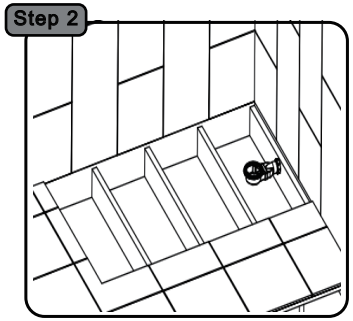



2.Reserve area for the shower base.Install the bottom of the drainer, conduct a sealing test to ensure no leakage and firm installation.

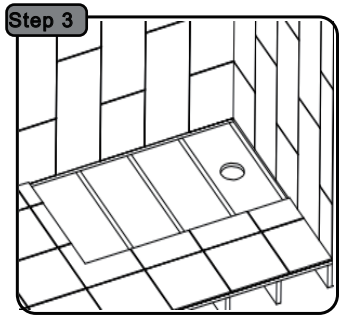



3.Lay the floor or add wood frame strips to strengthen the firmness. If to lay the floor,make sure the position reserved for the outlet being with a hole120 or above.

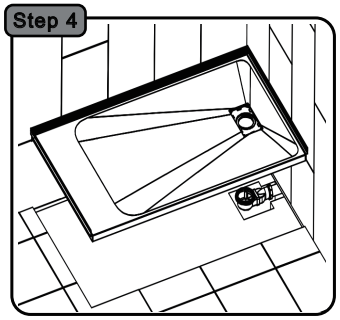


4.Place the shower base.

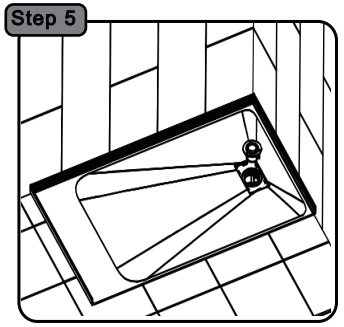



5.Install the upper part of the drainer.

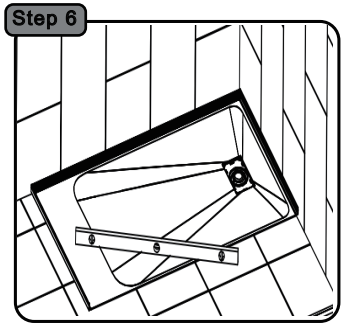



6.Use a level to measure & ensure horizontal placement.Perform drainage test. Make sure the sewage pipe is unblocked and no pooling water on the surface.


## A-2 Installing into Tile Floors

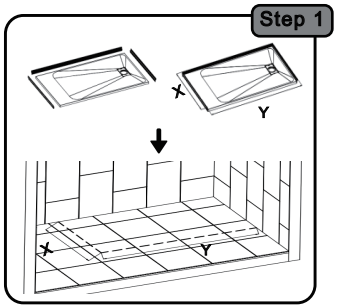



1.According to the size of the shower base, cut the aluminum alloy flange.Install the flange, join the surface with silicone sealant, and fasten it with screws. Measure the size of the shower base after installing the flange.

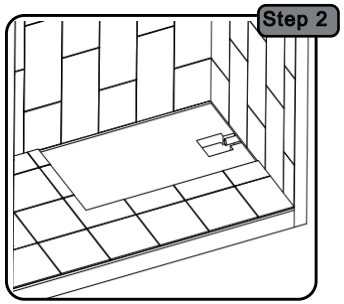



2.Measure and reserve the position of the drain.

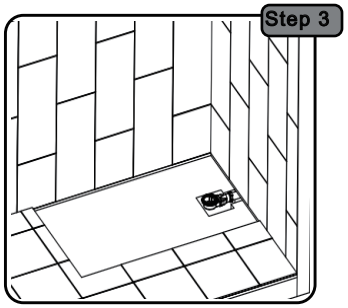



3.Install the bottom of the drainer, conduct a sealing test to ensure no leakage and firm installation.

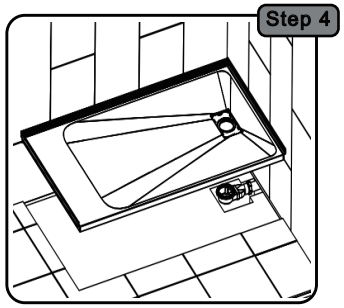


4.Place the shower base.

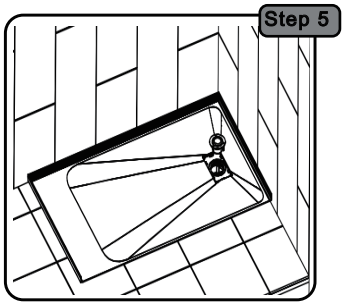


5.Install the upper part of the drainer.

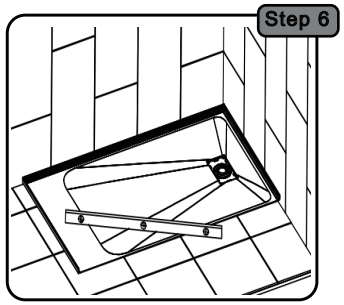


6.Use a level to measure & ensure horizontal placement. Perform drainage test.
Make sure the sewage pipe is unblocked and no pooling water on the surface.
Please donot use the shower base before the silicone dried.


ALTAIR

# Dimensions

| SKU | SIZE LxWxH(Inch) |
|---|---|
| WH-SP4832A1 | 48X32X1 |
| BK-SP4832A1 | 48X32X1 |
| WH-SP4836A2 | 48X36X1 |
| BK-SP4836A2 | 48X36X1 |
| WH-SP6032A3 | 60X32X1 |
| BK-SP6032A3 | 60X32X1 |
| WH-SP6036A4 | 60X36X1 |
| BK-SP6036A4 | 60X36X1 |
| WH-SP6032B1 | 60X32X1 |
| CW-SP6032B1 | 60X32X1 |
| WH-SP6036B2 | 60X36X1 |
| CW-SP6036B2 | 60X36X1 |

# Care and Maintenance

- Simply wipe the surface with a damp towel to remove watermarks and residues. For basicstains, clean with mild detergent or general purpose cleaner. For cleaning corners and seams, spray with mildew cleaner.
- PLEASE RETURN TO HOME OWNER- IMPORTANT CARE & WARRANTY INFORMATION INSIDE.
- For more information visit www.altairdesignusa.com
- DAMAGED AND SHORTAGES MUST BE REPORTED WITHIN 48 HOURS OF DELIVERY!!!


ALTAIR


ALTAIR

www.altairdesignusa.com


# Instructions d'installation du receveur de douche

⚠ **Avant de commencer l'installation, veuillez prendre quelques minutes pour lire attentivement ce manuel.**

⚠ **Veuillez vérifier soigneusement le produit afin de détecter tout dommage visible.**

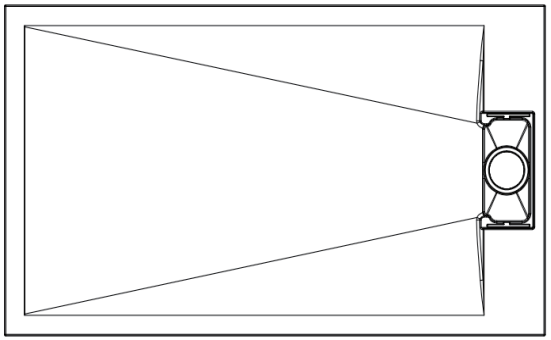


COUVERCLE SMC

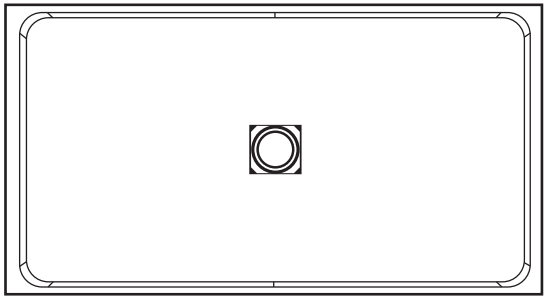

COUVERCLE SMC



## Outils et matériaux recommandés



Lunettes de sécurité



Mètre ruban



Perceuse



Galvanisées ou plaquées
Vis à tête bombée



Niveau



Cales



Raccord de drain



Silicone



Clé à molette



Seau vide de 5 gallons



Mortier-colle et eau




Truelle dentelée


- **Les outils d'installation ne sont pas fournis, veuillez les préparer vous-même.**

## Pièces principales


| PIÈCE | DESCRIPTION | QUANTITÉ |
|---|---|---|
| 1 | COUVERCLE SMC | 1 |
| 2 | Bride en aluminium | 3 |
| 3 | Receveur de douche en surface solide | 1 |

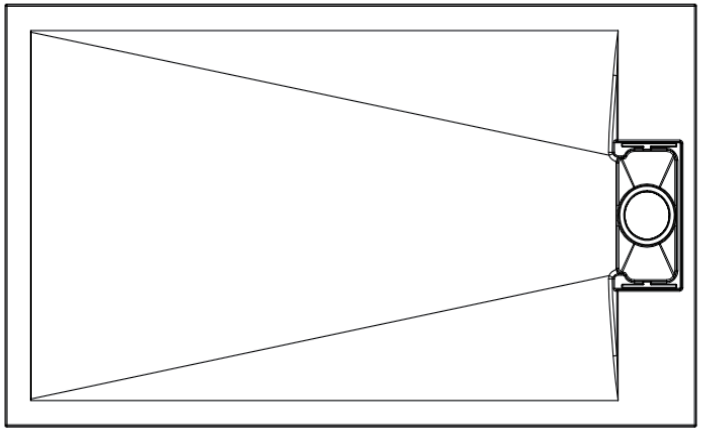


A

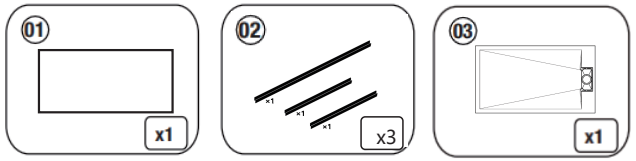


COUVERCLE SMC | Bride en aluminium | Receveur de douche en surface solide

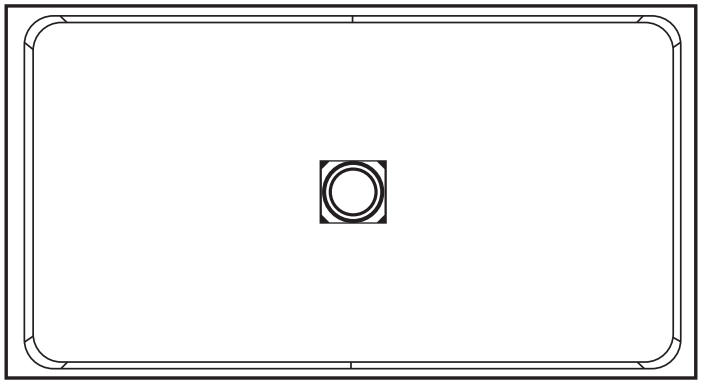

B

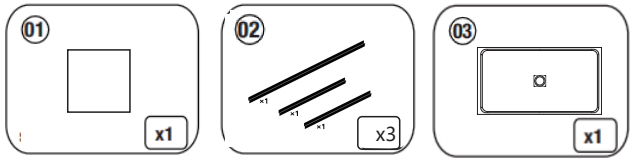


COUVERCLE SMC | Bride en aluminium | Receveur de douche en surface solide




# Conseils avant l'installation

- La préparation des montants est essentielle pour l'installation du receveur de douche. Il est indispensable que l'espace entre les montants soit construit d'équerre et d'aplomb conformément aux informations de préinstallation fournies.
- Veuillez inspecter le receveur de douche afin de vérifier qu'il n'est pas endommagé et signaler tout dommage au magasin d'achat. Laissez le receveur s'acclimater à la température ambiante avant l'installation.
- Nettoyez et grattez le sol de l'alcôve de douche. Cet espace doit être exempt de tout débris afin d'assurer une bonne adhérence avec le mortier-colle.
- Mesurez les dimensions de l'alcôve afin de vous assurer que le receveur et les panneaux s'adaptent correctement.
- Effectuez un essai d'installation du receveur dans l'alcôve en vous assurant que l'emplacement du drain est parfaitement aligné avec celui du receveur. Placez un niveau sur le receveur afin de vérifier qu'il repose parfaitement à niveau sur le sol. Si des ajustements sont nécessaires, utilisez des cales afin d'obtenir le niveau souhaité dans l'alcôve. Prenez note de l'emplacement des cales avant de retirer le receveur. Inclinez le receveur vers l'arrière ou retirez-le soigneusement de l'alcôve.

# Installation du receveur de douche


## A-1 Installing into Wooden Floors

Étape 1

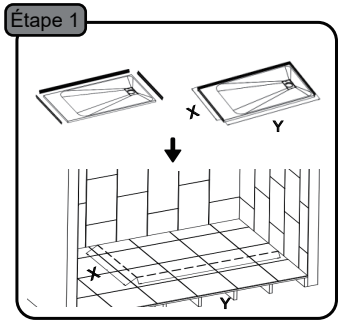



1.Selon les dimensions du receveur de douche, découpez la bride en alliage d'aluminium. Installez la bride, appliquez du mastic silicone sur les surfaces de jonction et fixez-la avec des vis. Mesurez les dimensions du receveur après l'installation de la bride.

Étape 2

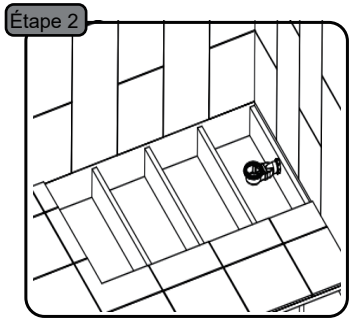


2.Réservez l'emplacement pour le receveur de douche. Installez la partie inférieure du drain et effectuez un test d'étanchéité afin de vous assurer qu'il n'y a aucune fuite et que l'installation est solide.

Étape 3

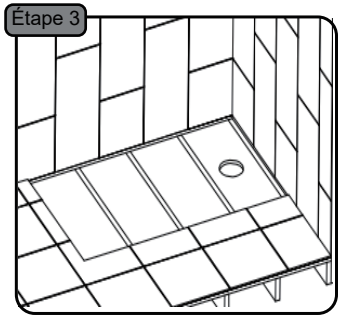

3.Posez le sol ou ajoutez des tasseaux en bois afin de renforcer la stabilité. Si le sol doit être posé, assurez-vous que l'emplacement réservé à l'évacuation comporte une ouverture d'au moins 120 mm.


Étape 4

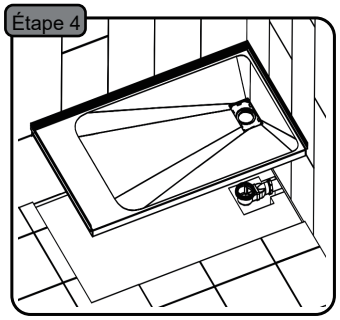

4.Placez le receveur de douche.




Étape 5

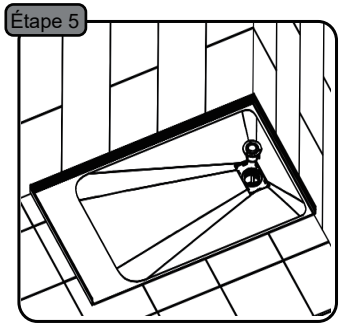


5.Installez la partie supérieure du drain.

Étape 6

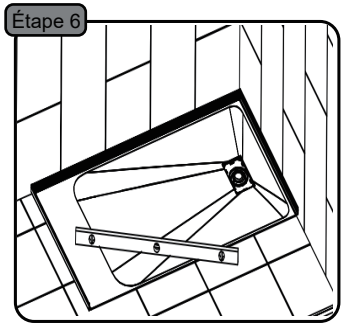


6.Utilisez un niveau pour vérifier et garantir une installation horizontale. Effectuez un test d'évacuation. Assurez-vous que le conduit d'évacuation n'est pas obstrué et qu'il n'y a pas d'accumulation d'eau sur la surface.


## A-2 Installation sur un plancher en bois

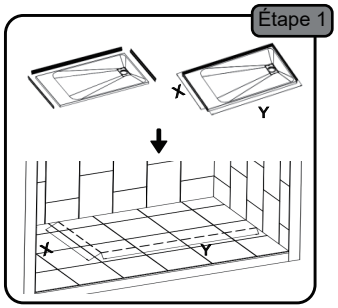



1.Selon les dimensions du receveur de douche, découpez la bride en alliage d'aluminium. Installez la bride, appliquez du mastic silicone sur les surfaces de jonction et fixez-la avec des vis. Mesurez les dimensions du receveur après l'installation de la bride.

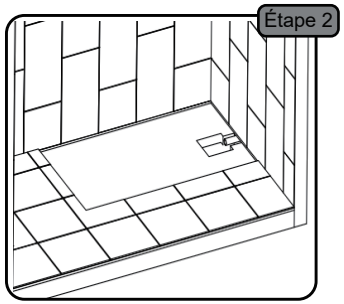



2.Mesurez et réservez l'emplacement du drain.

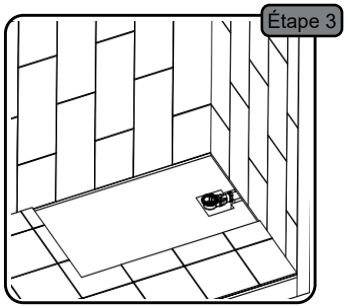



3.Installez la partie inférieure du drain. Effectuez un test d'étanchéité afin de vous assurer qu'il n'y a aucune fuite et que l'installation est solide.

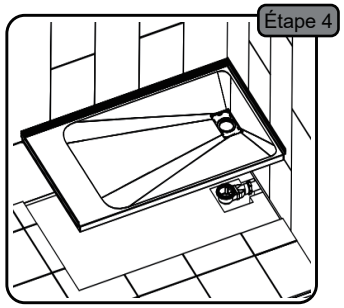


4.Placez le receveur de douche.

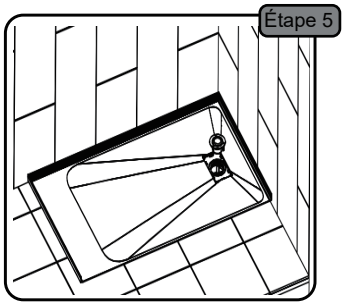


5.Installez la partie supérieure du drain.

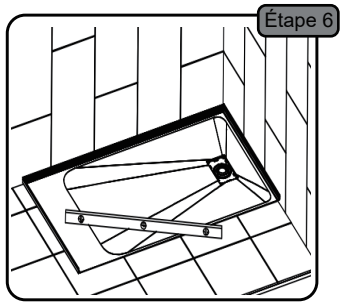


6.Utilisez un niveau pour vérifier et garantir une installation horizontale. Effectuez un test d'évacuation. Assurez-vous que le conduit d'évacuation n'est pas obstrué et qu'il n'y a pas d'accumulation d'eau sur la surface. Veuillez ne pas utiliser le receveur de douche avant le séchage complet du silicone.

# Dimensions

| SKU | DIMENSIONS L × l × H (cm) |
|---|---|
| WH-SP4832A1 | 120X80X2.6 |
| BK-SP4832A1 | 120X80X2.6 |
| WH-SP4836A2 | 120X90X2.6 |
| BK-SP4836A2 | 120X90X2.6 |
| WH-SP6032A3 | 150X80X2.6 |
| BK-SP6032A3 | 150X80X2.6 |
| WH-SP6036A4 | 150X90X2.6 |
| BK-SP6036A4 | 150X90X2.6 |
| WH-SP6032B1 | 152X81X2.6 |
| CW-SP6032B1 | 152X81X2.6 |
| WH-SP6036B2 | 152X91.2X2.6 |
| CW -SP6036B2 | 152X91.2X2.6 |

# Entretien et maintenance

- Essuyez simplement la surface avec une serviette humide afin d'éliminer les traces d'eau et les résidus. Pour les taches ordinaires, nettoyez avec un détergent doux ou un nettoyant polyvalent. Pour nettoyer les coins et les joints, vaporisez un produit anti-moisissure.
- VEUILLEZ REMETTRE CES INFORMATIONS IMPORTANTES D'ENTRETIEN ET DE GARANTIE AU PROPRIÉTAIRE.
- Pour plus d'informations, visitez : www.altairdesignusa.com
- LES DOMMAGES ET ARTICLES MANQUANTS DOIVENT ÊTRE SIGNALÉS DANS LES 48 HEURES SUIVANT LA LIVRAISON !!!