

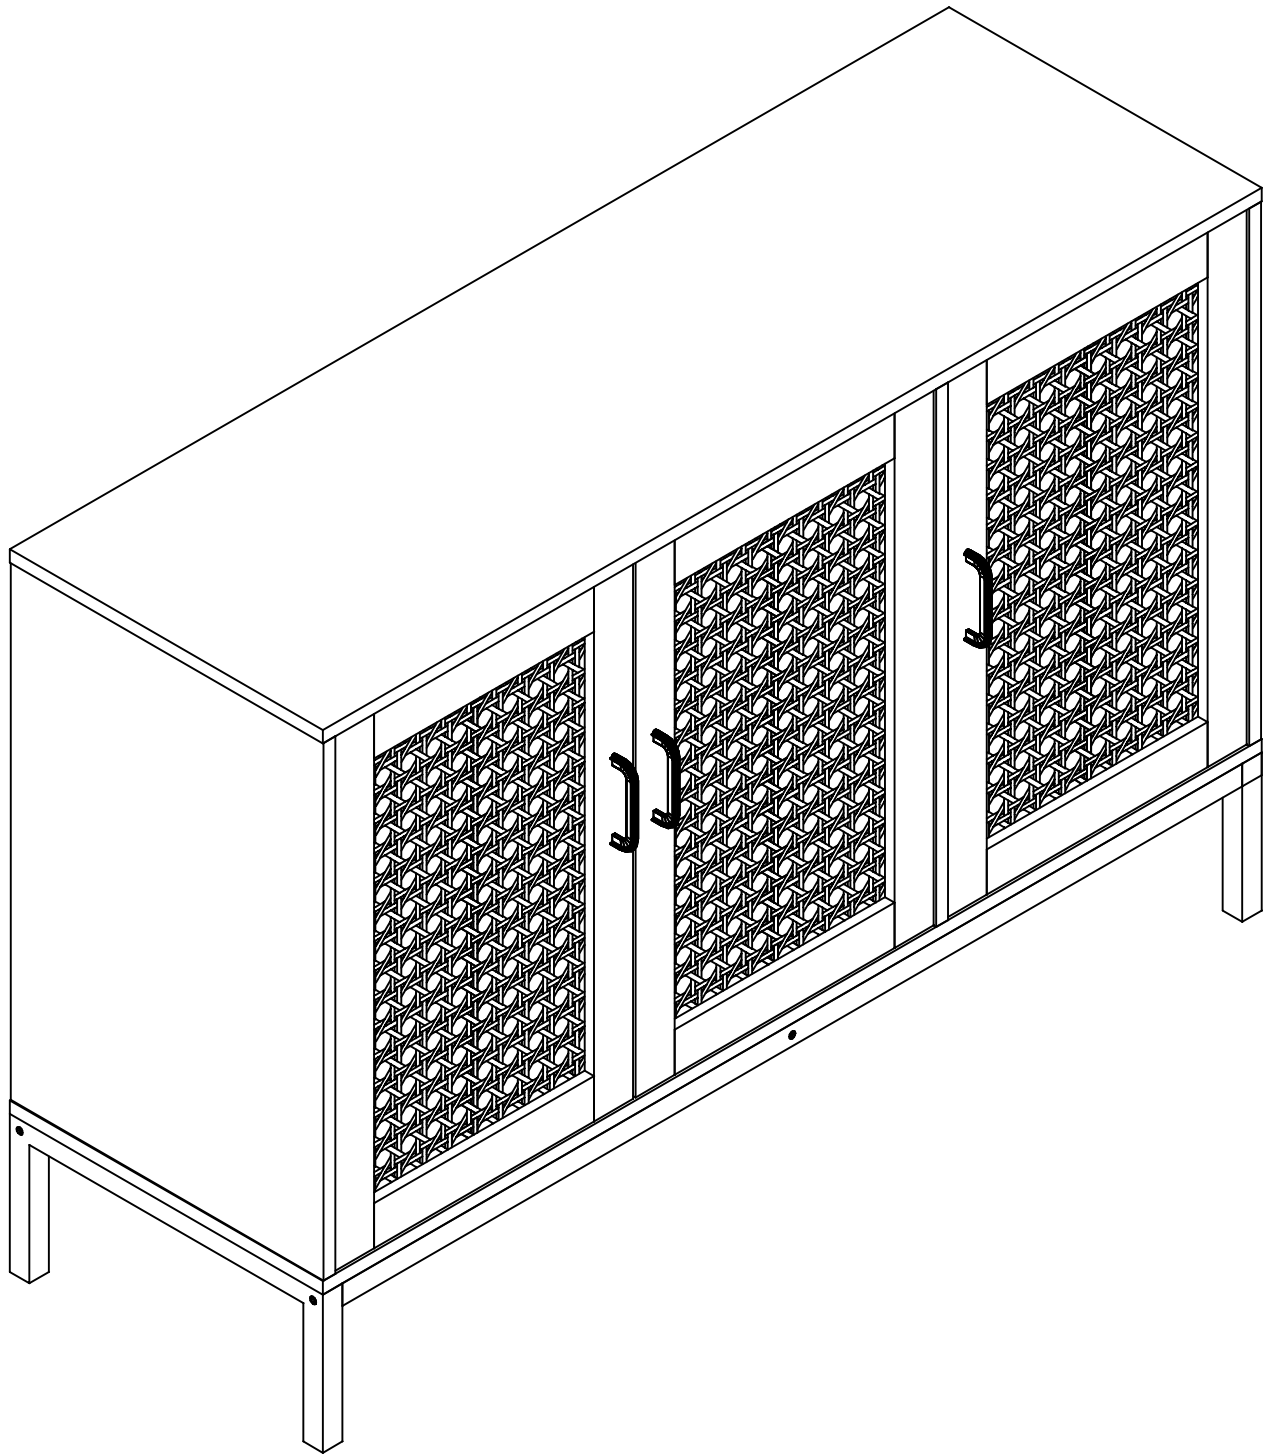
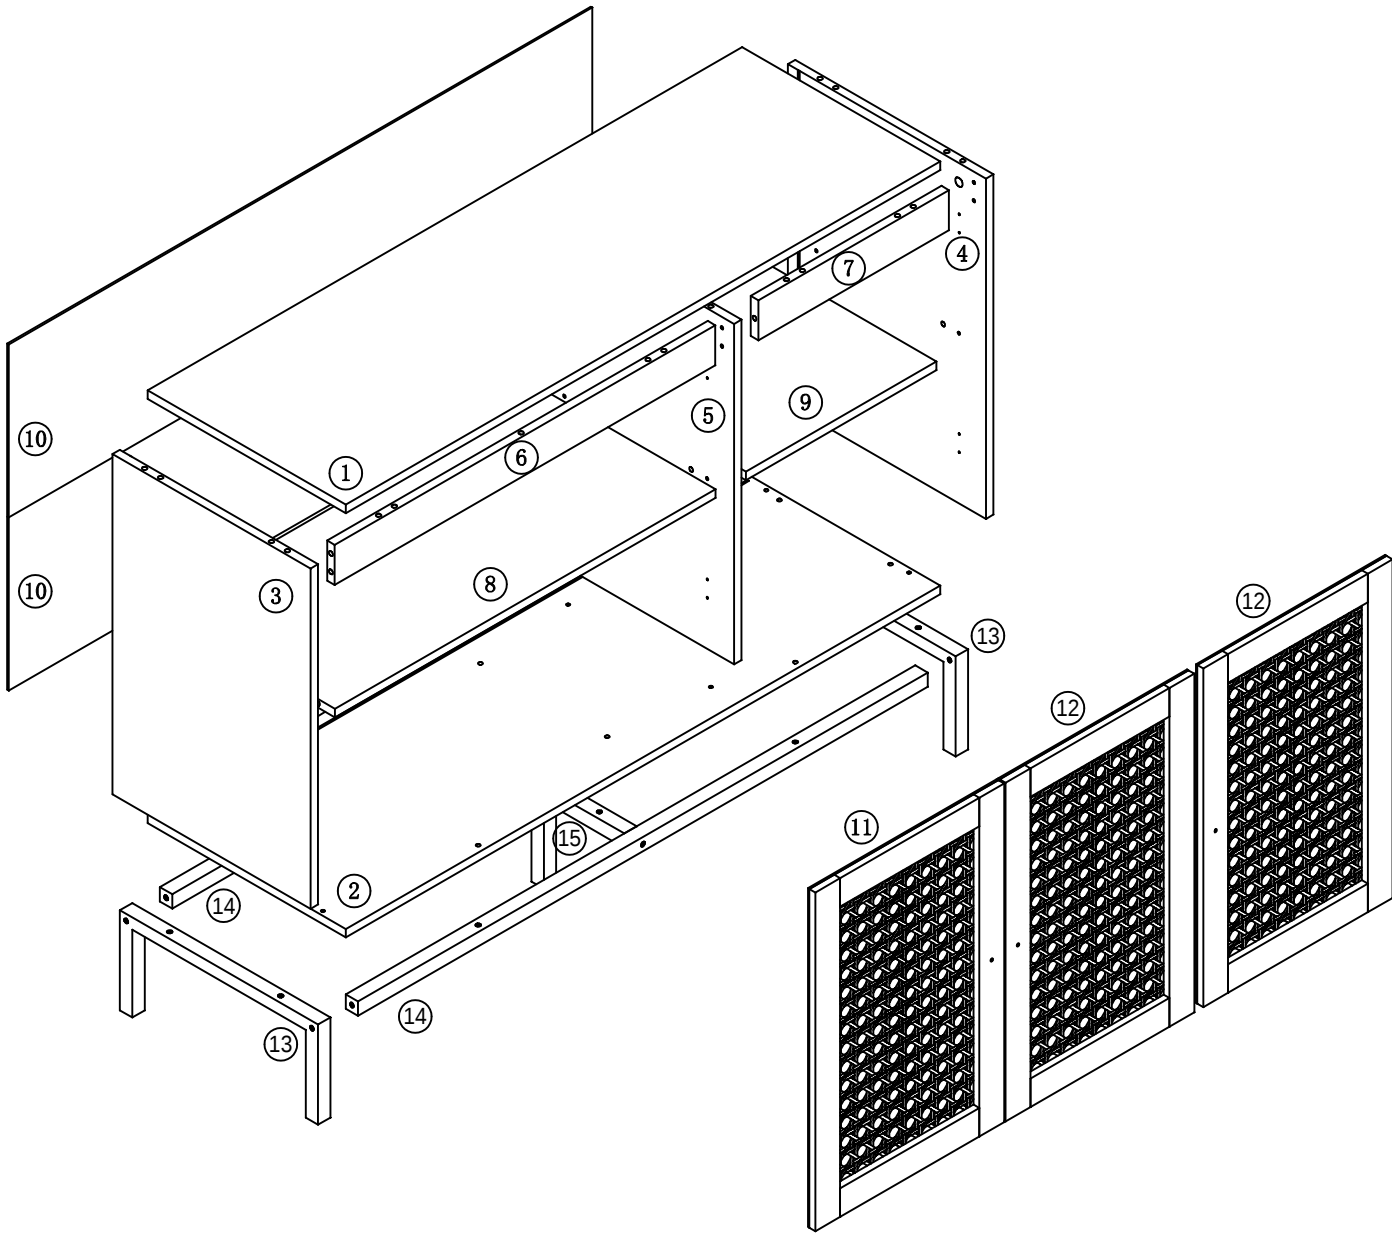


Assembly Instruction




PARTS LIST




Cam Bolt 26pc  A	Cam Nut 26pc  B	Wood Plug 18pc  8x40mm C	Hangle 3pc  D	Screw 6pc  E	6pc  F	Back panel buckle set 30pc  3x14mm G
Screw 6pc  5x40mm H	Screw 36pc  3.5x14mm I	1pc  J	Screw 6pc  6x40mm K	Screw 10pc  6x35mm L	2pc  3.5x14mm 3.5x35mm M	Screwdriver 1pc  N

Step 1

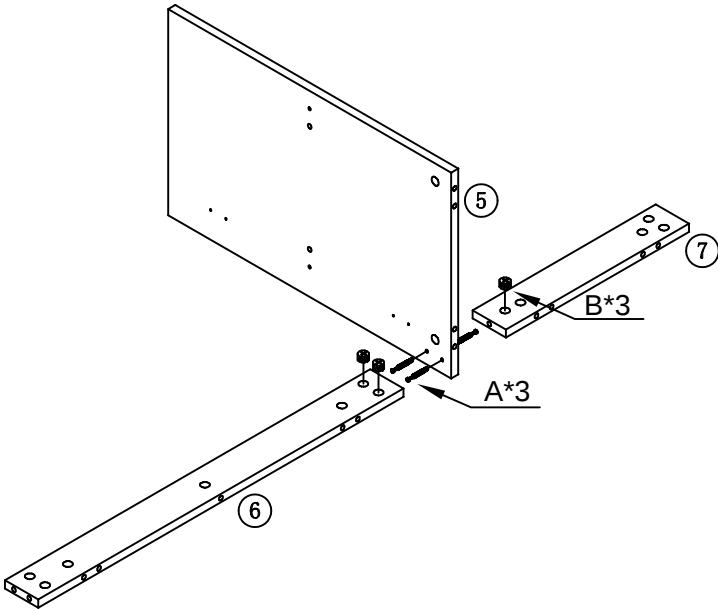


	
A	B
3x	3x

Step 2

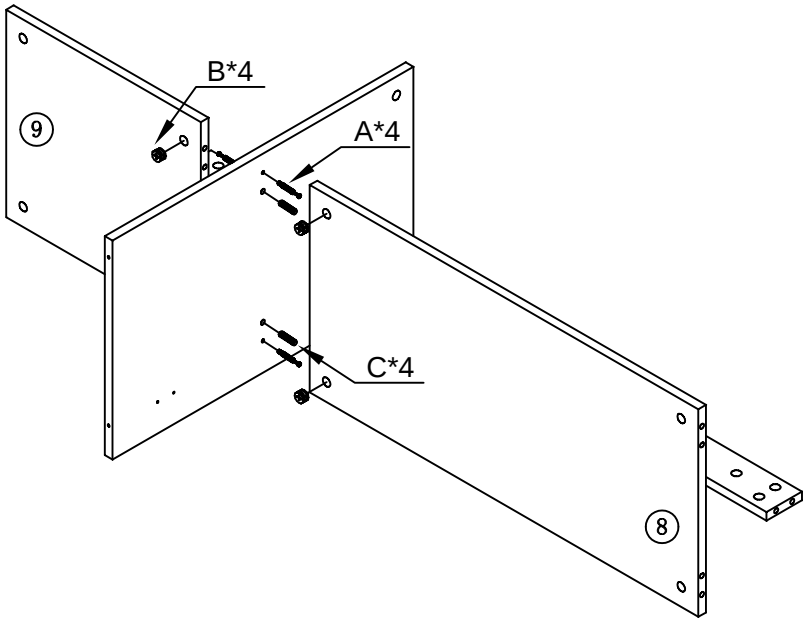


	
C	
4x	
	
A	B
4x	4x

Step 3

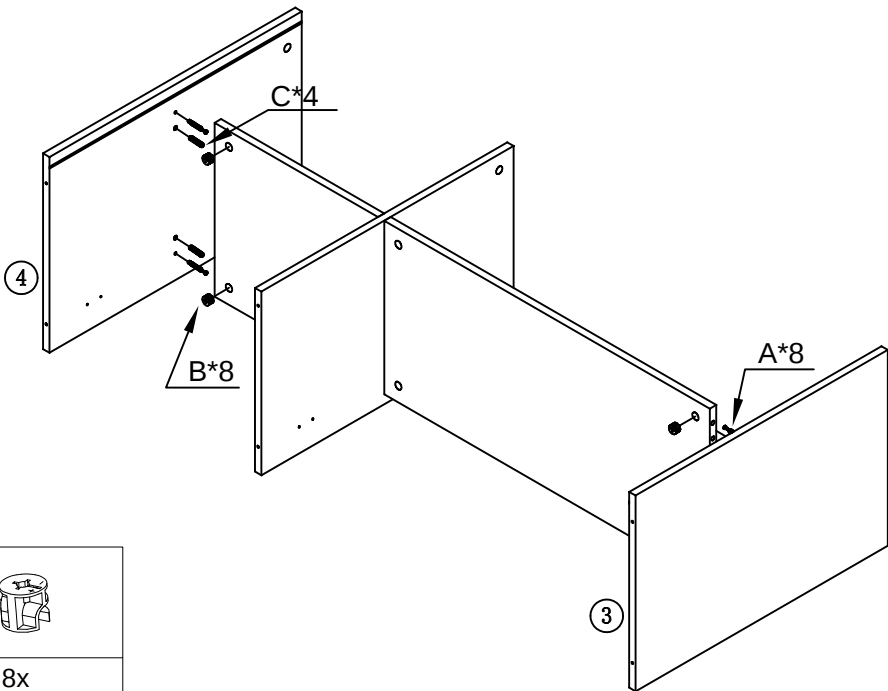


	
C	
4x	
	
A	B
8x	8x

Step 4

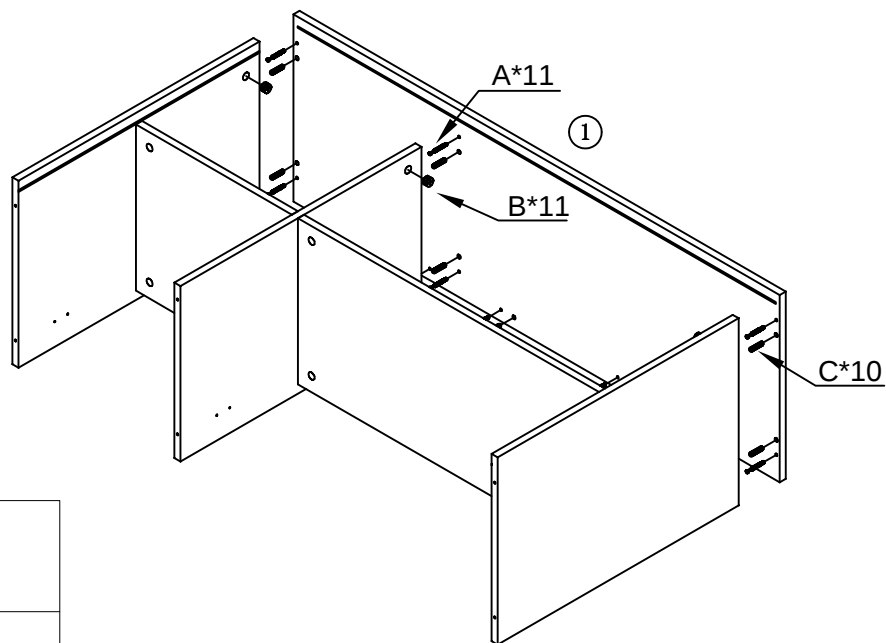


C	
10x	
A	
11x	
B	
11x	


Step 5

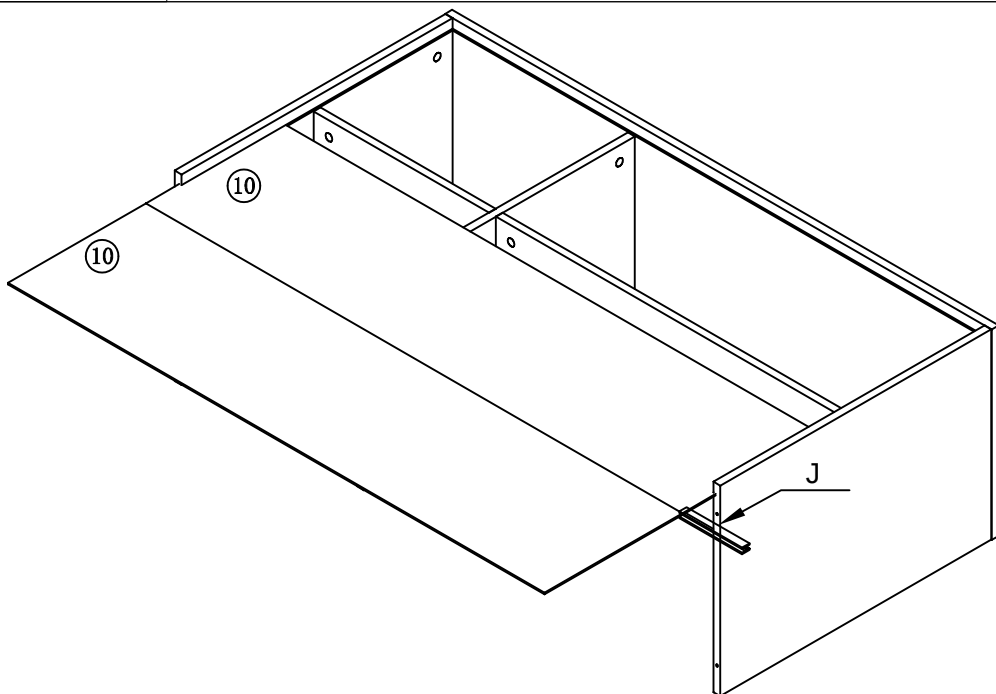


J	
1x	

Step 6


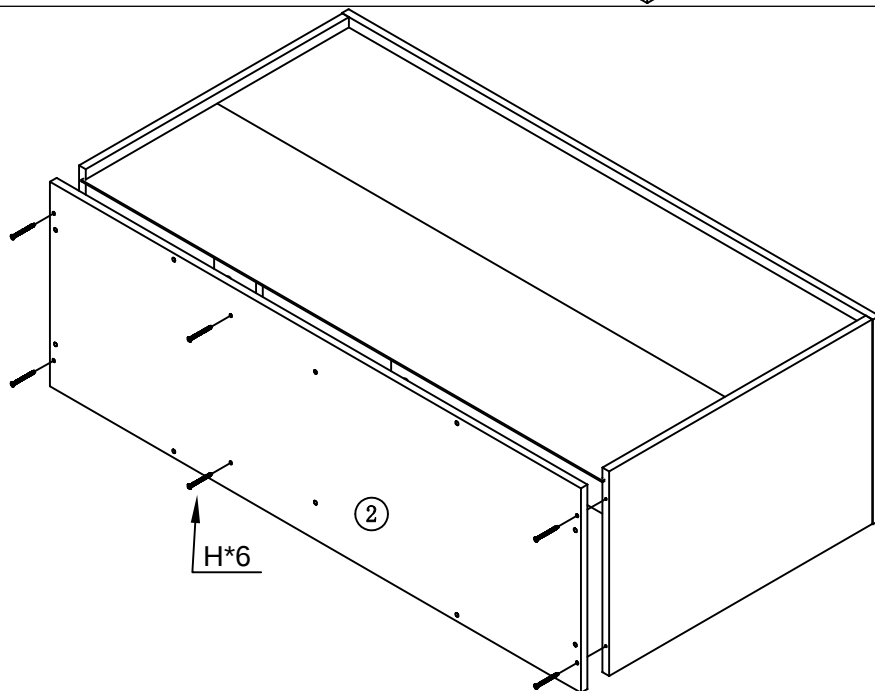


H	
6x	



Step 7

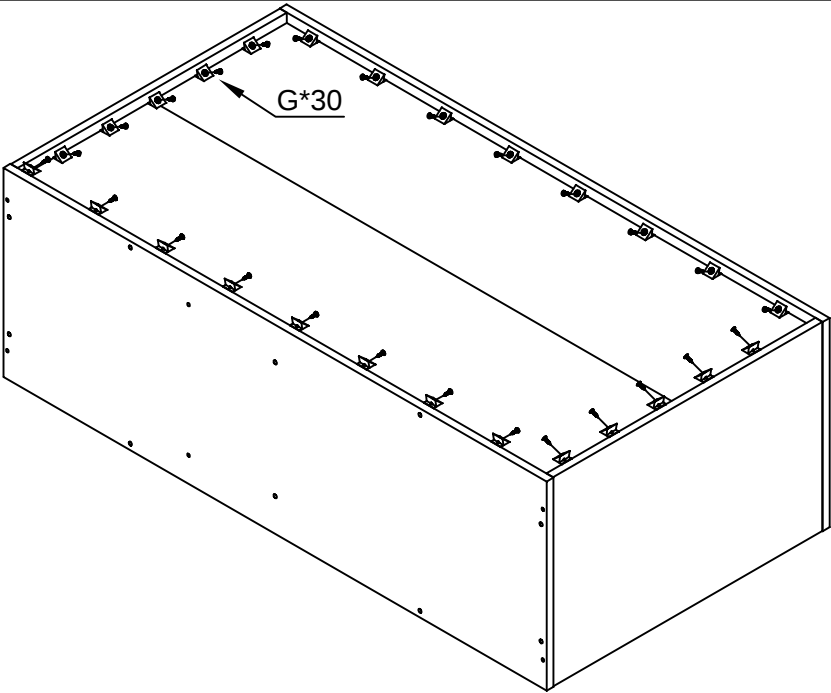



Insert the gap

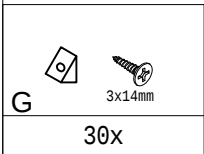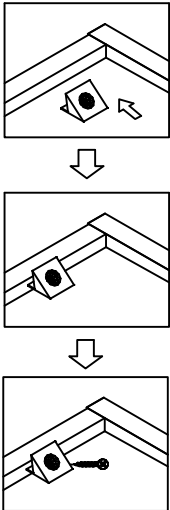


Step 8

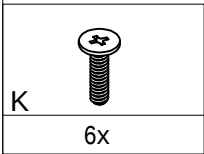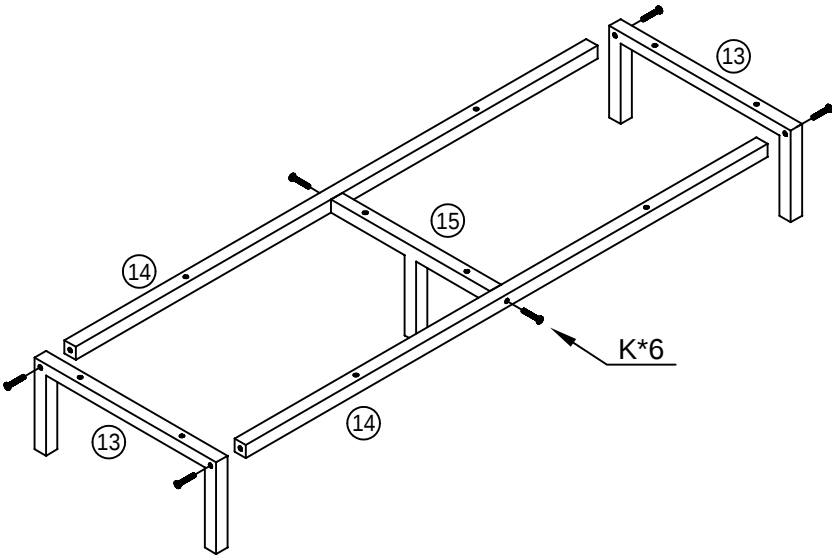

Step 9

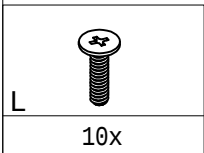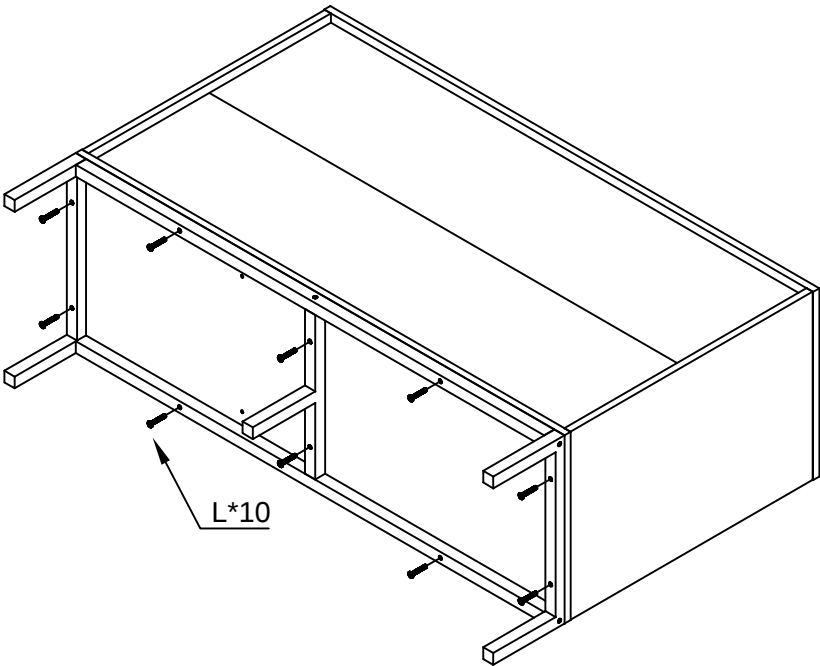


Step 10

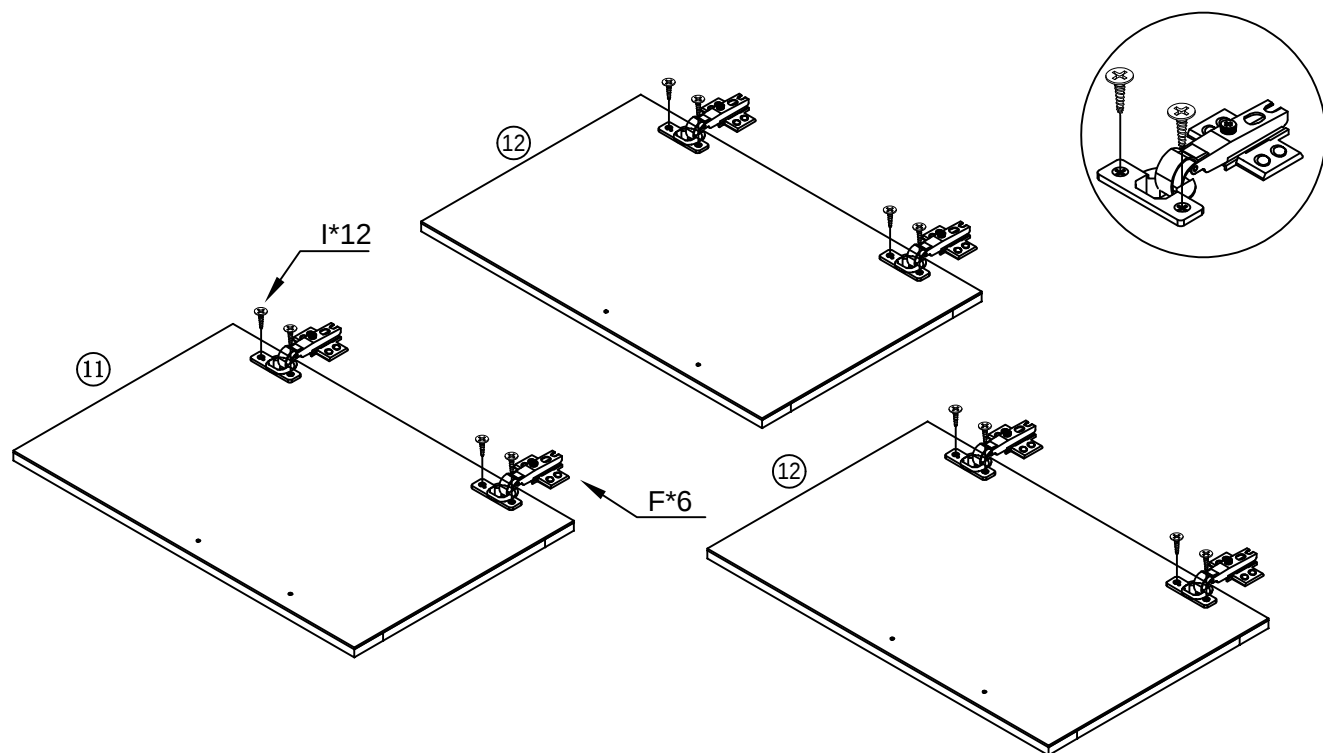


	
F 6x	I 12x

Step 11

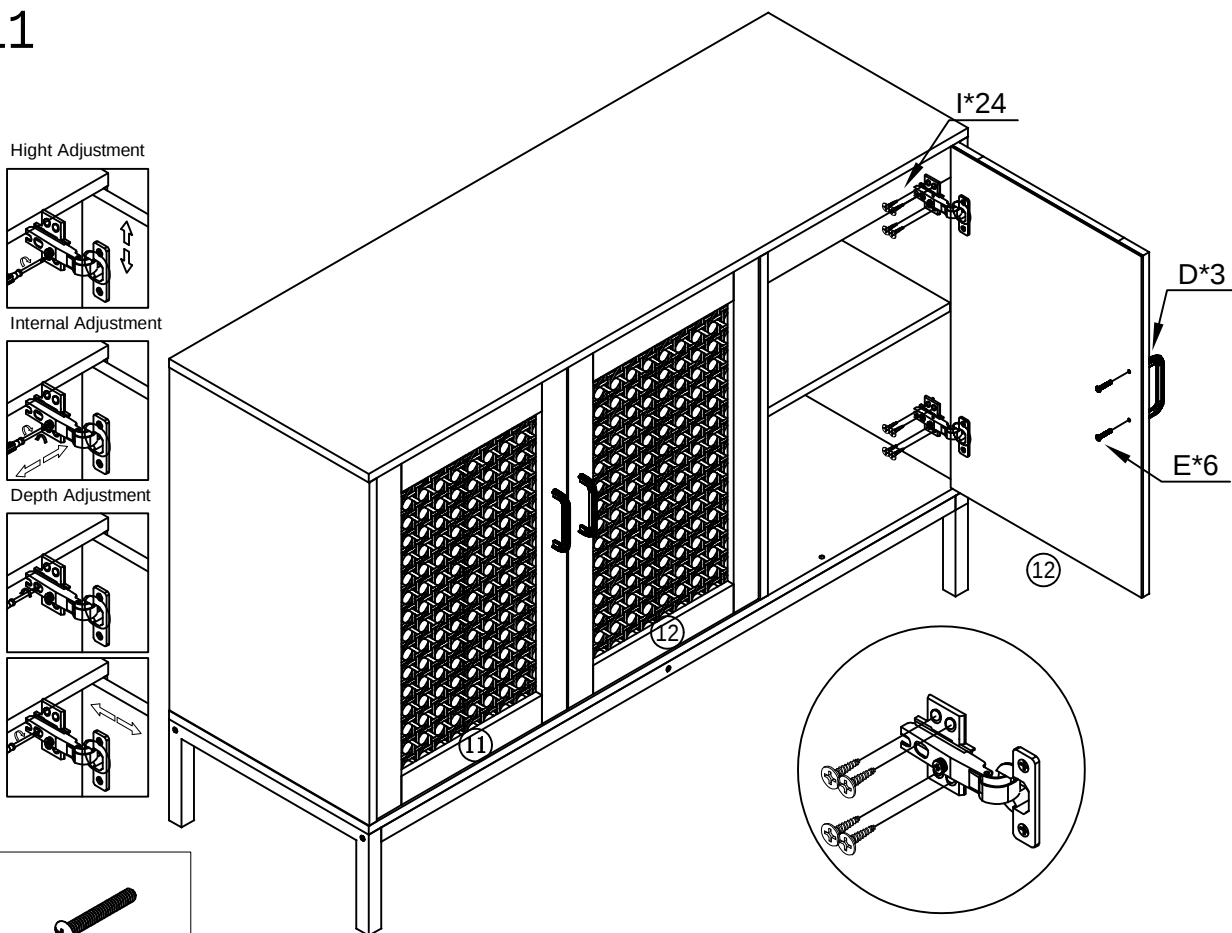

	
I 24x	D 3x
	
	E 6x

Step 12

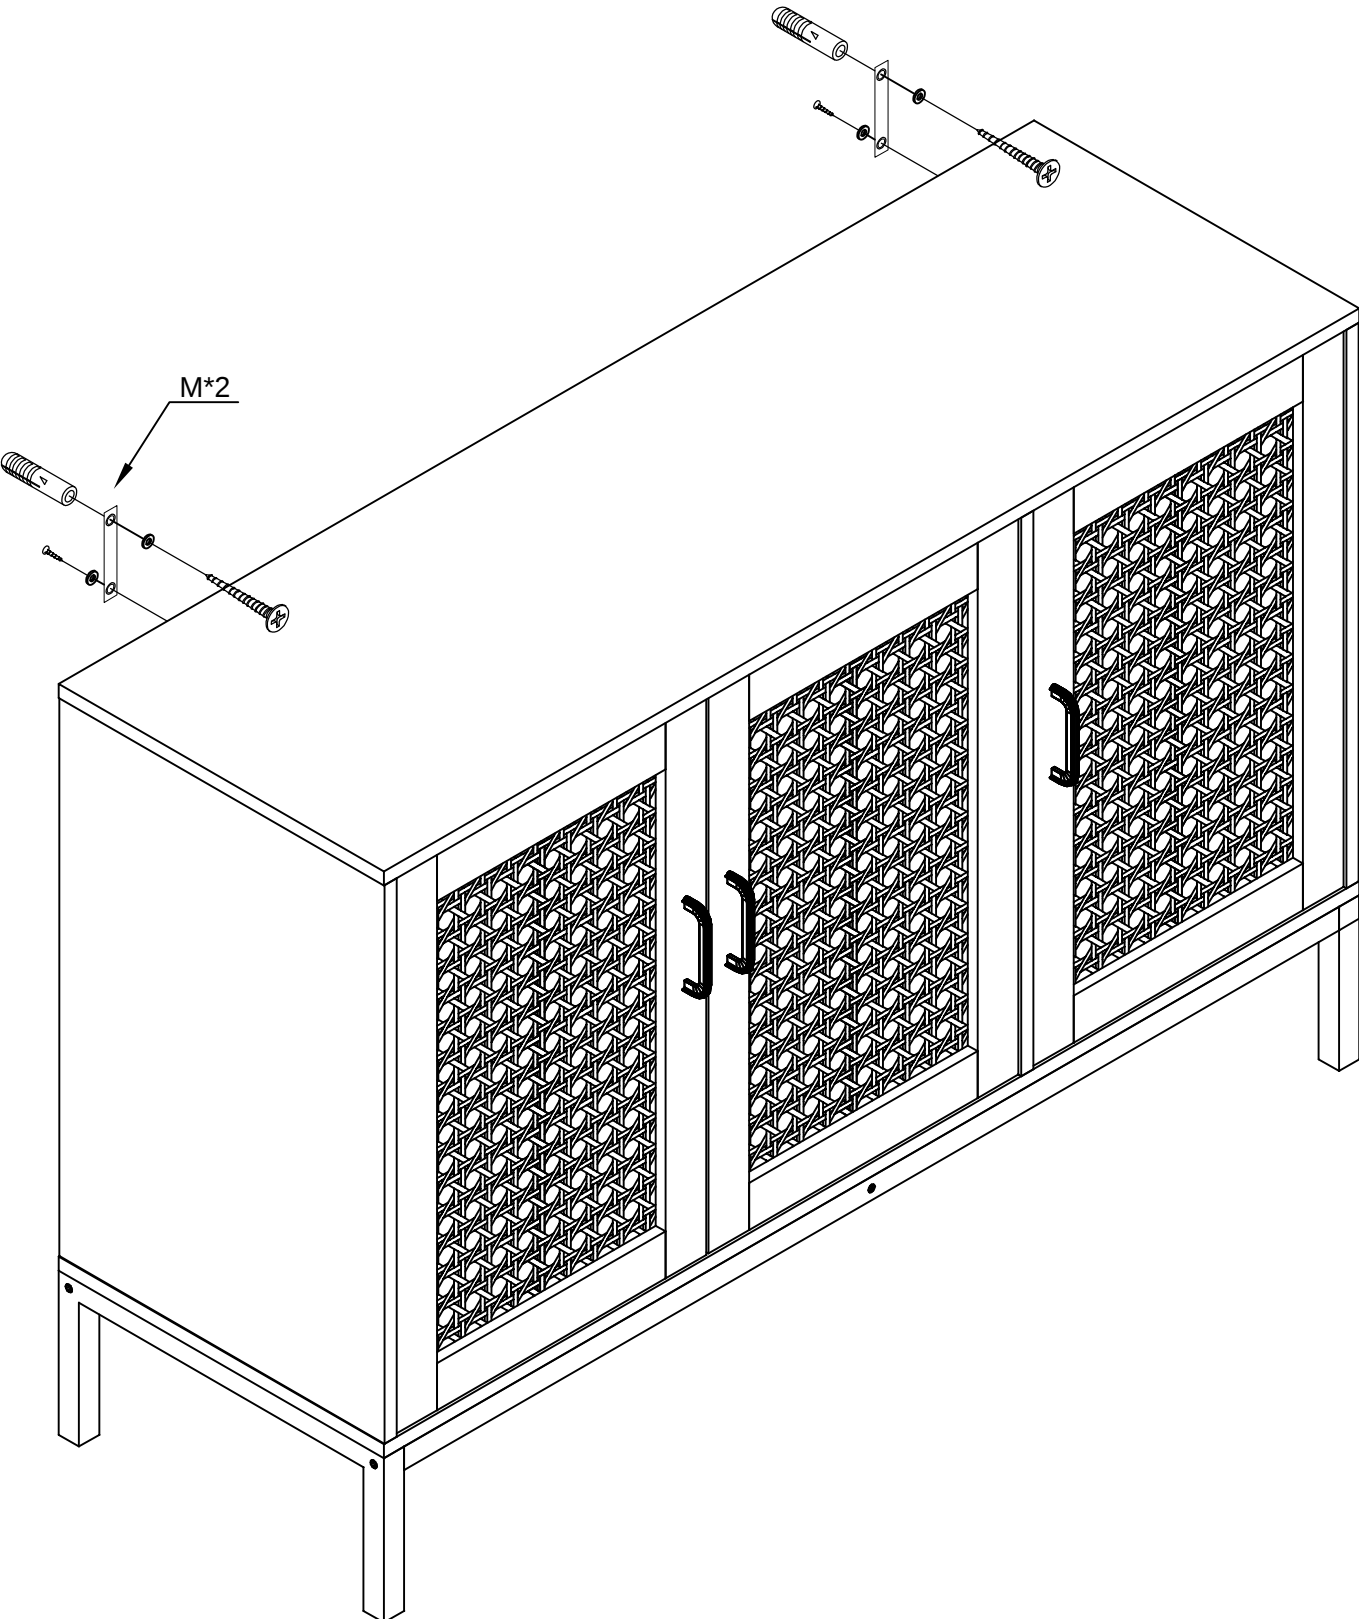



M

3.5"14 3.5"35

2x