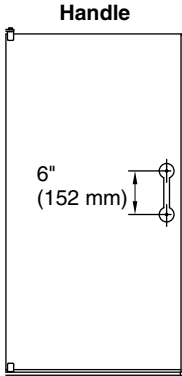
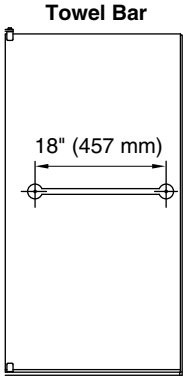
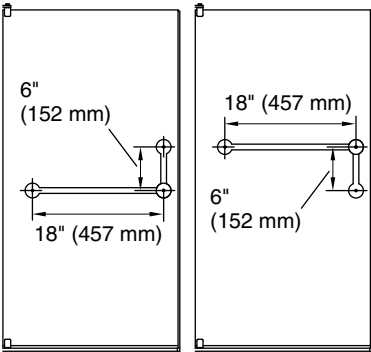
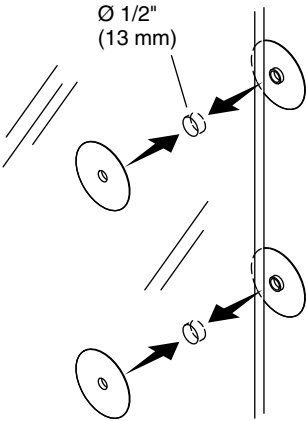
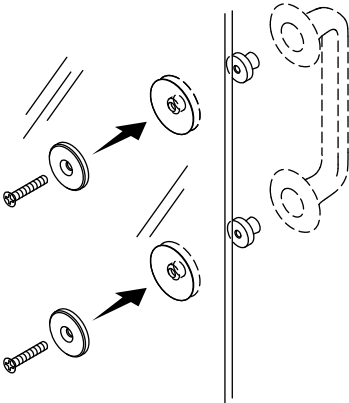
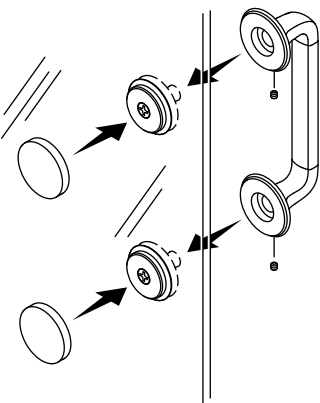
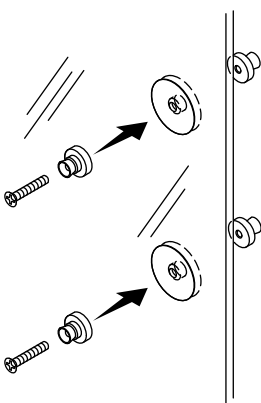
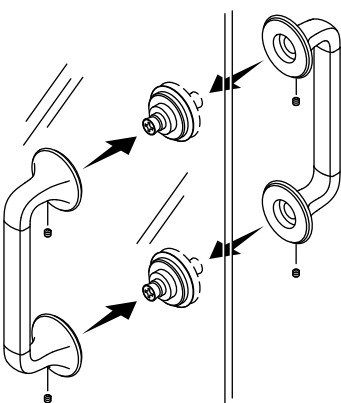
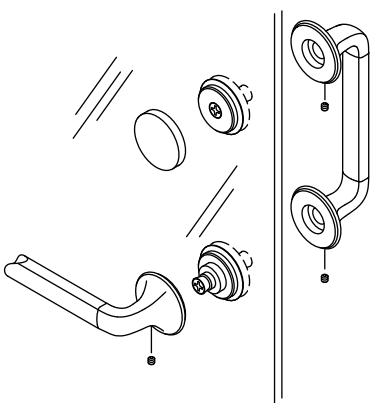


Record your model number below for future reference:	Warning: Risk of personal injury. Do not cut or drill tempered glass. Tempered glass will shatter if cut or drilled.	Important Information The handle or towel bar can be installed individually, back-to-back, or in combination. An escutcheon kit is required to cover exposed hardware for single or mixed configurations.	Roughing-In: Single or Back-to-Back Handle  Towel Bar 	Roughing-In: Handle/towel bar combination 	1 All Installations: Install the gaskets with the collars toward the holes. 
2 Single: Assemble the spacers, posts, and screws. Insert the screws opposite the handle side. 	Single: Attach the handle/towel bar with the setscrews. Thread on the escutcheons. 	3 Back-to-back: Assemble the screws and posts. 	Back-to-back: Attach the handles/towel bars with the setscrews. 	4 Combination: Assemble for single and back-to-back configurations. Thread escutcheons over exposed hardware. 	

Questions? Problems? For additional assistance, please contact KALLISTA's Customer Service Department at 1-888-4-KALLISTA (1-888-452-5547) or kallista.com.