


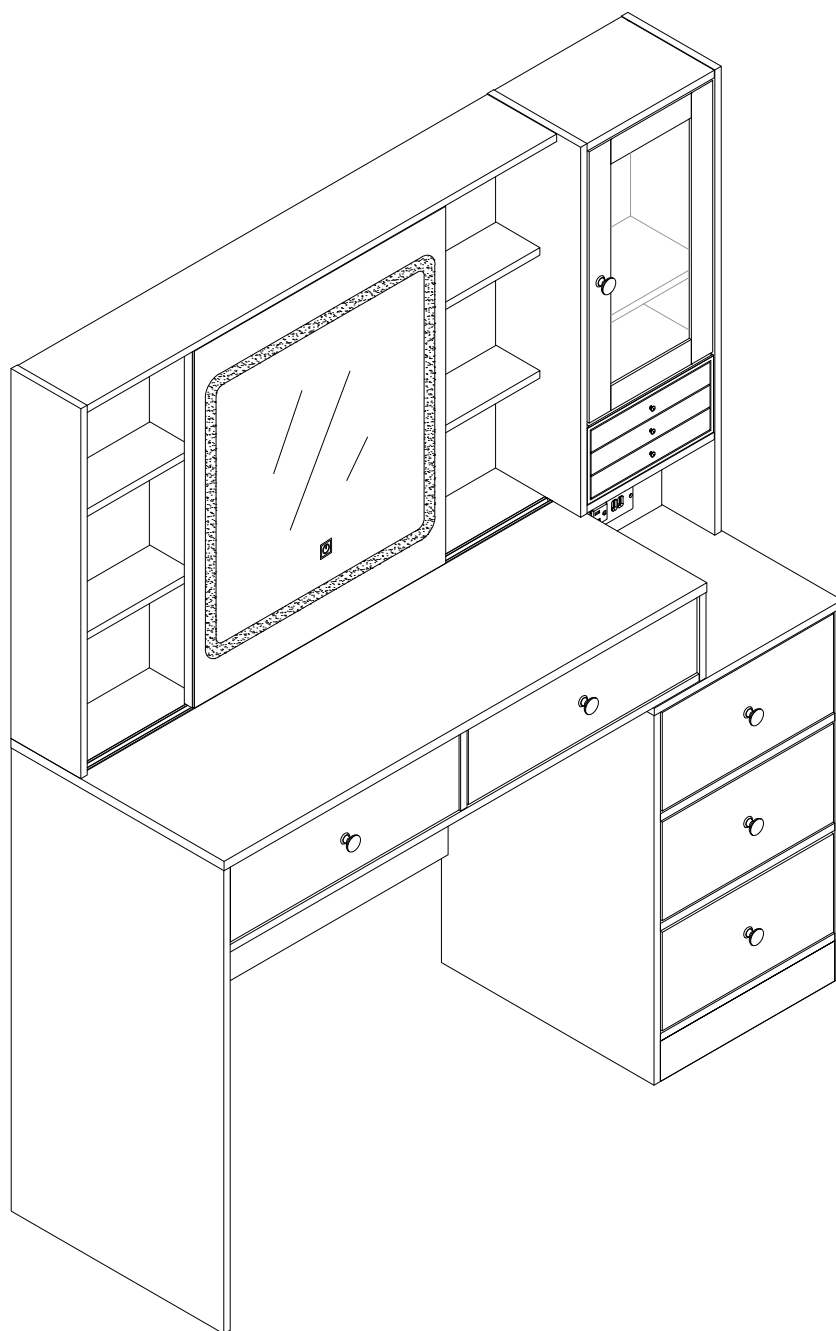
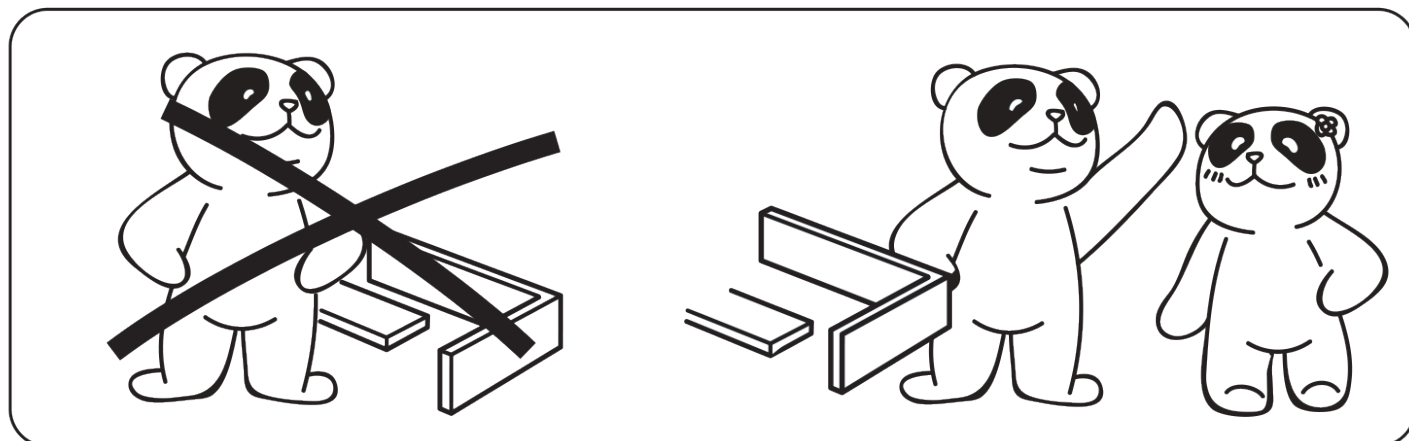


Installation & Assembly

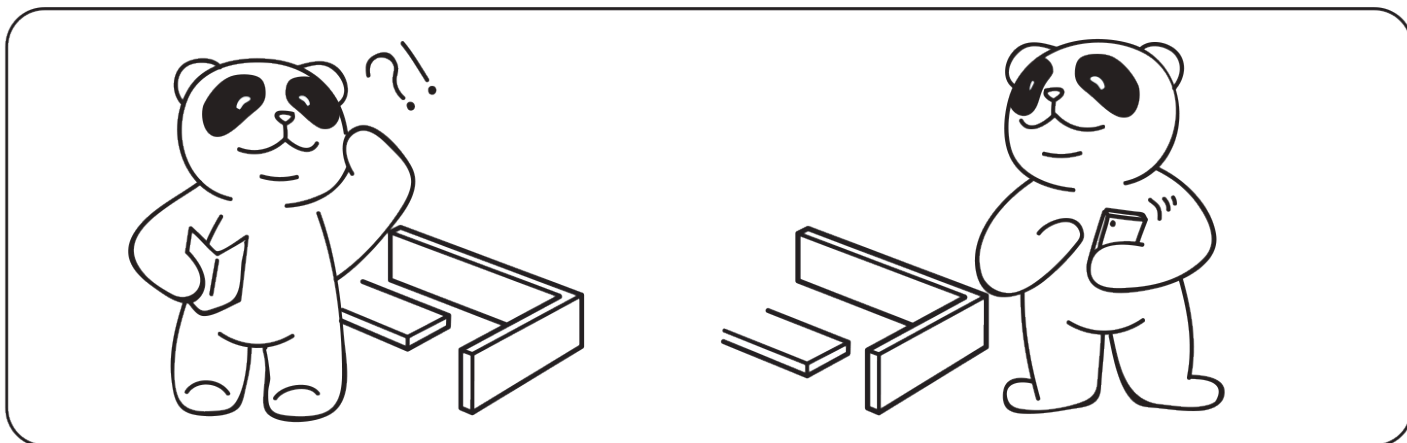

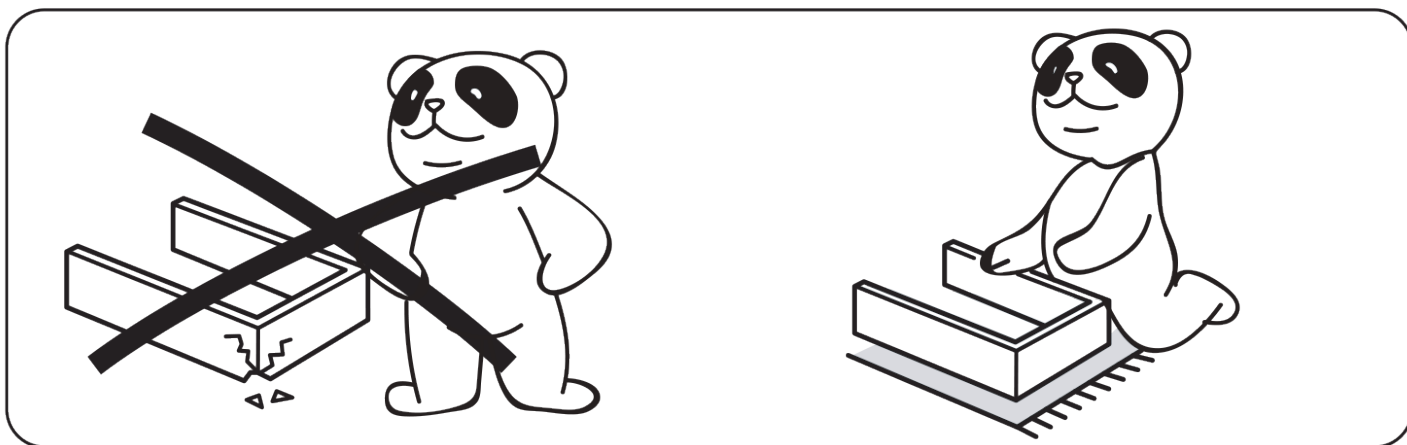


Installation parts

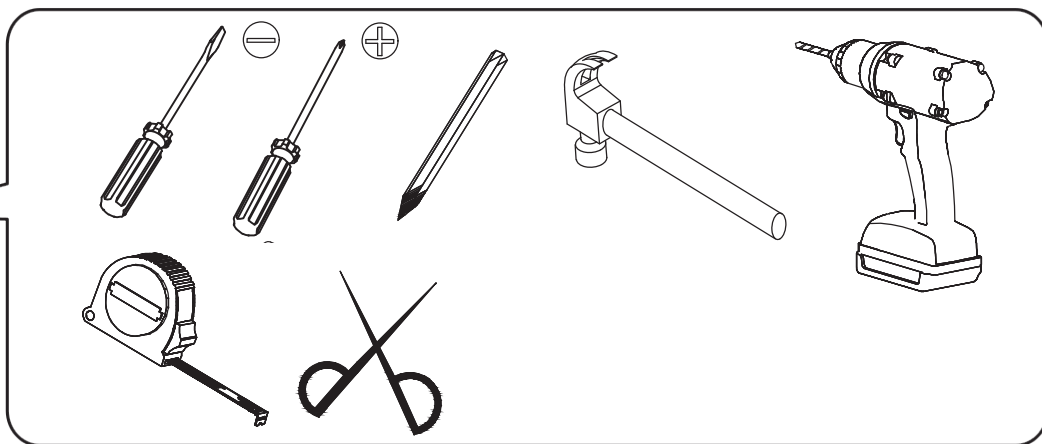

A

x84(+2)
Ø6.5x35mm



B

x84(+2)
Ø15x9.5mm



C

x36(+2)
4x35mm



D

x53(+2)
6x30mm




E

x90(+4)
3.5x12mm




F

x2
M6x15mm



G

x2
Ø8x20mm

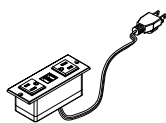

H

x1




I

x1
Ø20mm



J

x6
4x16mm



K

x6



L

x32(+1)
3x14mm




M

x30(+1)




N

x4
10x22mm




O

x2
Ø6x30mm



P

x2



Q

x1




R

x8
Ø5x16mm




S

x8
Ø3x30mm




T

x2
Ø26mm



U

x2




V

x2




W

x2




XCL

x5
300mm




XDL

x5
300mm



XCR


x5
300mm




XDR

x5
300mm


Install the footstool

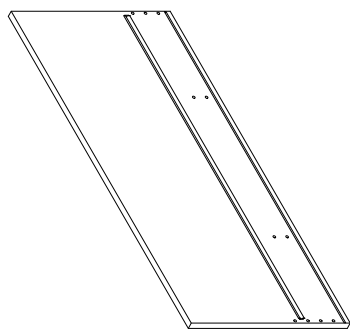


1
x1

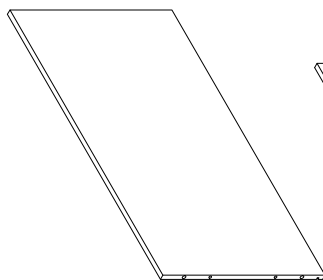


2
x1

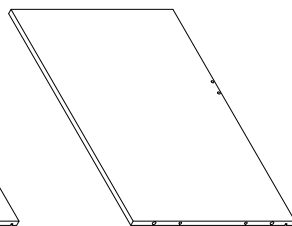


3
x1

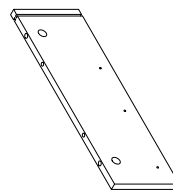


4
x1

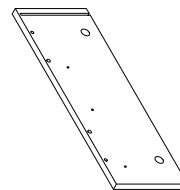


5
x1

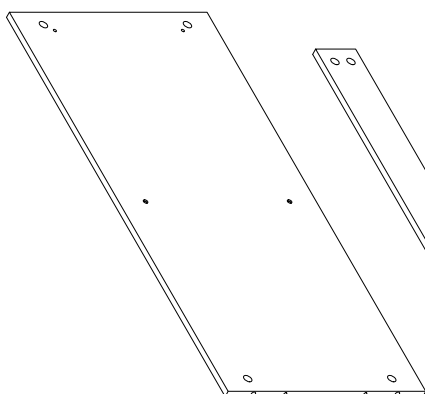


6
x1

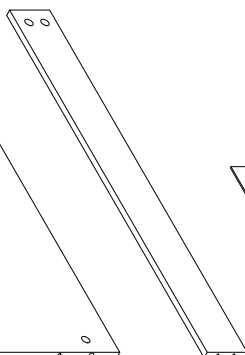


7
x1

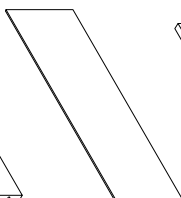


8
x2

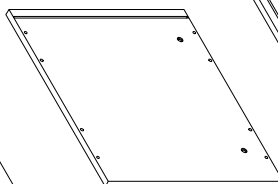


9
x1

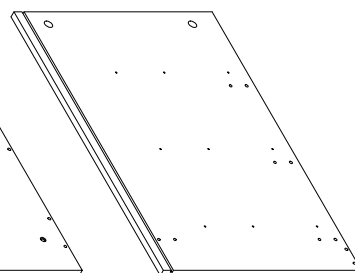


10
x1

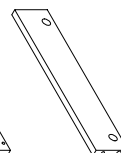


11
x4

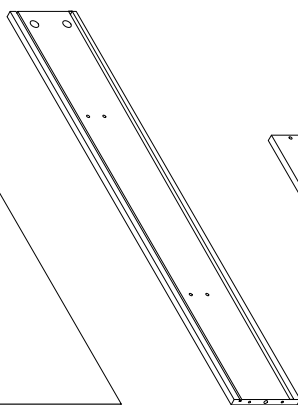


12
x1

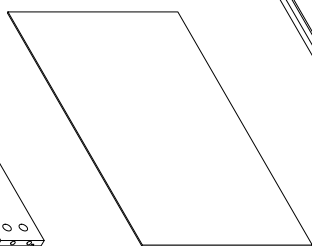


13
x1

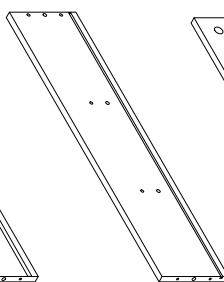

14
x1

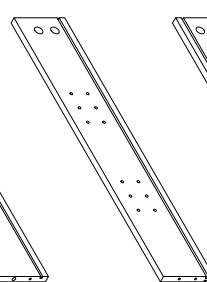


15
x1

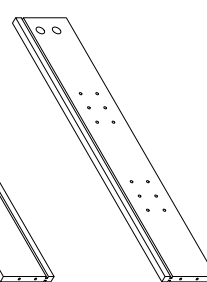


16
x1




17
x1

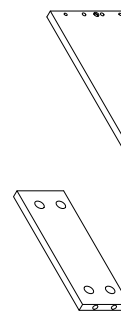


18
x4

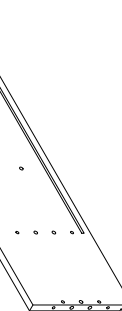


19
x1

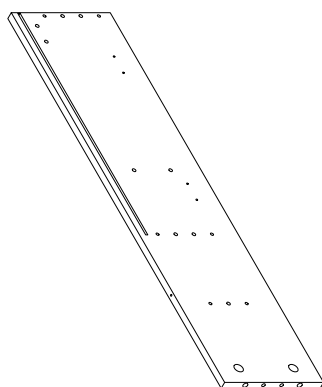


20
x1

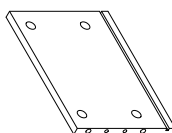


21
x1




22
x1

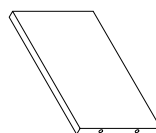



23
x1

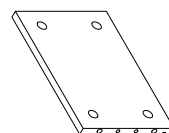


24
x1

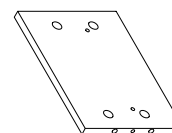


25
x1


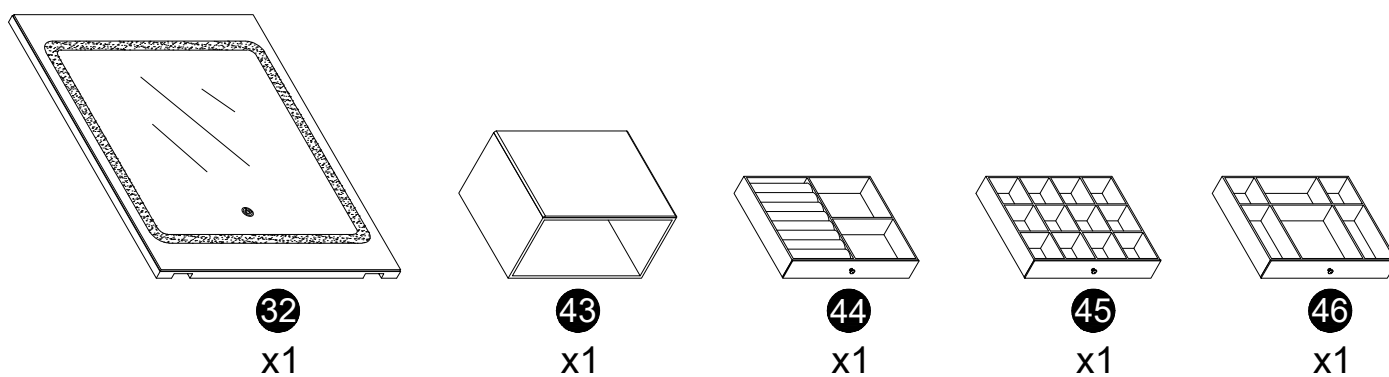
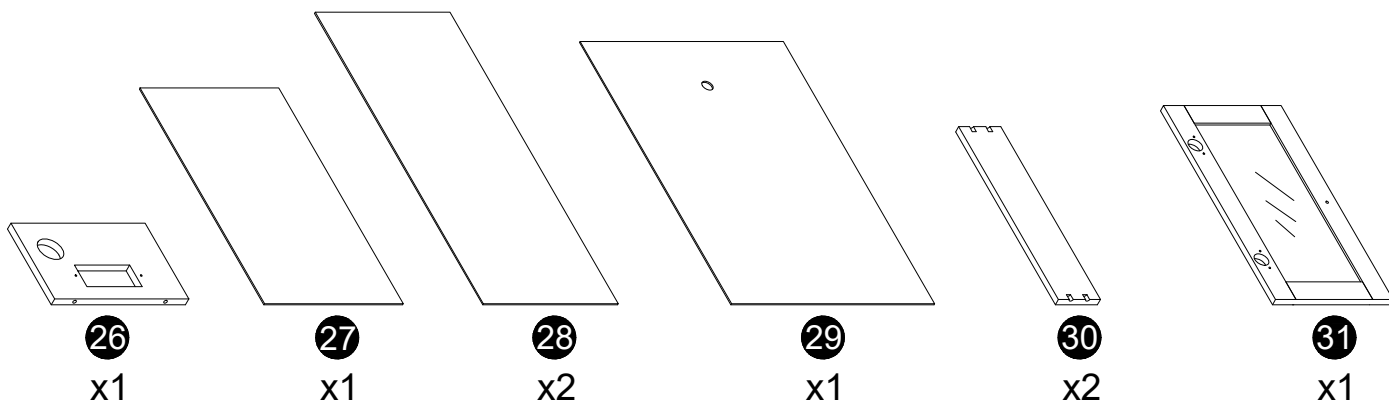


Middle Drawer

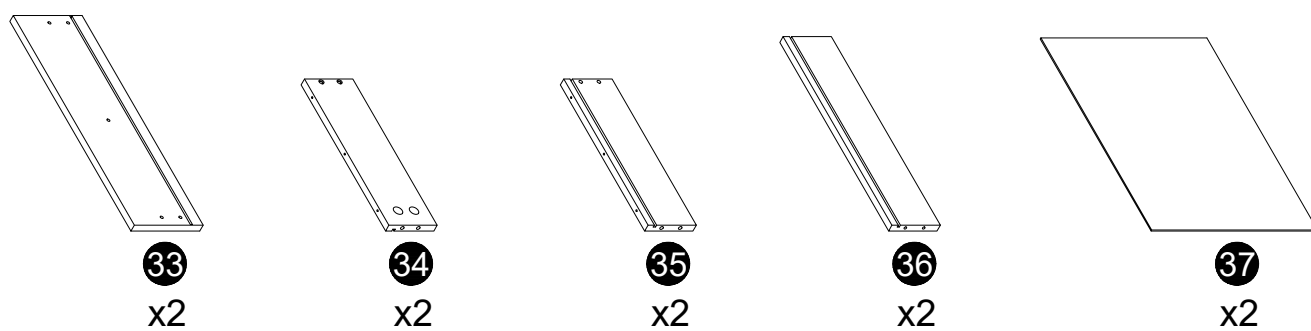



Lower Drawer

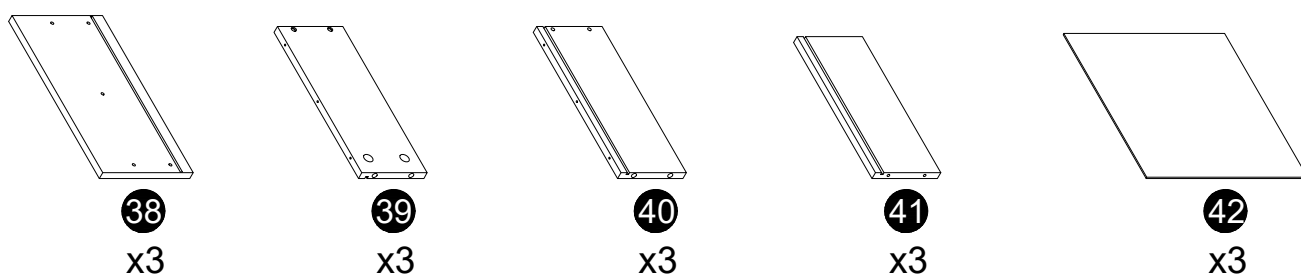

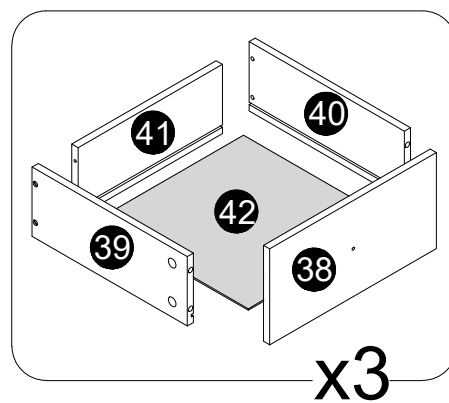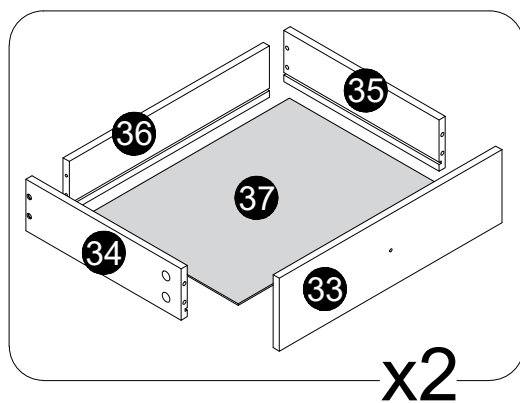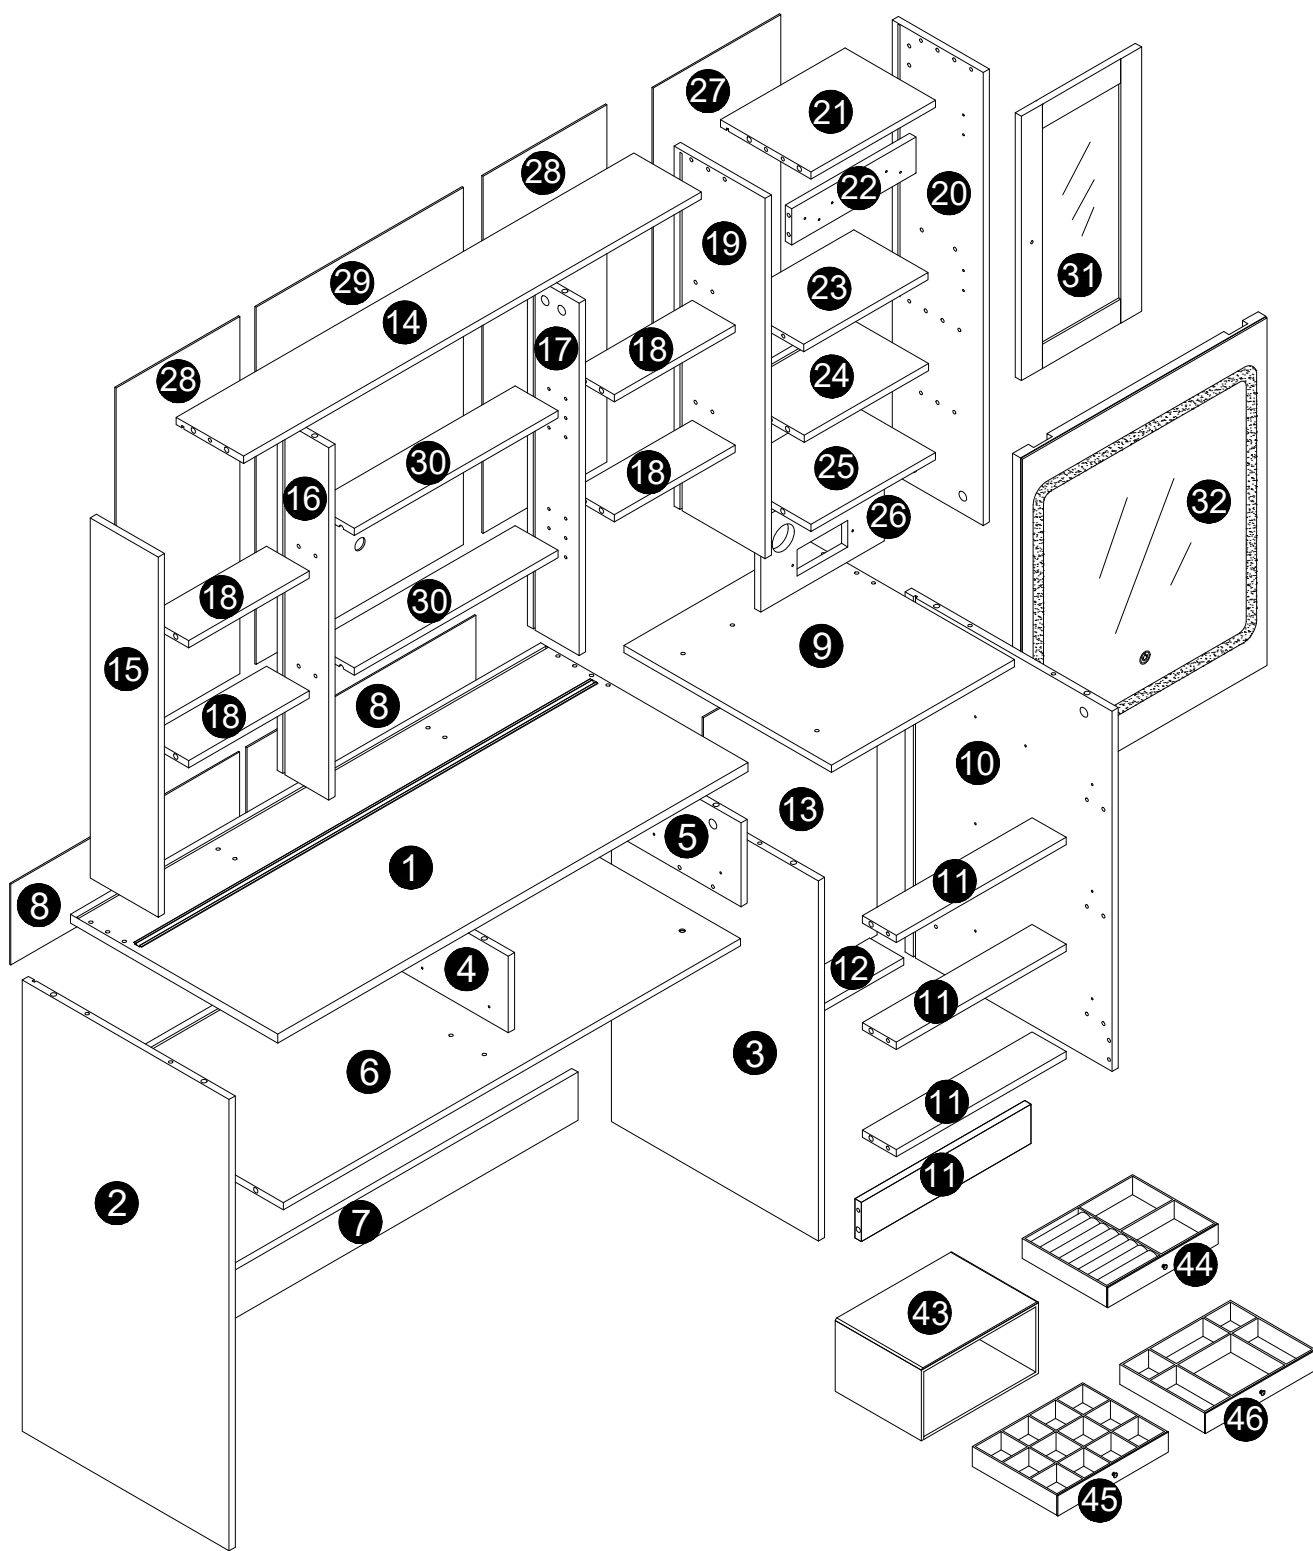



1

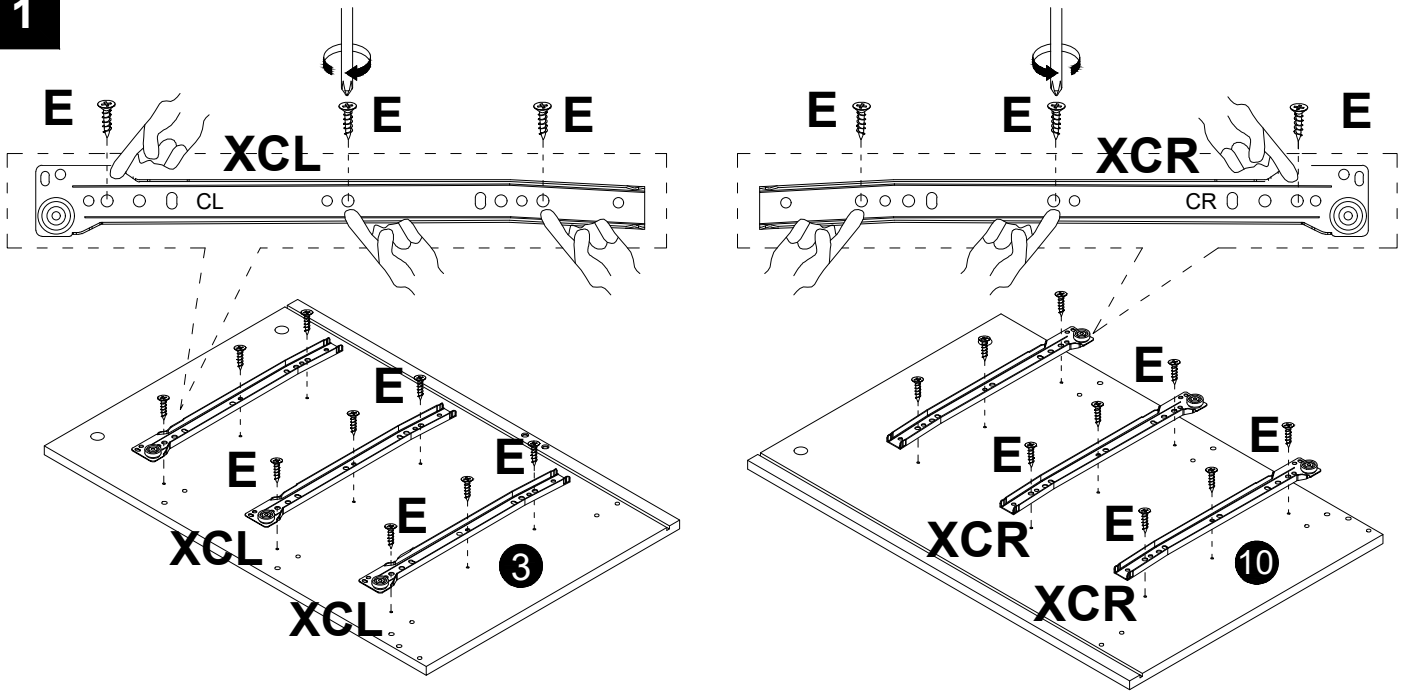




E	x18	XCL	x3	XCR	x3
					
3.5x12mm		L300mm		L300mm	

2

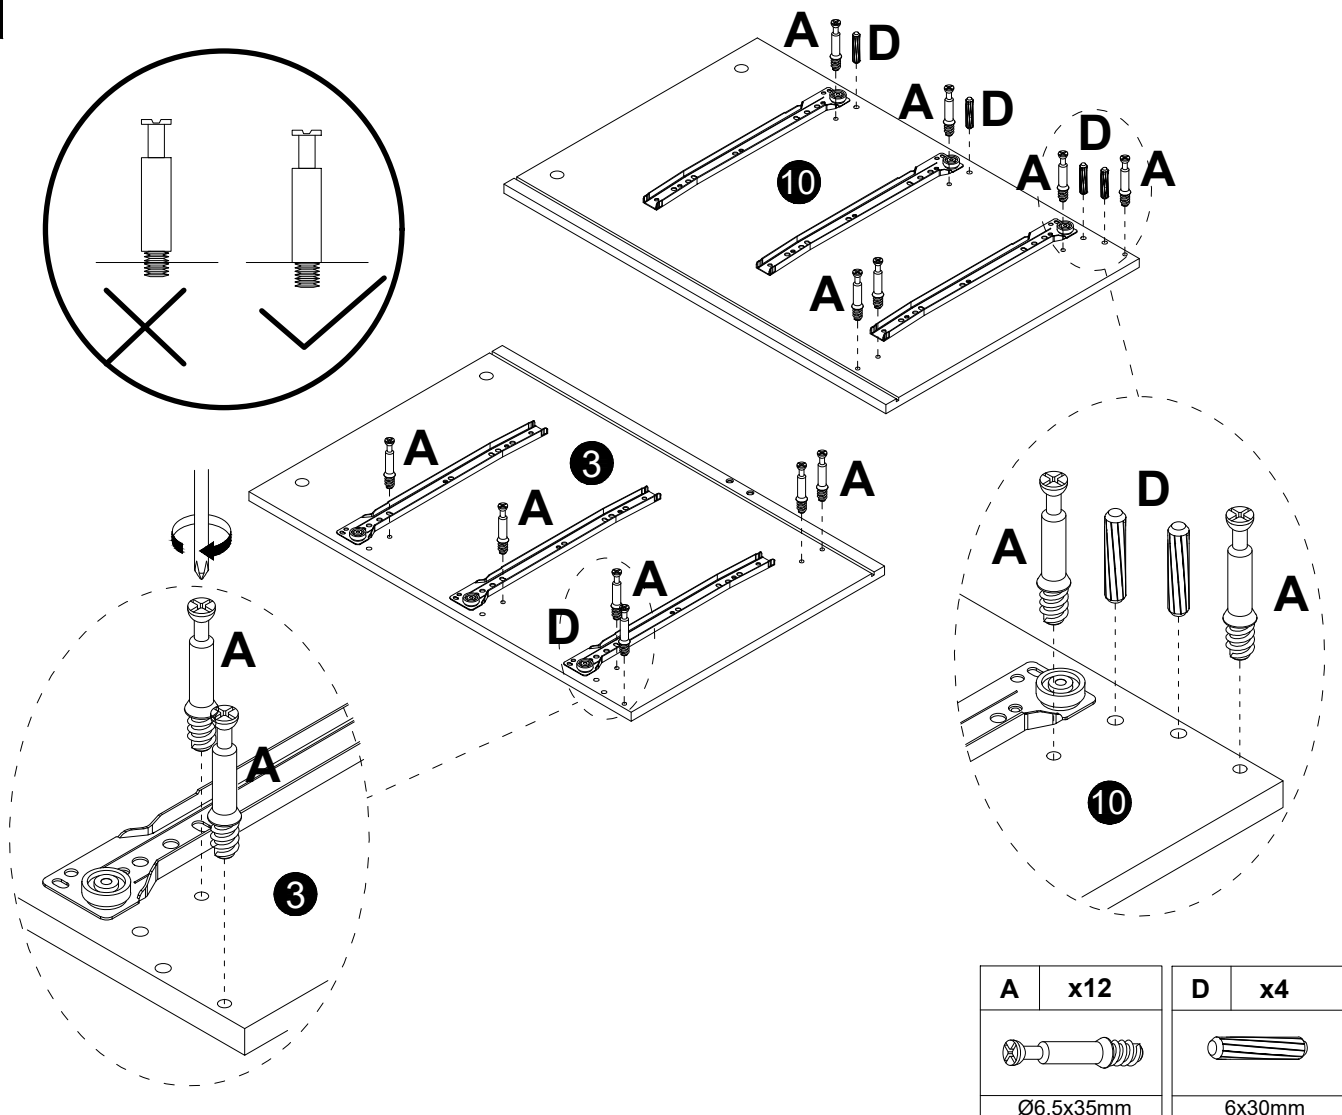



A	x12	D	x4
			
Ø6.5x35mm		6x30mm	

3

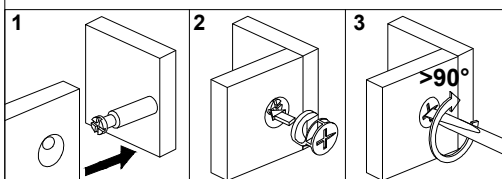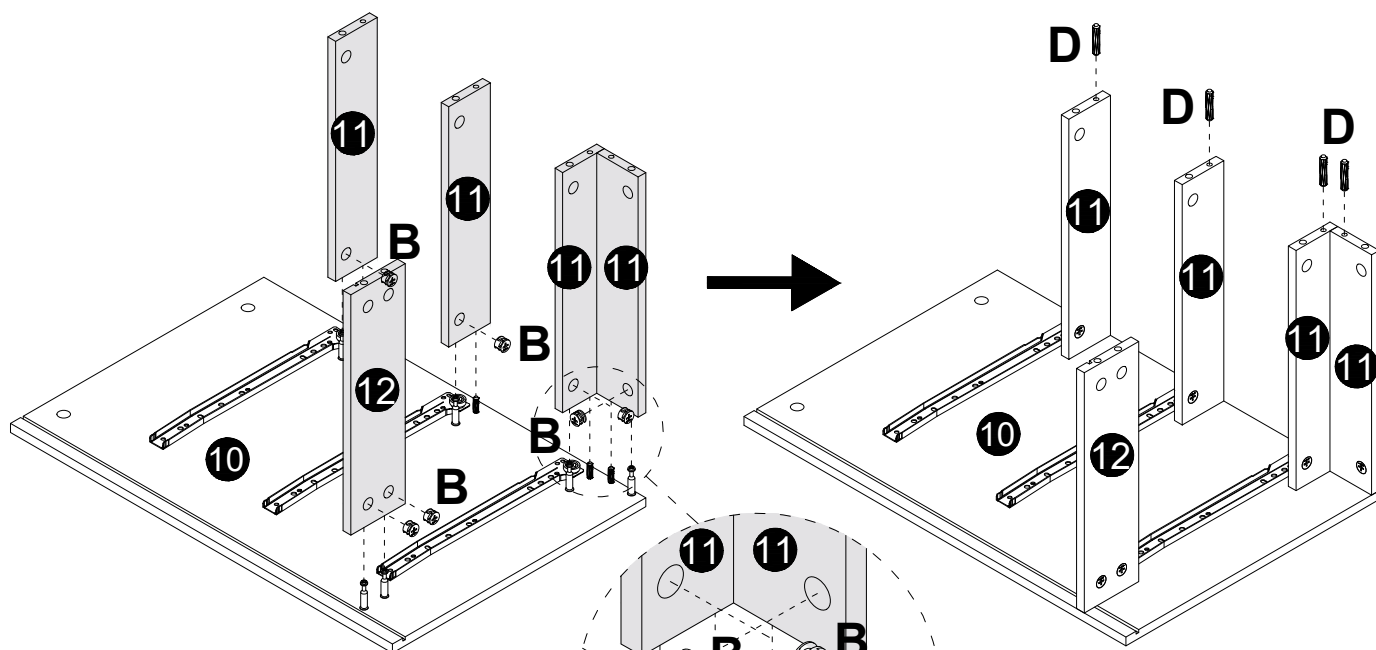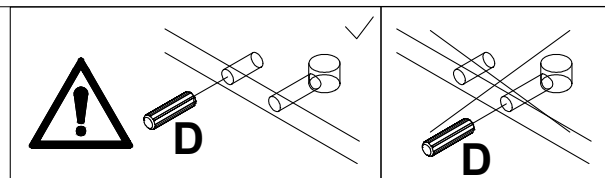



B	x6	D	x4
Ø15x9.5mm		6x30mm	

4

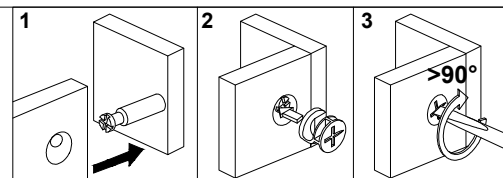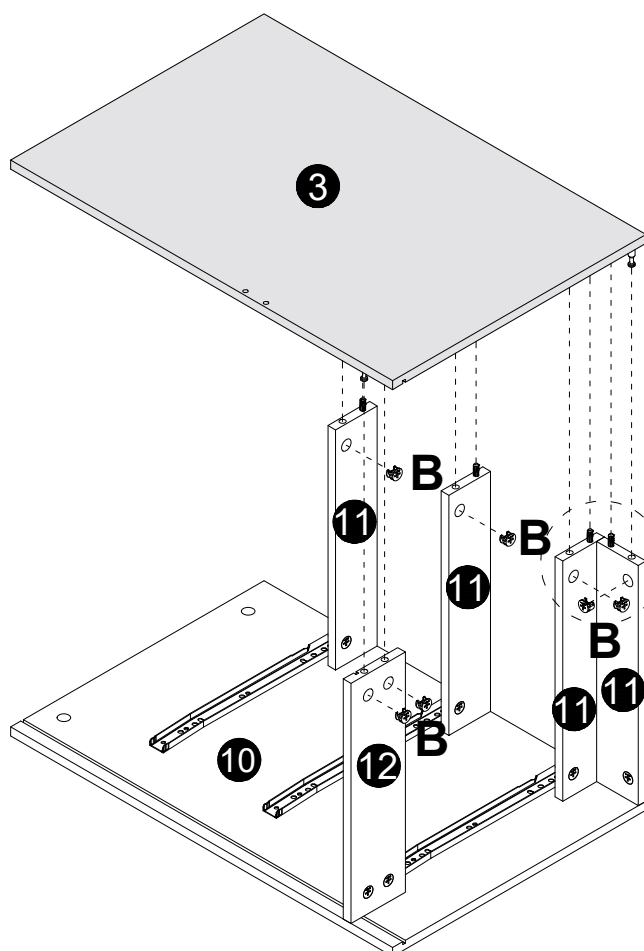




B	x6
Ø15x9.5mm	

5


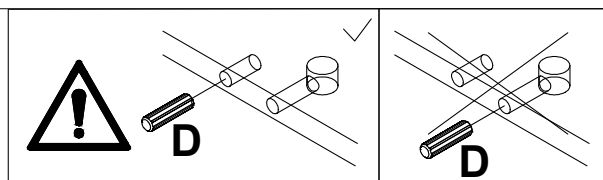
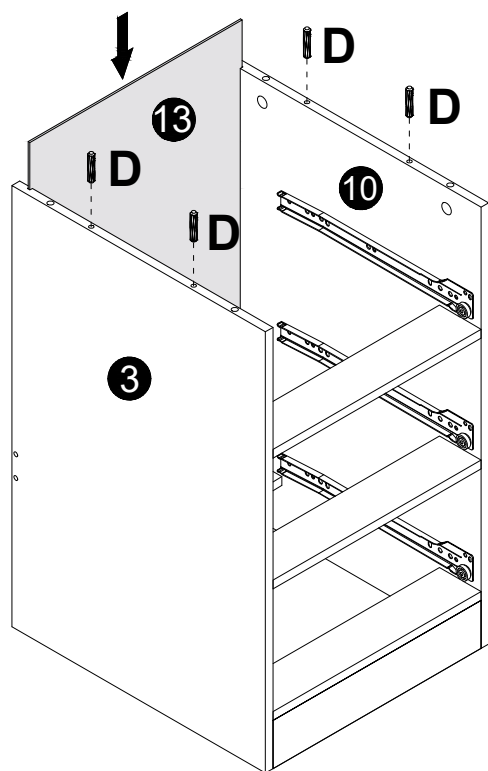



D	x4
	
6x30mm	

6

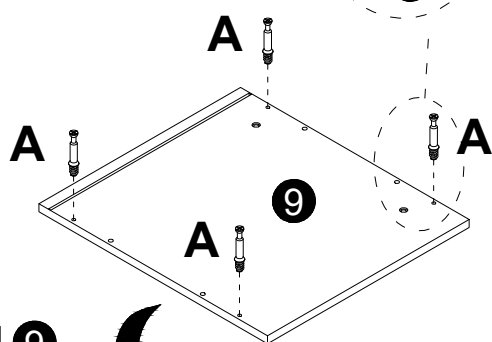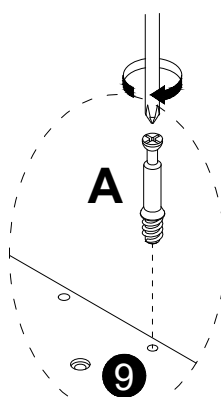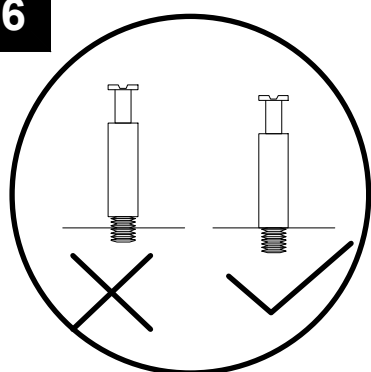


Panel 9
flipped to
the other side

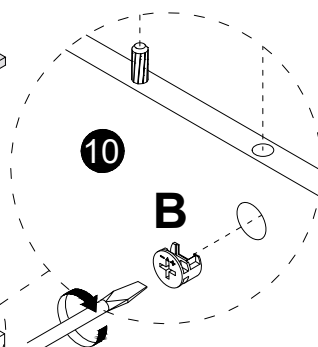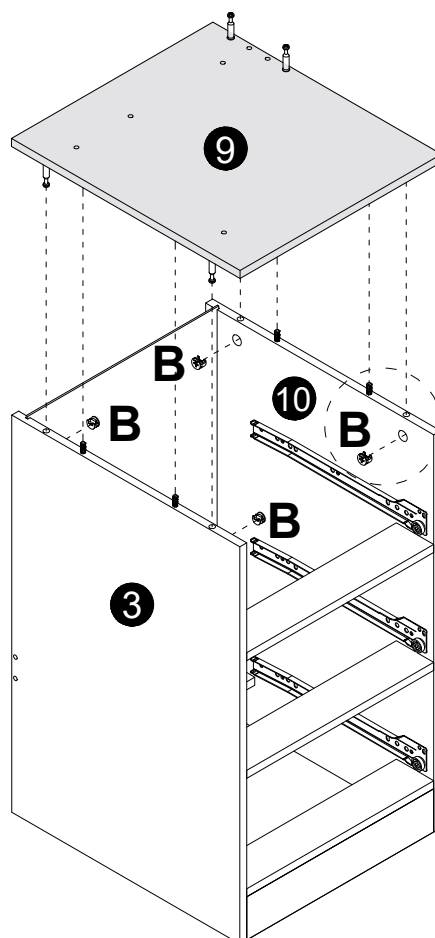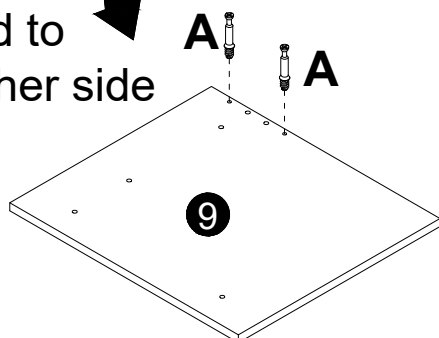


A	x6
	
Ø6.5x35mm	
B	x4
	
Ø15x9.5mm	


7

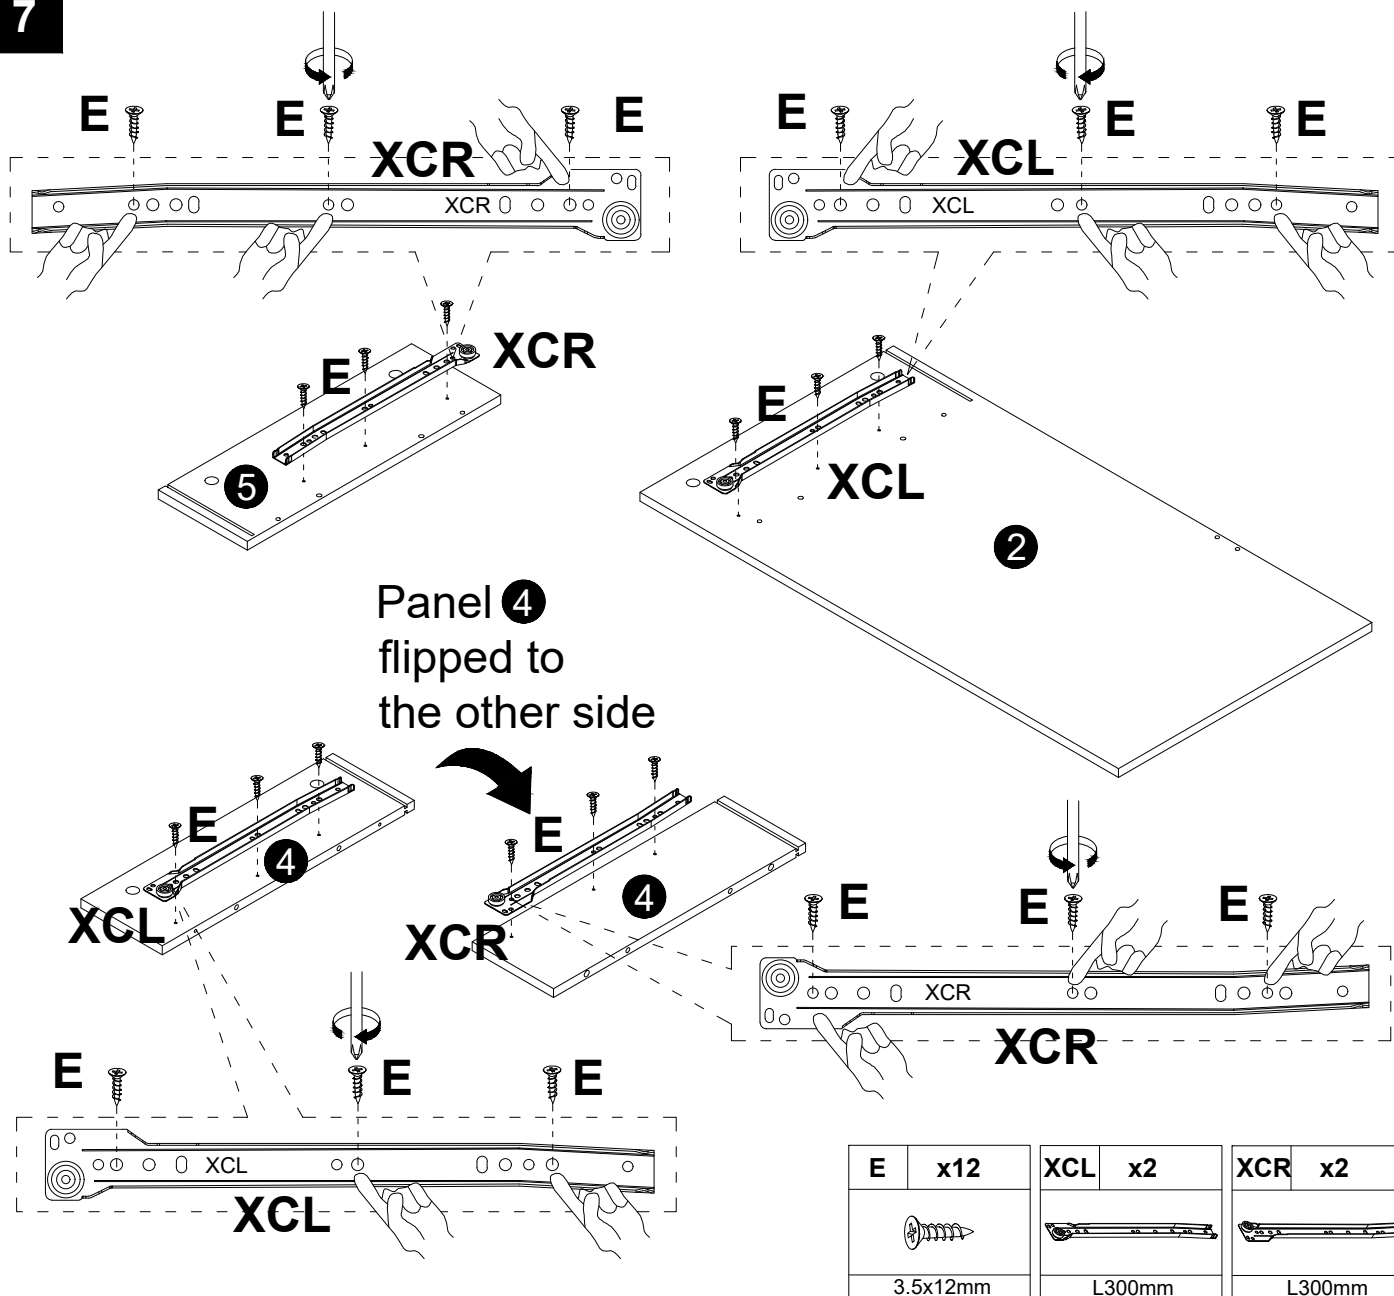



8

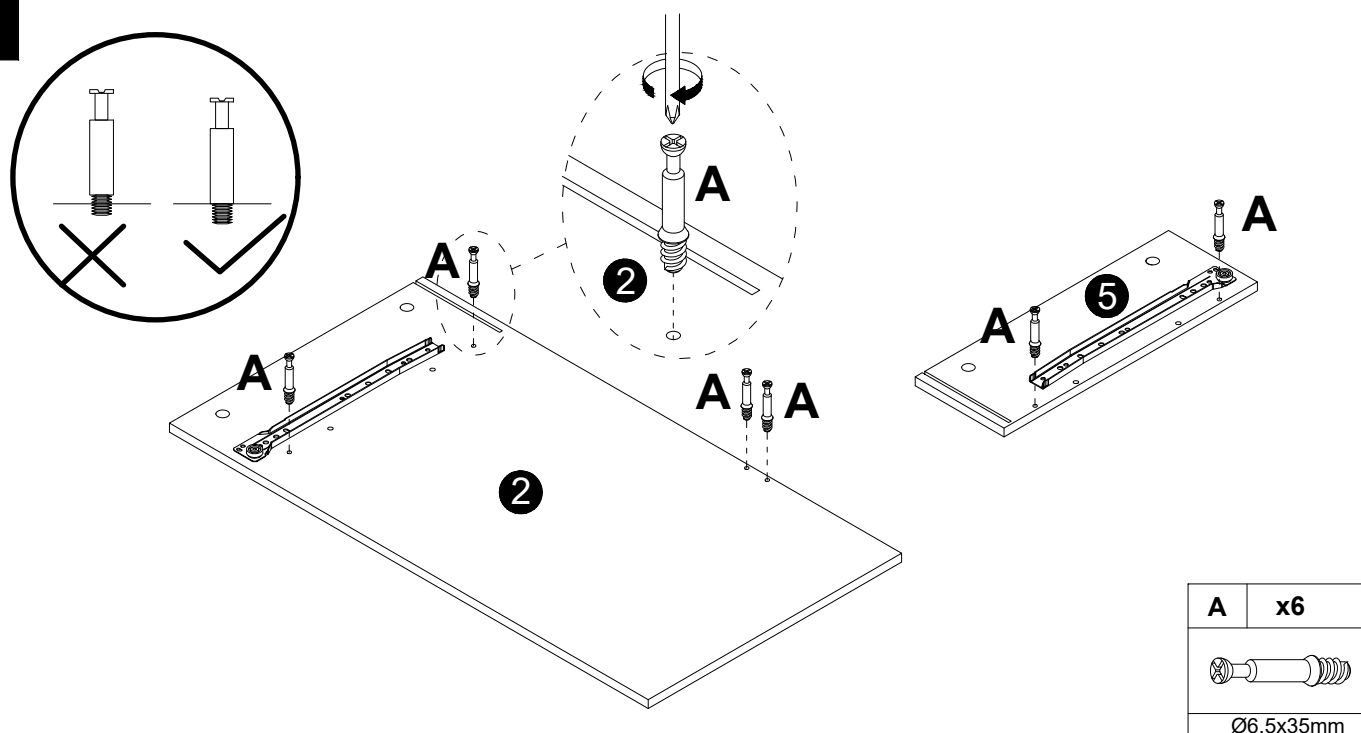


9

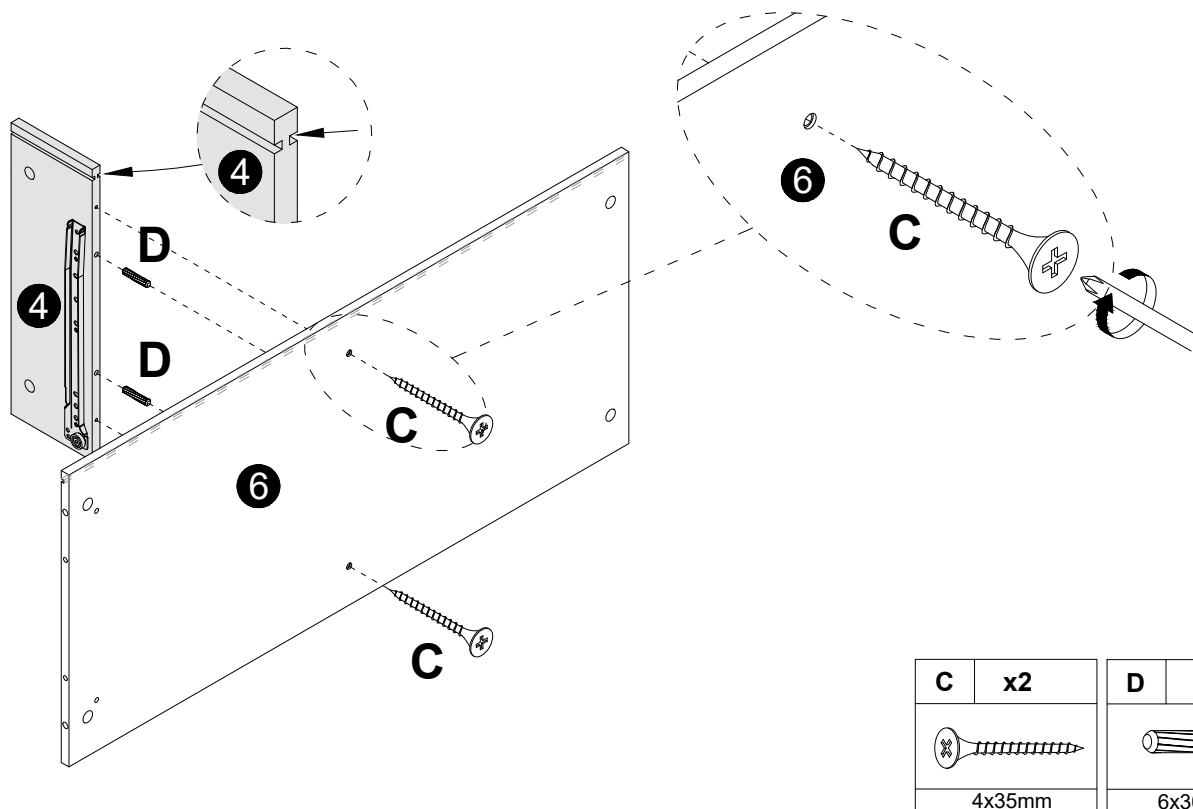


10

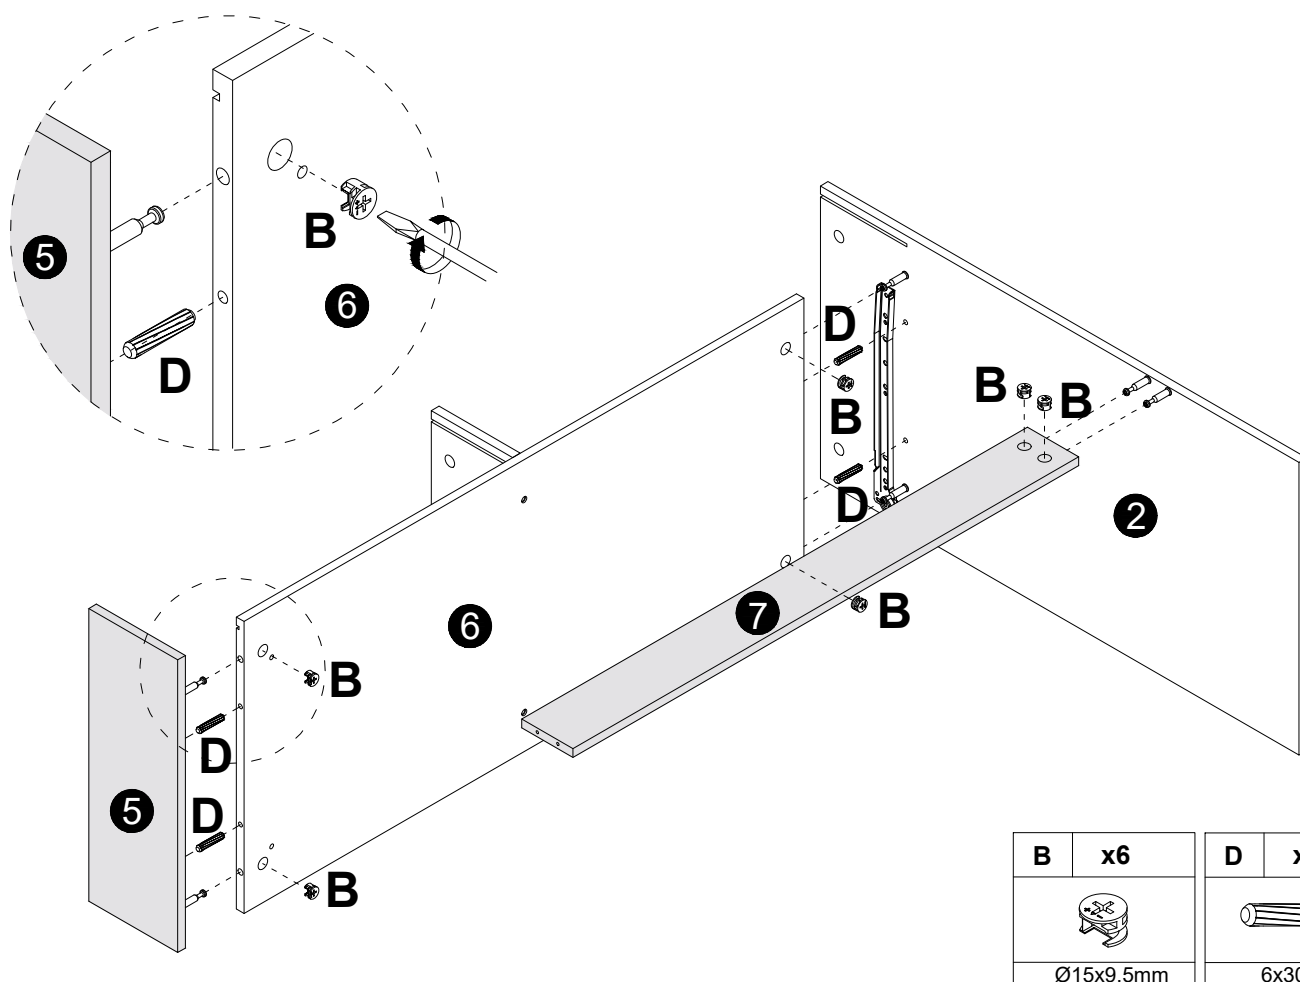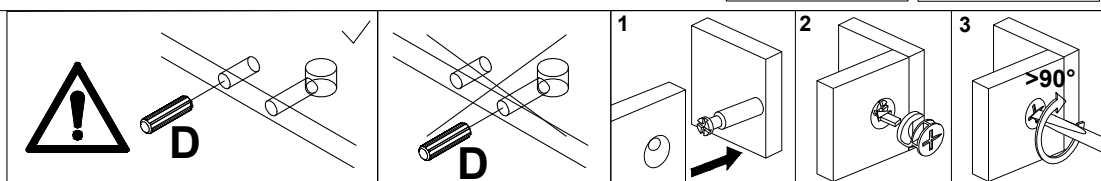



11

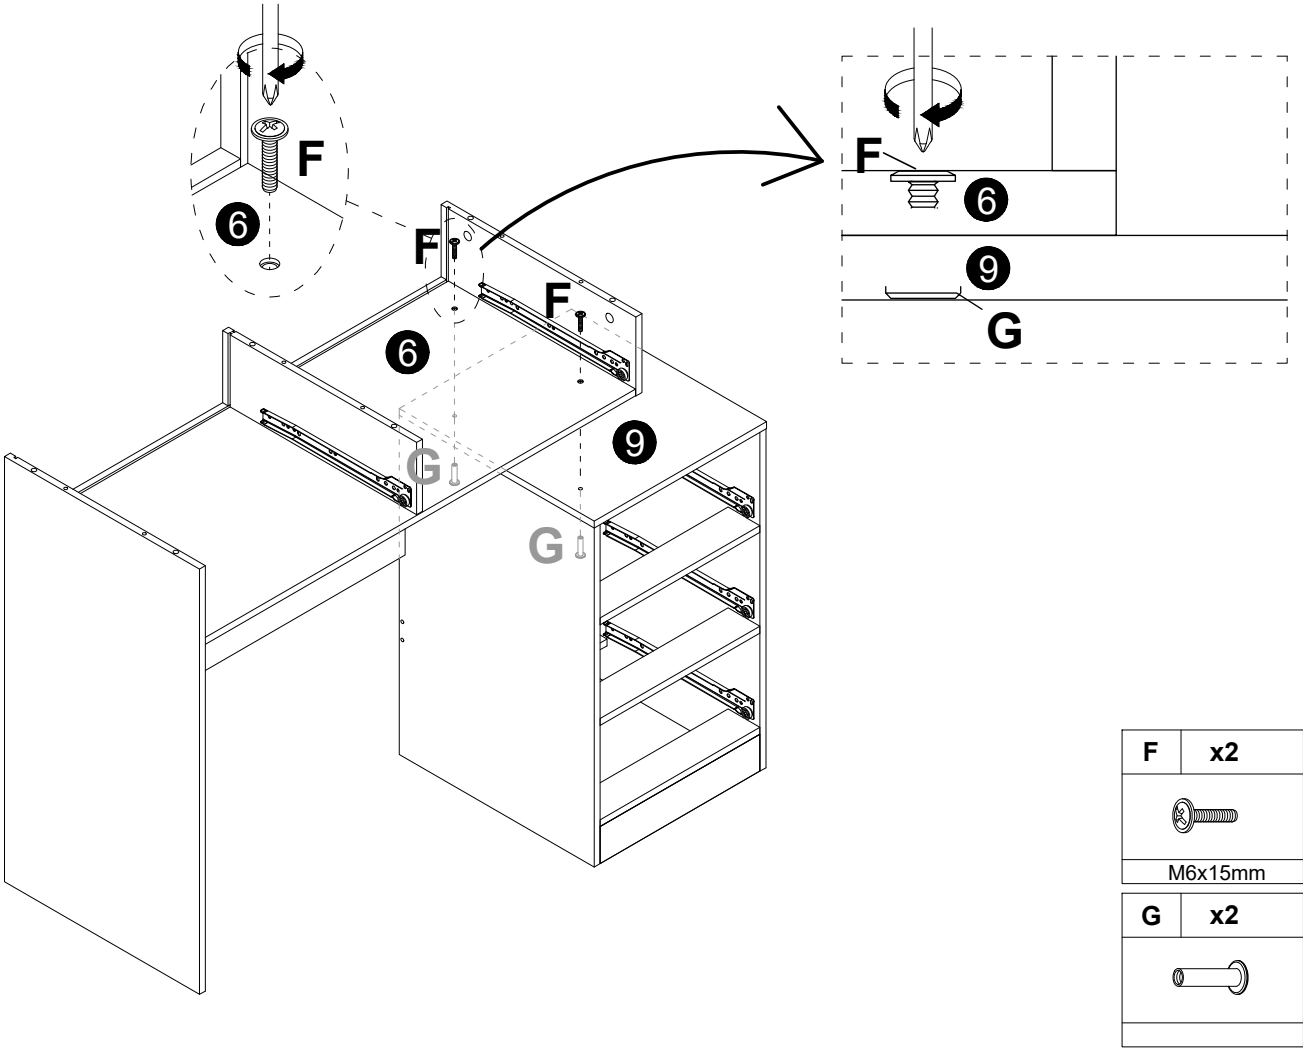

12

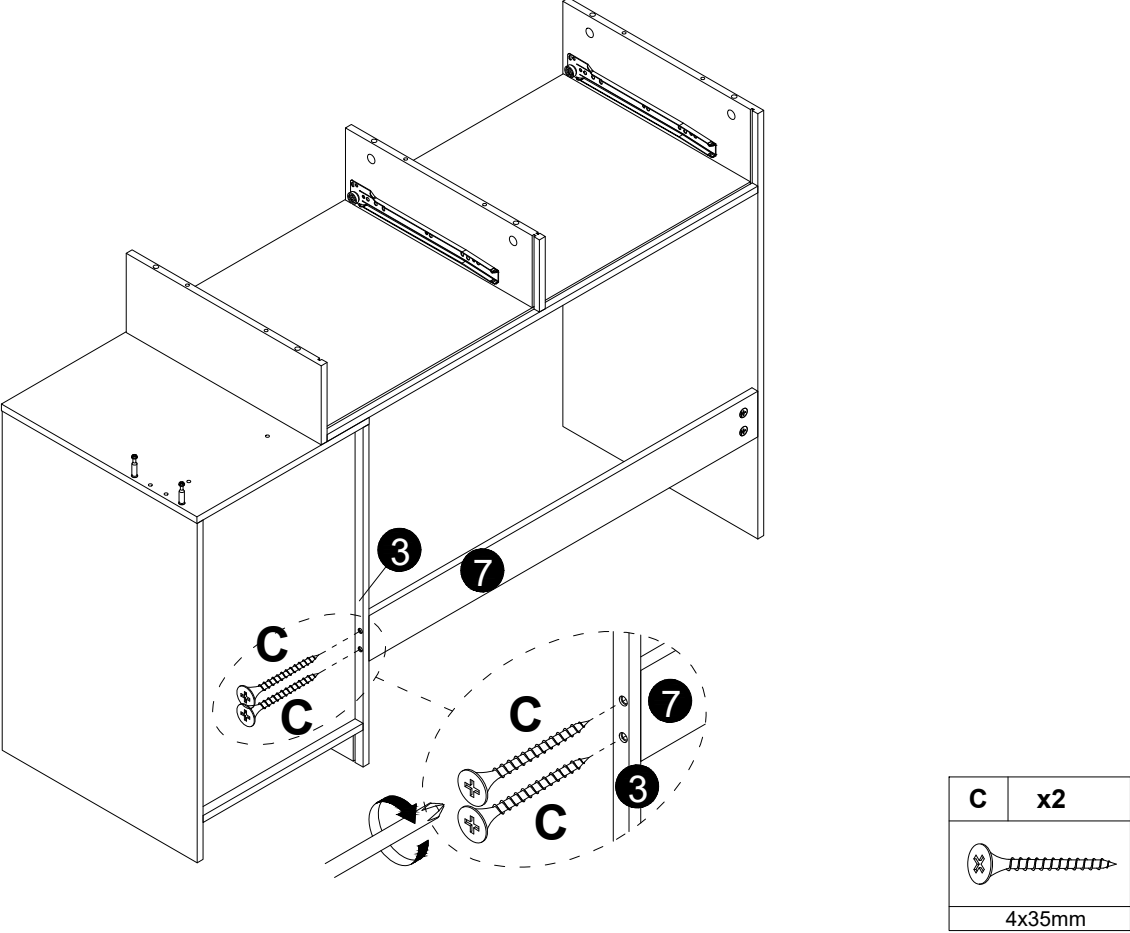



13

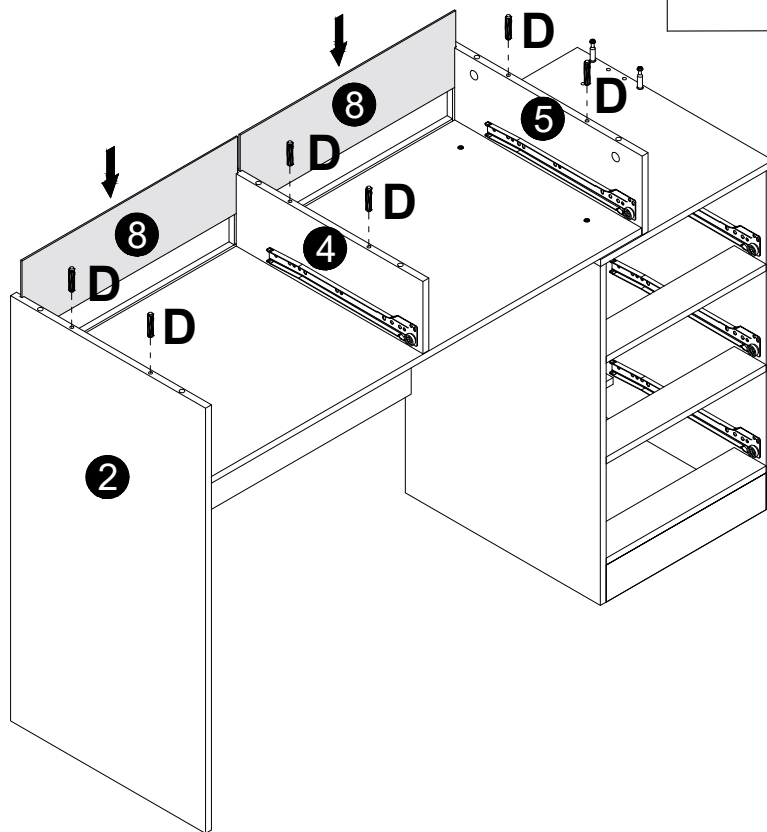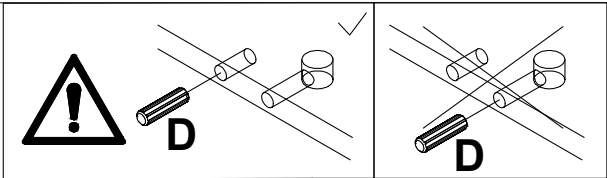




D	x6
	
6x30mm	

14


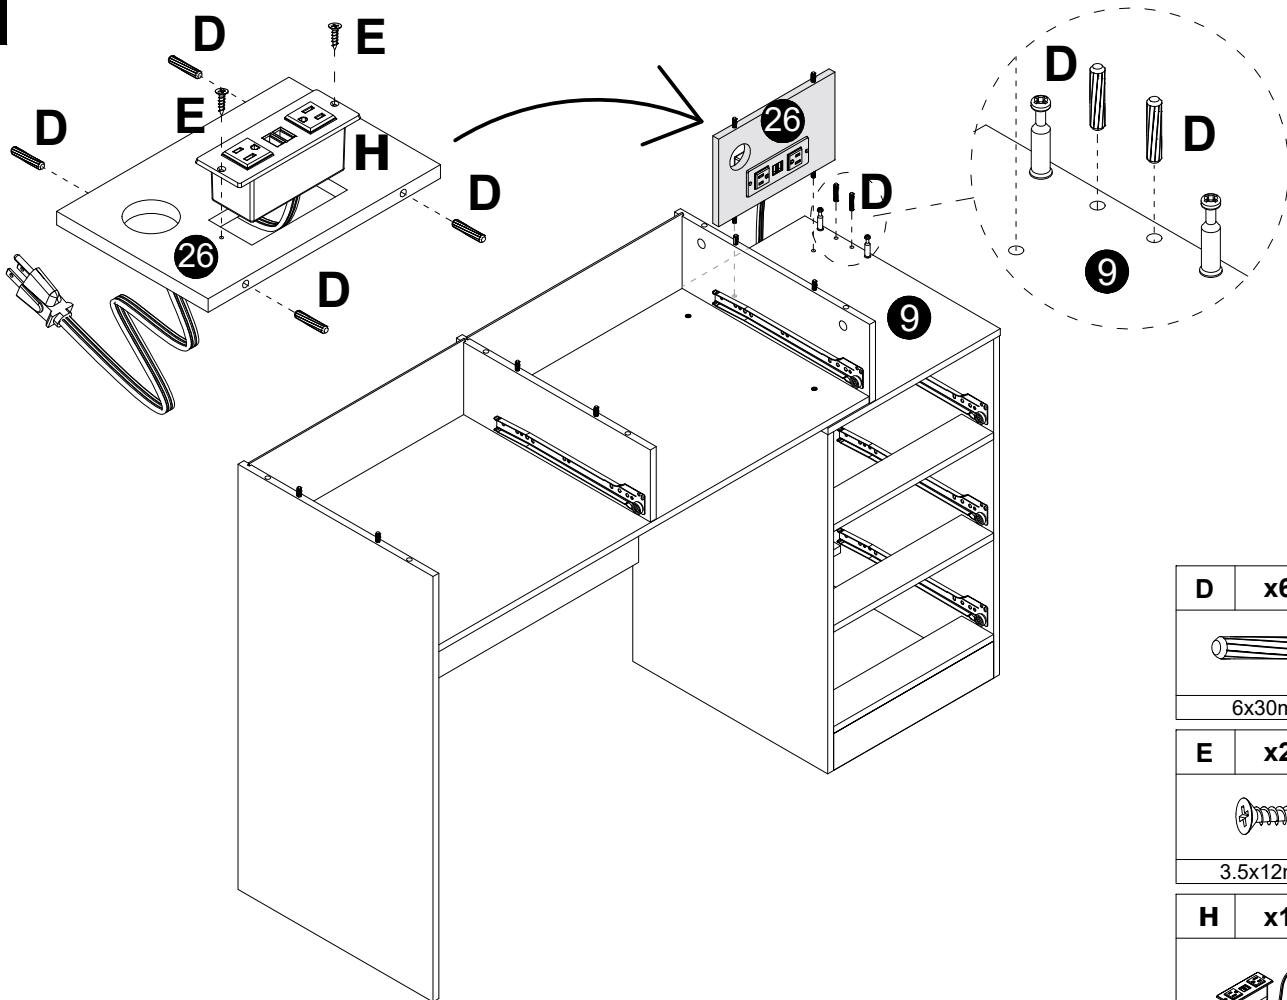



D	x6
	
6x30mm	
E	x2
	
3.5x12mm	
H	x1
	

15

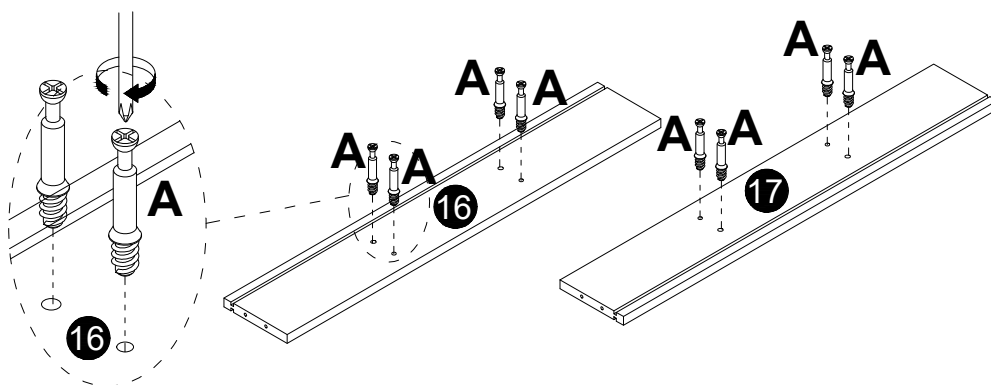
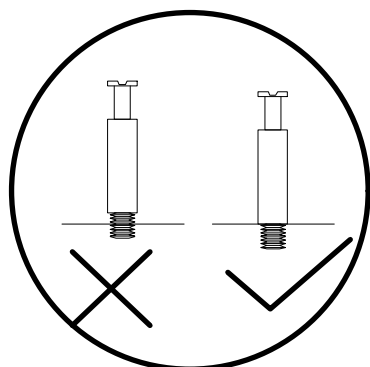
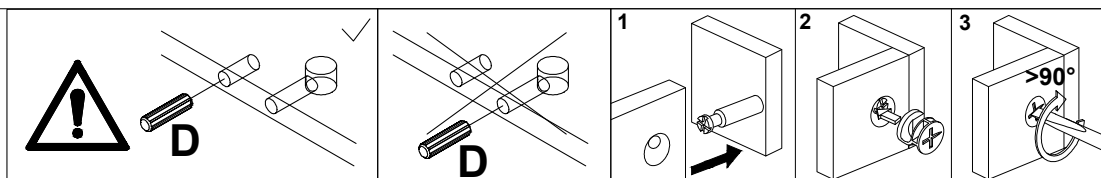



Smooth

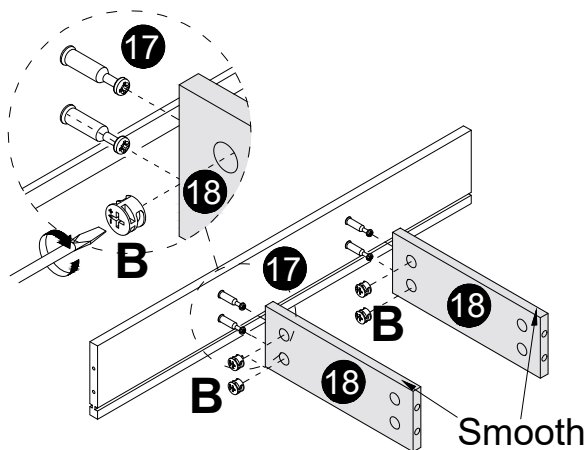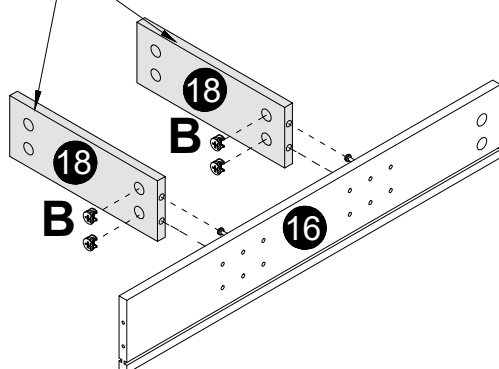





A	x8
	
Ø6.5x35mm	
B	x8
	
Ø15x9.5mm	


16

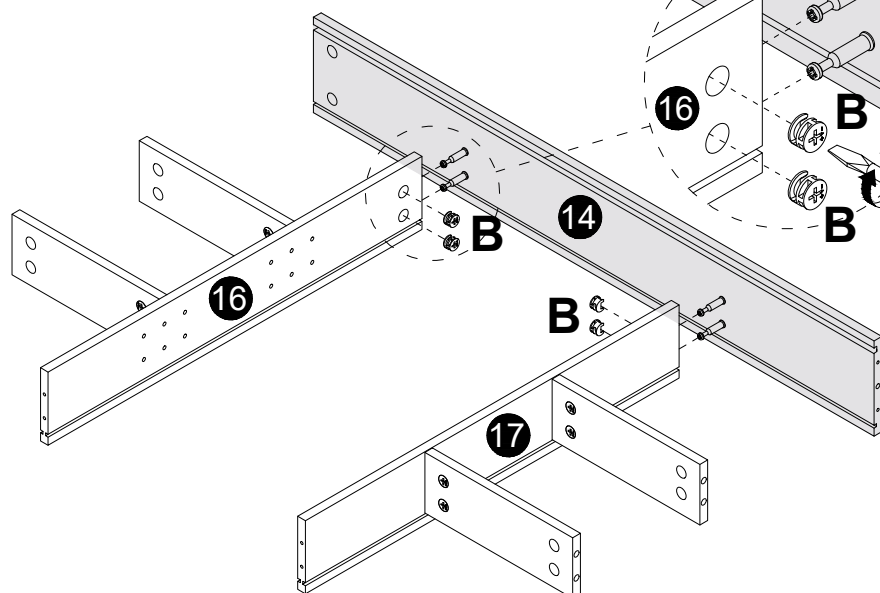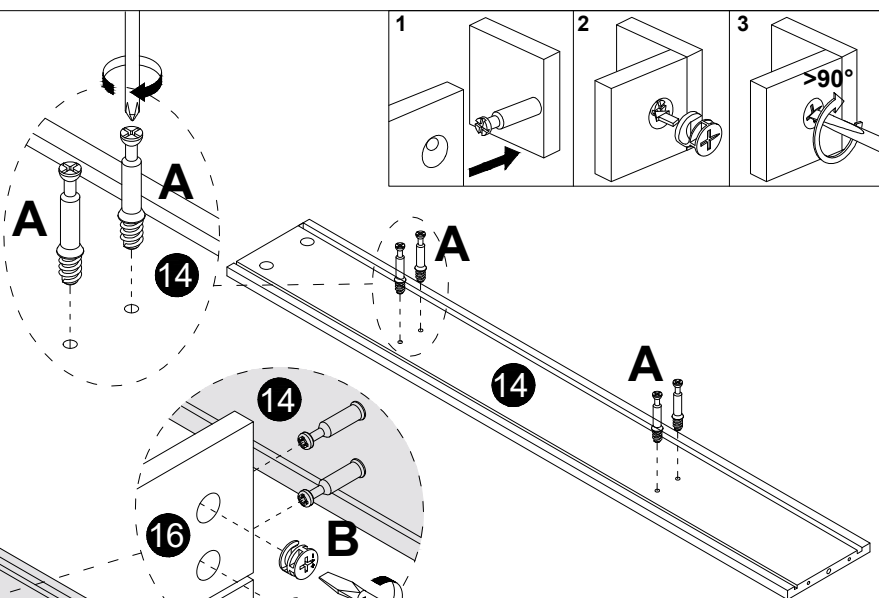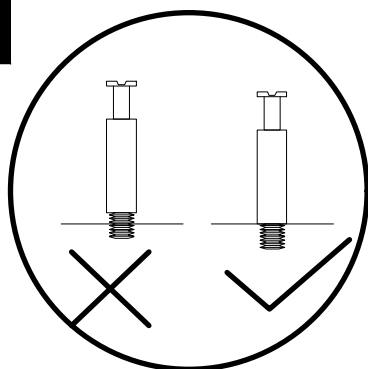



A	x4
	
Ø6.5x35mm	
B	x4
	
Ø15x9.5mm	

17

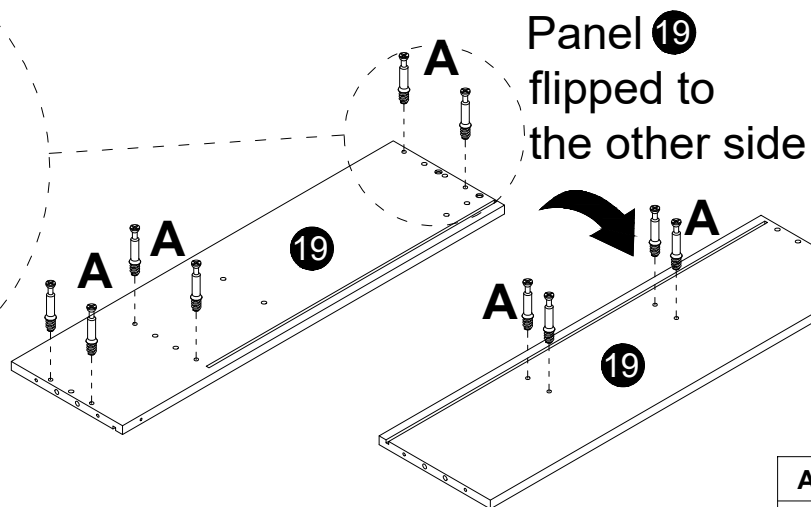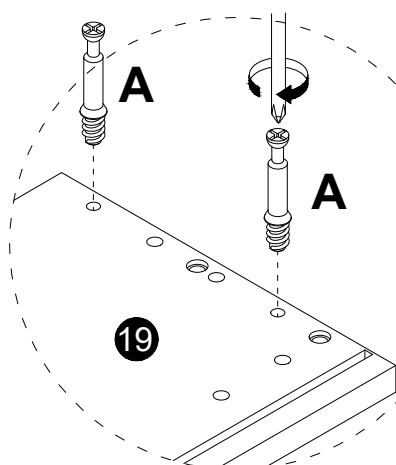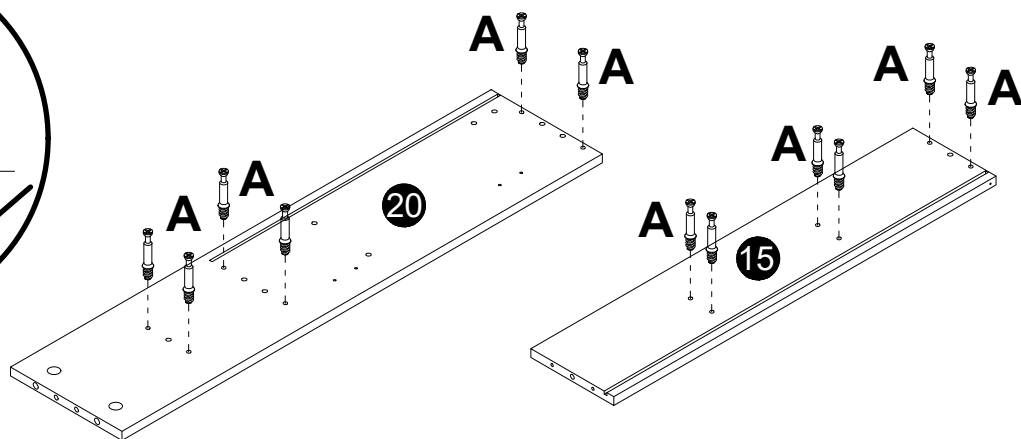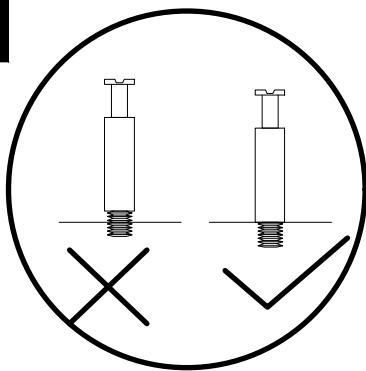



A	x22
	
Ø6.5x35mm	

18

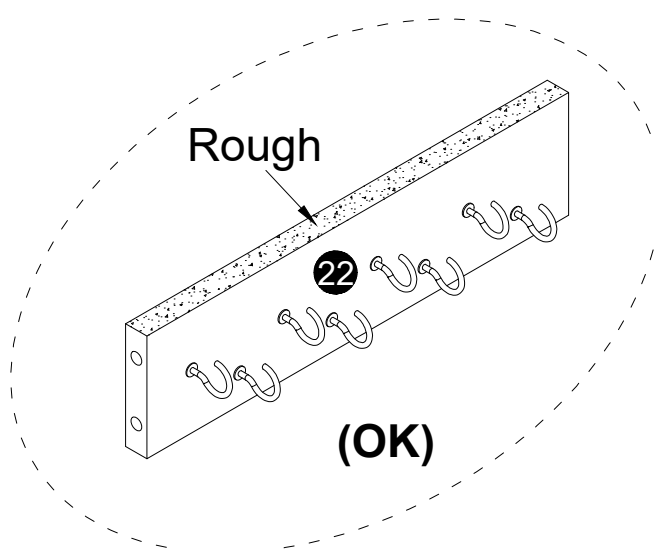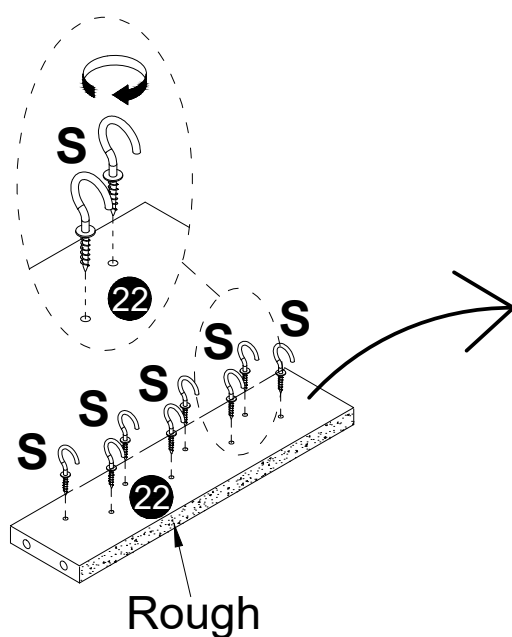




S	x8
	

19

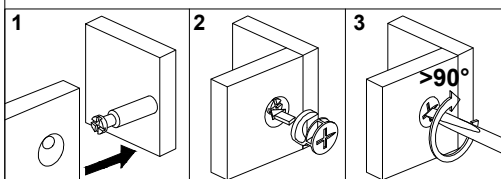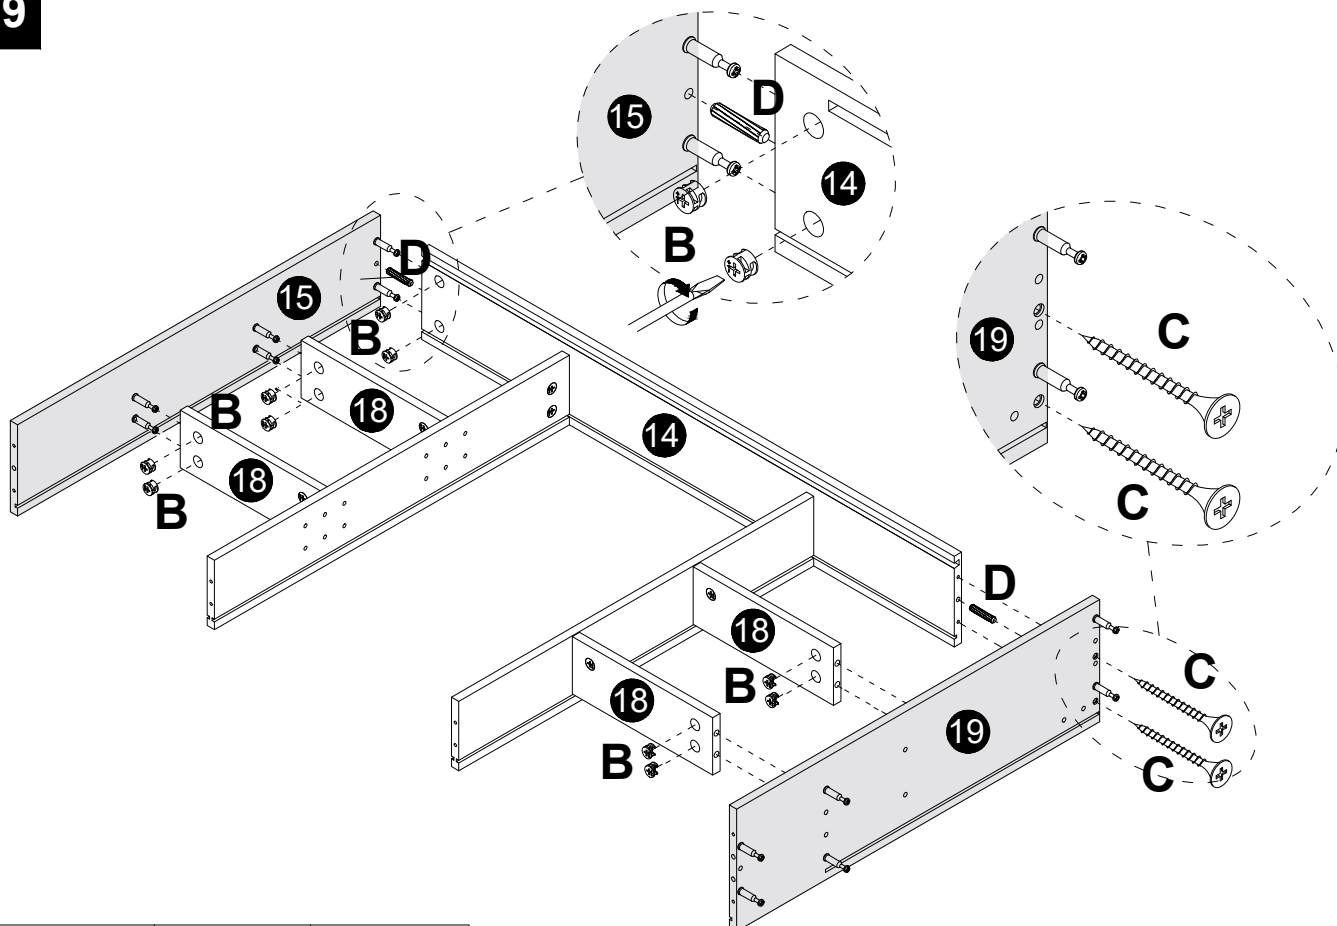

B	x10	C	x2	D	x2
Ø15x9.5mm		4x35mm		6x30mm	



20

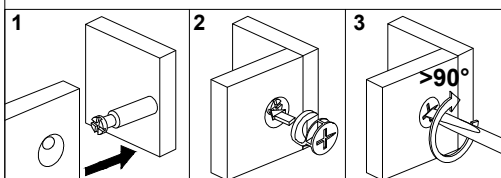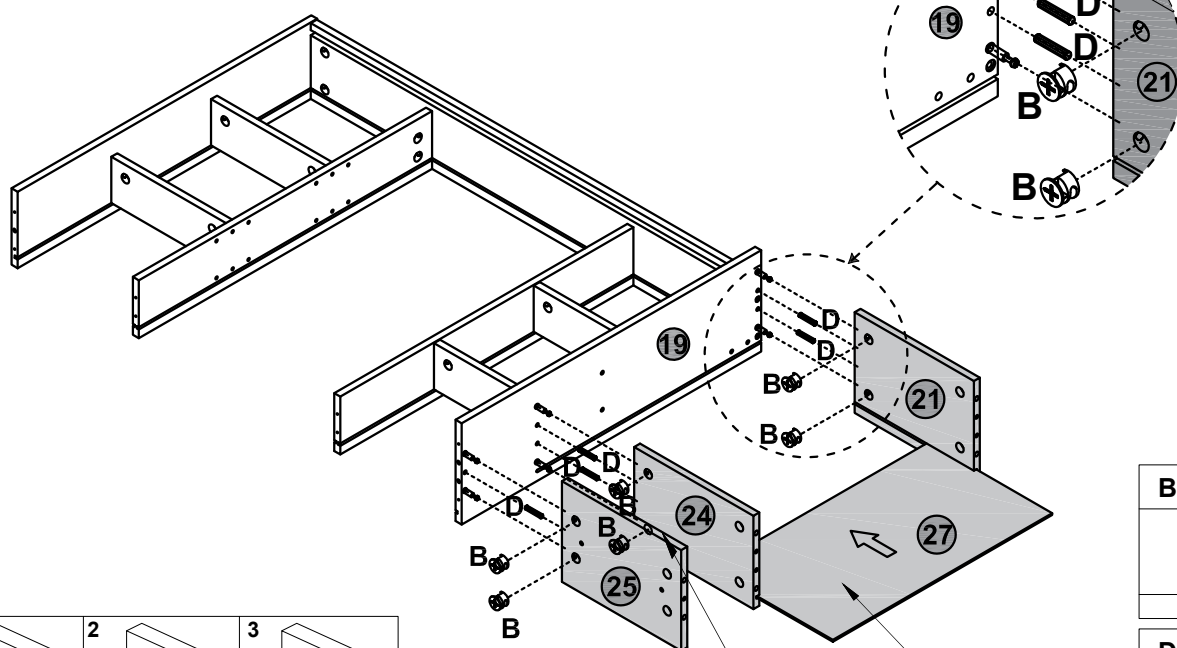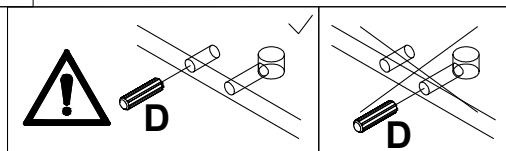

B	x6	D	x5
Ø15x9.5mm		6x30mm	



Without holes Black

21

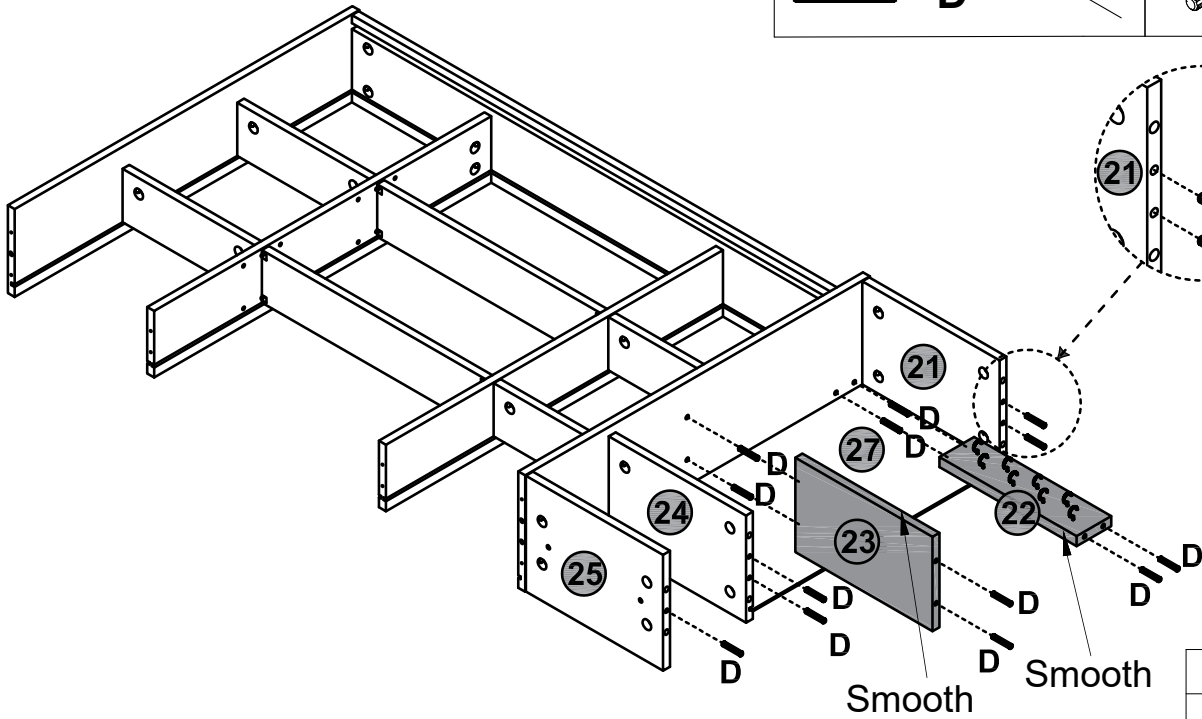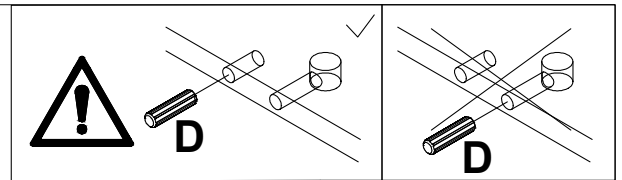


D	x13
	
6x30mm	

22

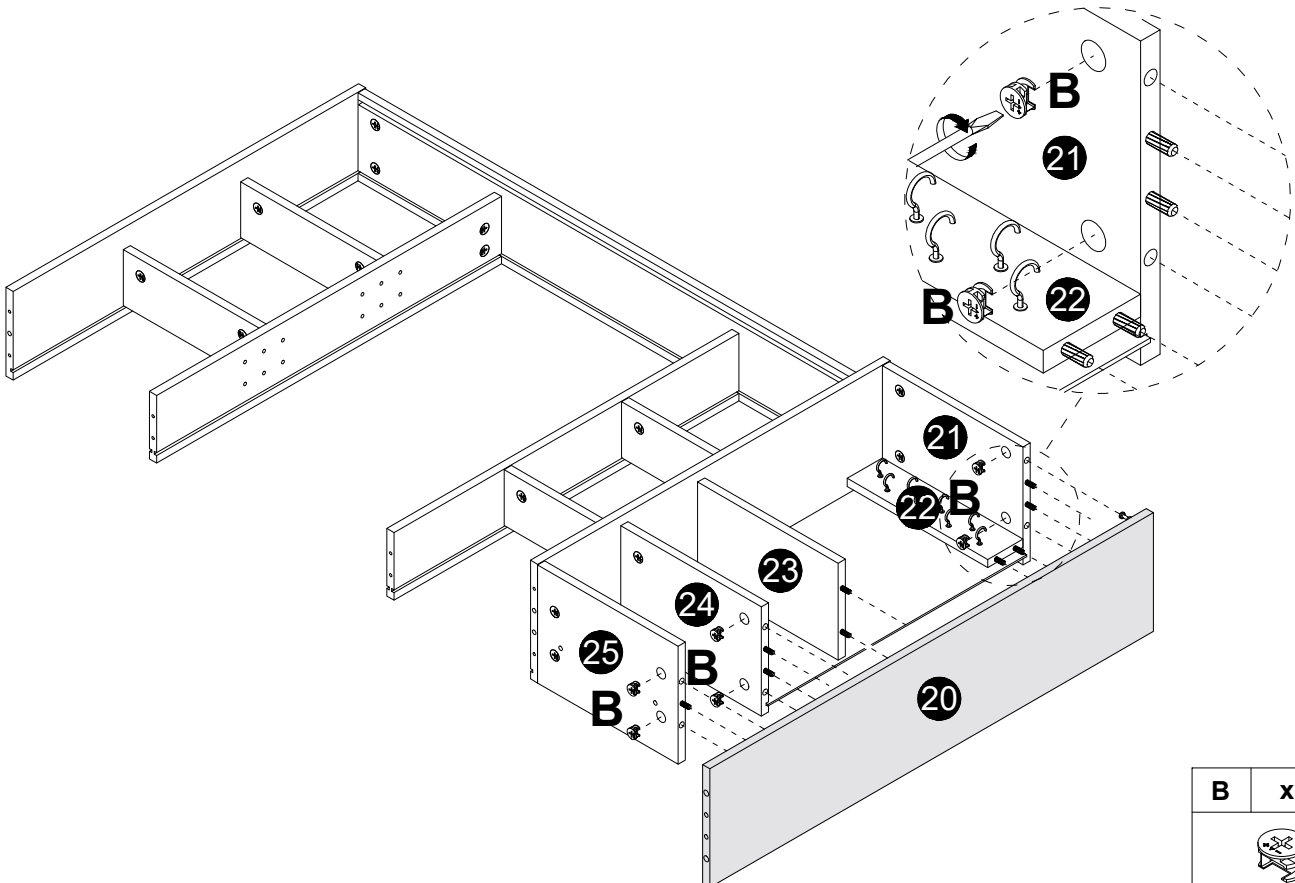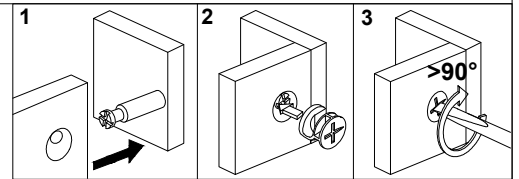


B	x6
	
Ø15x9.5mm	

23

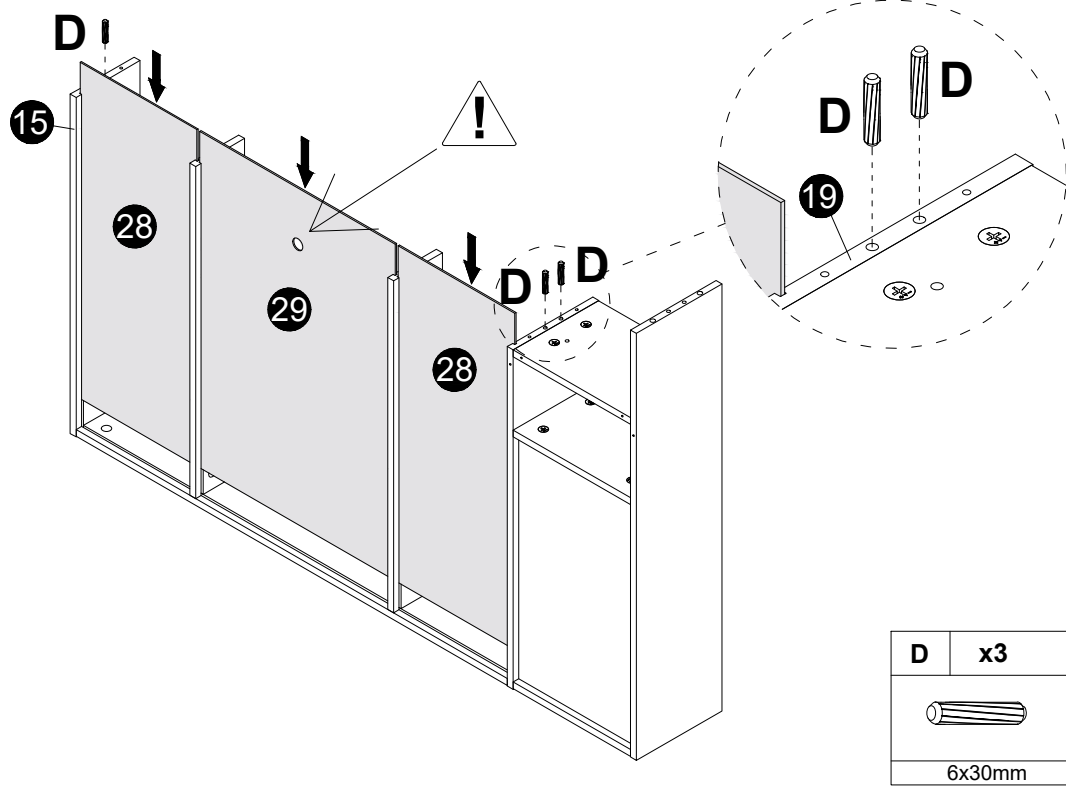


24

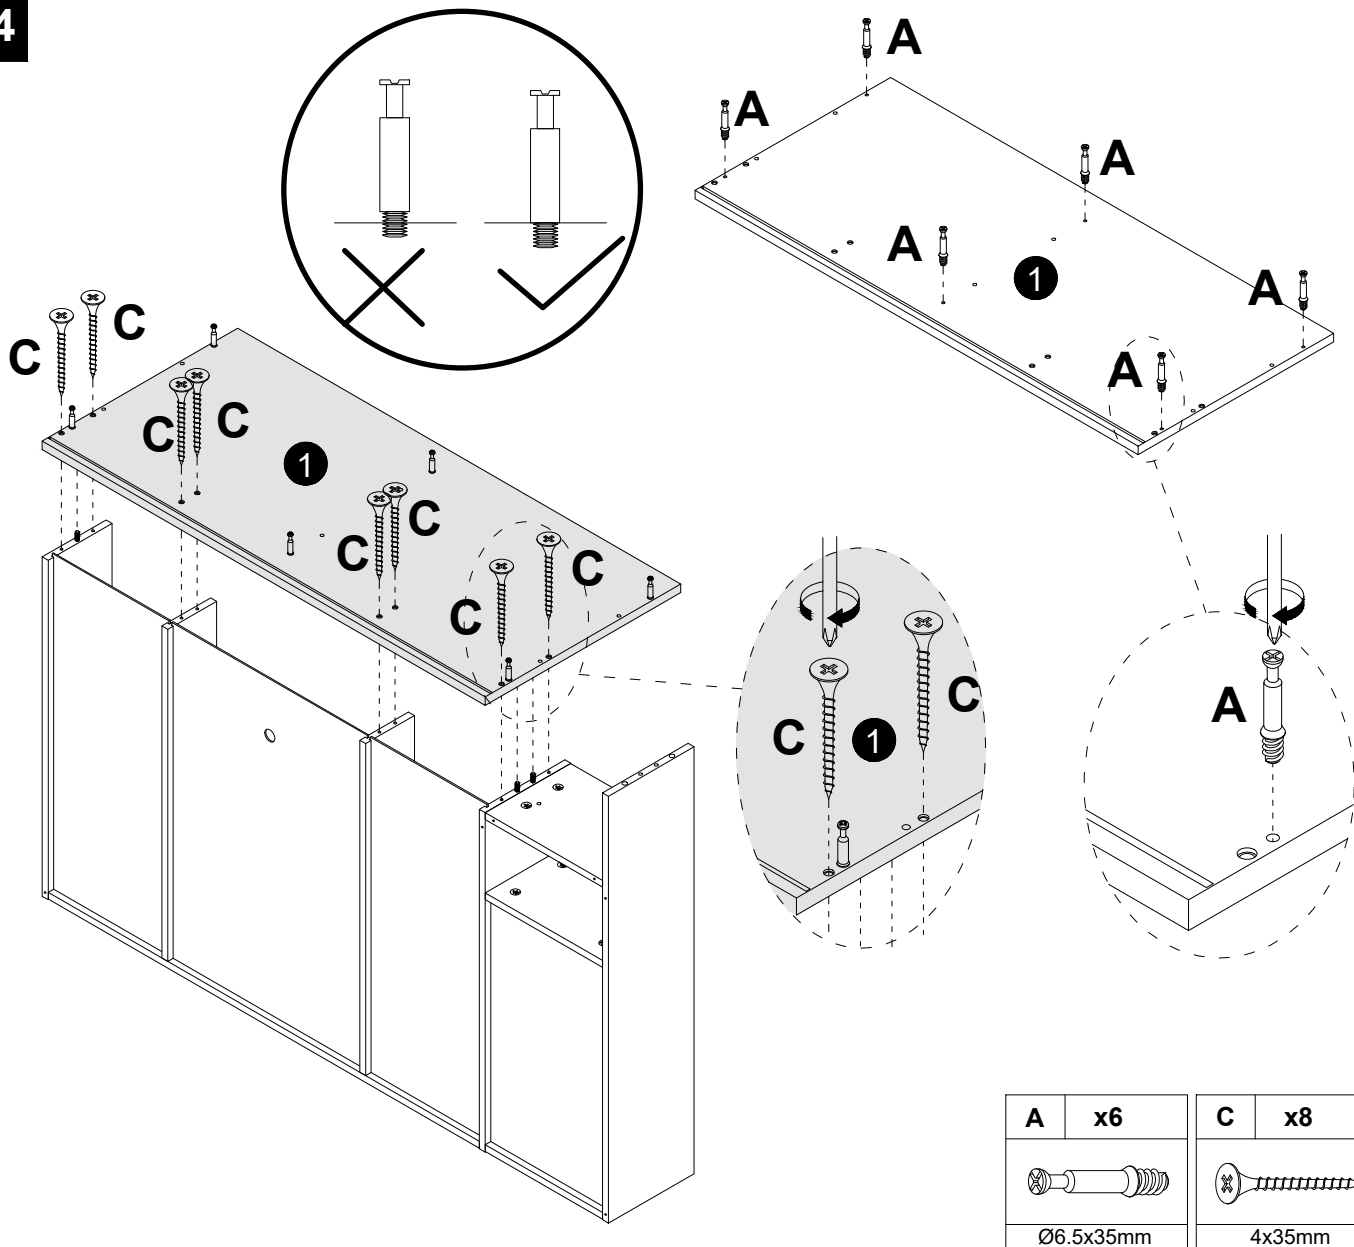







For this step, you need one helper.

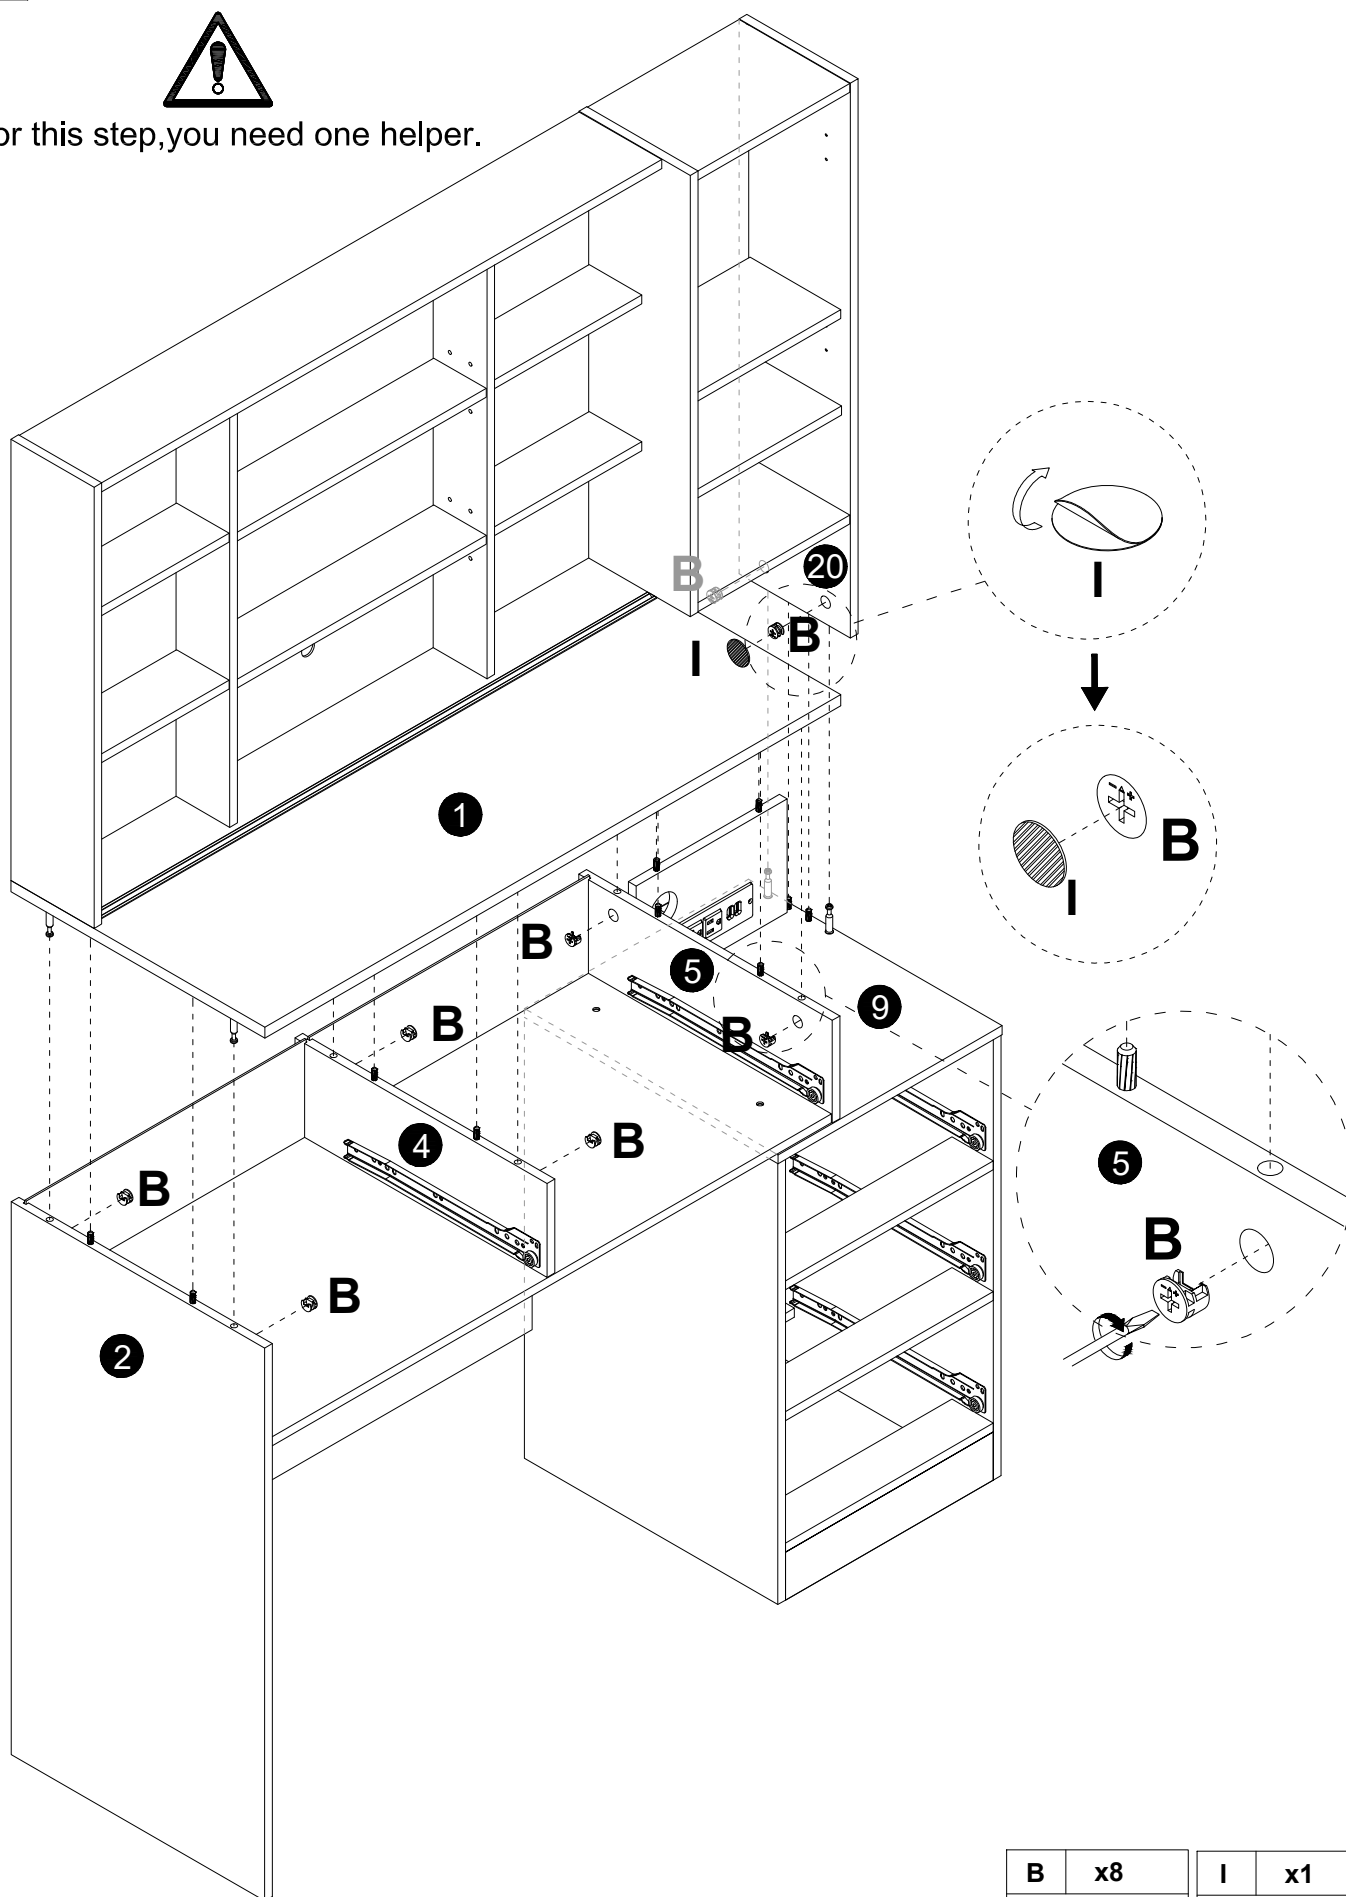




B	x8	I	x1
			
Ø15x9.5mm		Ø20mm	


26

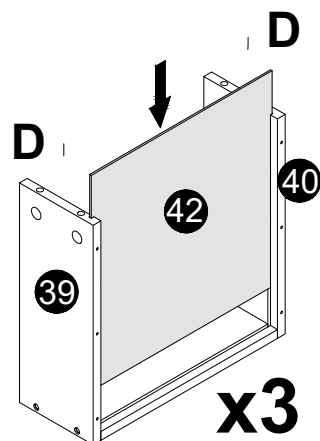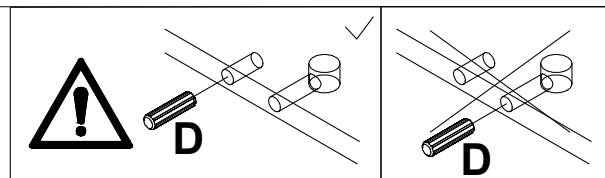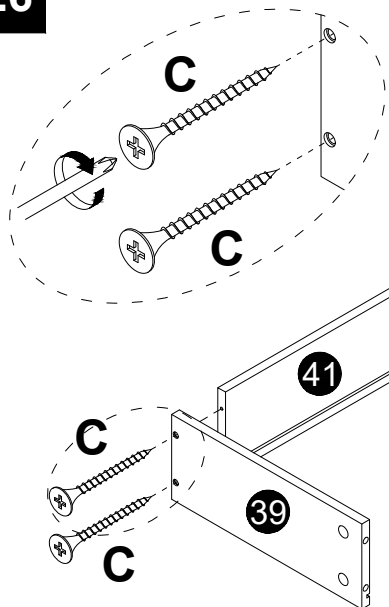



C	x12
	
4x35mm	


27

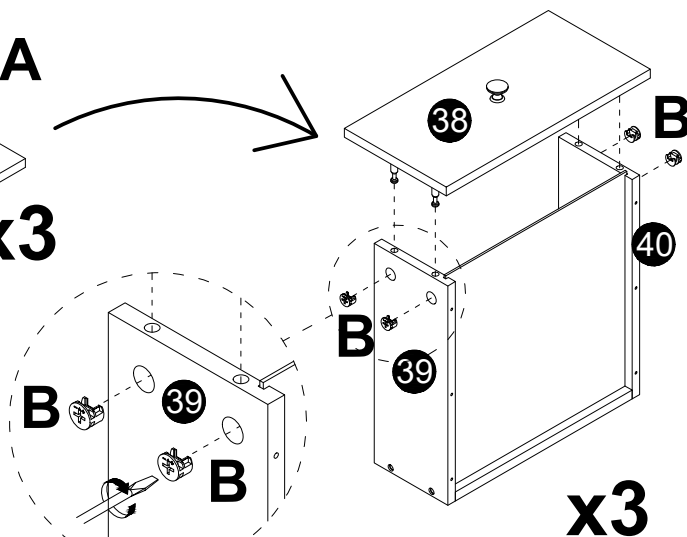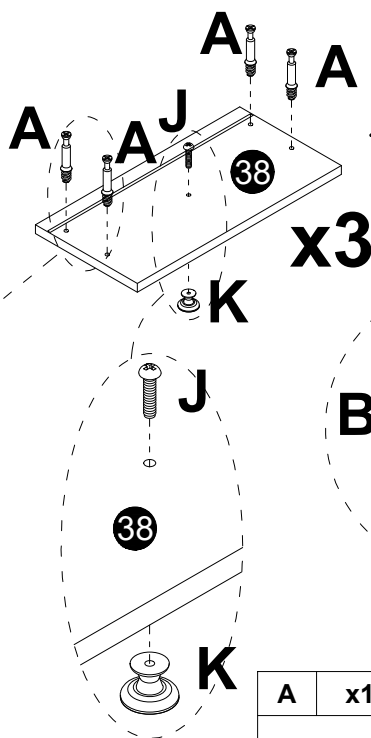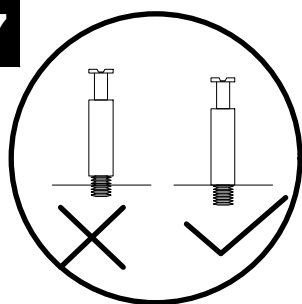


A	x12	B	x12	J	x3	K	x3
							
Ø6.5x35mm		Ø15x9.5mm		4x16mm			

28

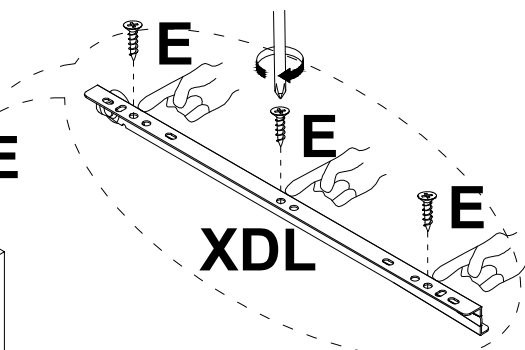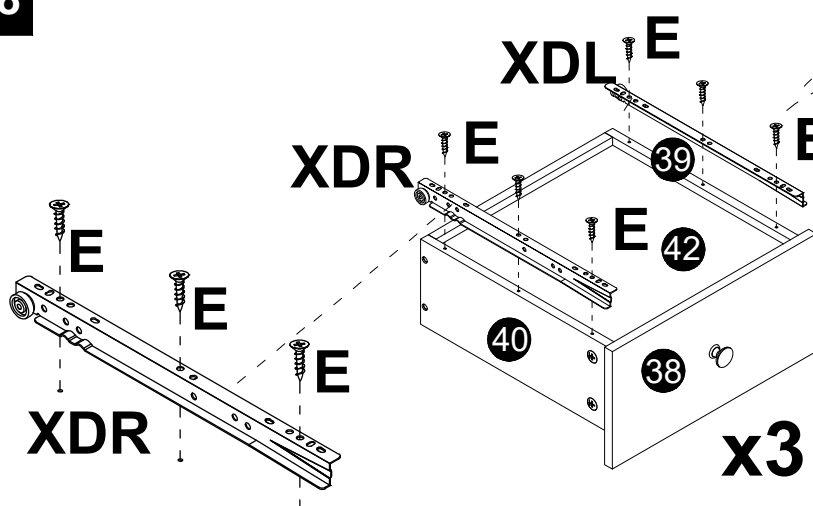


E	x18	XDL	x3	XDR	x3
					
3.5x12mm		L300mm		L300mm	


29

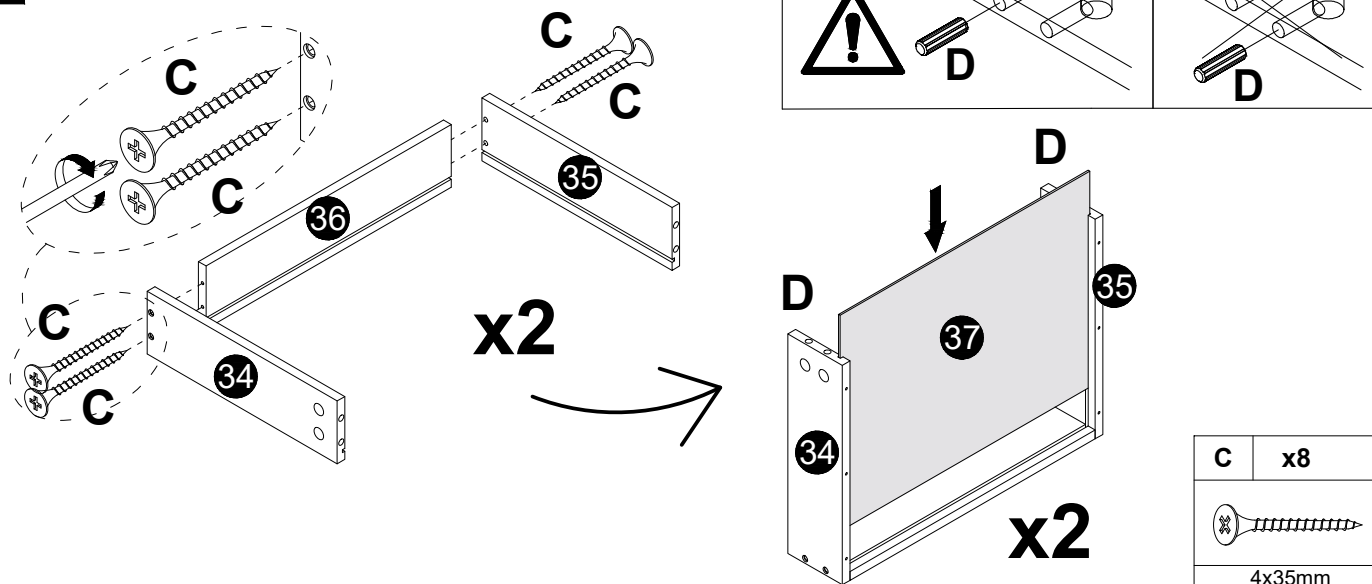


30

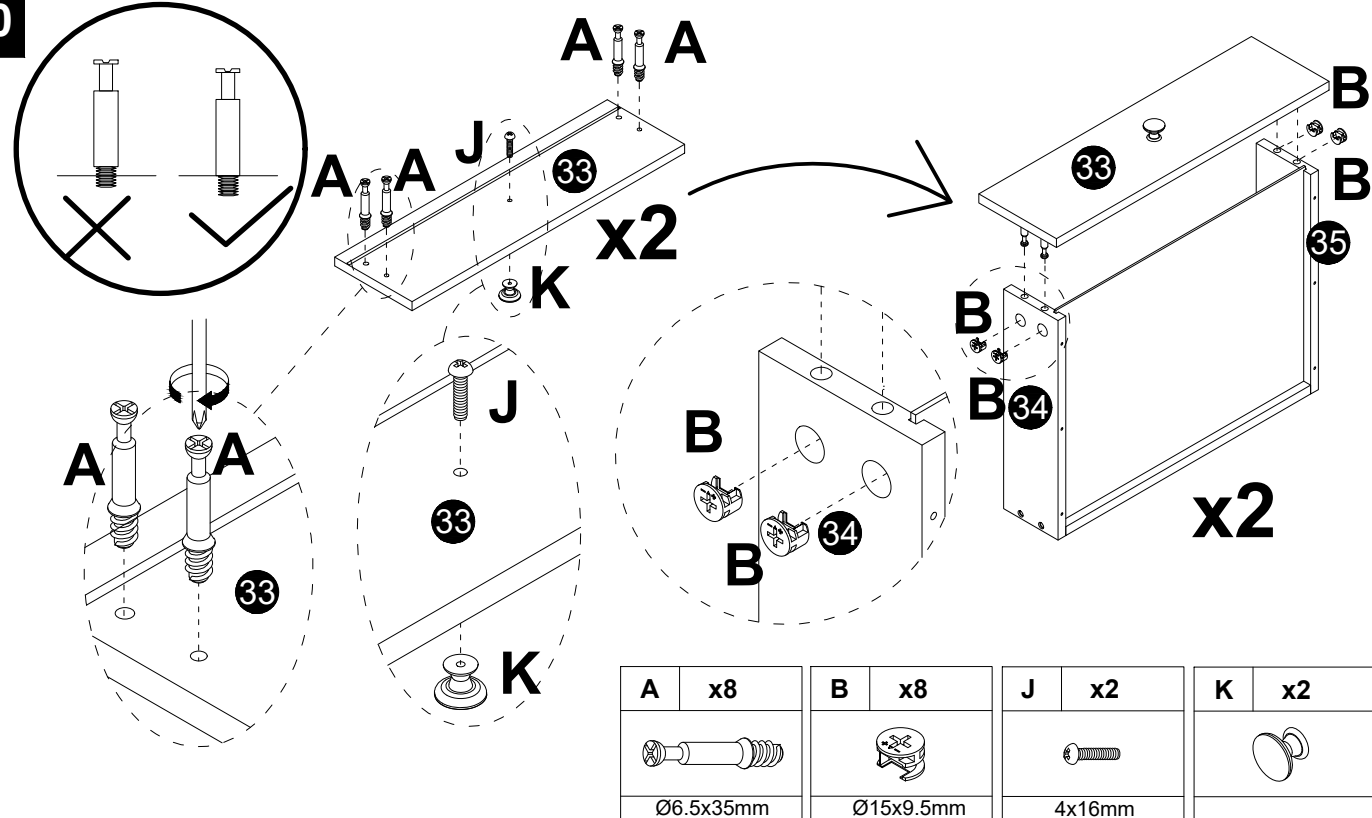



31

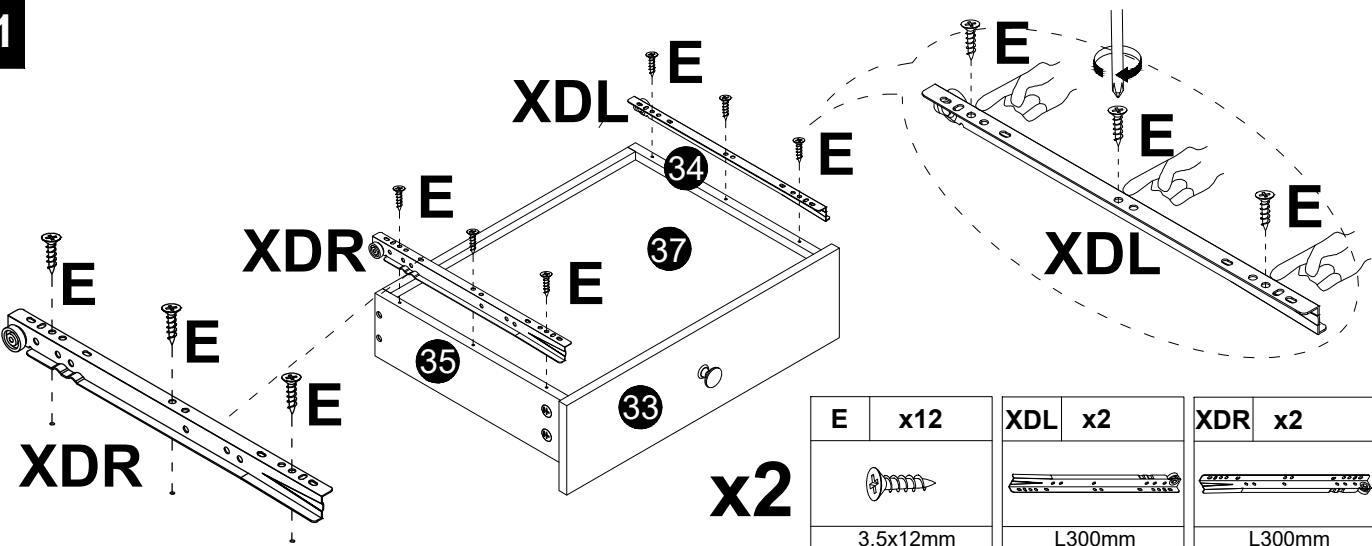



(1)

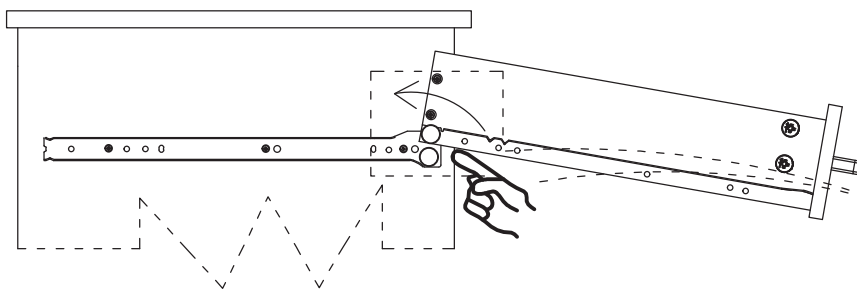


(2)

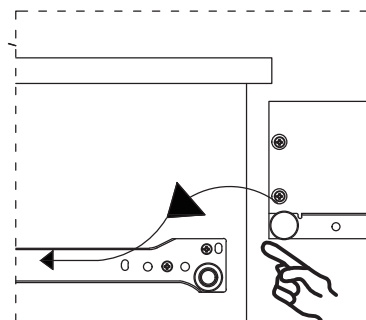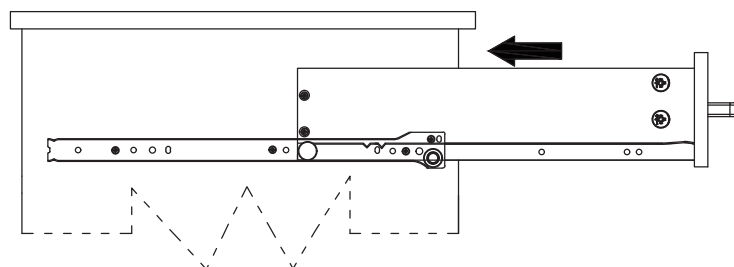


x5

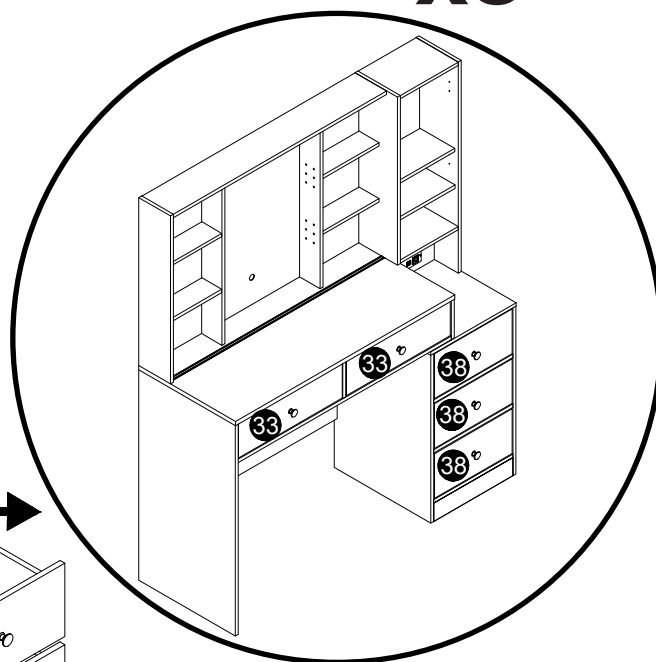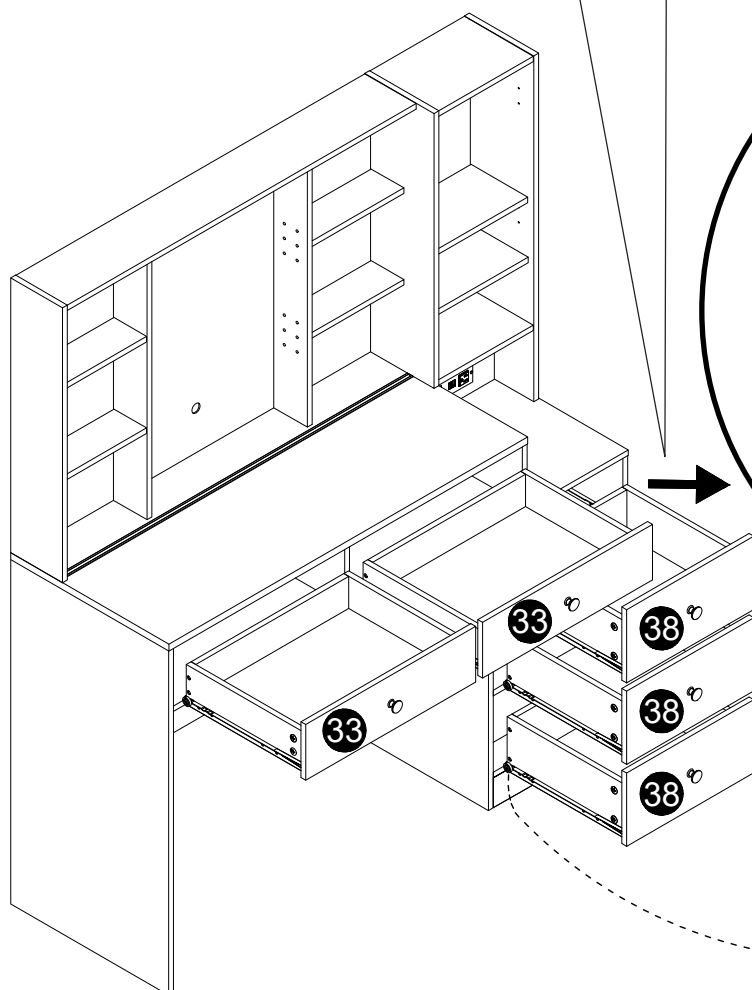

Cabinet Slide

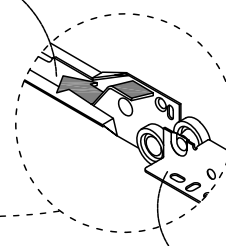


Drawer Slide

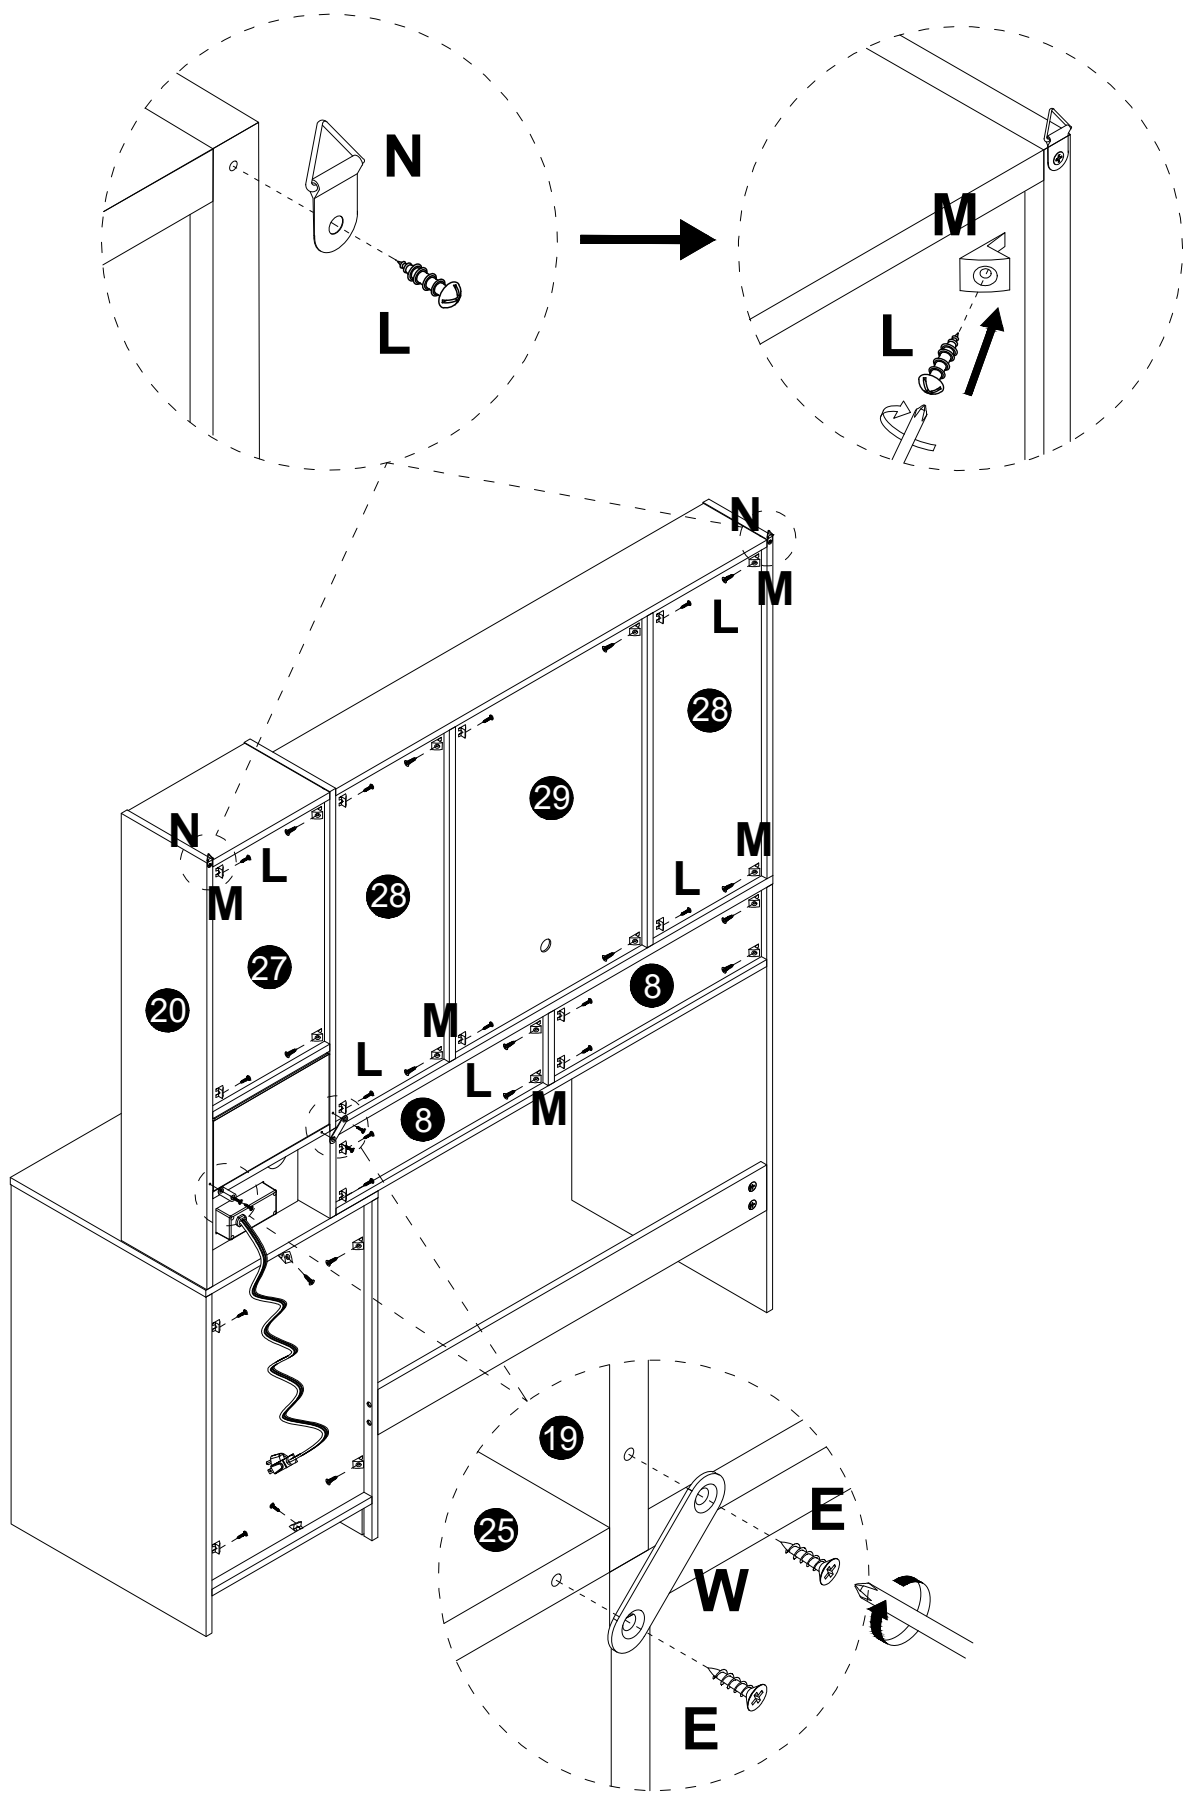


E	x4	L	x32	M	x30	N	x2	W	x2
									
3.5x12mm		3x14mm							

34

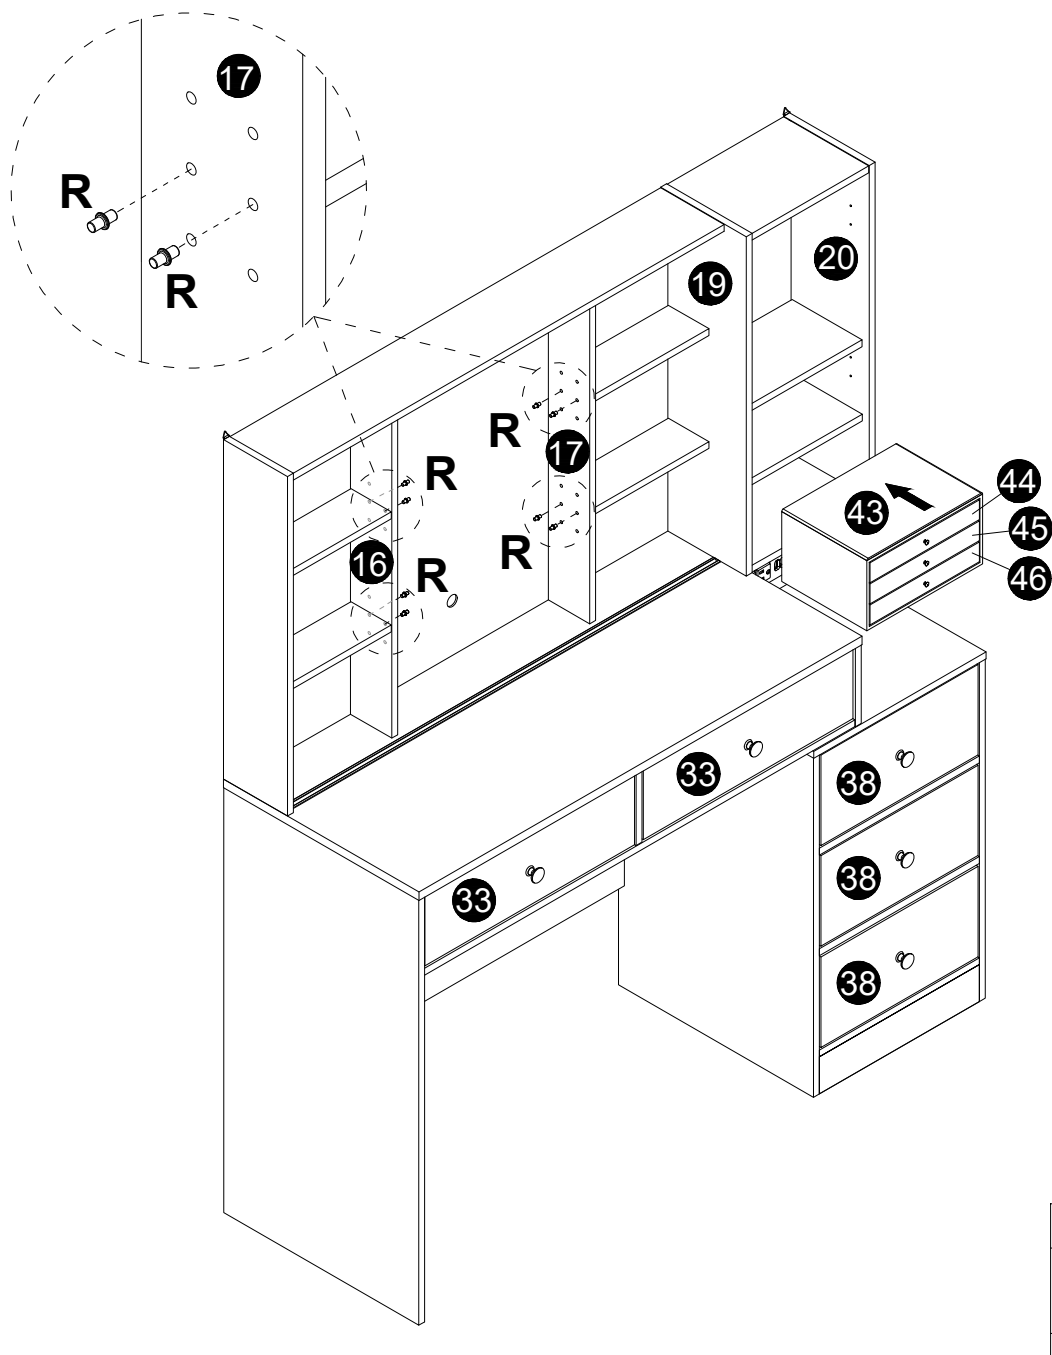


R	x8
	
Ø5x16mm	


35

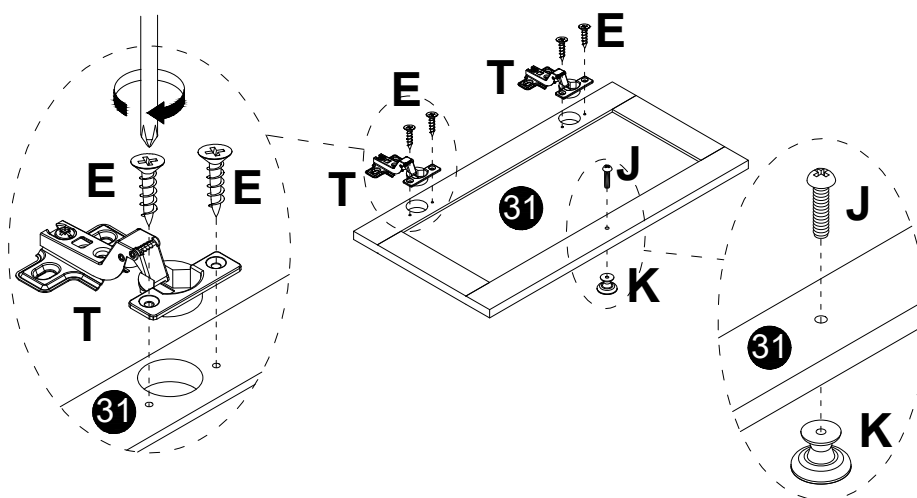


J	x1	K	x1	E	x4	T	x2
							
4x16mm				3.5x12mm		Ø26mm	

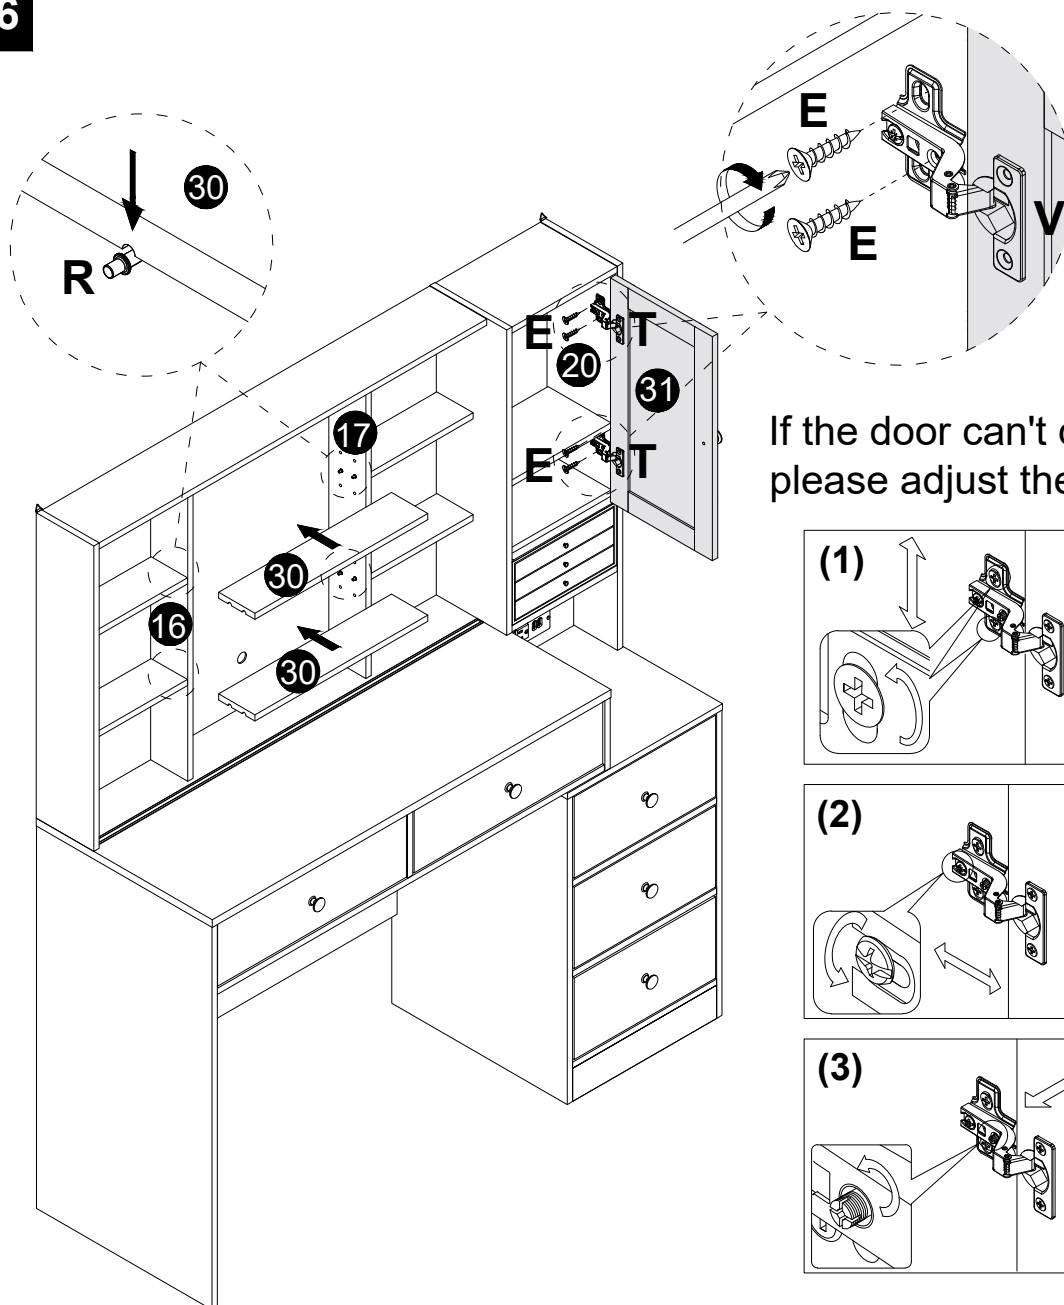

If the door can't close,
please adjust the hinges.

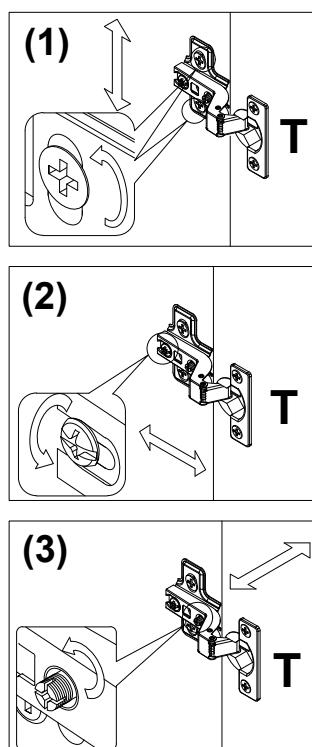


E	x4
	
3.5x12mm	

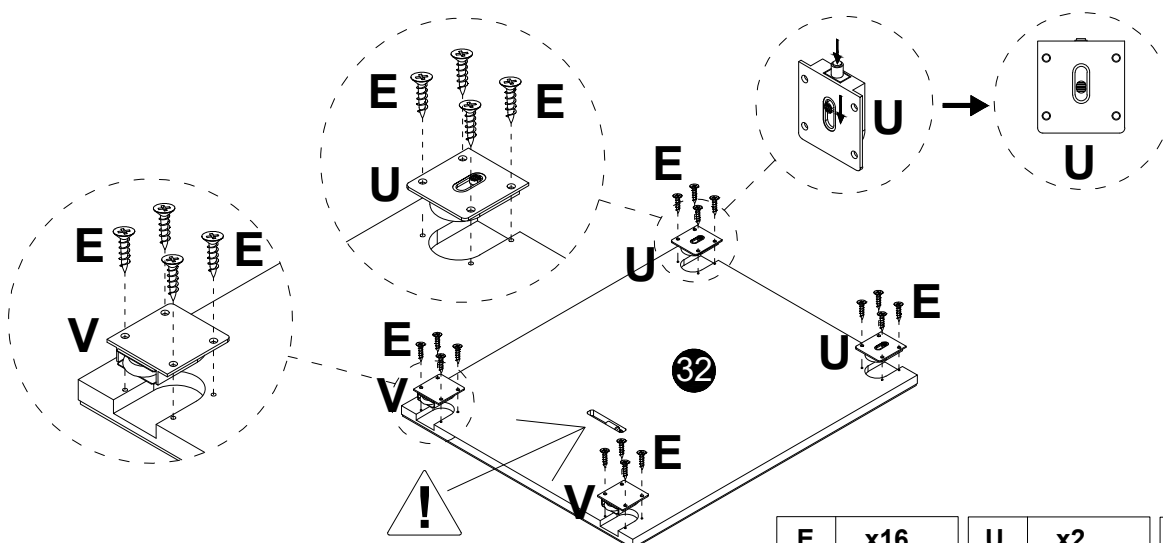


V should be installed closer to the groove
while U should be in the other side.


E	x16	U	x2	V	x2
					
3.5x12mm					

38


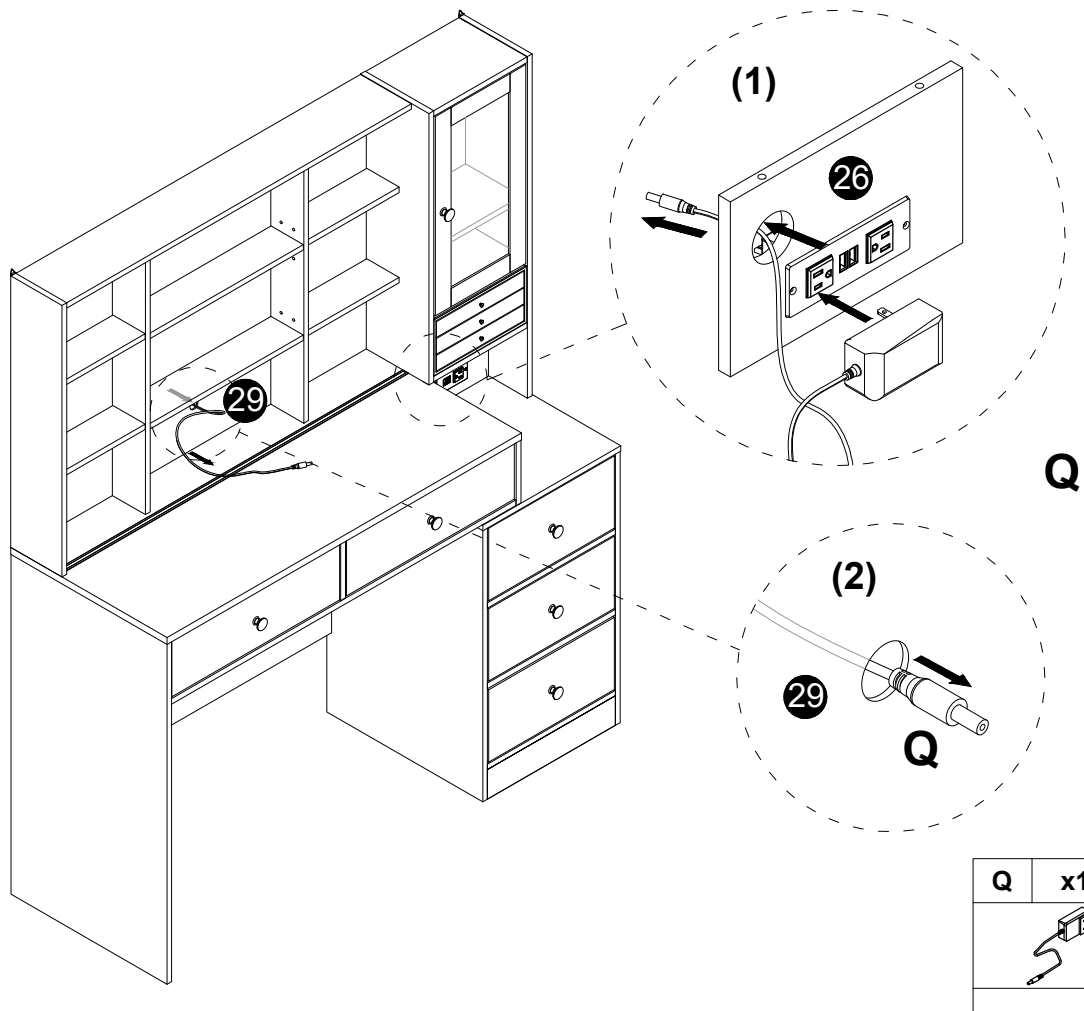



39

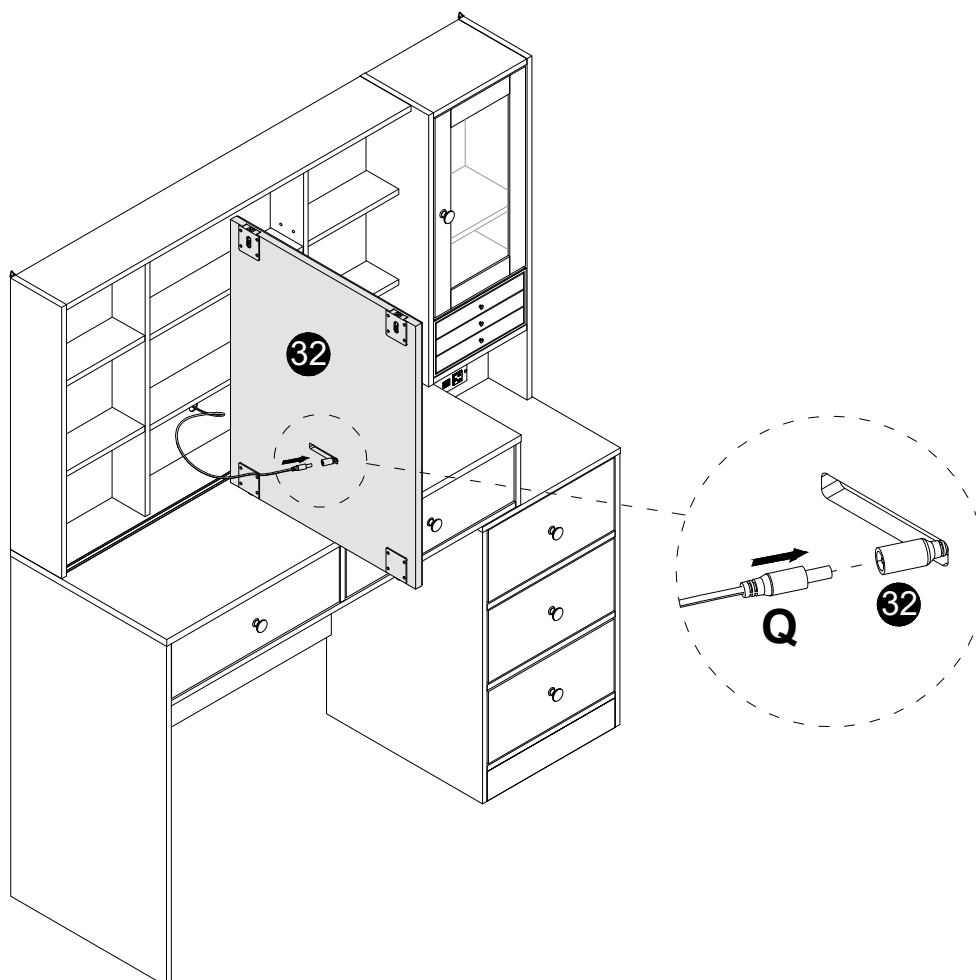


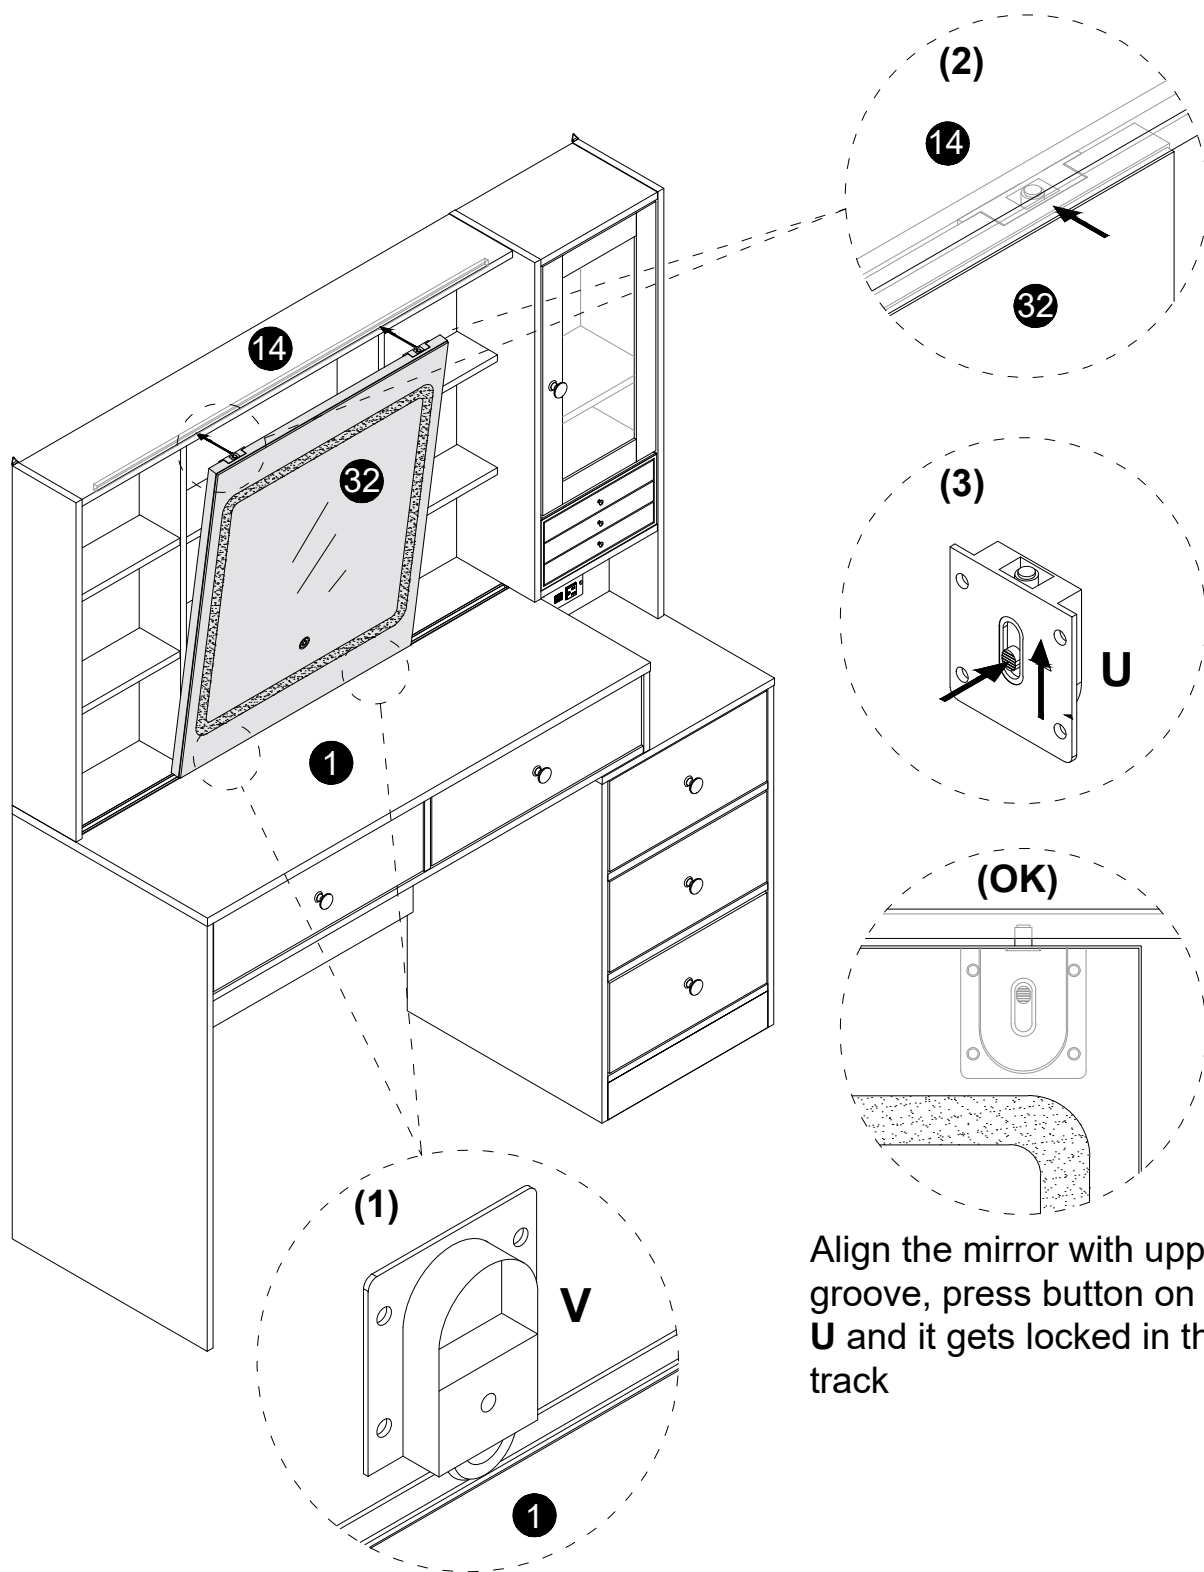

Align the mirror with upper groove, press button on part **U** and it gets locked in the track

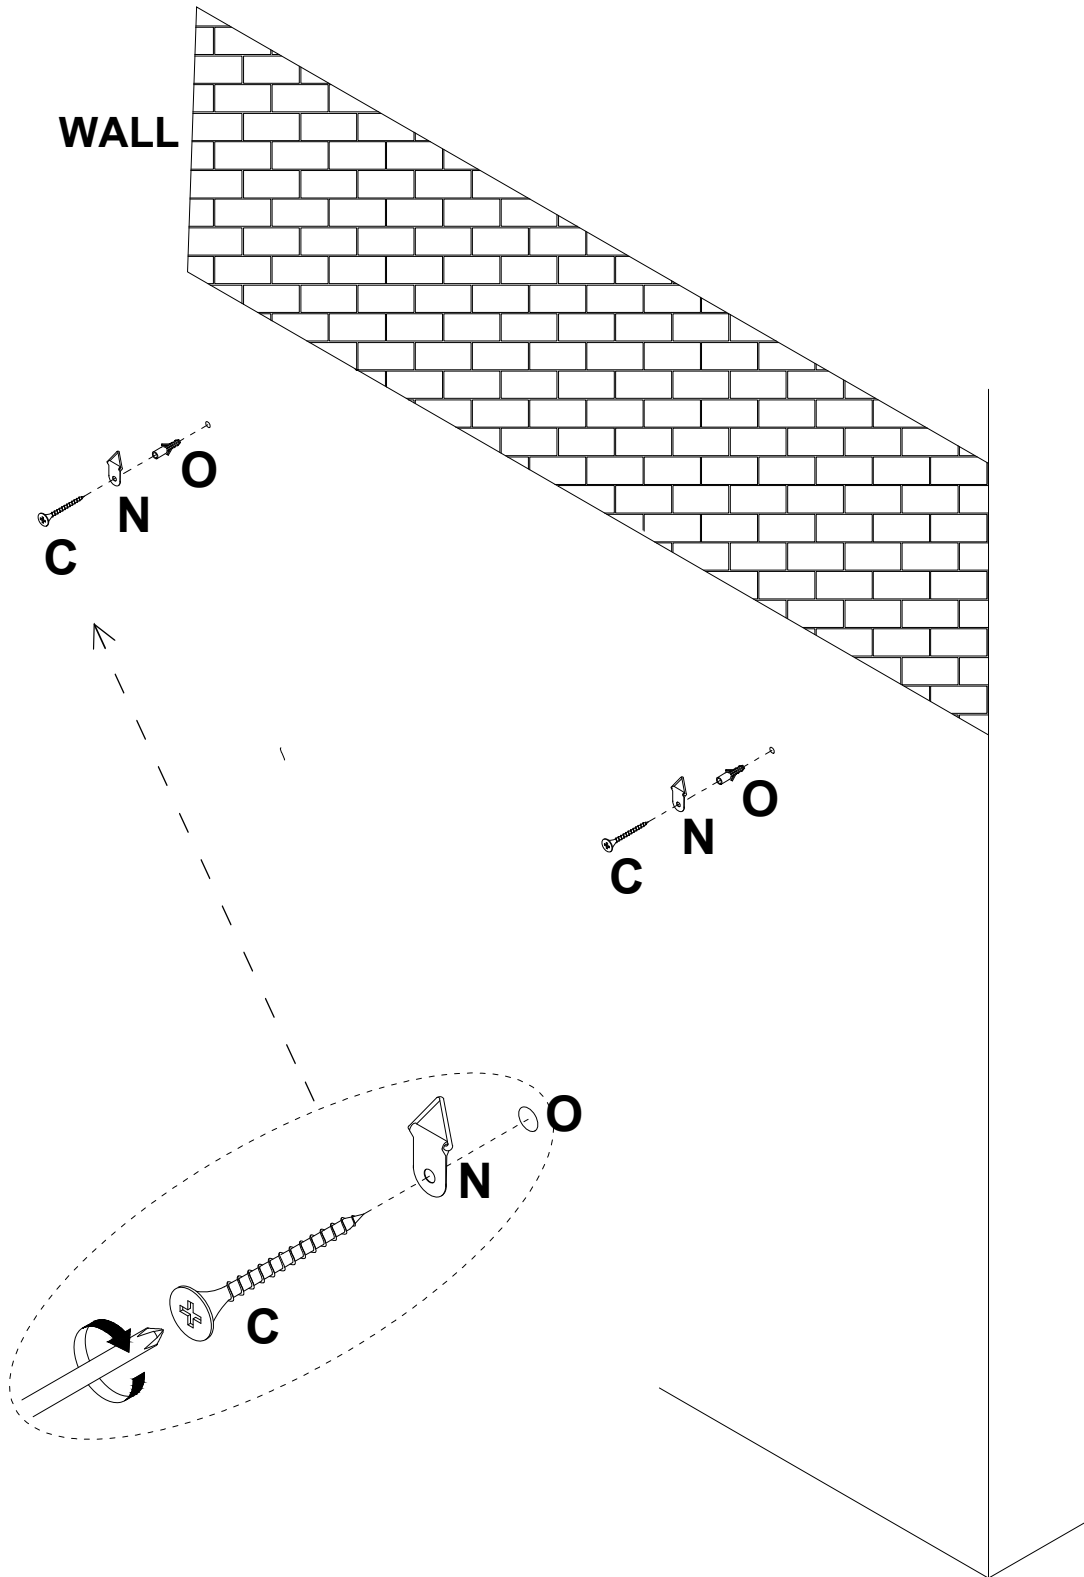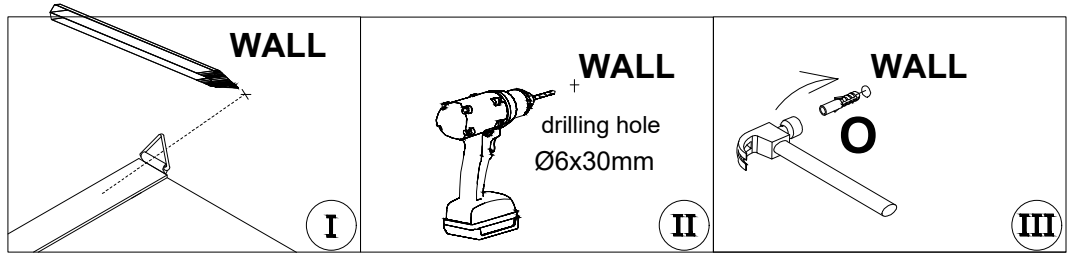



C	x2
 4x35mm	
N	x2
	
O	x2
	

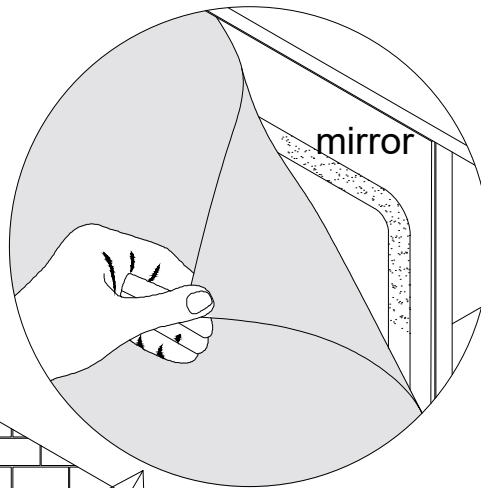


Please tear off the film on the outside of the mirror.


WALL

Please touch the light switch on the mirror with your hand

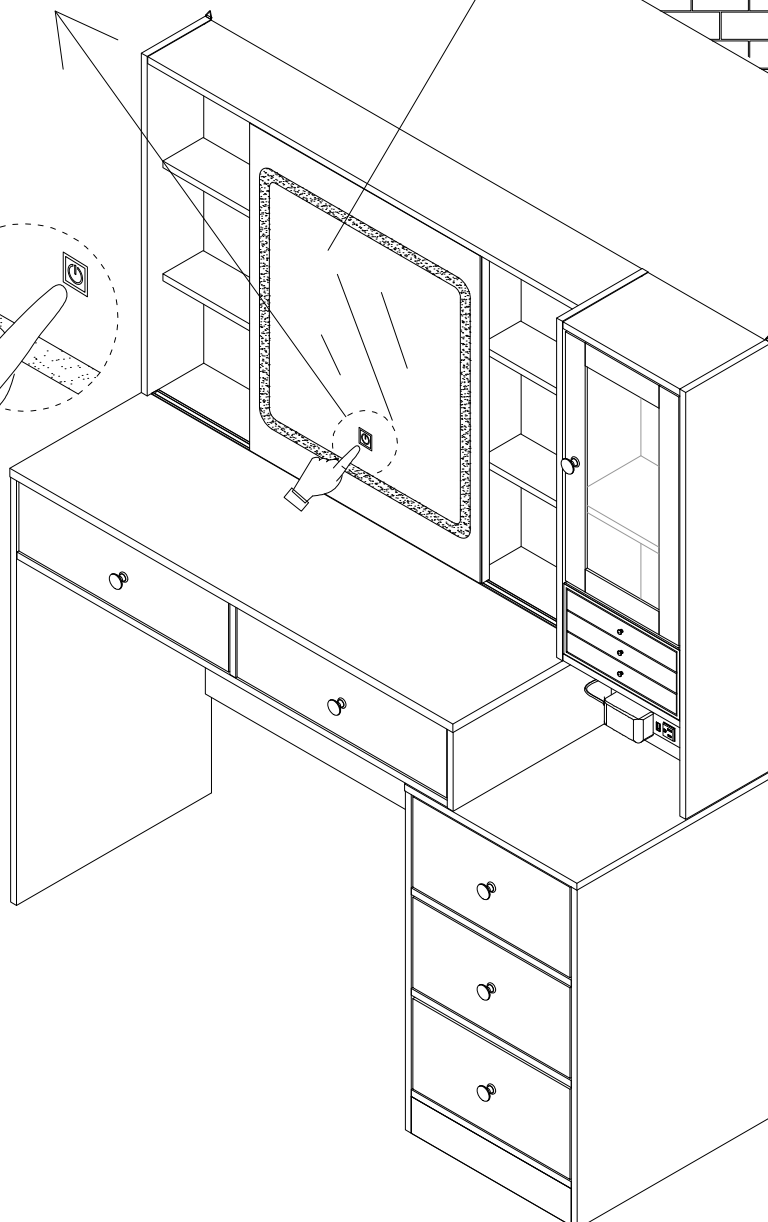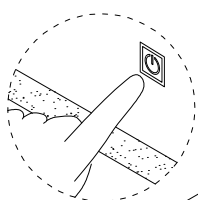

Power supply

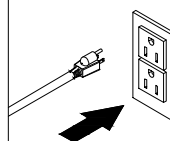

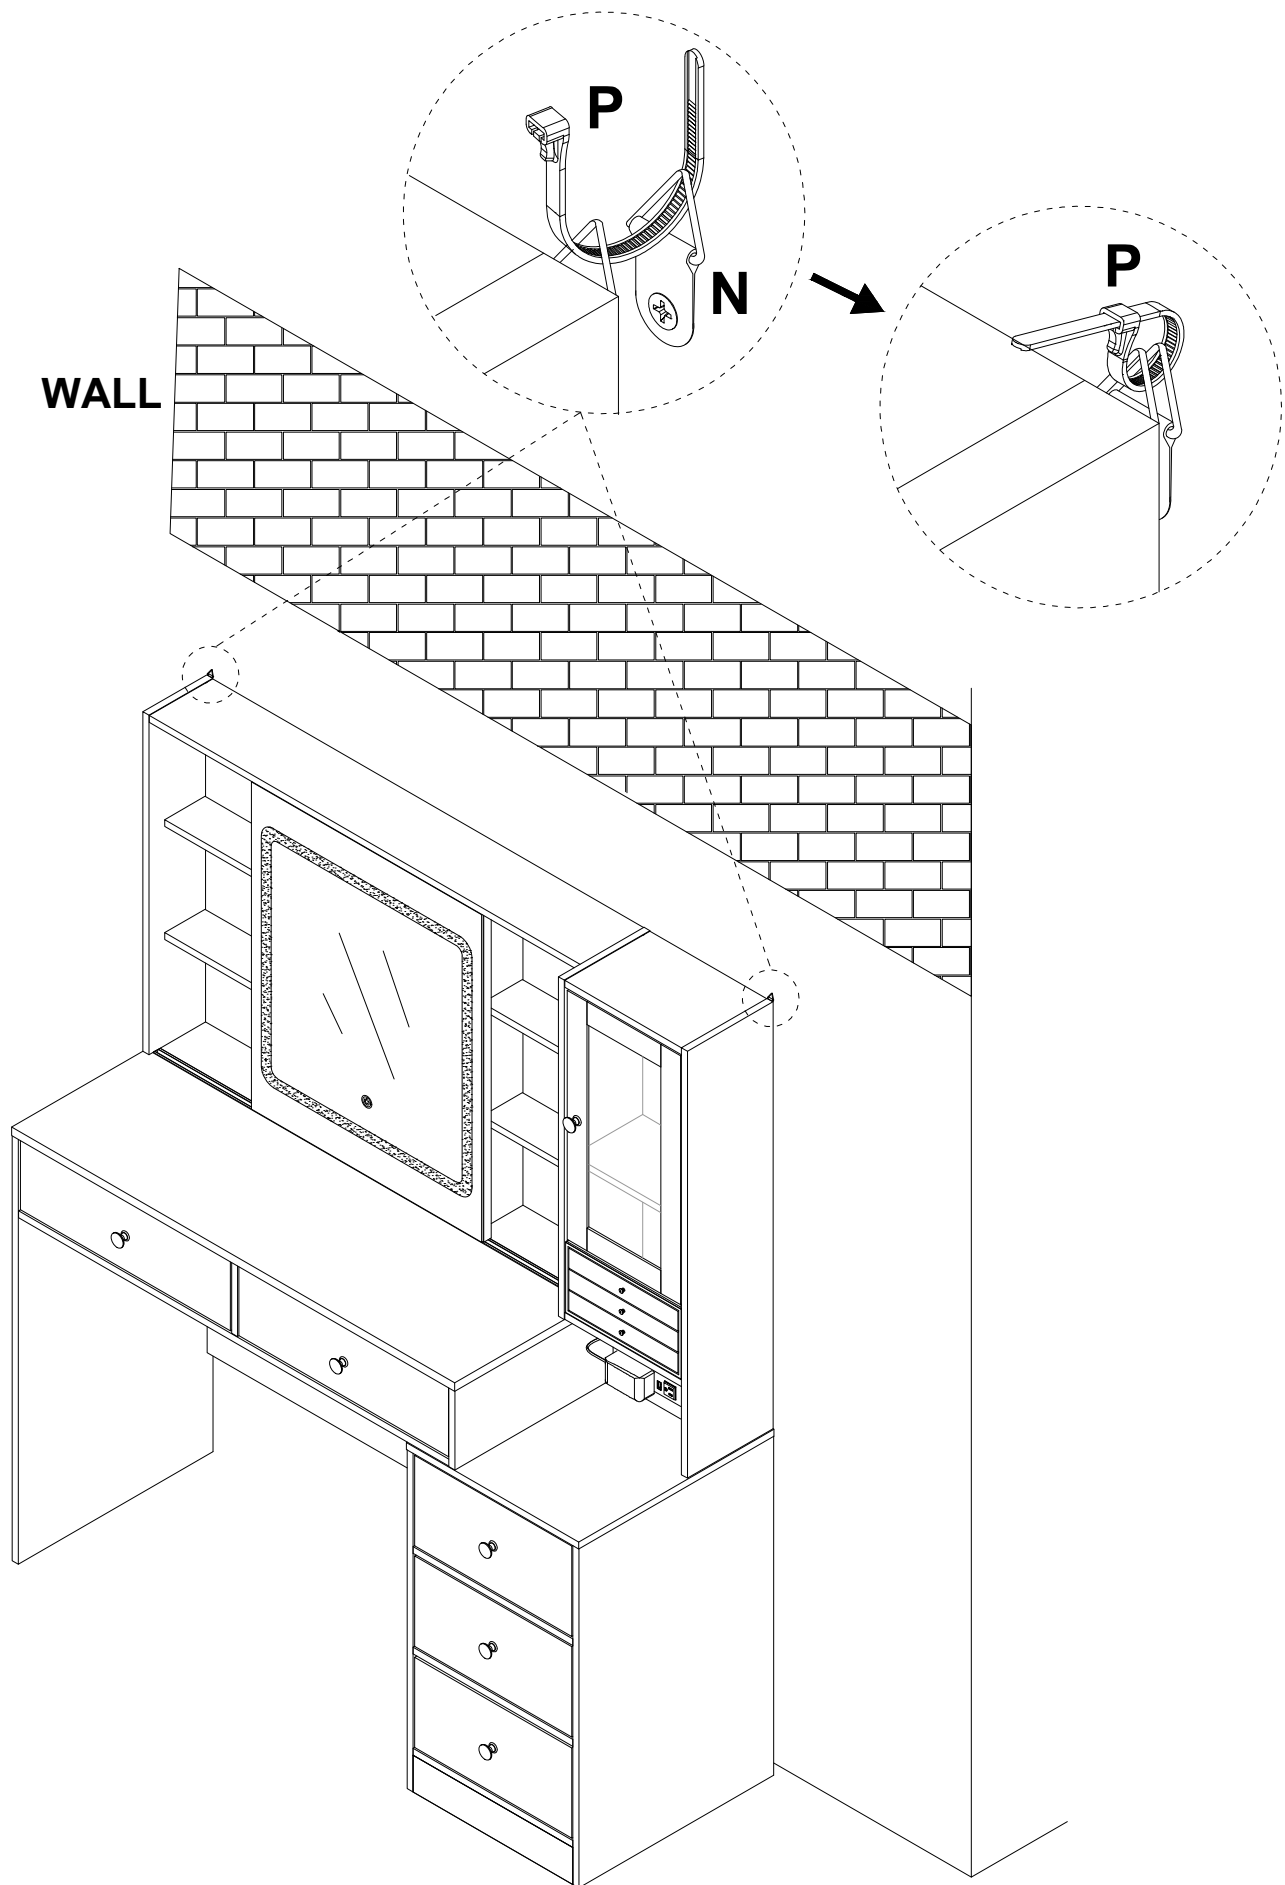

P	x2
	