

## CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.



## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- \* This item may require periodic tightening.
- \* Do not tighten bolts until completely assembled.

Product Dimensions:22"W x 18"D x 72"H.

## Part List and Hardware List

Piece	Description	Picture	Quantity
A	Shelf		4 X
B	Cabinet		1 X
C	Left side Frame (Upper)		1 X
D	Left side Frame (Lower)		1 X
E	Right side Frame (Upper)		1 X
F	Right side Frame (Lower)		1 X
G	Connecting Bar of Cabinet		2 X
H	Connecting Bar of Shelf		8 X
HW1	HEX SOCKET BOLT 1/4"-20 x 5/8"		34 X
HW2	WOOD SCREW Ø8 x 12mm		16 X
HW3	ALLEN KEY 4mm		1 X
HW4	ANTI-TIP HARDWARE		2 X

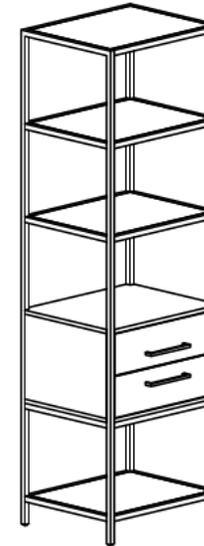


**Weight Capacity : 30 lbs of each shelf**  
**Warning : Do not stand on the product**  
**Warning : Do not over torque bolts**

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:30 minutes.

Tools Required for Assembly : Allen Key (included) and Philips head screwdriver (not included)

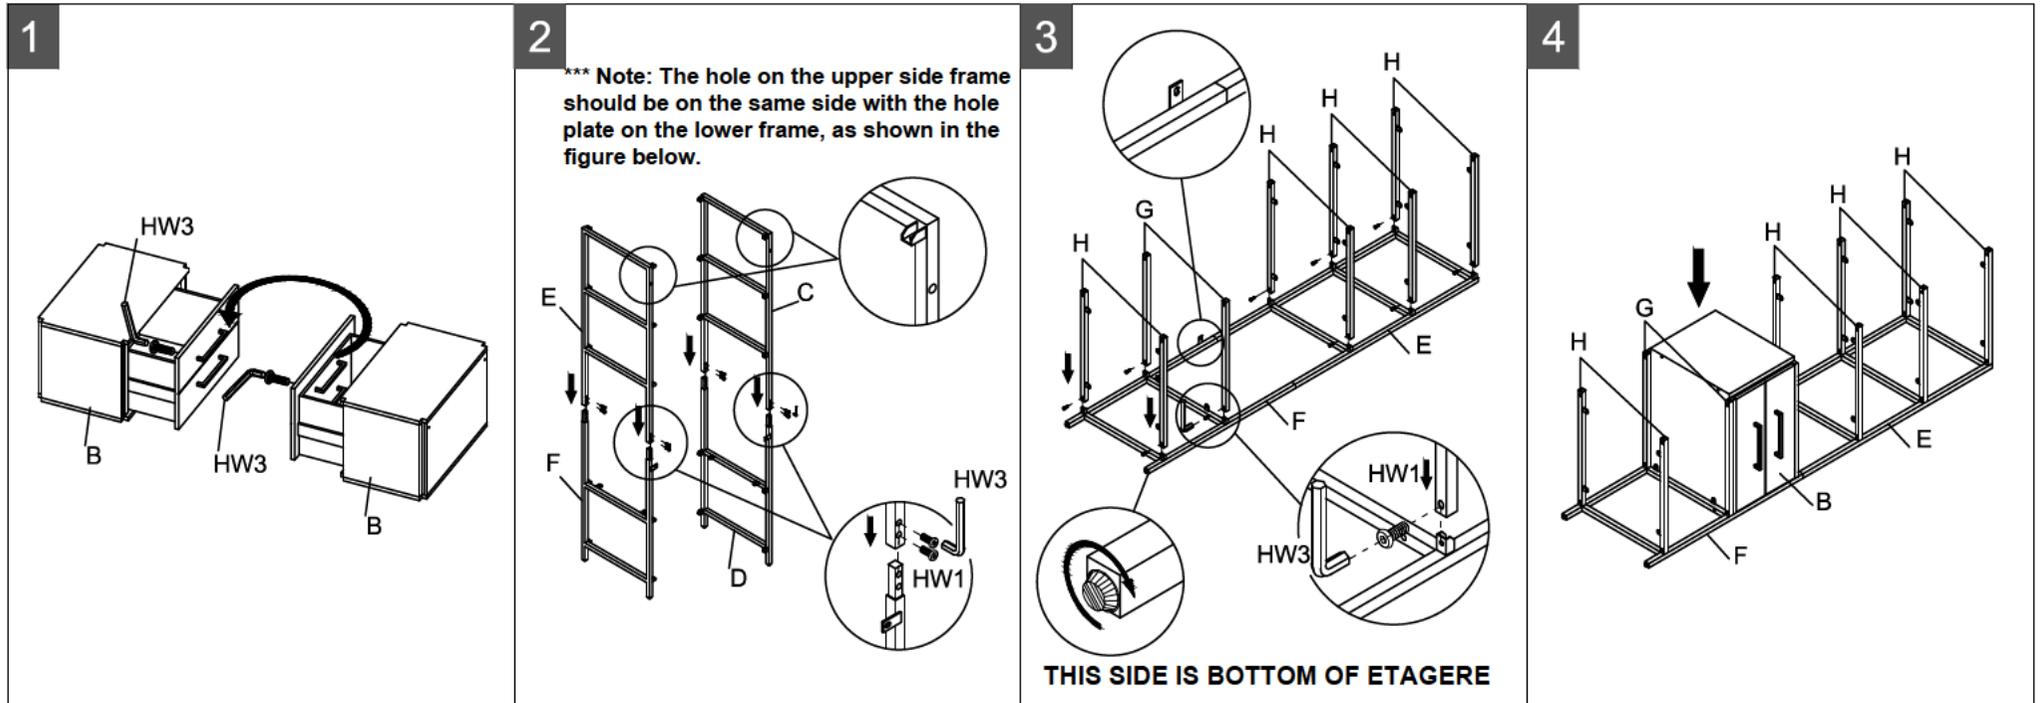

**Step 1:**  
Open the drawer of Cabinet (B) and use Allen Key (HW3) to remove the 2 handles from the inside of drawer, then assemble the 2 handles correctly in drawer front.

**Step 2:**  
Insert the 1\*Left Side frame (Lower) (D) & 1\*Right Side frame (Lower) (F) into the tube of Left Side frame (Upper) (C) / Right Side frame (Upper) (E). Using the Allen Key (HW3) to lock with 8\*Hex Socket Bolts (HW1).

**Step 3:**  
Lay the assembled right side frame down, Install 8\*Connecting Bar of Shelf (H), 2\* Connecting Bar of Cabinet (G) at the corresponding position to right side frame (E&F) and aligning, Using Allen Key (HW3) to lock 10\*Hex Socket Bolts (HW1), as picture.


**Step 4:**  
Place the Cabinet (B) to the semi-assembled etagere (as step 3).

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:30 minutes.

Tools Required for Assembly : Allen Key (included) and Philips head screwdriver (not included)

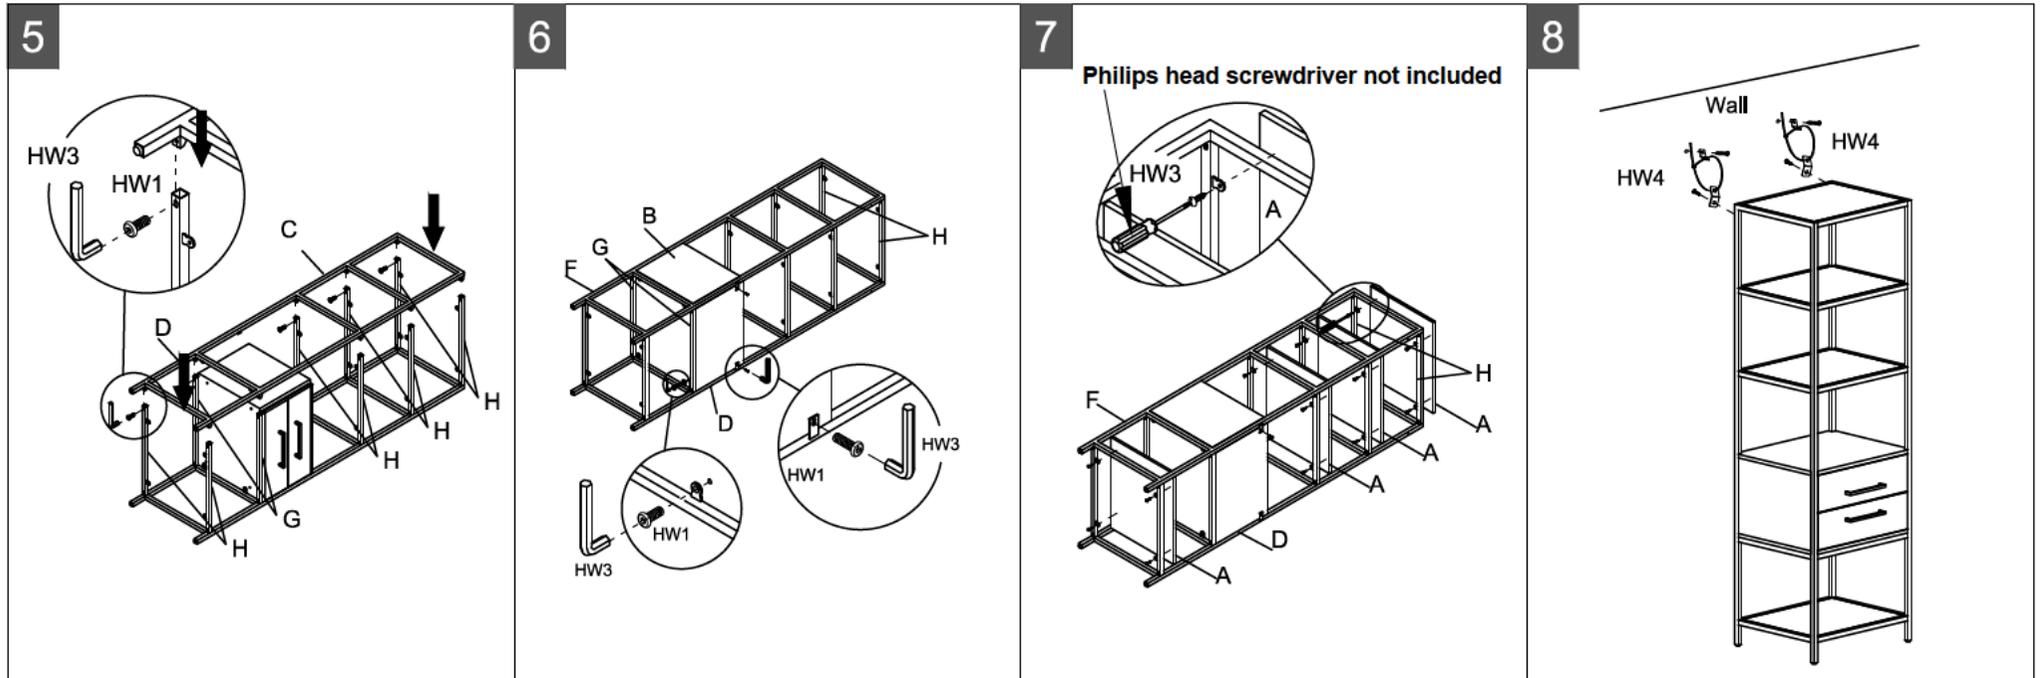

**Step 5:**  
Attach the other assembled left side frame to the semi-assembled etagere (as step 4) and aligning, Using Allen Key (HW3) to lock 10\*Hex Socket Bolts (HW1), as picture.

**Step 6:**  
Using Allen Key (HW3) to lock 4\*Hex Socket Bolts (HW1) into the bottom side of cabinet (B) through the screw holes on connecting bar of Cabinet (G). Then using Allen Key (HW3) to lock 2\*Hex Socket Bolts (HW1) into the back side of cabinet (B) through the plate holes.

**Step 7:**  
Attach underneath of shelf (A)x4 in the corresponding position on the assembled etagere, Use Philips head screwdriver (tool is not included) to lock 16\*Wood screws (HW2) on the 4\*shelf (A), as picture.

**Step 8:**  
Straighten up the assembled product, Following the Installation Instructions of anti-tip hardware (HW4) to fix the product with wall by 2 straps, Assembly is completed.