Assembly Instructions

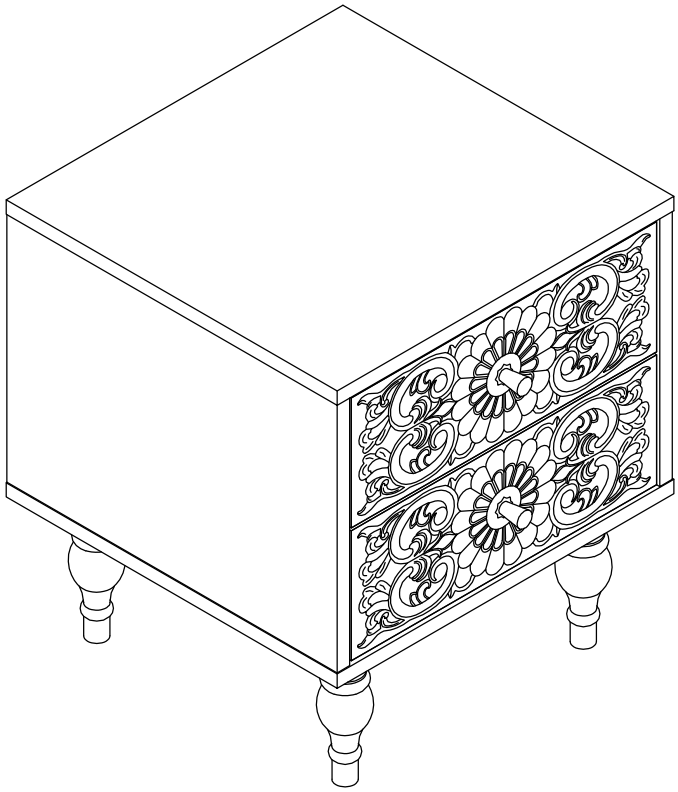

Before Assembly

Tips Before Your Start:

- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

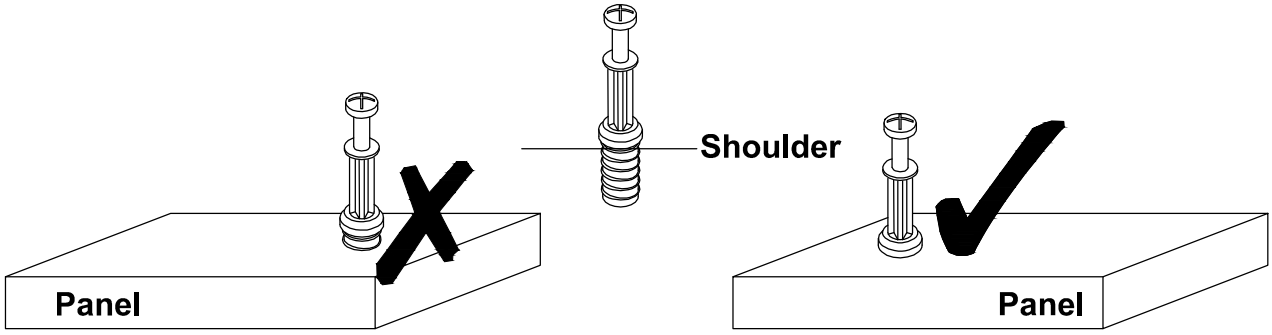

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

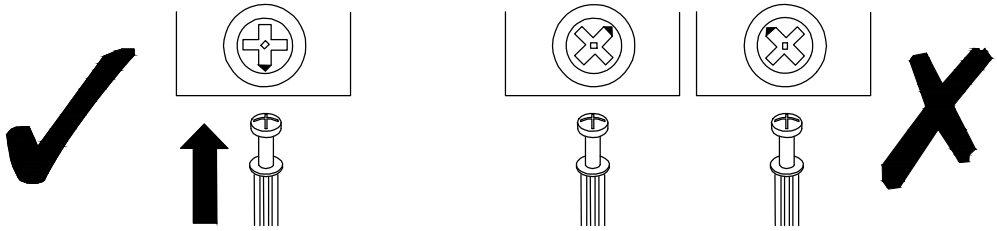

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

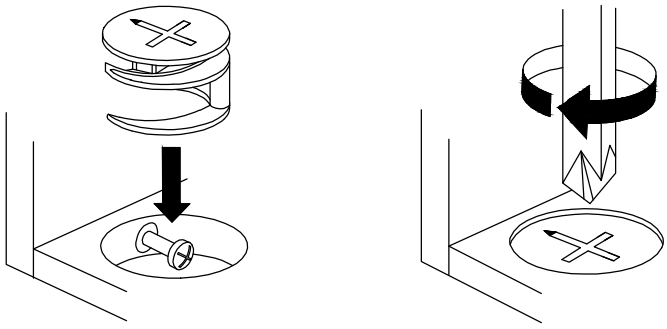

Turn cam lock clockwise to tighten.

Before Assembly

Tips Before Your Start

How to separate the drawer slider：

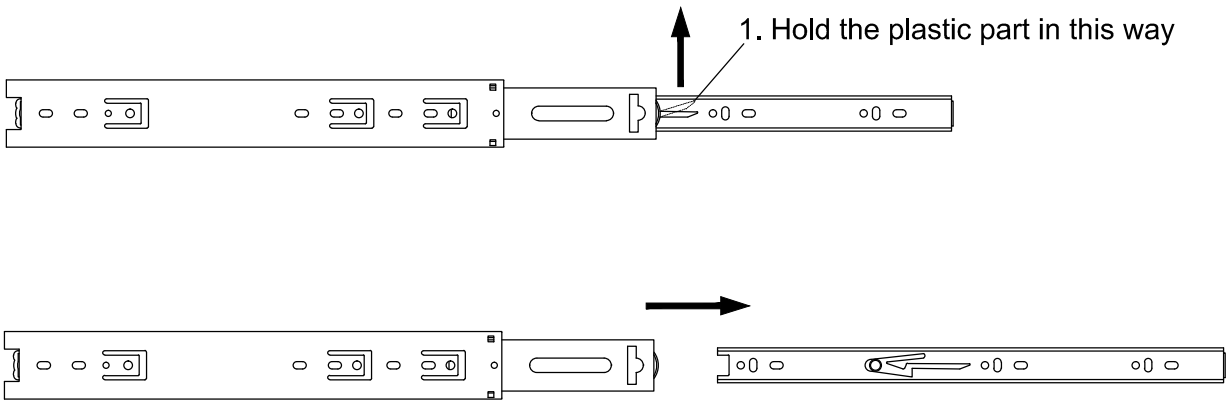

2. Pull out the inner slider for drawer box fixing

Drawer Front Alignment

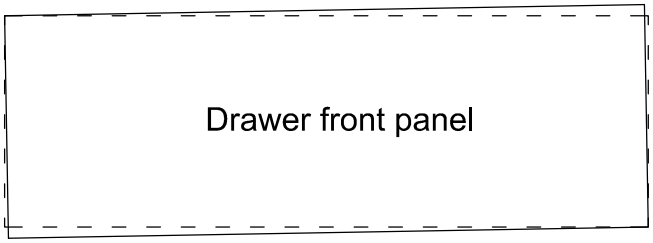

If the drawer front panel is NOT level after being assembled, then...

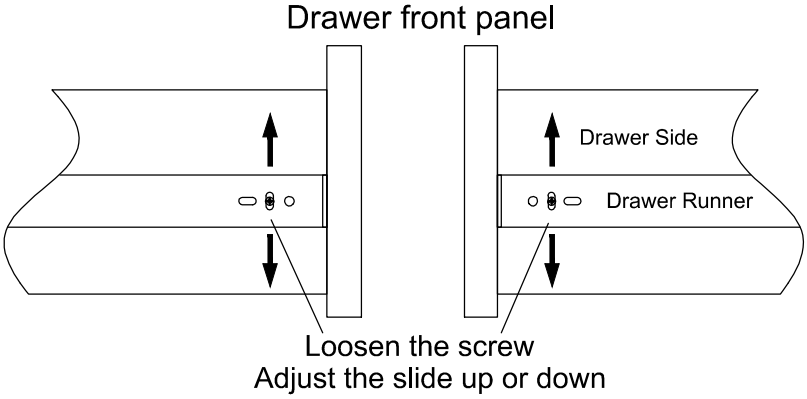

Loosen the screws on the left and right hand side, then adj ust the drawer slide up or down, untill the drawer fronts are even/level, then tighten the screws.

Part List

No. A Quantity:16 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:16 Pcs Cam φ15 	No. C Quantity:16 Pcs Sticker Ø20 	No. D Quantity:4 Pcs Dowel 8*30mm 
No. E Quantity:2 Sets Drawer Slider 10" 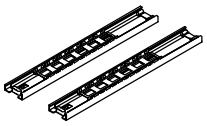	No. F Quantity:16 Pcs Screw M3.5*12mm 	No. G Quantity:8 Pcs Screw M4*30mm 	No. H Quantity:2 Pcs Screw M4*18mm
No. I Quantity:4 Pcs Slip Mat Ø20 	No. J Quantity:2 Pcs Handle 	No. K Quantity:4 Sets Plastic Wedge 	No. L Quantity:1 Sets Anti-falling Parts 

Product structure

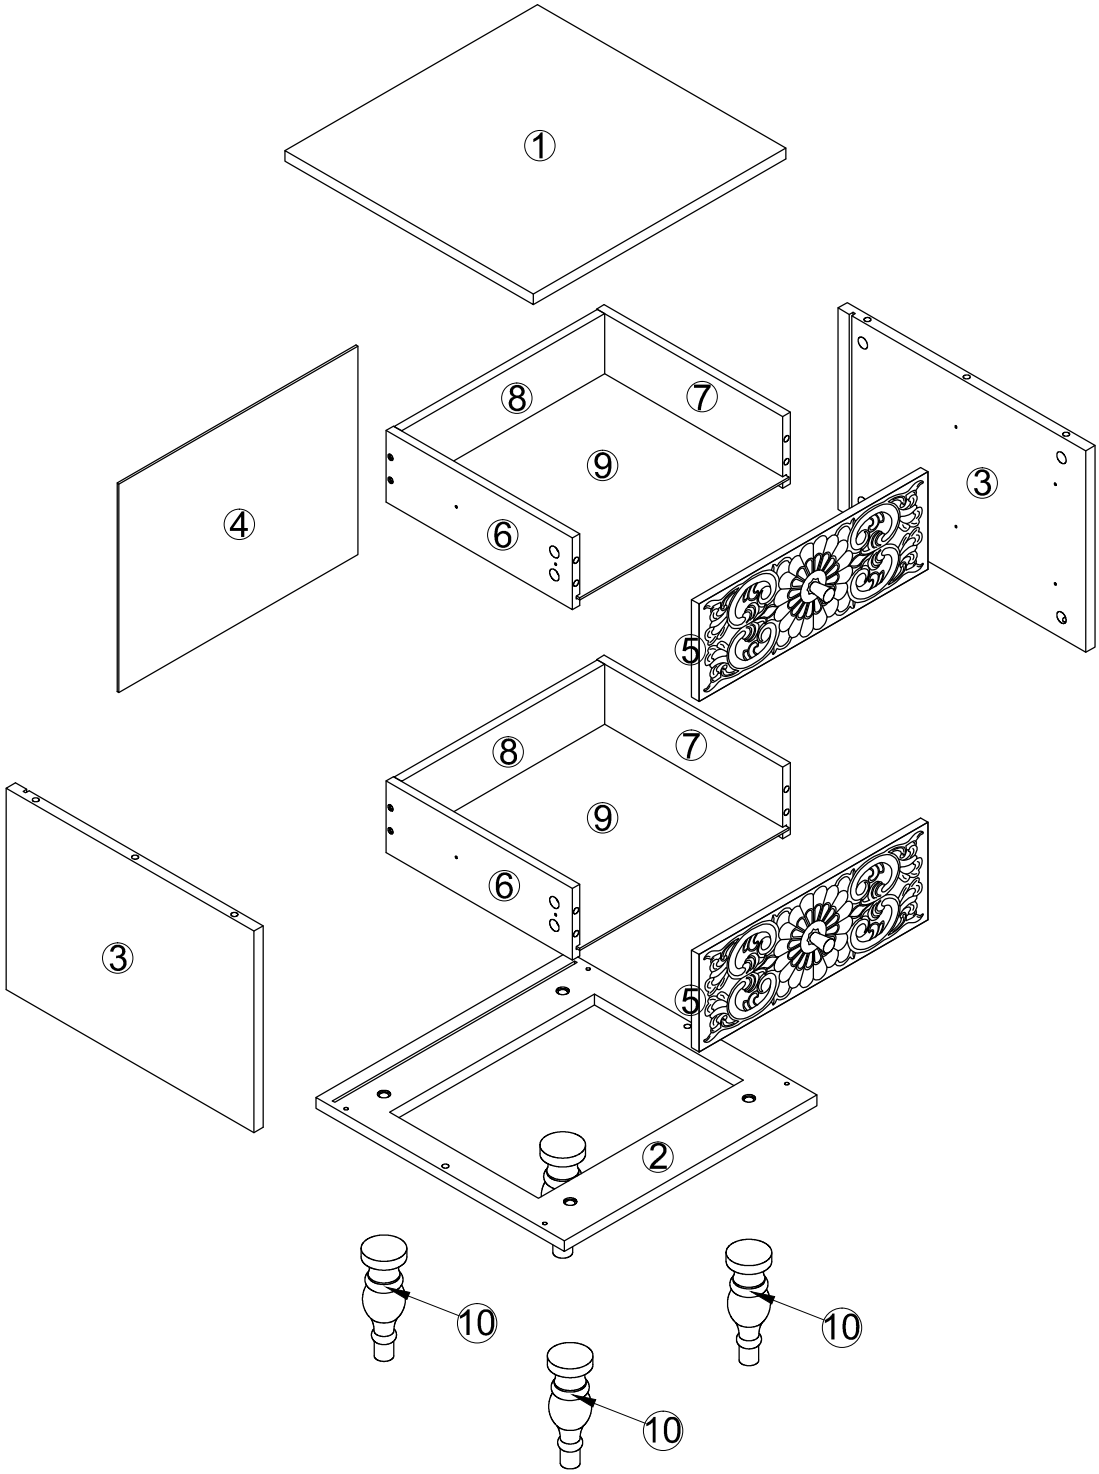

STEP 1

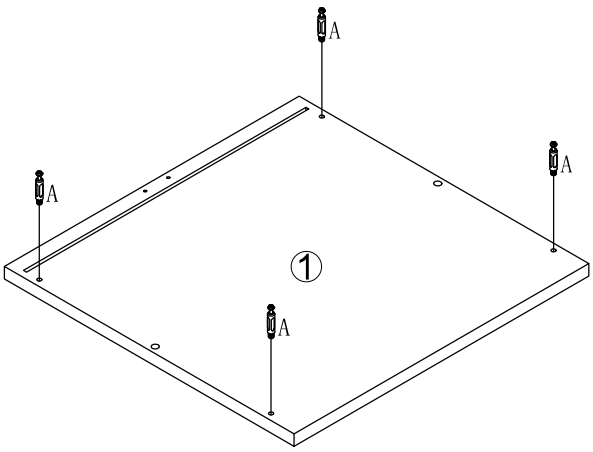

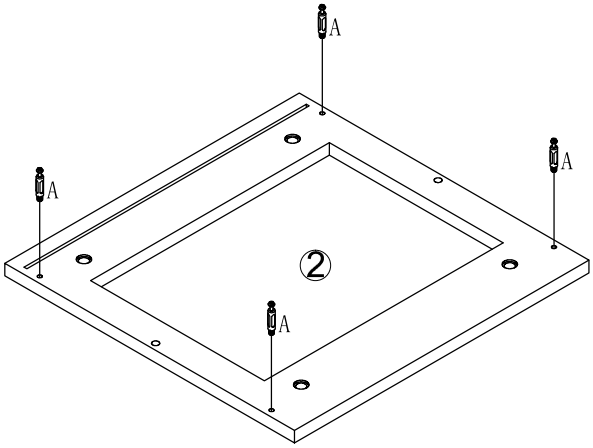

No. A
Quantity: 8 Pcs
8*28 mm

STEP 2

The first screw hole should corresponded with the board location hole

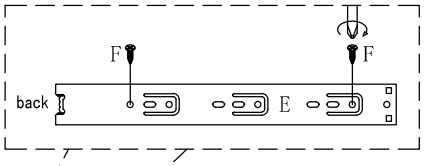

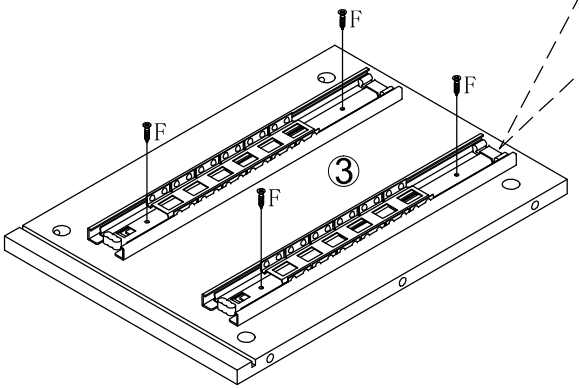

×2

No. E
Quantity: 2 Sets
10"



No. F
Quantity: 8 Pcs
M3.5*12mm

STEP 3

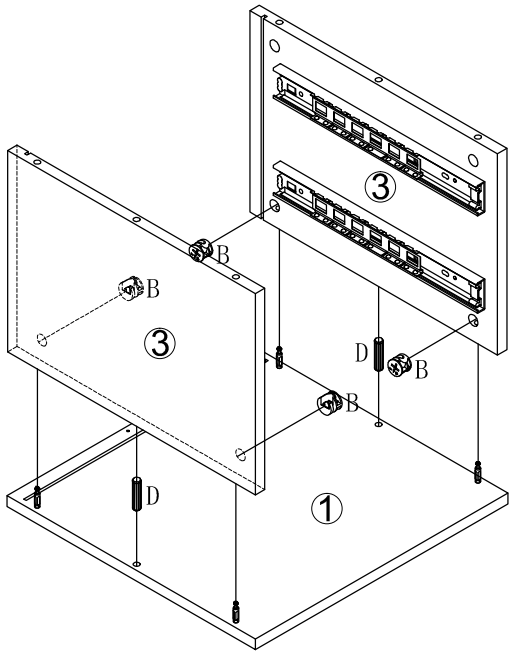

No. B
Quantity: 4 Pcs
Ø15

No. D
Quantity: 2 Pcs
8*30mm



STEP 4

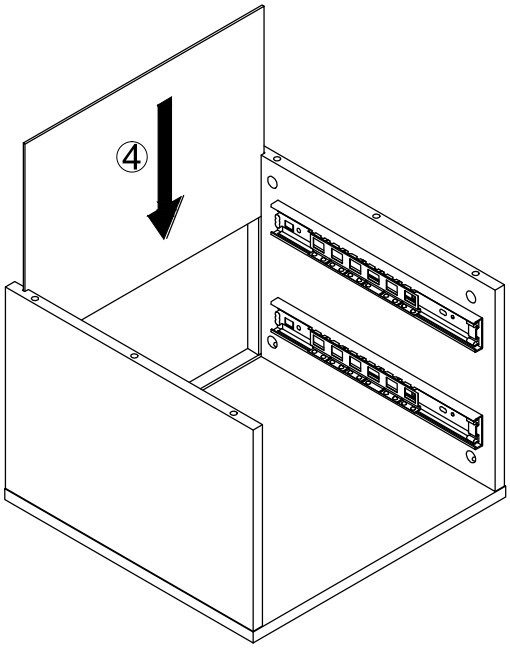

STEP 5

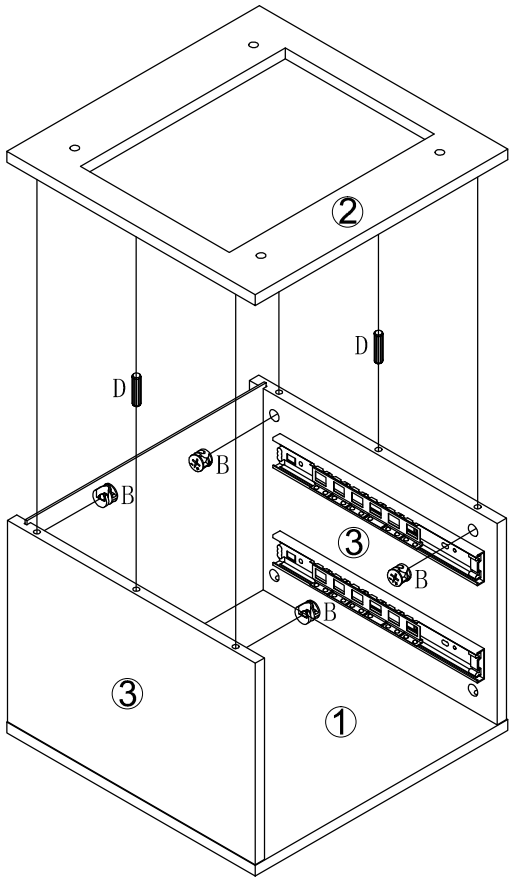

No. B
Quantity: 4 Pcs
Ø15

No. D
Quantity: 2 Pcs
8*30mm



STEP 6

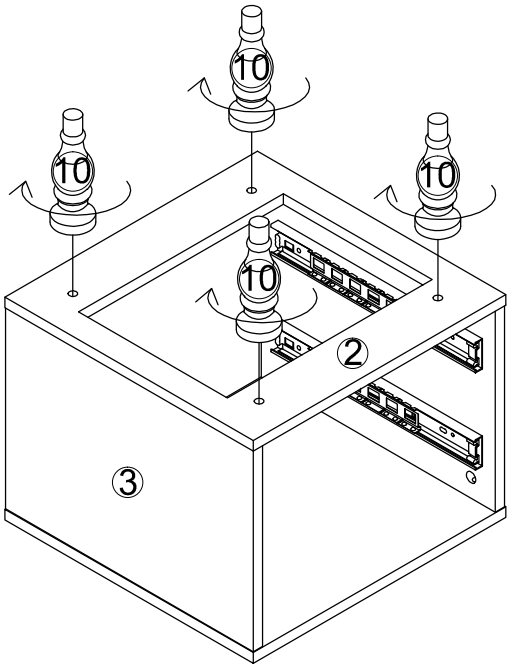

STEP 7

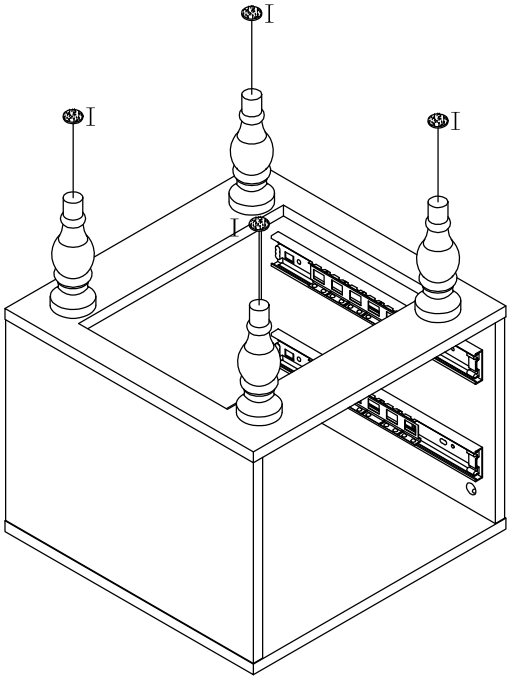

No. I
Quantity: 4 Pcs
Ø20

STEP 8

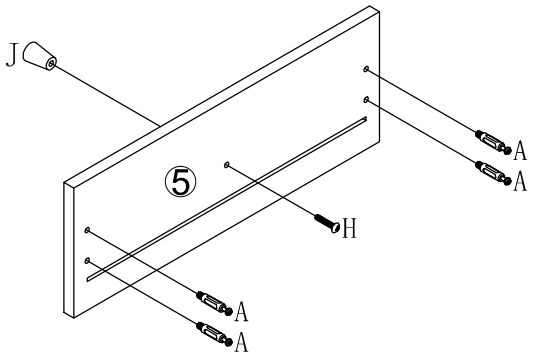

×2

No. A
Quantity: 8 Pcs
8*28 mm

No. J
Quantity: 2 Pcs
Handle

No. H
Quantity: 2 Pcs
M4*18mm

STEP 9

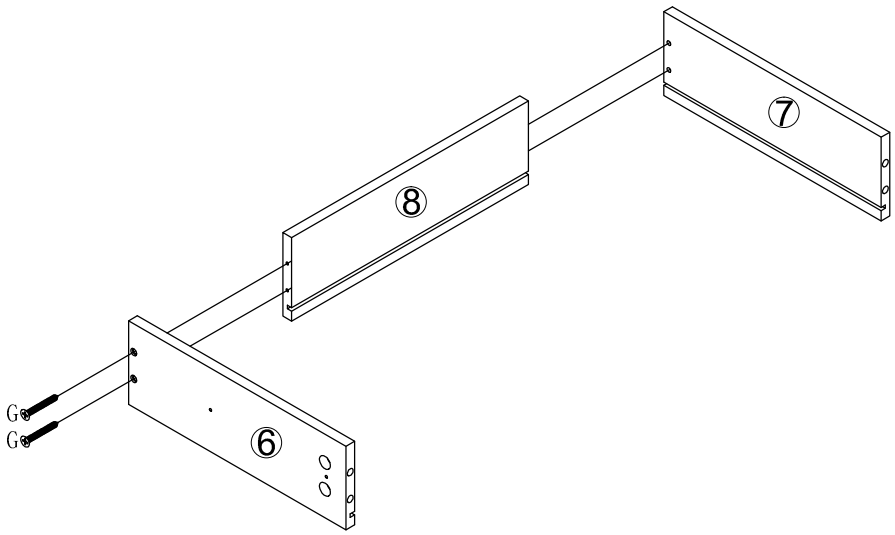

No. G
Quantity: 8 Pcs
M4*30mm



×2

STEP 10

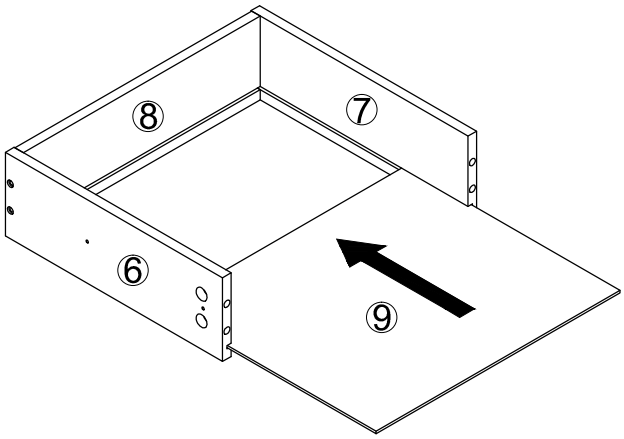

×2

STEP 11

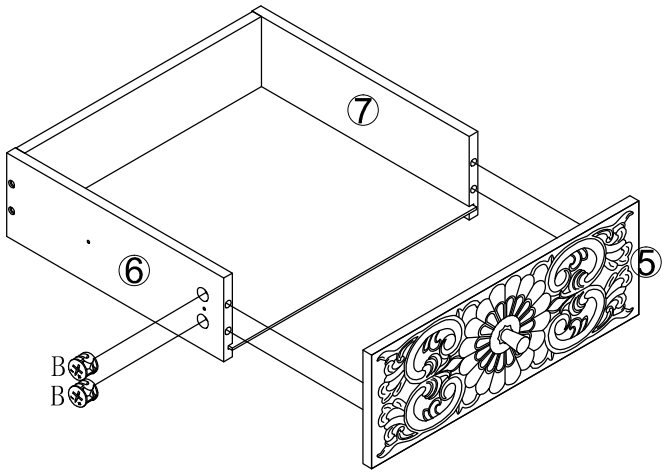

No. B
Quantity:8 Pcs
Ø15

×2

STEP 12



back

The first screw hole should corresponded with the board location hole

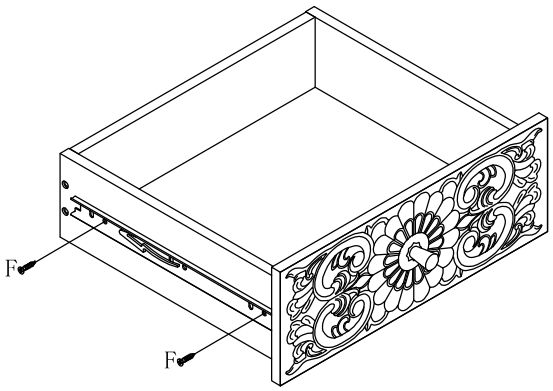

No. E
Quantity: 2 Sets
10"



No. F
Quantity: 8 Pcs
M3.5*12mm

×2

STEP 13

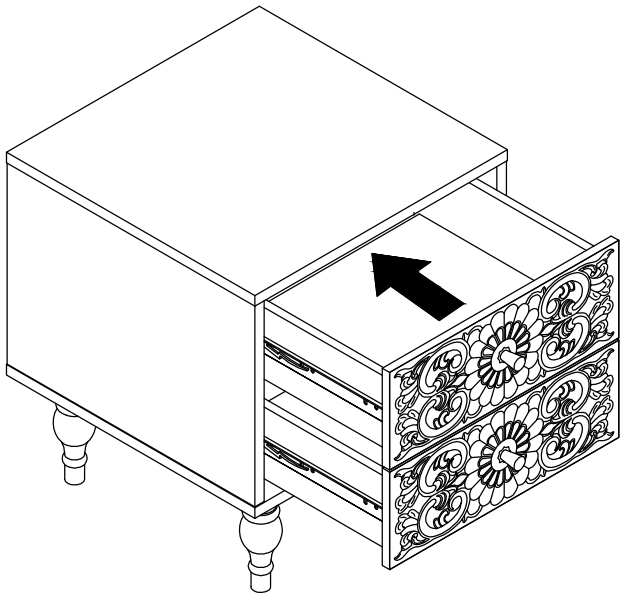

STEP 14

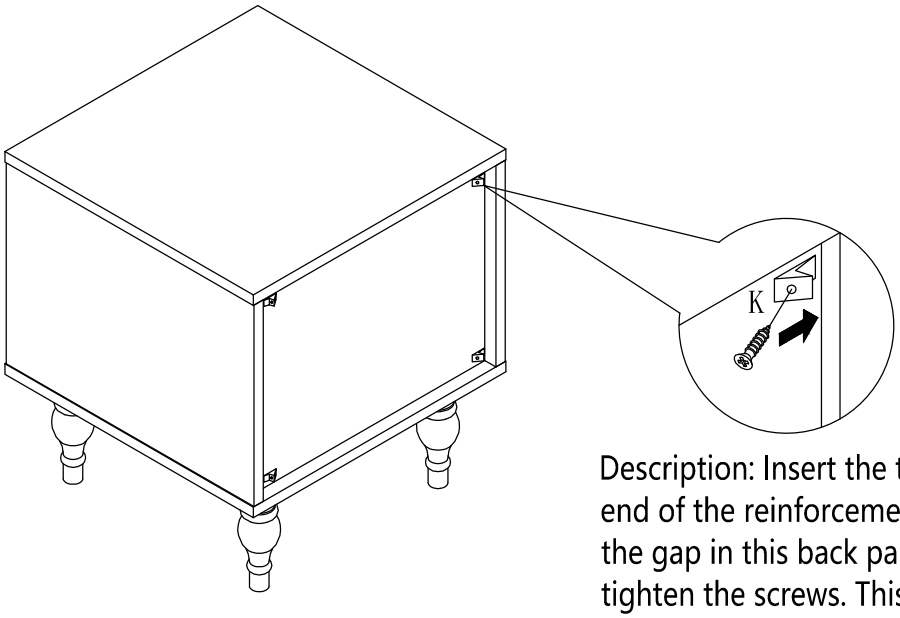

Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

No. K
Quantity: 4 Sets



STEP 15

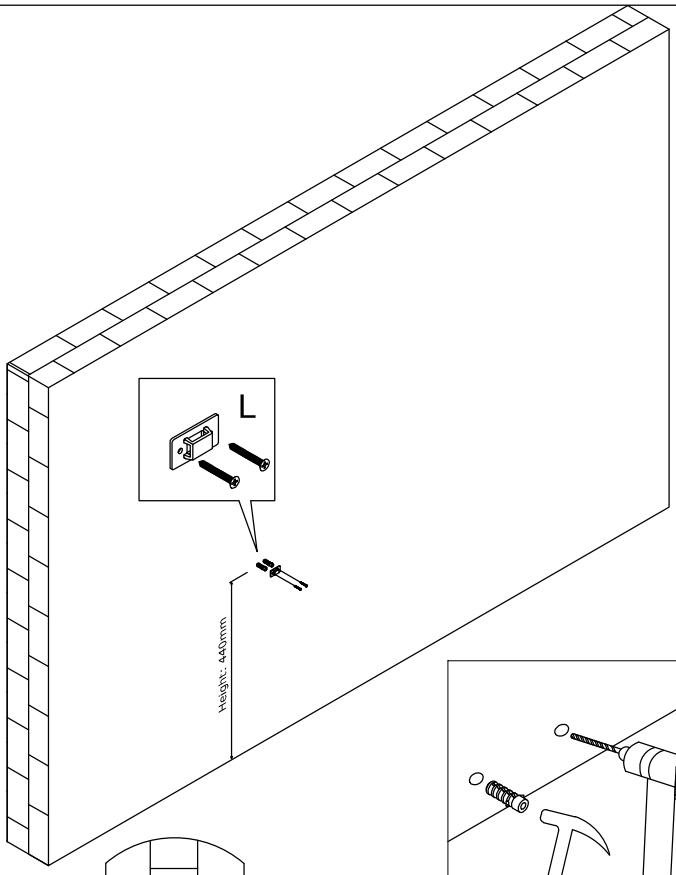

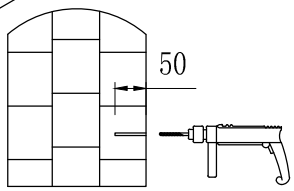

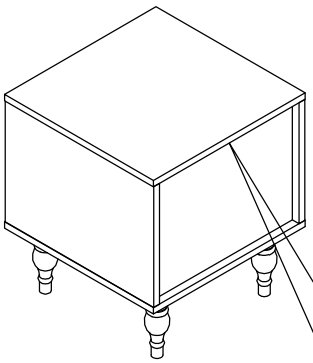

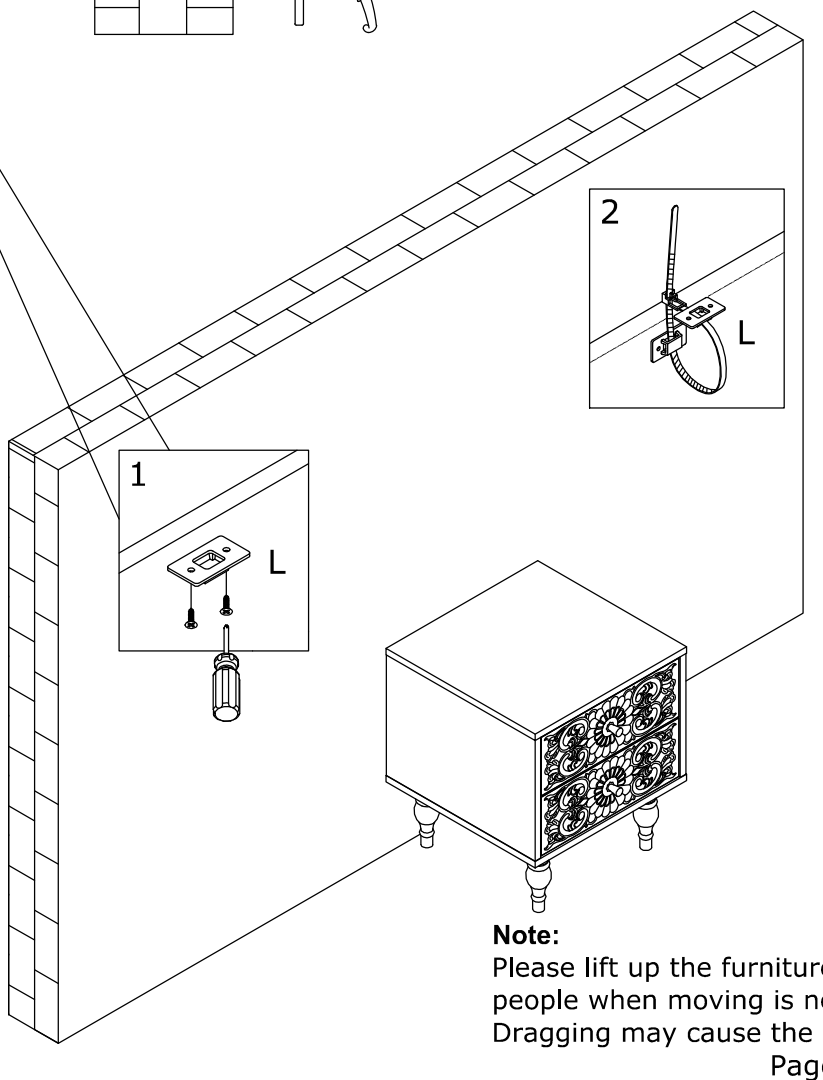

No. L

Quantity:1 Sets



Note:

Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.