

# ASSEMBLY INSTRUCTIONS

## TOOLS REQUIRED:

Spanner Wrench (supplied, part # D)



## BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Place your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

## INSTRUCTIONS:

1. Attach the front leg to the front corner block of the chair seat, using Flat Washer (C), Lock Washer (B), Nuts (A) and tighten all nuts with Wrench (D). (See Figure 1)
2. Repeat the process for the other front leg.
3. Tighten all bolts and nuts before use.

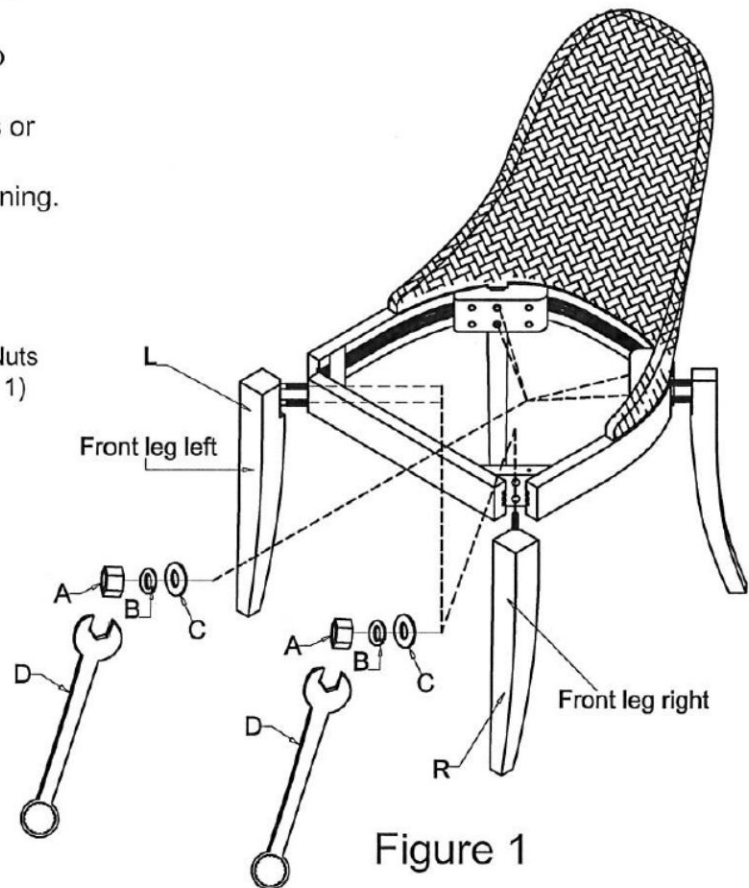






Figure 1

No.	Hardware List		Q'ty
A		Hex Nut Ø5/16" D12 x H6mm	8
B		Lock Washer Ø5/16"xØ14x1mm	8
C		Flat Washer Ø5/16"xØ18x1.5mm	8
D		Spanner Wrench 12mm	1