
ASSEMBLY INSTRUCTION

SKU: AP-WK001
3-SEATER SOFA X1

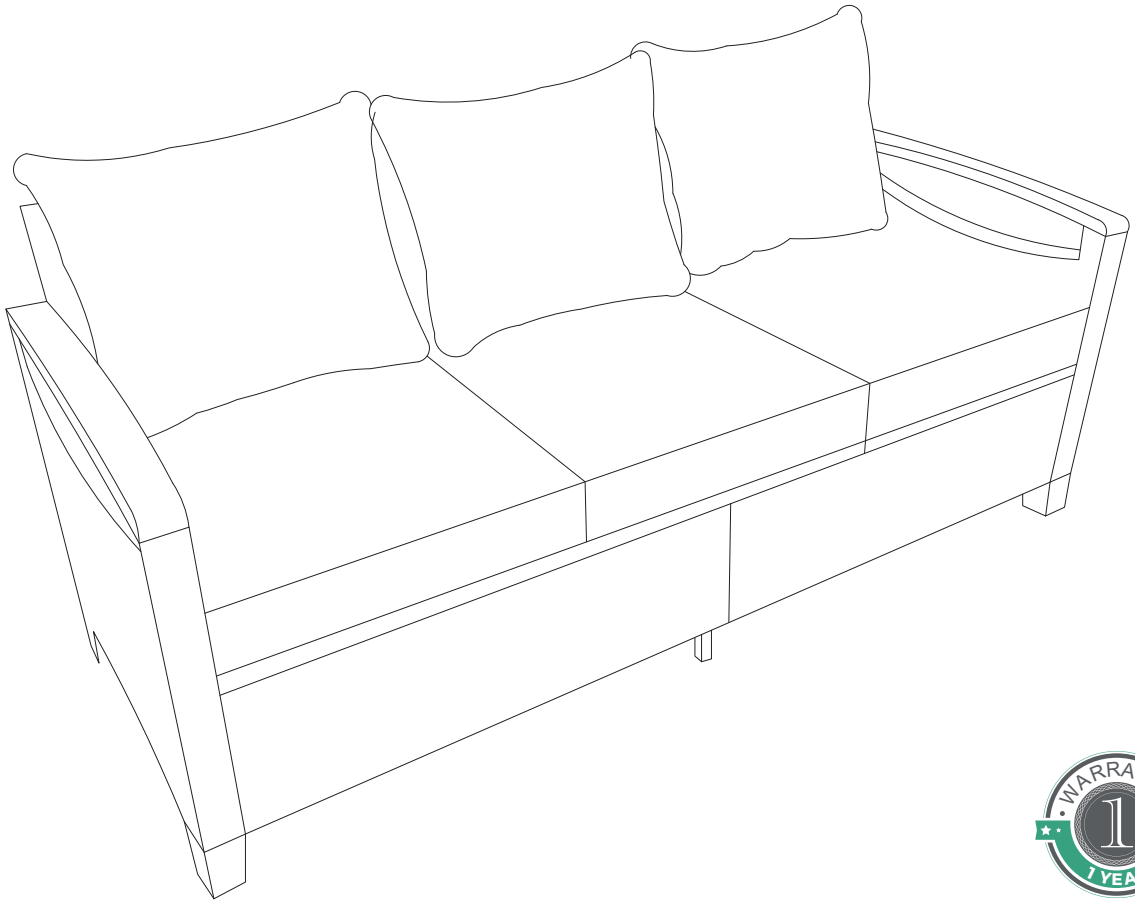

Thank you for choosing US!

Our goal is to provide high quality outdoor furniture with outstanding customer service-all at an affordable price. Please let us know how we are doing!

Problems?


(Missing pieces, wrong pieces...)
We will fix it immediately. Send us an email at
aftersaledirect@gmail.com

Happy?

Please leave us a review! You can make others happy too!

ASSEMBLY INSTRUCTION


BENCH 3 SOFA

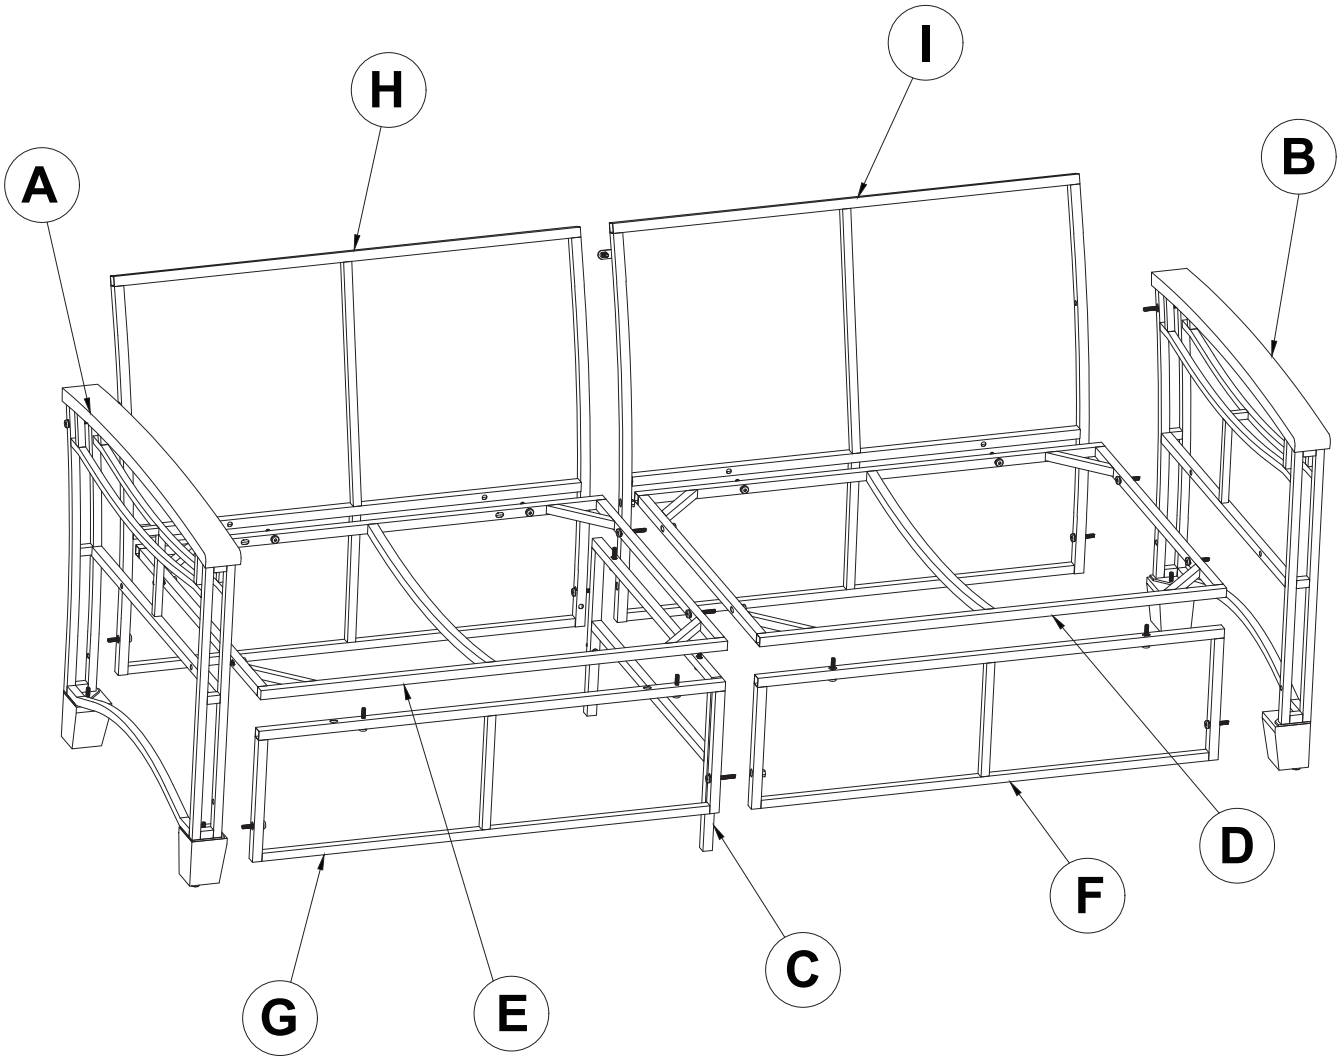

ASSEMBLY INSTRUCTION


PARTS

A x 1

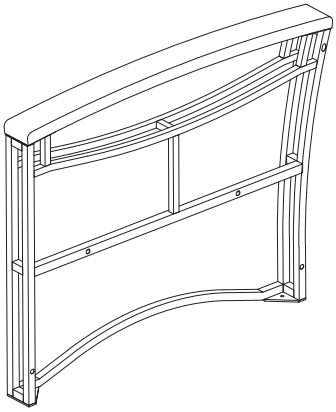


Armrest right

B x 1

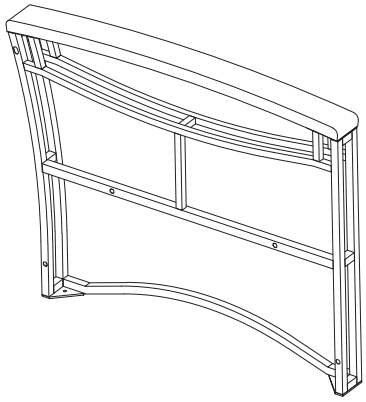


Armrest left

C x 1

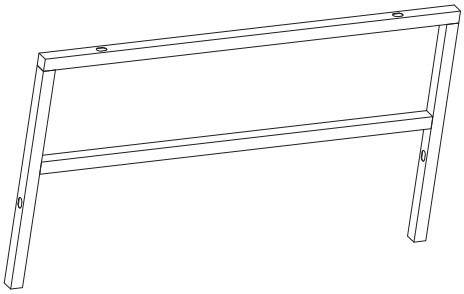


Middle legs

D x 1

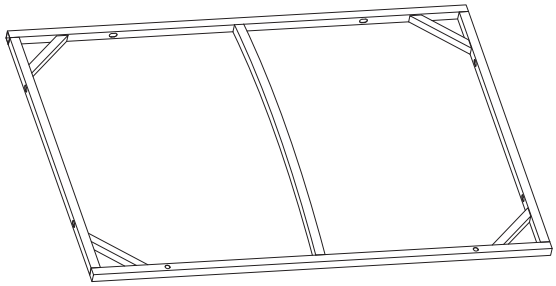


Seat base left

E x 1

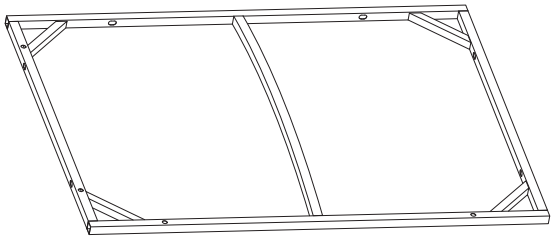


Seat base right

F x 1

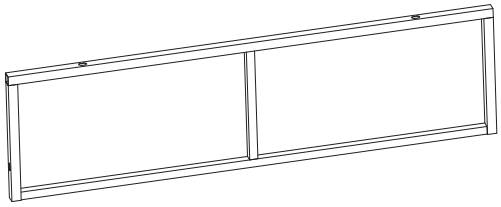


Front panel left

G x 1

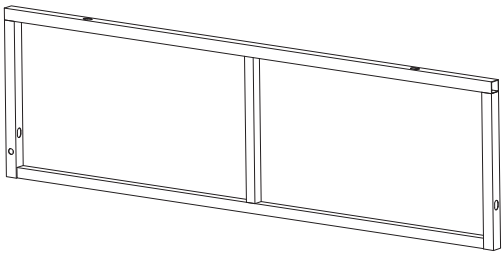

Front panel right

H x 1

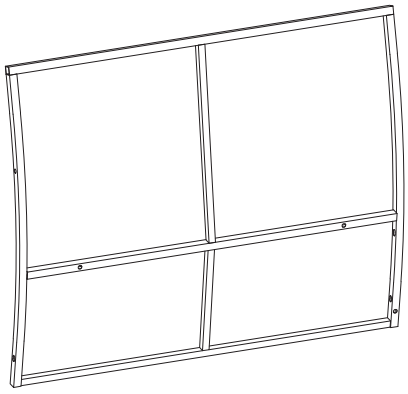


Backrest right

ASSEMBLY INSTRUCTION


PARTS

I x 1

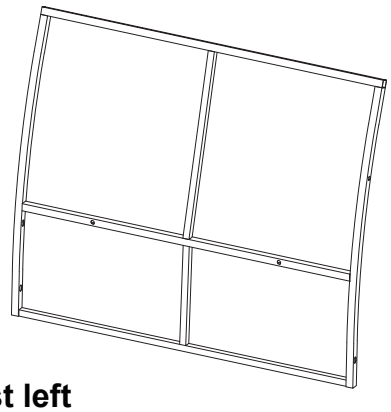


Backrest left

J x 3

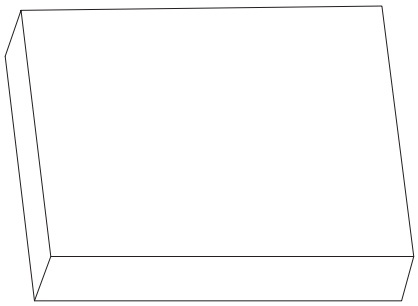


Cushion

K x 3







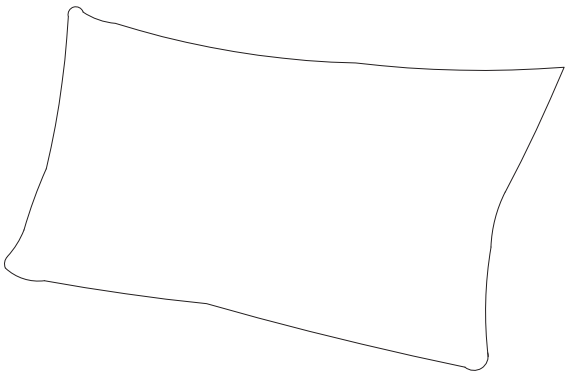


Back cushion

L x 3

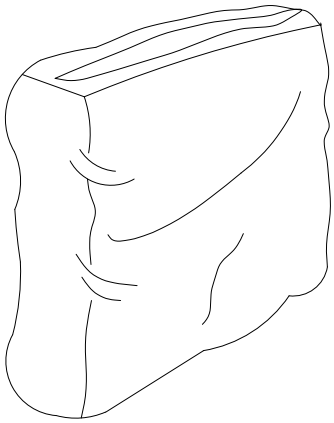


Cushion cover

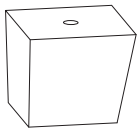1 x34 M6x1		2 x02 M6x15	
3 x04 M6x15		4 x20 M6x30	
5 x01 4x60		6 x05 M6x50	
7 x01		8 x06 M6x75	
9 x04		10 x05 M6	
11 x01 Key 10			

01

1 x04	M6
10 x02	M6
6 x02	M6x50

Do not fully tighten all bolts until assembly is complete.

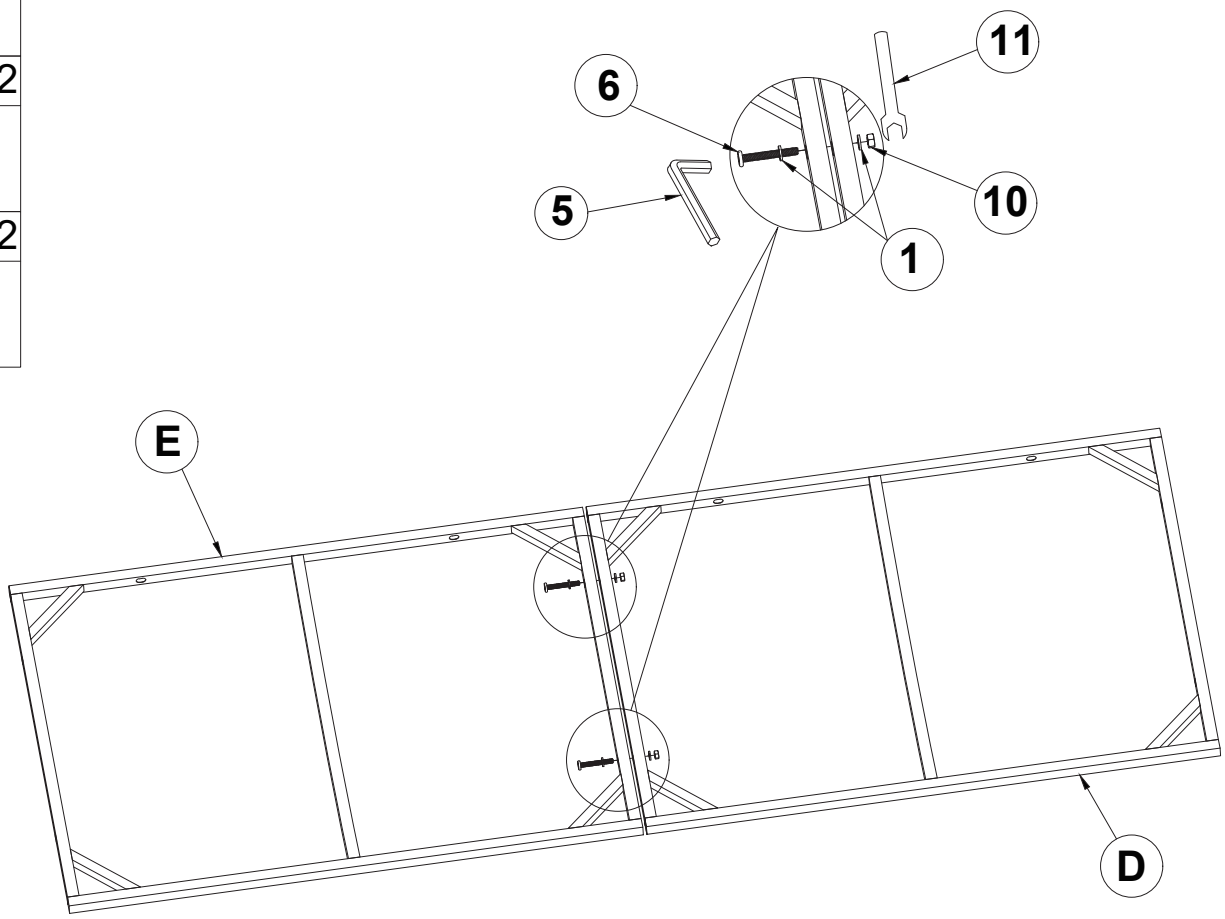


BENCH 3

02

1 x06	M6
4 x04	M6x30
10 x01	M6x35
6 x01	M6x50

Do not fully tighten all bolts until assembly is complete.

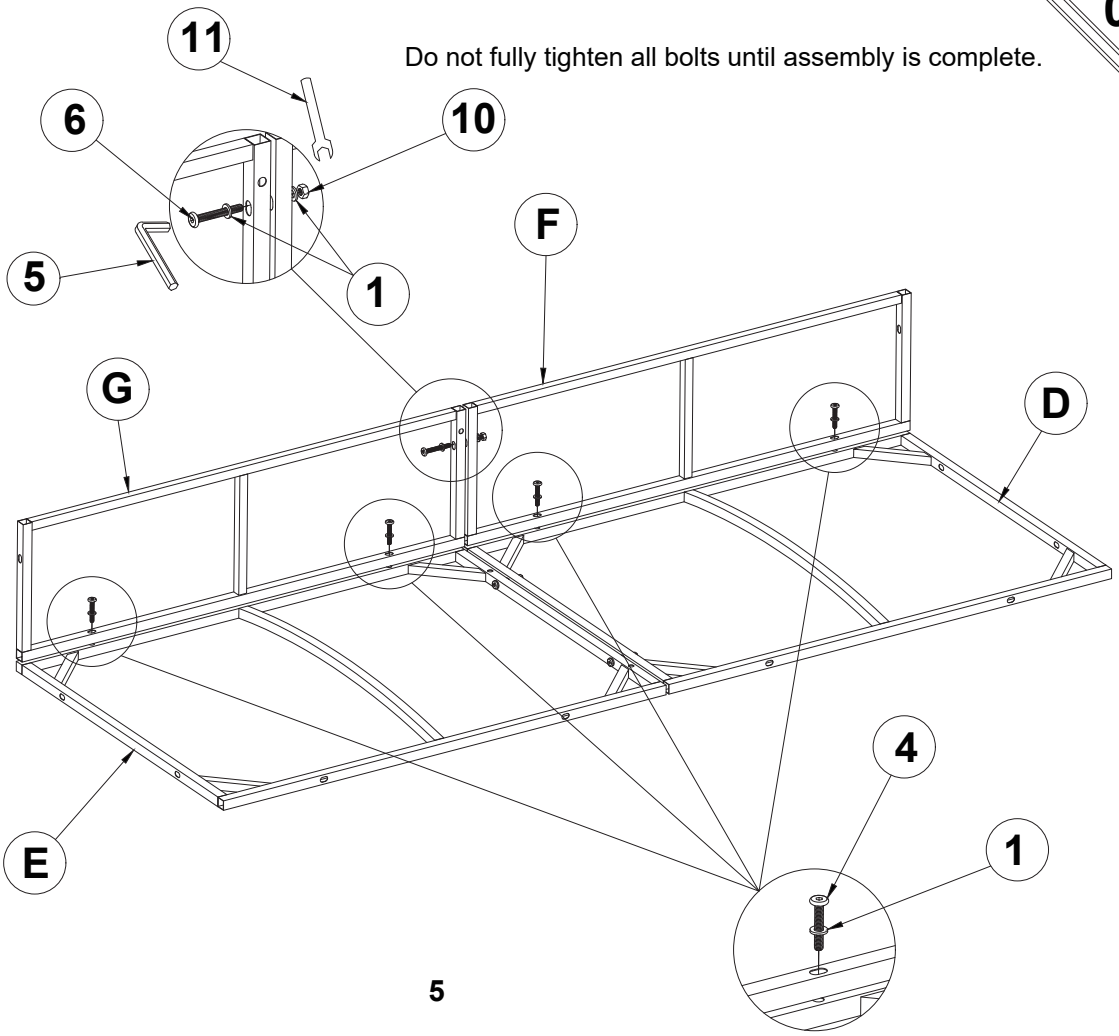

BENCH 3

03


1 x03

M6

4 x03

M6x30

Do not fully tighten all bolts until assembly is complete.

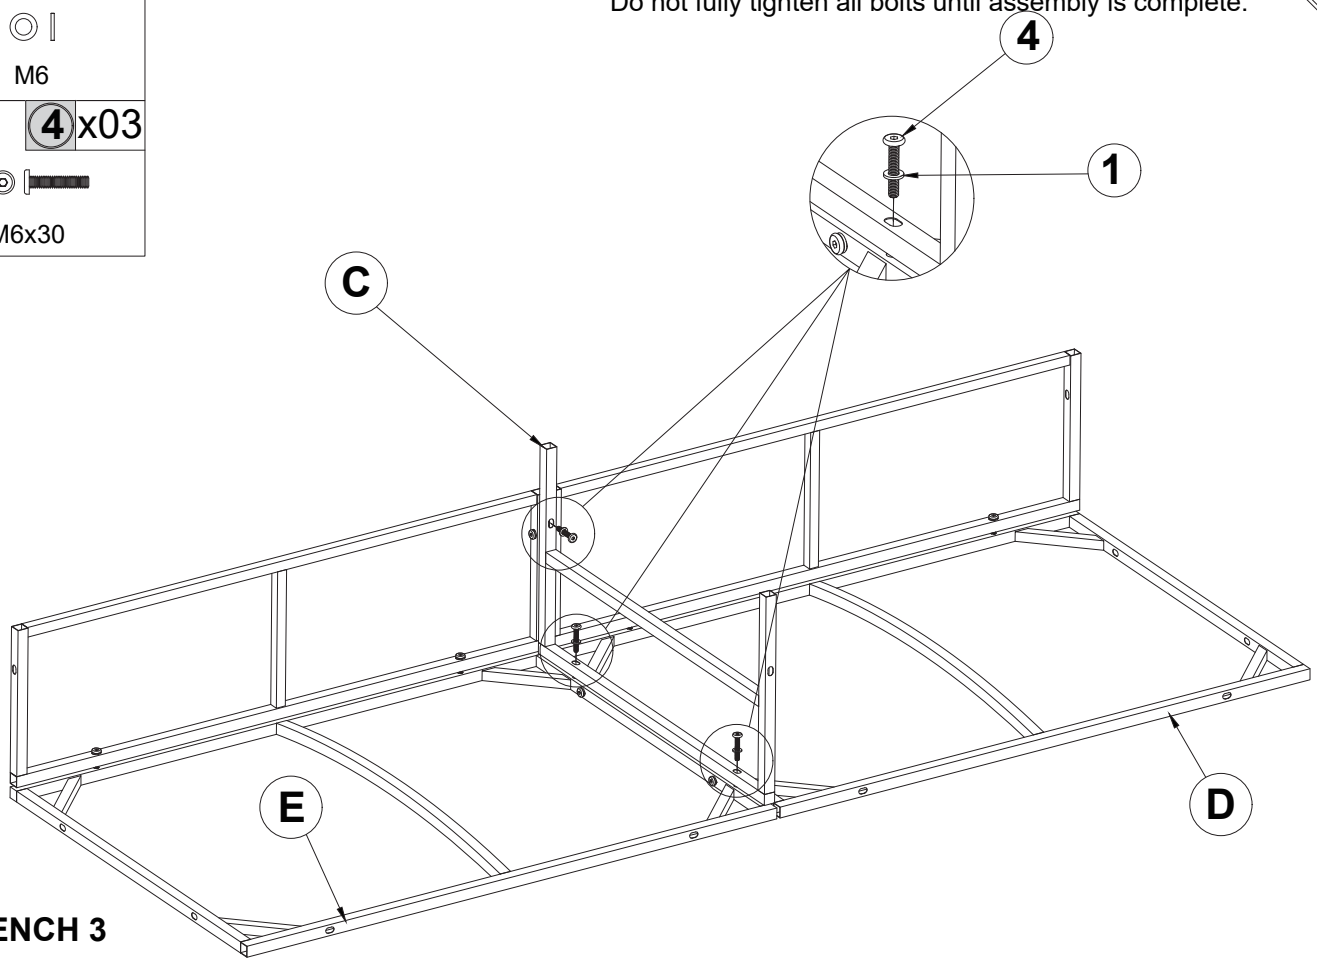

BENCH 3

04

1 x06

M6

2 x02

M6x15

6 x02


M6x50

7 x01

10 x02

M6


Do not fully tighten all bolts until assembly is complete.

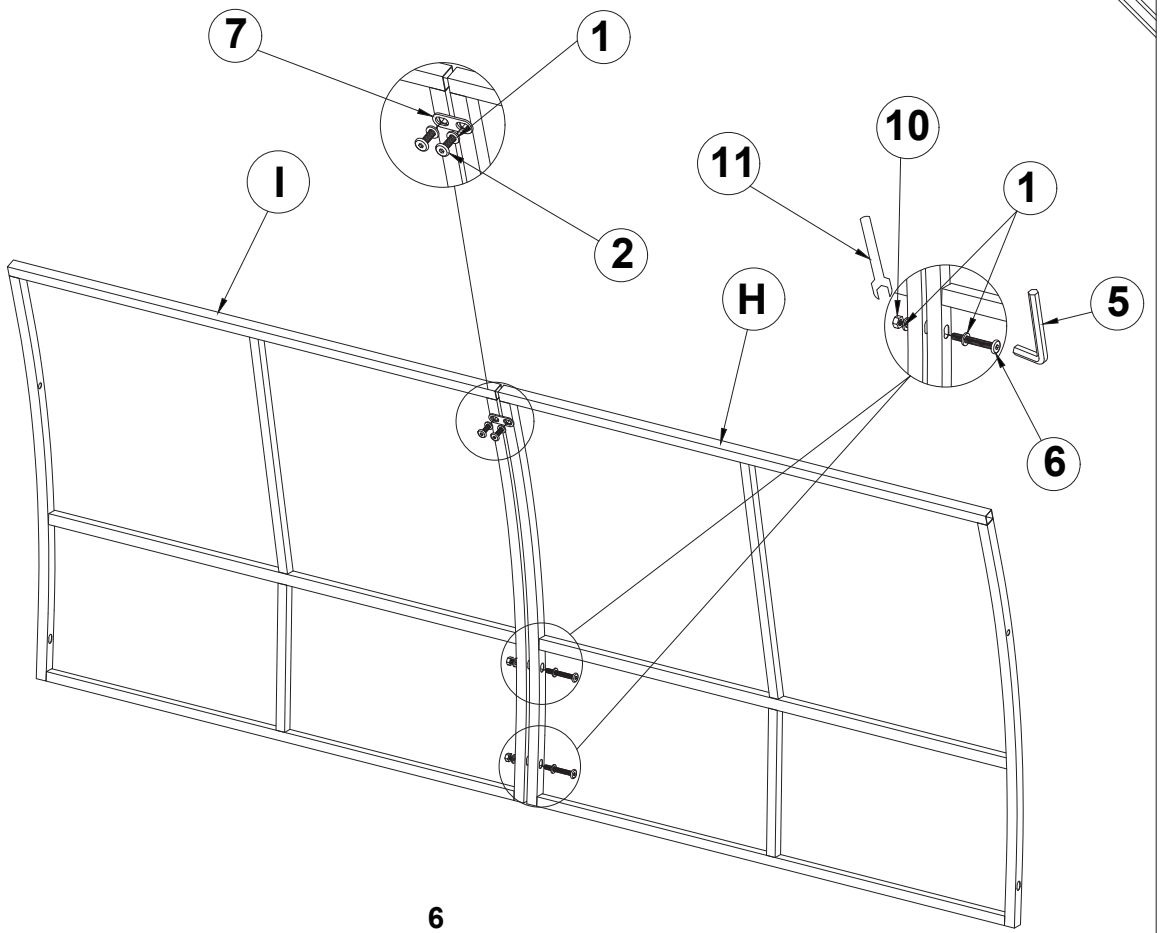

BENCH 3

1 x05	M6
4 x05	M6x30


Do not fully tighten all bolts until assembly is complete.

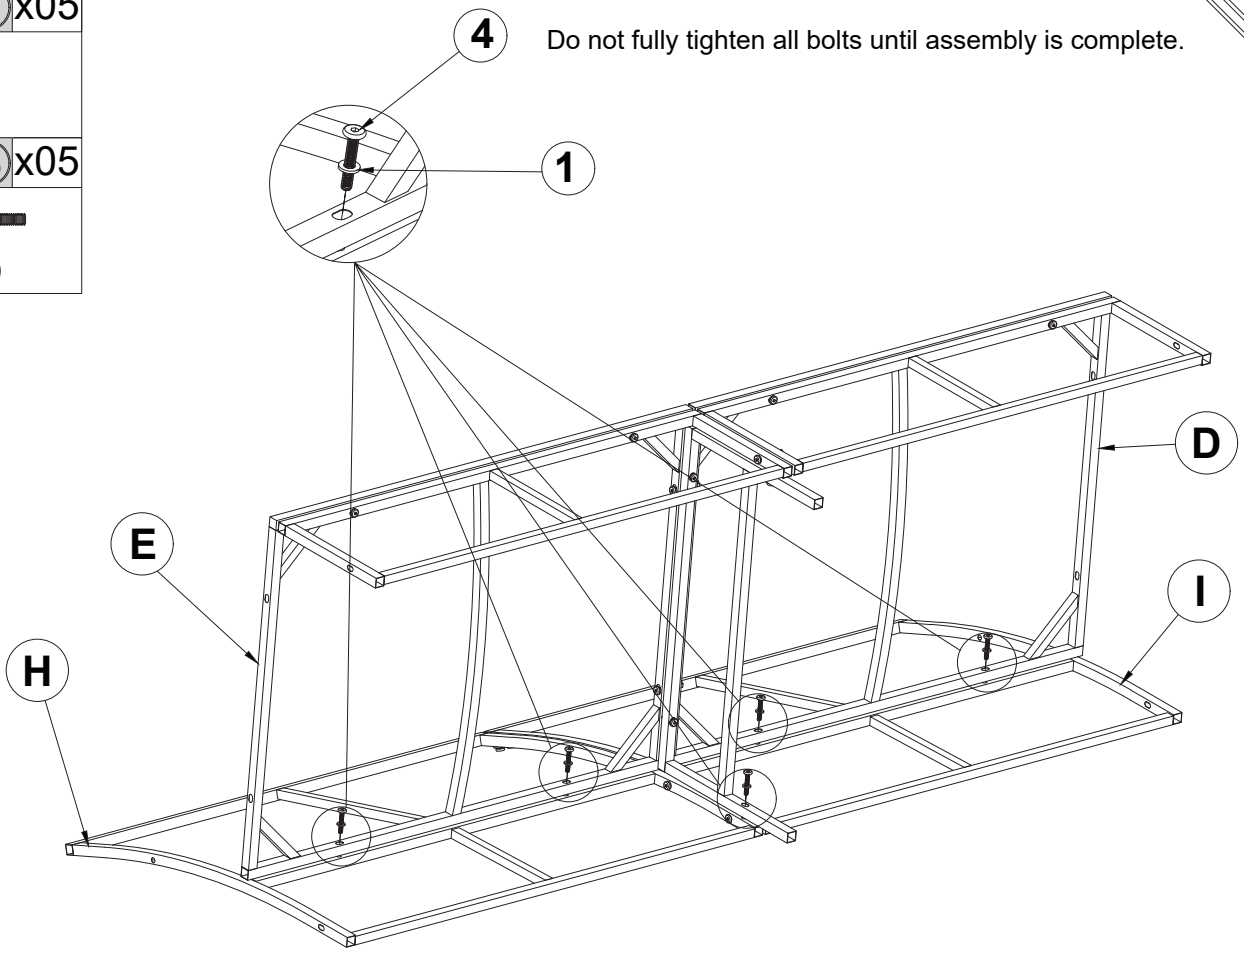

BENCH 3

1 x05	M6
4 x04	M6x30
8 x01	M6x75

Do not fully tighten all bolts until assembly is complete.

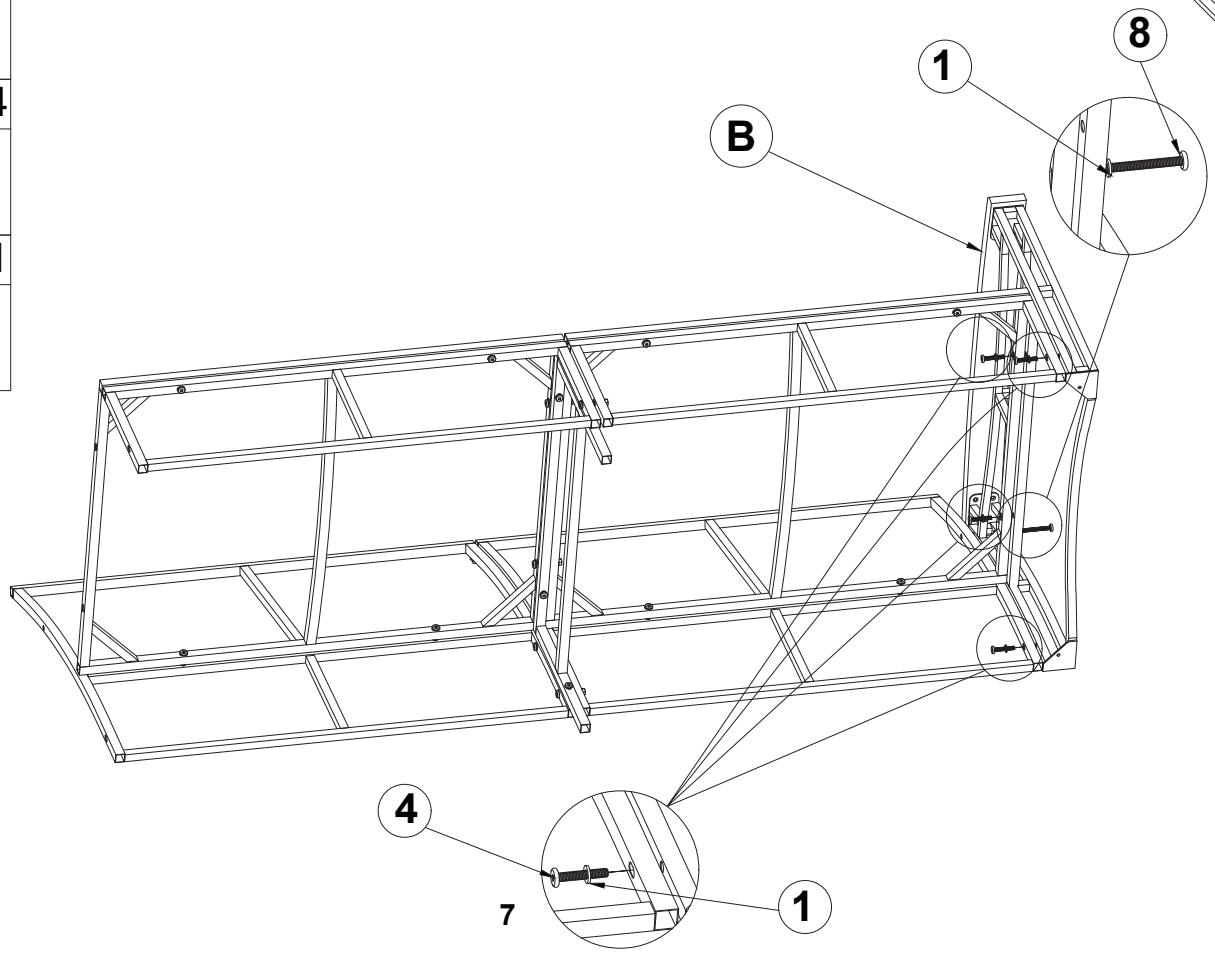

BENCH 3

07

Do not fully tighten all bolts until assembly is complete.

1 x05



M6

4 x04



M6x30

8 x01



M6x75

BENCH 3

08

Fully tighten bolts.


9 x4



8 x4



M6x75

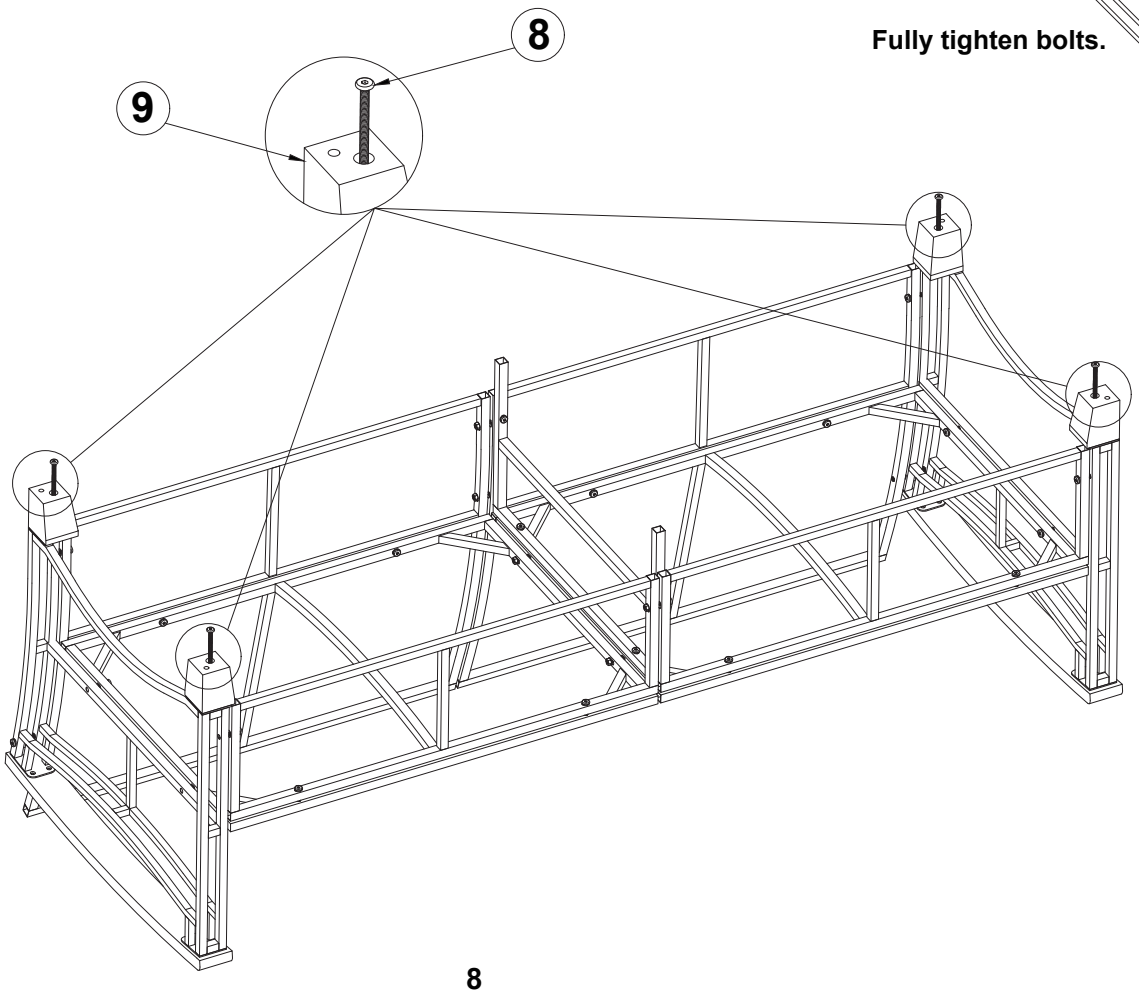


BENCH 3


3 x04




M6x15

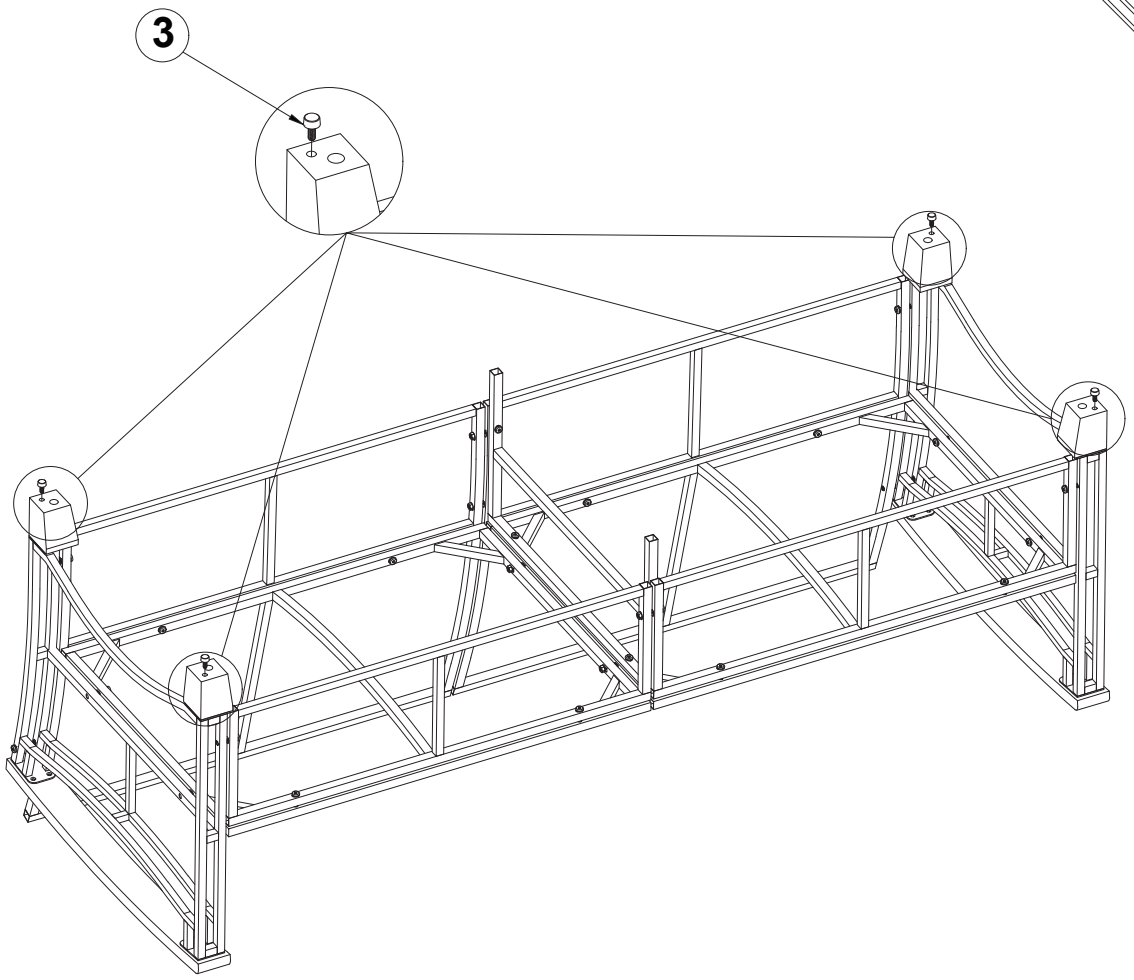

Fully tighten all bolts after assembly is complete.

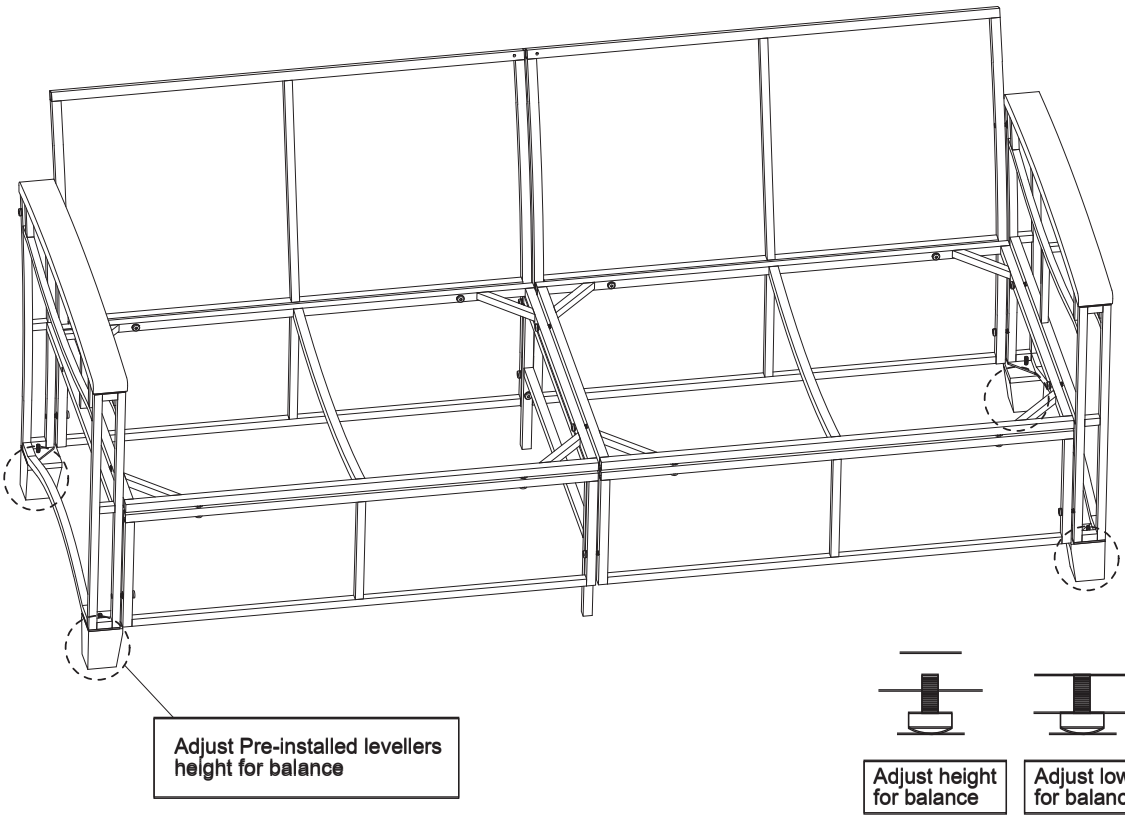

BENCH 3

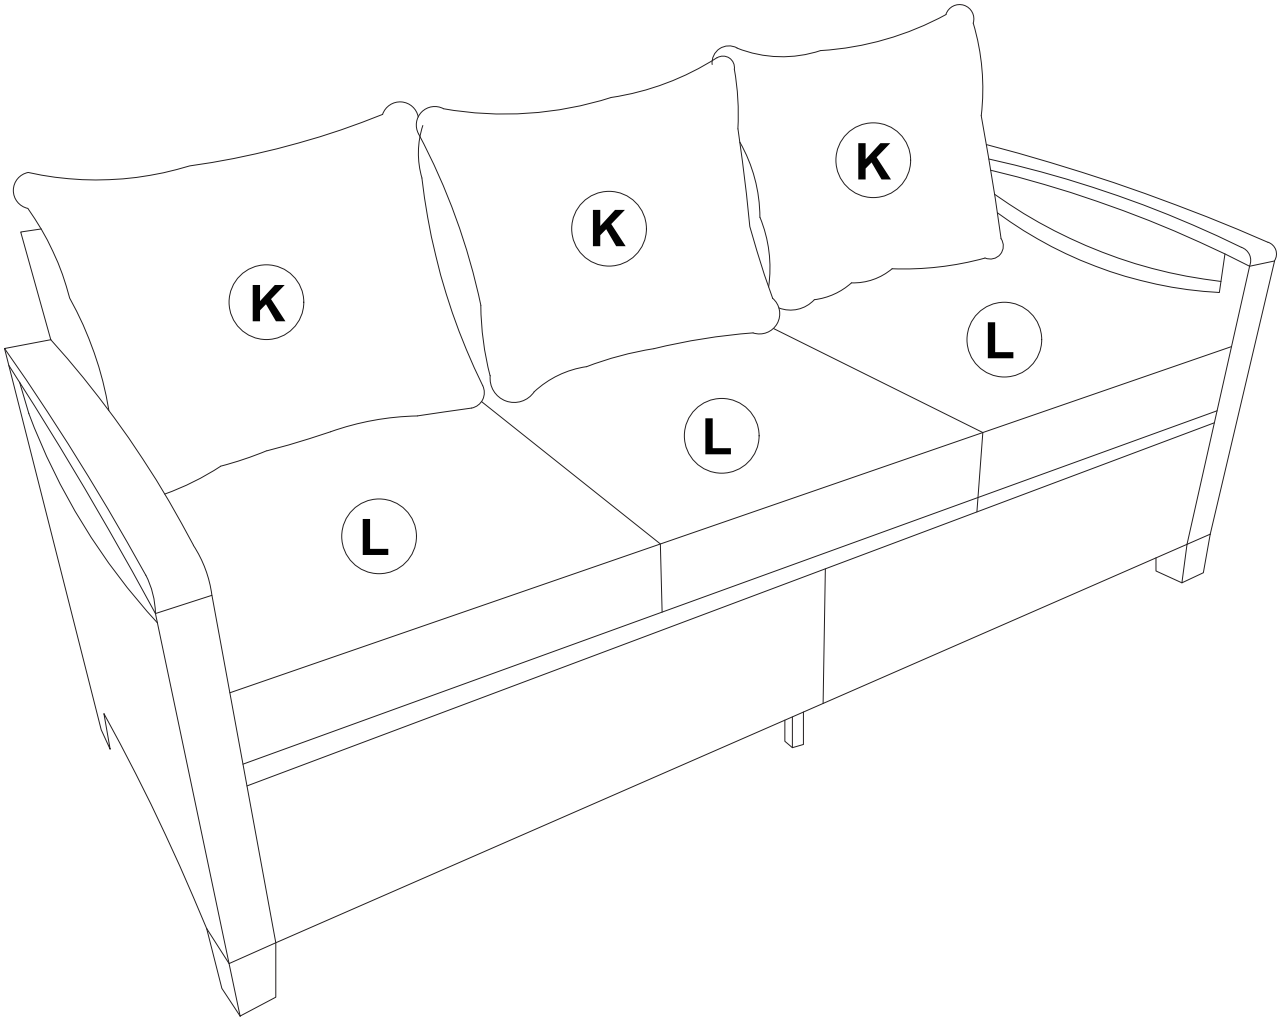
K
K
K
L
L
L